

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

Noise from under vehicle after turning off the engine <hybrid system>

Approximately five hours after the engine <hybrid system> is turned off, you may hear sound coming from under the vehicle for several minutes. This is the sound of a fuel evaporation leakage check and, it does not indicate a malfunction.

Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Lexus vehicle.

This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Installation of a mobile two-way radio system

The installation of a mobile two-way radio system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Dynamic radar cruise control system
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation of a mobile two-way radio system.

Hybrid vehicles: High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Hybrid vehicles: Unwanted noise may occur in the reception of the mobile two-way radio.

Vehicle data recordings

Your Lexus is equipped with several sophisticated computers that will record certain data, such as:

- Engine speed
- Electric motor speed (traction motor speed) (hybrid vehicles)
- Accelerator status
- Brake status
- Vehicle speed
- Shift position
- Hybrid battery (traction battery) status (hybrid vehicles)

The recorded data varies according to the vehicle grade level and options with which it is equipped. Furthermore, these computers do not record conversations, sounds or pictures.

● Data usage

Lexus may use the data recorded in these computers to diagnose malfunctions, conduct research and development, and improve quality.

Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

● Usage of data collected through Safety Connect / Lexus Enform (U.S. mainland only)

If your Lexus has Safety Connect or Lexus Enform and if you have subscribed to those services, please refer to the Safety Connect / Lexus Enform Telematics Subscription Service Agreement for information on data collected and its usage.

Event data recorder

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a nontrivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

● Disclosure of the EDR data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit

However, if necessary, Lexus may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

Perchlorate Material

Special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Your vehicle has components that may contain perchlorate. These components may include airbag, seat belt pretensioners, and wireless remote control batteries.

CAUTION

■ General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

 CAUTION**■ General precaution regarding children's safety**

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

■ Hybrid battery (traction battery) (hybrid vehicles)

Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through Lexus dealers. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur, resulting in death or serious injury:

- The hybrid battery may be illegally disposed of or dumped, and someone may touch a high voltage part, resulting in an electric shock.
- The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

■ Disposal of the hybrid battery (traction battery) (hybrid vehicles)


If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by your Lexus dealer or a qualified service shop. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.

Before driving

Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

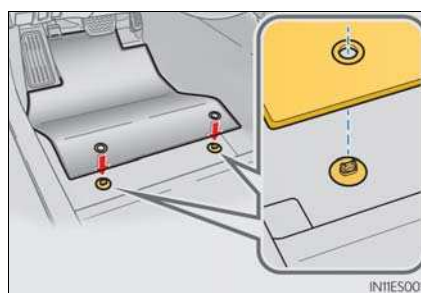

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the Δ marks.

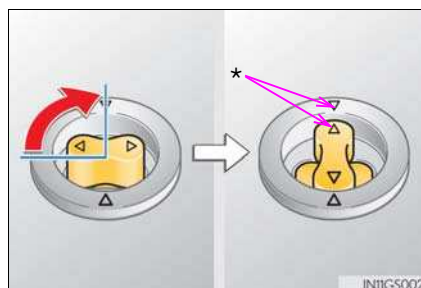

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

⚠ CAUTION

Observe the following precautions.


Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to an accident, or leading to death or a serious injury.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the engine <hybrid system> stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

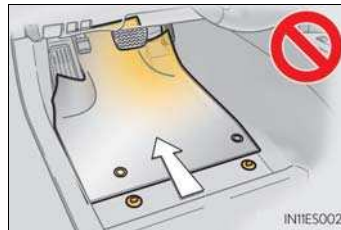


For safety drive

For safe driving, adjust the seat and mirror to an appropriate position before driving.

Correct driving posture

- ① Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 151)
- ② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 151)
- ③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 159)
- ④ Wear the seat belt correctly. (→P. 32)

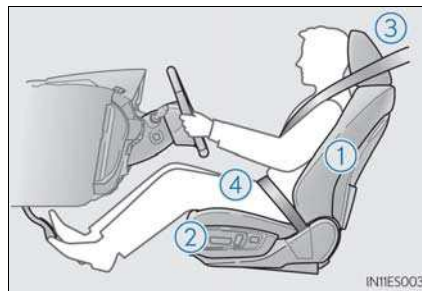

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 32)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 55)

Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P.164, 167)

CAUTION

Observe the following precautions.

Failure to do so may result in death or serious injury.


- Do not adjust the position of the driver's seat while driving.
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- When driving over long distances, take regular breaks before you start to feel tired.
Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.


Correct use of the seat belts

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seat-back. Sit up straight and well back in the seat.
- Do not twist the seat belt.

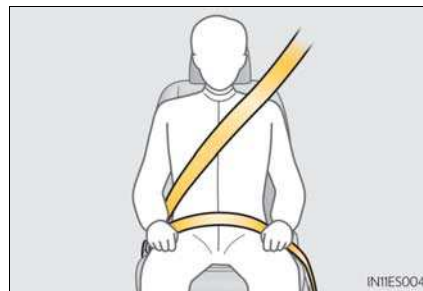

Fastening and releasing the seat belt

- ① To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- ② To release the seat belt, press the release button.

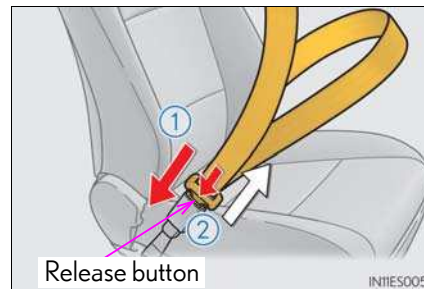

Adjusting the seat belt shoulder anchor height (front seats)

- ① Push the seat belt shoulder anchor down while pressing the release button.
- ② Push the seat belt shoulder anchor up.


Move the height adjuster up and down as needed until you hear a click.



Seat belt pretensioners (front and outboard rear seats)

The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioner does not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

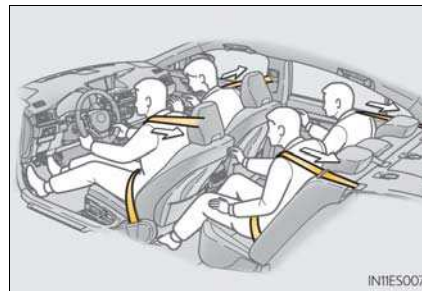

Pre-collision seat belts (front seats of vehicles with pre-collision system)

If the system determines that a collision is unavoidable, the front seat belt will retract before the collision. (→P. 306)

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ Automatic locking retractor (ALR)

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. (→P. 59)

■ Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.


- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 55)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P. 32)

■ Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ Seat belt extender

If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

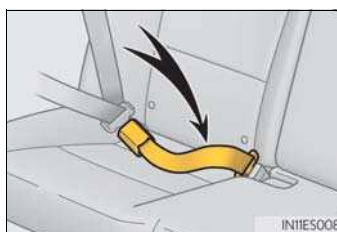

CAUTION

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or serious injury.

■ Wearing a seat belt


- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.


■ Pregnant women

Obtain medical advice and wear the seat belt in the proper way. (→P. 32)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

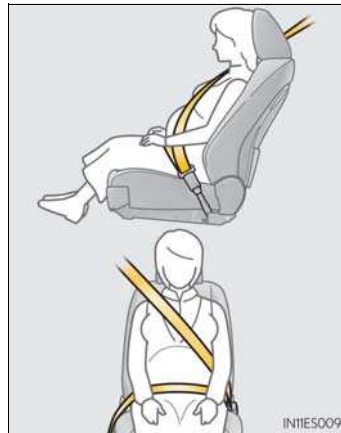

 **CAUTION****■ People suffering illness**

Obtain medical advice and wear the seat belt in the proper way. (→P. 32)

■ When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

■ Seat belt pretensioners


If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Lexus dealer.

■ Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 33)

■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Lexus dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling may lead to incorrect operation.

 CAUTION**■ Using a seat belt extender**


- Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.

 NOTICE**■ When using a seat belt extender**

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.
This helps prevent damage to the vehicle interior and the extender itself.

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

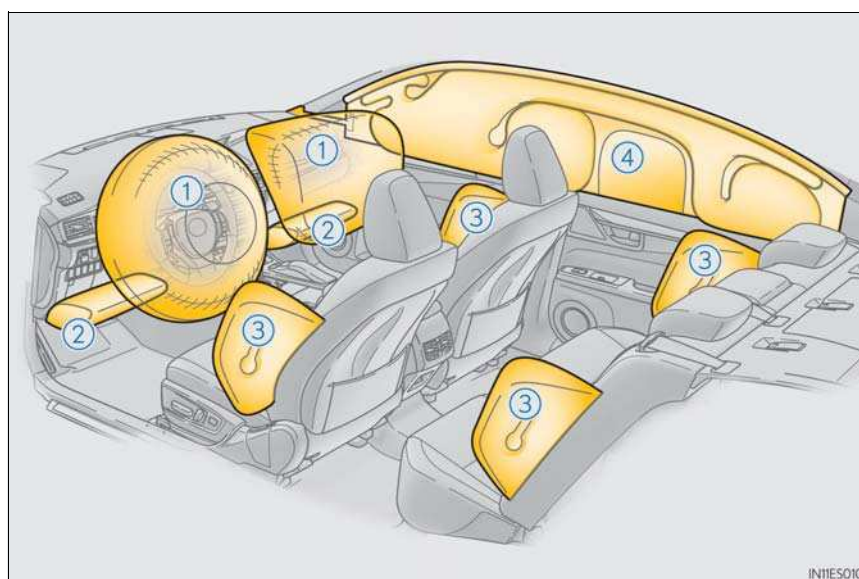


◆ SRS front airbags

- ① SRS driver airbag/front passenger airbag
Can help protect the head and chest of the driver and front passenger from impact with interior components
- ② SRS knee airbags
Can help provide driver and front passenger protection

◆ **SRS side and curtain shield airbags**


- ③ SRS front side airbags
 - Can help protect the torso of the front seat occupants
 - SRS rear side airbags
 - Can help protect the torso of occupants in the rear outer seats
- ④ SRS curtain shield airbags
 - Can help protect primarily the head of occupants in the outer seats

SRS airbag system components

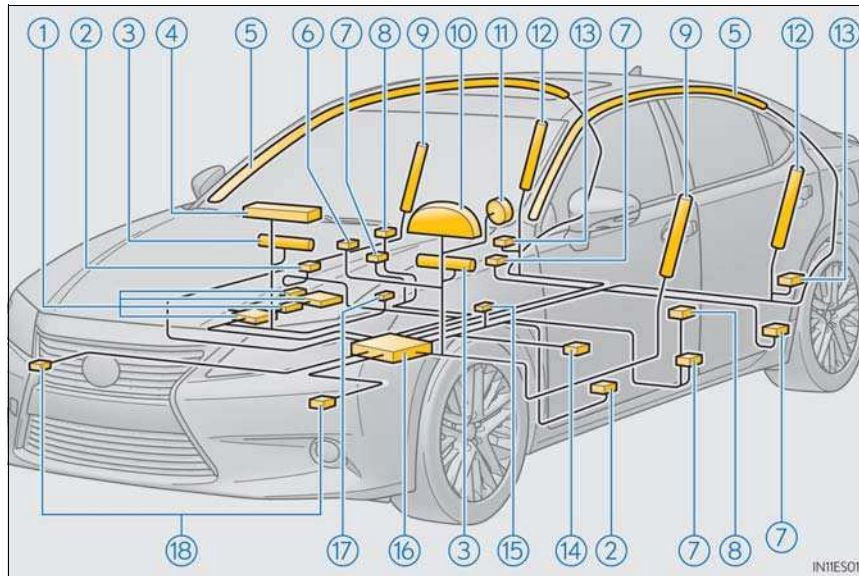

- | | |
|--|---|
| ① Front passenger occupant classification system (ECU and sensors) | ⑨ Front side airbags |
| ② Side impact sensors (front doors) | ⑩ SRS warning light |
| ③ Knee airbags | ⑪ Driver airbag |
| ④ Front passenger airbag | ⑫ Rear side airbags |
| ⑤ Curtain shield airbags | ⑬ Side impact sensors (rear) |
| ⑥ "AIR BAG ON" and "AIR BAG OFF" indicator lights | ⑭ Driver's seat position sensor |
| ⑦ Seat belt pretensioners and force limiters | ⑮ Driver's seat belt buckle switch |
| ⑧ Side impact sensors (front) | ⑯ Airbag sensor assembly |
| | ⑰ Front passenger's seat belt buckle switch |
| | ⑱ Front impact sensors |

Your vehicle is equipped with ADVANCED AIRBAGS designed based on the US motor vehicle safety standards (FMVSS208). The airbag sensor assembly (ECU) controls airbag deployment based on information obtained from the sensors etc. shown in the system components diagram above. This information includes crash severity and occupant information. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

 CAUTION

■ SRS airbag precautions

Observe the following precautions regarding the SRS airbags.
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly. The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag. The National Highway Traffic Safety Administration (NHTSA) advises:

Since the risk zone for the driver's airbag is the first 2 - 3 in. (50 - 75 mm) of inflation, placing yourself 10 in. (250 mm) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 10 in. (250 mm) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat.
Although vehicle designs vary, many drivers can achieve the 10 in. (250 mm) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended by NHTSA above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

CAUTION**■ SRS airbag precautions**

- If the seat belt extender has been connected to the front seat belt buckle but the seat belt extender has not also been fastened to the latch plate of the seat belt, the SRS front airbags will judge that the driver and front passenger are wearing the seat belt even though the seat belt has not been connected. In this case, the SRS front airbags may not activate correctly in a collision, resulting in death or serious injury in the event of a collision. Be sure to wear the seat belt with the seat belt extender.





- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 55)
- Do not sit on the edge of the seat or lean against the dashboard.




CAUTION

■ SRS airbag precautions

- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.
- Do not lean against the door, the roof side rail or the front, side and rear pillars.
- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.
- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad, lower portion of the instrument panel and door of the glove box. These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.
- Do not attach anything to areas such as a door, windshield glass, side door glass, front or rear pillar, roof side rail and assist grip.

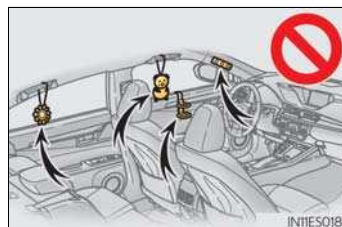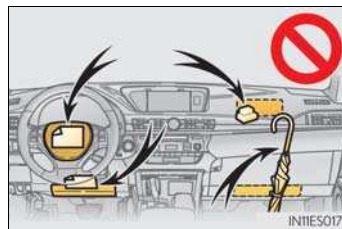

 CAUTION

■ SRS airbag precautions

- Do not hang coat hangers or hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components.
Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes are damaged or cracked, have them replaced by your Lexus dealer.

⚠ CAUTION**■ Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting your Lexus dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, glove box, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of snow plows, winches, etc. to the front grille (bull bars or kangaroo bar etc.)
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios and CD players
- Modifications to your vehicle for a person with a physical disability

■ If the SRS airbags deploy (inflate)

- Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the seats, parts of the front and rear pillars, and roof side rails may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- For Safety Connect subscribers, if the SRS airbags deploy or in the event of a severe rear-end collision, the system is designed to send an emergency call to the response center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P. 641)

■ SRS airbag deployment conditions (SRS front airbags)

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 12 - 18 mph [20 - 30 km/h] frontal collision with a fixed wall that does not move or deform).
However, this threshold velocity will be considerably higher in the following situations:
 - If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
 - If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.
- The SRS front airbags for the front passenger will not activate if there is no passenger sitting in the front passenger seat. However, the SRS front airbags for the front passenger may deploy if luggage is put in the seat, even if the seat is unoccupied. (→P. 49)


■ SRS airbag deployment conditions (SRS side and curtain shield airbags)

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 3300 lb. [1500 kg] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 12 - 18 mph [20 - 30 km/h]).
- The SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

■ Conditions under which the SRS airbags may deploy (inflate), other than a collision

The SRS front airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

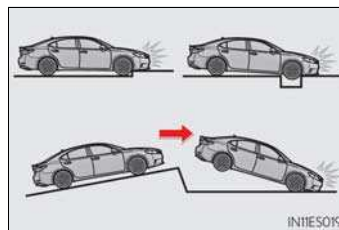

■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

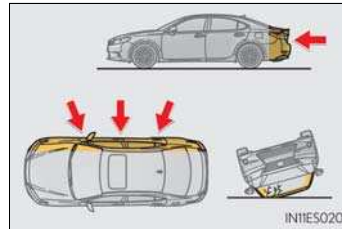

■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)

The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.


- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

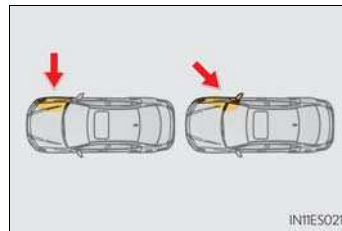

The SRS side and curtain shield airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front*
- Collision from the rear
- Vehicle rollover






*: Depending on the conditions and type of accident, the curtain shield airbags may deploy (inflate) upon frontal impact.

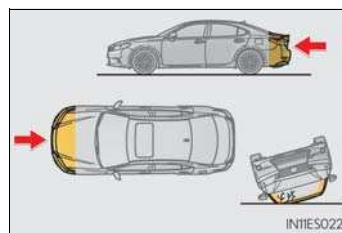

■ When to contact your Lexus dealer


In the following cases, the vehicle will require inspection and/or repair. Contact your Lexus dealer as soon as possible.

- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS airbags to inflate.
- A portion of a door is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.
- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.
- The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.
- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked, or otherwise damaged.

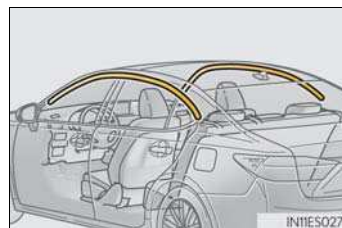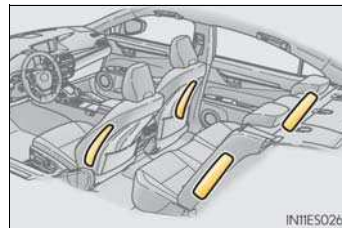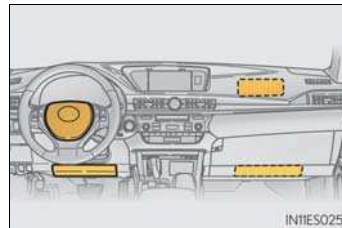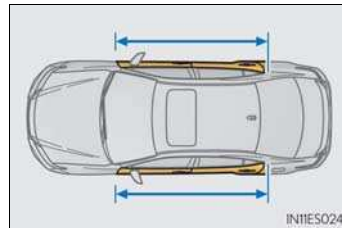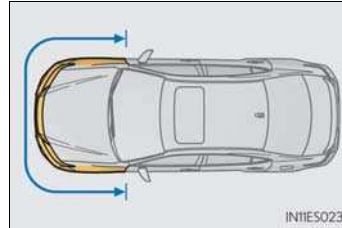

Front passenger occupant classification system

Your vehicle is equipped with a front passenger occupant classification system. This system detects the conditions of the front passenger seat and activates or deactivates the devices for the front passenger.

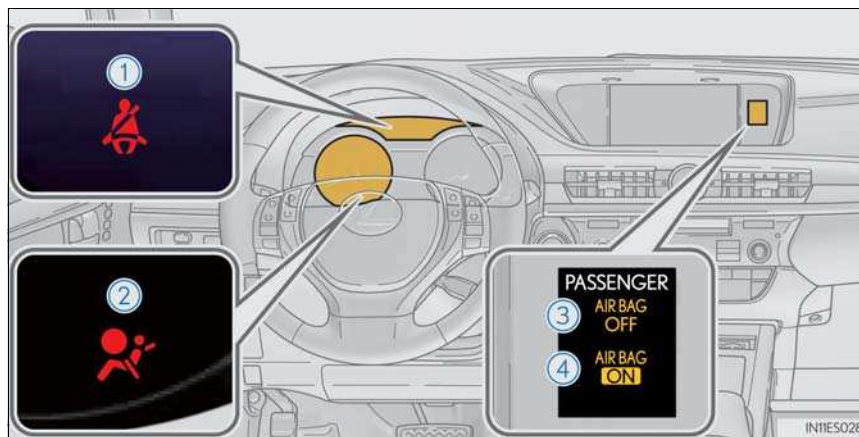

- ① Seat belt reminder light
- ② SRS warning light
- ③ "AIR BAG OFF" indicator light
- ④ "AIR BAG ON" indicator light

Condition and operation in the front passenger occupant classification system

■ Adult*¹

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG ON"
	SRS warning light	Off
	Seat belt reminder light	Flashing* ²
Devices	Front passenger airbag	Activated
	Side airbag on the front passenger seat	
	Curtain shield airbag in the front passenger side	
	Front passenger knee airbag	
	Front passenger's seat belt pretensioner	

■ Child*³ or child restraint system*⁴

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF"* ⁵
	SRS warning light	Off
	Seat belt reminder light	Flashing* ²
Devices	Front passenger airbag	Deactivated
	Side airbag on the front passenger seat	Activated
	Curtain shield airbag in the front passenger side	
	Front passenger knee airbag	Deactivated
	Front passenger's seat belt pretensioner	Activated

■ Unoccupied

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF"
	SRS warning light	Off
	Seat belt reminder light	
Devices	Front passenger airbag	Deactivated
	Side airbag on the front passenger seat	Activated
	Curtain shield airbag in the front passenger side	
	Front passenger knee airbag	Deactivated
	Front passenger's seat belt pretensioner	Activated

■ There is a malfunction in the system

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF"
	SRS warning light	On
	Seat belt reminder light	Off
Devices	Front passenger airbag	Deactivated
	Side airbag on the front passenger seat	Activated
	Curtain shield airbag in the front passenger side	
	Front passenger knee airbag	Deactivated
	Front passenger's seat belt pretensioner	Activated


- *1: The system judges a person of adult size as an adult. When a smaller adult sits in the front passenger seat, the system may recognize him/her as a child depending on his/her physique and posture.
- *2: In the event the front passenger does not wear a seat belt
- *3: When a larger child who has outgrown a child restraint system sits in the front passenger seat, the system may recognize him/her as an adult depending on his/her physique or posture.
- *4: Never install a rear-facing child restraint system on the front passenger seat. A forward-facing child restraint system should only be installed on the front passenger seat when it is unavoidable. (→P. 55)
- *5: In case the indicator light is not illuminated, consult this manual on how to install the child restraint system properly. (→P. 59)

⚠ CAUTION**■ Front passenger occupant classification system precautions**

Observe the following precautions regarding the front passenger occupant classification system.

Failure to do so may cause death or serious injury.

- Wear the seat belt properly.
- Make sure the front passenger's seat belt plate has not been left inserted into the buckle before someone sits in the front passenger seat.
- Make sure the "AIR BAG OFF" indicator light is not illuminated when using the seat belt extender for the front passenger seat. If the "AIR BAG OFF" indicator light is illuminated, disconnect the extender tongue from the seat belt buckle, and reconnect the seat belt. Reconnect the seat belt extender after making sure the "AIR BAG ON" indicator light is illuminated. If you use the seat belt extender while the "AIR BAG OFF" indicator light is illuminated, the SRS airbags for the passenger may not activate correctly, which could cause death or serious injury in the event of a collision.
- Do not apply a heavy load to the front passenger seat or equipment (e.g. seat-back pockets or armrest).
- Do not put weight on the front passenger seat by putting your hands or feet on the front passenger seat seatback from the rear passenger seat.
- Do not let a rear passenger lift the front passenger seat with their feet or press on the seatback with their legs.
- Do not put objects under the front passenger seat.

 CAUTION

■ Front passenger occupant classification system precautions

- Do not recline the front passenger seatback so far that it touches a rear seat. This may cause the "AIR BAG OFF" indicator light to be illuminated, which indicates that the passenger's airbags will not deploy in the event of a severe accident. If the seatback touches the rear seat, return the seatback to a position where it does not touch the rear seat. Keep the front passenger seatback as upright as possible when the vehicle is moving. Reclining the seatback excessively may lessen the effectiveness of the seat belt system.
- If an adult sits in the front passenger seat, the "AIR BAG ON" indicator light is illuminated. If the "AIR BAG OFF" indicator is illuminated, ask the passenger to sit up straight, well back in the seat, feet on the floor, and with the seat belt worn correctly. If the "AIR BAG OFF" indicator still remains illuminated, either ask the passenger to move to the rear seat, or if that is not possible, move the front passenger seat fully rearward.
- When it is unavoidable to install a forward-facing child restraint system on the front passenger seat, install the child restraint system on the front passenger seat in the proper order. (→P. 59)
- Do not modify or remove the front seats.
- Do not kick the front passenger seat or subject it to severe impact. Otherwise, the SRS warning light may come on to indicate a malfunction of the detection system. In this case, contact your Lexus dealer immediately.
- Child restraint systems installed on the rear seat should not contact the front seatbacks.
- Do not modify or replace the upholstery of the front seat.

Safety information for children

Observe the following precautions when children are in the vehicle.
Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally.
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, trunk, seats etc.

CAUTION

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Child restraint systems

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt.

The laws of all 50 states of the U.S.A. and Canada now require the use of child restraint systems.

Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one on the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.

General installation instructions are provided in this manual. (→P. 59)

Types of child restraints

Child restraint systems are classified into the following 3 types according to the age and size of the child:

- ▶ Rear facing — Infant seat/convertible seat
- ▶ Forward facing — Convertible seat



- ▶ Booster seat




■ Selecting an appropriate child restraint system

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 32)

 CAUTION**■ Child restraint precautions**

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Lexus strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restraint system on the front passenger seat even if the "AIR BAG OFF" indicator light is illuminated.
In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.
- A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat. Adjust the seatback as upright as possible and always move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not use the seat belt extender when installing a child restraint system on the front or rear passenger seat. If installing a child restraint system with the seat belt extender connected to the seat belt, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of an accident.
- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop or accident.

 CAUTION**■ When children are in the vehicle**

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

■ When the child restraint system is not in use

● Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.


● If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the trunk. This will prevent it from injuring passengers in the event of a sudden stop or accident.

Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the seats using the LATCH anchors or a seat belt. Attach the top tether strap when installing a child restraint. The lap/shoulder belt can be used if your child restraint system is not compatible with the LATCH (Lower Anchors and Tethers for Children) system.

Child restraint LATCH anchors

LATCH anchors are provided for the outboard rear seats. (Buttons displaying the location of the anchors are attached to the seats.)

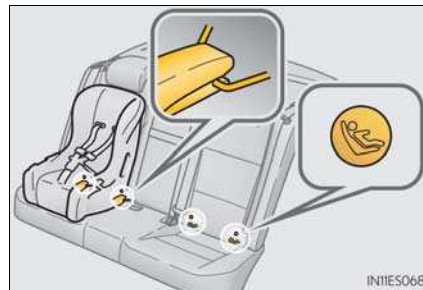


Seat belts equipped with a child restraint locking mechanism (ALR/ELR belts except driver's seat belt) (→P.34)




Anchor brackets (for top tether strap)

An anchor bracket is provided for each rear seat.

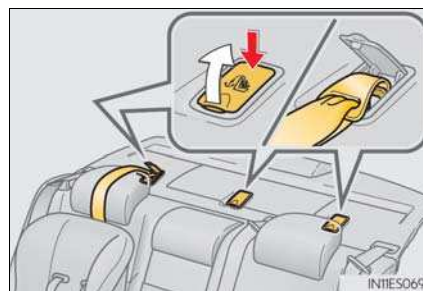

Installation with LATCH system

- 1 Lower the head restraint in place at the lowest position.

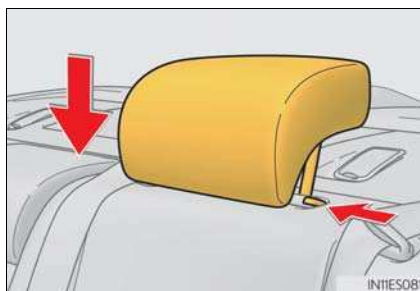


- 2 Widen the gap between the seat cushion and seatback slightly.

► Type A

- 3 Latch the hooks of the lower straps onto the LATCH anchors. If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:

The symbol on a child restraint system indicates the presence of a lower connector system.

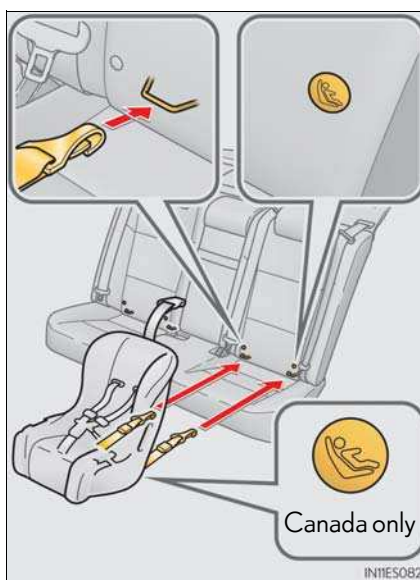


► Type B

- 3 Latch the buckles onto the LATCH anchors. If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:


The symbol on a child restraint system indicates the presence of a lower connector system.

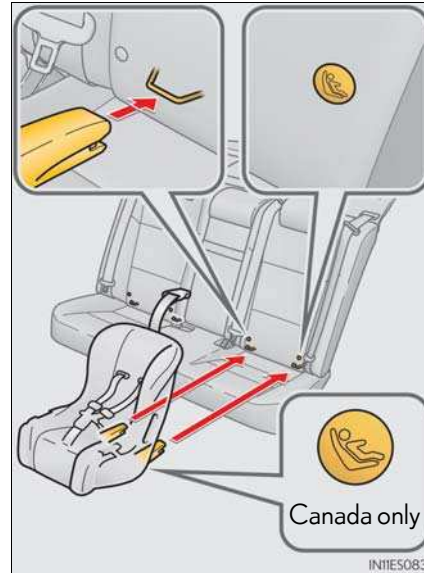


Installing child restraints using a seat belt (child restraint lock function belt)

■ Rear-facing — Infant seat/convertible seat


- 1 Place the child restraint system on the rear seat facing the rear of the vehicle.

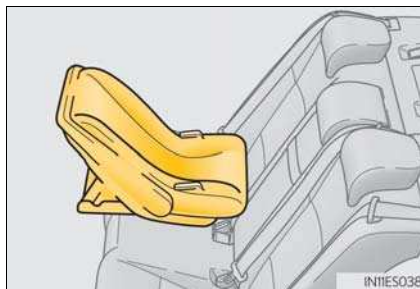

- 2 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

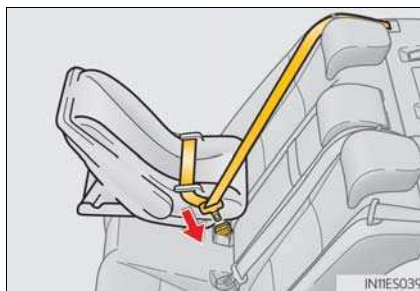


- 3 Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.

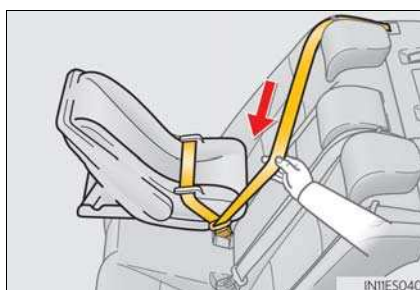


- 4 While pushing the child restraint system down into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

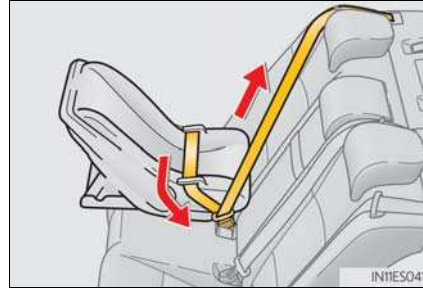

■ Forward-facing — Convertible seat


- 1 Lower the head restraint in place at the lowest position.

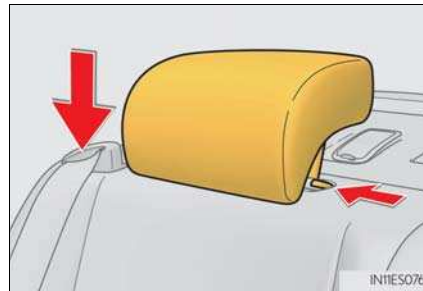

- 2 Place the child restraint system on the seat facing the front of the vehicle.



- 3** Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

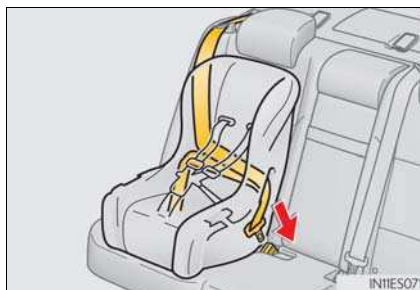

- 4** Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.



- 5** While pushing the child restraint system into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.


After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.



- 6** If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor. (→P. 66)

■ Booster seat

- 1 Place the child restraint system on the seat facing the front of the vehicle.

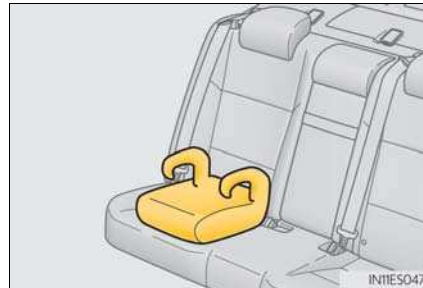


- 2 Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.



Check that the shoulder belt is correctly positioned over the child's shoulder and that the lap belt is as low as possible. (→P. 32)


Removing a child restraint installed with a seat belt

Push the buckle release button and fully retract the seat belt.

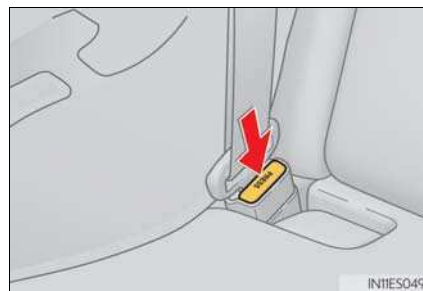

Child restraint systems with a top tether strap

- 1 Lower the head restraint in place at the lowest position.

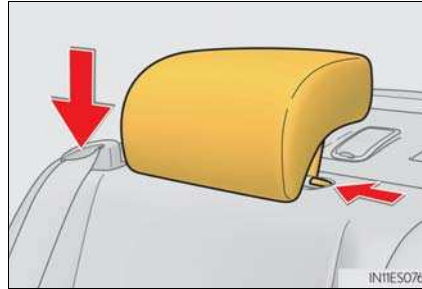


- 2 Secure the child restraint system using the seat belt or LATCH anchors.



- 3 Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top tether strap.

Make sure the top tether strap is securely latched.

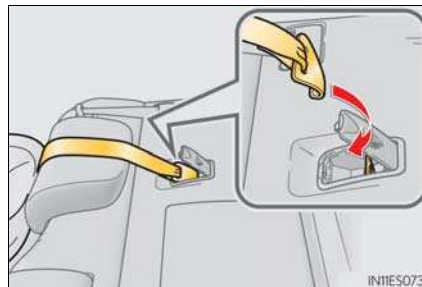**■ Laws and regulations pertaining to anchorages**

The LATCH system conforms to FMVSS225 or CMVSS210.2.

Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used.

This vehicle is designed to conform to the SAE J1819.

⚠ CAUTION

■ **When installing a booster seat**

To prevent the belt from going into ALR lock mode, do not fully extend the shoulder belt. ALR mode causes the belt to tighten only. This could cause injury or discomfort to the child. (→P. 34)


■ **When installing a child restraint system**

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of a sudden braking or an accident.

- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat.
- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated. Failure to do so may result in death or serious injury if the airbags deploy (inflate).



 **CAUTION****■ When installing a child restraint system**

- When a booster seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failing to do so may result in death or serious injury in the event of an accident or a sudden braking.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.

■ Do not use a seat belt extender

If a seat belt extender is used when installing a child restraint system, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of a sudden braking, sudden swerving or an accident.

■ To correctly attach a child restraint system to the anchors

When using the LATCH anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of a sudden braking or an accident.

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.

CAUTION

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

■ Important points while driving

- Keep the trunk lid closed.
- If you smell exhaust gases in the vehicle even when the trunk lid is closed, open the windows and have the vehicle inspected at your Lexus dealer as soon as possible.

■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine <hybrid system>.
- Do not leave the vehicle with the engine running <hybrid system operating> for a long time.
If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the engine running <hybrid system operating> in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running <hybrid system is operating>, exhaust gases may collect and enter the vehicle.


■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Lexus dealer.

Hybrid system features (hybrid vehicles)

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

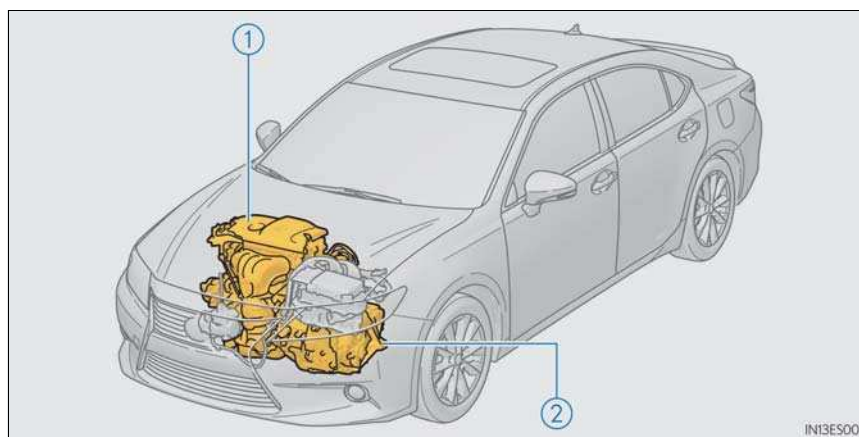

- ① Gasoline engine
- ② Electric motor (traction motor)

◆ When stopped/during start off

The gasoline engine stops when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped and the electric motor (traction motor) is used.

◆ During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.

◆ When accelerating sharply

When the accelerator pedal is depressed heavily, the power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

◆ When braking (regenerative braking)

The electric motor (traction motor) charges the hybrid battery (traction battery).

Vehicle proximity notification system

When driving with the gasoline engine stopped, a sound, which changes in accordance with the driving speed, will be played in order to warn people nearby of the vehicle's approach. The sound will stop when the vehicle speed exceeds approximately 15 mph (25 km/h).

■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift position in D or S.
- The brake pedal is depressed while driving with the shift position in D or S.

■ EV indicator

The EV indicator comes on when driving the vehicle using only the electric motor (traction motor).



■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

■ Charging the hybrid battery (traction battery)

- As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 10 miles (16 km). If the hybrid battery becomes fully discharged and you are unable to jump-start the vehicle with the 12-volt battery, contact your Lexus dealer.
- If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.

■ Charging the 12-volt battery

→P. 811

■ After the 12-volt battery has discharged or has been changed or removed

The gasoline engine may not stop even if the vehicle is running on the hybrid battery (traction battery). If this continues for a few days, contact your Lexus dealer.

■ Sounds and vibrations specific to a hybrid vehicles

There may be no engine sounds or vibration even though the vehicle is able to move. For safety, apply the parking brake and make sure to shift the shift position to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the trunk lid is open.
- Sounds may be heard from the hybrid transmission when the hybrid system starts or stops.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on rear left seat.

■ Vehicle proximity notification system

In the following cases, the vehicle proximity notification system may be difficult for surrounding people to hear.

- In very noisy areas
- In the wind or the rain

Also, as the vehicle proximity notification system is installed on the front of the vehicle, it may be more difficult to hear from the rear of the vehicle compared to the front.

■ Maintenance, repair, recycling, and disposal


Contact your Lexus dealer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

■ Customization

Settings (e.g. on/off operation of the EV indicator) can be changed.
(Customizable features: →P. 852)

Hybrid system precautions (hybrid vehicles)


Take care when handling the hybrid system, as it contains a high voltage system (about 650 V at maximum) as well as parts that become extremely hot when the hybrid system is operating. Obey the caution labels attached to the vehicle.

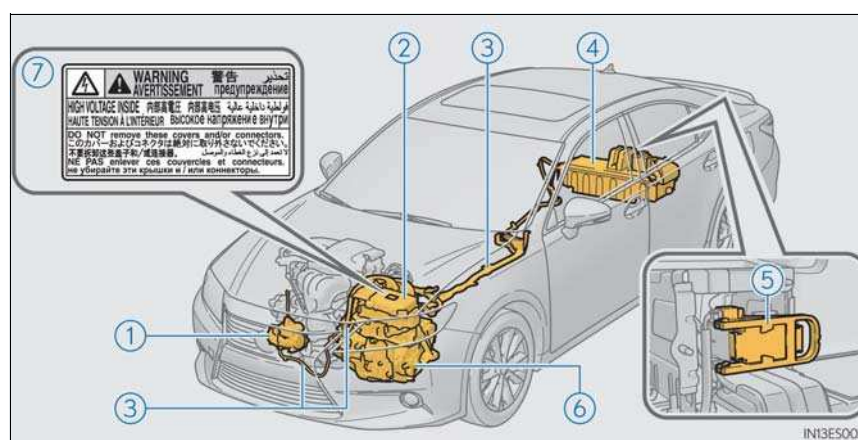

- ① Air conditioning compressor
- ② Power control unit with DC/DC converter
- ③ High voltage cables (orange)
- ④ Hybrid battery (traction battery)
- ⑤ Service plug
- ⑥ Electric motor (traction motor)
- ⑦ Caution label

Hybrid battery (traction battery) air vent

There is an air intake vent beside the rear left seat for the purpose of cooling the hybrid battery (traction battery). If the vent becomes blocked, the hybrid battery may overheat, leading to a reduction in hybrid battery output.

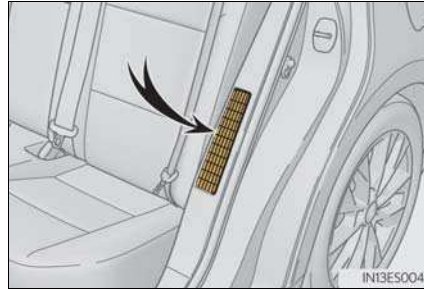


Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks off the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Lexus dealer.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P. 761)

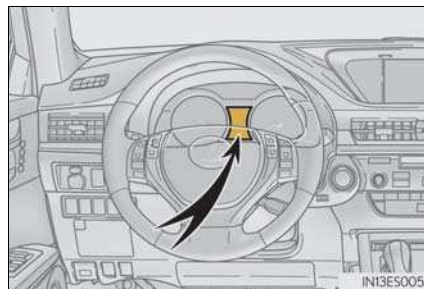

■ If a warning light comes on, a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In that case, try to start the system again. If the "READY" indicator does not come on, contact your Lexus dealer.

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P. 754) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.0 gal. [11.3 L, 2.5 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

■ Electromagnetic waves

- High voltage parts and cables on the hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.


■ Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

⚠ CAUTION**■ High voltage precautions**


The vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the caution labels attached to the vehicle.
- Never try to open the service plug access hole located behind the rear seats. The service plug is used only when the vehicle is serviced and is subject to high voltage.

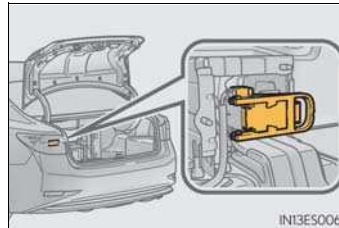

1

For safety and security

 **CAUTION****■ Road accident cautions**

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, apply the parking brake, shift the shift lever to P, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch the fluid as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicles, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause an electricity leakage leading to a fire. (→P. 743)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.

■ Hybrid battery (traction battery)

Your vehicle contains a sealed nickel-metal hydride battery. If disposed of improperly, it is hazardous to the environment and there is a risk of severe burns and electrical shock that may result in death or serious injury.

 NOTICE**■ Hybrid battery air vent**

- Do not put foreign objects near the air vent. The hybrid battery (traction battery) may overheat and be damaged.
- Clean the air vent regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not wet or allow foreign substances to enter the air vent as this may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by your Lexus dealer.


Engine immobilizer system (gasoline vehicles)

The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

The indicator light flashes after the "START STOP ENGINE" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "START STOP ENGINE" switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

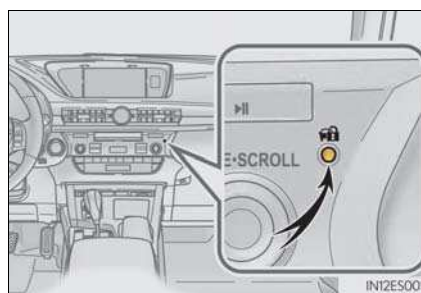

■ System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

■ Certifications for the engine immobilizer system

- ▶ For vehicles sold in the U.S.A.

FCC ID: NI4TMIMB-3

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- ▶ For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

⚠ CAUTION**■ Certifications for the engine immobilizer system**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

⚠ NOTICE**■ To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.


Immobilizer system (hybrid vehicles)

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

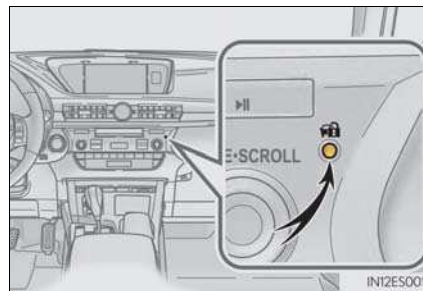

■ System maintenance

The vehicle has a maintenance-free type immobilizer system.

■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

■ Certifications for the immobilizer system

- ▶ For vehicles sold in the U.S.A.

FCC ID: NI4TMIMB-3

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- ▶ For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

⚠ CAUTION**■ Certifications for the immobilizer system**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

⚠ NOTICE**■ To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Alarm

The alarm

The alarm uses light and sound to give an alert when an intrusion is detected.


The alarm is triggered in the following situations when the alarm is set:

- A locked door or trunk is unlocked or opened in any way other than using the entry function, wireless remote control or mechanical key. (The doors will lock again automatically.)
- The hood is opened.

Setting the alarm system

Close the doors, trunk and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

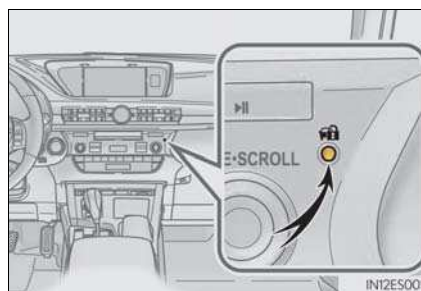

Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarms:

- Unlock the doors or open the trunk.
- Turn the "START STOP ENGINE" <"POWER"> switch to ACCESSORY or IGNITION ON <ON> mode, or start the engine <hybrid system>. (The alarm will be deactivated or stopped after a few seconds.)

■ System maintenance

The vehicle has a maintenance-free type alarm system.

■ Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

■ Triggering of the alarm


The alarm may be triggered in the following situations:
(Stopping the alarm deactivates the alarm system.)

- A person inside the vehicle opens a door, the trunk or hood.




- The 12-volt battery is recharged or replaced when the vehicle is locked. (→P. 807)

▶ Gasoline vehicles

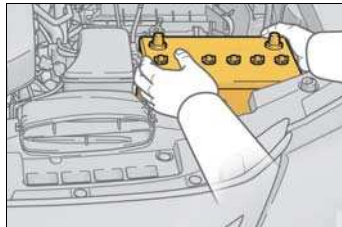

▶ Hybrid vehicles

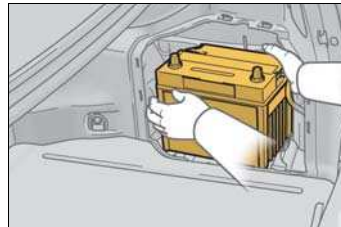


■ Alarm-operated door lock

- When the alarm is operating, the doors are locked automatically to prevent intruders.
- Do not leave the key inside the vehicle when the alarm is operating, and make sure the key is not inside the vehicle when recharging or replacing the battery.

 **NOTICE****■ To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.



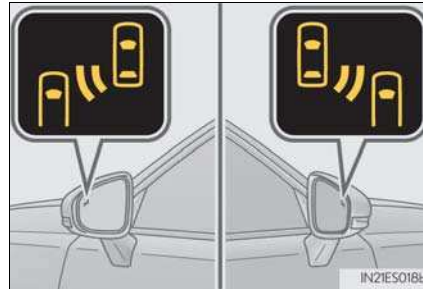


◆ Outside rear view mirrors (vehicles with BSM)









2

Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

<p>^{*1}  (U.S.A.)</p>	<p>Brake system warning light (→P. 751)</p>	<p>^{*1} </p>	<p>Electric power steering system warning light (→P. 753)</p>
<p>^{*1}  (Canada)</p>	<p>Brake system warning light (→P. 751)</p>	<p>^{*1} </p>	<p>Slip indicator (→P. 753)</p>
<p>^{*1} </p>	<p>Charging system warning light (→P. 752)</p>	<p>^{*1}  (hybrid vehicles)</p>	<p>Brake system warning light (→P. 753)</p>
<p>^{*1}  (U.S.A.)</p>	<p>Malfunction indicator lamp (→P. 752)</p>	<p>^{*1}  (if equipped)</p>	<p>Automatic headlight leveling system warning light (→P. 753)</p>
<p>^{*1}  (Canada)</p>	<p>Malfunction indicator lamp (→P. 752)</p>	<p>^{*1} </p>	<p>Open door warning light (→P. 754)</p>
<p>^{*1} </p>	<p>SRS warning light (→P. 752)</p>	<p>^{*1} </p>	<p>Low fuel level warning light (→P. 754)</p>

Instrument cluster

^{*1}  (U.S.A.)	^{*1} ABS warning light (→P. 752)		^{*1} Seat belt reminder light (→P. 754)
^{*1}  (Canada)	^{*1} ABS warning light (→P. 752)	^{*1} 	^{*1} Master warning light (→P. 754)
^{*1,2}  (if equipped)	^{*1,2} “PCS” warning light (→P. 753, 764)	^{*1} 	^{*1} Tire pressure warning light (→P. 755)

^{*1}: These lights turn on when the “START STOP ENGINE” <“POWER”> switch is turned to IGNITION ON <ON> mode to indicate that a system check is being performed. They will turn off after the engine <hybrid system> is on, or after a few seconds. There may be a malfunction in a system if the lights do not turn on, or turn off. Have the vehicle inspected by your Lexus dealer.

^{*2}: The light flashes to indicate a malfunction.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

	Turn signal indicator (→P. 221)		Cruise control "SET" indicator (→P. 244, 248)
	Headlight indicator (→P. 224) (U.S.A.)		"LDA" (Lane Departure Alert) indicator (→P. 264) (if equipped)
	Tail light indicator (→P. 224) (Canada)		Intuitive parking assist indicator (→P. 271) (if equipped)
	Headlight high beam indicator (→P. 225)		Slip indicator (→P. 299, 304) *1,2
	Automatic High Beam indicator (→P. 228) (if equipped)		VSC OFF indicator (→P. 304) *1
	Front fog light indicator (→P. 234)		"PCS" warning light (→P. 307) *1,3 (if equipped)
	"READY" indicator (→P. 204) (hybrid vehicles)		BSM outside rear view mirror indicators (→P. 313) *4 (if equipped)
	EV indicator (→P. 72) (hybrid vehicles)		Eco Driving Indicator Light (→P. 105) *1 (gasoline vehicles)
	Cruise control indicator (→P. 244, 248)		"AIR BAG ON/OFF" indicator (→P. 49) *1
	Radar cruise control indicator (→P. 248) (if equipped)		

2

Instrument cluster

*1: These lights turn on when the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode to indicate that a system check is being performed. They will turn off after the engine <hybrid system> is on, or after a few seconds. There may be a malfunction in a system if the lights do not turn on, or turn off. Have the vehicle inspected by your Lexus dealer.

*2: The light flashes to indicate that the system is operating.


*3: The light turns on when the system is turned off. The light flashes quickly to indicate that the system is operating.

*4: In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode while the BSM main switch is set to ON.
- When the BSM main switch is set to ON while the "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction with the system. If this occurs, have the vehicle inspected by your Lexus dealer.

 CAUTION

■ **If a safety system warning light does not come on**

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine <hybrid system>, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Lexus dealer immediately if this occurs.

Gauges and meters




The units used on the speedometer may differ depending on the target region.

- ① Engine coolant temperature gauge
Displays the engine coolant temperature
- ② Tachometer/Hybrid System Indicator
 - ▶ Tachometer
Gasoline vehicles, or hybrid vehicles with sport mode selected (→P. 296)
Displays the engine speed in revolutions per minute
 - ▶ Hybrid System Indicator
Hybrid vehicles with other than sport mode selected (→P. 296)
Displays hybrid system output or regeneration level (→P. 96)
- ③ ECO lamp and SPORT lamp
Changes colors according to driving mode (→P. 97)
- ④ Multi-information display
Presents the driver with a variety of driving-related data (→P. 98)
- ⑤ Speedometer
Displays the vehicle speed

- ⑥ Fuel gauge
Displays the quantity of fuel remaining in the tank
- ⑦ Shift position and shift range
Displays the selected shift position or selected shift range (→P. 214, 217)
- ⑧ Odometer and trip meter display
 - ▶ Odometer
Displays the total distance the vehicle has been driven
 - ▶ Trip meter
Displays the distance the vehicle has been driven since the meter was last reset.
Trip meters "A" and "B" can be used to record and display different distances independently.

Changing the display


Switches between odometer and trip meter displays. When the trip meter is displayed, pressing and holding the button will reset the trip meter.

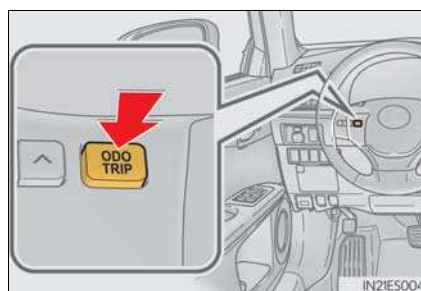

Instrument panel light control

The brightness of the instrument panel lights can be adjusted.

- ① Darker
- ② Brighter

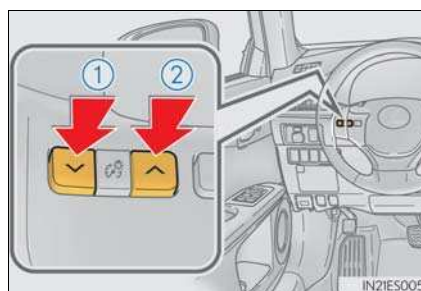

■ The meters and display illuminate when

The “START STOP ENGINE” <“POWER”> switch is in IGNITION ON <ON> mode.

■ Instrument panel brightness adjustment

The instrument panel brightness levels when the tail lights are on and off can be adjusted individually. However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument panel brightness. At this time, any adjustments made to the instrument panel brightness levels will be applied to both settings at once.

■ Limitation of brightness adjustment

The brightness of the instrument panel lights is automatically adjusted based on the light sensor detecting how bright the surroundings are. However, if the instrument panel brightness has been manually set to either the brightest or darkest setting, the automatic adjustment will not be performed.

■ Hybrid System Indicator (hybrid vehicles)

① Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

② Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.

③ Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

④ Charge area

Shows regenerative charging.



- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.

- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.

- Charge area indicates regeneration* status. Regenerated energy will be used to charge the battery.

*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ ECO lamp and SPORT lamp

- When sport mode is selected, SPORT lamp (red) will illuminate.
- When all of the following conditions are satisfied and Eco-friendly driving, ECO lamp (blue) will illuminate. (ECO lamp will become brighter the more Eco-friendly driving you perform. Also, while the vehicle is stopped or the acceleration exceeds Zone of Eco driving, ECO lamp turns off. (→P. 105) However, when Eco drive mode is selected, while the vehicle is stopped or the acceleration exceeds Zone of Eco driving, ECO lamp does not turn off.):
 - Driving with the shift lever in D
 - Either normal mode or Eco drive mode is selected.
 - The vehicle speed is approximately 80 mph (130 km/h) or below.

■ Tachometer (hybrid vehicles)

Hybrid System Indicator automatically switches to the tachometer when driving mode is in sport mode.

■ Engine speed (hybrid vehicles)

Engine speed is precisely controlled in order to help improve fuel efficiency and reduce exhaust emissions etc.

There are times when the engine speed that is displayed may differ even when vehicle operation and driving conditions are the same.

■ Odometer and trip meter display

→P. 201, 209

■ Customization

Settings (e.g. on/off operation of ECO lamp) can be changed.
(Customizable features →P. 852)



NOTICE

■ To prevent damage to the engine and its components


- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 813, 816)

Multi-information display

Display contents

The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

- Eco Driving Indicator Zone Display (gasoline vehicles)
(→P. 105)
- Energy monitor (hybrid vehicles)
(→P. 108)
- Outside temperature display
(→P. 99)

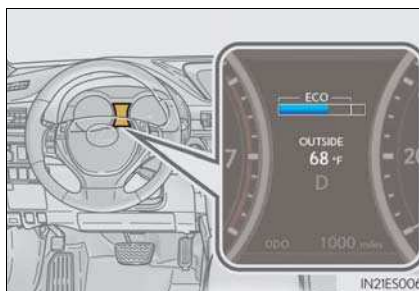

- Trip information (→P. 99)

Displays driving range, fuel consumption and other cruising related information

- Tire inflation pressure (→P. 703)
- Drive monitor (→P. 102)
- Intuitive parking assist display* (if equipped) (→P. 273)
- Dynamic radar cruise control display* (if equipped) (→P. 248)
- LDA (Lane Departure Alert) display* (if equipped) (→P. 265)
- Warning messages (→P. 761)


Automatically displayed when a malfunction occurs in one of the vehicle's systems. Display can be switched by pressing the "DISP" button. (→P. 99)

*: Automatically displayed when the system is used. Display can be switched by pressing the "DISP" button. (→P. 99)

Trip information

■ Switching the display

Items displayed can be switched by pressing the "DISP" button.

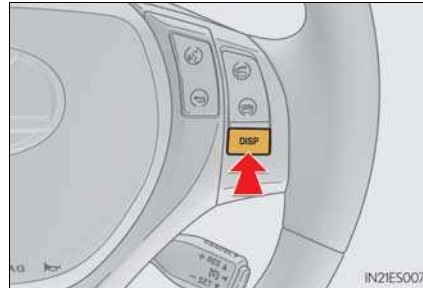

■ Eco Driving Indicator Zone Display (gasoline vehicles)

→P.105

■ Energy monitor (hybrid vehicles)

→P.108


■ Outside temperature



Displays the outside air temperature

The temperature range that can be displayed is from -40°F (-40°C) to 122°F (50°C)

■ Current fuel consumption

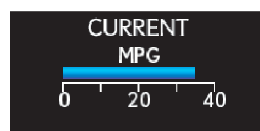


Displays the current rate of fuel consumption

■ Average fuel consumption after refueling

AFTER REFUELING
23.0 MPG

Displays the average fuel consumption since the vehicle was last refueled


Use the displayed average fuel consumption as a reference.

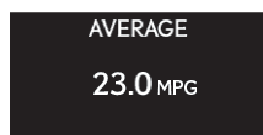■ Average fuel consumption

AVERAGE
23.0 MPG

Displays the average fuel consumption since the function was reset

- The function can be reset by pressing the “DISP” button for longer than 1 second when the average fuel consumption is displayed.
- Use the displayed average fuel consumption as a reference.

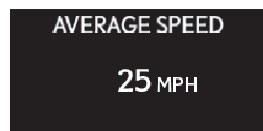■ Average vehicle speed

AVERAGE SPEED
25 MPH

Displays the average vehicle speed since the function was reset

The function can be reset by pressing the “DISP” button for longer than 1 second when the average vehicle speed is displayed.

■ Driving range




Displays the estimated maximum distance that can be driven with the quantity of fuel remaining

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.

When refueling, turn the "START STOP ENGINE" <"POWER"> switch off. If the vehicle is refueled without turning the "START STOP ENGINE" <"POWER"> switch off, the display may not be updated.

■ Elapsed time

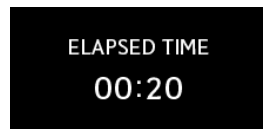

Displays the elapsed time since the engine <hybrid system> was started

■ Tire inflation pressure



Displays inflation pressure of each tire

For the vehicles with a full-size spare tire: The inflation pressure of the spare tire will be displayed.

Drive monitor

Outside temperature, average fuel consumption after refueling or driving range can be selected and displayed.

If displayed on the drive monitor, other trip information or warning messages can be displayed simultaneously.


For display and selection procedures, follow the “Setting up the displays”.

The information displayed on the drive monitor will not be displayed on the trip information screen.




Setting up the displays


- 1 While the vehicle is stopped, press the "DISP" button until the "Settings" screen appears.

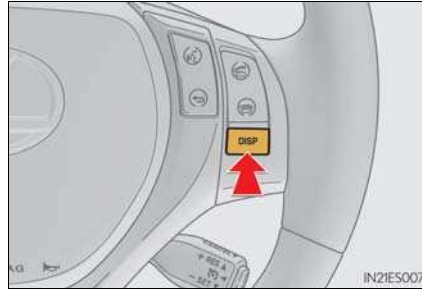

- 2 Press and hold the "DISP" button until the screen changes.

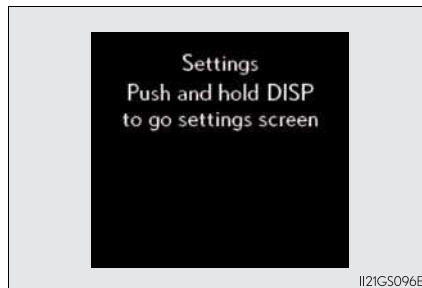

Vehicles without Lexus Display Audio system or a navigation system: Press and hold the "DISP" button after selecting the desired setting item ("Meter", "Vehicle" or "Ambient illumin." [if equipped]) by pressing the "DISP" button.

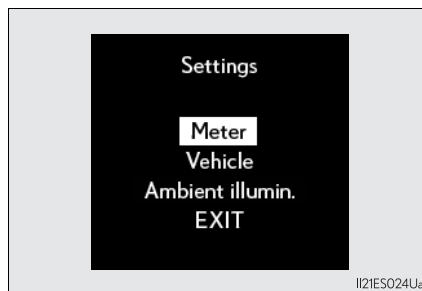

- 3 Press and hold the "DISP" button after selecting the desired setting item by pressing the "DISP" button.




2

Instrument cluster

- 4 Press and hold the “DISP” button after selecting the desired setting by pressing the “DISP” button.

The display goes back to step 3.

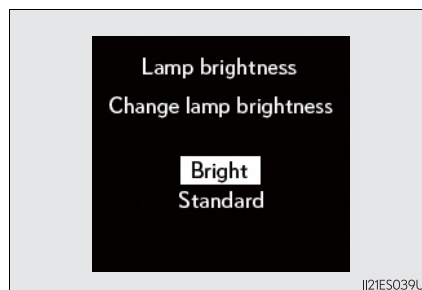

- 5 Press and hold the “DISP” button after selecting the “EXIT” by pressing the “DISP” button.

The display goes back to step 1.

(The display goes back to step 1 automatically in few seconds without proceeding step 5.)



■ System check display

After turning the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode, "SYSTEM CHECK" is displayed while system operation is checked.

■ Eco Driving Indicator (gasoline vehicles)

Suggests Zone of Eco driving and Eco driving ratio based on acceleration.

① Eco Driving Indicator Light

Eco Driving Indicator Light availability can be customized. The default setting is off. (→P. 852)

During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.

When the acceleration exceeds Zone of Eco driving, or when the vehicle is stopped, the light turns off.

② Eco Driving Indicator Zone Display

③ Zone of Eco driving

④ Eco driving ratio based on acceleration

If the acceleration exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display blinks.


Eco Driving Indicator will not operate in the following conditions:

- The shift lever is anything other than D.
- Neither normal mode nor Eco drive mode is selected. (→P. 296)
- The vehicle speed is approximately 80 mph (130 km/h) or higher.

■ Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 12 mph [20 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

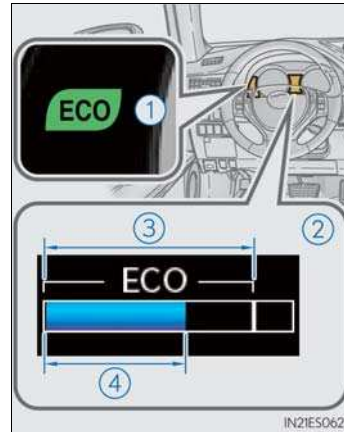

2

Instrument cluster

■ **Setting display automatic cancelation**

In the following situations, setting display in which the settings can be changed through the "DISP" button will automatically be turned off.

- When a warning message appears while the setting display is displayed
- When the vehicle begins to move while the setting display is displayed

■ **Tire inflation pressure**


- It may take a few minutes to display the tire inflation pressure after the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.
- "---" may be displayed if the tire position information cannot be determined due to unfavorable radio wave conditions.
- Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.

■ **Liquid crystal display**

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

■ **Customization**

Setting of available languages can be changed. (Customizable features →P. 852)

 CAUTION**■ The information display at low temperatures**

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

■ Cautions during setting up the display

As the engine needs to be running <hybrid system needs to be operating> during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.


 NOTICE**■ During setting up the display**

To prevent 12-volt battery discharge, ensure that the engine is running <hybrid system is operating> while setting up the display features.

Energy monitor/consumption screen

You can view the status of your vehicle on the multi-information display and the navigation system screen or Lexus Display Audio system screen.

- ① Navigation system screen or Lexus Display Audio system screen (if equipped)
- ② Multi-information display

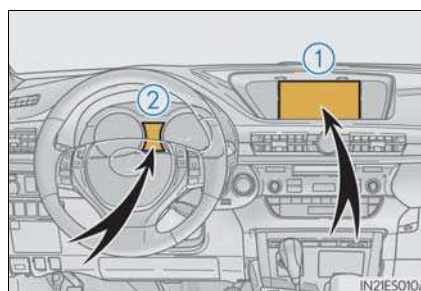


Remote Touch/Lexus Display Audio controller (if equipped)

- ▶ Navigation system

Remote Touch*

- ① "MENU" button
- ② Remote Touch knob

*: For use of the Remote Touch, refer to the "Navigation System Owner's Manual".

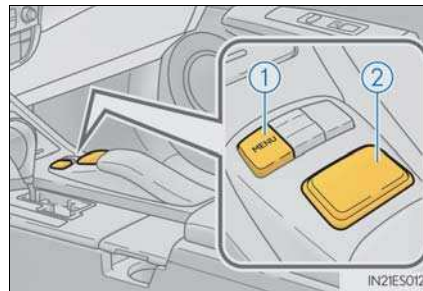


- ▶ Lexus Display Audio system

Lexus Display Audio controller
(→P. 334)

- ① "MENU" button
Displaying the "MENU" screen
- ② Lexus Display Audio controller

Turn or move the controller in the four direction to select a function, number and screen button.

Push the controller to enter the selected function, number and screen button.

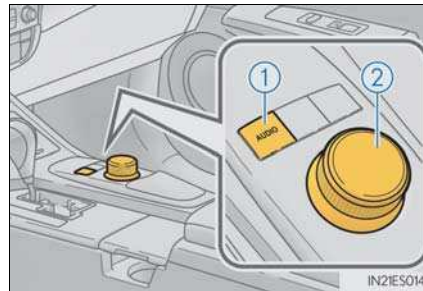

Energy monitor (hybrid vehicles)

■ Navigation system screen or Lexus Display Audio system screen (if equipped)

▶ Vehicles with a navigation system

- 1 Press the "MENU" button on the Remote Touch.
- 2 Select "Info/Apps" on the "Menu" screen.



- 3 Select "Fuel Consumption" on the "Information" screen.

If the "Energy Monitor" screen is not displayed, select "Energy".



▶ Vehicles with Lexus Display Audio system


- 1 Press the "MENU" button on the Lexus Display Audio controller.
- 2 Select "Car" on the "Menu" screen.

If the "Energy Monitor" screen is not displayed, select "Energy".








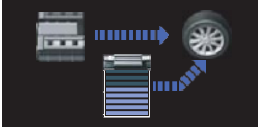


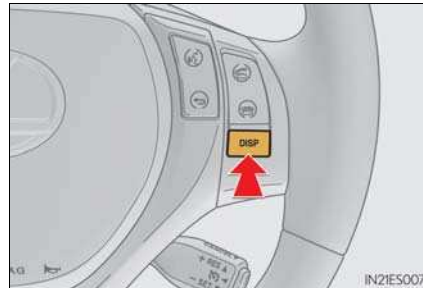
■ Multi-information display





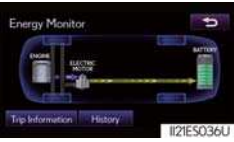


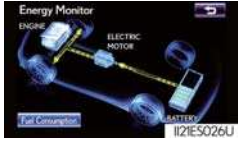

Press the “DISP” button on the steering wheel several times to select the energy monitor display.

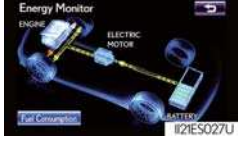

2


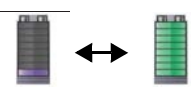

Instrument cluster

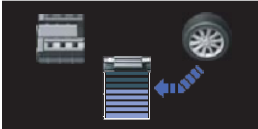	Navigation system screen/Lexus Display Audio system screen	Multi-information display
When the vehicle is powered by the electric motor (traction motor)	<p>▶ Navigation system</p>  <p>▶ Lexus Display Audio system</p> 	
When the vehicle is powered by both the gasoline engine and the electric motor (traction motor)	<p>▶ Navigation system</p>  <p>▶ Lexus Display Audio system</p> 	
When the vehicle is powered by the gasoline engine	<p>▶ Navigation system</p>  <p>▶ Lexus Display Audio system</p> 	

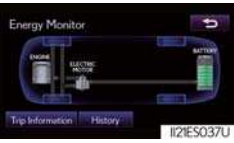	Navigation system screen/Lexus Display Audio system screen	Multi-information display
When the vehicle is charging the hybrid battery (traction battery)	▶ Navigation system  ▶ Lexus Display Audio system 	
	▶ Navigation system  ▶ Lexus Display Audio system 	
When there is no energy flow	▶ Navigation system  ▶ Lexus Display Audio system 	

2

Instrument cluster

	Navigation system screen/Lexus Display Audio system screen	Multi-information display
Hybrid battery (traction battery) status	<p>▶ Navigation system</p> <p>Low Full</p>  <p>▶ Lexus Display Audio system</p> 	<p>Low Full</p> 

These images are examples only, and may vary slightly from actual conditions.

Consumption (if equipped)

- ▶ Vehicles with a navigation system

1 Press the “MENU” button on the Remote Touch, then select “Info/ Apps” on the “Menu” screen.

2 Select “Fuel Consumption” on the “Information” screen.

Hybrid vehicles: If the “Energy Monitor” screen is displayed, select “Fuel Consumption”.

- ▶ Vehicles with Lexus Display Audio system

Press the “MENU” button on the Lexus Display Audio controller, then select “Car” on the “Menu” screen.


Hybrid vehicles: If the “Energy Monitor” screen is displayed, select “Fuel Consumption”.

■ Trip information

If the “Trip Information” screen is not displayed, select “Trip Information”.

▶ Navigation system

▶ Lexus Display Audio system

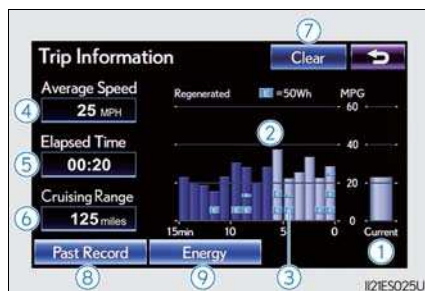

- ① Current fuel consumption
- ② Fuel consumption in the past 15 minutes
- ③ Hybrid vehicles: Regenerated energy in the past 15 minutes
One symbol indicates 50 Wh. Up to 5 symbols are shown.
- ④ Displays the average vehicle speed since the engine <hybrid system> was started.
- ⑤ Displays the elapsed time since the engine <hybrid system> was started.
- ⑥ Cruising range (→P. 118)
- ⑦ Reset the consumption data
- ⑧ “Past Record” (Navigation system) or “History” (Lexus Display Audio system) screen appears
- ⑨ Hybrid vehicles: “Energy Monitor” screen appears

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the “START STOP ENGINE” <“POWER”> switch was last turned to IGNITION ON <ON> mode. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

■ Past record

If the “History” or “Past Record” screen is not displayed, select “History” or “Past Record”.

▶ Navigation system



▶ Lexus Display Audio system



- ① Average fuel consumption
- ② Previous fuel consumption record
- ③ Best recorded fuel consumption
- ④ Update the average fuel consumption data
- ⑤ Reset the past record data
- ⑥ “Trip Information” screen appears
- ⑦ Hybrid vehicles: “Energy Monitor” screen appears

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

■ Updating the past record data

Update the average fuel consumption by selecting "Update" to measure the current fuel consumption again.

■ Resetting the data

The fuel consumption data can be deleted by selecting "Clear".

■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.


As a result, the actual distance that can be driven may differ from that displayed.

Keys

The keys

The following keys are provided with the vehicle.

- ① Electronic keys
 - Operating the smart access system with push-button start (→P.123)
 - Operating the wireless remote control function (→P.136)
- ② Mechanical keys
- ③ Key number plate

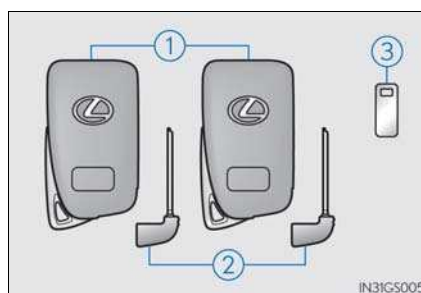


Using the mechanical key

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 802)

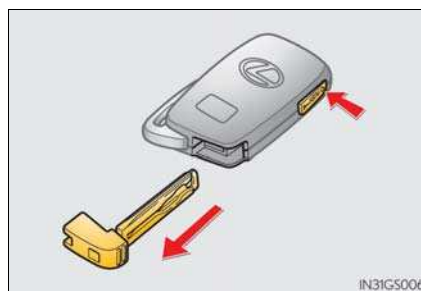

■ When required to leave the vehicle's key with a parking attendant

Turn the trunk opener main switch off and lock the glove box as circumstances demand. (→P. 145, 608)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

■ If you lose your mechanical keys

New genuine mechanical keys can be made by your Lexus dealer using the other mechanical key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

 NOTICE**■ To prevent key damage**

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.

■ Carrying the electronic key on your person

Carry the electronic key 3.9 in. (10 cm) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 3.9 in. (10 cm) of the electronic key may interfere with the key, causing the key to not function properly.

■ In case of a smart access system with push-button start malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle to your Lexus dealer.


■ When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit your Lexus dealer immediately with all remaining electronic keys that was provided with your vehicle.

Smart access system with push-button start

Function summary

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)

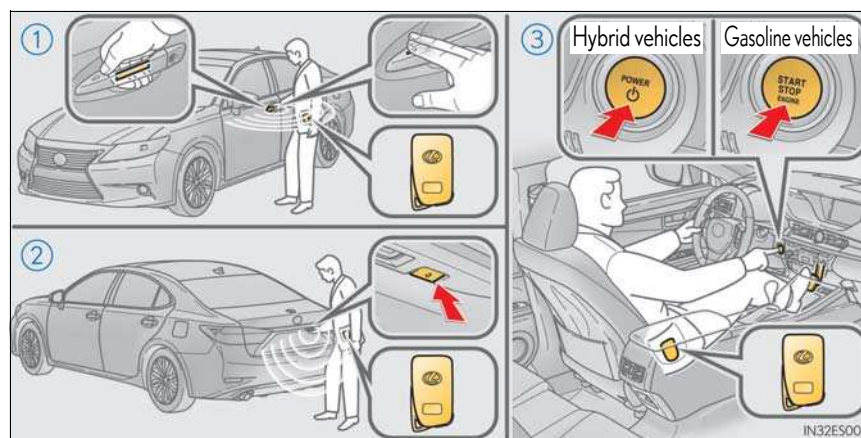

- ① Locks and unlocks the doors (→P. 124)
- ② Opens the trunk (→P. 124)
- ③ Starts the engine (→P. 197)
Starts the hybrid system (→P. 204)

■ Operation signals

A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

■ Security feature

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

■ Welcome light illumination control

The side marker, parking, tail and license plate lights automatically turn on at night when the doors are unlocked using the entry function or wireless remote control if the light switch is in the "AUTO" position.


Unlocking and locking the doors

Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.*


Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

*: The door unlock settings can be changed. (→P.128)

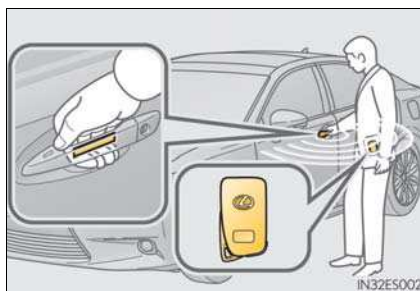


Touch the lock sensor (the indentation on the upper part of the door handle) to lock all the doors.

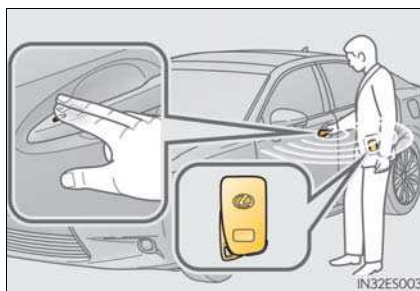

Opening the trunk

Press the button.


If the vehicle is equipped with power trunk opener and closer, the trunk lid automatically opens fully.

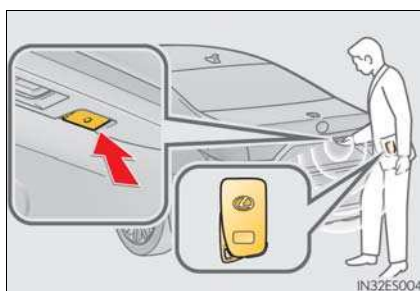

Antenna location and effective range

■ Antenna location

- ① Antennas outside the cabin
- ② Antennas inside the cabin
- ③ Antenna outside the trunk
- ④ Antenna inside the trunk

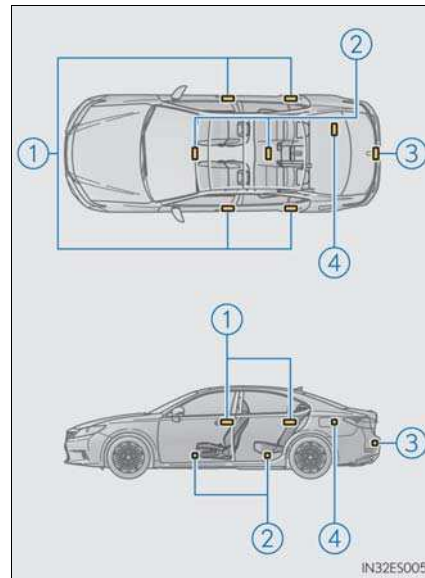


3

Operation of each component

■ Effective range (areas within which the electronic key is detected)**● When locking or unlocking the doors**

The system can be operated when the electronic key is within about 2.3 ft. (0.7 m) of an outside door handle. (Only the doors detecting the key can be operated.)

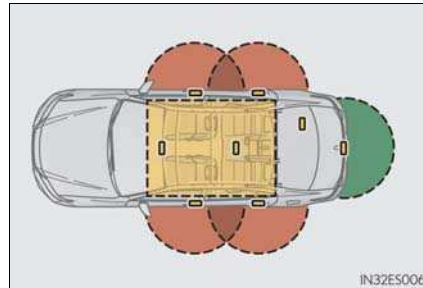**● When opening the trunk**


The system can be operated when the electronic key is within about 2.3 ft. (0.7 m) of the trunk release button.

● When starting the engine <hybrid system> or changing "START STOP ENGINE" <"POWER"> switch modes

The system can be operated when the electronic key is inside the vehicle.

■ When the door cannot be locked by the lock sensor on the upper part of the door handle

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

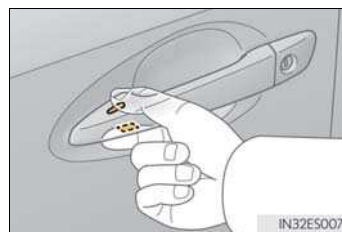

■ Alarms and warning indicators

An alarm sounds and warning message displays shown on the multi-information display are used to protect against unexpected accidents or theft of the vehicle resulting from erroneous operation. When a warning message is displayed, take appropriate measures based on the displayed message. (→P. 761)

When only an alarm sounds, circumstances and correction procedures are as follows.





Alarm	Situation	Correction procedure
Exterior alarm sounds once for 5 seconds	The trunk was closed while the electronic key was still inside the trunk and all the doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	The "START STOP ENGINE" <"POWER"> switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "START STOP ENGINE" <"POWER"> switch was in ACCESSORY mode).	Turn the "START STOP ENGINE" <"POWER"> switch off and close the driver's door.

3



Operation of each component


■ Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the "START STOP ENGINE" <"POWER"> switch off.
- 2 When the indicator light on the key surface is not on, press and hold  ,  or  for approximately 5 seconds while pressing and holding  .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

Multi-information display	Unlocking function	Beep
	Holding the driver's door handle unlocks only the driver's door.	Exterior: Beeps 3 times Interior: Pings once
	Holding a passenger's door handle unlocks all the doors.	
	Holding a door handle unlocks all the doors.	Exterior: Beeps twice Interior: Pings once

To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 60 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In case that the alarm is triggered, immediately stop the alarm. (→P. 84)



■ Battery-saving function

The battery-saving function will be activated in order to prevent the electronic key battery and the vehicle battery from being discharged while the vehicle is not in operation for a long time.


- In the following situations, the smart access system with push-button start may take some time to unlock the doors.
 - The electronic key has been left in an area of approximately 6 ft. (2 m) of the outside of the vehicle for 10 minutes or longer.
 - The smart access system with push-button start has not been used for 5 days or longer.
- If the smart access system with push-button start has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door. In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to unlock the doors.

■ Electronic Key Battery-Saving Function

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press  twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart access system with push-button start cannot be used. To cancel the function, press any of the electronic key buttons.

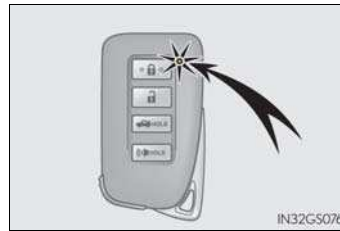

■ Conditions affecting operation

The smart access system with push-button start uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart access system with push-button start, wireless remote control and engine immobilizer system <immobilizer system> from operating properly. (Ways of coping: →P. 802)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
 - Cards to which aluminum foil is attached
 - Cigarette boxes that have aluminum foil inside
 - Metallic wallets or bags
 - Coins
 - Hand warmers made of metal
 - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
 - Another vehicle's electronic key or a wireless key that emits radio waves
 - Personal computers or personal digital assistants (PDAs)
 - Digital audio players
 - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window

■ Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
 - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the trunk is opened.
 - The electronic key is on the instrument panel, rear package tray or floor, or in the door pockets or glove box when the engine <hybrid system> is started or "START STOP ENGINE" <"POWER"> switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the engine <hybrid system> if the electronic key is near the window.
- The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The doors will automatically be locked after approximately 60 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)

■ **Note for locking the doors**

- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
 - Place the electronic key in a location 6 ft. (2 m) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
 - Set the electronic key to battery-saving mode to disable the smart access system with push-button start. (→P. 129)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
- Fingernails may scrape against the door during operation of the door handle. Be careful not to injure fingernails or damage the surface of the door.

■ **Note for the unlocking function**

- A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- Gripping the door handle when wearing a glove may not unlock the door.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
 - Place the electronic key in a location 6 ft. (2 m) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
 - Set the electronic key to battery-saving mode to disable the smart access system with push-button start. (→P. 129)
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.
- Fingernails may scrape against the door during operation of the door handle. Be careful not to injure fingernails or damage the surface of the door.

■ When the vehicle is not driven for extended periods

- To prevent theft of the vehicle, do not leave the electronic key within 6 ft. (2 m) of the vehicle.
- The smart access system with push-button start can be deactivated in advance. (→P. 852)

■ Alarm

Using the smart access system with push-button start to lock the doors will set the alarm system. (→P. 84)

■ To operate the system properly

- Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

- Do not leave the electronic key inside the luggage compartment. The key confinement prevention function may not operate, depending on the location of the key (close to a spare tire, the inside edge of the luggage compartment), conditions (inside a metal bag, close to metallic objects) and the radio waves in the surrounding area. (→P. 146)

■ If the smart access system with push-button start does not operate properly

- Locking and unlocking the doors and opening the trunk: Use the mechanical key. (→P. 802)
- Starting the engine <hybrid system>: →P. 803

■ **Electronic key battery depletion**

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin when the engine <hybrid system> stops. (→P. 781)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 710)
 - The smart access system with push-button start or the wireless remote control does not operate.
 - The detection area becomes smaller.
 - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 3 ft. (1 m) of the following electrical appliances that produce a magnetic field:
 - TVs
 - Personal computers
 - Cellular phones, cordless phones and battery chargers
 - Recharging cellular phones or cordless phones
 - Table lamps
 - Induction cookers

■ **When the electronic key battery is fully depleted**

→P. 710

■ **Customization**

Settings (e. g. smart access system with push-button start) can be changed.
(Customizable features: →P. 852)

■ **If the smart access system with push-button start has been deactivated in a customized setting**

- Locking and unlocking the doors and opening the trunk:
Use the wireless remote control or mechanical key. (→P. 136, 802)
- Starting the engine and changing “START STOP ENGINE” <“POWER”> switch modes: →P. 803
- Stopping the engine <hybrid system>: (→P. 198, 205)

■ Certification for the smart access system with push-button start

▶ For vehicles sold in the U.S.A.

FCC ID: HYQ23AAB FCC ID: HYQ14FBA

FCC ID: NI4TMLF10-8 FCC ID: NI4TMLF10-3

FCC ID: NI4TMIMB-3

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

▶ For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ Caution regarding interference with electronic devices

- People with implanted pacemakers or cardiac defibrillators should keep away from the smart access system with push-button start antennas. (→P. 125)

The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Lexus dealer for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable the entry function.

- Users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.

Radio waves could have unexpected effects on the operation of such medical devices.


Ask your Lexus dealer for details on disabling the entry function.

Wireless remote control

Function summary

The wireless remote control can be used to lock and unlock the vehicle.

- ① Locks all the doors
- ② Unlocks all the doors
Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.
- ③ Opens the windows and moon roof (press and hold)*
- ④ Opens the trunk (press and hold)
If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.
- ⑤ Sounds the alarm (press and hold) (→P. 137)

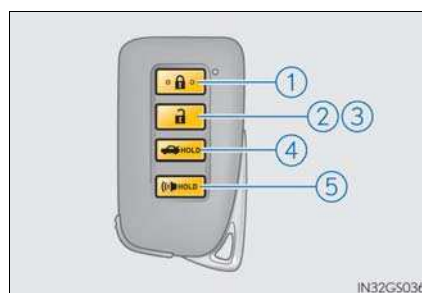

*: This setting must be customized at your Lexus dealer.

■ Operation signals

Doors:

A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

Trunk:

A buzzer sounds to indicate that the trunk has been opened.

Windows and moon roof:

A buzzer sounds to indicate that the windows and moon roof are operating.


■ Welcome light illumination control

→P. 123

■ Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Panic mode

When  is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the electronic key.



■ Security feature

→P. 123

■ Alarm

Using the wireless remote control to lock the doors will set the alarm system. (→P. 84)

■ Conditions affecting operation

→P. 130

■ **If the wireless remote control does not operate properly**

Locking and unlocking the doors and opening the trunk: Use the mechanical key.
(→P. 802)

■ **Electronic key battery depletion**

→P. 134

■ **When the electronic key battery is fully depleted**

→P. 710

■ **Confirmation of the registered key number**

The number of keys already registered to the vehicle can be confirmed. Ask your Lexus dealer for details.

■ **Customization**

Settings (e.g. wireless remote control system) can be changed.
(Customizable features: →P. 852)

■ **Certification for wireless remote control**

▶ For vehicles sold in the U.S.A.

FCC ID: HYQ23AAB FCC ID: HYQ14FBA

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

▶ For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Doors

Unlocking and locking the doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

◆ Entry function


→P. 123

◆ Wireless remote control

→P. 136

◆ Door lock switches


- ① Locks all the doors
- ② Unlocks all the doors

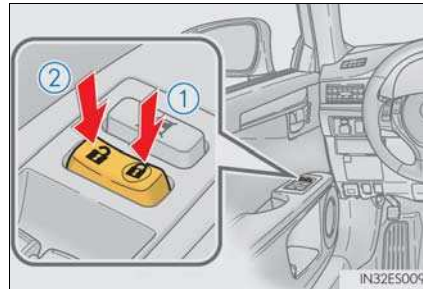

◆ Inside lock buttons

- ① Locks the door
- ② Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

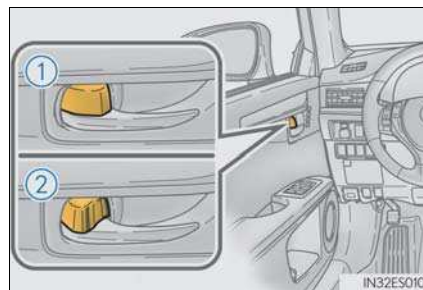

3

Operation of each component

Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- 2 Close the door.

The door cannot be locked if the “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode, or the electronic key is left inside the vehicle.


The key may not be detected correctly and the door may be locked.

Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

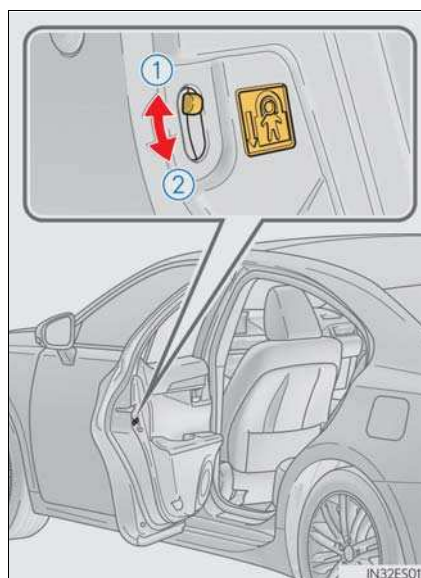



Automatic door locking and unlocking systems

The following functions can be set or canceled:

Function	Operation
Shift position linked door locking function	Shifting the shift lever out of P locks all doors.
Shift position linked door unlocking function	Shifting the shift lever to P unlocks all doors.
Speed linked door locking function	All doors are locked when the vehicle speed is approximately 12 mph (20 km/h) or higher.
Driver's door linked door unlocking function	All doors are unlocked when the driver's door is opened within 45 seconds after turning the "START STOP ENGINE" <"POWER"> switch off.


■ Setting and canceling the functions





To switch between setting and canceling, follow the procedure below:

- 1 Close all the doors and turn the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode. (Perform step 2 within 20 seconds.)
- 2 Shift the shift lever to P or N, and press and hold the driver's door lock switch ( or ) for approximately 5 seconds and then release.

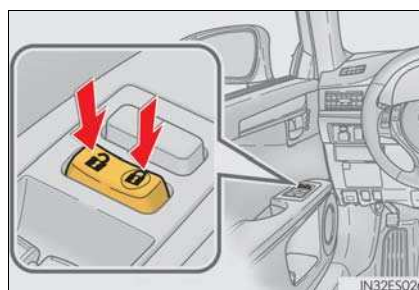The shift lever and switch positions corresponding to the desired function to be set are shown as follows.

Use the same procedure to cancel the function.



Function	Shift lever position	Driver's door lock switch position
Shift position linked door locking function	P	
Shift position linked door unlocking function		
Speed linked door locking function	N	
Driver's door linked door unlocking function		

When the setting or canceling operation is complete, all doors are locked and then unlocked.

■ **Impact detection door lock release system**

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

■ **Using the mechanical key**


The doors can also be locked and unlocked with the mechanical key. (→P. 802)

■ **If a wrong key is used**

The key cylinder rotates freely to isolate inside mechanism.

■ **Customization**

Settings (e.g. unlocking function using a key) can be changed. (Customizable features: →P. 852)

 CAUTION**■ To prevent an accident**

Observe the following precautions while driving the vehicle.
Failure to do so may result in a door opening and an occupant throwing out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed and locked.
- Do not pull the inside handle of the doors while driving.
Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

3

Operation of each component

Trunk


The trunk can be opened using the trunk opener, entry function or wireless remote control.

If the vehicle is equipped with a power trunk opener and closer, the trunk can be closed using the trunk closer.

Opening the trunk from inside the vehicle

Press the opener switch.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

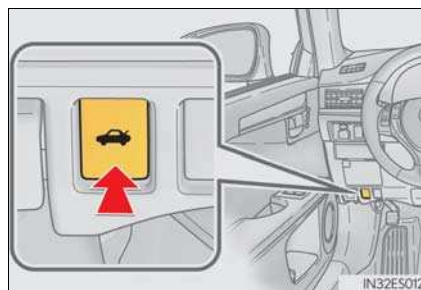


Opening the trunk from outside the vehicle

- **Entry function**
→P. 123
- **Wireless remote control**
→P. 136

Trunk closer switch (vehicles with power trunk opener and closer)


Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.

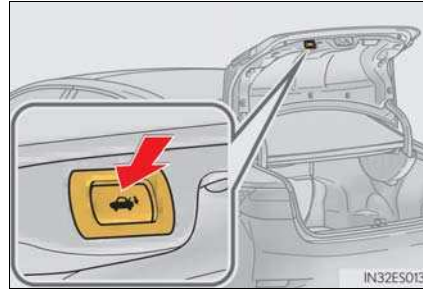

When closing the trunk

Using the trunk grip, lower the trunk without applying force to the side and push the trunk down from the outside to close it.

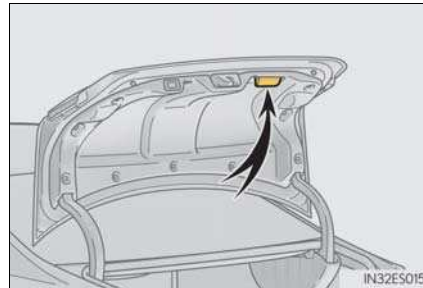


Luggage security system

The trunk opener switch can be temporarily disabled to protect luggage stored in the trunk against theft.

Turn the main switch in the glove box off to disable the trunk opener.

- ① On
- ② Off

The trunk lid cannot be opened even with the wireless remote control or the entry function.

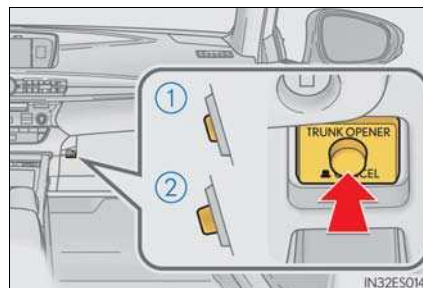

3

Operation of each component

■ Trunk light

The trunk light turns on when the trunk is opened.

■ Trunk easy closer (vehicles with power trunk opener and closer)

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position.

■ Function to prevent the trunk being locked with the electronic key inside

- When all doors are being locked, closing the trunk lid with the electronic key left inside the trunk will sound an alarm.

In this case, the trunk lid can be opened pressing the trunk release button on the trunk lid.

- Even when the spare electronic key is put in the trunk with all the doors locked, the key confinement prevention function can be activated so the trunk can be opened. In order to prevent theft, take all electronic keys with you when leaving the vehicle.

- Even when the electronic key is put in the trunk with all the doors are locked, the key may not be detected depending on the places and the surrounding radio wave conditions. In this case, the key confinement prevention function cannot be activated, causing the doors to lock when the trunk is closed. Make sure to check where the key is before closing the trunk.

- The key confinement prevention function cannot be activated if any one of the doors is unlocked. In this case, open the trunk using the trunk opener.

■ Overload protection function (vehicles with power trunk opener and closer)

The trunk lid will not operate when excessive load is present on the top of the trunk lid.

■ Fall-down protection function (vehicles with power trunk opener and closer)

While the trunk lid is opening automatically, applying excessive force to it will stop the opening operation to prevent the trunk lid from rapidly falling down.


■ Jam protection function (vehicles with power trunk opener and closer)

While the trunk lid is closing automatically, the trunk lid will stop closing and open if something gets caught.

■ Internal trunk release lever

The trunk lid can be opened by pulling the glow-in-the-dark lever located on the inside of the trunk lid to the side.

The lever will continue to glow for some time after the trunk lid is closed.

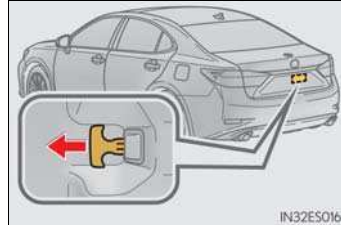

■ Using the mechanical key

The trunk can be also opened using the mechanical key. (→P. 803)

■ When leaving a key to the vehicle with a parking attendant

→P. 121

⚠ CAUTION

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ Before driving

- Make sure that the trunk lid is fully closed. If the trunk lid is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the trunk may be thrown out, causing an accident.
- Do not allow children to enter the trunk.
If a child is accidentally locked in the trunk, they could overheat or suffocate.
- Do not allow a child to open or close the trunk lid.
Doing so may cause the trunk lid to open unexpectedly, or cause the child's hands, head, or neck to be caught by the closing trunk lid.

■ Important points while driving

Never let anyone sit in the trunk. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

⚠ CAUTION**■ Using the trunk**

Observe the following precautions.


Failure to do so may cause parts of the body to be caught, resulting in serious injury.

- Remove any heavy loads, such as snow and ice, from the trunk lid before opening it. Failure to do so may cause the trunk lid to fall closed again after it is opened.
- When opening or closing the trunk lid, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- Use caution when opening or closing the trunk lid in windy weather as it may move abruptly in strong wind.
- The trunk lid may fall if it is not opened fully. It is more difficult to open or close the trunk lid on an incline than on a level surface, so beware of the trunk lid unexpectedly opening or closing by itself. Make sure that the trunk lid is fully open and secure before using the trunk.
- When closing the trunk lid, take extra care to prevent your fingers etc. from being caught.
- When closing the trunk lid, make sure to press it lightly on its outer surface. If the trunk handle is used to fully close the trunk lid, it may result in hands or arms being caught.
- Do not attach any accessories other than genuine Lexus parts to the trunk lid. Such additional weight on the trunk lid may cause the lid to fall closed again after it is opened.



CAUTION**■ Trunk easy closer (vehicles with power trunk opener and closer)**


In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position. It takes several seconds before the trunk easy closer begins to operate. Be careful not to catch fingers or anything else in the trunk lid, as this may cause bone fractures or other serious injuries.

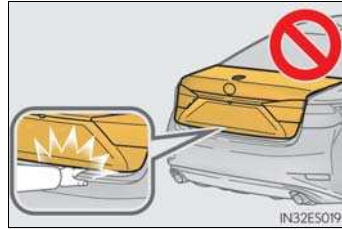**■ Power trunk opener and closer (if equipped)**

Observe the following precautions when operating the power trunk opener and closer.

Failure to do so may cause serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- If the trunk closer switch is pressed while the trunk lid is opening during automatic operation, the trunk lid stops opening. Take extra care when on an incline, as the trunk lid may open or close suddenly.
- On an incline, the trunk lid may fall after it opens automatically. Make sure the trunk lid is fully open and secure before using the trunk.
- In the following situations, the power trunk opener and closer may detect an abnormality and automatic operation may be stopped. In this case, the trunk lid has to be operated manually. Take extra care in this situation, as the stopped trunk lid may suddenly fall, causing an accident.
 - When the trunk lid contacts an obstacle
 - When the 12-volt battery voltage suddenly drops, such as when the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode or the engine <hybrid system> is started during automatic operation
- Do not attach any accessories other than genuine Lexus parts to the trunk lid. The power trunk opener and closer may not operate, causing itself to malfunction, or the trunk lid may fall closed again after it is opened.

 CAUTION**■ Jam protection function (vehicles with power trunk opener and closer)**

Observe the following precautions.
Failure to do so may cause serious injury.

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the trunk lid fully closes. Be careful not to catch fingers or anything else in the trunk lid.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

 NOTICE**■ To prevent trunk easy closer malfunctions (vehicles with power trunk opener and closer)**


Do not apply force to the trunk lid while the trunk easy closer is operating.

■ To prevent damage to the power trunk opener and closer (vehicles with power trunk opener and closer)

- Make sure that there is no luggage or snow on the trunk lid before operating the power trunk opener and closer. In addition, make sure that there is no ice between the trunk lid and frame that prevents movement of the trunk lid. Operating the power trunk opener and closer when excessive load is present on the trunk lid may cause a malfunction.
- Do not apply excessive force to the trunk lid while the power trunk opener and closer is operating.

Front seats

Adjustment procedure

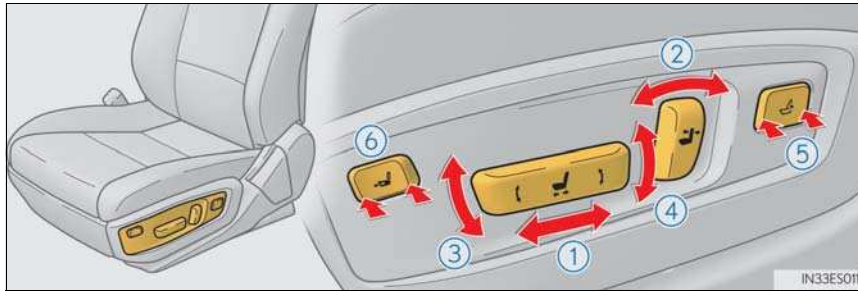


- | | |
|--|---|
| ① Seat position adjustment switch | ④ Vertical height adjustment switch |
| ② Seatback angle adjustment switch | ⑤ Lumbar support adjustment switch |
| ③ Seat cushion (front) angle adjustment switch | ⑥ Seat cushion length adjustment switch (if equipped) |

3

Operation of each component

■ **Power easy access system**

The driver's seat and steering wheel move in accordance with "START STOP ENGINE" <"POWER"> switch mode and the driver's seat belt condition. (→P. 156)

 **CAUTION**

■ **When adjusting the seat position**

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism.

■ **Seat adjustment**

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

■ **When adjusting the seat positions**

Make sure to leave enough space around the feet so they do not get stuck.

Driving position memory*

Your preferred driving position (the position of the driver's seat, steering wheel and outside rear view mirrors) can be memorized and recalled by pressing a button. It is also possible to set this function to activate automatically when the doors are unlocked.


Three different driving positions can be entered into memory.

The same buttons are found on the front passenger's side, allowing the position of the front passenger's seat to be memorized (if equipped).

Entering a position to memory

- 1 Check that the shift lever is in P.
- 2 Turn the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode.
- 3 Adjust the driver's seat, steering wheel, and outside rear view mirrors to the desired positions. (When memorizing the front passenger's seat, adjust the front passenger's seat to the desired positions.)
- 4 While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

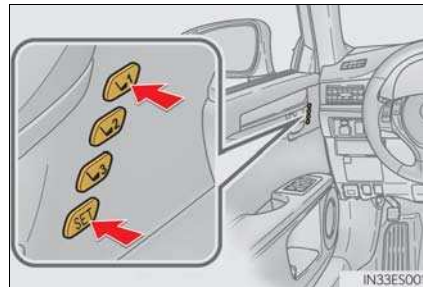


3

Operation of each component

*: If equipped

Recalling the memorized position

- 1 Check that the shift lever is in P.
- 2 Turn the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode.
- 3 Press button "1", "2" or "3" to recall the desired position.

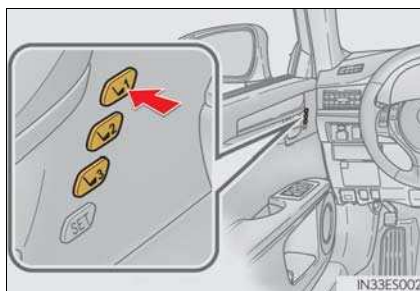

■ When you want to stop the position recall operation part-way through

Perform any of the following operations:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Adjust the seat using the switches (only cancels seat position recall).

■ The adjusted positions that can be memorized

The adjusted positions other than the position adjusted by lumbar support switch can be memorized.

Linking driving position memory with door unlock operation (driver's side only)

A desired driving position can be recalled linked with the unlocking of the door.

■ Setting procedure


Record your driving position to button "1", "2" or "3" before performing the following:

Carrying only the key to which you want to link the driving position, shift the shift lever to P and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

- 1 Turn the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode and recall the position which you want to link.
- 2 While pressing the button to recall the position, press the driver's door lock switch (either lock or unlock) until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened.

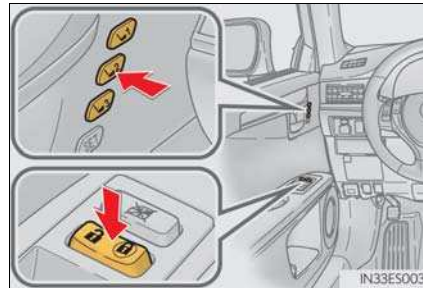

3

Operation of each component

■ **Cancelation procedure**


Carry only the key for which you want to cancel the linked door unlock operation.

If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1 Turn the “START STOP ENGINE” <“POWER”> switch to IGNITION ON <ON> mode and close the driver’s door.
- 2 While pressing the “SET” button, press the driver’s door lock switch (either lock or unlock) until the signal beeps.

Power easy access system

The auto away/return function enables easy access by activating when the driver attempts to enter or exit the vehicle.

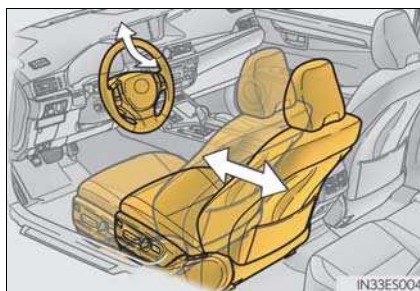

■ **Auto away function when exiting the vehicle**

When all of the following actions have been performed, the steering wheel will move up and back to the point farthest away from the driver and the seat will move backward:

- The shift lever has been shifted to P.
- The “START STOP ENGINE” <“POWER”> switch has been turned off.
- The driver seat belt has been unfastened.

■ Auto return function when entering the vehicle

When either of the following actions has been performed, the steering wheel will move toward the driver and seat will move forward:

- The “START STOP ENGINE” <“POWER”> switch has been turned to ACCESSORY mode.
- The driver’s seat belt has been fastened.

■ When driving position memory is linked with door unlock operation

If the driver’s door is opened, the driver’s seat will move toward the memorized position but stop slightly beforehand to allow easy access to the vehicle.

Turning the “START STOP ENGINE” <“POWER”> switch to ACCESSORY or IGNITION ON <ON> mode, or fastening the driver’s seat belt moves the seat fully into the memorized position.

■ Operating the driving position memory after turning the “START STOP ENGINE” <“POWER”> switch off

Driver’s seat:

Memorized seat positions can be activated up to 180 seconds after the driver’s door is opened and another 60 seconds after it is closed again. Memorized steering wheel position can be activated by pressing the “START STOP ENGINE” <“POWER”> switch.

Front passenger’s seat:

Memorized positions can be activated up to 180 seconds after the front passenger’s door is opened by pressing button “1”, “2” or “3”.

■ Correct seat position

When the seat is in the most forward or most backward position, and the seat is being moved in those directions, the system may not correctly recognize the current position and the memorized position will not be correctly recalled.

■ The auto away function for exiting the driver’s seat

If the seat is already close to the rearmost position, the auto away function may not operate when the driver exits the vehicle.

■ Customization

The distance that the driver’s seat moves backward during the auto away function can be changed. (Customizable features: →P. 852)

⚠ CAUTION**■ Seat adjustment caution**

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.


Head restraints

Head restraints are provided for all seats.

Front seats

Vertical adjustment


- ① Up
Pull the head restraints up.
- ② Down
Push the head restraint down while pressing the lock release button.

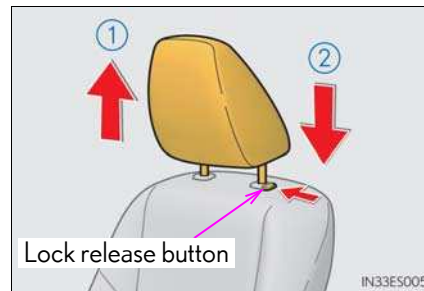

Angle adjustment

The position of the head restraint can be adjusted forward in 4 stages.

If the head restraint is pulled forward from the foremost position, it will return to the rearmost position.

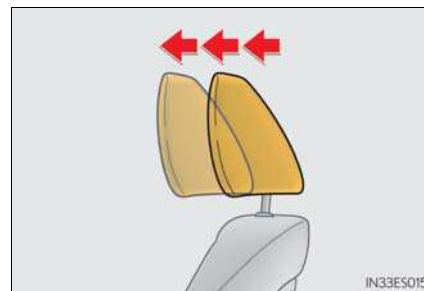

3

Operation of each component


Rear seats

① Up

Pull the head restraints up.


② Down

Push the head restraint down while pressing the lock release button.

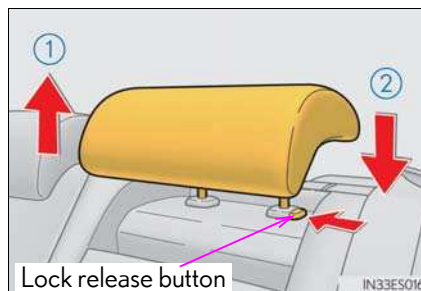

Removing the head restraints


Pull the head restraint up while pressing the lock release button.

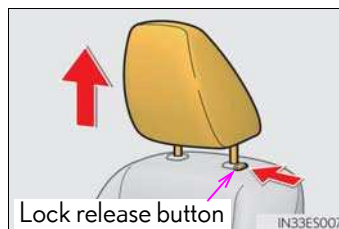

Installing the head restraints


► Front seats

Align the head restraint with the installation holes and push it down to the lock position. Press and hold the lock release button when lowering the head restraint.

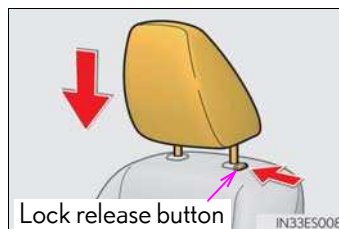


► Rear seats

Align the head restraint with the installation holes and push it down to the lowest lock position while pressing the lock release button.

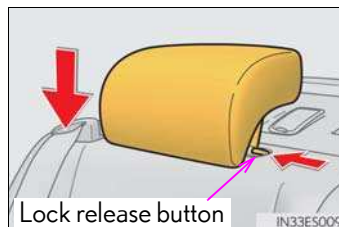

■ Adjusting the height of the head restraints

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

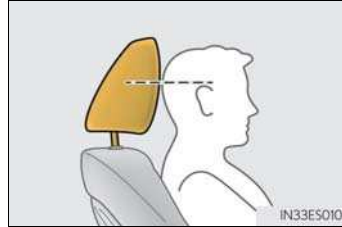**■ Adjusting the rear seat head restraint**

Always raise the head restraint one level from the stowed position when using.

⚠ CAUTION**■ Head restraint precautions**

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.


- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

Steering wheel

Adjustment procedure


► Manual adjustment

- 1 Hold the steering wheel and pull the lever down.

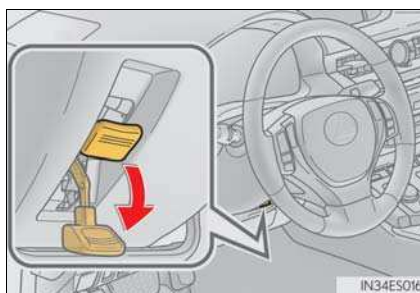

- 2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.


After adjustment, pull the lever up to secure the steering wheel.

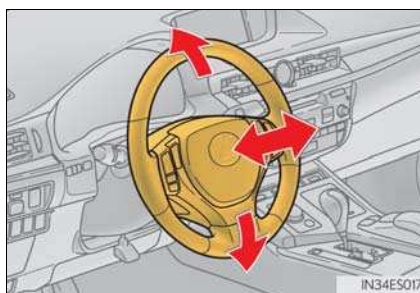

► Power adjustment

Operating the switch moves the steering wheel in the following directions:

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

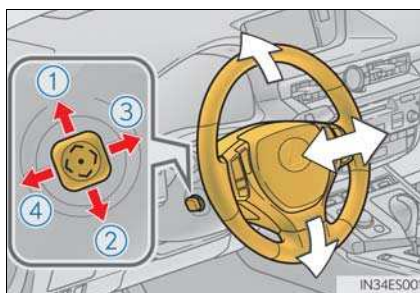

■ **The power adjustment type steering wheel can be adjusted when**

The “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode*.


*: If the driver’s seat belt is fastened, the steering wheel can be adjusted regardless of “START STOP ENGINE” <“POWER”> switch mode.

■ **Automatic adjustment of the steering position (power adjustment type)**

A desired steering position can be entered to memory and recalled automatically by the driving position memory system. (→P. 153)

■ **Power easy access system (power adjustment type)**

The steering wheel and driver’s seat move in accordance with “START STOP ENGINE” <“POWER”> switch mode and the driver’s seat belt condition. (→P. 156)

 **CAUTION**

■ **Caution while driving**

Do not adjust the steering wheel while driving.
Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

■ **After adjusting the steering wheel (manual adjustment type)**

Make sure that the steering wheel is securely locked.
Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury.


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

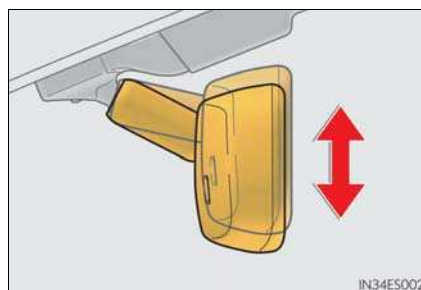

Anti-glare function

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

▶ Without compass

Changing automatic anti-glare function mode

- ① ON
- ② OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates.

The function will set to ON mode each time the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode.



Pressing the button turns the function to OFF mode. (The indicator also turns off.)

▶ With compass

Turning automatic anti-glare function mode on/off

When the automatic anti-glare function is in ON mode, the indicator illuminates.

The function will set to ON mode each time the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode.

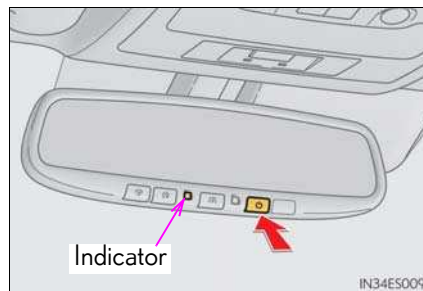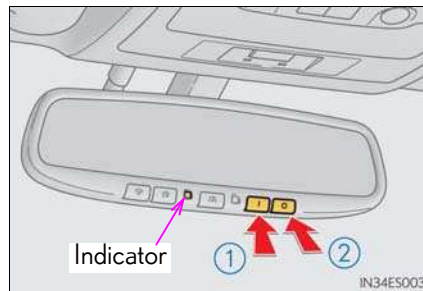


3

Operation of each component

■ To prevent sensor error

To ensure that the sensors operate properly, do not touch or cover them.

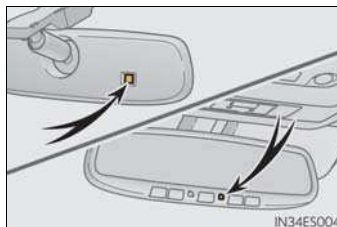

⚠ CAUTION


Do not adjust the position of the mirror while driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Outside rear view mirrors

Adjustment procedure


1 To select a mirror to adjust, press the switch.

- ① Left
- ② Right

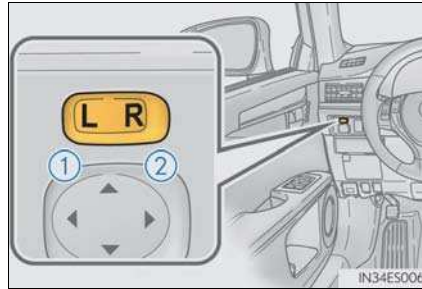


2 To adjust the mirror, press the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

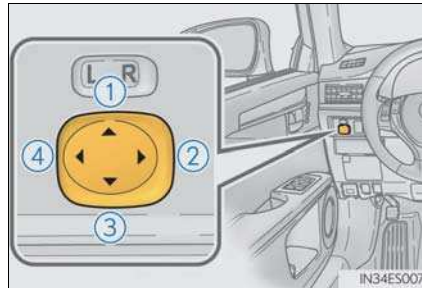

Folding the mirrors

Push the mirror back in the direction of the vehicle's rear.

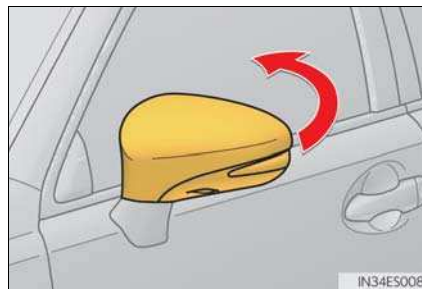

3

Operation of each component

■ **Mirror angle can be adjusted when**

The "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode.

■ **Linked mirror function when reversing**

- When either "L" or "R" of the mirror select switch is selected, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. To disable this function, select neither "L" nor "R".
- If the mirror angle adjustment switch is operated while the linked mirror function is in operation, the angle and position of the mirrors can be remembered, and the mirrors will operate at the angle adjusted to the last time the linked mirror function was operated.
However, because the mirrors move based on the angle they are in when the linked mirror function is not operating, the mirror angle when the linked mirror function is operating will also be changed if the mirrors are adjusted while the function is not operating.

■ **When the mirrors are fogged up**


The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 372)

■ **Automatic adjustment of the mirror angle**

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P. 153)

■ **Auto anti-glare function**

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P. 165)

 CAUTION**■ Important points while driving**

Observe the following precautions while driving.
Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

■ When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

■ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

Power windows


Opening and closing procedures

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

- ① Closing
- ② One-touch closing*
- ③ Opening
- ④ One-touch opening*


*: Pushing the switch in the opposite direction will stop window travel part-way.

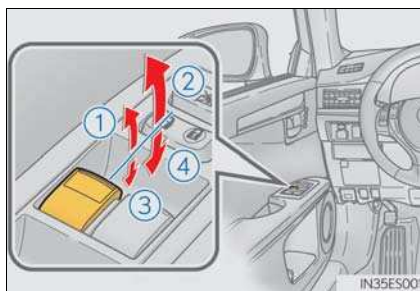

Window lock switch

Press the switch to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

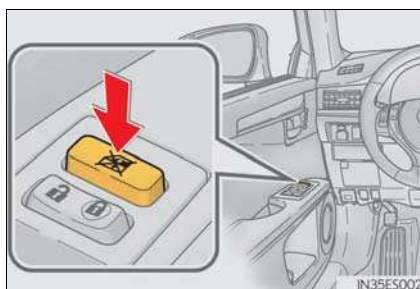

■ The power windows can be operated when

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

■ Operating the power windows after turning the engine <hybrid system> off

The power windows can be operated for approximately 45 seconds even after the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

■ When the power window does not close normally

If the jam protection function is operating abnormally and a window cannot be closed, perform the following operations using the power window switch on the relevant door.

- After stopping the vehicle, the window can be closed by holding the power window switch in the one-touch closing position while the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode.
- If the window still cannot be closed even by carrying out the operation as explained above, initialize the function by performing the following procedure.
 - 1 Hold the power window switch in the one-touch closing position. Continue holding the switch for a further 6 seconds after the window has closed.
 - 2 Hold the power window switch in the one-touch opening position. Continue holding the switch for a further 2 seconds after the window has opened completely.
 - 3 Hold the power window switch in the one-touch closing position once again. Continue holding the switch for a further 2 seconds after the window has closed.

If you release the switch while the window is moving, start again from the beginning. If the window continues to close but then re-open slightly even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

■ **Door lock linked window operation**

- The power windows can be opened and closed using the mechanical key.* (→P. 802)
 - The power windows can be opened using the wireless remote control.* (→P. 136)
- *: These settings must be customized at your Lexus dealer.

■ **When the 12-volt battery is disconnected**


The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the battery.

■ **Power windows open warning buzzer**

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the "START STOP ENGINE" <"POWER"> switch is turned off and the driver's door is opened with the power windows open.

■ **Customization**

Settings (e.g. linked door lock operation) can be changed.
(Customizable features: →P. 852)

 **CAUTION**

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ **Closing the windows**

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows.
Closing a power window on someone can cause serious injury, and in some instances, even death.

■ **Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the window fully closes.

Moon roof

Use the overhead switches to open and close the moon roof and tilt it up and down.

Opening and closing

► Standard type


① Opens the moon roof*

The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

② Closes the moon roof*

*: Lightly press either way of the moon roof switch to stop the moon roof partway.

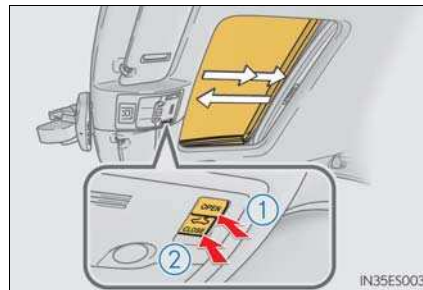


► Glass type

① Opens the moon roof

② Closes the moon roof (push and hold)*

*: The moon roof stops once. Push and hold the switch again to fully close.

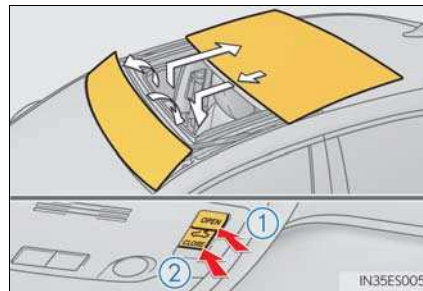

3


Operation of each component

Tilting up and down

▶ Standard type

- ① Tilts the moon roof up*
- ② Tilts the moon roof down*


*: Lightly press either way of the moon roof switch to stop the moon roof partway.

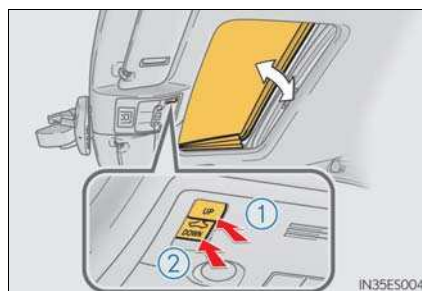

▶ Glass type

- ① Tilts the moon roof up*
- ② Tilts the moon roof down (push and hold)

*: Lightly press either way of the moon roof switch to stop the moon roof partway.

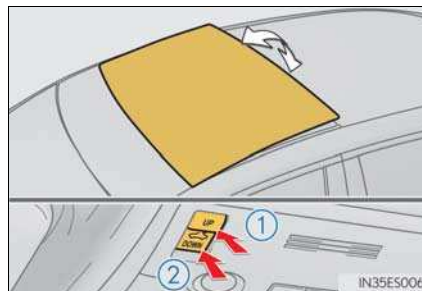

■ The moon roof can be operated when

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

■ Operating the moon roof after turning the engine <hybrid system> off

The moon roof can be operated for approximately 45 seconds after the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

■ Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ Door lock linked moon roof operation

- The moon roof can be opened and closed using the mechanical key.* (→P. 802)
- The moon roof can be opened using the wireless remote control.* (→P. 136)

*: These settings must be customized at your Lexus dealer.

■ When the moon roof does not close normally

Perform the following procedure:

- If the moon roof closes but then re-opens slightly

- 1 Stop the vehicle.
- 2 Press and hold the "CLOSE" switch.*1
The moon roof will close, reopen and pause for approximately 10 seconds.*2
Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.
- 3 Check to make sure that the moon roof is completely closed and then release the switch.

- If the moon roof tilts down but then tilts back up

- 1 Stop the vehicle.
- 2 Press and hold the "UP" switch*1 until the moon roof moves into the tilt up position and stops.
- 3 Release the "UP" switch once and then press and hold the "UP" switch again.*1
The moon roof will pause for approximately 10 seconds in the tilt up position.*2
Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.
- 4 Check to make sure that the moon roof is completely closed and then release the switch.

*1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

*2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the "CLOSE" or "UP" switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

■ Moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the "START STOP ENGINE" <"POWER"> switch is turned off and the driver's door is opened with the moon roof open.

■ Customization

Settings (e.g. linked door lock operation) can be changed.
(Customizable features: →P. 852)

CAUTION

Observe the following precautions.
Failure to do so may cause death or serious injury.

■ Opening the moon roof

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ Closing the moon roof

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.
- Do not allow children to operate the moon roof.
Closing the moon roof on someone can cause death or serious injury.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Starting the engine <hybrid system>

→P. 197, 204

Driving

- 1 With the brake pedal depressed, shift the shift lever to D.
(→P. 214, 217)
- 2 Release the parking brake. (→P. 222)
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

Stopping

- 1 With the shift lever in D, depress the brake pedal.
- 2 If necessary, set the parking brake.

Gasoline vehicles: If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 214)

Hybrid vehicles: If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P. 217)

Parking the vehicle

- 1 With the shift lever in D, depress the brake pedal.
- 2 Shift the shift lever to P. (→P. 214, 217)
- 3 Set the parking brake. (→P. 222)
- 4 Press the “START STOP ENGINE” <“POWER”> switch to stop the engine <hybrid system>.
- 5 Lock the door, making sure that you have the electronic key on your person.
If parking on a hill, block the wheels as needed.

Starting off on a steep uphill

- 1 Make sure that the parking brake is set and shift the shift lever to D.
- 2 Gently depress the accelerator pedal.
- 3 Release the parking brake.

4

Driving

■ When starting off on a uphill (hybrid vehicles)

The hill-start assist control is available. (→P. 304)

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ Engine speed while driving

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When sport mode is selected (→P. 296)

■ Breaking in your new Lexus

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 186 miles (300 km):
Avoid sudden stops.
- For the first 621 miles (1000 km):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.

■ Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have your Lexus dealer perform the bedding down operation.

■ Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 837)

■ For efficient use (hybrid vehicles)

- Shift the shift lever to D when driving.
In the N position, the gasoline engine operates but electricity cannot be generated. The hybrid battery (traction battery) will discharge, requiring unnecessary engine power to recharge.
- Drive your vehicle smoothly.
Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration.
Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor acceleration. Battery power can be restored by driving with the accelerator pedal slightly released.
- Shift the shift lever to P when parking.
In the N position, the hybrid battery (traction battery) does not recharge. Leaving the shift lever in the N position for an extended period of time may discharge the hybrid battery. The vehicle cannot run if the hybrid battery is discharged.

■ Eco-friendly driving

Gasoline vehicles: →P. 105

Hybrid vehicles: →P. 96

■ Customization (gasoline vehicles)

Setting of Eco Driving Indicator Light can be changed.
(Customizable features →P. 852)

⚠ CAUTION


Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When starting the vehicle

Always keep your foot on the brake pedal while stopped with the engine running <hybrid system operating>. This prevents the vehicle from creeping.

■ When driving the vehicle


- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
 - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
 - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
 - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
 - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Hybrid vehicles only: When the hybrid vehicles are driven using the electric motor only, no engine noise is made. As such, pedestrians, people riding bicycles or other people and vehicles in the surrounding area may not realize that the vehicle is approaching. Even with the vehicle proximity notification system active, people may not realize the vehicle is approaching when the surrounding area is noisy and so forth. Therefore, take extra care while driving.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.

 **CAUTION**

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When driving the vehicle

- During normal driving, do not turn off the engine <hybrid system>. Turning the engine <hybrid system> off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.
However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 741
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 215, 218)
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.
- Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 85 mph (140 km/h) unless your vehicle has high-speed capability tires. Driving over 85 mph (140 km/h) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.

 **CAUTION**


Observe the following precautions.
Failure to do so may result in death or serious injury.

■ When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shift changing, or changes in engine speed could cause the vehicle to, resulting in an accident.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

■ When shifting the shift lever

- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.
Gasoline vehicles: Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
Hybrid vehicles: Doing so may result in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving.
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to D while the vehicle is moving backward.
Doing so can damage the transmission and may result in a loss of vehicle control.
- Gasoline vehicles: Moving the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
Hybrid vehicles: Moving the shift lever to N while the vehicle is moving will disengage the hybrid system. Engine braking is not available when N is selected.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

 CAUTION**■ If you hear a squealing or scraping noise (brake pad wear limit indicators)**

Have the brake pads checked and replaced by your Lexus dealer as soon as possible.

Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

■ When the vehicle is stopped

- Gasoline vehicles: Do not race the engine.

If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

Hybrid vehicles: Do not depress the accelerator pedal unnecessarily.

If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running <the "READY" indicator is on>, and apply the parking brake as necessary.

- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.


- Avoid revving or racing the engine.

Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

 CAUTION

■ When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
Doing so may result in the following:
 - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
 - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
 - Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the engine <hybrid system> and lock the vehicle.
Do not leave the vehicle unattended while the engine is running <hybrid system is operating>.
- Do not touch the exhaust pipes while the engine is running <hybrid system is operating> or immediately after turning the engine <hybrid system> off.
Doing so may cause burns.

 CAUTION**■ When taking a nap in the vehicle**

Always turn the engine <hybrid system> off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine <hybrid system> overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

■ When braking

- When the brakes are wet, drive more cautiously.

Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

- If the brake booster (gasoline vehicles) or brake actuator (hybrid vehicles) does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.

In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase.

- Gasoline vehicles only: Do not pump the brake pedal if the engine stalls. Each push on the brake pedal uses up the reserve for the power-assisted brakes.

- Gasoline vehicles: The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. If this happens, do not drive the vehicle. Have your brakes fixed immediately.

Hybrid vehicles: The brake system consists of 3 individual hydraulic systems; if one of the systems fails, the others will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. If this happens, do not continue to drive the vehicle. If the brake system warning light (red indicator) comes on together with the buzzer sound while driving, immediately stop the vehicle in a safe place and contact your Lexus dealer.

 NOTICE**■ When driving the vehicle**

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

■ When parking the vehicle

Always shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

■ Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.
Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

■ If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P. 784)

 NOTICE**■ When encountering flooded roads**

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Lexus dealer check the following:

- Brake function
- Changes in quantity and quality of engine oil, fluid used for automatic transaxle <hybrid transaxle>, etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

Capacity and distribution

Cargo capacity depends on the total weight of the occupants.

(Cargo capacity) = (Total load capacity) – (Total weight of occupants)


Steps for Determining Correct Load Limit —

- (1) Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle’s placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity.
For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400 – 750 (5 × 150) = 650 lbs.)
- (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- (6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle. (→P. 194)

Lexus does not recommend towing a trailer with your vehicle. Your vehicle is not designed for trailer towing.

Calculation formula for your vehicle

- ① Cargo capacity
- ② Total load capacity (vehicle capacity weight) (→P. 824)

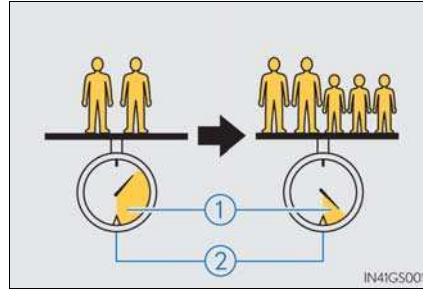

When 2 people with the combined weight of A lb. (kg) are riding in your vehicle, which has a total load capacity (vehicle capacity weight) of B lb. (kg), the available amount of cargo and luggage load capacity will be C lb. (kg) as follows:

$$B^{*2} \text{ lb. (kg)} - A^{*1} \text{ lb. (kg)} = C^{*3} \text{ lb. (kg)}$$

*1: A = Weight of people

*2: B = Total load capacity

*3: C = Available cargo and luggage load


In this condition, if 3 more passengers with the combined weight of D lb. (kg) get on, the available cargo and luggage load will be reduced E lb. (kg) as follows:

$$C \text{ lb. (kg)} - D^{*4} \text{ lb. (kg)} = E^{*5} \text{ lb. (kg)}$$

*4: D = Additional weight of people

*5: E = Available cargo and luggage load

As shown in the example above, if the number of occupants increases, the cargo and luggage load will be reduced by an amount that equals the increased weight due to the additional occupants. In other words, if an increase in the number of occupants causes an excess of the total load capacity (combined weight of occupants plus cargo and luggage load), you must reduce the cargo and luggage on your vehicle.

 CAUTION**■ Things that must not be carried in the trunk**

The following things may cause a fire if loaded in the trunk:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the trunk whenever possible.
- Do not place cargo or luggage in or on the following locations.
 - At the feet of the driver
 - On the front passenger or rear seats (when stacking items)
 - On the package tray
 - On the instrument panel
 - On the dashboard
 - In front of the navigation system screen, Lexus Display Audio system screen or the audio/air conditioning system display
- Secure all items in the occupant compartment.

■ Capacity and distribution

- Do not exceed the maximum axle weight rating or the total vehicle weight rating.
- Even if the total load of occupant's weight and the cargo load is less than the total load capacity, do not apply the load unevenly. Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

Vehicle load limits

Vehicle load limits include total load capacity, seating capacity, towing capacity and cargo capacity.

◆ **Total load capacity (vehicle capacity weight): →P. 824**

Total load capacity means the combined weight of occupants, cargo and luggage.

◆ **Seating capacity: 5 occupants (Front 2, Rear 3)**

Seating capacity means the maximum number of occupants whose estimated average weight is 150 lb. (68 kg) per person.

◆ **Towing capacity**


Lexus does not recommend towing a trailer with your vehicle.

◆ **Cargo capacity**

Cargo capacity may increase or decrease depending on the weight and the number of occupants.

■ **Total load capacity and seating capacity**

These details are also described on the tire and loading information label. (→P. 703)


 **CAUTION**

■ **Overloading the vehicle**

Do not overload the vehicle.
It may not only cause damage to the tires, but also degrade steering and braking ability, resulting in an accident.

Trailer towing

Lexus does not recommend towing a trailer with your vehicle. Lexus also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.

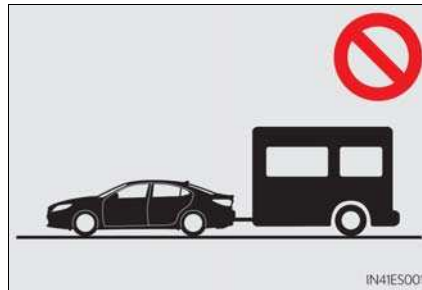


4

Driving

Dinghy towing

Your vehicle is not designed to be dinghy towed (with 4 wheels on the ground) behind a motor home.

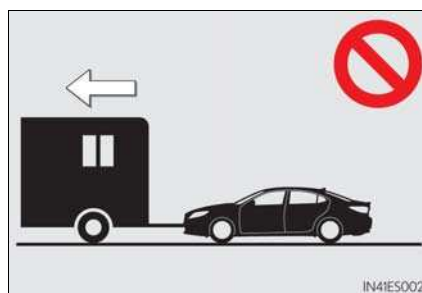

 NOTICE

- To avoid serious damage to your vehicle
Do not tow your vehicle with the four wheels on the ground.

Engine (ignition) switch (gasoline vehicles)

Performing the following operations when carrying the electronic key on your person starts the engine or changes “START STOP ENGINE” switch modes.

Starting the engine

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.



will be displayed on the multi-information display.


If it is not displayed, the engine cannot be started.

- 4 Press the “START STOP ENGINE” switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any “START STOP ENGINE” switch mode.

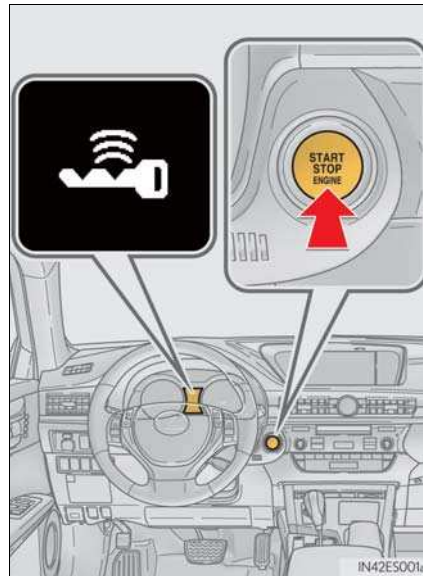

Stopping the engine

- 1 Stop the vehicle.
- 2 Shift the shift lever to P.
- 3 Set the parking brake. (→P. 222)
- 4 Press the “START STOP ENGINE” switch.
- 5 Release the brake pedal and check that “POWER ON” on the multi-information display is off.

Changing “START STOP ENGINE” switch modes

Modes can be changed by pressing the “START STOP ENGINE” switch with brake pedal released. (The mode changes each time the switch is pressed.)

Off*

The emergency flashers can be used.
The multi-information display will not be displayed.


ACCESSORY mode

Some electrical components such as the audio system can be used.
“POWER ON” will be displayed on the multi-information display.

IGNITION ON mode

All electrical components can be used.
“POWER ON” will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the engine, the “START STOP ENGINE” switch will be turned to ACCESSORY mode, not to off.

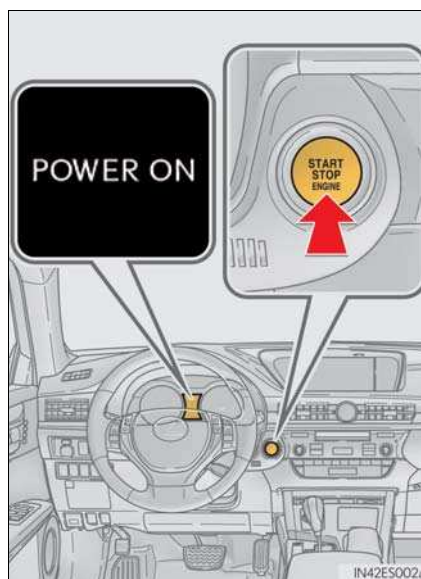

When stopping the engine with the shift lever in a position other than P

If the engine is stopped with the shift lever in a position other than P, the "START STOP ENGINE" switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

- 1 Check that the parking brake is set.
- 2 Shift the shift lever to P.
- 3 Check that "POWER ON" and "Turn Power OFF" are displayed alternately on the multi-information display and then press the "START STOP ENGINE" switch once.
- 4 Check that "POWER ON" and "Turn Power OFF" on the multi-information display are off.

■ Auto power off function

If the vehicle is left in ACCESSORY mode for more than 20 minutes or IGNITION ON mode (the engine is not running) for more than an hour with the shift lever in P, the "START STOP ENGINE" switch will automatically turn off. However, this function cannot entirely prevent 12-volt battery discharge. Do not leave the vehicle with the "START STOP ENGINE" switch in ACCESSORY or IGNITION ON mode for long periods of time when the engine is not running.

■ Electronic key battery depletion

→P. 134

■ Conditions affecting operation

→P. 130

■ Notes for the entry function

→P. 131

■ If the engine does not start

- The engine immobilizer system may not have been deactivated. (→P. 80)
Contact your Lexus dealer.
- Check that the shift lever is securely set in P. The engine may not start if the shift lever is displaced out of P. "Shift to P position to Start" will be displayed on the multi-information display.


■ Steering lock

After turning the "START STOP ENGINE" switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the "START STOP ENGINE" switch again automatically cancels the steering lock.

■ When the steering lock cannot be released

“Steering Lock active” will be displayed on the multi-information display.

Check that the shift lever is set in P. Press the “START STOP ENGINE” switch while turning the steering wheel left and right.

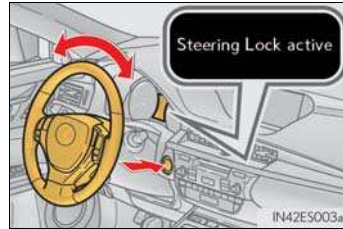

■ Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from operating the engine. After about 10 seconds, the steering lock motor will resume functioning.

■ When “Check Access System with Elec. Key” is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ If the electronic key battery is depleted

→P. 710

■ Operation of the “START STOP ENGINE” switch


- When operating the “START STOP ENGINE” switch, one short, firm press is enough. If the switch is pressed improperly, the engine may not start or the “START STOP ENGINE” switch mode may not change. It is not necessary to press and hold the switch.
- If attempting to restart the engine immediately after turning the “START STOP ENGINE” switch off, the engine may not start in some cases. After turning the “START STOP ENGINE” switch off, please wait a few seconds before restarting the engine.

■ If the smart access system with push-button start has been deactivated in a customized setting

→P. 802

■ Odometer and trip meter display

When the “START STOP ENGINE” switch is turned off, the odometer or trip meter display will extinguish after approximately 30 seconds.

 **CAUTION****■ When starting the engine**

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

■ Caution while driving

If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

■ Stopping the engine in an emergency

If you want to stop the engine in an emergency while driving the vehicle, press and hold the "START STOP ENGINE" switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 741)

However, do not touch the "START STOP ENGINE" switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

 NOTICE**■ To prevent 12-volt battery discharge**

- Do not leave the “START STOP ENGINE” switch in ACCESSORY or IGNITION ON mode for long periods of time without the engine running.
- If “POWER ON” is displayed on the multi-information display, the “START STOP ENGINE” switch is not off. Exit the vehicle after turning the “START STOP ENGINE” switch off.
- Do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the “START STOP ENGINE” switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, 12-volt battery discharge may occur.

■ When starting the engine

- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by your Lexus dealer immediately.

■ Symptoms indicating a malfunction with the “START STOP ENGINE” switch

If the “START STOP ENGINE” switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Lexus dealer immediately.

Power (ignition) switch (hybrid vehicles)

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes “POWER” switch modes.

Starting the hybrid system

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.



will be displayed on the multi-information display.

If it is not displayed, the hybrid system cannot be started.


- 4 Press the “POWER” switch.

Continue depressing the brake pedal until the hybrid system is completely started.

The hybrid system can be started from any “POWER” switch mode.

- 5 Check that the “READY” indicator is on.

The vehicle will not move when the “READY” indicator is off.

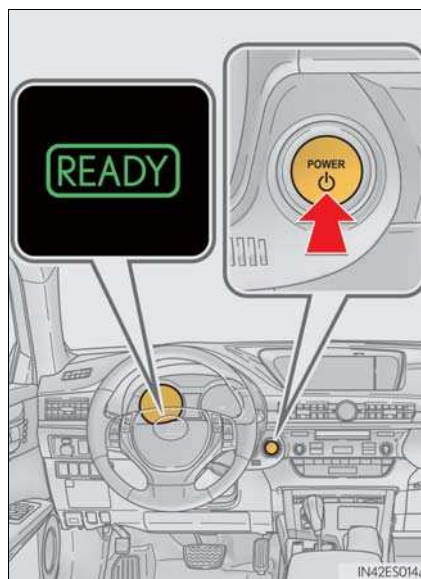

Stopping the hybrid system

- 1 Stop the vehicle.
- 2 Shift the shift lever to P.
- 3 Set the parking brake. (→P. 222)
- 4 Press the “POWER” switch.
- 5 Release the brake pedal and check that “POWER ON” on the multi-information display is off.

Changing “POWER” switch modes

Modes can be changed by pressing the “POWER” switch with brake pedal released. (The mode changes each time the switch is pressed.)

Off*

The emergency flashers can be used.

The multi-information display will not be displayed.

ACCESSORY mode

Some electrical components such as the audio system can be used.


“POWER ON” will be displayed on the multi-information display.

ON mode

All electrical components can be used.

“POWER ON” will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the hybrid system, the “POWER” switch will be turned to ACCESSORY mode, not to off.

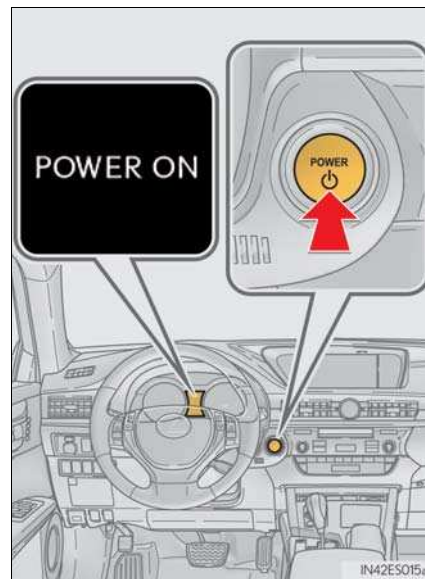

When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the "POWER" switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

- 1** Check that the parking brake is set.
- 2** Shift the shift lever to P.
- 3** Check that "POWER ON" and "Turn Power OFF" are displayed alternately on the multi-information display and then press the "POWER" switch once.
- 4** Check that "POWER ON" and "Turn Power OFF" on the multi-information display are off.

■ Auto power off function

If the vehicle is left in ACCESSORY mode for more than 20 minutes or ON mode (the hybrid system is not operating) for more than an hour with the shift lever in P, the "POWER" switch will automatically turn off. However, this function cannot entirely prevent 12-volt battery discharge. Do not leave the vehicle with the "POWER" switch in ACCESSORY or ON mode for long periods of time when the hybrid system is not operating.

■ Sounds and vibrations specific to a hybrid vehicles

→P. 73

■ Electronic key battery depletion

→P. 134

■ When the ambient temperature is low, such as during winter driving conditions

It may take time until the "READY" indicator comes on.

■ Conditions affecting operation

→P. 130

■ Notes for the entry function

→P. 131

■ If the hybrid system does not start

- The immobilizer system may not have been deactivated. (→P. 82)
Contact your Lexus dealer.
- Check that the shift lever is securely set in P. The hybrid system may not start if the shift lever is displaced out of P. "Shift to P position when starting" will be displayed on the multi-information display.


■ Steering lock

After turning the "POWER" switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the "POWER" switch again automatically cancels the steering lock.

■ **When the steering lock cannot be released**

“Steering Lock active” will be displayed on the multi-information display.

Check that the shift lever is set in P. Press the “POWER” switch while turning the steering wheel left and right.

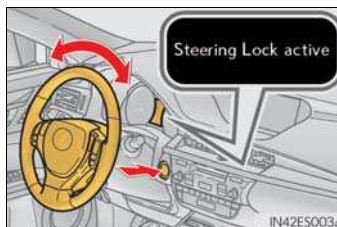

■ **Steering lock motor overheating prevention**

To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the hybrid system. After about 10 seconds, the steering lock motor will resume functioning.

■ **When “Check Access System with Elec. Key” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ **If the “READY” indicator does not come on**

If the “READY” indicator does not come on when you press the “POWER” switch with the shift lever in P and the brake pedal depressed, contact your Lexus dealer immediately.

■ **If the hybrid system is malfunctioning**

→P. 762

■ **If the electronic key battery is depleted**

→P. 710

■ **Operation of the “POWER” switch**

- When operating the “POWER” switch, one short, firm press is enough. If the switch is pressed improperly, the hybrid system may not start or the “POWER” switch mode may not change. It is not necessary to press and hold the switch.

- If attempting to restart the hybrid system immediately after turning the “POWER” switch off, the hybrid system may not start in some cases. After turning the “POWER” switch off, please wait a few seconds before restarting the hybrid system.

■ **If the smart access system with push-button start has been deactivated in a customized setting**

→P. 802

■ Odometer and trip meter display

When the "POWER" switch is turned off, the odometer or trip meter display will extinguish after approximately 30 seconds.

⚠ CAUTION**■ When starting the hybrid system**

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances. Doing so may cause an accident resulting in death or serious injury.

■ Caution while driving

If hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

■ Stopping the hybrid system in an emergency

If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the "POWER" switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 741)

However, do not touch the "POWER" switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

 NOTICE**■ To prevent 12-volt battery discharge**

- Do not leave the “POWER” switch in ACCESSORY or ON mode for long periods of time without the hybrid system on.
- If “POWER ON” is displayed on the multi-information display, the “POWER” switch is not off. Exit the vehicle after turning the “POWER” switch off.
- Do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the “POWER” switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, 12-volt battery discharge may occur.

■ When starting the hybrid system

- Do not depress the accelerator pedal unnecessarily.
- If the hybrid system becomes difficult to start, have your vehicle checked by your Lexus dealer immediately.

■ Symptoms indicating a malfunction with the “POWER” switch

If the “POWER” switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Lexus dealer immediately.

EV drive mode (hybrid vehicles)


In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and gas emissions.

However, when the vehicle proximity notification system is active, the vehicle may produce sound.

Turns EV drive mode on/off

When EV drive mode is turned on, "EV MODE" will be displayed on the multi-information display. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

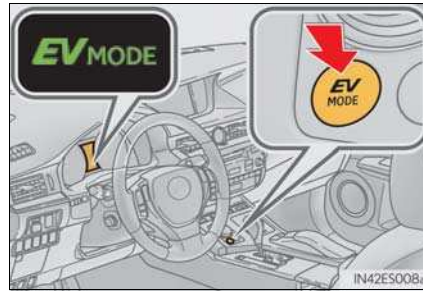

4

Driving

■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
The vehicle has been left in temperatures lower than about 68°F (20°C) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
The remaining battery level indicated in the "Energy Monitor" screen or the multi-information display is low. (→P.110)
- Vehicle speed is about 25 mph (40 km/h) or more.
- The accelerator pedal is depressed firmly.
- The windshield defogger is in use.

■ Switching to EV drive mode when the gasoline engine is cold

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically in order to warm up. In this case, you will become unable to switch to EV drive mode.

After the hybrid system has started and the "READY" indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

■ Automatic cancelation of EV drive mode

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound and the EV indicator will flash 3 times and go off.

- The hybrid battery (traction battery) becomes low.
The remaining battery level indicated in the "Energy Monitor" screen or the multi-information display is low. (→P.110)
- Vehicle speed becomes more than about 25 mph (40 km/h).
- The accelerator pedal is depressed firmly.

When it is possible to inform the driver of automatic cancelation in advance, a prior notice screen will appear on the multi-information display.


■ Possible driving distance when driving in EV drive mode

EV drive mode's possible driving distance ranges from a few hundred meters to approximately 1.3 mile (2 km). Driving is possible at speeds of less than approximately 25 mph (40 km/h). However, depending on vehicle conditions, there are situations when EV drive mode cannot be used.

(The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

■ Fuel economy


Your Lexus is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

 **CAUTION****■ Caution while driving**

When driving in EV drive mode no engine noise is made. As such, pedestrians, people riding bicycles or other people and vehicles in the surrounding area may not be aware of the vehicle starting off or approaching them. Therefore, take extra care while driving even if the vehicle proximity notification system is active.

Automatic transmission (gasoline vehicles)

Shifting the shift lever

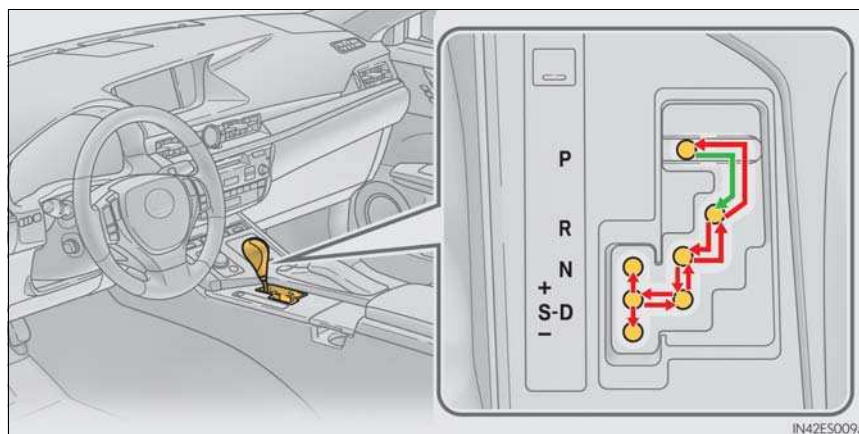

← While the “START STOP ENGINE” switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

Shift position purpose

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral
D	Normal driving ^{*1}
S	S mode driving ^{*2} (→P. 215)

^{*1}: Shifting the shift lever to D allows the system to select a gear suitable for the driving conditions.

Setting the shift lever to D is recommended for normal driving.

^{*2}: Selecting shift ranges using S mode restricts the upper limit of the possible gear ranges, controls engine braking force, and prevents unnecessary upshifting.


Selecting gears in the S position

When the shift lever is in S, the shift lever can be operated as follows:

- ① Upshifting
- ② Downshifting

The selected shift range, from S1 to S6, will be displayed in the meter.

The initial shift range in S mode is set automatically to S5 or S4 according to vehicle speed. However, the initial shift range may be set to S3 if AI-SHIFT has operated while the shift lever was in D. (→P. 216)

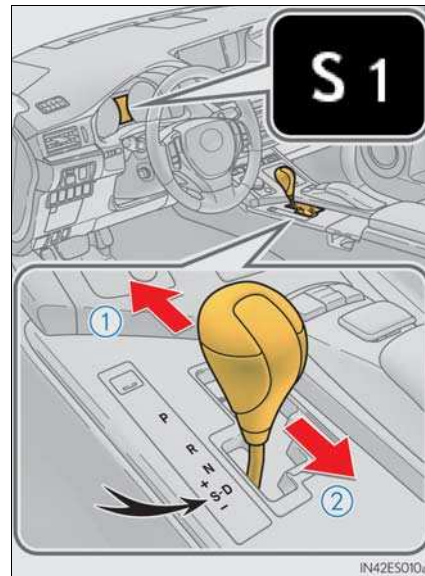

4

Driving

■ Shift ranges and their functions

- Automatically selecting gears between S1 and S6 according to vehicle speed and driving conditions. But the gear is limited according to selected shift range.
- You can choose from 6 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine speed will also increase.

■ S mode

- When the shift range is S4 or lower, holding the shift lever toward “+” sets the shift range to S6.
- To prevent the engine from over-revving, upshifting may automatically occur.
- To protect the automatic transmission, a function is adopted that automatically shifts to the top range when the temperature is too hot.

■ When driving with cruise control activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate while driving in S mode and downshifting to 5 or 4 because cruise control will not be canceled. (→P. 244)

■ Downshifting restrictions warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

■ If the S indicator does not come on or the D indicator is displayed even after shifting the shift lever to S

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by your Lexus dealer immediately.
(In this situation, the transmission will operate in the same manner as when the shift lever is in D.)

■ If the shift lever cannot be shifted from P

→P. 801

■ AI-SHIFT

The AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

The AI-SHIFT automatically operates when the shift lever is in D. (Shifting the shift lever to S cancels the function.)


CAUTION

■ When driving on slippery road surfaces

Do not accelerate or shift gears suddenly.
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

Hybrid transmission (hybrid vehicles)

Shifting the shift lever

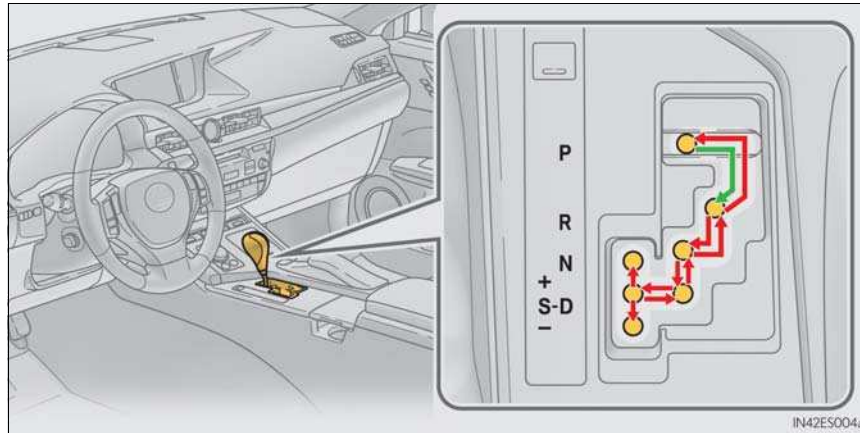

← While the “POWER” switch is in ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

Shift position purpose

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving ^{*1}
S	S mode driving ^{*2} (→P. 218)

^{*1}: To improve fuel efficiency and reduce noises, set the shift lever in D for normal driving.

^{*2}: By selecting shift ranges using S mode, you can control engine braking forces.


Selecting shift ranges in the S position

To enter S mode, shift the shift lever to S. Shift ranges can then be selected by operating the shift lever, allowing you to drive in the shift range of your choosing.

- ① Upshifting
- ② Downshifting

The selected shift range, from S1 to S6, will be displayed in the meter.

The initial shift range in S mode is automatically set to S4 or S5 according to vehicle speed.

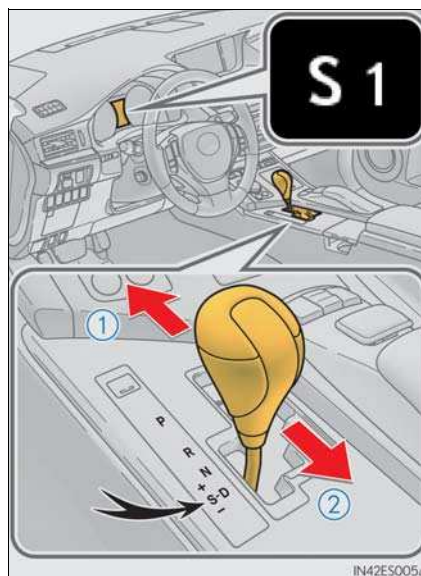

■ Shift ranges and their functions

- You can choose from 6 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine revolutions will also increase.
- If you accelerate while in ranges S1 to S4, the shift range may automatically range up in accordance with the vehicle's speed.

■ S mode

- When the shift range is S4 or lower, holding the shift lever toward “+” sets the shift range to S6.
- To prevent the engine from over-revving, upshifting may automatically occur.

■ When driving with cruise control activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate while driving in S mode and downshifting to S5 or S4 because cruise control will not be canceled. (→P. 244)

■ Downshifting restrictions warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

■ If the S indicator does not come on or the D indicator is displayed even after shifting the shift lever to S

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by your Lexus dealer immediately.
(In this situation, the transmission will operate in the same manner as when the shift lever is in D.)


■ If the shift lever cannot be shifted from P

→P. 801

■ AI-SHIFT

AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

AI-SHIFT automatically operates when the shift lever is in the D position. (Shifting the shift lever to the S position cancels the function.)

 CAUTION**■ When driving on slippery road surfaces**

Do not accelerate or shift gears suddenly.
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

 NOTICE**■ Hybrid battery (traction battery) charge**

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

Turn signal lever

Operating instructions

- ① Right turn
- ② Lane change to the right (move the lever partway and then release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and then release it)
The left hand signals will flash 3 times.
- ④ Left turn



4

Driving

■ Turn signals can be operated when

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

■ If the indicator flashes faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

■ If the turn signals stop flashing before a lane change has been performed

Operate the lever again.

■ To discontinue flashing of the turn signals during a lane change


Operate the lever in the opposite direction.

■ Customization

The number of times the turn signals flash during a lane change can be changed. (→P. 852)

Parking brake

To set the parking brake, fully depress the parking brake pedal with your left foot while depressing the brake pedal with your right foot. (Depressing the pedal again releases the parking brake.)

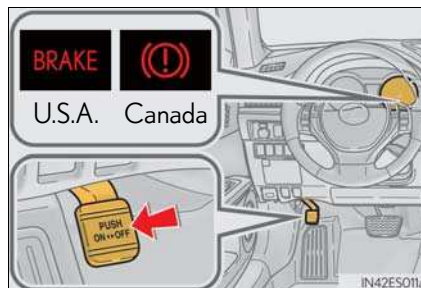

■ Usage in winter time

→P. 327


⚠ NOTICE


■ Before driving

Fully release the parking brake.

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

Horn

To sound the horn, press on or close to the  mark.

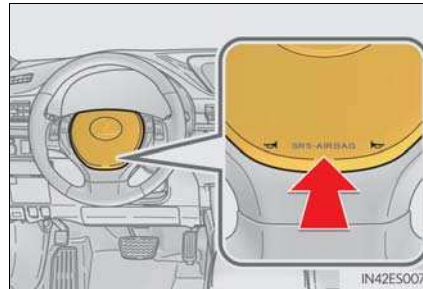

■ After adjusting the steering wheel (manual adjustment type only)

Make sure that the steering wheel is securely locked.




The horn may not sound if the steering wheel is not securely locked. (→P. 162)


Headlight switch

The headlights can be operated manually or automatically.

Operating instructions

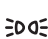Turning the end of the lever turns on the lights as follows:

- ①  The side marker, daytime running, tail, license plate and instrument panel lights turn on.
- ②  The headlights, parking and all lights listed above (except daytime running lights) turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically.
(When the "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.)
- ④  Off
(U.S.A.)
 - The daytime running lights
(Canada) turn on.

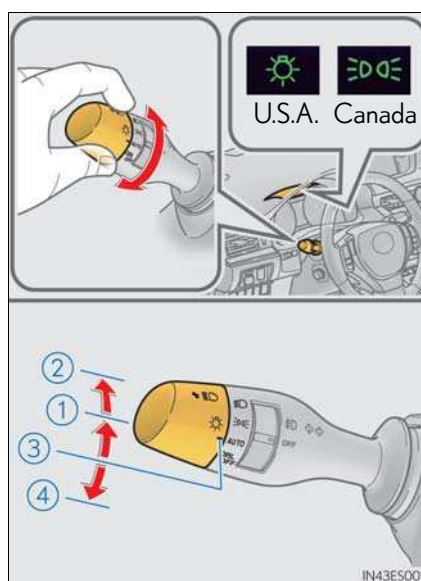


Turning on the high beam headlights

- ① With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

- ② Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

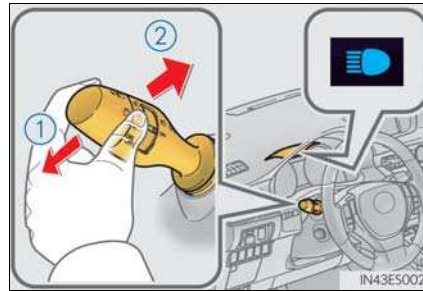


■ Daytime running light system

- To make your vehicle more visible to other drivers, the parking lights turn on automatically (at an increased intensity) whenever the engine <hybrid system> is started and the parking brake is released. Daytime running lights are not designed for use at night.
For the U.S.A.: Daytime running lights can be turned off by operating the switch.
- Compared to turning on the headlights, the daytime running light system offers greater durability and consumes less electricity, so it can help improve fuel economy.

■ Headlight control sensor

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

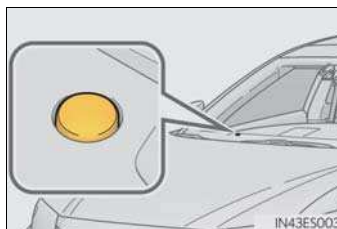

■ Automatic light off system

When the light switch is in **AUTO**: The headlights and tail lights turn off 30 seconds after the “START STOP ENGINE” <“POWER”> switch is turned to ACCESSORY mode or turned off and a door is opened and all of the doors and trunk are closed. (The lights turn off immediately if **L** on the key is pressed twice after all the doors are closed.)

To turn the lights on again, turn the “START STOP ENGINE” <“POWER”> switch to IGNITION ON <ON> mode, or turn the light switch off once and then back to **⊞** or **⊞D**.

If any of the doors or trunk lid is kept open, the lights automatically turn off after 20 minutes.

■ Light reminder buzzer

A buzzer sounds when the “START STOP ENGINE” <“POWER”> switch is turned off or turned to ACCESSORY mode and the driver’s door is opened while the lights are turned on.

■ Automatic headlight leveling system (if equipped)

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ Customization

Settings (e.g. light sensor sensitivity) can be changed.
(Customizable features: →P. 852)


 **NOTICE****■ To prevent 12-volt battery discharge**


Do not leave the lights on longer than necessary when the engine is not running
<hybrid system is not operating>.

Automatic High Beam*

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.


Activating the Automatic High Beam system

- 1 Push the lever away from you with the headlight switch in AUTO or  position.

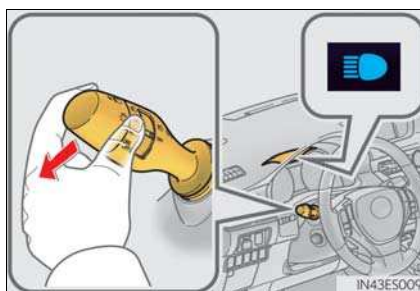

- 2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

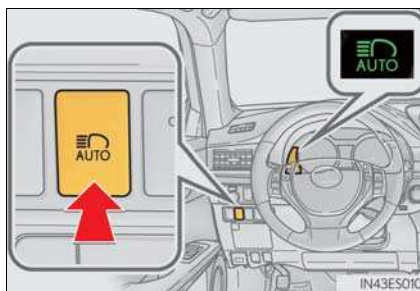

*: If equipped

High beam automatic turning on or off conditions

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few streetlights on the road ahead.

If any of the following conditions are fulfilled, high beam will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.


Turning the high beam on/off manually

■ Switching to low beam

Pull the lever to original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

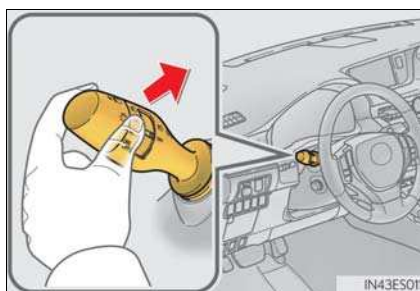


■ Switching to high beam

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

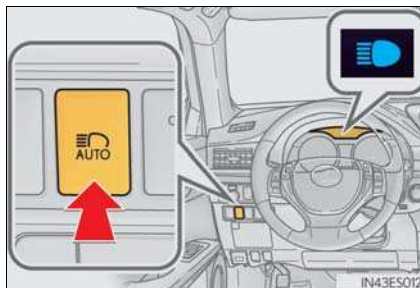

■ The Automatic High Beam can be operated when

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.


■ Camera sensor detection information

- High beam may not be automatically turned off in the following situations:
 - When oncoming vehicles suddenly appear from a curve
 - When the vehicle is cut in front of by another
 - When oncoming or preceding vehicles are hidden from sight due to repeated curves, road dividers or roadside trees
 - When oncoming vehicles appear from the faraway lane on wide road
 - When oncoming or preceding vehicles have no lights
- High beam may be turned off if an oncoming vehicle that is using fog lights without using the headlights is detected.
- House lights, street lights, red traffic signals, and illuminated billboards or signs may cause the high beam to turn off.
- The following factors may affect the amount of time taken to turn high beam on or off:
 - The brightness of headlights, fog lights, and tail lights of oncoming and preceding vehicles
 - The movement and direction of oncoming and preceding vehicles
 - When a oncoming or preceding vehicle only has operational lights on one side
 - When a oncoming or preceding vehicle is a two-wheeled vehicle
 - The condition of the road (gradient, curve, condition of the road surface etc.)
 - The number of passengers and amount of luggage
- High beam may be turned on or off when unexpected by the driver.

- In the situations below, the system may not be able to correctly detect the surrounding brightness levels, and may flash or expose nearby pedestrians to the high beam. Therefore, you should consider turning the high beams on or off manually rather than relying on the Automatic High Beam system.
 - In bad weather (rain, snow, fog, sandstorms etc.)
 - The windshield is obscured by fog, mist, ice, dirt etc.
 - The windshield is cracked or damaged.
 - The camera sensor is deformed or dirty.
 - Surrounding brightness levels are equal to those of headlights, tail lights or fog lights.
 - Vehicles ahead have headlights or tail lights that are either switched off, dirty, are changing color, or are not aimed properly.
 - When driving through an area of intermittently changing brightness and darkness.
 - When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel tracks etc.).
 - When frequently and repeatedly taking curves or driving on a winding road.
 - There is a highly reflective object ahead of the vehicle, such as a sign or a mirror.
 - The vehicle's headlights are damaged or dirty, or are not aimed properly.
 - The vehicle is listing or tilting, due to a flat tire, a trailer being towed etc.
 - The driver believes that the high beam may be causing problems or distress to other drivers or pedestrians nearby.

■ Temporarily lowering sensor sensitivity

The sensitivity of the sensor can be temporarily lowered.

- 1 Turn the "START STOP ENGINE" <"POWER"> switch off while the following conditions are met.
 - The headlight switch is in **AUTO** or .
 - The headlight switch lever is in high beam position.
 - Automatic High Beam switch is on.
- 2 Turn the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode.
- 3 Within 5 seconds after 2, repeat pulling the headlight switch lever to the original position then pushing it to the high beam position quickly 9 times, then leave the lever in high beam position.

Automatic High Beam (headlights) may turn on even the vehicle is stopped.


⚠ CAUTION**■ Limitations of the Automatic High Beam**

Do not rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning high beam on or off manually if necessary.

⚠ NOTICE**■ Notes when using the Automatic High Beam system**


Observe the following to ensure that the Automatic High Beam functions correctly.


- Do not touch the camera sensor.
- Do not subject the camera sensor to a strong impact.
- Do not disassemble the camera sensor.
- Do not spill liquid onto the camera sensor.
- Do not apply window tinting or stickers to the camera sensor or the area of windshield near the camera sensor.
- Do not place items on the dashboard. There is a possibility that the camera sensor will mistake items reflected in the windshield for streetlights, the headlights of other vehicles, etc.
- Do not install a parking tag or any other accessories near or around the camera sensor.
- Do not overload the vehicle.
- Do not modify the vehicle.
- Do not replace windshield with non-genuine windshield.
Contact your Lexus dealer.
- Do not replace headlights with non-genuine headlights.
Contact your Lexus dealer.

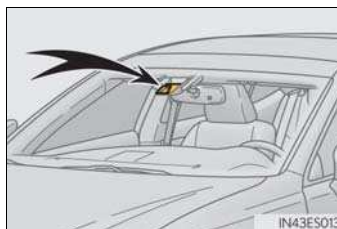

Fog light switch

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.

- ① OFF (U.S.A.) or ○ (Canada)
Turns the fog lights off
- ②  Turns the fog lights on

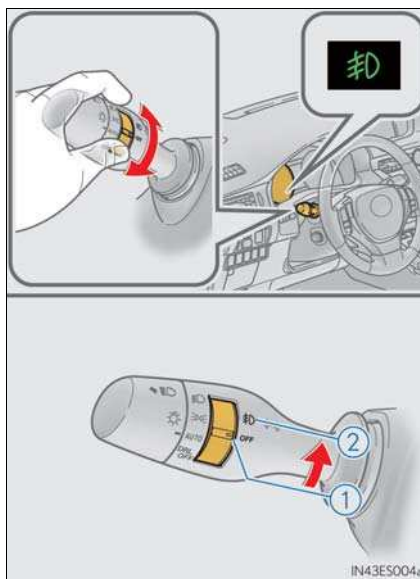

- Fog lights can be used when
The headlights are on in low beam.

Windshield wipers and washer

Operating the wiper lever

The wiper operation is selected by moving the lever as follows.


► Intermittent windshield wipers with interval adjuster

- ① Temporary operation
- ② Intermittent operation
- ③ Low speed operation
- ④ High speed operation



Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

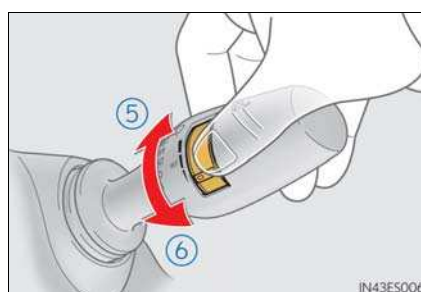

- ⑦ Washer/wiper dual operation

Wipers will automatically operate a couple of times after the washer squirts.



► Rain-sensing windshield wipers


- ① Temporary operation
- ② Rain-sensing wiper operation (AUTO)
- ③ Low speed operation
- ④ High speed operation

When AUTO is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.



The sensor sensitivity can be adjusted when AUTO is selected.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

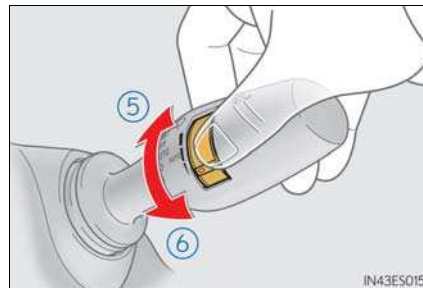

- ⑦ Washer/wiper dual operation
- Wipers will automatically operate a couple of times after the washer squirts.




■ The windshield wiper and washer can be operated when

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

■ Raindrop sensor (vehicles with rain-sensing windshield wipers)

- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

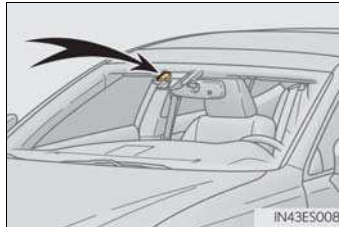

- If the wiper switch is turned to AUTO position while the "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode, the wipers will operate once to show that AUTO mode is activated.
- When the sensor sensitivity ring is turned toward high while in AUTO mode, the wipers will operate once to indicate that the sensor sensitivity is enhanced.
- If the temperature of the raindrop sensor is 185°F (85°C) or higher, or -22°F (-30°C) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than AUTO mode.

■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

⚠ CAUTION

■ Caution regarding the use of windshield wipers in AUTO mode (vehicles with rain-sensing windshield wipers)

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in AUTO mode. Take care that your fingers or anything else do not become caught in the windshield wipers.

■ Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

 NOTICE

■ **When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

■ **When there is no washer fluid spray from the nozzle**

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

■ **When a nozzle becomes blocked**

In this case, contact your Lexus dealer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

■ **When standing the windshield wipers up**

Raise the wipers in line with the windshield. (→P. 329)

Failure to do so may result in damage to the wipers and/or the hood.

Opening the fuel tank cap


Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Close all the doors and windows, and turn the “START STOP ENGINE” <“POWER”> switch off.
- Confirm the type of fuel.

■ Fuel types

Use unleaded gasoline (Octane rating 87 [Research Octane Number 91] or higher)

 CAUTION**■ When refueling the vehicle**

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel. Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle. Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged. This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.


 NOTICE**■ Refueling**

Do not spill fuel during refueling.


Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

Opening the fuel tank cap


- 1 Press the opener switch to open the fuel filler door.

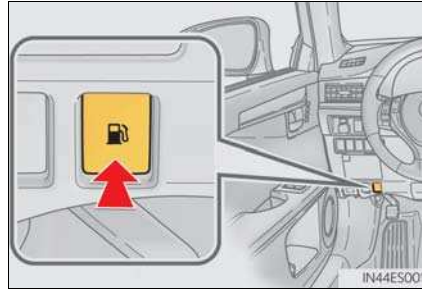

- 2 Turn the fuel tank cap slowly to open.

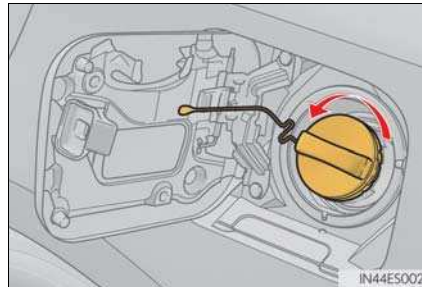


- 3 Hang the fuel tank cap on the back of the fuel filler door.

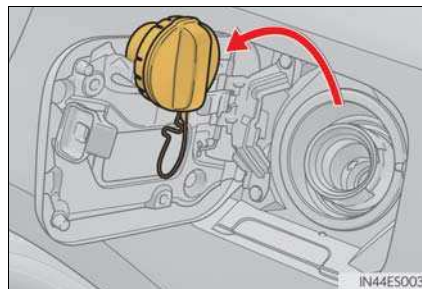


■ **If the fuel filler door cannot be opened**

Remove the cover inside the trunk and pull the lever to open the fuel filler door if the fuel filler door cannot be opened using the inside switch.

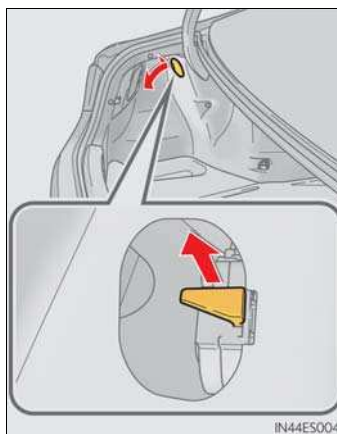

Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

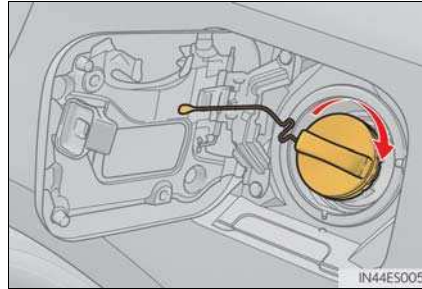

CAUTION

■ When replacing the fuel tank cap


Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Cruise control*

Summary of functions


Use the cruise control to maintain a set speed without depressing the accelerator pedal.

- ① Indicators
- ② Cruise control switch

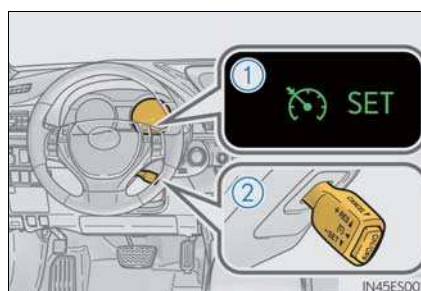


Setting the vehicle speed

- ① Press the “ON/OFF” button to activate the cruise control.
Cruise control indicator will come on.
Press the button again to deactivate the cruise control.

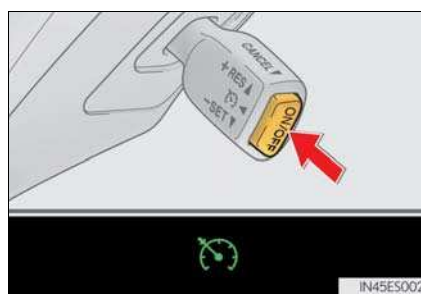

- ② Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
“SET” indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

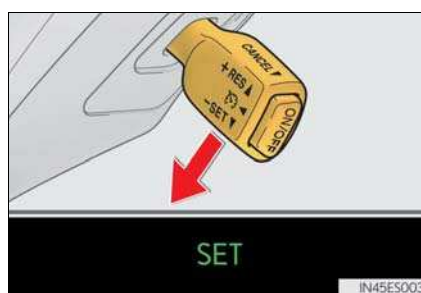

*: If equipped


Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

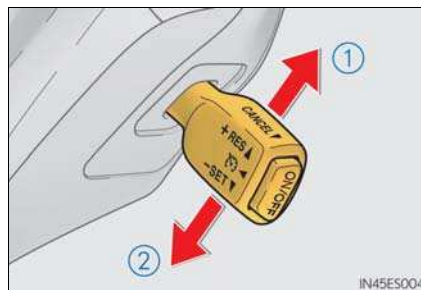

The set speed will be increased or decreased as follows:


Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

Canceling and resuming the constant speed control

- ① Pulling the lever toward you cancels the constant speed control.
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

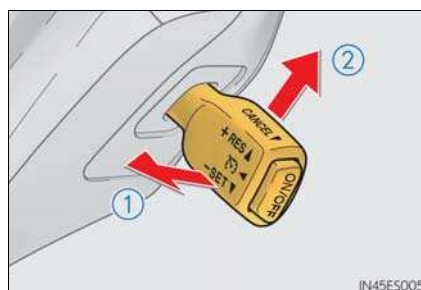

■ **Cruise control can be set when**

- The shift lever is in D or range S4 or higher of S has been selected.
- Vehicle speed is above approximately 25 mph (40 km/h).

■ **Accelerating after setting the vehicle speed**

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

■ **Automatic cruise control cancelation**


Cruise control will stop maintaining the vehicle speed in any of the following situations.

- Actual vehicle speed falls more than approximately 10 mph (16 km/h) below the preset vehicle speed.
At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 25 mph (40 km/h).
- VSC is activated.

■ **If the warning message for the cruise control is shown on the multi-information display**

Press the "ON/OFF" button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Lexus dealer.

 **CAUTION****■ To avoid operating the cruise control by mistake**

Switch the cruise control off using the “ON/OFF” button when not in use.

■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.

Doing so may result in loss of control and could cause an accident resulting in death or serious injury.


- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
Vehicle speed may exceed the set speed when driving down a steep hill.
- During emergency towing

Dynamic radar cruise control*

Summary of functions

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

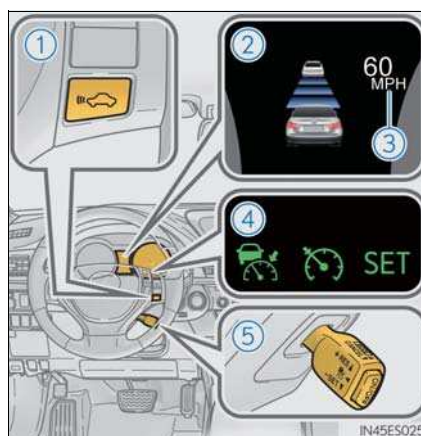


*: If equipped

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on.


Press the button again to deactivate the cruise control.

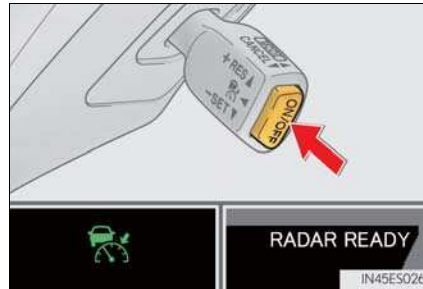

- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

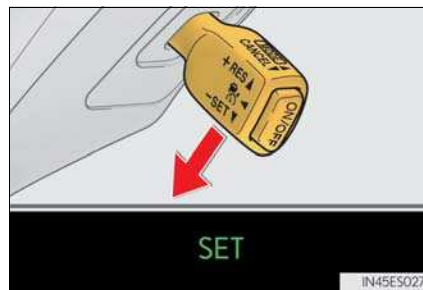

Adjusting the set speed


To change the set speed, operate the lever until the desired set speed is displayed.

① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

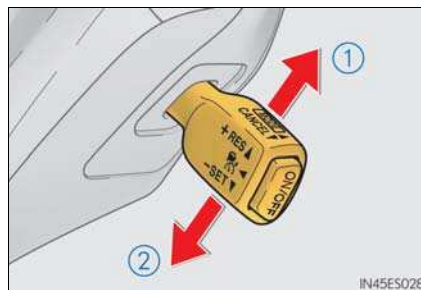

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

- When the set speed is shown in "MPH"
 - Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated
 - Large adjustment: By approximately 5 mph (8 km/h) for each 0.75 seconds the lever is held
- When the set speed is shown in "km/h"
 - Fine adjustment: By approximately 0.6 mph (1 km/h) each time the lever is operated
 - Large adjustment: By approximately 3.1 mph (5 km/h) for each 0.75 seconds the lever is held


In the constant speed control mode (→P. 255), the set speed will be increased or decreased as follows:

- Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated
- Large adjustment: The set speed can be increased or decreased continually until the lever is released.

Changing the vehicle-to-vehicle distance

Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short

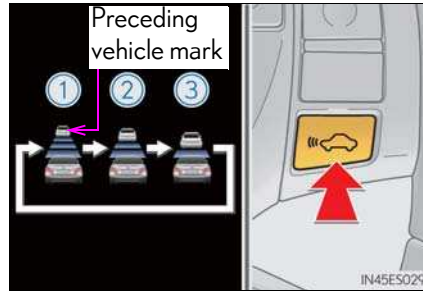

The vehicle-to-vehicle distance is set automatically to long mode when the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 50 mph (80 km/h). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 160 ft. (50 m)
Medium	Approximately 130 ft. (40 m)
Short	Approximately 100 ft. (30 m)


Canceling and resuming the speed control

- ① Pulling the lever toward you cancels the cruise control.

The speed setting is also canceled when the brakes are applied.

- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.


Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

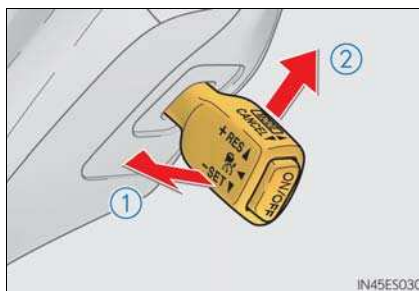

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 400 ft. (120 m) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

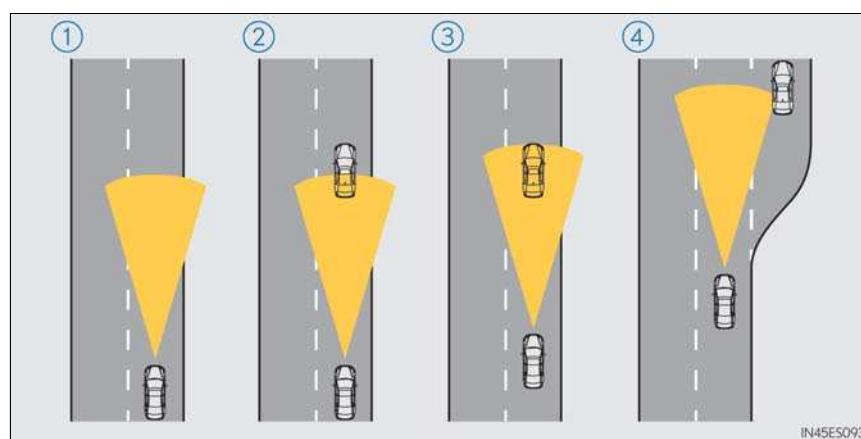

- ① Example of constant speed cruising
When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

- ② Example of deceleration cruising
When the vehicle ahead is driving slower than the set speed

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

③ Example of follow-up cruising

When following a vehicle driving slower than the set speed

The system continues follow-up cruising while adjusting for changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver.

④ Example of acceleration

When there are no longer any vehicles ahead driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Approach warning

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Apply the brakes to ensure an appropriate vehicle-to-vehicle distance.

■ **Warnings may not occur when**

In the following instances, there is a possibility that the warnings will not occur:

- When the speed of the vehicle ahead matches or exceeds your vehicle speed
- When the vehicle ahead is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- At the instant the accelerator is applied

Selecting conventional constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to dirt etc.

- ① Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.

- ② Switch to constant speed control mode.

(Push the lever forward and hold for approximately 1 second.)

Cruise control indicator will come on.


When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

After the desired speed has been set, it is not possible to return to vehicle-to-vehicle distance control mode.

If the "START STOP ENGINE" <"POWER"> switch is turned off and then turned to IGNITION ON <ON> mode again, the vehicle will automatically return to vehicle-to-vehicle distance control mode.

Adjusting the speed setting: →P. 245

Canceling and resuming the speed setting: →P. 245

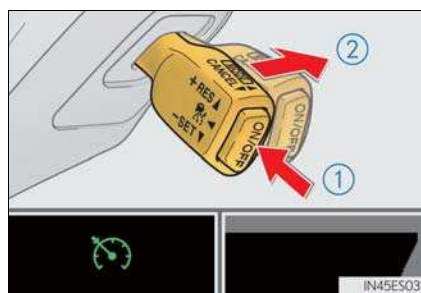

■ **Dynamic radar cruise control can be set when**

- The shift lever is in D or range 4 or higher of S has been selected.
- Vehicle speed is above approximately 30 mph (50 km/h).

■ **Accelerating after setting the vehicle speed**

The vehicle can accelerate normally. After acceleration, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the vehicle ahead.

■ **Automatic cancelation of vehicle-to-vehicle distance control**

Vehicle-to-vehicle distance control driving is automatically canceled in the following situations:

- Actual vehicle speed falls below approximately 25 mph (40 km/h).
- VSC is activated.
- The sensor cannot operate correctly because it is covered in some way.
- The windshield wipers are operating at high speed (when the wipers are in AUTO mode or the high speed wiper operation).

If vehicle-to-vehicle distance control driving is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

■ Automatic cancelation of constant speed control

The cruise control will stop maintaining the vehicle speed in the following situations:


- Actual vehicle speed is more than approximately 10 mph (16 km/h) below the set vehicle speed.
At this time, the memorized set speed is not retained.
- Vehicle speed falls below approximately 25 mph (40 km/h).
- VSC is activated.
- TRAC is activated for a period of time.
- When the VSC or TRAC system is turned off by pressing the VSC OFF switch.

■ Radar sensor and grille cover

Always keep the sensor and grille cover clean to ensure that the vehicle-to-vehicle distance control operates properly. (Some obstructions, such as snow, ice and plastic objects, cannot be detected by the obstruction sensor.)

Dynamic radar cruise control is canceled if an obstruction is detected.

- ① Grille cover
- ② Radar sensor

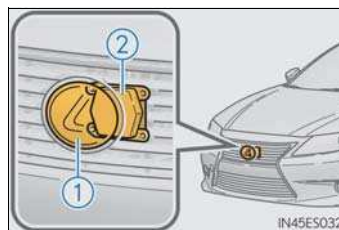**■ Warning messages and buzzers for dynamic radar cruise control**

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 763)

■ **Certification**

- ▶ For vehicles sold in the U.S.A.

FCC ID: HYQDNMWR004

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiofrequency radiation exposure Information:


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- ▶ For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

 CAUTION**■ Before using dynamic radar cruise control**

Do not overly rely on vehicle-to-vehicle distance control.

Be aware of the set speed. If automatic deceleration/acceleration is not appropriate, adjust the vehicle speed, as well as the distance between your vehicle and vehicles ahead by applying the brakes etc.

■ Cautions regarding the driving assist systems

Observe the following precautions.

Failure to do so may cause an accident resulting in death or serious injury.

● Assisting the driver to measure following distance


The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

● Assisting the driver to judge proper following distance

The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is appropriate or not. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

● Assisting the driver to operate the vehicle

The dynamic radar cruise control has no capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

 CAUTION**■ To avoid inadvertent cruise control activation**

Switch the cruise control off using the “ON/OFF” button when not in use.

■ Situations unsuitable for dynamic radar cruise control

Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhill, or where there are sudden changes between sharp up and down gradients
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to expressways
- When weather conditions are bad enough that they may prevent the sensors from functioning correctly (fog, snow, sandstorm, heavy rain, etc.)
- When an approach warning buzzer is heard often
- During emergency towing

⚠ CAUTION**■ When the sensor may not be correctly detecting the vehicle ahead**

Apply the brakes as necessary when any of the following types of vehicles are in front of you.


As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 254) will not be activated, and a fatal or serious accident may result.

- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving
- Vehicles with small rear ends (trailers with no load on board etc.)
- Motorcycles traveling in the same lane

■ Conditions under which the vehicle-to-vehicle distance control may not function correctly

Apply the brakes as necessary in the following conditions as the radar sensor may not be able to correctly detect vehicles ahead, and a fatal or serious accident may result:

- When water or snow thrown up by the surrounding vehicles hinders the functioning of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the trunk etc.)
- When the road curves or when the lanes are narrow
- When steering wheel operation or your position in the lane is unstable
- When the vehicle ahead of you decelerates suddenly

 CAUTION**■ Handling the radar sensor**

Observe the following to ensure the cruise control system can function effectively. Otherwise, the system may not function correctly and could result in an accident.

- Keep the sensor and grille cover clean at all times.
Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.
- Do not replace them with non-genuine parts.


LDA (Lane Departure Alert)*

Summary of function

While driving on a road that has lane markers, this system recognizes the white lane markers using a camera as a sensor to alert the driver when the vehicle deviates from its lane.

If the system judges that the vehicle may deviate from its lane, it alerts the driver using beeping and indications on the multi-information display.

Camera sensor

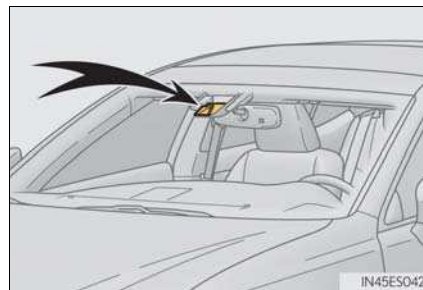

4

Driving

*: If equipped


Turning the LDA system on

Press the "LDA" switch to activate the system.

"LDA" indicator and the lane lines will come on.

Press the switch again to turn the LDA system off.

The LDA system will remain on or off even if the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode.

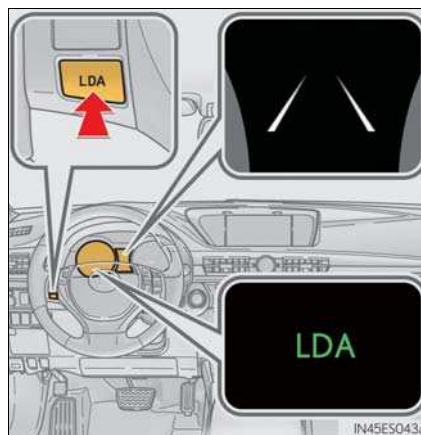

Operating conditions

- When the vehicle speed is approximately 32 mph (50 km/h) or more
- When the lane width is more than approximately 8.2 ft. (2.5 m)
- When driving on a straight road or through a curve with a radius of more than approximately 328 ft. (100 m)

Indication on the multi-information display

When the LDA system is on, the lane lines are shown.

The inside of the lane lines turn white when the right and left lane markers are recognized.

If the vehicle deviates from the lane, the lane line on the side the vehicle deviates from will flash.



The inside of the recognized lane line turns white when the right or left lane marker is recognized.

If the vehicle deviates from a lane that has lane markers recognized, the lane line will flash.



The inside of the lane lines turn black when no lane marker is recognized or the LDA system is temporarily canceled.



■ Temporary cancelation of the LDA system

When the lane departure warning function is activated. The lane departure warning function will not operate again for a several seconds after it has been activated, even if the vehicle leaves the lane again.

■ The lane departure warning

It may be difficult to feel the sensory warning depending on the road conditions.

■ After the vehicle has been parked in the sun


The LDA system may not be available and a warning message (→P. 771) will be displayed for a while after driving has started. When the temperature in the cabin decreases and the temperature around the camera sensor (→P. 263) becomes suitable for its operation, the functions will begin to operate.

■ Conditions in which the function may not operate correctly

In the following conditions, the LDA system may not operate, or it may not be possible to ensure adequate performance. Also, the camera sensor may be unable to recognize lane markers causing the lane departure warning function to operate incorrectly. However, this does not indicate a malfunction.

- When driving through an area with no lane markers, such as a tollbooth, a crossing or before a ticket checkpoint
- When driving on a sharp curve
- When lane markers are extremely narrow or extremely wide
- When the vehicle leans to one side an unusual amount due to a heavy load or improper tire inflation pressure
- When the following distance between your vehicle and the vehicle ahead is extremely short
- When the lane markers are yellow (These may be more difficult for the system to recognize compared to white markers.)
- When the lane markers are broken, "Botts' dots", "Raised pavement marker" or stones
- When the lane markers are on a curb etc.
- When lane markers are obscured or partially obscured by sand, dirt, etc.
- When there are shadows on the road running parallel with lane markers, or if a shadow covers the lane markers
- When driving on a particularly bright road surface, such as concrete
- When driving on a road surface that is bright due to reflected light
- When driving in a location where the light level changes rapidly, such as the entrance to or exit from a tunnel

- When sunlight or the headlights of oncoming vehicles are shining directly into the camera lens
 - When driving on roads that are branching or merging
 - When driving on a road surface that is wet due to rain, previous rainfall, standing water, etc.
 - When the vehicle experiences strong up-and-down motion such as when driving on an extremely rough road or on a seam in the pavement
 - When headlight brightness at nighttime is reduced due to dirt on the lenses, or when the headlights are misaligned
 - When driving on winding roads or roads that are uneven
 - When driving on rough or unpaved roads
- **When changing the tires**
Depending on the tires used, sufficient performance may not be maintainable.
- **Warning messages for LDA system**
Warning messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 764, 771)

 CAUTION**■ Before using the LDA system**

Do not rely solely on the LDA system. The LDA system does not drive the vehicle automatically, nor does it reduce the amount of care you need to take. As such, the driver must always assume full responsibility for understanding his/her surroundings, for operating the steering wheel to correct the driving line, and for driving safely.

Inappropriate or negligent driving could lead to an accident.

■ To avoid operating the LDA by mistake

Switch the LDA system off using the "LDA" switch when not in use.

■ Situations unsuitable for LDA system

Do not use LDA system in any of the following situations.

Otherwise, the system may not function correctly and could result in an accident.

- When driving with tire chains, a spare tire, or similar equipment
- When there are objects or structures along the roadside that might be misinterpreted as lane markers (such as guardrails, curb, reflector posts, etc.)
- When driving on snowy roads
- When pavement lane markers are difficult to see due to rain, snow, fog, etc.
- When there are visible lines on the pavement from road repairs, or if the remains of old lane markers are still visible on the road
- When driving on a road with lane closures due to maintenance, or when driving in a temporary lane

 NOTICE**■ To prevent damage to or incorrect operation of the LDA system**

- Do not modify the headlights or attach stickers to the surface of the lights.
- Do not modify the suspension or replace it with non-genuine parts.
- Do not install or place anything on the hood or the grille. Also, do not install a grille guard (bull bars, kangaroo bar etc.).
- If your windshield needs repairs, contact your Lexus dealer.

■ Camera sensor (→P. 263)

Observe the following to ensure that the LDA system functions correctly.

- Keep the windshield clean at all times.
Performance could be affected if the windshield is dirty, or if raindrops, condensation or ice are adhering to the windshield.
- Do not attach a sticker or other items to the windshield near the camera sensor.



- Do not attach window tinting to the windshield.
- Do not install an antenna in front of the camera lens.
- If the windshield is fogged up, use the windshield defogger to remove fog from the windshield.
When it is cold, using the heater with air blowing to the feet may allow the upper part of the windshield to fog up. This will have a negative effect on the images.


 NOTICE

- Do not scratch the camera lens, or let it get dirty.
When cleaning the inside of the windshield, be careful not to get any glass cleaner etc. on the lens. Also, do not touch the lens.
For lens repair, contact your Lexus dealer.
- Do not change the installation position or direction of the camera sensor or remove it. The direction of the camera sensor is precisely adjusted.
- Do not subject the camera sensor to strong impact or force, and do not disassemble the camera sensor.
- Do not replace windshield with non-genuine windshield.
Contact your Lexus dealer.

Intuitive parking assist*

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, navigation system screen or Lexus Display Audio system screen and a buzzer. Always check the surrounding area when using this system.

■ Types of sensors

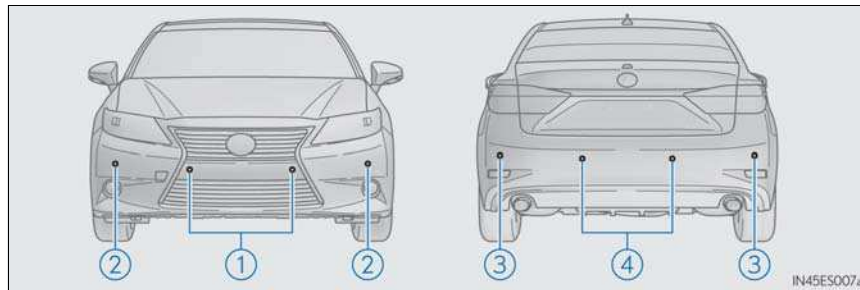

- ① Front center sensors
- ② Front corner sensors
- ③ Rear corner sensors
- ④ Rear center sensors

4


Driving

*: If equipped

■ Intuitive parking assist switch

Turns the intuitive parking assist on/off

When on, the indicator light comes on to inform the driver that the system is operational.

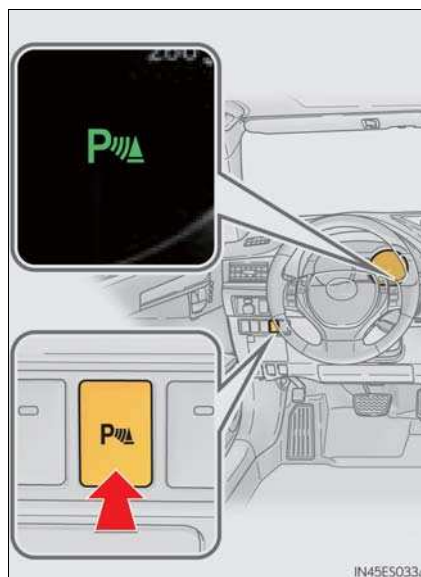


Display

When the sensors detect an obstacle, a graphic is shown on the multi-information display and navigation system screen or Lexus Display Audio system screen depending on the position and distance to the obstacle.

■ Multi-information display

- ① Front corner sensor detection
- ② Front center sensor detection
- ③ Rear corner sensor detection
- ④ Rear center sensor detection

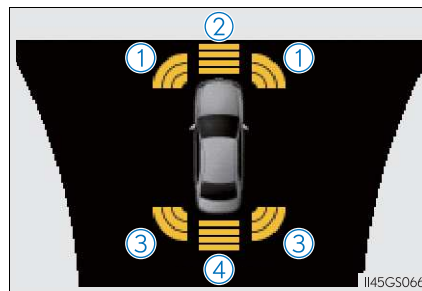

4

Driving


■ Navigation system screen/Lexus Display Audio system screen (if equipped)

- ① When the rear view monitor system is not displayed

A graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 279)





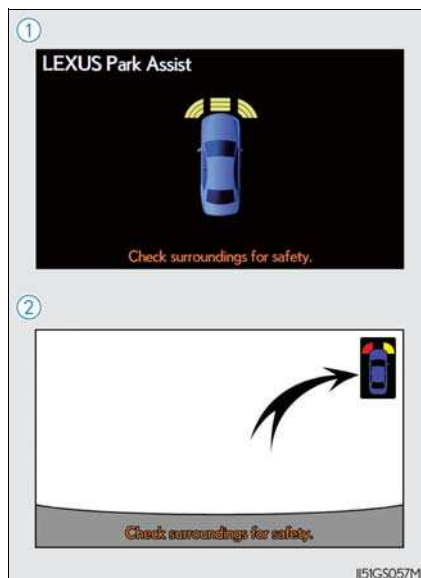















- ② When the rear view monitor system is displayed (insert display)

A simplified image is displayed on the right upper corner of the navigation system screen or Lexus Display Audio system screen when an obstacle is detected.


















Sensor detection display, obstacle distance

■ **Front center sensor**













Approximate distance to obstacle	Multi-information display	Navigation system	Navigation system (insert display)	Lexus Display Audio system	Lexus Display Audio system (insert display)
3.3 ft. (100 cm) to 2.0 ft. (60 cm)	 (continuous)	 (continuous)	 (blinking slowly)	 (continuous)	 (blinking slowly)
2.0 ft. (60 cm) to 1.5 ft. (45 cm)	 (continuous)	 (continuous)	 (blinking)	 (continuous)	 (blinking)
1.5 ft. (45 cm) to 1.0 ft. (30 cm)	 (continuous)	 (continuous)	 (blinking rapidly)	 (continuous)	 (blinking rapidly)
Less than 1.0 ft. (30 cm)	 (blinking)	 (continuous)	 (continuous)	 (continuous)	 (continuous)

4
Driving

■ Corner sensors

Approximate distance to obstacle	Multi-information display	Navigation system	Navigation system (insert display)	Lexus Display Audio system	Lexus Display Audio system (insert display)
2.0 ft. (60 cm) to 1.5 ft. (45 cm)	 (continuous)	 (continuous)	 (blinking)	 (continuous)	 (blinking)
1.5 ft. (45 cm) to 1.0 ft. (30 cm)	 (continuous)	 (continuous)	 (blinking rapidly)	 (continuous)	 (blinking rapidly)
Less than 1.0 ft. (30 cm)	 (blinking)	 (continuous)	 (continuous)	 (continuous)	 (continuous)

■ Rear center sensor

Approximate distance to obstacle	Multi-information display	Navigation system (insert display)	Lexus Display Audio system (insert display)
4.9 ft. (150 cm) to 2.0 ft. (60 cm)	 (continuous)	 (blinking slowly)	 (blinking slowly)
2.0 ft. (60 cm) to 1.5 ft. (45 cm)	 (continuous)	 (blinking)	 (blinking)
1.5 ft. (45 cm) to 1.1 ft. (35 cm)	 (continuous)	 (blinking rapidly)	 (blinking rapidly)
Less than 1.1 ft. (35 cm)	 (blinking)	 (continuous)	 (continuous)

4
Driving

■ **Buzzer operation and distance to an obstacle**

A buzzer sounds when the sensors are operating.


- The buzzer beeps faster as the vehicle approaches an obstacle. When the vehicle comes within the following distance of the obstacle, the buzzer sounds continuously:
 - Front center sensors: Approximately 1.0 ft. (30 cm)
 - Corner sensors: Approximately 1.0 ft. (30 cm)
 - Rear center sensors: Approximately 1.1 ft. (35 cm)
- When 2 or more obstacles are detected simultaneously, the buzzer system responds to the nearest obstacle. If one or both come within the above distances, the beep will repeat a long tone, followed by fast beeps.

Detection range of the sensors

- ① Approximately 3.3 ft. (100 cm)
- ② Approximately 4.9 ft. (150 cm)
- ③ Approximately 2.0 ft. (60 cm)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.

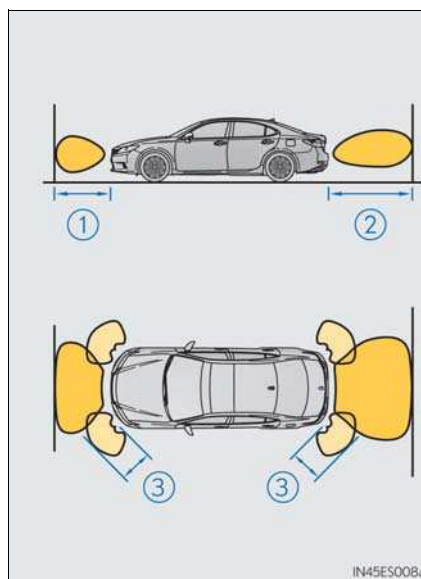


Setting up intuitive parking assist (if equipped)

You can change the warning beep volume and navigation system screen or Lexus Display Audio system screen operating conditions.

- 1 Press the "MENU" button on the Remote Touch (navigation system) or Lexus Display Audio controller (Lexus Display Audio system). (→P.109)
- 2 Select "SETUP" on the "Menu" screen.
- 3 Select "Vehicle" on the "Setup" screen.
- 4 Select "LEXUS Park Assist" on the "Vehicle Settings" screen.

▶ Navigation system

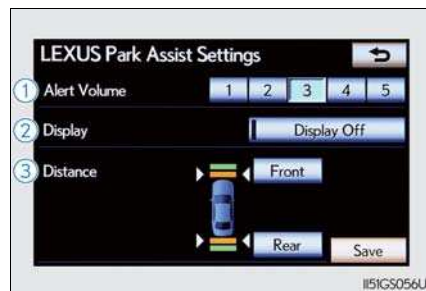

▶ Lexus Display Audio system



- 1 Alert volume setting
- 2 Display on/off setting
- 3 Alert distance setting

Make sure to save after changing settings.

■ **Alert volume setting**

The alert volume can be adjusted.

- 1 Select "1" to "5" on the "LEXUS Park Assist settings".
- 2 Select "Save".

■ **Display on/off setting**

On or off can be selected for intuitive parking assist display.

- 1 Select "Display Off".
When the "Display Off" indicator is turned on, the display of intuitive parking assist will be off. Select "Display Off" again to turn the display of intuitive parking assist on.
- 2 Select "Save".

■ **Alert distance setting**

Front or rear center sensors display and tone indication can be set.

- 1 Select "Front" or "Rear".
Long distance or short distance can be selected.
- 2 Select "Save".

■ **The intuitive parking assist can be operated when**

- Front center sensors:
 - The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.
 - The shift lever is in a position other than P or R.
 - The vehicle speed is less than about 6 mph (10 km/h).
- Front corner sensors:
 - The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.
 - The shift lever is in a position other than P.
 - The vehicle speed is less than about 6 mph (10 km/h).
- Rear corner and rear center sensors:
 - The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.
 - The shift lever is in R.

■ Intuitive parking assist display

When an obstacle is detected while the rear view monitor system is in use, the warning indicator will appear in the top right of the screen even if the display setting has been set to off.

■ Sensor detection information

- The sensor's detection areas are limited to the areas around the vehicle's front corner and rear bumpers.
- Certain vehicle conditions and the surrounding environment may affect the ability of the sensor to correctly detect obstacles. Particular instances where this may occur are listed below.
 - There is dirt, snow or ice on the sensor. (Wiping the sensors will resolve this problem.)
 - The sensor is frozen. (Thawing the area will resolve this problem.)
In especially cold weather, if a sensor is frozen the screen may show an abnormal display, or obstacles may not be detected.
 - The sensor is covered in any way.
 - The vehicle is leaning considerably to one side.
 - On an extremely bumpy road, on an incline, on gravel, or on grass.
 - The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
 - There is another vehicle equipped with parking assist sensors in the vicinity.
 - The sensor is coated with a sheet of spray or heavy rain.
 - The vehicle is equipped with a fender pole or wireless antenna.
 - Towing eyelets are installed.
 - The bumper or sensor receives a strong impact.
 - The vehicle is approaching a tall or curved curb.
 - In harsh sunlight or intense cold weather.
 - The area directly under the bumpers is not detected.
 - If obstacles draw too close to the sensor.
 - A non-genuine Lexus suspension (lowered suspension etc.) is installed.
 - People may not be detected if they are wearing certain types of clothing.

In addition to the examples above, there are instances in which, because of their shape, signs and other objects may be judged by the sensor to be closer than they are.

- The shape of the obstacle may prevent the sensor from detecting it. Pay particular attention to the following obstacles:
 - Wires, fences, ropes, etc.
 - Cotton, snow and other materials that absorb sound waves
 - Sharply-angled objects
 - Low obstacles
 - Tall obstacles with upper sections projecting outwards in the direction of your vehicle
- The following situations may occur during use.
 - Depending on the shape of the obstacle and other factors, the detection distance may shorten, or detection may be impossible.
 - Obstacles may not be detected if they are too close to the sensor.
 - There will be a short delay between obstacle detection and display. Even at slow speeds, there is a possibility that the obstacle will come within the sensor's detection areas before the display is shown and the warning beep sounds.
 - Thin posts or objects lower than the sensor may not be detected for collision when approached, even if they have been detected once.
 - It might be difficult to hear beeps due to the volume of audio system or air flow noise of air conditioning system.

■ **If a message is displayed on the multi-information display**

→P. 763, 770

■ **Certification**


- ▶ For vehicles sold in the U.S.A.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- ▶ For vehicles sold in Canada

This ISM device complies with Canadian ICES-001.

Cet appareil ISM est conforme à la norme NMB-001 du Canada.

 CAUTION**■ When using the intuitive parking assist**

Observe the following precautions.

Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 6 mph (10 km/h).
- The sensors' detection areas and reaction times are limited. When moving forward or reversing, check the areas surrounding the vehicle (especially the sides of the vehicle) for safety, and drive slowly, using the brake to control the vehicle's speed.
- Do not install accessories within the sensors' detection areas.

 NOTICE**■ When using intuitive parking assist-sensor**

In the following situations, the system may not function correctly due to a sensor malfunction etc. Have the vehicle checked by your Lexus dealer.

- The intuitive parking assist operation display flashes, and a beep sounds when no obstacles are detected.
- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper collides with something.
- If the display shows continuously without a beep.
- If a display error occurs, first check the sensor.
If the error occurs even if there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.

■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

Rear view monitor system*

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle and fixation guide lines while backing up, for example while parking.

The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

▶ Vehicles with a navigation system


Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

▶ Vehicles with the Lexus Display Audio system

Rear view monitor system will activate when the shift lever is in R.

If you move the lever out of R, the rear view monitor system will be deactivated.

When the shift lever is shifted to the R position and any mode button (such as “MENU”) is pressed, the rear view monitor system is canceled, and the screen is switched to the mode of the button that was pressed.

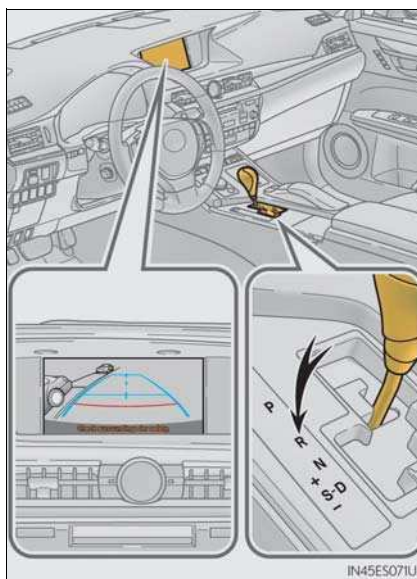


*: If equipped

Using the rear view monitor system

■ Screen description

The rear view monitor system screen will be displayed if the shift lever is shifted to R while the power switch is in ON mode.

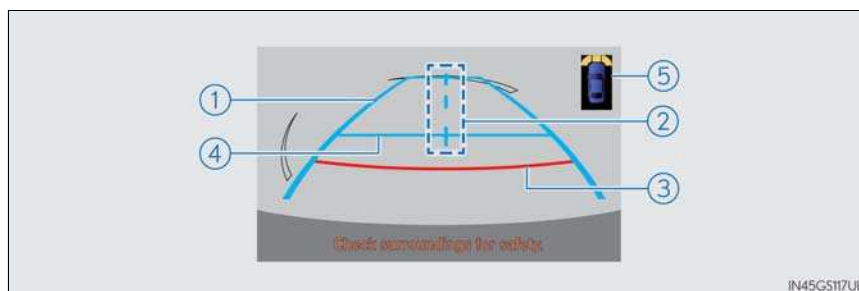

- ① Vehicle width extension guide line
The line indicates a guide path when the vehicle is being backed straight up. The displayed width is wider than the actual vehicle width.
- ② Vehicle center guide lines
These lines indicate the estimated vehicle center on the ground.
- ③ Distance guide line
The line shows points approximately 1.5 ft. (0.5 m) (red) from the center of the edge of the bumper.
- ④ Distance guide line
The line shows distance behind the vehicle, a point approximately 3 ft. (1 m) (blue) from the edge of the bumper.
- ⑤ Intuitive parking assist display (if equipped)
If an obstacle is detected while the Intuitive parking assist-sensor is on, a display is shown in the top right corner of the screen.


Rear view monitor system precautions

■ Area displayed on screen

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle.


To adjust the image on the rear view monitor system screen.
(→P. 340)

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

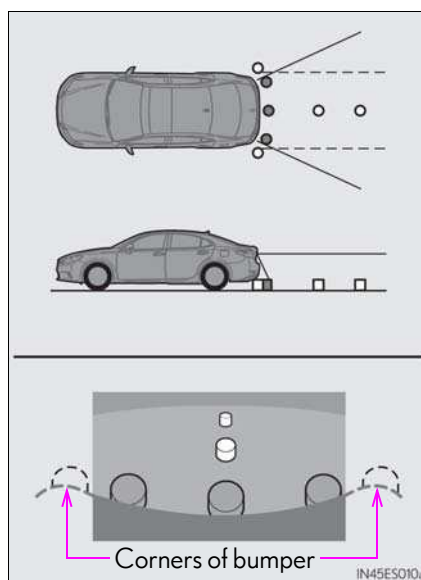

■ Rear view monitor system camera

The camera for the rear view monitor system is located above the license plate.

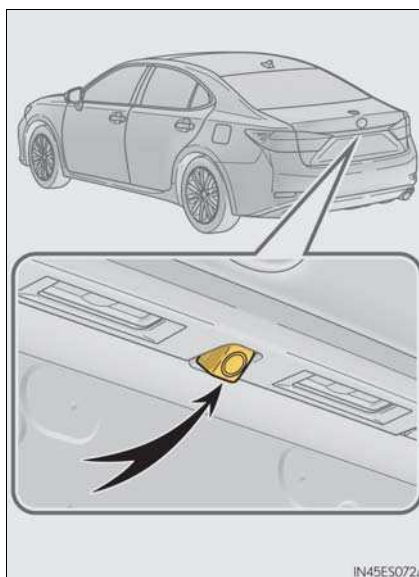

● Using the camera

If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.

■ Differences between the screen and the actual road


The distance guide lines and the vehicle width extension guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.

The distances between the vehicle width extension guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.

The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the fixation guide lines on the screen and the actual distance/course on the road.


- When the ground behind the vehicle slopes up sharply

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

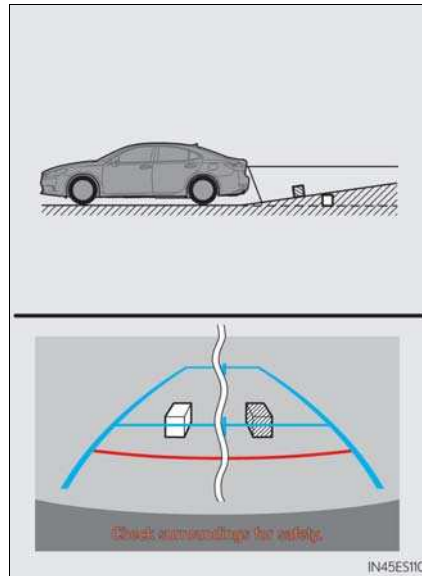


- When the ground behind the vehicle slopes down sharply

The distance guide lines will appear to be further from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

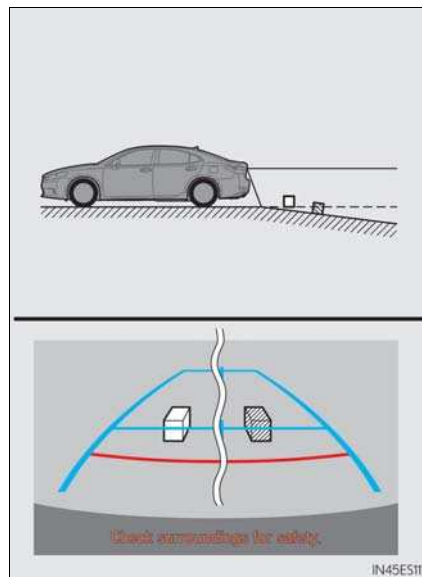

- When any part of the vehicle sags

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the fixation guide lines on the screen and the actual distance/course on the road.

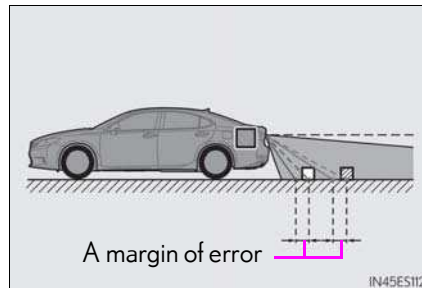


- When approaching three-dimensional objects

The distance guide lines are displayed according to flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.


- Distance guidelines

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point ②. However, in reality if you back up to point ①, you will hit the truck. On the screen, it appears that ① is closest and ③ is furthest away. However, in reality, the distance to ① and ③ is the same, and ② is farther than ① and ③.

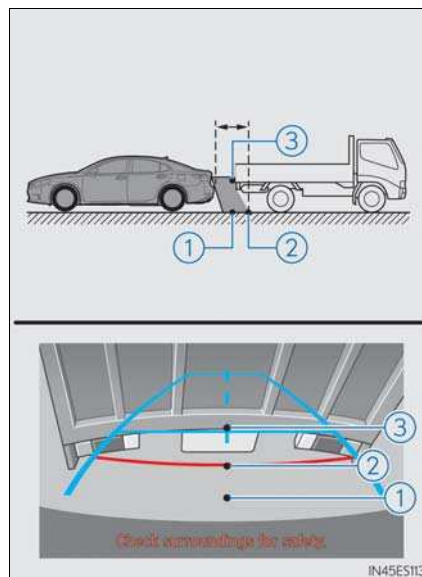

■ Vehicle width extension guide lines

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the vehicle width extension guide lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the vehicle width extension guide lines. In reality if you back up as guided by the vehicle width extension guide lines, the vehicle may hit the truck.

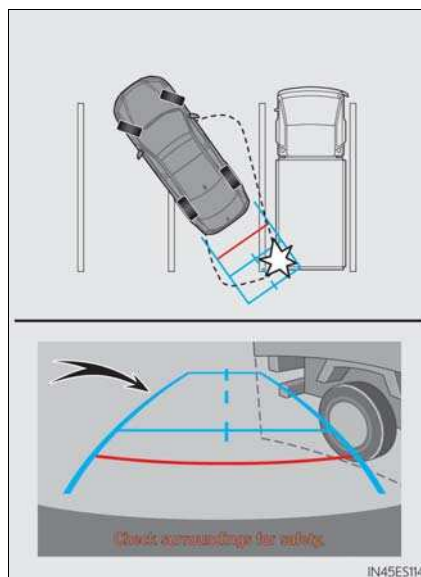

Things you should know

■ If you think something is wrong

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Lexus dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> • The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud etc.) is adhering to the camera • There are scratches on the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights etc. 	<p>If this happens due to these causes, it does not indicate a malfunction. Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>To adjust the image on the rear view monitor system screen. (→P. 340)</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	<p>Rinse the camera lens with water and wipe it clean with a soft cloth.</p> <p>Wash with a mild soap if the dirt is stubborn.</p>

292 4-5. Using the driving support systems

Symptom	Likely cause	Solution
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Lexus dealer.
The fixation guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Lexus dealer.

⚠ CAUTION**■ When using the rear view monitor system**

When backing up, be sure to check visually behind and all around the vehicle before proceeding.

Observe the following precautions to avoid an accident that could result in death or serious injuries.

- The rear view monitor system is a supplemental device intended to assist the driver when backing up. Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear. Use caution, just as you would when backing up any vehicle.
- Never back up while looking only at the screen.
The image shown on the screen may differ from the actual state, and you could collide with another vehicle or obstacles if backing up looking only at the screen, possibly causing an accident. When backing up, be sure to check in front of and behind the vehicle, both directly and with mirrors.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- The instructions given are only guidelines.
When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the rear view monitor system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- Do not use system in the following cases:
 - On icy or slick road surfaces, or in snow
 - When using tire chains or the compact spare tire
 - When the trunk lid is not closed completely
 - On roads that are not flat or straight, such as curves or slopes.
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to check direct visually and with mirror all around the vehicle before proceeding.
- If the tire sizes are changed, the position of the fixation guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P. 287)

⚠ CAUTION**■ When using the rear view monitor system screen**


- The position of the fixation guide lines displayed on the screen may change in accordance with the number of passengers, the amount of cargo etc. Be sure to check behind and all around the vehicle direct visually and with mirror before proceeding.
- The vehicle width extension guide lines are wider than the actual width of the vehicle. When backing up, be sure to check behind and all around the vehicle direct visually and with mirror before proceeding.

 NOTICE■ **How to use the camera**

- The rear view monitor system may not operate properly in the following cases, or if the precautions described below are not followed.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - Do not strongly rub the camera lens. If the camera lens is scratched, it cannot transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
 - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
 - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
 - When the camera is used under fluorescent lights, sodium light or mercury light etc., the lights and the illuminated areas may appear to flicker.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Lexus dealer as soon as possible.

Driving mode select switch

The driving modes can be selected to suit driving condition.

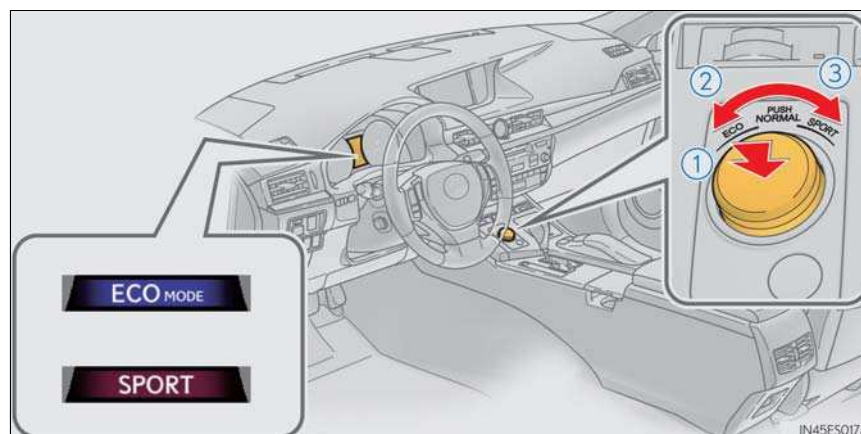

① Normal mode

For normal driving.

Press the switch to change the driving mode to normal mode when selected to Eco mode or sport mode.

② Eco drive mode

Use Eco mode to help achieve low fuel consumption during trips that involve frequent accelerating.

When not in Eco drive mode and the driving mode select switch is turned to the left, the "ECO MODE" indicator comes on in the multi-information display.

③ Sport mode

Assists acceleration response by controlling the steering and transmission <hybrid system>. Suitable for when precise handling is desirable, for example when driving on mountain roads.

When not in Sport mode and the driving mode select switch is turned to the right, the "SPORT" indicator comes on in the multi-information display.

Hybrid vehicles: The hybrid system indicator changes to the tachometer.

(→P. 93)

■ Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency (→P. 347, 359). To improve air conditioning performance, adjust the fan speed or turn off Eco drive mode.

■ Sport mode automatic deactivation

Sport mode is automatically deactivated if the "START STOP ENGINE" <"POWER"> switch is turned off after driving in sport mode.

Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

◆ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

◆ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

◆ Enhanced VSC (Enhanced Vehicle Stability Control)

Provides cooperative control of the ABS, TRAC, VSC and EPS. Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

◆ TRAC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

◆ Hill-start assist control (hybrid vehicles)

→P. 304

◆ EPS (Electric Power Steering)

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

◆ PCS (Pre-Collision System) (if equipped)


→P. 306

When the TRAC/VSC/ABS (hybrid vehicles) systems are operating**▶ Gasoline vehicles**

The slip indicator light will flash while the TRAC/VSC systems are operating.

▶ Hybrid vehicles

The slip indicator light will flash while the TRAC/VSC/ABS systems are operating.

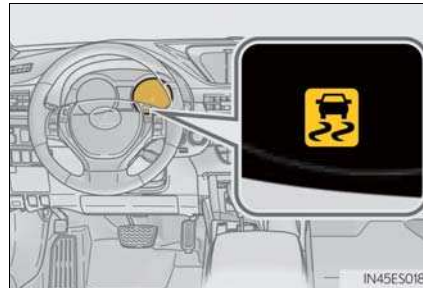

Disabling the TRAC system


If the vehicle gets stuck in mud, dirt or snow, the TRAC system may reduce power from the engine <hybrid system> to the wheels. Pressing




to turn the system off may make it easier for you to rock the vehicle in order to free it.

To turn the TRAC system off, quickly press and release the button.


The "TRAC OFF" will be shown on the multi-information display. Press the button again to turn the system back on.

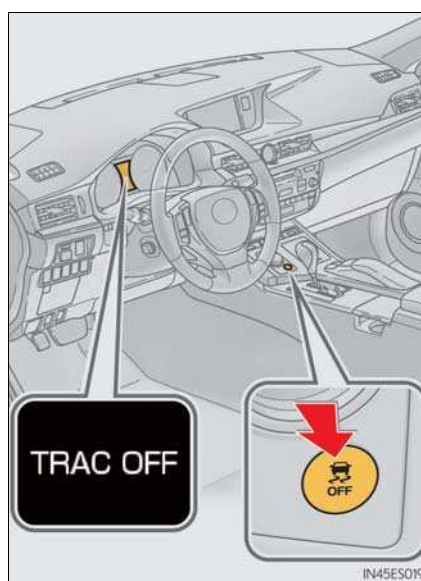

■ Turning off both TRAC and VSC systems

To turn the TRAC and VSC systems off, press and hold  for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the "TRAC OFF" will be shown on the multi-information display.

Press  again to turn the systems back on.

■ When the message is displayed on the multi-information display showing that TRAC has been disabled even if the VSC OFF switch has not been pressed

TRAC and hill-start assist control (hybrid vehicles) cannot be operated. Contact your Lexus dealer.

■ When the 12-volt battery is disconnected

The steering wheel may move from its straight forward position, but this will be corrected automatically when driving.

■ Sounds and vibrations caused by the ABS, brake assist, VSC and TRAC systems

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine <hybrid system> is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard after the vehicle comes to a stop.
 - The brake pedal may pulsate slightly after the ABS is activated. (gasoline vehicles)
 - The brake pedal may move down slightly after the ABS is activated. (gasoline vehicles)

■ EPS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Automatic reactivation of TRAC and VSC systems

After turning the TRAC and VSC systems off, the systems will be automatically reactivated in the following situations:

- When the "START STOP ENGINE" <"POWER"> switch is turned off
- If only the TRAC system is turned off, the TRAC will turn on when vehicle speed increases.
If both the TRAC and VSC systems are turned off, automatic reactivation will not occur when vehicle speed increases.

■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine <hybrid system> off. The EPS system should return to normal within 10 minutes.

▲ CAUTION**■ The ABS does not operate effectively when**

- Tires with inadequate gripping ability are used (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

■ Stopping distance when the ABS is operating may exceed that of normal conditions

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

■ TRAC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRAC system is operating.


Do not drive the vehicle in conditions where stability and power may be lost.

■ When the VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

■ When the TRAC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to ensure vehicle stability and driving force, do not turn the TRAC/VSC systems off unless necessary.

 **CAUTION****■ Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRAC and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact your Lexus dealer for further information when replacing tires or wheels.

■ Handling of tires and the suspension


Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

Hill-start assist control (hybrid vehicles)

Assists with starting off and temporarily maintains braking power even if the foot is removed from the brake pedal when starting off on an incline or a slippery slope.

To engage hill-start assist control, further depress the brake pedal when the vehicle is stopped completely.

A buzzer will sound once to indicate the system is activated. The slip indicator will also start flashing.

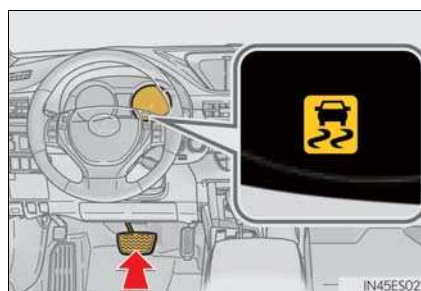

■ Hill-start assist control operating conditions

- The system operates in the following situations:
 - The shift lever is in a position other than P.
 - The parking brake is not applied.
 - The accelerator pedal is not depressed.
- Hill-start assist control cannot be operated while the slip indicator light is illuminated.

■ Hill-start assist control

- While hill-start assist control is operating, the brakes remain automatically applied after the driver releases the brake pedal. The stop lights and the high mounted stoplight turn on.
- Hill-start assist control operates for about 2 seconds after the brake pedal is released.
- If the slip indicator does not flash and the buzzer does not sound when the brake pedal is further depressed, slightly reduce the pressure on the brake pedal (do not allow the vehicle to roll backward) and then firmly depress it again. If the system still does not operate, check that the operating conditions explained above have been met.

■ Hill-start assist control buzzer

- When hill-start assist control is activated, the buzzer will sound once.
- In the following situations, hill-start assist control will be canceled and the buzzer will sound twice.
 - No attempt is made to drive the vehicle within approximately 2 seconds of releasing the brake pedal.
 - The shift lever is moved to P.
 - The parking brake is applied.
 - The brake pedal is depressed again.
 - The brake pedal has been depressed for more than approximately 3 minutes.

■ If the slip indicator comes on

It may indicate a malfunction in the system. Contact your Lexus dealer.

⚠ CAUTION**■ Hill-start assist control**

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

PCS (Pre-Collision System)*

When the radar sensor detects possibility of a frontal collision, the pre-collision system such as the brakes and seat belts are automatically engaged to lessen impact as well as vehicle damage.

The pre-collision system can be turned on and off as necessary by operating the switch. (→P. 307)

◆ Pre-collision seat belts (front seats only)

If the pre-collision sensor detects that a collision is unavoidable, the pre-collision system will retract the seat belt before the collision occurs. The same will happen if the driver makes an emergency braking or loses control of the vehicle. (→P. 34)

However, when the VSC system is disabled, the system will not operate in the event of skidding.

◆ Pre-collision brake assist

When there is a high possibility of a frontal collision, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

◆ Pre-collision braking


When there is a high possibility of a frontal collision, the system warns the driver using a warning light, warning display and buzzer. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed.

*: If equipped

Disabling pre-collision system


- ① Enabled
- ② Disabled

The “PCS” warning light turns on when pre-collision system is disabled.

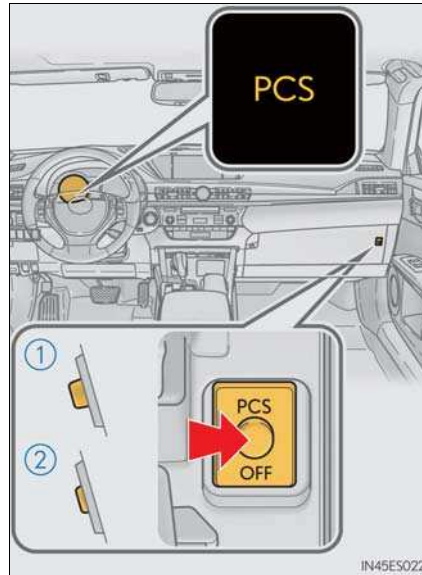

Radar sensor

The radar sensor detects vehicles or other obstacles on or near the road ahead and determines whether a collision is imminent based on the position, speed, and heading of the obstacles.

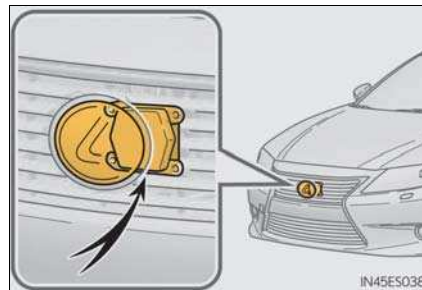

■ The pre-collision system is operational when

The pre-collision system off switch is not pressed and the following conditions are met:

- Pre-collision seat belts (operating conditions A):
 - Vehicle speed is greater than about 19 mph (30 km/h).
 - The system detects sudden braking or skidding.
 - The front occupants are wearing a seat belt.
- Pre-collision seat belts (operating conditions B):
 - Vehicle speed is greater than about 4 mph (5 km/h).
 - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 19 mph (30 km/h).
 - The front occupants are wearing a seat belt.
- Pre-collision brake assist:
 - Vehicle speed is greater than about 19 mph (30 km/h).
 - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 19 mph (30 km/h).
 - The brake pedal is depressed.
- Pre-collision braking:
 - Vehicle speed is greater than about 10 mph (15 km/h).
 - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 10 mph (15 km/h).

■ Conditions that may trigger the system even if there is no possibility of a collision

- When there is an object by the roadside at the entrance to a curve
- When passing an oncoming vehicle on a curve
- When driving over a narrow iron bridge
- When there is a metal object on the road surface
- When driving on an uneven road surface
- When passing an oncoming vehicle on a left-turn
- When your vehicle rapidly closes on the vehicle in front
- When a grade separation/interchange, sign, billboard, or other structure appears to be directly in the vehicle's line of travel
- When the steep angle of the road causes a metal object located beneath the road surface to be seen ahead of the vehicle
- When an extreme change in vehicle height occurs
- When the axis of the radar is out of adjustment
- When passing through certain toll gates
- When passing through an overpass

When the system is activated in the situations described above, there is also a possibility that the seat belts will retract quickly and the brakes will be applied with a force greater than normal. When the seat belt is locked in the retracted position, stop the vehicle in a safe place, release the seat belt and refasten it.

■ Obstacles not detected

The sensor cannot detect plastic obstacles such as traffic cones. There may also be occasions when the sensor cannot detect pedestrians, animals, bicycles, motorcycles, trees, or snowdrifts.

■ Situations in which the pre-collision system does not function properly

The system may not function effectively in situations such as the following:

- On roads with sharp bends or uneven surfaces
- If a vehicle suddenly moves in front of your vehicle, such as at an intersection
- If a vehicle suddenly cuts in front of your vehicle, such as when overtaking
- In inclement weather such as heavy rain, fog, snow or sand storms
- When your vehicle is skidding such as the VSC system off
- When your vehicle is steeply inclined
- When the axis of the radar is out of adjustment

■ **Automatic cancelation of the pre-collision system**

When a malfunction occurs due to sensor contamination, etc. that results in the sensors being unable to detect obstacles, the pre-collision system will be automatically disabled. In this case, the system will not activate even if there is a collision possibility.

■ **When there is a malfunction in the system**

“PCS” warning light will flash and warning messages will be displayed.
(→P. 753, 763)

■ **Certification**

► For vehicles sold in the U.S.A.

FCC ID: HYQDNMWR004

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Radiofrequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

► For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

⚠ CAUTION**■ Limitations of the pre-collision system**

Do not overly rely on the pre-collision system. Always drive safely, taking care to observe your surroundings and checking for any obstacles or other road hazards. Failure to do so may cause an accident resulting in death or serious injury.

■ When the sensor may not be correctly detecting the vehicle ahead


Apply the brakes as necessary in any of the following situations.

- When water or snow thrown up by the surrounding vehicles hinders the functioning of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment etc.)
- Vehicles that cut in suddenly
- Vehicles with small rear ends (trailers with no load on board etc.)
- Motorcycles traveling in the same lane

■ Handling the radar sensor

Observe the following to ensure the pre-collision system can function effectively. Otherwise, the system may not function correctly and could result in an accident.

- Keep the sensor and grille cover clean at all times.
Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.
If the sensor moves even slightly off position, the system may become inaccurate or malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.
- Do not replace them with non-genuine parts.

 CAUTION

■ **Cautions regarding the assist contents of the system**

By means of alarms and brake control, the pre-collision system is intended to assist the driver in avoiding collisions through the process of LOOK-JUDGE-ACT. There are limits to the degree of assistance the system can provide, so please keep in mind the following important points.

● **Assisting the driver in watching the road**

The pre-collision system is only able to detect obstacles directly in front of the vehicle, and only within a limited range. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for the driver to pay close attention to the vehicle's surroundings.

● **Assisting the driver in making correct judgment**

When attempting to estimate the possibility of a collision, the only data available to the pre-collision system is that from obstacles it has detected directly in front of the vehicle. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of collision in any given situation.

● **Assisting the driver in taking action**

The pre-collision system's braking assist feature is designed to help reduce the severity of a collision, and so only acts when the system has judged that a collision is unavoidable. This system by itself is not capable of automatically avoiding a collision or bringing the vehicle to a stop safely. For this reason, when encountering a dangerous situation the driver must take direct and immediate action in order to ensure the safety of all involved.


BSM (Blind Spot Monitor)*

Summary of the Blind Spot Monitor

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function
 - Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function
 - Assists the driver when backing up

These functions use same sensors.

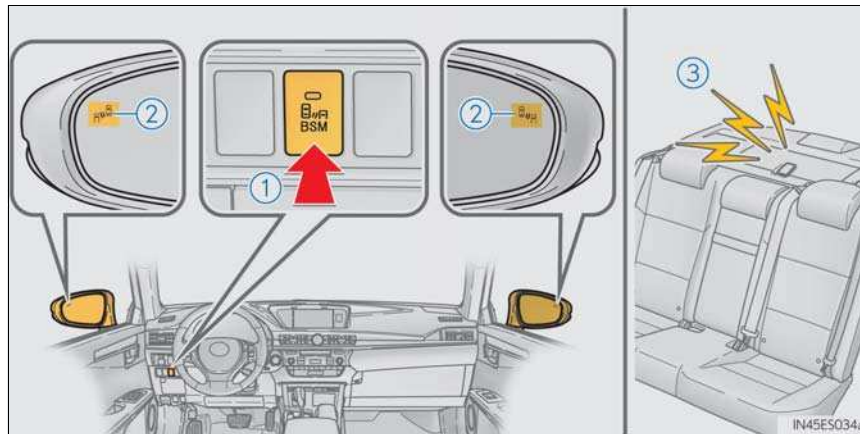

① BSM main switch

Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates. Common switch for Blind Spot Monitor function and Rear Cross Traffic Alert function.

4

Driving

*: If equipped

② Outside rear view mirror indicator

Blind Spot Monitor function:

When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.

Rear Cross Traffic Alert function:

When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.

③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)

When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

■ The outside rear view mirror indicators visibility

When under strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Rear Cross Traffic Alert buzzer hearing

Rear Cross Traffic Alert function may be difficult to hear over loud noises such as high audio volume.

■ When there is a malfunction in the Blind Spot Monitor system

If a system malfunction is detected due to any of the following reasons, warning messages will be displayed: (→P. 765)

- There is a malfunction with the sensors
- The sensors have become dirty
- The outside temperature is extremely high or low
- The sensor voltage has become abnormal

■ Certification for the Blind Spot Monitor system

- ▶ For vehicles sold in the U.S.A.

FCC ID: OAYSRR2A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- ▶ For vehicles sold in Canada

Applicable law: Canada 310

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Frequency bands: 24.05-24.25 GHz


Output power: less than 20 milliwatts

CAUTION

■ Handling the radar sensor

One Blind Spot Monitor sensor is installed inside the left and right side of the vehicle rear bumper respectively. Observe the following to ensure the Blind Spot Monitor system can function correctly.

- Keep the sensor and its surrounding area on the bumper clean at all times.

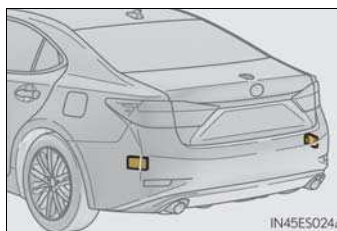

- Do not subject the sensor or surrounding area on the bumper to a strong impact. If the sensor moves even slightly off position, the system may malfunction and vehicles that enter the detection area may not be detected. If the sensor or surrounding area is subject to a strong impact, always have the area inspected by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor or surrounding area on the bumper.
- Do not modify the sensor or surrounding area on the bumper.
- Do not paint the sensor or surrounding area on the bumper.

The Blind Spot Monitor function


The Blind Spot Monitor function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicles existence via the outside rear view mirror indicator.

The Blind Spot Monitor function detection areas

The areas that vehicles can be detected in are outlined below.

The range of the detection area extends to:

- ① Approximately 11.5 ft. (3.5 m) from the side of the vehicle
The first 1.6 ft. (0.5 m) from the side of the vehicle is not in the detection area
- ② Approximately 9.8 ft. (3 m) from the rear bumper
- ③ Approximately 3.3 ft. (1 m) forward of the rear bumper

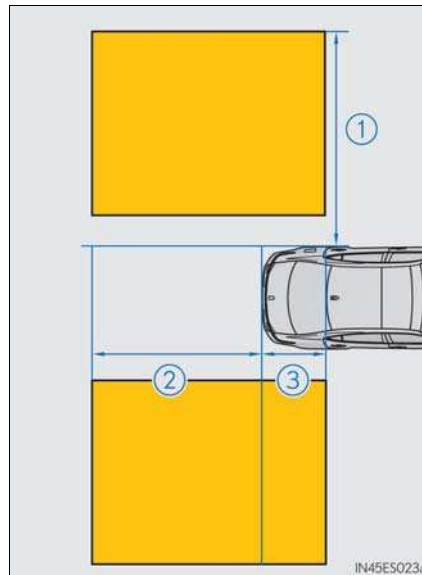

4

Driving

⚠ CAUTION

■ Cautions regarding the use of the system

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor function is a supplementary function which alerts the driver that a vehicle is present in the blind spot. Do not overly rely on the Blind Spot Monitor function. The function cannot judge if it is safe to change lanes, therefore over reliance could cause an accident resulting in death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

■ **The Blind Spot Monitor function is operational when**

- The BSM main switch is set to on
- Vehicle speed is greater than approximately 10 mph (16 km/h).

■ **The Blind Spot Monitor function will detect a vehicle when**

- A vehicle in an adjacent lane overtakes your vehicle.
- Another vehicle enters the detection area when it changes lanes.

■ **Conditions under which the Blind Spot Monitor function will not detect a vehicle**

The Blind Spot Monitor function is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians etc. *
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects *
- Following vehicles that are in the same lane *
- Vehicles driving 2 lanes across from your vehicle *


*: Depending on conditions, detection of a vehicle and/or object may occur.

■ Conditions under which the Blind Spot Monitor function may not function correctly

- The Blind Spot Monitor function may not detect vehicles correctly in the following conditions:
 - During bad weather such as heavy rain, fog, snow etc.
 - When ice or mud etc. is attached to the rear bumper
 - When driving on a road surface that is wet due to rain, standing water etc.
 - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
 - When a vehicle is in the detection area from a stop and remains in the detection area as your vehicle accelerates
 - When driving up or down consecutive steep inclines, such as hills, a dip in the road etc.
 - When multiple vehicles approach with only a small gap between each vehicle
 - When vehicle lanes are wide, and the vehicle in the next lane is too far away from your vehicle
 - When the vehicle that enters the detection area is traveling at about the same speed as your vehicle
 - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
 - Directly after the BSM main switch is set to on
- Instances of the Blind Spot Monitor function unnecessarily detecting a vehicle and/or object may increase under the following conditions:
 - When there is only a short distance between your vehicle and a guardrail, wall etc.
 - When there is only a short distance between your vehicle and a following vehicle
 - When vehicle lanes are narrow and a vehicle driving 2 lanes across from your vehicle enters the detection area
 - When items such as a bicycle carrier are installed on the rear of the vehicle

The Rear Cross Traffic Alert function

The Rear Cross Traffic Alert functions when your vehicle is in reverse. It can detect other vehicles approaching from the right or left rear of the vehicle. It uses radar sensors to alert the driver of the other vehicle's existence through flashing the outside rear view mirror indicators and sounding a buzzer.

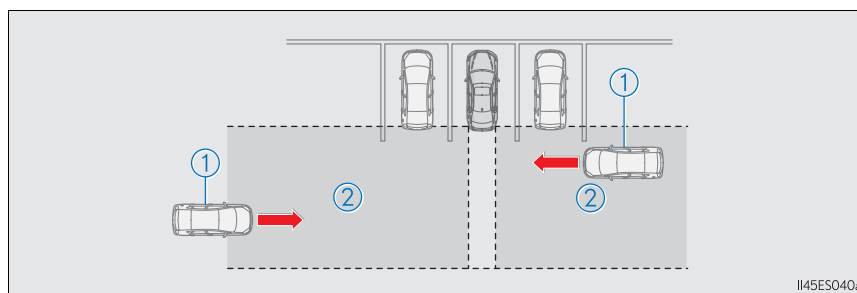

① Approaching vehicles

② Detection areas

⚠ CAUTION

■ Cautions regarding the use of the system


The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Rear Cross Traffic Alert function is only an assist and is not a replacement for careful driving. Driver must be careful when backing up, even when using Rear Cross Traffic Alert function. The driver's own visual confirmation of behind you and your vehicle is necessary and be sure there are no pedestrians, other vehicles etc. before backing up. Failure to do so could cause death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

The Rear Cross Traffic Alert function detection areas

The areas that vehicles can be detected in are outlined below.

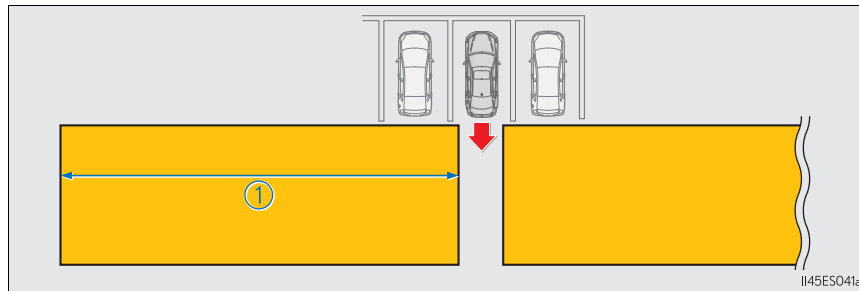

To give the driver a more consistent time to react, the buzzer can alert for faster vehicles from farther away.

Example:

Approaching vehicle	Speed	① Approximate alert distance
Fast	18 mph (28 km/h)	65 ft. (20 m)
Slow	5 mph (8 km/h)	18 ft. (5.5 m)

■ The Rear Cross Traffic Alert function is operational when

- The BSM main switch is set to on.
- The shift lever is in R.
- Vehicle speed is less than approximately 5 mph (8 km/h).
- Approaching vehicle speed is between approximately 5 mph (8 km/h) and 18 mph (28 km/h).

■ **Conditions under which the Rear Cross Traffic Alert function will not detect a vehicle**

The Rear Cross Traffic Alert function is not designed to detect the following types of vehicles and/or objects.


- Small motorcycles, bicycles, pedestrians etc. *
- Vehicles approaching from directly behind
- Guardrails, walls, signs, parked vehicles and similar stationary objects *
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle *
- Vehicles backing up in the parking space next to your vehicle *

*: Depending on conditions, detection of a vehicle and/or object may occur.

■ **Conditions under which the Rear Cross Traffic Alert function may not function correctly**

The Rear Cross Traffic Alert function may not detect vehicles correctly in the following conditions:

- When ice or mud etc. is attached to the rear bumper
- During bad weather such as heavy rain, fog, snow etc.
- When multiple vehicles approach continuously
- Shallow angle parking
- When a vehicle is approaching at high speed
- When parking on a steep incline, such as hills, a dip in the road etc.
- Directly after the BSM main switch is set to on
- Vehicles that the sensors cannot detect because of obstacles

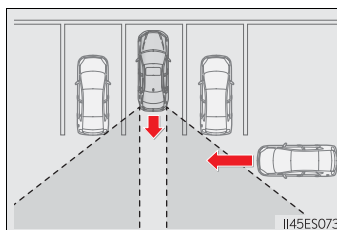

Hybrid vehicle driving tips (hybrid vehicles)

For economical and ecological driving, pay attention to the following points:

Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P. 296)

Use of Hybrid System Indicator

The Eco-friendly driving is possible by keeping the indicate of Hybrid System Indicator within Eco area. (→P. 96)

When braking the vehicle

Make sure to operate the brakes gently and in good time. A greater amount of electrical energy can be retained when slowing down.

Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel consumption. Check traffic reports before leaving and avoid delays as much as possible. When encountering a delay, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

Highway driving

Control your speed and keep at a constant speed. Also, before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be retained when slowing down.

Air conditioning

Use the air conditioning only when necessary. Doing so can help control excessive gasoline consumption.

In summer: In high temperatures, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioner and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until the gasoline engine and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel consumption.

Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel consumption. Use a tire that is appropriate for the season.

Luggage

Carrying heavy luggage can lead to poor fuel consumption. Avoid carrying unnecessary luggage. Installing a large roof rack can also cause poor fuel consumption.

Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to poor fuel consumption.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
 - Engine oil
 - Engine coolant
 - Power control unit coolant (hybrid vehicles)
 - Washer fluid
- Have a service technician inspect the condition of the 12-volt battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the specified size and brand, and that chains match the size of the tires.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle

Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If necessary, block the wheels to prevent inadvertent sliding or creeping.

Selecting tire chains

Use the correct tire chain size when mounting the tire chains.


Chain size is regulated for each tire size.

► Side chain

- ① 0.12 in. (3 mm) in diameter
- ② 0.39 in. (10 mm) in width
- ③ 1.18 in. (30 mm) in length

► Cross chain

- ④ 0.16 in. (4 mm) in diameter
- ⑤ 0.55 in. (14 mm) in width
- ⑥ 0.98 in. (25 mm) in length

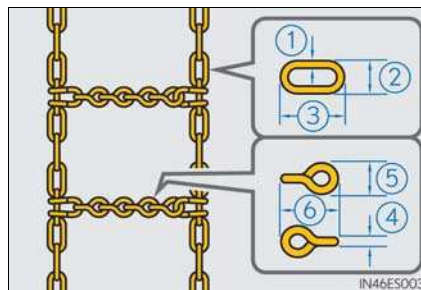

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 1/4 — 1/2 mile (0.5 — 1.0 km).
- Install tire chains following the instructions provided with the tire chains.

Shifting the windshield wiper position


If heavy snow or icy condition is expected, shift the rest position manually. Grip the hook section of the wiper arm firmly when shifting the wiper position.

■ To rest position

Raise the wiper in line with the windshield until it locks.


You can stand the wipers up for the rest position.


★: More than 39 in. (10 cm)

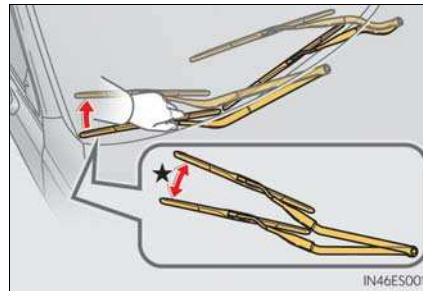

■ To retract position

Lower the wipers by pressing on the upper part of the hook section.

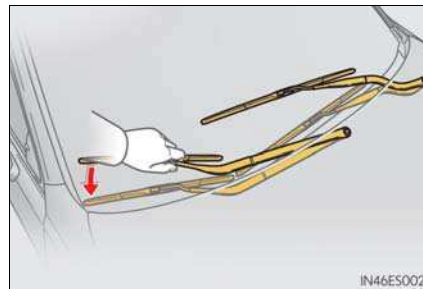

 CAUTION**■ Driving with snow tires**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive in excess of 75 mph (120 km/h), regardless of the type of snow tires being used.
- Use snow tires on all, not just some wheels.

■ Driving with tire chains

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 30 mph (50 km/h), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LDA (Lane Departure Alert) system.

 NOTICE**■ Repairing or replacing snow tires**

Request repairs or replacement of snow tires from Lexus dealers or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

■ Fitting tire chains

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

■ When standing the windshield wipers up


Raise the wipers in line with the windshield. (→P. 329)

Failure to do so may result in damage to the wipers and/or the hood.

Lexus Display Audio system*

By using the Lexus Display Audio controller, you can control the audio system and hands-free system, etc.

Lexus Display Audio controller

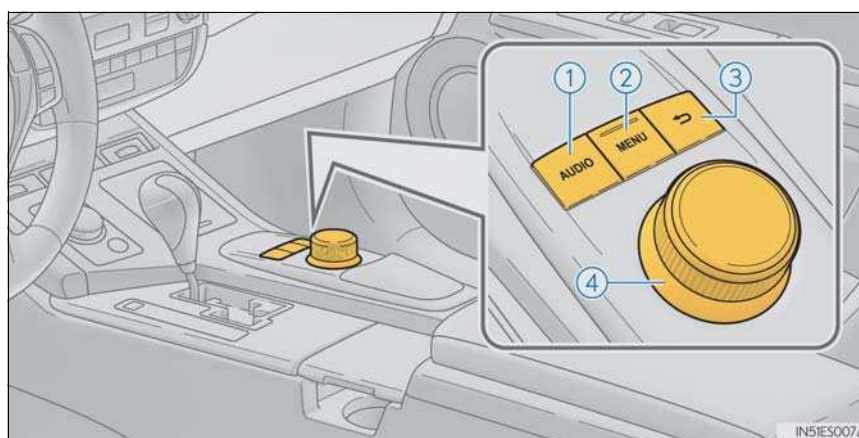

- ① Displaying the audio control screen (→P. 376)
- ② Displaying the “Menu” screen (→P. 335)
- ③ Displaying the previous screen
- ④ Turn or move the controller to select a function, number and screen button.
Push the controller to enter the selected function, number and screen button.

*: If equipped

“Menu” screen

To display the “Menu” screen, press the “MENU” button on the Lexus Display Audio controller.



Button	Function
“Climate”	Automatic air conditioning system (→P. 347)
“Phone”	Hands-free system (→P. 444)
“Car”	Vehicle information (→P. 108)
“Setup”	Setup menu (→P. 341)
“Display”	Display settings (→P. 339)

Initial screen

If the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the initial screen will be displayed for a few seconds as the system starts up.


Images shown on the initial screen can be changed to image1 or image2.
(→P. 342)



Lexus Display Audio system operation


■ **Using the Lexus Display Audio controller**


- ① Select: Turn or move the controller.
- ② Enter: Push the controller.

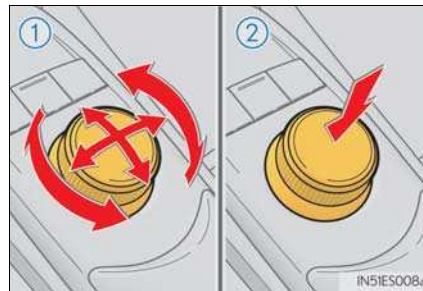


■ **Basic screen operation**

When a list is displayed, use the appropriate button to scroll through the list.

: This indicator turn on when the list box is selected.


:
To scroll to the next or previous page.

:
To return to the previous screen.



■ **When using the screen**

- Under extremely cold conditions, the Lexus Display Audio controller may react slowly.
- If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display Settings" screen (→P. 339) or remove your sunglasses.

 **CAUTION**

■ **Using the Lexus Display Audio controller**

- Do not allow fingers, fingernails or hair to become caught in the Lexus Display Audio controller as this may cause an injury.
- Be careful when touching the Lexus Display Audio controller in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

 **NOTICE**

■ **To prevent the Lexus Display Audio controller malfunction**

- Do not allow the Lexus Display Audio controller to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Lexus Display Audio controller to excessive pressure or strong impact as the controller may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Lexus Display Audio controller as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Lexus Display Audio controller.
- If your hand or any object is on the Lexus Display Audio controller when the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY mode, the Lexus Display Audio controller may not operate properly.

Display settings

You can adjust the contrast and brightness of the screen and also turn the display off.

To display the “Display Settings” screen, press the “MENU” button on the Lexus Display Audio controller and then select “Display” on the “Menu” screen.

① Turns off screen

The screen is turned off. To turn it on, press the “AUDIO” or “MENU” button on the Lexus Display Audio controller.

② Changes to day mode (→P. 339)

③ Adjusts screen contrast/brightness (→P. 340)

④ Adjusts screen contrast/brightness of rear view monitor camera (→P. 340)



5

Interior features

Changing between day mode and night mode

When the headlights are turned on, the screen dims.

However, the screen can be switched to day mode by selecting “Day Mode”.

If the screen is set in day mode with the headlight switch turned on, this condition is memorized even with the “START STOP ENGINE” <“POWER”> switch is turned off.

Adjusting the screen contrast/brightness

- 1 Select "General" or "Camera" on the "Display Settings" screen.
- 2 Adjust the display as desired using "+" or "-".
Select "Contrast" or "Brightness" using the "<<" or ">>".



	" - "	" + "
"Contrast"	Weaker	Stronger
"Brightness"	Darker	Brighter

- 3 Select "OK".

Setup menu

You can change the Lexus Display Audio system to your desired setting.

To display the "Setup" screen, press the "MENU" button on the Lexus Display Audio controller and then select "Setup" on the "Menu" screen.



Button	Page
"General"	P. 342
"Voice"	P. 346
"Bluetooth [*] "	P. 452
"Phone"	P. 471
"Audio"	P. 345
"Vehicle"	P. 344

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


General settings

This screen is used for various settings.

- 1 Display the "Setup" screen. (→P. 341)
- 2 Select "General" on the "Setup" screen.

▶ Page 1

▶ Page 2

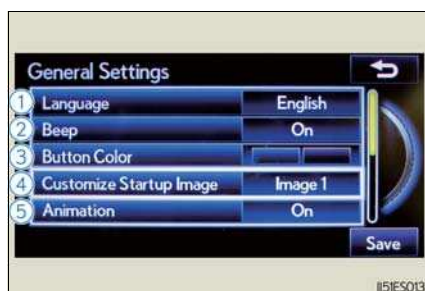

- 1 Select language (→P. 343)
 - 2 Beep on/off
 - 3 Select button color
 - 4 Customize Startup Image

The initial screen displayed when the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY or IGNITION ON <ON> mode can be changed to image 1, or image 2 which displays the vehicle screen.
 - 5 Animation on/off

The animation effect for audio source selection screen, screen transitions, etc. can be set to "On" or "Off".
 - 6 Personal data can be deleted. (→P. 343)
- 3 When you complete settings, select "Save".

■ Selecting a language

- 1 Select "Language" on the "General Settings" screen.
- 2 Select the desired language.

The selectable languages may differ depending on the model or region.



■ Delete personal data

- 1 Select "Delete Personal Data" on the "General Settings" screen.
- 2 Select "Delete".

Check carefully beforehand, as data cannot be retrieved once deleted.



- 3 A confirmation screen will be displayed. Select "Yes".


The following personal data can be deleted or turned to their default settings.

- Phonebook data
- Call history data
- Speed dial data
- Bluetooth® devices data
- Phone sound settings
- Detailed Bluetooth® settings
- Sound settings
- Preset switch data
- Last used radio station

Vehicle settings

This screen is used for various vehicle settings.

- 1 Display the "Setup" screen. (→P. 341)
- 2 Select "Vehicle" on the "Setup" screen.
 - ① Vehicle customization settings (→P. 344)
 - ② LEXUS park assist settings* (→P. 279)

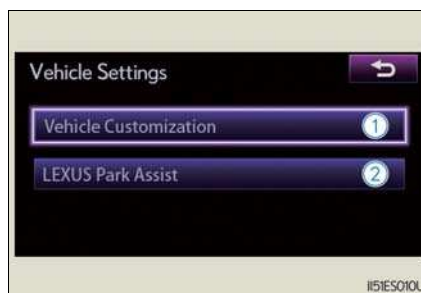

■ Vehicle customization settings

Various setting can be changed.

- 1 Select "Vehicle Customization" on the "Vehicle Settings" screen.

Refer to the list of settings that can be changed for details. (→P. 853)




- 2 When you complete settings, select "Save".

*: If equipped

Audio settings

This screen is used for various audio settings.

- 1 Display the "Setup" screen. (→P. 341)
- 2 Select "Audio" on the "Setup" screen.
 - ① HD Radio™ technology settings (→P. 385)
 - ② iPod setting (→P. 345)

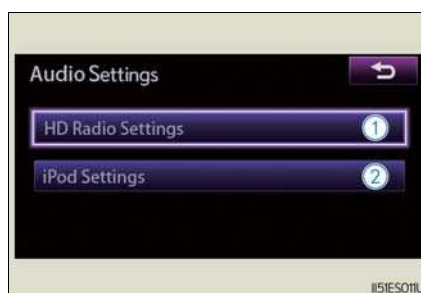


- 3 When you complete settings, select "Save".

■ iPod setting

This screen is used for iPod setting.

- 1 Select "iPod Settings" on the "Audio Settings" screen. (→P. 345)
- 2 Select "Display Cover Art".

"On" or "Off" can be selected to display/iPod cover art in the screen.

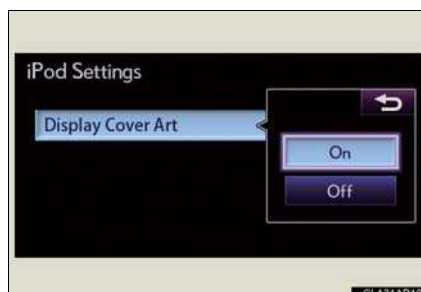

Voice settings

This screen is used for guidance for Bluetooth® hands-free systems setting.

- 1 Display the "Setup" screen. (→P. 341)
- 2 Select "Voice" on the "Setup" screen.
 - 1 Voice guidance volume setting
 - 2 Voice recognition prompts on/off
 - 3 Restore default settings



- 3 When you complete settings, select "OK".

Automatic air conditioning system (with the Lexus Display Audio system)

Air outlets and fan speed are automatically adjusted according to the temperature setting.

To display the air conditioning operation screen, press the "MENU" button on the Lexus Display Audio controller and then select "Climate".

- ▶ Vehicles with a navigation system
Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".
- ▶ Vehicles without a navigation system or the Lexus Display Audio system
→P. 359

Control panel




- | | |
|-------------------------------------|--|
| ① Air conditioning operation screen | ⑨ Passenger's side temperature control buttons |
| ② Outside temperature display | ⑩ Passenger's side temperature display |
| ③ Automatic mode button | ⑪ Outside/recirculated air mode button |
| ④ "OFF" button | ⑫ Driver's side temperature display |
| ⑤ Fan speed control button | ⑬ Driver's side temperature control buttons |
| ⑥ Air outlet selector button | |
| ⑦ Windshield defogger button | |
| ⑧ DUAL mode button | |

Automatic air conditioning system control screen





- ① Adjusting driver's side temperature setting
- ② Adjusting passenger's side temperature setting
- ③ Adjusting the fan speed
- ④ Selecting air outlet mode
- ⑤ Cooling and dehumidification function on/off
- ⑥ Dual mode on/off
- ⑦ Micro dust and pollen filter on/off
- ⑧ Windshield wiper de-icer on/off

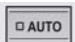



Using the automatic air conditioning system





- 1 Press .


The air conditioning system begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.



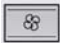

- 2 Press  or select  of the "TEMP" to increase the temperature and  or  to decrease the temperature.



When  is selected (the indicator on  is on) or the passenger's side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.


Adjusting the settings manually

- 1 To turn on the air conditioning system and adjust the fan speed, press  on  to increase the fan speed and  to decrease the fan speed or select ">" of  to increase the fan speed and "<" to decrease the fan speed.

Press  to turn the fan off.

- 2 To adjust the temperature setting, press  or select  of the "TEMP" to increase the temperature and  or  to decrease the temperature.

When  is selected (the indicator on  is on) or the passenger's side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.

- 3 To change the air outlets, press  or select an air outlet switch on the operation screen.




Defogging the windshield


Press .

The dehumidification function operates and fan speed increases.

Set the outside/recirculated air mode button to outside air mode if the recirculated air mode is used. (It may switch automatically.)


To defog the windshield and the side windows early, turn the air flow and temperature up.

To return to the previous mode, press  again when the windshield is defogged.

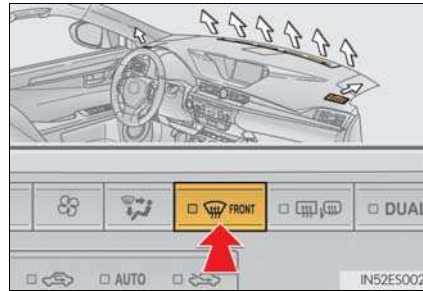


Air outlets and air flow


Upper body

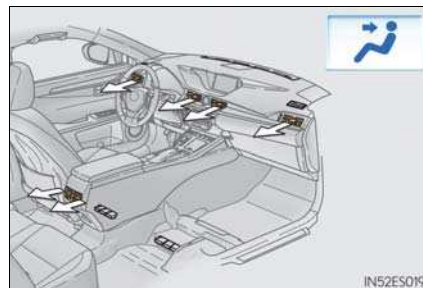


Upper body and feet

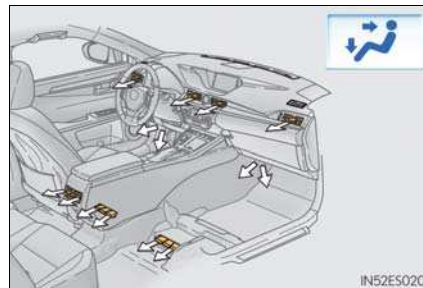

Feet

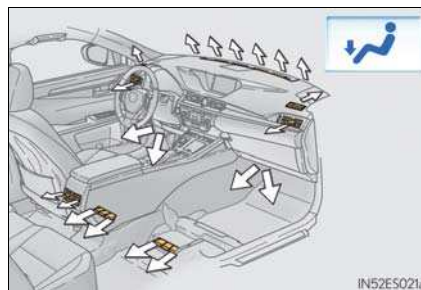

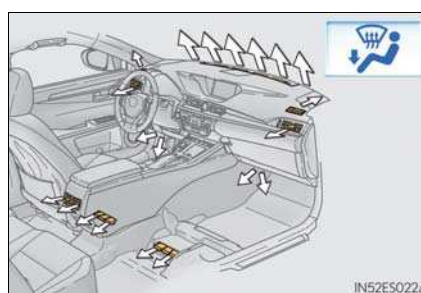

Feet and windshield



Switching between outside air and recirculated air modes


Press .

The mode switches among  (recirculated air mode), automatic and  (outside air mode) modes each time the button is pressed.

When the system is switched to automatic mode, the air conditioning system operates automatically.

Micro dust and pollen filter button

Operates micro dust and pollen filter on/off.

Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.


Usually the system will turn off automatically after approximately 1 to 3 minutes.



Adjusting the position of and opening and closing the air outlets


■ Front center outlets and front side outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

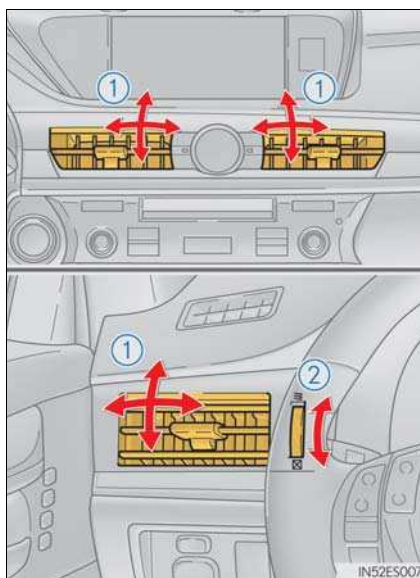

■ Rear seat outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

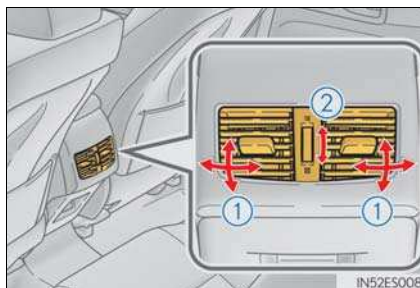

■ Registering air conditioning settings to electronic keys

- Unlocking the vehicle using an electronic key and turning the “START STOP ENGINE” <“POWER”> switch to IGNITION ON <ON> mode will recall that key’s registered air conditioning settings.
- When the “START STOP ENGINE” <“POWER”> is turned off, the current air conditioning settings will automatically be registered to the electronic key that was used to unlock the vehicle.


The system may not operate correctly if more than one electronic key is in the vicinity or if the smart access system with push-button start is used to unlock a passenger door.

■ Air conditioning system settings



- When the “START STOP ENGINE” <“POWER”> switch is turned on, the air conditioning system settings will be set to those that were in use the last time the “START STOP ENGINE” <“POWER”> switch was turned off.
- Air conditioning system settings are memorized individually on each electronic key, so the settings reproduced will be specific to the key that is used.
- This feature is customizable at your Lexus dealer.

■ Using automatic mode

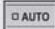Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after  is pressed.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Selecting  on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn  off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.


■ Windshield fog detection function (if equipped)

When automatic mode is set, the humidity sensor (→P. 358) detects fog on the windshield and controls the air conditioning system to prevent fog.

■ Outside/recirculated air mode

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ **When the outside temperature exceeds 75°F (24°C) and the air conditioning system is on**

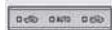

- In order to reduce the air conditioning power consumption, the air conditioning system may switch to recirculated air mode automatically. This may also reduce fuel consumption.
- Recirculated air mode is selected as a default mode when the “START STOP ENGINE” <“POWER”> switch is turned on.
- It is possible to switch to outside air mode at any time by pressing .

■ **Automatic mode for air intake control**

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the dehumidification function is off, and the fan is operating, turning automatic mode on will activate the dehumidification function.

■ **Micro dust and pollen filter**

- In order to prevent the windshield from fogging up when the outside air is cold, the following may occur:
 - Outside air mode does not switch to  (recirculated air) mode.
 - The dehumidification function operates.
 - The operation cancels after approximately 1 minute.
- In rainy weather, the windows may fog up. Press .
- In extremely humid weather, the windows may fog up.
- The pollens are filtered out even if the micro dust and pollen filter is turned off.

■ **Operation of the air conditioning system in Eco drive mode**


In the Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

■ **When the outside temperature falls to nearly 32°F (0°C)**

The dehumidification function may not operate even when  is pressed.

■ Air conditioning odors

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.


■ Air conditioning filter

→P. 708

■ Customization

Settings (e.g. exhaust gas sensor sensitivity) can be changed.
(Customizable features →P. 853)

⚠ CAUTION**■ To prevent the windshield from fogging up**

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

 NOTICE**■ Humidity sensor (if equipped)**


In order to detect fog on the windshield, a sensor which monitors the temperature of the windshield, the surround humidity, etc. is installed. (→P. 355)

Follow these points to avoid damaging the sensor:

- Do not disassemble the sensor
- Do not spray the glass cleaner on the sensor or subject it to strong impacts
- Do not stick anything on the sensor

■ To prevent 12-volt battery discharge

Do not leave the air conditioning system on longer than necessary when the engine <hybrid system> is off.

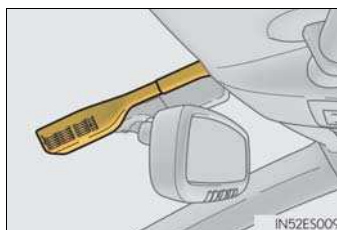

Automatic air conditioning system (without a navigation system or the Lexus Display Audio system)

Air outlets and fan speed are automatically adjusted according to the temperature setting.

- ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

- ▶ Vehicles with the Lexus Display Audio system

→P. 347




- ① Driver's side temperature display
- ② Airflow display
- ③ Fan speed display
- ④ Outside temperature
- ⑤ Passenger's side temperature display
- ⑥ Air outlet selector button
- ⑦ Cooling and dehumidification function on/off button
- ⑧ DUAL mode button
- ⑨ Passenger's side temperature control button
- ⑩ Micro dust and pollen filter button
- ⑪ Outside air or recirculated mode button
- ⑫ Off button
- ⑬ Driver's side temperature control button
- ⑭ Automatic mode button
- ⑮ Fan speed control button
- ⑯ Windshield defogger button


Using the automatic air conditioning system



- 1 Press .

The dehumidification function begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting and humidity.




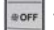




- 2 Press  to switch to automatic air intake mode.

The air conditioning system automatically switches between outside air and recirculated air modes.

- 3 Press “^” on  to increase the temperature and “v” to decrease the temperature.

When  is selected (the indicator on  is on) or the passenger's side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.

Adjusting the settings manually

- 1** To adjust the fan speed, select  on  to increase the fan speed and  to decrease the fan speed. Press  to turn the fan off.
- 2** To adjust the temperature setting, press “^” on  to increase the temperature and “v” to decrease the temperature. When  is selected (the indicator on  is on) or the passenger’s side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.
- 3** To change the air outlets, press . The air outlets used are switched each time the switch is pressed.

Defogging the windshield


Press .


The dehumidification function operates and fan speed increases.

Set the outside/recirculated air mode button to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows early, turn the air flow and temperature up.


To return to the previous mode, press

 again when the windshield is defogged.

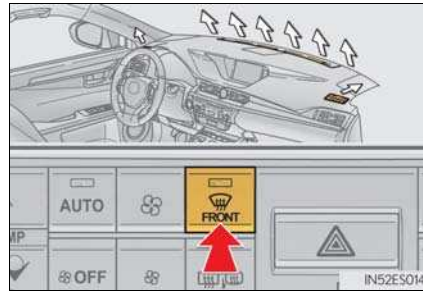


Air outlets and air flow


Upper body

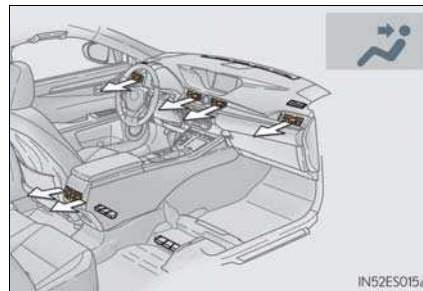


Upper body and feet

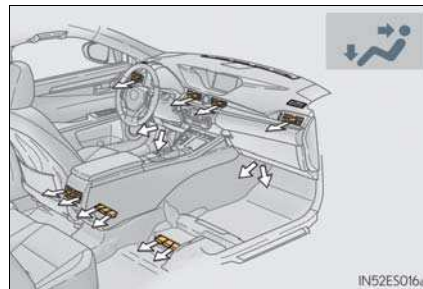

Feet

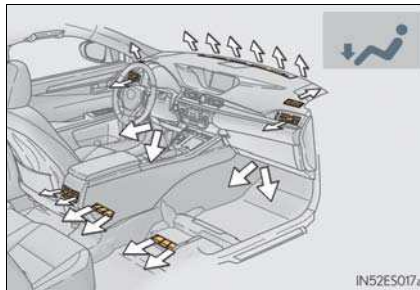

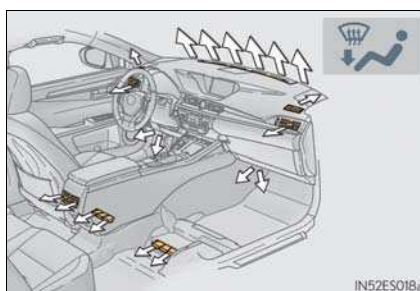

Feet and windshield



Switching between outside air and recirculated air modes


Press .

The mode switches among  (recirculated air mode), automatic and  (outside air mode) modes each time the button is pressed.


When the system is switched to automatic mode, the air conditioning system operates automatically.

Micro dust and pollen filter button


Operates micro dust and pollen filter on/off.


Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.


Usually the system will turn off automatically after approximately 1 to 3 minutes.

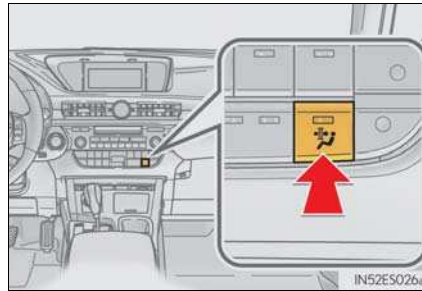


Adjusting the sensitivity of the air intake control in automatic mode

- 1 Press  for 2 or more seconds.

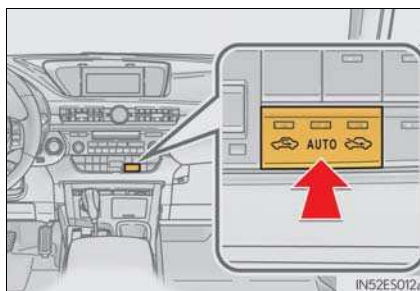


- 2 Press “^” (increase) or “v” (decrease) on . From - 3 (low) to 3 (high) can be set.

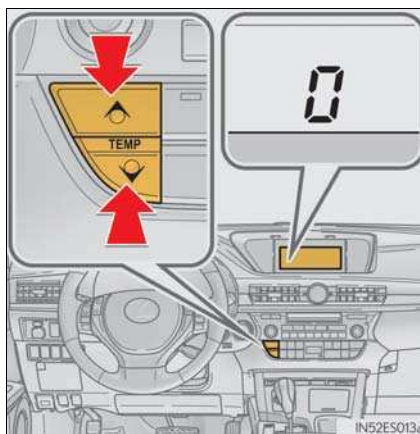

Adjusting the position of and opening and closing the air outlets


■ Front center outlets and front side outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

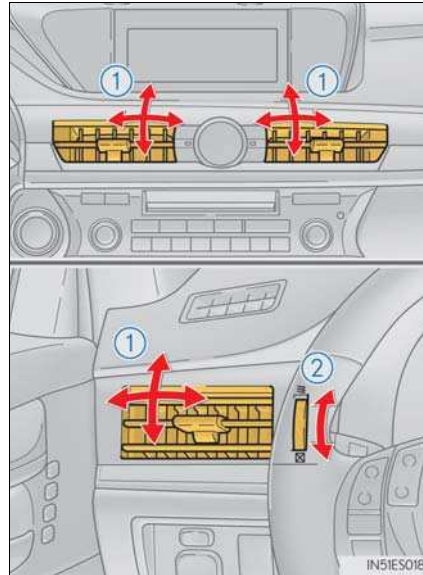

■ Rear seat outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

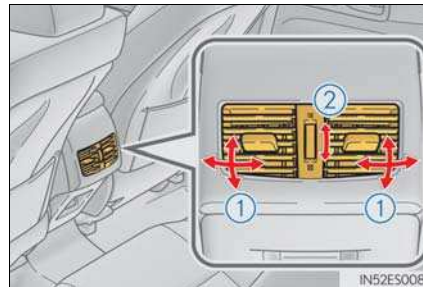

■ Registering air conditioning settings to electronic keys

- Unlocking the vehicle using an electronic key and turning the “START STOP ENGINE” <“POWER”> switch to IGNITION ON <ON> mode will recall that key’s registered air conditioning settings.
- When the “START STOP ENGINE” <“POWER”> is turned off, the current air conditioning settings will automatically be registered to the electronic key that was used to unlock the vehicle.


The system may not operate correctly if more than one electronic key is in the vicinity or if the smart access system with push-button start is used to unlock a passenger door.

■ Air conditioning system settings



- When the “START STOP ENGINE” <“POWER”> switch is turned on, the air conditioning system settings will be set to those that were in use the last time the “START STOP ENGINE” <“POWER”> switch was turned off.
- Air conditioning system settings are memorized individually on each electronic key, so the settings reproduced will be specific to the key that is used.
- This feature is customizable at your Lexus dealer.

■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after  is pressed.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Selecting  on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn  off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.


■ Windshield fog detection function (if equipped)

When automatic mode is set, the humidity sensor (→P. 371) detects fog on the windshield and controls the air conditioning system to prevent fog.

■ Outside/recirculated air mode

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ **When the outside temperature exceeds 75°F (24°C) and the air conditioning system is on**



- In order to reduce the air conditioning power consumption, the air conditioning system may switch to recirculated air mode automatically. This may also reduce fuel consumption.
- Recirculated air mode is selected as a default mode when the “START STOP ENGINE” <“POWER”> switch is turned on.
- It is possible to switch to outside air mode at any time by pressing  .

■ **Automatic mode for air intake control**

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the dehumidification function is off, and the fan is operating, turning automatic mode on will activate the dehumidification function.

■ **Micro dust and pollen filter**

- In order to prevent the windshield from fogging up when the outside air is cold, the following may occur:
 - Outside air mode does not switch to  (recirculated air) mode.
 - The dehumidification function operates.
 - The operation cancels after approximately 1 minute.
- In rainy weather, the windows may fog up. Press  .
- In extremely humid weather, the windows may fog up.
- The pollens are filtered out even if the micro dust and pollen filter is turned off.

■ **Operation of the air conditioning system in Eco drive mode**

In the Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

■ **When the outside temperature falls to nearly 32°F (0°C)**

The dehumidification function may not operate even when  is pressed.

■ **Air conditioning odors**


- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

■ **Air conditioning filter**


→P. 708

■ **Customization**

Settings (e.g. exhaust gas sensor sensitivity) can be changed.
(Customizable features →P. 853)

 **CAUTION**

■ **To prevent the windshield from fogging up**

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

 NOTICE**■ Humidity sensor (if equipped)**


In order to detect fog on the windshield, a sensor which monitors the temperature of the windshield, the surround humidity, etc. is installed. (→P. 368)

Follow these points to avoid damaging the sensor:

- Do not disassemble the sensor
- Do not spray the glass cleaner on the sensor or subject it to strong impacts
- Do not stick anything on the sensor

■ To prevent 12-volt battery discharge

Do not leave the air conditioning system on longer than necessary when the engine <hybrid system> is off.

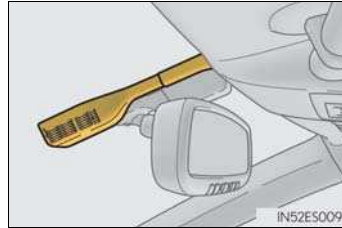

Rear window and outside rear view mirror defoggers

These features are used to defog the rear window, and to remove rain-drops, dew and frost from the outside rear view mirrors.


- ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

- ▶ Vehicles with the Lexus Display Audio system

On/off


The defoggers will automatically turn off after 15 to 60 minutes. The operation time changes according to the ambient temperature and vehicle speed.

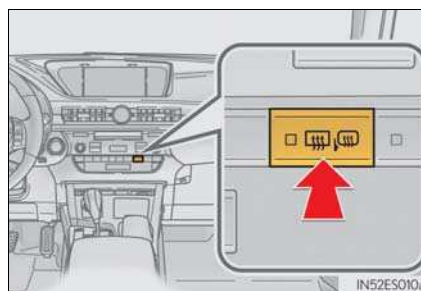

- ▶ Vehicles without a navigation system or the Lexus Display Audio system

On/off

The defoggers will automatically turn off after 15 to 60 minutes. The operation time changes according to the ambient temperature and vehicle speed.

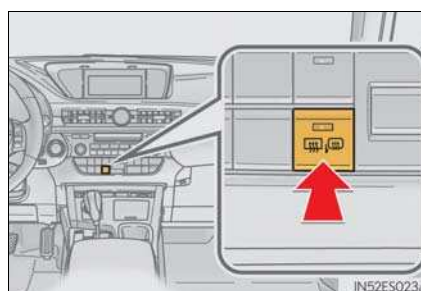

■ Operating conditions

The "START STOP ENGINE" <"POWER"> switch must be in the IGNITION ON <ON> mode.

⚠ CAUTION**■ When the outside rear view mirror defoggers are on**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

⚠ NOTICE**■ To prevent 12-volt battery discharge**

Turn the defoggers off when the engine <hybrid system> is off.

Windshield wiper de-icer*

This feature is used to prevent ice from building up on the windshield and wiper blades.

- ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

- ▶ Vehicles with the Lexus Display Audio system

1 Display the air conditioning operation screen. (→P. 347)

2 Select  to the windshield wiper de-icer on/off


The windshield wiper de-icer will automatically turn off after approximately 15 minutes.



- ▶ Vehicles without a navigation system and the Lexus Display Audio system

On/off

The windshield wiper de-icer will automatically turn off after approximately 15 minutes.

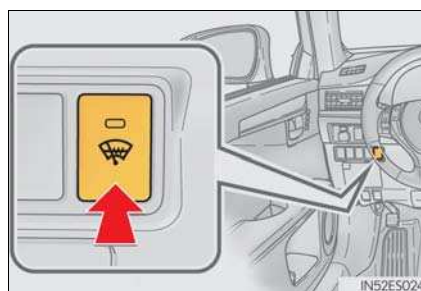

*: If equipped

■ Operating conditions

The "START STOP ENGINE" <"POWER"> switch must be in the IGNITION ON <ON> mode.

⚠ CAUTION**■ When the windshield wiper de-icer is on**

Do not touch the glass at the lower part of the windshield or to the side of the front pillars as the surfaces can become very hot and burn you.

Audio system (with the Lexus Display Audio system)

To display the audio control screen, press the “MEDIA” button, “RADIO” button or the “AUDIO” button on the Lexus Display Audio controller.

- ▶ Vehicles with a navigation system
 Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.
- ▶ Vehicles without a navigation system or a Lexus Display Audio system
 →P. 493




Button	Page
Using the radio	P. 379
Using the CD player	P. 394
Playing an audio CD and MP3/WMA discs	P. 395
Listening to an iPod	P. 405
Listening to a USB memory	P. 413
Using the AUX port	P. 422
Listening to Bluetooth® audio	P. 424
Optimal use of the audio system	P. 439
Using the steering wheel audio switches	P. 441
Hands-free system for cellular phone	P. 444

Switching the audio source

- 1 Press the “MEDIA” button, “RADIO” button or the “AUDIO” button on the Lexus Display Audio controller to display the audio control screen.
- 2 Select “Source” or press the “AUDIO” button on the Lexus Display Audio controller to display the audio source selection screen.


Each time the “MEDIA” button is pressed, an audio source other than radio is changed to.

Each time the “RADIO” button is pressed, radio mode is changed.
- 3 Select the desired audio source.

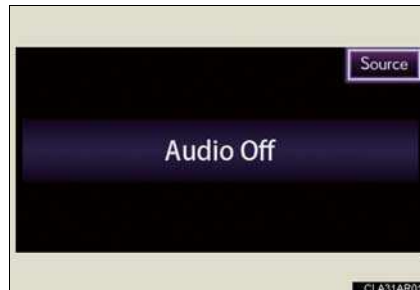

■ **Using cellular phones**

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

 **CAUTION**

■ **Certification**

● **Part 15 of the FCC Rules**

FCC Warning:

Any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

● **Laser products**

- USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
- THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

 **NOTICE**

■ **To prevent 12-volt battery discharge**

Do not leave the audio system on longer than necessary when the engine <hybrid system> is off.

■ **To avoid damaging the audio system**

Take care not to spill drinks or other fluids on the audio system.

Using the radio

Press the “RADIO” button or “AUDIO” button on the Lexus Display Audio controller and then select “AM”, “FM” or “SAT”.

Control panel



- ① Audio control screen
- ② Mute button
- ③ Frequency adjustment knob
- ④ Seek/preset station selector button
- ⑤ AM/FM/SAT mode buttons
- ⑥ Power
- ⑦ Volume

5

Interior features

Audio control screen

Pressing the “RADIO” button or “AUDIO” button on the Lexus Display Audio controller displays the audio control screen from any screens of the selected source.

► “Presets” screen

► “Options” screen



- ① “Options” screen appears
- ② Audio source selection screen appears
- ③ Changing the Multicast Ch
- ④ Information in the music under broadcasting is memorized
- ⑤ Selecting HD Radio™ technology
- ⑥ Setting the sound (→P. 439)
- ⑦ Displaying text messages
- ⑧ Scanning for receivable station
- ⑨ Preset stations
- ⑩ “Presets” screen appears
- ⑪ Selecting program type or channel category
- ⑫ RBDS message display on/off
- ⑬ Displaying traffic messages

Selecting a station

■ Seek tuning

Press and hold “^” or “v” on the “PRST•TRACK” button.

■ Manual tuning

Turn the “TUNE•SCROLL” knob.

■ Preset stations

Press “^” or “v” on the “PRST•TRACK” button or select desired preset stations.

Setting station presets (excluding XM[®] Satellite Radio)

Radio mode has a mix preset function, which can store up to 36 stations (6 station per page × 6 page) from any of the AM, FM or SAT bands.

- 1 Search for desired stations by turning the “TUNE•SCROLL” knob or pressing and holding “^” or “v” on the “PRST•TRACK” button.
- 2 Select and hold one of the preset stations (1-6 every page).

Scanning radio stations (excluding XM[®] Satellite Radio)

- 1 Select “SCAN” on the screen.

“SCAN” appears on the screen. The radio will find the next station and stay there for 10 seconds if “All” or “HD Only” is selected, or 5 seconds if “Analog” is selected (→P. 385), and then scan again.
- 2 Select “SCAN” once again when the desired station is reached.

RBDS (Radio Broadcast Data System)

This feature allows your radio to receive station identification information and program information (classical, jazz, etc.) from radio stations which broadcast this information. RBDS features are available only when listening to an FM station that broadcasts RBDS information and the “FM Info” indicator is on.

■ **Selecting a desired type**

- 1 Select “Options”.



- 2 Select “FM Info” to turn the indicator on.



- 3** Select “TYPE >” or “< TYPE” to select program types.

The type of program changes each time the button is selected.

- Classical
- Country
- EasyLis (Easy Listening)
- Inform (Information)
- Jazz
- News
- Oldies
- Other
- Pop Music
- Religion
- Rock
- R&B (Rhythm and Blues)
- Sports
- Talk
- Traffic (Not available when “HD Radio Settings” are set to analog)
- Alert (Emergency Alert)

When a program is set, “TYPE SEEK” appears.

- 4** Select “TYPE SEEK”.

The radio seeks or scans for stations by the relevant program type.

If no relevant program can be found, “no type” will appear on the screen.



■ **Traffic announcement**

Select “Traffic” on the “Options” screen.

“TRAF SEEK” appears on the screen, and the radio will start seeking any station broadcasting traffic program information.

If no traffic program station is found, “No Traffic” appears on the screen.



HD Radio™ technology information (if equipped)


HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

■ HD Radio™ technology settings

- 1 Display the “Setup” screen. (→P. 341)
- 2 Select “Audio” on the “Setup” screen.
- 3 Select “HD Radio Settings”.

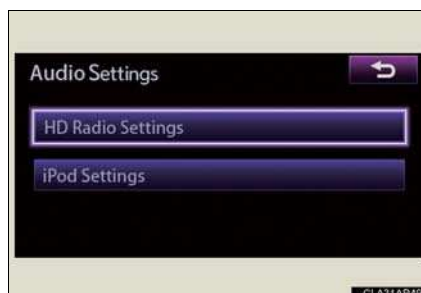

- 4 Select “HD Radio/Analog Settings”.

- 1 Receiving both analog and digital broadcasts
- 2 Receiving only digital broadcasts
- 3 Receiving only analog broadcasts



■ Using HD Radio™ technology

- 1 Select “HD Radio” portion to turn the indicator on.

The radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.

An orange “HD)” logo indicator will be displayed when in digital.



- 2 Search for desired stations by turning the “TUNE•SCROLL” knob or pressing and holding “^” or “v” on the “PRST•TRACK” button.

■ **Selecting a desired type**

- 1 Select "Options".
- 2 Select "TYPE >" or "< TYPE" to select program types.
The type of program changes each time the button is selected. (→P. 382)
When a program is set, "TYPE SEEK" appears.
- 3 Select "TYPE SEEK".

The radio seeks or scans for stations by the relevant program type.
If no relevant program can be found, "no type" will appear on the screen.

■ **Displaying text information**

Information such as the artist name, song title, album title and music genre being listened to are displayed on the text screen.

- 1 Select "Text".



- 2 Select "Additional Information" to display messages from the station.



■ Changing the multiple or supplemental programs

On the FM radio frequency most digital stations have multiple or supplemental programs on one FM station.

Select “Multicast”.

Each time “Multicast” is selected, the supplemental program changes.

If “Multicast” is selected when tuned to the last of the supplemental programs, the main program will be returned to.



■ Preserving tag information

Tag information in the music broadcasting is preserved in the system and transmits to an iPod.

- 1 Select “Tag” to bookmark the music information.



- 2 Connect iPod using an iPod cable. (→P. 405)

The music tag moves from the system into the iPod.

If tagging the music information fails, error message will be displayed on the screen. If this occurs, tag the information again.

Turn on the power of the iPod if it is not turned on.

When the iPod is connected to iTunes, the “tagged” information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album.

■ HD Radio™ technology troubleshooting guide

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Selecting "Analog" can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .

XM[®] Satellite Radio (if equipped)

■ Receiving XM[®] Satellite Radio

- 1 Press the "RADIO" button or select "SAT" on the audio source selection.
- 2 Turn the "TUNE•SCROLL" knob to select the desired channel in the all categories or press and hold "∧" or "∨" on the "PRST•TRACK" button to select the desired channel in the current category.

■ Setting XM[®] Satellite Radio channel presets

Select the desired channel. Select and hold one of the preset stations (1-6 every page).

■ Changing the channel category

- 1 Select "Options".



- 2 Select "TYPE >" or "<TYPE".



■ Scanning XM[®] Satellite Radio channels

Scanning channels in the current category

- 1 Select "SCAN" on the screen.
"SCAN" appears on the screen.
- 2 Select "SCAN" once again when the desired channel is reached.

■ Displaying the title and artist name

Select "Text".

The screen will show up to 64 characters.



■ When the 12-volt battery is disconnected

All preset stations are erased.

■ Reception sensitivity

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM[®] Satellite Radio.
- It is difficult to maintain perfect radio reception at all times due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains and transmitters.
- The radio antenna is mounted inside the trunk and the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

■ XM[®] Satellite Radio

An XM[®] Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous states and 10 Canadian provinces.

● XM[®] subscriptions

For detailed information about XM[®] Satellite Radio or to subscribe:
U.S.A. —

Visit on the web at www.siriusxm.com or call 1-866-635-2349.

Canada —

Visit on the web at www.xmradio.ca or call 1-877-438-9677.

● Radio ID

You will need the radio ID when activating XM[®] service or reporting a problem. Select "CH000" using the "TUNE•SCROLL" knob, and the receiver's 8-character ID number will appear.

● Satellite tuner

The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM[®] Satellite Radio.

■ **If the satellite radio does not operate normally**

If a problem occurs with the XM[®] tuner, a message will appear on the display. Refer to the table below to identify the problem, and take the suggested corrective action.

Message	Explanation
SAT Check Antenna	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Lexus certified dealer for assistance.
SAT Ch Unauthorized	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "CH 000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
SAT No Signal	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
Loading	The unit is acquiring audio or program information. Wait until the unit has received the information.
SAT Channel Off Air	The channel you selected is not broadcasting any programming. Select another channel.

Message	Explanation
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
SAT Chan Unavailable	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel.

Contact the XM[®] Listener Care Center at 1-866-635-2349 (U.S.A.) or 1-877-438-9677 (Canada).

■ Certifications for XM[®] Satellite Radio

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

Cet appareil est conforme au CNR-310 d'Industrie Canada. Son exploitation est autorisée sous réserve que l'appareil ne cause pas de brouillage préjudiciable.

Using the CD player



- ① Audio control screen
- ② Playback/Pause button
- ③ Track/file selector knob
- ④ Track/file selector button
- ⑤ Audio source selector button
- ⑥ Power
- ⑦ Volume
- ⑧ Eject button

Loading a disc

Insert a disc into the disc slot.

Ejecting a disc

Press  and remove the disc.

Playing an audio CD and MP3/WMA discs

Insert a disc or press the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller and then select “CD” with a disc inserted.

Audio control screen


Pressing the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller displays the audio control screen from any screens of the selected source.

▶ Audio CD



▶ MP3/WMA disc



- ① Audio source selection screen appears
- ② Displaying the track/file list
- ③ Select: Playing the previous track/file
Select and hold: Reversing a track/file
- ④ Pause
Select  to play
- ⑤ Select: Playing the next track/file
Select and hold: Fast-forwarding a track/file
- ⑥ Repeat play
- ⑦ Random playback
- ⑧ Setting the sound (→P. 439)
- ⑨ Displaying the folder list

Selecting, fast-forwarding and reversing tracks (Audio CD)


■ Selecting a track

Press “^” or “v” on the “PRST•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired track number.

To fast-forward or reverse, press and hold “v” or “^” on the “PRST•TRACK” button until you hear a beep.

■ Selecting a track from audio control screen

Select  or .

To fast-forward or reverse, select and hold  or  until you hear a beep.

■ Selecting a track from the track list

- 1 Select “Tracks” on the screen.
- 2 Select the desired track number.



Selecting, fast-forwarding and reversing files (MP3/WMA disc)



■ Selecting a file

Press “^” or “v” on the “PRST•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired file number.

To fast-forward or reverse, press and hold “v” or “^” on the “PRST•TRACK” button until you hear a beep.

■ Selecting a file from audio control screen

Select  or .

To fast-forward or reverse, select and hold  or  until you hear a beep.

■ Selecting a file from the file list

- 1 Select "Files" on the screen.
- 2 Select the desired file number.

**Selecting a folder (MP3/WMA disc)**

- 1 Select "Folders" on the screen.
- 2 Select the desired folder number.




- 3 Select the desired file number.




Random playback

Each time **RAND** is selected, the mode changes in the following order:

▶ Audio CD

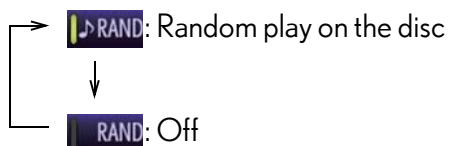

▶ MP3/WMA disc

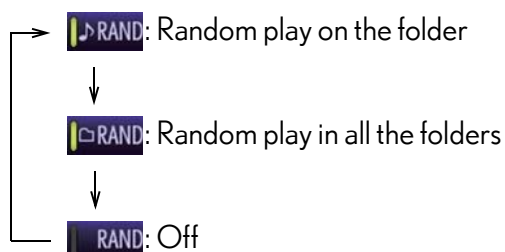


Repeat play

Each time **RPT** is selected, the mode changes in the following order:

▶ Audio CD



▶ MP3/WMA disc

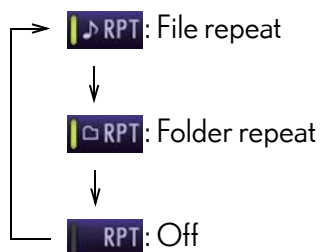

■ Displaying the title and artist name

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed.

■ Error messages

Refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

Message	Cause	Correction procedures
Check DISC	<ul style="list-style-type: none"> • The disc is dirty or damaged. • The disc is inserted upside down. • The disc is not playable with the player. 	<ul style="list-style-type: none"> • Clean the disc. • Insert the disc correctly. • Confirm the disc is playable with the player.
DISC Error	There is a malfunction within the system.	Eject the disc.
No music files found.	This indicates that no playable data is included in the disc.	Eject the disc.

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protection features may not play correctly.

■ CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected.

■ If disc is left inside the CD player or in the ejected position for extended periods

Disc may be damaged and may not play properly.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

■ MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

● MP3 file compatibility

- Compatible standards
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies
MPEG1 LAYER3: 32, 44.1, 48 (kHz)
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
MPEG1 LAYER3: 32–320 (kbps)
MPEG2 LSF LAYER3: 8–160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

● WMA file compatibility

- Compatible standards
WMA Ver. 7, 8, 9
- Compatible sampling frequencies
32, 44.1, 48 (kHz)
Compatible bit rates (only compatible with 2-channel playback)
Ver. 7, 8: CBR 48–192 (kbps)
Ver. 9: CBR 48–320 (kbps)

● Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible if the CD-R or CD-RW is not finalized. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used.

- Disc formats:
 - CD-ROM Mode 1 and Mode 2
 - CD-ROM XA Mode 2, Form 1 and Form 2
- File formats:
 - ISO9660 Level 1, Level 2, (Romeo, Joliet)
 - UDF (2.01 or lower)
 - MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- Discs containing multi-session recordings

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they may be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

- Playback


- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

 NOTICE


■ **CDs and adapters that cannot be used**

Do not use the following types of CDs, 3 in. (8 cm) CD adapters or Dual Discs. Doing so may damage the CD player and/or the CD load/eject function.


- CDs that have a diameter that is not 4.7 in. (12 cm)

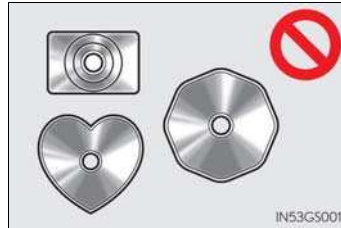


- Low-quality and deformed CDs

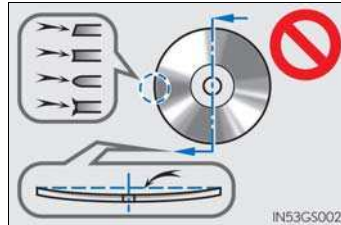

- CDs with a transparent or translucent recording area

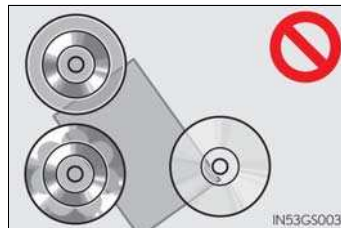

- CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off

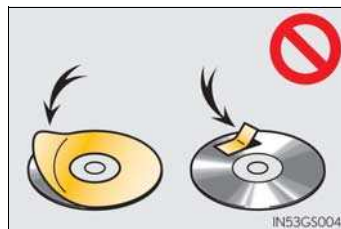

 NOTICE

■ **CD player precautions**

Failure to follow the precautions below may result in serious damage to the CDs or the player itself.

- Do not insert anything other than CDs into the CD slot.
- Do not apply oil to the CD player.
- Store CDs away from direct sunlight.
- Never try to disassemble any part of the CD player.


Listening to an iPod

Connecting an iPod enables you to enjoy music from the vehicle speakers.

Press the "MEDIA" button or the "AUDIO" button on the Lexus Display Audio controller and then select "iPod" with an iPod connected.


Connecting an iPod

- 1 Push the knob to release the lock, and lift the armrest to open fully.

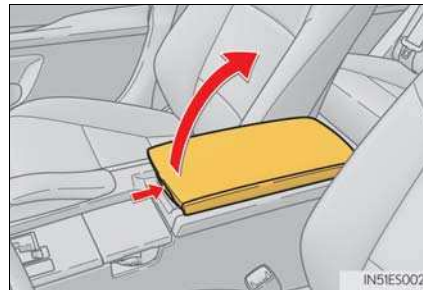

- 2 Open the cover and connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.

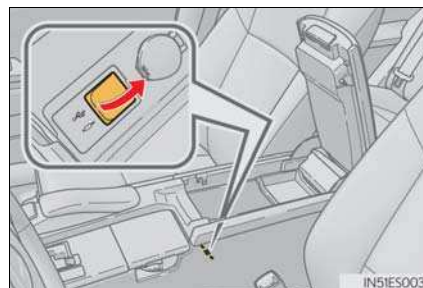


Control panel



- ① Audio control screen
- ② Playback/Pause button
- ③ Song selector knob
- ④ Song selector button
- ⑤ Audio source selector button
- ⑥ Power
- ⑦ Volume

Audio control screen

Pressing the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller displays the audio control screen from any screens of the selected source.

- ① iPod video mode
- ② Selecting the play mode
- ③ Audio source selection screen appears
- ④ Setting the sound (→P. 439)
- ⑤ Shuffle play
- ⑥ Repeat play
- ⑦ Select: Playing the next song
Select and hold: Fast-forwarding a song
- ⑧ Pause
Select  to playback
- ⑨ Select: Playing the previous song
Select and hold: Reversing a song
- ⑩ Displaying the song list



Selecting a play mode

- 1 Select "Browse" on the screen.
- 2 Select the desired play mode by selecting the "Playlists", "Artists", "Albums", "Songs", "Podcasts", "Audiobooks", "Genres" or "Composers" tabs.



Selecting, fast-forwarding and reversing songs



■ Selecting one song at a time

Press "∧" or "∨" on the "PRST•TRACK" button or turn the "TUNE•SCROLL" knob to select the desired song.

To fast-forward or reverse, press and hold "∨" or "∧" on the "PRST•TRACK" button until you hear a beep.


■ Selecting a song from audio control screen

Select  or .


To fast-forward or reverse, select and hold  or  until you hear a beep.


■ Selecting a song from the list

- 1 Select "Songs" on the screen.
- 2 Select the desired song.

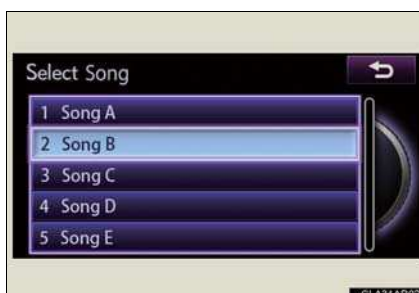


Shuffle play

Each time  is selected, the mode changes in the following order:

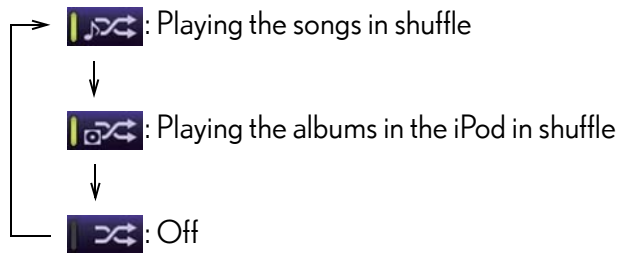


When a large number of songs is stored in an iPod, shuffle selection may take time.

Repeat play

Each time  is selected, the mode changes in the following order:



■ About iPod

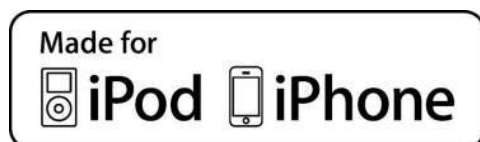


- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

■ iPod cover art

- Depending on the iPod and songs in the iPod, iPod cover art may be displayed.
- This function can be changed to "On" or "Off". (→P. 345)
- It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
- Only iPod cover art that is saved in a JPEG format can be displayed.

■ iPod functions

- When the iPod connected to the system includes iPod video, the system can only output the sound by selecting  on the "iPod" screen.
- Depending on the iPod, the video sound may not be able to be heard.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.
- When the battery level of an iPod is very low, the iPod may not operate. If so, charge the iPod before use.
- Supported models (→P. 411)

■ iPod problems

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it. For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

■ Error messages

"Connection error. Please consult your Owner's Manual for instructions on how to connect the iPod.":

This indicates a problem in the iPod or its connection.

"There are no songs available for playback. Please load compatible media to your iPod.":

This indicates that there is no music data in the iPod.


■ Compatible models

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

● Made for

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Depending on differences between models or software versions etc., some models might be incompatible with this system.

 **CAUTION**

■ **Caution while driving**

Do not connect iPod or operate the controls.

 **NOTICE**

■ **To prevent damage to iPod**

- Do not leave iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod or its terminal.
- Do not insert foreign objects into the port as this may damage the iPod or its terminal.


Listening to a USB memory

Connecting a USB memory enables you to enjoy music from the vehicle speakers.

Press the "MEDIA" button or the "AUDIO" button on the Lexus Display Audio controller and then select "USB" with a USB memory connected.


Connecting a USB memory

- 1 Push the knob to release the lock, and lift the armrest to open fully.

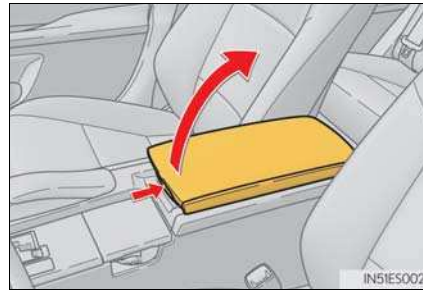

- 2 Open the cover and connect a USB memory.

Turn on the power of the USB memory if it is not turned on.

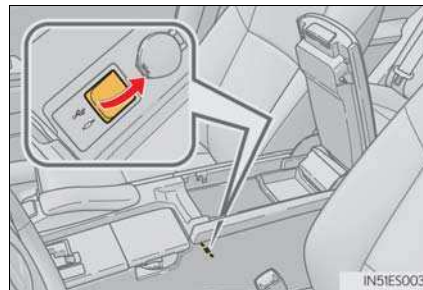


Control panel



- ① Audio control screen
- ② Playback/Pause button
- ③ File selector knob
- ④ File selector button
- ⑤ Audio source selector button
- ⑥ Power
- ⑦ Volume

Audio control screen

Pressing the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller displays the audio control screen from any screens of the selected source.

- ① Audio source selection screen appears
- ② Displaying the folder list
- ③ Displaying the file list
- ④ Select: Playing the previous file
Select and hold: Reversing a file
- ⑤ Pause
Select  to playback
- ⑥ Select: Playing the next file
Select and hold: Fast-forwarding a file
- ⑦ Repeat play
- ⑧ Random playback
- ⑨ Setting the sound (→P. 439)



Selecting, fast-forwarding and reversing files


■ Selecting one file at time

Press “^” or “v” on the “PRST•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired file.

To fast-forward or reverse, press and hold “v” or “^” on the “PRST•TRACK” button until you hear a beep.

■ Selecting a file from audio control screen

Select  or .

To fast-forward or reverse, select and hold  or  until you hear a beep.

■ Selecting a file from the list

- 1 Select “Files” on the screen.
- 2 Select the desired file number.



Selecting a folder

- 1 Select "Folders" on the screen.
- 2 Select the desired folder number.




- 3 Select the desired file number.



5

Random playback


Each time **RAND** is selected, the mode changes in the following order:

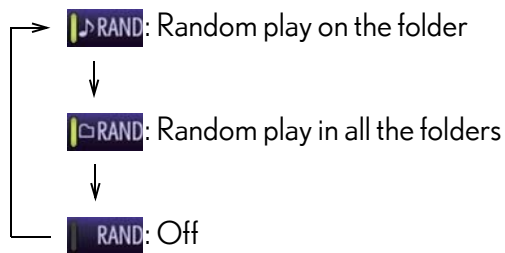

Interior features

Repeat play

Each time **RPT** is selected, the mode changes in the following order:

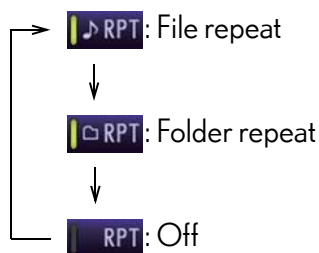

■ USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

■ Error messages for USB memory

“Connection error. Please consult your Owner’s Manual for instructions on how to connect the USB device.”:

This indicates a problem in the USB memory or its connection.

“No compatible audio files found. Please add compatible files to your USB device.”:

This indicates that no MP3/WMA files are included in the USB memory.

■ USB memory

● Compatible devices

USB memory that can be used for MP3 and WMA playback.

● Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 HS (480Mbps)
 - File formats: FAT16/32 (Windows)
 - Correspondence class: Mass storage class
- MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 3000 (including the root)
- Maximum number of files in a device: 9999
- Maximum number of files per folder: 255

● MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format. This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

- MP3 file compatibility
 - Compatible standards
MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
 - Compatible sampling frequencies
MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz)
MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz)
 - Compatible bit rates (compatible with VBR)
MPEG1 AUDIO LAYERII, III: 32-320 (kbps)
MPEG2 AUDIO LAYERII, III: 8-160 (kbps)
 - Compatible channel modes: stereo, joint stereo, dual channel and monaural
- WMA file compatibility
 - Compatible standards
WMA Ver. 7, 8, 9
 - Compatible sampling frequencies
HIGH PROFILE 32, 44.1, 48 (kHz)
 - Compatible bit rates
HIGH PROFILE 48-320 (kbps, VBR)
- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.
- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback


- When a device containing MP3 or WMA files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
- When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point in which it was last used.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

 **CAUTION**

- **Caution while driving**

Do not connect USB memories or operate the controls.

 **NOTICE**


- **To prevent damage to USB memories**

- Do not leave USB memories in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- Do not insert foreign objects into the port as this may damage the USB memory or its terminal.


Using the AUX port

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

- 1 Push the knob to release the lock, and lift the armrest to open fully.

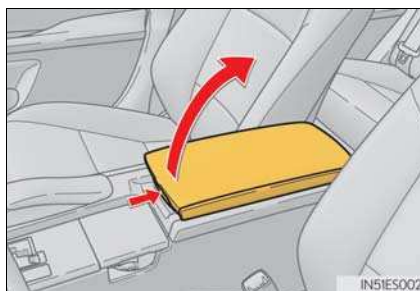

- 2 Open the cover and connect the portable audio device.

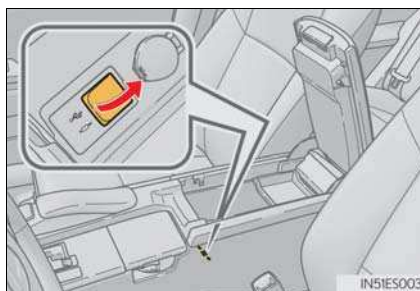



- 3 Press the "MEDIA" button or the "AUDIO" button on the Lexus Display Audio controller and then select "AUX".

■ Operating portable audio devices connected to the audio system

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.




■ When using a portable audio device connected to the power outlet

Noise may occur during playback. Use the power source of the portable audio device.

 CAUTION **Caution while driving**

Do not connect portable audio device or operate the controls.

 NOTICE **To prevent damage to portable audio device**

-  Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
-  Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
-  Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

Listening to Bluetooth® audio

The Bluetooth® audio system enables users to enjoy music played on a portable player from the vehicle speaker via wireless communication. This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

Press the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller and then select “Bluetooth*”.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Audio control screen

Pressing the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller displays the audio control screen from any screens of the selected source.

- ① Audio source selection screen appears
- ② Displaying the list
- ③ Connecting a Bluetooth® audio player
- ④ Displaying the track list
- ⑤ Select: Playing the previous track
Select and hold: Reversing a track
- ⑥ Playback
- ⑦ Pause
- ⑧ Select: Playing the next track
Select and hold: Fast-forwarding a track
- ⑨ Repeat play
- ⑩ Random playback
- ⑪ Setting the sound (→P. 439)



Some titles and controls may not be displayed depending on the type of portable audio player.








Status display

You can check such indicators as signal strength and battery charge on the screen.

- ① Connection status
- ② Battery charge



Indicators	Conditions		
Connection status	Good 	↔ 	No connection 
Battery charge	Full 	↔ 	Empty 

5


Interior features

Registering a Bluetooth® audio player

To use the Bluetooth® audio system, you need to register your portable audio player into the system. Once registered, you can enjoy your music on the vehicle's audio system.

You can register up to 5 devices in the system.

- 1 Display the "Bluetooth* Audio" screen.
- 2 Select "Connect".

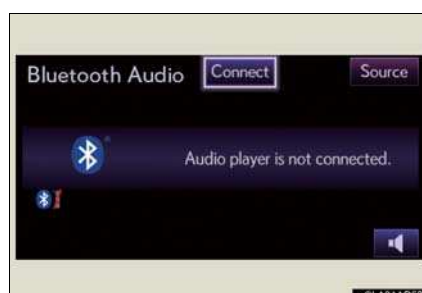

- 3 Select "Yes".



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 4 Input the passcode displayed on the screen into your portable audio player.

For the operation of the portable audio player, see the manual that comes with your portable audio player.

Passcodes are not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the device, you may need to select “Yes” to register, or “No” to cancel on your Bluetooth® device.

If you want to cancel it, select “Cancel”.

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.



Selecting the Bluetooth® audio player

If multiple Bluetooth® devices are registered, follow the procedure below to select the Bluetooth® device to be used. You may only use one device at a time.

- 1 Display the "Bluetooth* Audio" screen.
- 2 Select "Connect".



- 3 Select the device to connect.

"Add New": Registering a Bluetooth® device. (→P. 485)

The selection indicator is displayed on left side of the selected device name.

The Bluetooth® mark is displayed when you connected the device.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Connecting the Bluetooth® audio player

There are two connection methods available.

■ When the connection method is set to “From Vehicle”

When the portable audio player is on standby for the connection, it will be automatically connected whenever the “START STOP ENGINE” <“POWER”> switch is in either ACCESSORY or IGNITION ON <ON> mode.

■ When the connection method is set to “From Audio Player”

Operate the portable player and connect it to the Bluetooth® audio system.

- 1 Display the “Bluetooth* Audio” screen.
- 2 Select “Connect”.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3 Select the device to connect.

A message is shown if connection has been successful.
If connection fails, a message will be displayed and connection will be re-attempted.



Selecting, fast-forwarding and reversing tracks

■ **Selecting a track**

Press “^” or “v” on the “PRST•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired track number.

To fast-forward or reverse, press and hold “v” or “^” on the “PRST•TRACK” button until you hear a beep.

■ **Selecting a track from audio control screen**

Select or .

To fast-forward or reverse, select and hold or until you hear a beep.

■ **Selecting a track from the list**

► From “Tracks”

1 Select “Tracks” on the screen.

2 Select the desired track.




▶ From “Browse”

- 1 Select “Browse” on the screen.
- 2 Select the desired item.

Continue to select the applicable screen button until its track list is displayed.




- 3 Select the desired track.

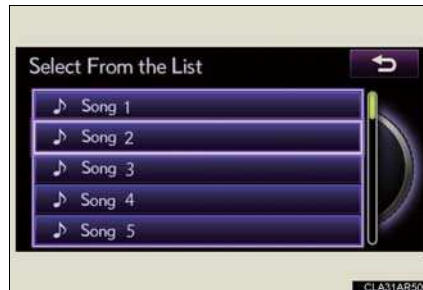

5

Random playback

Each time **RAND** is selected, the mode changes in the following order:

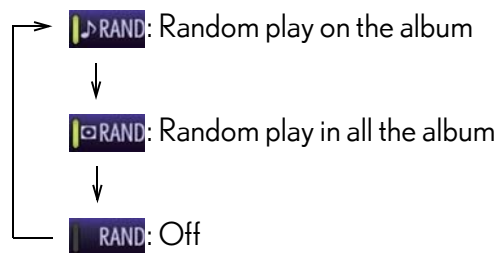

Interior features

Repeat play

Each time **RPT** is selected, the mode changes in the following order:



■ When using the Bluetooth® audio system

- In the following conditions, the system may not function.
 - If the portable audio player is turned off
 - If the portable audio player is not connected
 - If the portable audio player's battery is low
 - If the portable player is behind the seat or in the glove box or console box
 - If metal is covering or touching the portable player
- There may be a delay if phone connection is carried out during Bluetooth® audio play.
- Depending on the type of portable audio player that is connected to the system, operation may differ slightly and certain functions may not be available.

■ Bluetooth® antenna

The antenna is built into the display. If the portable audio player is behind the seat or in the glove box or console box, or is touching or covered by metal objects, connection status may deteriorate.

■ Battery charge/signal status

This display may not correspond exactly with the portable audio player, and this system does not have a charging function.

■ About Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.



■ Compatible models

Portable audio players must correspond to the specifications.

- Bluetooth® specifications:

- Ver. 1.1, or higher (Recommended: Ver. 2.1 + EDR or higher)

- Profiles:

- A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Recommended: Ver. 1.2 or higher)

- This is a profile to transmit stereo audio or high quality sounds to the headphone.

- AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Recommended: Ver. 1.4 or higher)

- This is a profile to remote control the A/V equipment.

However, please note that some functions may be limited depending on the type of portable audio player.

■ **Certification for the Bluetooth® audio system**

FCC ID: AJDK046

IC ID: 775E-K046

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

■ **Reconnecting the portable audio player**


If the portable audio player is disconnected with a poor reception when the "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode, the system automatically reconnects the portable audio player.

If you have switched off the portable audio player yourself, follow the instructions below to reconnect:

- Select the portable audio player again
- Enter the portable audio player

■ **When you release your car**

Be sure to initialize your data. (→P. 343)

 CAUTION

■ FCC WARNING

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition dans le Supplément C à OET65 et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée.

Cependant, cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

► For vehicles sold in the U.S.A.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► For vehicles sold in Canada

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

 CAUTION**■ Caution while driving**

Do not connect portable players or operate the controls.

■ Caution regarding interference with electronic devices


- Your audio unit is fitted with Bluetooth® antennas. People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE**■ To prevent damage to portable players**

Do not leave portable players in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.

Optimal use of the audio system

Press the “MEDIA” button or the “AUDIO” button on the Lexus Display Audio controller.

Select  on the audio control screen to adjust the sound settings.



► “Sound” tab

- ① ② ③ Select “-” or “+” to adjust the treble, mid or bass to a level between -5 to 5.
- ④ ⑤ Select “Front” or “Rear” to adjust the front/rear audio balance to a level between Front 7 and Rear 7.
- ⑥ ⑦ Select “L” or “R” to adjust the left/right audio balance to a level between L7 and R7.



► “DSP” tab

- ① Surround on/off
- ② Automatic sound levelizer (ASL) on/off



5

Interior features

■ **The sound quality level is adjusted individually**

The treble, mid and bass levels can be adjusted for the each audio mode separately.


■ **About Automatic Sound Leveliser (ASL)**

ASL automatically adjusts the volume and tone quality according to the vehicle speed.

Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.



- ① Radio mode:
Selects radio stations
- CD mode:
Selects tracks/files and folders
(MP3/WMA)
- iPod mode: Selects songs
- USB memory mode:
Selects files and folders
- Bluetooth[®] audio mode:
Selects tracks and albums
- ② Increases/decreases volume
- ③ Press: Turns the power on, selects
audio source
Press and hold: Pause or mute

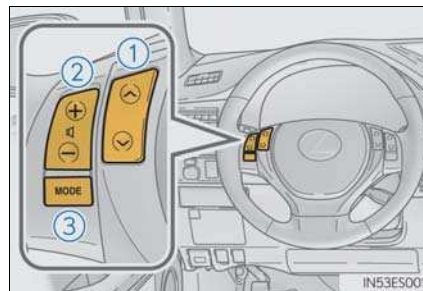

Turning the audio system on



To turn the audio system on, press  .

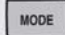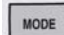Changing the audio source

Press  when the audio system is turned on. The audio source changes as follows each time  is pressed. If no discs are inserted in the player, or if the external device is not connected, that mode will be skipped.

FM→SAT→CD player→iPod or USB memory→
Bluetooth® audio→AUX→AM→FM


Adjusting the volume

Press  to increase the volume and  to decrease the volume.


Hold the button in that position to continue increasing or decreasing the volume.

Silencing a sound

Press and hold .

To cancel, press and hold .

Selecting a radio station




1 Press  to select the radio mode.

2 Press  or  to select a radio station.




To seek stations, press and hold  or  until you hear a beep.

To cancel, press either switch.


Selecting a track/file or song

- 1 Press  to select the CD, Bluetooth[®] audio, iPod or USB memory mode.
- 2 Press  or  to select the desired track/file or song.

Selecting a folder or album

- 1 Press  to select the CD (only when MP3/WMA disc is in use), Bluetooth[®] audio or USB memory mode.
- 2 Press and hold  or  until you hear a beep.

CAUTION

 **To reduce the risk of an accident**

Exercise care when operating the audio switches on the steering wheel.


Hands-free system (for cellular phone)

The hands-free system is a function that allows you to use your cellular phone without touching it.

This system supports Bluetooth[®]. Bluetooth[®] is a wireless data system that allows the cellular phone to wirelessly connect to the hands-free system and make/receive calls.

Telephone switch


- ① Volume switch
 - During an incoming call: Adjusts the ring tone volume
 - During an ongoing call: Adjusts the receiver volume
 - The voice guidance volume cannot be adjusted using this button.
- ② Talk switch
 - Press: Turns the voice command system on
 - Press and hold: Turns the voice command system off
- ③ Off hook switch
 - Sending
 - Receiving
 - "Phone" screen display
- ④ On hook switch
 - End call
 - Refuse call

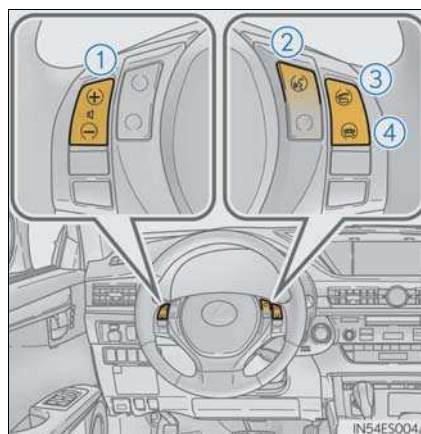

■ Microphone

You can use the microphone when talking on the phone.

The person you are speaking to can be heard from the front speakers.

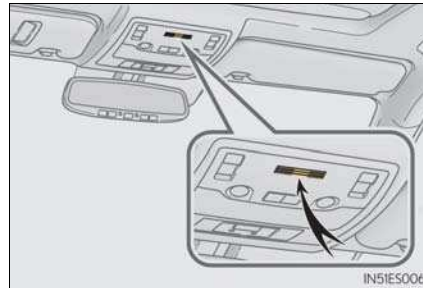







To use the hands-free system, you must register your Bluetooth[®] phone in the system. (→P. 453)

Status display

You can check indicators such as signal strength and battery charge on the “Phone” screen.

- ① Connection status
- ② Battery charge
- ③ Call area
- ④ Signal strength



Indicators	Conditions
Connection status	Good  ↔ Not connected 
Battery charge	Full  ↔ Empty 
Call area	“Rm”: Roaming area
Signal strength	Excellent  ↔ Poor 

■ When using the hands-free system

- The audio system is muted when making a call.
- If both parties speak at the same time, it may be difficult to hear.
- If the received call volume is overly loud, an echo may be heard.
If the Bluetooth® phone is too close to the system, quality of the sound may deteriorate and connecting condition may go down.

- In the following circumstances, it may be difficult to hear the other party:
 - When driving on unpaved roads
 - When driving at high speeds
 - If a window is open
 - If the air conditioning is blowing directly on the microphone
 - There is an effect from the network of the cellular phone

■ **Conditions under which the system will not operate**

- If using a cellular phone that does not support Bluetooth®
- If the cellular phone is turned off
- If you are outside service range
- If the cellular phone is not connected
- If the cellular phone's battery is low
- When outgoing is controlled, due to heavy traffic on telephone lines, etc.
- When the cellular phone itself cannot be used
- When transferring the phonebook data from the cellular phone

■ **Bluetooth® antenna**

The antenna is built into the display. If the cellular phone is behind the seat or in the console box, or touching or covered by metal objects, connection status may deteriorate.

■ **Battery charge/Signal status**

- This display may not correspond exactly with the cellular phone itself.
- This system does not have a charging function.
- The Bluetooth® phone battery will burn quickly when it is connected to Bluetooth®.
- When the cellular phone is not connected, "No Connect" is displayed.
- When you are out of service area or in a place inaccessible by radio waves, "No service" is displayed.

■ **When using Bluetooth® audio and hands-free system at the same time**

The following problems may occur.

- The Bluetooth® connection may be cut.
- Noise may be heard on the Bluetooth® audio playback.

■ **About the phonebook in this system**

The following data is stored for every registered phone. When another phone is connecting, you cannot read the registered data.

- Phonebook data
- Call history data
- Speed dial

When you delete the phone, the above-mentioned data is also deleted.

■ **When you release your car**

Be sure to initialize your data. (→P. 343)

■ **About Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.



■ **Compatible models**

This system supports the following service.

- Bluetooth® Specification:
 - Ver. 1.1 or higher (Recommended: Ver. 2.1+EDR or higher)
- Profiles:
 - HFP (Hands Free Profile) Ver. 1.0 or higher (Recommended: Ver. 1.5 or higher)
This is a profile to allow hands-free phone calls using the cellular phone or head sets. It has an outgoing and incoming call function.
 - OPP (Object Push Profile) Ver. 1.1 or higher
This is a profile to exchange phonebook data. When the Bluetooth® phone has PBAP and OPP, OPP cannot be used.
 - PBAP (Phone Book Access Profile) Ver. 1.0 or higher
This is a profile to transfer phonebook data.

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone. You need to take OPP or PBAP service individually.


■ Certification for the hands-free system

FCC ID: AJDK046

IC ID: 775E-K046

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 CAUTION

■ FCC WARNING

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition dans le Supplément C à OET65 et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée.

Cependant, cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

► For vehicles sold in the U.S.A.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► For vehicles sold in Canada

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

 CAUTION**■ Caution while driving**

Do not use a cellular phone or connect the Bluetooth® phone.

■ Caution regarding interference with electronic devices

- Your audio unit is fitted with Bluetooth® antennas. People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.


 NOTICE**■ To prevent damage to cellular phones**

Do not leave cellular phones in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the phone.

Using the Bluetooth® phone



- ① Device name
- ② Bluetooth® connection status (→P. 446)
- ③ Dialing from history (→P. 462)
- ④ Speed dialing (→P. 462)
- ⑤ Dialing from the phonebook (→P. 460)
- ⑥ Dialing by inputting a number (→P. 459)
- ⑦ Connecting a Bluetooth® phone (→P. 455)

To display the screen shown above, press  on the steering wheel or press the "MENU" button on the Lexus Display Audio controller and then select "Phone" on the "Menu" screen.

Registering a Bluetooth® phone

To use the hands-free system, you must register a Bluetooth® phone in the system. You can register up to 5 phones in the system.

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Yes".



- 3 Input the passcode displayed on the screen into your phone.

For the operation of the phone, see the manual that comes with your cellular phone.

Depending on the type of phone, further phone operations may be required after inputting the passcode (for example to confirm if connection is to be received or not) when registering a phone.

Passcodes are not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the phone, you may need to select “Yes” to register, or “No” to cancel on your cellular phone.

If you want to cancel it, select “Cancel”.

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.



Selecting the Bluetooth® phone

If multiple Bluetooth® devices are registered, follow the procedure below to select the Bluetooth® device to be used. You may only use one device at a time.

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Connect Phone".



- 3 Select the device to connect.

"Add New": Registering a Bluetooth® device. (→P. 485)

The selection indicator is displayed on left side of the selected device name.

The Bluetooth® mark is displayed when you connected the device.

When the system cannot get the device names, alternate names will be displayed such as "Device1", "Device2", etc.



Connecting a Bluetooth® phone

There are two connecting methods available-automatic and manual.

■ Automatic

When you register your phone, auto connection will be activated. Always set it to this mode and leave the Bluetooth® phone in a place where connection can be established.

When the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the system will search for a nearby cellular phone you have registered.

Next, the system automatically connects with the most recent of the phones connected to in the past. Then, the connection result is displayed.


Depending on the type of phone, phone operations may be required (to confirm if connection is to be received or not) even when automatically connected.

■ Manual

When the auto connection has failed or “Bluetooth* Power” is turned off (→P. 491), you must connect Bluetooth® manually.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Connect Phone”.

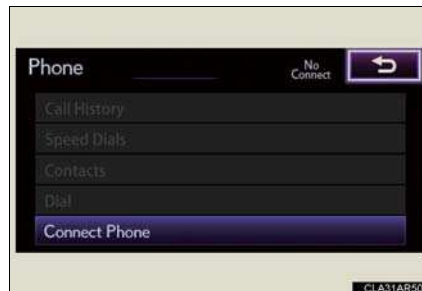

- 3 Select the device to connect.

A message is shown if connection has been successful.

If connection fails, a message will be displayed and connection will be re-attempted.



■ **Reconnecting to the Bluetooth® phone**

If the system cannot connect due to poor signal strength with the “START STOP ENGINE” <“POWER”> switch in ACCESSORY or IGNITION ON <ON> mode, the system will automatically attempt to reconnect.

If the phone is turned off, the system will not attempt to reconnect. In this case, connection must be made manually, or the phone must be re-selected.

■ **Connecting the phone while Bluetooth® audio is playing**


- Bluetooth® audio will stop temporarily.
- It may take time to connect.

Making a call

Once the Bluetooth[®] phone is registered, you can make a call using the following procedure:

■ Dialing

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Dial" on the "Phone" screen.
- 3 Input the phone number.

To delete the inputted phone number, select .

For the first digit, you can enter "+" by selecting "*" for a while.



- 4 Press  on the steering wheel or select .

Depending on the type of phone, when internet communication functions such as skype are available, phone operations (selecting between normal phone communication or internet communication) may be necessary after dialing operations are performed.



■ Dialing from the phonebook


You can dial a number from the phonebook data imported from your cellular phone. The system has one phonebook for each telephone. Up to 1000 entries may be stored in each phonebook. (→P. 474)

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Contacts" on the "Phone" screen.
- 3 Choose the desired data to call from the list.

If the phonebook is empty, a message will be displayed. (→P. 461)



- 4 Choose the number and then press  on the steering wheel or select .

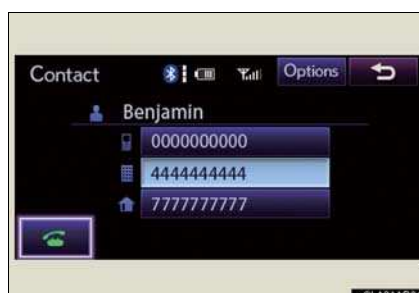

- When the phonebook is empty

You can transfer the phone numbers in your Bluetooth® phone to the system.

Operation methods differ between PBAP compatible and PBAP incompatible Bluetooth® phones. If your cellular phone does not support either PBAP or OPP service, you cannot transfer contacts.

1 Select “Contacts” on the “Phone” screen.

2 If the phonebook is empty, a message will be displayed.



▶ For PBAP compatible Bluetooth® phone

3 Select “Yes” if you want to transfer new contacts from a cellular phone.

Select “No” if you want to cancel transferring the contacts.

Depending on the type of phone, phone operations may be necessary when transferring contacts by PBAP.

▶ For PBAP incompatible and OPP compatible Bluetooth® phone

3 Select “Transfer” if you want to transfer new contacts from a cellular phone.


Select “Cancel” if you want to cancel transferring the contacts.

You need to operate your phone to transfer new contacts.

■ **Calling using speed dial**

You can make a call using numbers registered from the phonebook.

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Speed Dials" on the "Phone" screen.
- 3 Select the desired tab and choose the desired number to make a call.

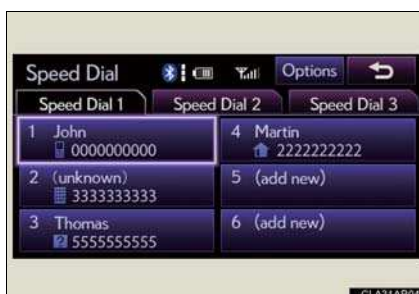


■ **Dialing from history**

You can call using the call history which has the 4 functions below.

- "All": all the calls below which were memorized
- "Missed": calls which you missed
- "Incoming": calls which you received
- "Outgoing": calls which you called

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Call History" on the "Phone" screen.
- 3 Select the desired tab and choose the desired data from the list.

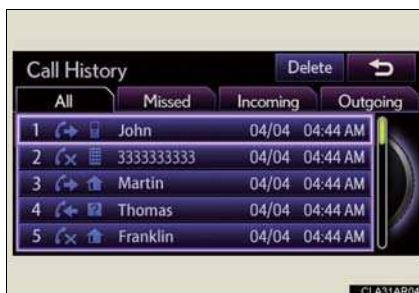

- 4 Press  on the steering wheel or select .



■ Calling using voice recognition

Calls can be made by giving a voice command.


- 1 Press the talk switch.

To cancel voice recognition press and hold the talk switch.

- 2 Following the system guidance, wait for the beep, and then say the desired voice commands.

- ① Voice prompts on/off

- ② Voice commands

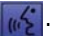
Voice commands are marked with .


- ③ Canceling voice recognition system



● Dial by name

The procedure below shows “Call <name>” or “Call <name> at <type>”. Follow similar procedures for the other operations.

- 1 Press the talk switch.
- 2 Say the name, or the name and type of phone, of a registered contact.
- 3 Say “Dial” or press  on the steering wheel.
Say or select “Go Back” to return to the previous screen.

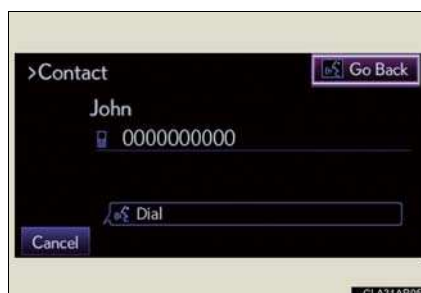

■ Call history list

- If you make a call to or receive a call from a number registered in the phonebook, the name is displayed in the call history.
- If you make multiple calls to the same number, only the last call made is displayed in the call history.






■ When driving

The functions “Dialing”, “Dialing from the phonebook”, and “Dialing from history” (only the 6th page of “All” tab) are unavailable.

■ International calls

You may not be able to make international calls, depending on the cellular phone in use.

■ Calling by using the latest call history item

- 1 Press  on the steering wheel to display the “Phone” screen.
- 2 Press  on the steering wheel to display the “Call History” screen.
- 3 Press  on the steering wheel to select the latest history item.
- 4 Press  on the steering wheel or select  to call the latest history item.

■ Voice guidance function

- Voice guidance for the voice recognition system can be skipped by pressing the talk switch.
- When “Voice Prompts (on/off)” is selected, voice recognition will be temporarily suspended. Press the talk switch again.
- Voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch.

■ Using voice command

- Using voice command “Call <name>” or “Call <name> at <type>”
 - In the same manner as it is displayed on the screen, “Call <name>” or “Call <name> at <type>”, after saying “Call” say the name, or the name and type of phone, of a contact.
For example: “Call”, “John Smith” or “Call”, “Mary Davis”, “at”, “Mobile”
 - There are 4 types of phones: Home, Mobile, Work and Other.
 - Short or abbreviated names in the phonebook may not be recognized. Change names in the phonebook to full names.
 - Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say “Yes” or “No”.
 - When the system recognizes multiple names from the phonebook, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say the number of the name from the candidate list (number 1 or number 2) to select a name from the candidate list.
 - When a contact has multiple phone numbers registered in the phonebook, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (number 1 or number 2) to select a phone number from the candidate list.

- Using voice command "Dial <number>"
 - In the same manner as it is displayed on the screen, "Dial <number>", after saying "Dial" say the phone number.
 - Say the phone number one digit at a time.
For example, if the phone number is 2345678:
Say "two three four five six seven eight"
Do not say "twenty three forty five sixty seven eight"
 - The system can recognize the following types of the phone numbers:
3 digit numbers (911, 411, 611)
7 digit numbers (Local phone numbers)
10 digit numbers (Area code + Local phone number)
11 digit phone numbers (1 + Area code + Local phone number)
 - As the system cannot recognize additional numbers, say the complete number without stopping.
 - When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (number 1 or number 2) to select a phone number from the candidate list.
- Using voice command "International call".

Up to 20 digits can be recognized when using the international call function. The number can also be divided into multiple groups and recognized.



■ **When using voice recognition**

Speak clearly when using the voice recognition, otherwise the system may not correctly recognize your voice. Wind or other noises may also cause the system not to recognize your voice.

Receiving a call

When a call is received, the following screen is displayed together with a sound.

To answer the phone:

- Press  on the steering wheel.
- Select .



■ To refuse a call

Press  on the steering wheel or select .

■ To adjust the incoming call volume

Select “-” or “+”. You can also adjust the volume using the steering switches or volume knob.

■ International calls

Received international calls may not be displayed correctly depending on the cellular phone in use.

Speaking on the phone

The following screen is displayed when speaking on the phone.



- **To adjust the receiver volume**

Select “-” or “+”. You can also adjust the volume using the steering switches or the volume knob.

- **To prevent the other party from hearing your voice**

Select “Mute”.

- **Inputting tones**

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the phonebook.

- 1 Select “0-9”.
- 2 Input the number.



- 3 If repeated tone symbols* are stored in the phone book, “Send” and “Exit” are displayed on the right side of the screen.

: Repeated tone symbols are symbols or numbers displayed as p or w, that come after the phone number. (e.g. 056133w0123p#1)



- 4 Confirm the number displayed on the screen, and select “Send”.

If you select “Exit”, this function will end.

■ To transfer a call

Select “Handset Mode” to change from Hands-free call to cellular phone call.

Select “Handsfree Mode” to change from cellular phone call to Hands-free call.



■ To hang up

Press  on the steering wheel or select .



■ **Call waiting**

When a call is interrupted by a third party while talking, the incoming call message will be displayed.



To talk with the other party:

- Press  on the steering wheel.
- Select .

To refuse the call:

- Press  on the steering wheel.
- Select .



Every time you press  on the steering wheel or select  during call waiting, you will be switched to the other party.

■ **Transferring calls**

- It is not possible to transfer from hands-free to the cellular phone while driving.
- If you transfer from the cellular phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- Transfer method and operate may vary according to the cellular phone used.
- For operation of the cellular phone in use, see the phone's manual.

■ **Call waiting operation**

Call waiting operation may differ depending on your phone company and cellular phone.

Setting the hands-free system

You can set the hands-free system to your desired settings.



- ① Setting the sound
- ② Phonebook settings

To display the screen shown above, follow the steps below.

- 1 Press the "MENU" button on the Lexus Display Audio controller.
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Phone" on the "Setup" screen.

Setting the sound

- 1 Display the "Phone Settings" screen. (→P. 471)
- 2 Select "Phone Sound Settings" on the "Phone Settings" screen.


- ① Changes the speaker volume (→P. 472)
- ② Changes the ring tone volume (→P. 472)
- ③ Changes the ring tone (→P. 473)
- ④ Restore default settings



- 3 When you complete settings, select "Save".

■ Setting the volume

- 1 Select "Call Volume" or "Ring Tone Volume" on the "Phone Sound Settings" screen.
- 2 Select "-" or "+" to lower or raise the volume, and then "OK".

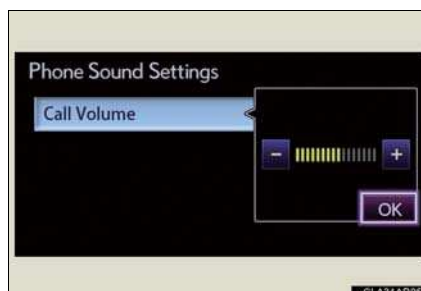

■ Setting the ring tone

- 1 Select "Ring Tone" on the "Phone Sound Settings" screen.
- 2 Select "Tone1", "Tone2" or "Tone3" to change the ring tone, and then "OK".



Phonebook settings

The phonebook manages a maximum of 5 phones in total. The data for 1000 contacts (up to 3 numbers per contact) can be registered in each phonebook.



- ① Managing the contacts
- ② Managing the speed dials
- ③ Deleting the call history

To display the screen above, follow the steps below.


- 1** Display the "Phone Settings" screen. (→P. 471)
- 2** Select "Phonebook" on the "Phone Settings" screen.

■ Managing the contacts

● Transferring a phone number

You can transfer the phone numbers in your Bluetooth[®] phone to the system. Operation methods differ between PBAP compatible and PBAP incompatible Bluetooth[®] phones. If your cellular phone does not support either PBAP or OPP services, you cannot transfer contacts.

- 1 Display the "Phonebook Settings" screen. (→P. 474)
- 2 Select "Manage Contacts" on the "Phonebook Settings" screen.
- 3 Select "Transfer Contacts".

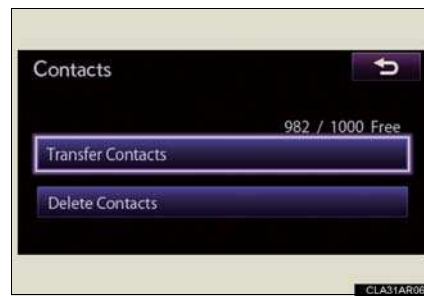

▶ For PBAP compatible Bluetooth[®] phones

- 1 Automatic phonebook download on/off

The phonebook data can be automatically transferred.

Depending on the cellular phone, call history will be also transferred.
- 2 Update phonebook

The phonebook data can be updated.
- 3 Restore default settings



▶ For PBAP incompatible Bluetooth® phones

- ① Replace contacts
The phonebook data can be replaced.


- ② Add contacts
The phonebook can be added.



● Deleting the phonebook data

- 1 Display the "Phonebook Settings" screen. (→P. 474)
- 2 Select "Manage Contacts" on the "Phonebook Settings" screen.
- 3 Select "Delete Contacts".

If your phone supports PBAP service, "Automatically Download Contacts" setting needs to be set to "Off". (→P. 475)

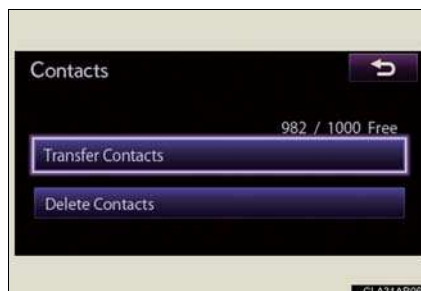

- 4 Choose the data to delete.
To delete all data, select "All Delete".



- 5 A confirmation message will be displayed. If everything is correct, select "Yes".

■ Phonebook data

Phonebook data is managed for every registered phone. When another phone is connecting, you cannot read the registered data.

■ Setting the phonebook in a different way (To display the “Contacts” screen)

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Contacts” on the “Phone” screen.
- 3 Select “Options” on the “Contacts” screen.
- 4 Select “Manage Contacts” on the “Contacts” screen.

■ When transferring a phone number

Transfer the phone number while engine is running <hybrid system is operating>. If your cellular phone is OPP or PBAP compatible, you may need to input “1234” by your cellular phone for OBEX certification.

■ When you have selected “Update Contacts” to transfer the phone number

- If your cellular phone does not support PBAP service, you cannot use this function.
- If your phone supports PBAP service, you can transfer the phonebook data without operating your phone.

■ When you have selected “Replace Contacts” or “Add Contacts” to transfer the phone number

If your cellular phone does not support OPP service, you cannot use these functions. You can transfer the phonebook data only by operating your phone.

■ Transferring the phone number in a different way (To display the “Transfer Contacts” screen)

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Contacts” on the “Phone” screen.
- 3 Select “Transfer” on the “Contacts” screen.

■ Transferring the phone number while Bluetooth® audio is playing

Bluetooth® audio will disconnect. It will reconnect automatically when data transfer finishes. It will not be reconnected depending on the phone you are using.

■ **Deleting the phonebook data in a different way**

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Contacts" on the "Phone" screen.
- 3 Choose the desired data from the list.
- 4 Select "Options" on the "Contact" screen.
- 5 Select "Delete" on the "Contact" screen.
- 6 A confirmation message will be displayed. If everything is correct, select "Yes".

If your phone supports PBAP service, "Automatically Download Contacts" setting needs to be set to "Off". (→P. 475)

When you delete a Bluetooth[®] phone, the phonebook data will be deleted at the same time.

Managing the speed dials

■ Registering the speed dial from contacts

You can register the desired phone number from phonebook. Up to 18 numbers per phone can be registered.


- 1 Display the “Phonebook Settings” screen. (→P. 474)
- 2 Select “Manage Speed Dials” on the “Phonebook Settings” screen.
- 3 Select “New Speed Dial from Contacts”.



- 4 Choose the data to register.



- 5 Select the desired phone number.

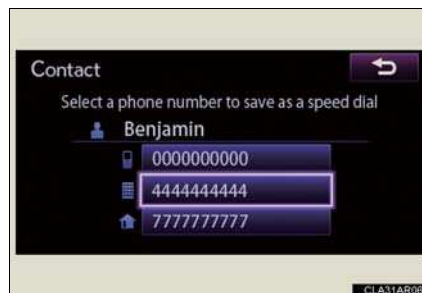


- 6 Select the switch you want to register the number in.



- 7 If you select a switch you registered before, a confirmation message will be displayed. If you want to replace it, select "Yes".

■ Registering the speed dial from call history

- 1 Display the "Phonebook Settings" screen. (→P. 474)
- 2 Select "Manage Speed Dials" on the "Phonebook Settings" screen.
- 3 Select "New Speed Dial from Call History" on the "Speed Dials" screen.
- 4 Choose the data to register.

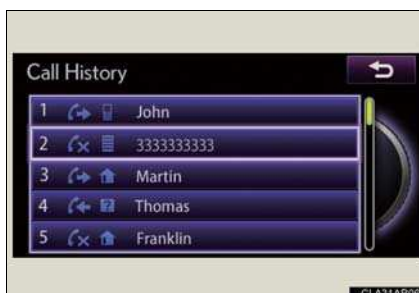

- 5 Select the switch you want to register the number in.



- 6 If you select a switch you registered before, a confirmation message will be displayed. If you want to replace it, select "Yes".

■ Deleting the speed dial

- 1 Display the “Phonebook Settings” screen. (→P. 474)
- 2 Select “Manage Speed Dials” on the “Phonebook Settings” screen.
- 3 Select “Delete Speed Dials” on the “Speed Dials” screen.
- 4 Choose the data to delete.
To delete all data, select “All Delete”.



- 5 A confirmation message will be displayed. If everything is correct, select “Yes”.

■ Setting the speed dials in a different way (From “Speed Dial” screen)

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Speed Dials” on the “Phone” screen.
- 3 Select “Options” on the “Speed Dial” screen.

■ Setting the speed dials in a different way (From “Contacts” screen)

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Contacts” on the “Phone” screen.
- 3 Select “Options” on the “Contacts” screen.
- 4 Select “Manage Speed Dials” on the “Contacts” screen.

■ **Registering the speed dial in a different way (From “Speed Dial” screen)**

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Speed Dials” on the “Phone” screen.
- 3 Select “(add new)” on the “Speed Dial” screen.
- 4 Select “Contacts” or “History” to set new speed dial.
Select “Cancel” to cancel it.
- 5 Choose the desired data from the list.
- 6 Select the desired phone number.

■ **Registering the speed dial in a different way (From “Contact” screen)**

- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Contacts” on the “Phone” screen.
- 3 Choose the desired data from the list.
- 4 Select “Options” on the “Contact” screen.
- 5 Select “Set Speed Dial” on the “Contact” screen.
- 6 Select the desired telephone number.
- 7 Follow the steps “Registering the speed dial from contacts” from 6
(→P. 479).

■ **Registering the speed dial in a different way (From “Call History” screen)**


- 1 Display the “Phone” screen. (→P. 452)
- 2 Select “Call History” on the “Phone” screen.
- 3 Choose the desired data from the list.
- 4 Select “Add Speed Dial” on the “Call History” screen.
- 5 Follow the steps “Registering the speed dial from call history” from 5.
(→P. 480)

Deleting the call history

- 1 Display the "Phonebook Settings" screen. (→P. 474)
- 2 Select "Delete Call History" on the "Phonebook Settings" screen.
If your phone supports PBAP service, the "Automatically Download Contacts" setting needs to be set to "Off". (→P. 475)
- 3 Choose the desired history to delete.



- 4 Choose the data to delete.
To delete all data, select "All Delete".

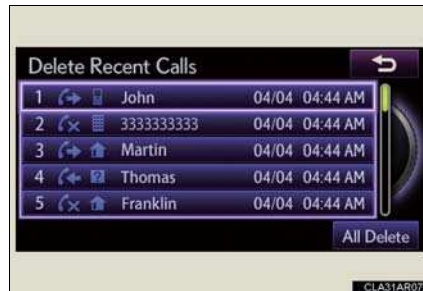

- 5 A confirmation message will be displayed. If everything is correct, select "Yes".

■ Deleting call history in a different way

- 1 Display the "Phone" screen. (→P. 452)
- 2 Select "Call History" on the "Phone" screen.
- 3 Select "Delete" on the "Call History" screen.
- 4 Follow the steps "Deleting the call history" from 4. (→P. 483)

Bluetooth® settings

You can set the Bluetooth® system to your desired settings.



- ① Registered devices settings
- ② Connecting telephone
- ③ Connecting audio player
- ④ Detailed Bluetooth® settings

To display the screen shown above, follow the steps below.

- 1 Press the “MENU” button on the Lexus Display Audio controller.
- 2 Select “Setup” on the “Menu” screen.
- 3 Select “Bluetooth*” on the “Setup” screen.


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Registered devices settings

■ Registering a Bluetooth® device

Bluetooth® devices compatible with phones (HFP) and portable audio players (AVP) can be registered simultaneously. You can register up to 5 Bluetooth® devices.

- 1 Display the “Bluetooth* Settings” screen. (→P. 484)
- 2 Select “Registered Devices” on the “Bluetooth* Settings” screen.
- 3 Select “Add New”.

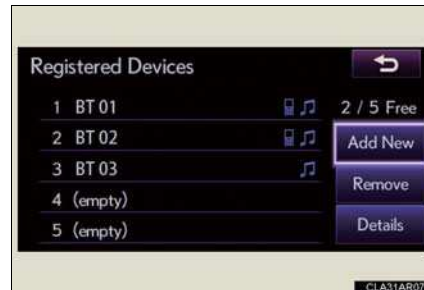

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 4 When this screen is displayed, input the passcode displayed on the screen into your Bluetooth® device.

For the operation of the Bluetooth® device, see the manual that comes with your Bluetooth® device.

Depending on the type of phone, further phone operations may be required after inputting the passcode (for example to confirm if connection is to be received or not) when registering a phone.

Passcodes are not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the phone, you may need to select “Yes” to register, or “No” to cancel on your cellular phone.

If you want to cancel it, select “Cancel”.

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.



■ **Removing a Bluetooth® device**

- 1 Display the “Bluetooth* Settings” screen. (→P. 484)
- 2 Select “Registered Devices” on the “Bluetooth* Settings” screen.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 3 Select "Remove".



- 4 Select the device to remove.



- 5 A confirmation message will be displayed, select "Yes" to remove the device.

■ Displaying a Bluetooth® device details

You can confirm and change the device details.

- 1 Display the "Bluetooth* Settings" screen. (→P. 484)
- 2 Select "Registered Devices" on the "Bluetooth* Settings" screen.
- 3 Select "Details".



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 4 Select the device.



- 5 Following screen is displayed:

- ① Display device name
- ② Display device address
- ③ Display your telephone number

The number may not be displayed depending on the phones.




- ④ Display compatibility profile of the device
 - ⑤ Change connection method (→P. 489)
 - ⑥ Restore default settings
- 6 When you complete settings, select "OK".

● Changing connection method

- 1 Select "Connection Method" on the "Device Details" screen.
- 2 Select "From Vehicle" or "From Audio Player".

"From Vehicle": Connect the audio system to the portable audio player.
 "From Audio Player": Connect the portable audio player to the audio system.

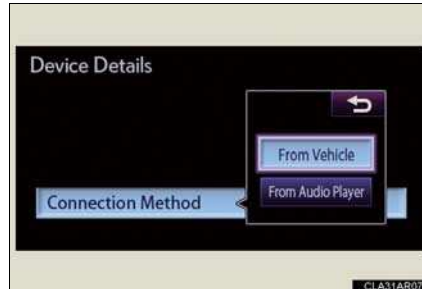

Selecting the Bluetooth® phone

If multiple Bluetooth® devices are registered, follow the procedure below to select the Bluetooth® device to be used. You may only use one device at a time.

- 1 Display the "Bluetooth* Settings" screen. (→P. 484)
- 2 Select "Connect Phone" on the "Bluetooth* Settings" screen.
- 3 Select the device to connect.

"Add New": Registering a Bluetooth® device. (→P. 485)

The selection indicator is displayed on left side of the selected device name.

The Bluetooth® mark is displayed when you connected the device.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Selecting the audio player

If multiple Bluetooth® devices are registered, follow the procedure below to select the Bluetooth® device to be used. You may only use one device at a time.

- 1 Display the “Bluetooth* Settings” screen. (→P. 484)
- 2 Select “Connect Audio Player” on the “Bluetooth* Settings” screen.
- 3 Select the device to connect.

“Add New”: Registering a Bluetooth® device. (→P. 485)

The selection indicator is displayed on left side of the selected device name.

The Bluetooth® mark is displayed when you connected the device.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Detailed Bluetooth® settings

You can confirm and change the detailed Bluetooth® settings.

- 1 Display the “Bluetooth* Settings” screen. (→P. 484)
- 2 Select “Detailed Bluetooth* Settings” on the “Bluetooth* Settings” screen.
- 3 Following screen is displayed:

- 1 Change Bluetooth® power on/off

You can change Bluetooth® function to “On” or “Off”

- 2 Display device name
- 3 Change passcode (→P. 492)
- 4 Display device address
- 5 Restore default settings
- 6 Display compatibility profile of the system
- 7 Change displaying telephone status on/off
You can set the system to show the status confirmation display when connecting telephone
- 8 Change displaying audio player status on/off
You can set the system to show the status confirmation display when connecting audio player



- 4 When you complete settings, select “Save”.


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ **Editing the passcode**

You can change the passcode that you use to register your Bluetooth[®] device in the system.

1 Select “Passcode” on the “Detailed Bluetooth* Settings” screen.

2 Input a passcode, and select “OK”.

To delete the inputted phone number, select .



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Audio system (without a navigation system or the Lexus Display Audio system)


- ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

- ▶ Vehicles with the Lexus Display Audio system

→P. 376

- ▶ CD player with a changer and AM/FM radio (type A)

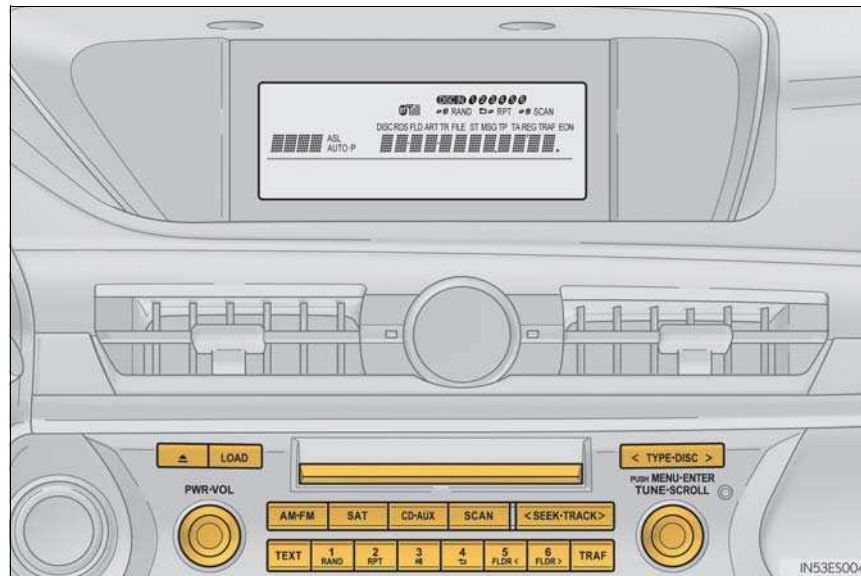


► CD player with a changer and AM/FM radio (type B)



Title	Page
Using the radio	P. 496
Using the CD player	P. 505
Playing MP3 and WMA discs	P. 514
Operating an iPod	P. 522
Operating a USB memory	P. 532
Using the Bluetooth [®] audio system	P. 545
Optimal use of the audio system	P. 562
Using the AUX port	P. 564
Using the steering wheel audio switches	P. 565
Hands-free system for cellular phones	P. 568

■ Using cellular phones

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

 **CAUTION****■ Certification**

- Part 15 of the FCC Rules

FCC Warning:

Any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

- Laser products

- USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
- THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

 **NOTICE****■ To prevent 12-volt battery discharge**

Do not leave the audio system on longer than necessary when the engine <hybrid system> is off.

■ To avoid damaging the audio system

Take care not to spill drinks or other fluids over the audio system.


Using the radio

► Type A



- ① AM-FM/SAT mode buttons
- ② Scan button
- ③ Seek button
- ④ Channel category button
- ⑤ Frequency adjustment (AM/FM mode) and channel (SAT mode) knob
- ⑥ Traffic information button
- ⑦ Preset station buttons
- ⑧ Radio text message button
- ⑨ Power
- ⑩ Volume

► Type B

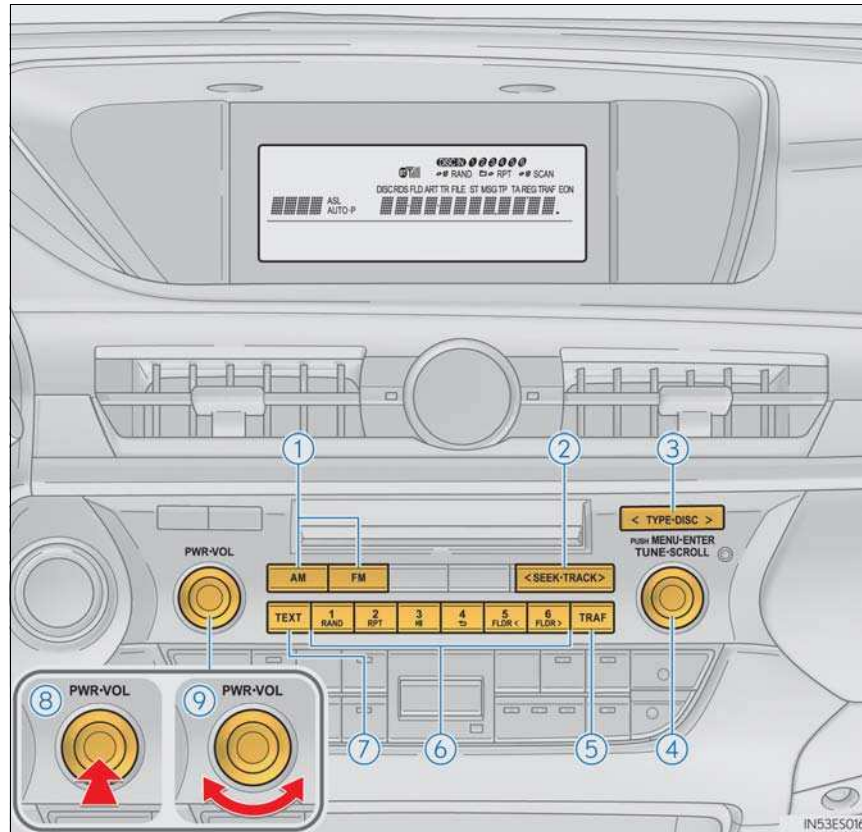





- ① AM·FM buttons
- ② Seek button
- ③ Channel category button
- ④ Frequency adjustment knob
- ⑤ Traffic information button
- ⑥ Preset station buttons
- ⑦ Radio text message button
- ⑧ Power
- ⑨ Volume

5


Interior features

Setting station presets (excluding XM[®] Satellite Radio)

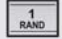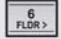
- 1 Search for the desired stations by turning  or pressing ">" or "<" on  .
- 2 Press and hold the button (from  to ) the station is to be set to until you hear a beep.

Scanning radio stations (excluding XM[®] Satellite Radio) (type A)

■ Scanning the preset radio stations

- 1 Press and hold  until you hear a beep.
Preset stations will be played for 5 seconds each.
- 2 When the desired station is reached, press the button again.


■ Scanning all the radio stations within range

- 1 Press  .
All the stations with reception will be played for 5 seconds each.
- 2 When the desired station is reached, press the button again.

RBDS (Radio Broadcast Data System)

This feature allows your radio to receive station identification information and program information (classical, jazz, etc.) from radio stations which broadcast this information.



■ Receiving RBDS broadcasts

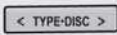- 1 Press “>” or “<” on  during FM reception.

The type of program changes each time the button is pressed.

- “ROCK”
- “EASYLIS” (Easy listening)
- “CLS/JAZZ” (Classical music and Jazz)
- “R & B” (Rhythm and Blues)
- “INFORM” (Information)
- “RELIGION”
- “MISC” (Miscellaneous)
- “ALERT” (Emergency messages)

If the system receives no RBDS stations, “NO PTY” appears on the display.

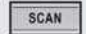- 2 Press , or “>” or “<” on .

The radio seeks or scans for stations of the relevant program type.


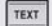
■ Displaying radio station names

Press .

■ Displaying radio text messages

Press  twice.

A text message is displayed when “MSG” is shown on the screen.

If the text continues past the end of the display,  is displayed. Press and hold  until you hear a beep.



XM[®] Satellite Radio (type A)

■ Receiving XM[®] Satellite Radio



1 Press  .

The display changes as follows each time the button is pressed:


“SAT1” → “SAT2” → “SAT3”

2 Turn  to select the desired channel in all the categories or press “>” or “<” on  to select the desired channel in the current category.

■ Setting XM[®] Satellite Radio channel presets


Select the desired channel. Press and hold the button (from  to ) the channel is to be set to until you hear a beep.

■ Changing the channel category

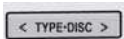
Press “>” or “<” on  .

■ Scanning the XM[®] Satellite Radio channels

- Scanning the channels in the current category

- 1 Press  .
- 2 When the desired channel is reached, press the button again.

- Scanning the preset channels

- 1 Press and hold  until you hear a beep.
- 2 When the desired channel is reached, press the button again.

■ Displaying text information

Press  .

The display will show up to 10 characters.

The display changes as follows each time the button is pressed:

- CH NAME
- TITLE (SONG/PROGRAM TITLE)
- NAME (ARTIST NAME/FEATURE)
- CH NUMBER

■ **When the 12-volt battery is disconnected**

All preset stations are erased.

■ **Reception sensitivity**

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM[®] Satellite Radio.
- It is difficult to maintain perfect radio reception at all times due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains and transmitters.
- The radio antenna is mounted inside the trunk and the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

■ **Receiving XM[®] Satellite Radio**

An XM[®] Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous states and 10 Canadian provinces.

● XM[®] subscriptions

For detailed information about XM[®] Satellite Radio or to subscribe:

U.S.A. —


Visit on the web at www.siriusxm.com or call 1-866-635-2349.

Canada —

Visit on the web at www.xmradio.ca or call 1-877-438-9677.

● Radio ID

You will need the radio ID when activating XM[®] service or reporting a problem.

Select "CH000" using , and the receiver's 8-character ID number will appear.

● Satellite tuner

The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM[®] Satellite Radio.

■ **If the satellite radio does not operate normally**

If a problem occurs with the XM[®] tuner, a message will appear on the display. Refer to the table below to identify the problem, and take the suggested corrective action.

"ANTENNA"	The XM [®] antenna is not connected. Check whether the XM [®] antenna cable is attached securely.
	There is a short-circuit in the antenna or the surrounding antenna cable. See a Lexus certified dealer.
"UNAUTH"	You have not subscribed to the XM [®] Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM [®] Satellite Radio for subscription information. When a contract is canceled, you can choose the "CH000" and all the free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact the XM [®] Satellite Radio.
"NO SIGNAL"	The XM [®] signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"LOADING"	The unit is acquiring audio or program information. Wait until the unit has received the information.
"OFF AIR"	The channel you selected is not broadcasting any programming. Select another channel.
"-----"	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.
"CH UNAVL"	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel.

Contact the XM[®] Listener Care Center at 1-866-635-2349 (U.S.A.) or 1-877-438-9677 (Canada).


■ **Certifications for XM[®] Satellite Radio**

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

Cet appareil est conforme au CNR-310 d'Industrie Canada. Son exploitation est autorisée sous réserve que l'appareil ne cause pas de brouillage préjudiciable.


Using the CD player

► Type A

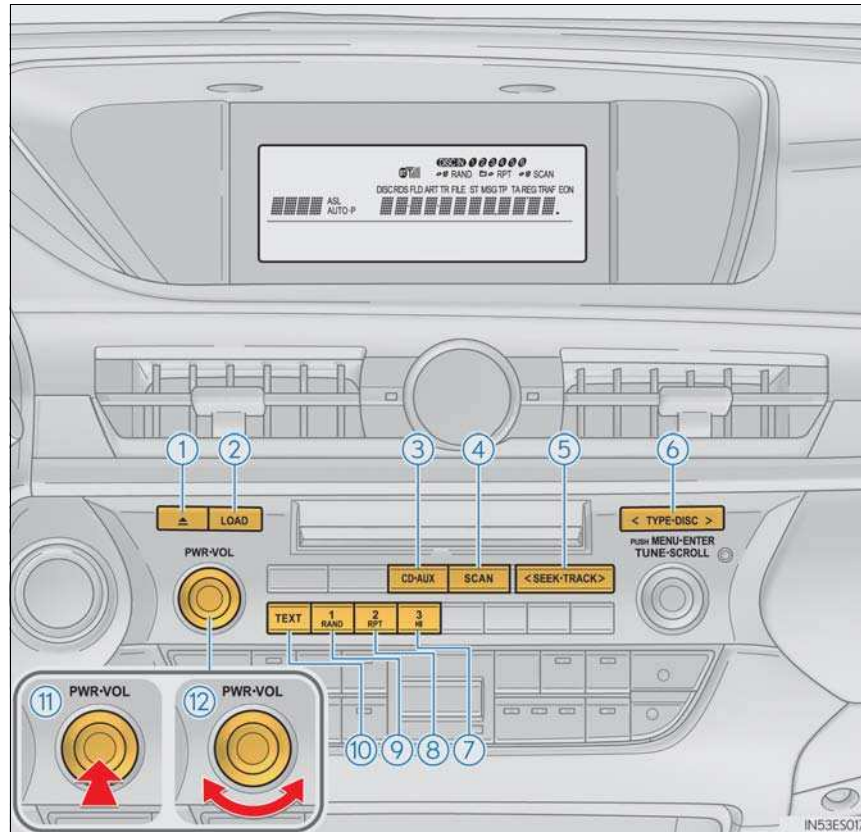

- | | |
|--------------------------|--------------------------|
| ① Eject button | ⑦ Playback/Pause button |
| ② Load button | ⑧ Repeat play button |
| ③ Playback button | ⑨ Random playback button |
| ④ Search playback button | ⑩ Text button |
| ⑤ Track selector button | ⑪ Power |
| ⑥ CD selector button | ⑫ Volume |

► Type B

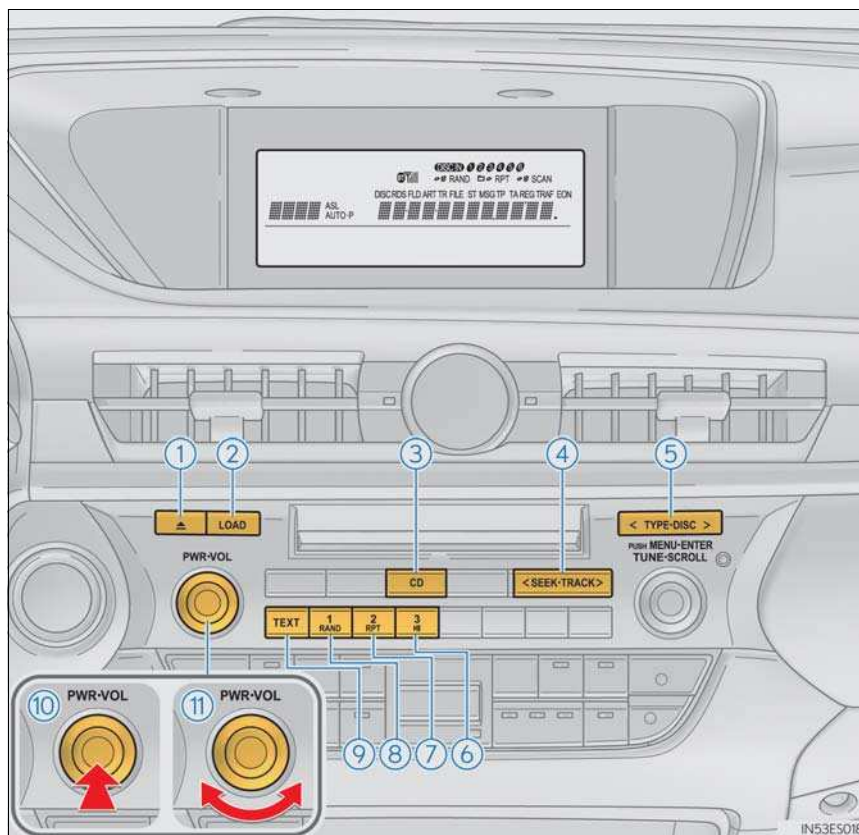

- ① Eject button
- ② Load button
- ③ Playback button
- ④ Track selector button
- ⑤ CD selector button
- ⑥ Playback/Pause button
- ⑦ Repeat play button
- ⑧ Random playback button
- ⑨ Text button
- ⑩ Power
- ⑪ Volume

Loading a CD

■ Loading a CD

- 1 Press .

“WAIT” is shown on the display.

- 2 When the indicator on the slot turns from amber to green, insert a CD.

The display changes from “WAIT” to “LOAD”.

■ Loading multiple CDs

- 1 Press and hold  until you hear a beep.

“WAIT” is shown on the display.


- 2 When the indicator on the slot turns from amber to green, insert a CD.

The display changes from “WAIT” to “LOAD”.

The indicator on the slot turns to amber when the CD is being inserted.


- 3 When the indicator on the slot turns from amber to green, insert the next CD.

Repeat the procedure for the remaining CDs.


To cancel the operation, press . If you do not insert a disc within 15 seconds, loading will be canceled automatically.

Ejecting CDs


■ Ejecting a CD

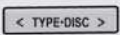- 1 To select the CD to be ejected, press “>” or “<” on . The selected disc number is shown on the display.




- 2 Press  and remove the CD.

■ Ejecting all the CDs


Press and hold  until you hear a beep, and then remove the CDs.

Selecting, fast-forwarding, reversing and scanning tracks

■ Selecting a track

Press “>” to move up or “<” to move down using  until the desired track number is displayed.

■ Fast-forwarding and reversing tracks

To fast-forward or reverse, press and hold “>” or “<” on  until you hear a beep.

■ Scanning tracks (type A)

- 1 Press .

The first ten seconds of each track will be played.

To cancel, press  again.

- 2 Press the button again when the desired track is reached.

Selecting a CD

■ Selecting a CD to play

To select the desired CD, press “>” or “<” on .

■ Scanning loaded CDs (type A)


1 Press and hold  until you hear a beep.

The first ten seconds of the first track on each CD will be played.

To cancel, press  again.

2 Press the button again when the desired CD is reached.

Playing and pausing tracks

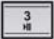
To play or pause a track, press .

Random playback

■ Current CD

Press .


Songs are played in random order.

To cancel, press  again.

■ All CDs

Press and hold  until you hear a beep.


Tracks on all loaded CDs are played in random order.

To cancel, press  again.

Repeat play

■ Repeating a track

Press .

To cancel, press  again.

■ Repeating all of the tracks on a CD

Press and hold  until you hear a beep.

To cancel, press  again.

Switching the display

Press .

Each time the button is pressed, the display changes in the following order:


Elapsed time → CD title → Track title

■ CD player protection feature


To protect the internal components, playback is automatically stopped when a problem is detected.

■ Display

Up to 12 characters can be displayed at a time.

If there are 13 or more characters, pressing and holding  until you hear a beep enables to display the remaining characters.

A maximum of 24 characters can be displayed.

If  is pressed until you hear a beep again or has not been operated for more than 6 seconds, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.



■ When “ERROR” or “WAIT” is shown on the display

“ERROR”:

This indicates a problem either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

“WAIT”:

This indicates that operation is stopped due to a high temperature inside the player.

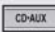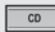Wait for a while and then press  or . If the CD still cannot be played back, contact your Lexus dealer.

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protection features may not be used.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

■ If discs are left inside the CD player or in the ejected position for extended periods of time


The discs may be damaged and may not play properly.

 NOTICE


■ **CDs and adapters that cannot be used**

Do not use the following types of CDs, 3 in. (8 cm) CD adapters or Dual Discs. Doing so may damage the CD player and/or the CD load/eject function.


- CDs that have a diameter that is not 4.7 in. (12 cm)

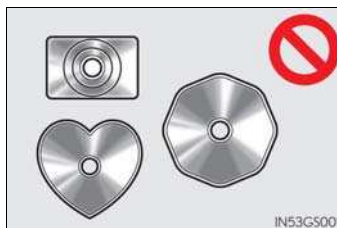


- Low-quality and deformed CDs

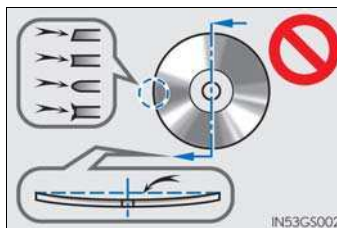

- CDs with a transparent or translucent recording area

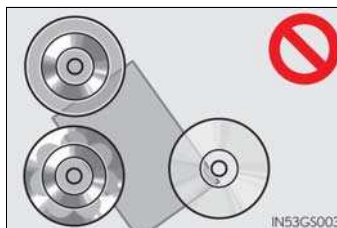

- CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off

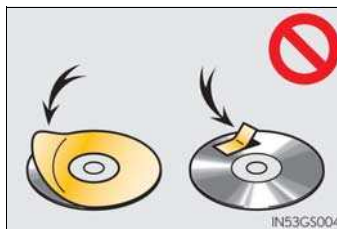


 NOTICE

■ CD player precautions


Failure to follow the precautions below may result in serious damage to the CDs or the player itself.

- Do not insert anything other than CDs into the CD slot.
- Do not apply oil to the CD player.
- Store CDs away from direct sunlight.
- Never try to disassemble any part of the CD player.
- Do not insert more than one CD at a time.

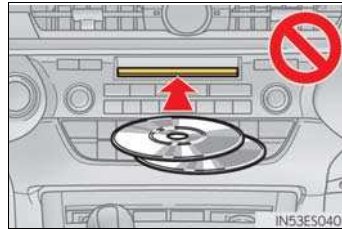


Playing MP3 and WMA discs

► Type A

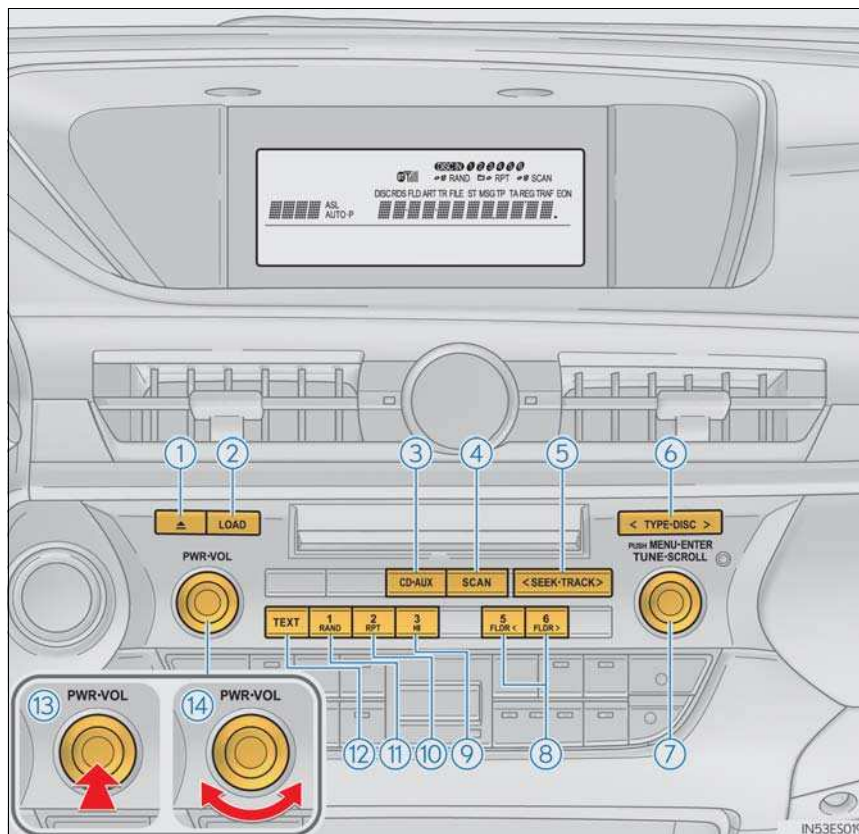

- | | |
|--------------------------|---------------------------|
| ① Eject button | ⑧ Folder selector buttons |
| ② Load button | ⑨ Playback/Pause button |
| ③ Playback button | ⑩ Repeat play button |
| ④ Search playback button | ⑪ Random playback button |
| ⑤ File selector button | ⑫ Text button |
| ⑥ Disc selector button | ⑬ Power |
| ⑦ File selector knob | ⑭ Volume |

► Type B

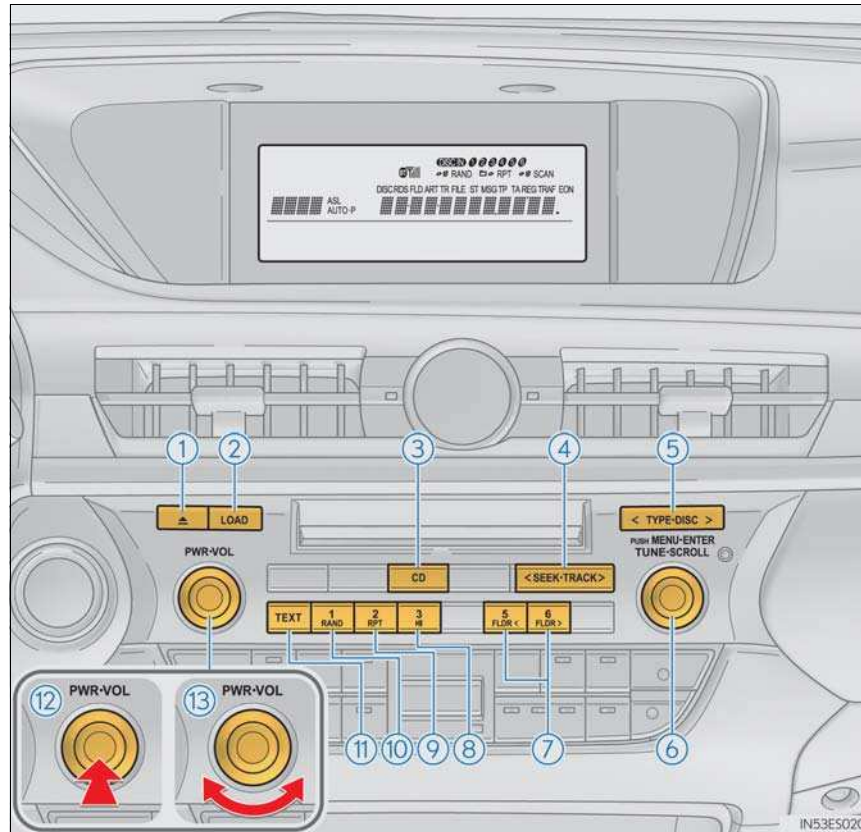

- | | |
|---------------------------|--------------------------|
| ① Eject button | ⑧ Playback/Pause button |
| ② Load button | ⑨ Repeat play button |
| ③ Playback button | ⑩ Random playback button |
| ④ File selector button | ⑪ Text button |
| ⑤ Disc selector button | ⑫ Power |
| ⑥ File selector knob | ⑬ Volume |
| ⑦ Folder selector buttons | |

5

Interior features

Loading and ejecting MP3 and WMA discs



→P. 507, 508

Selecting MP3 and WMA discs

→P. 509

Selecting and scanning a folder

■ Selecting a folder one at a time

Press  or  to select the desired folder.


■ Returning to the first folder

Press and hold  until you hear a beep.


■ Scanning the first file of all the folders (type A)

1 Press and hold  until you hear a beep.

The first ten seconds of the first file in each folder will be played.

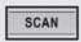

2 When the desired folder is reached, press  again.

Fast-forwarding and reversing files

To fast-forward or reverse, press and hold ">" or "<" on  until you hear a beep.

Selecting and scanning files

■ Selecting a file

Turn  or press ">" or "<" on  to select the desired file.

■ Scanning the files in a folder (type A)


Press .

The first ten seconds of each file will be played.

To cancel, press  again.

When the desired file is reached, press  again.

Playing and pausing files

To play or pause a file, press .

Random playback

■ Playing files from a folder in random order

Press .

To cancel, press  again.

■ Playing all the files from a disc in random order

Press and hold  until you hear a beep.

To cancel, press  again.

Repeat play

■ Repeating a file

Press .

To cancel, press  again.

■ Repeating all the files in a folder

Press and hold  until you hear a beep.

To cancel, press  again.

Switching the display

Press .

Each time the button is pressed, the display changes in the following order: Folder no./File no./Elapsed time → Folder name → File name → Album title (MP3 only) → Track title → Artist name

■ CD player protection feature



→P. 511

■ Display

→P. 511

■ When “ERROR”, “WAIT” or “NO MUSIC” is shown on the display

“ERROR”: This indicates a problem either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

“WAIT”: This indicates that operation is stopped due to a high temperature inside the player. Wait for a while and then press  or . If the CD still cannot be played back, contact your Lexus dealer.

“NO MUSIC”: This indicates that an MP3/WMA file is not included in the CD.

■ Discs that can be used

→P. 511

■ Lens cleaners

→P. 511

■ If discs are left inside the CD player or in the ejected position for extended periods of time

→P. 511

■ MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

● MP3 file compatibility

- Compatible standards
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies
MPEG1 LAYER3: 32, 44.1, 48 (kHz)
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility

- Compatible standards
WMA Ver. 7, 8, 9
- Compatible sampling frequencies
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)
Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

- Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible if the CD-R or CD-RW is not finalized. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used:

- Disc formats: CD-ROM Mode 1 and Mode 2
CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)
MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- Discs containing multi-session recordings

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

**NOTICE**

- **CDs and adapters that cannot be used**

→P. 512


- **CD player precautions**

→P. 513

Operating an iPod


Connecting an iPod enables you to enjoy music from the vehicle speakers.

► Type A

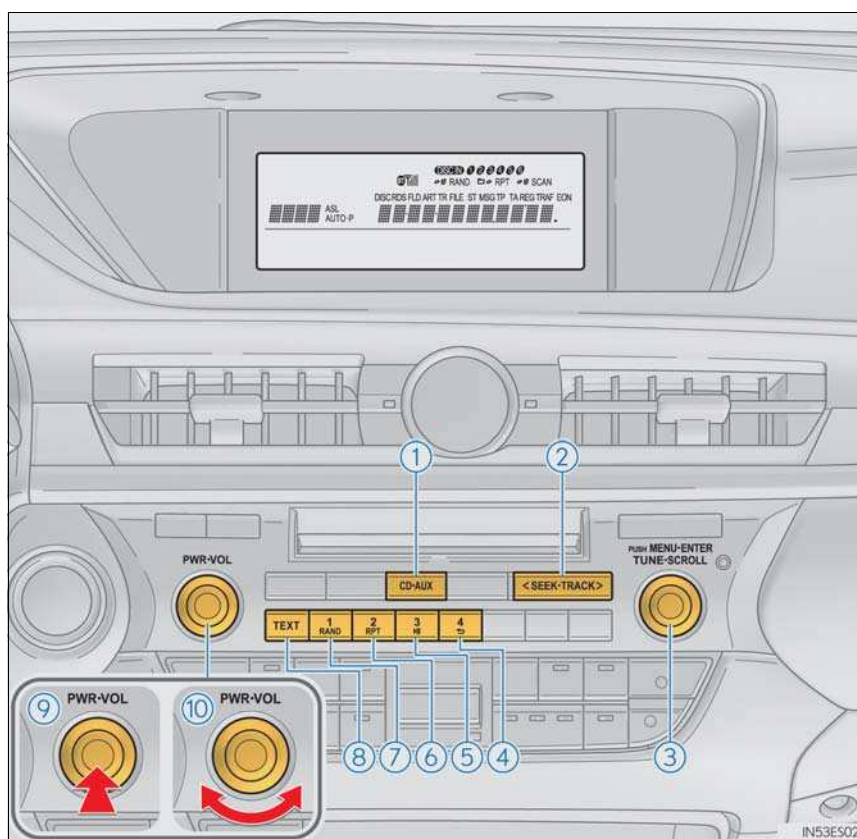

- | | |
|--------------------------------|---------------------------|
| ① Playback button | ⑥ Repeat play button |
| ② Song selector button | ⑦ Shuffle playback button |
| ③ iPod menu/Song selector knob | ⑧ Text button |
| ④ Go back button | ⑨ Power |
| ⑤ Playback/Pause button | ⑩ Volume |

► Type B

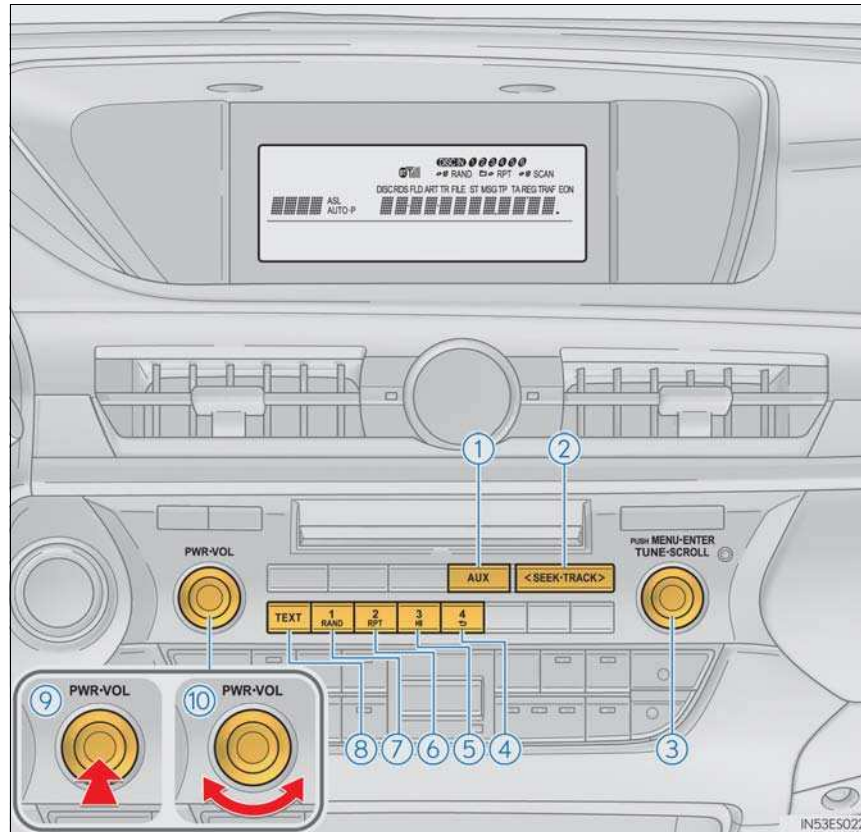


- | | |
|--------------------------------|---------------------------|
| ① Playback button | ⑥ Repeat play button |
| ② Song selector button | ⑦ Shuffle playback button |
| ③ iPod menu/Song selector knob | ⑧ Text button |
| ④ Go back button | ⑨ Power |
| ⑤ Playback/Pause button | ⑩ Volume |

5


Interior features

Connecting an iPod

- 1 Push the knob to release the lock, and lift the armrest to open fully.

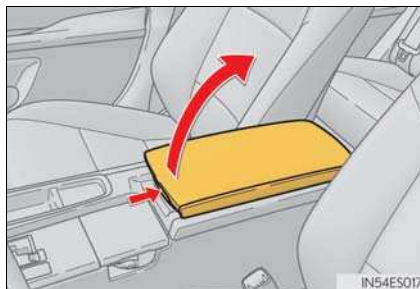

- 2 Open the cover and connect an iPod using an iPod cable.
Turn on the power of the iPod if it is not turned on.

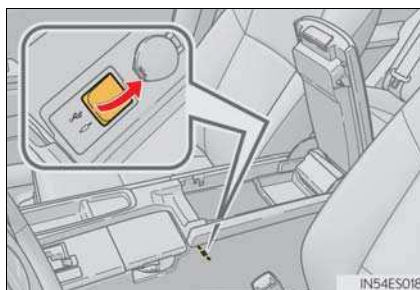

- 3 Press or .


Selecting a play mode


- 1 Press  to select iPod menu mode.
- 2 Turning  changes the play mode in the following order:
 “PLAYLISTS” → “ARTISTS” → “ALBUMS” → “SONGS” →
 “PODCASTS” → “GENRES” → “COMPOSERS” →
 “AUDIOBOOKS”
- 3 Press  to select the desired play mode.

■ Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
“PLAYLISTS”	Playlists select	Songs select	-	-
“ARTISTS”	Artists select	Albums select	Songs select	-
“ALBUMS”	Albums select	Songs select	-	-
“SONGS”	Songs select	-	-	-
“PODCASTS”	Albums select	Songs select	-	-
“GENRES”	Genre select	Artists select	Albums select	Songs select
“COMPOSERS”	Composers select	Albums select	Songs select	-
“AUDIOBOOKS”	Songs select	-	-	-


■ **Selecting a list**

1 Turn  to display the first selection list.



2 Press  to select the desired item.

Pressing the knob changes to the second selection list.


3 Repeat the same procedure to select the desired item.

To return to the previous selection list, select "GO BACK" or press .


Selecting songs

Turn  or press ">" or "<" on  to select the desired song.

Playing and pausing songs

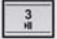To play or pause a song, press .

Fast-forwarding and reversing songs

To fast-forward or reverse, press and hold “>” or “<” on  until you hear a beep.

Shuffle playback

■ Playing songs from one playlist or album in random order

Press .

To cancel, press  again.


■ Playing songs from all the playlists or albums in random order

Press and hold  until you hear a beep.

To cancel, press  again.

Repeat play

Press .


To cancel, press  again.

Switching the display


Press .

Each time the button is pressed, the display changes in the following order:
Elapsed time → Album title → Track title → Artist name

Adjusting sound quality and volume balance

- 1 Press  to enter iPod menu mode.
- 2 Pressing  changes sound modes. (→P. 562)

■ About iPod

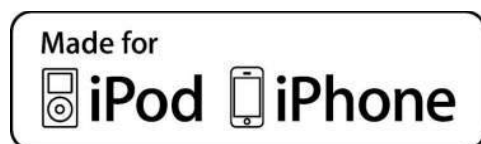

- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

■ iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle’s audio system instead.
- When the battery level of an iPod is very low, the iPod may not operate. If so, charge the iPod before use.
- Supported models (→P. 530)

■ iPod problems

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it.

For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

■ Display

→P. 511

■ Error messages

“ERROR”:

This indicates a problem in the iPod or its connection.

“NO MUSIC”:

This indicates that there is no music data in the iPod.

“EMPTY”:

This indicates that some available songs are not found in a selected playlist.

“UPDATE”:

This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

■ **Compatible models**

The following iPod[®], iPod nano[®], iPod classic[®], iPod touch[®] and iPhone[®] devices can be used with this system.


● **Made for**

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Depending on differences between models or software versions etc., some models might be incompatible with this system.

Items related to standards and limitations are as follows:

- Maximum number of lists in device: 9999
- Maximum number of songs in device: 65535
- Maximum number of songs per list: 65535

 CAUTION
<p>■ Caution while driving</p> <p>Do not connect iPod or operate the controls.</p>


 NOTICE**■ To prevent damage to iPod**

- Do not leave iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod or its terminal.
- Do not insert foreign objects into the port as this may damage the iPod or its terminal.

Operating a USB memory


Connecting a USB memory enables you to enjoy music from the vehicle speakers.

► Type A

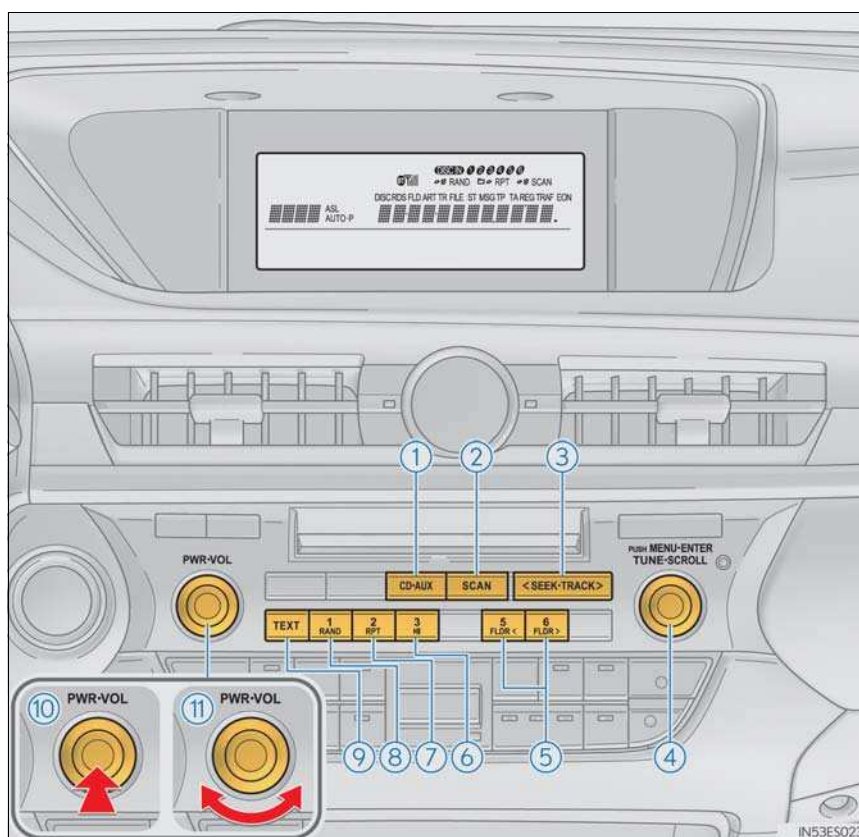

- | | |
|---------------------------|--------------------------|
| ① Playback button | ⑥ Playback/Pause button |
| ② Search playback button | ⑦ Repeat play button |
| ③ File selector button | ⑧ Random playback button |
| ④ File selector knob | ⑨ Text button |
| ⑤ Folder selector buttons | ⑩ Power |
| | ⑪ Volume |

► Type B

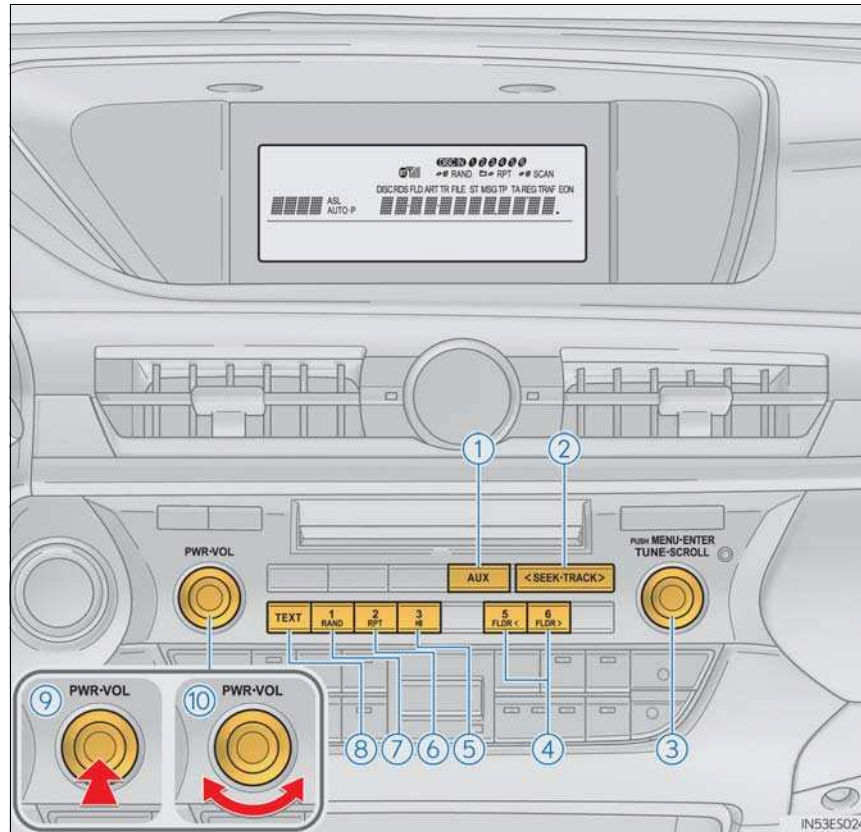


- | | |
|---------------------------|--------------------------|
| ① Playback button | ⑥ Repeat play button |
| ② File selector button | ⑦ Random playback button |
| ③ File selector knob | ⑧ Text button |
| ④ Folder selector buttons | ⑨ Power |
| ⑤ Playback/Pause button | ⑩ Volume |

5


Interior features

Connecting a USB memory

- 1 Push the knob to release the lock, and lift the armrest to open fully.

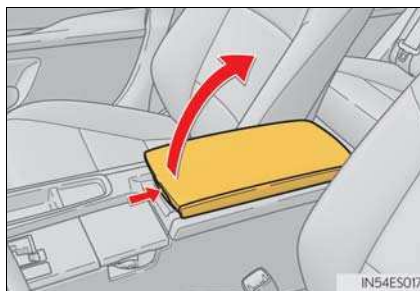

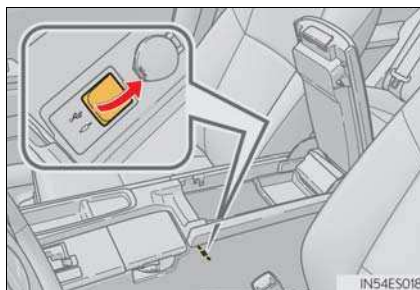

- 2 Open the cover and connect a USB memory.
Turn on the power of the USB memory if it is not turned on.



- 3 Press or .

Selecting and scanning a folder

■ Selecting folders one at a time

Press  or  to select the desired folder.


■ Returning to the first folder

Press and hold  until you hear a beep.

■ Scanning the first file of all the folders (type A)


1 Press and hold  until you hear a beep.

The first ten seconds of the first file in each folder will be played.

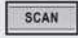2 When the desired folder is reached, press  again.

Selecting and scanning files


■ Selecting a file

Turn  or press ">" or "<" on  to select the desired file.

■ Scanning the files in a folder (type A)


Press .

The first ten seconds of each file will be played.


To cancel, press  again.

When the desired file is reached, press  again.

Playing and pausing files

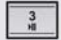To play or pause a file, press .


Fast-forwarding and reversing files

To fast-forward or reverse, press and hold ">" or "<" on  until you hear a beep.

Random playback

- **Playing files from a folder in random order**

Press .

To cancel, press  again.

- **Playing all the files from a USB memory in random order**


Press and hold  until you hear a beep.

To cancel, press  again.

Repeat play


- **Repeating a file**

Press .

To cancel, press  again.

- **Repeating all the files in a folder**

Press and hold  until you hear a beep.

To cancel, press  again.

Switching the display

Press .

Each time the button is pressed, the display changes in the following order:
Elapsed time → Folder name → File name → Album title (MP3 only) → Track title → Artist name

■ USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

■ Display

→P. 511

■ Error messages

“ERROR”:

This indicates a problem in the USB memory or its connection.

“NO MUSIC”:

This indicates that no MP3/WMA files are included in the USB memory.

■ USB memory**● Compatible devices**

USB memories that can be used for MP3 and WMA playback

● Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12 Mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 999 (including the root)
- Maximum number of files in a device: 65025
- Maximum number of files per folder: 255

● MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

● MP3 file compatibility

- Compatible standards
MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
- Compatible sampling frequencies
MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz)
MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz)
MPEG2.5: 8, 11.025, 12 (kHz)
- Compatible bit rates (compatible with VBR)
MPEG1 AUDIO LAYERII, III: 32-320 (kbps)
MPEG2 AUDIO LAYERII, III: 32-160 (kbps)
MPEG2.5: 32-160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility
 - Compatible standards
WMA Ver. 9
 - Compatible sampling frequencies
HIGH PROFILE 32, 44.1, 48 (kHz)
 - Compatible bit rates
HIGH PROFILE 32-320 (kbps, VBR)
- File names


The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.
- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.
- MP3 and WMA playback
 - When a device containing MP3 or WMA files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
 - When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point in which it was last used.
- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).
- Playback
 - To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
 - There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
 - Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

 **CAUTION****■ Caution while driving**

Do not connect USB memories or operate the controls.

 **NOTICE****■ To prevent damage to USB memories**

- Do not leave USB memories in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- Do not insert foreign objects into the port as this may damage the USB memory or its terminal.

Bluetooth® audio system

The Bluetooth® audio system enables you to enjoy music played on a portable digital audio player (portable player) from the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

Title	Page
Using the Bluetooth® audio system	P. 545
Operating a Bluetooth® enabled portable player	P. 550
Setting up a Bluetooth® enabled portable player	P. 554
Bluetooth® audio system setup	P. 561

■ Conditions under which the system will not operate

- If using a portable player that does not support Bluetooth®
- If the portable player is switched off
- If the portable player is not connected
- If the portable player's battery is low
- If the portable player is behind the seat or in the glove box or console box
- If metal is covering or touching the portable player

■ When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P. 593)

■ **About Bluetooth®**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.



■ **Compatible models**

- Bluetooth® specifications:
Ver. 1.1, or higher (Recommended: Ver. 1.2)
- Following profiles:
 - A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Conformed: Ver. 1.2)
 - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Conformed: Ver. 1.3)

Portable players must correspond to the above specifications in order to be connected to the Bluetooth® audio system. However, please note that some functions may be limited depending on the type of portable player.

■ **Certification for the Bluetooth® audio system**

FCC ID: AJDK018

IC ID: 775E-K018

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

⚠ CAUTION**■ FCC WARNING**

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition dans le Supplément C à OET65 et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée.

Cependant, cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

► For vehicles sold in the U.S.A.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► For vehicles sold in Canada

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

 **CAUTION**

■ **Caution while driving**

Do not connect portable players or operate the controls.

 **NOTICE**


■ **To prevent damage to portable players**

Do not leave portable players in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.

Using the Bluetooth® audio system

Audio unit

- ① Display
A message, name, number, etc. is displayed.
Lower-case characters and special characters cannot be displayed.
- ② Displays information that is too long to be displayed at one time on the display (press and hold)
- ③ Selects items such as menu and number
Turn: Selects an item
Press: Inputs the selected item
- ④ Bluetooth® connection condition
If "BT" is not displayed, the Bluetooth® audio system cannot be used.

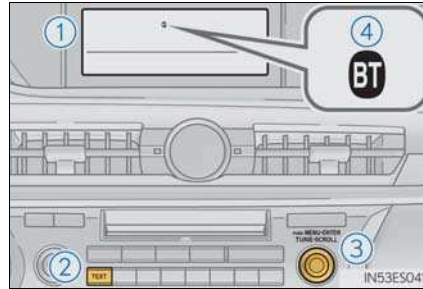

Operating the system using voice commands

By following voice guidance instructions output from the speaker, voice commands enable the operation of the Bluetooth® audio system without

the need to check the display or operate



■ Operation procedure when using voice commands

Press the talk switch and follow voice guidance instructions.

■ Auxiliary commands when using voice commands

The following auxiliary commands can be used when operating the system using a voice command:

“Cancel”:

Exits the Bluetooth® audio system

“Repeat”:

Repeats the previous voice guidance instruction

“Go back”:



Returns to the previous procedure


“Help”:

Reads aloud the function summary if a help comment is registered for the selected function

Using the Bluetooth® audio system for the first time

Before using the Bluetooth® audio system, it is necessary to register a Bluetooth® enabled portable player in the system. Follow the procedure below to register (pair) a portable player:

- 1 Press  and select “BT•A MENU” using .


- 2 Press the talk switch or select “BT•A Setup” using .

The introductory guidance and portable player name registration instructions are heard.


- 3 Select “Pair Audio Player (Pair Audio)” using a voice command or



- 4 Register a portable player name by either of the following methods:

- Select “Record Name” using , and say the name to be registered.
- Press the talk switch and say the name to be registered.

A voice guidance instruction to confirm the input is heard.

- 5 Select “Confirm” using a voice command or .

A passkey is displayed and heard, and a voice guidance instruction for inputting the passkey into the portable player is heard.

- 6 Input the passkey into the portable player.

Refer to the manual that comes with the portable player for the operation of the portable player.

Guidance for registration completion is heard.

If the portable player has a Bluetooth® phone, the phone can be registered at the same time. A voice guidance instruction to register a Bluetooth® phone is heard.

- 7 Select “Yes” or “No” using a voice command or (Bluetooth® phone →P. 569)



Menu list of the Bluetooth® audio system

First menu	Second menu	Third menu	Operation detail
"Setup"	"BT•A Setup"	"Pair Audio"	Registering a portable player
		"Connect"	Selecting a portable player to be used
		"Change Name"	Changing the registered name of a portable player
		"List Audios"	Listing the registered portable players
		"Set Passkey"	Changing the passkey
		"Delete Audio"	Deleting a registered portable player
	"System Setup"	"Guidance Vol"	Setting voice guidance volume
		"Device Name"	Displaying the Bluetooth® device address and name
		"Initialize"	Initializing the system

■ When using a voice command


For numbers, say a combination of single digits from zero to nine.

Say the command correctly and clearly.

■ Situations in which the system may not recognize your voice

- When driving on rough roads
- When driving at high speeds
- When air is blowing out of the vents onto the microphone
- When the air conditioning fan emits a loud noise

■ Operations that cannot be performed while driving


- Operating the system with 
- Registering a portable player to the system

■ Changing the passkey

→P. 559


Operating a Bluetooth® enabled portable player

► Type A

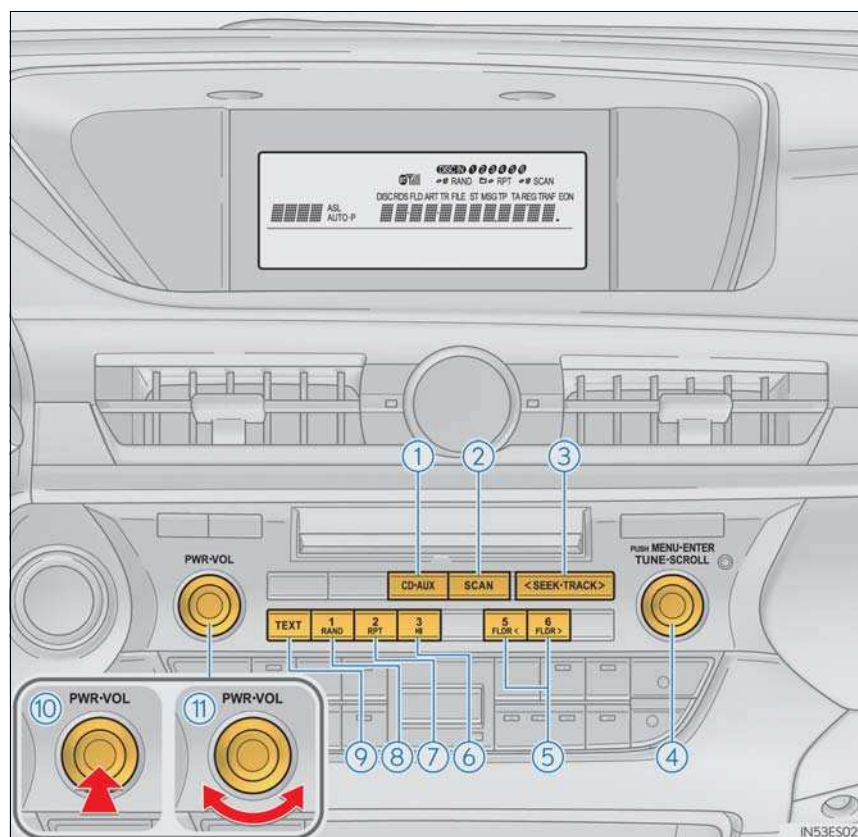

- | | |
|--------------------------|--------------------------|
| ① Playback button | ⑥ Playback/Pause button |
| ② Search playback button | ⑦ Repeat play button |
| ③ Track selector button | ⑧ Random playback button |
| ④ BT•A menu knob | ⑨ Text button |
| ⑤ Album selector buttons | ⑩ Power |
| | ⑪ Volume |

▶ Type B

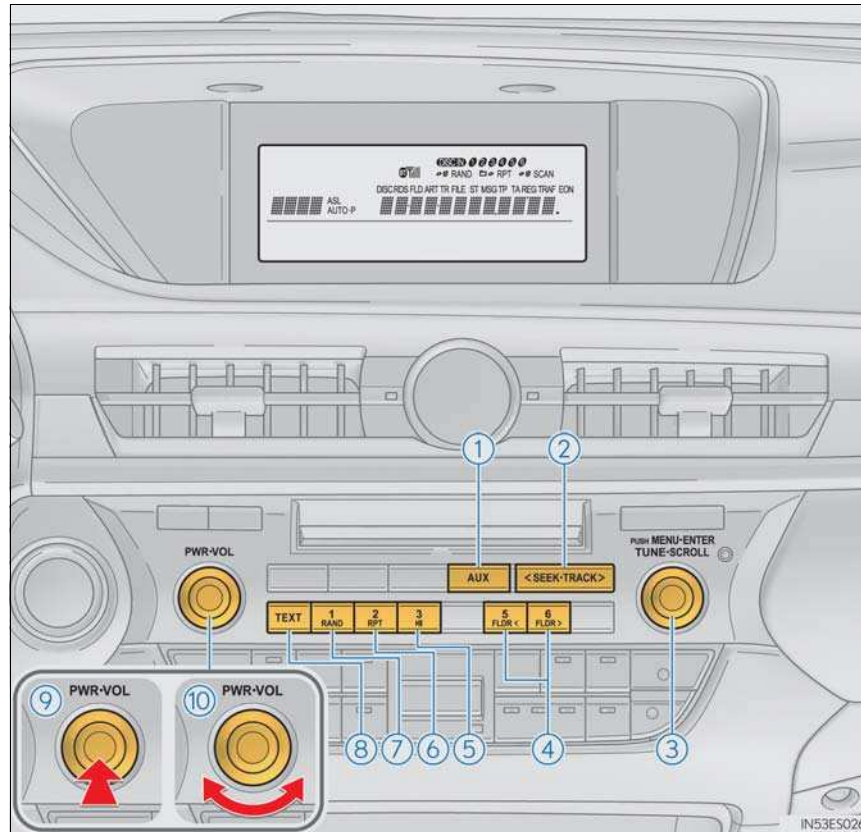
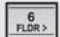


- | | |
|--------------------------|--------------------------|
| ① Playback button | ⑥ Repeat play button |
| ② Track selector button | ⑦ Random playback button |
| ③ BT•A menu knob | ⑧ Text button |
| ④ Album selector buttons | ⑨ Power |
| ⑤ Playback/Pause button | ⑩ Volume |

5

Interior features

Selecting an album

To select the desired album, press  or .


Selecting tracks

Press ">" or "<" on  to select the desired track.

Playing and pausing tracks


To play or pause a track, press .

Fast-forwarding and reversing tracks

To fast-forward or reverse, press and hold ">" or "<" on  until you hear a beep.

Random playback

Press .

To cancel, press  again.

Repeat play

Press .

To cancel, press  again.

Scanning tracks (type A)

Press .

To cancel, press  again.

Switching the display

Press .

Each time the button is pressed, the display changes in the following order:
Elapsed time → Album title → Track title → Artist name

■ Bluetooth® audio system functions

Depending on the portable player that is connected to the system, certain functions may not be available.

■ Display

→P. 511

■ Error messages

“Memory Error”: This indicates a problem in the system.

Setting up a Bluetooth® enabled portable player

Registering a portable player in the Bluetooth® audio system allows the system to function. The following functions can be used for registered portable players:

Functions and operation procedures




▶ Pattern A

To enter the menu for each function, follow the steps below using a voice


command or  :

- Registering a portable player
 1. "Setup" → 2. "Bluetooth Audio Setup (BT•A Setup)" → 3. "Pair Audio Player (Pair Audio)"
- Selecting a portable player to be used
 1. "Setup" → 2. "Bluetooth Audio Setup (BT•A Setup)" → 3. "Connect Audio Player (Connect)"
- Changing the registered name of a portable player
 1. "Setup" → 2. "Bluetooth Audio Setup (BT•A Setup)" → 3. "Change Name"
- Listing the registered portable players
 1. "Setup" → 2. "Bluetooth Audio Setup (BT•A Setup)" → 3. "List Audio Players (List Audios)"
- Changing the passkey
 1. "Setup" → 2. "Bluetooth Audio Setup (BT•A Setup)" → 3. "Set Passkey"
- Deleting a registered portable player
 1. "Setup" → 2. "Bluetooth Audio Setup (BT•A Setup)" → 3. "Delete Audio Player (Delete Audio)"

▶ Pattern B

- 1 Press  to select "BT•A MENU".
- 2 Press the talk switch or select "BT•A Setup" using .
- 3 Select one of the following functions using a voice command or .
 - Registering a portable player
"Pair Audio Player (Pair Audio)"
 - Selecting a portable player to be used
"Connect Audio Player (Connect)"
 - Changing the registered name of a portable player
"Change Name"
 - Listing the registered portable players
"List Audio Players (List Audios)"
 - Changing the passkey
"Set Passkey"
 - Deleting a registered portable player
"Delete Audio Player (Delete Audio)"

Registering a portable player

Select "Pair Audio Player (Pair Audio)" using a voice command or , and perform the procedure for registering a portable player. (→P. 547)

Selecting a portable player to be used

- 1 Select "Connect Audio Player (Connect)" using a voice command or



- ▶ Pattern A

- 2 Select the portable player to be used by either of the following meth-

ods, and select "Confirm" by using a voice command or  :


- a. Press the talk switch and say the name of the desired portable player.
- b. Press the talk switch and say "List Audio Players". When the name of the desired portable player is read aloud, press the talk switch.

- ▶ Pattern B

- 2 Select the portable player to be used using .

- ▶ Pattern A

- 3 Press the talk switch and say "From Car" or "From Audio player", and

select "Confirm" by using a voice command or .

- ▶ Pattern B

- 3 Select "From Car" or "From Audio", using .

If "From Car" is selected, the portable player will be automatically connected whenever the "START STOP ENGINE" <"POWER"> switch is in either ACCESSORY or IGNITION ON <ON> mode.

Changing the registered name of a portable player

- 1** Select “Change Name” using a voice command or



► Pattern A

- 2** Select the name of the portable player to be changed by either of the following methods, and select “Confirm” using a voice command or



- Press the talk switch and say the name of the desired portable player.
- Press the talk switch and say “List Audio Players”. When the name of the desired portable player is read aloud, press the talk switch.

► Pattern B

- 2** Select the desired portable player name to be changed using



- 3** Press the talk switch or select “Record Name” using



the new name.

- 4** Select “Confirm” using a voice command or



5

Interior features

Listing the registered portable players

Select “List Audio Players (List Audios)” using a voice command or




. The list of registered portable players will be read aloud.

When listing is complete, the system returns to “BT•A Setup”.

Pressing the talk switch while the name of a portable player is being read aloud selects the portable player, and the following functions will become available:

- Selecting a portable player: “Connect Audio Player (Connect)”
- Changing a registered name: “Change Name”
- Deleting a portable player: “Delete Audio Player (Delete Audio)”

Changing the passkey

- 1** Select “Set Passkey” using a voice command or .

▶ Pattern A

- 2** Press the talk switch, say a 4 to 8-digit number, and select “Confirm”


using a voice command or .

▶ Pattern B

- 2** Select a 4 to 8-digit number using .

The number should be input 1 digit at a time.

- 3** When the entire number to be registered as a passkey has been input,

press  again.

If the number to be registered has 8 digits, pressing of the knob is not necessary.


Deleting a registered portable player

- 1 Select "Delete Audio Player (Delete Audio)" using a voice command



- ▶ Pattern A

- 2 Select the portable player to be deleted by either of the following meth-


ods and select "Confirm" using a voice command or  :

- a. Press the talk switch and say the name of the desired portable player.
- b. Press the talk switch and say "List Audio Players". When the name of the desired portable player is read aloud, press the talk switch.

- ▶ Pattern B

- 2 Select the desired portable player to be deleted using 

If the portable player to be deleted is paired as a Bluetooth[®] phone, the registration of the cellular phone can be deleted at the same time. A voice guidance instruction to delete a cellular phone is heard.

- 3 Select "Yes" or "No" using a voice command or 

(Bluetooth[®] phone →P. 569)

■ The number of portable players that can be registered

Up to 2 portable players can be registered in the system.

Bluetooth® audio system setup


System setup items and operation procedures

▶ Pattern A

To enter the menu for each function, follow the steps below using a voice

command or  : (→P. 590)

▶ Pattern B

1 Press  to select "BT•A MENU".


2 Select "System Setup" using .

3 Select one of the following items using  :

- Setting voice guidance volume
"Guidance Vol" (→P. 592)
- Displaying the Bluetooth® device address and name
"Device Name" (→P. 593)
- Initializing the system
"Initialize" (→P. 593)

Optimal use of the audio system

- ① Displays the current mode
- ② Changes the following settings:
 - Sound quality and volume balance →P. 563
The sound quality and balance setting can be changed to produce the best sound.
 - Automatic Sound Levelizer on/off →P. 563

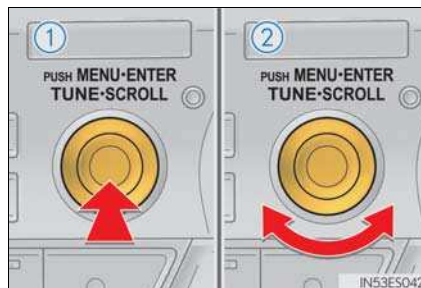

Adjusting sound quality and volume balance

■ Changing sound quality modes



Pressing the button changes sound modes in the following order:
“BAS” → “MID” → “TRE” → “FAD” → “BAL” → “ASL”



■ Adjusting sound quality

Turning  adjusts the level.

Mode displayed	Sound quality mode	Level	Turn counter-clockwise	Turn clockwise
"BAS"	Bass*	-5 to 5	Low	High
"MID"	Mid-range*	-5 to 5		
"TRE"	Treble*	-5 to 5		
"FAD"	Front/rear volume balance	F7 to R7	Shifts to rear	Shifts to front
"BAL"	Left/right volume balance	L7 to R7	Shifts to left	Shifts to right

*: The sound quality level is adjusted individually in each audio mode.

Turning the Automatic Sound Levelizer (ASL) on/off


Turning  clockwise turns on the ASL, and turning  counterclockwise turns off the ASL.

ASL automatically adjusts the volume and tone quality according to the noise level as you drive your vehicle.


Using the AUX port

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

- 1 Push the knob to release the lock, and lift the armrest to open fully.

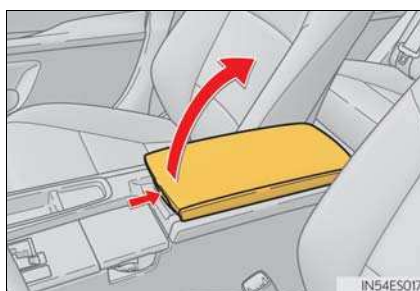

- 2 Open the cover and connect the portable audio device.

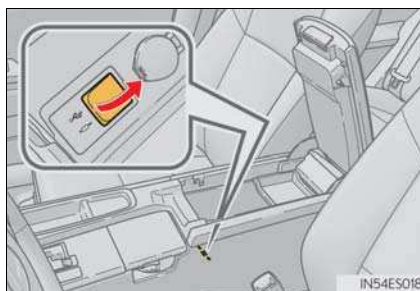

- 3 Press  or  .

■ Operating portable audio devices connected to the audio system

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.


■ When using a portable audio device connected to the power outlet

Noise may occur during playback. Use the power source of the portable audio device.

Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

- ① Radio mode: Selects a radio station
- CD mode: Selects a track, file (MP3 and WMA) and disc
- Bluetooth[®] audio mode: Selects a track and album
- iPod mode: Selects a song
- USB memory mode: Selects a file and folder
- ② Increases/decreases volume
- ③ Turns the power on, selects an audio source

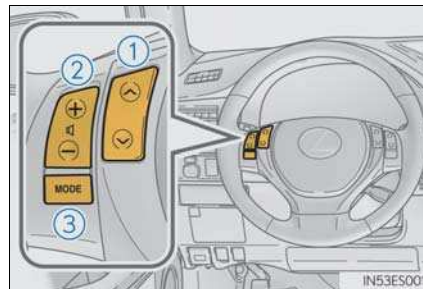


Turning the power on

Press **MODE** when the audio system is turned off.

The audio system can be turned off by holding the switch down until you hear a beep.

Changing the audio source

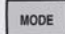Press  when the audio system is turned on. The audio source changes as follows each time the button is pressed. If no discs are inserted in the player, that mode will be skipped.



Type A:

FM1→FM2→SAT1→SAT2→SAT3→CD player→
Bluetooth® audio→AUX→iPod or USB memory→
AM→FM1

Type B:


FM1→FM2→CD player→Bluetooth® audio→AUX→
iPod or USB memory→AM→FM1

Adjusting the volume



Press  to increase the volume and  to decrease the volume.

Hold down the button to continue increasing or decreasing the volume.

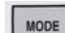Selecting a radio station




1 Press  to select radio mode.

2 Press  or  to select a radio station.




To scan for receivable stations, press and hold  or  on the button until you hear a beep.

To cancel, press either switch.




Selecting a track/file or song

- 1 Press  to select CD, Bluetooth[®] audio, iPod or USB memory mode.
- 2 Press  or  to select the desired track/file or song.




Selecting an album

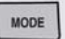- 1 Press  to select Bluetooth[®] audio mode.
- 2 Press and hold  or  until you hear a beep.

Selecting a folder

- 1 Press  to select USB memory mode.
- 2 Press and hold  or  until you hear a beep.

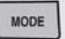Selecting a disc in the CD player

- 1 Press  to select CD mode.
- 2 Press and hold  or  until you hear a beep.

CAUTION

 **To reduce the risk of an accident**

Exercise care when operating the audio switches on the steering wheel.

Hands-free system (for cellular phone)

The hands-free system is a function that allows you to use your cellular phone without touching it.

This system supports Bluetooth[®] cellular phones. Bluetooth[®] is a wireless data system that allows the cellular phone to wirelessly connect to the hands-free system and make/receive calls.

Title	Page
Using the hands-free system	P. 573
Making a phone call	P. 581
Setting a cellular phone	P. 585
Security and system setup	P. 590
Using the phone book	P. 595

■ Conditions under which the system will not operate

- If using a cellular phone that does not support Bluetooth[®]
- If the cellular phone is switched off
- If you are outside service range
- If the cellular phone is not connected
- If the cellular phone's battery is low
- If the cellular phone is behind the seat or in the glove box or console box
- If metal is covering or touching the phone

■ When using the hands-free system

- The audio system and voice guidance are muted when making a call.
- If both parties speak at the same time, it may be difficult to hear.
- If the incoming call volume is overly loud, an echo may be heard.
- Try to face toward the microphone as much as possible when speaking.
- In the following circumstances, it may be difficult to hear the other party:
 - When driving on unpaved roads
 - When driving at high speeds
 - When a window is open
 - When the air conditioning is blowing directly on the microphone
 - When the air conditioning is set to high

■ When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P. 593)

■ About Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

**■ Compatible models**

Compatible with HFP (Hands Free Profile) Ver. 1.0 or higher (Conformed: Ver. 1.5) and OPP (Object Push Profile) Ver. 1.1.

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone. If your cellular phone supports OPP alone, you cannot use the Bluetooth® phone.

■ **Certification for the hands-free system**

FCC ID: AJDK018

IC ID: 775E-K018

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

⚠ CAUTION**■ FCC WARNING**

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition dans le Supplément C à OET65 et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée.

Cependant, cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

► For vehicles sold in the U.S.A.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► For vehicles sold in Canada

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

 CAUTION **Caution while driving**

Do not use a cellular phone or connect the Bluetooth[®] phone.


 NOTICE **To prevent damage to cellular phones**

Do not leave cellular phones in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the phone.

Using the hands-free system (for cellular phones)


Audio unit

- ① Display
A message, name, phone number, etc. is displayed.
Lower-case characters and special characters cannot be displayed.
- ② Displays information that is too long to be displayed at one time on the display (press and hold)
- ③ Selects speed dials
- ④ Selects items such as menu and number
Turn: Selects an item
Press: Inputs the selected item
- ⑤ Bluetooth[®] connection condition
If "BT" is not displayed, the hands-free phone system cannot be used.
- ⑥ Reception level

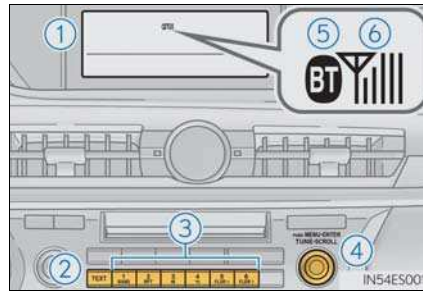

Steering wheel switches


- ① Volume
 - During an incoming call: Adjusts the ring tone volume
 - During an ongoing call: Adjusts the receiver volume
 - The voice guidance volume cannot be adjusted using this button.
- ② Talk switch
 - Turns the voice command system on (press)/turns the voice command system off (press and hold)
- ③ Off-hook switch
 - Turns the hands-free system on/starts a call
- ④ On-hook switch
 - Turns the hands-free system off/ends a call/refuses a call

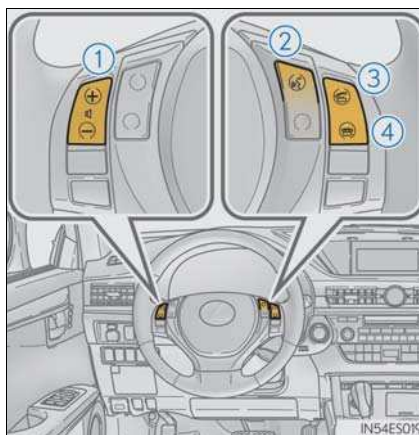

Microphone

You can use the microphone when talking on the phone.

The person you are speaking to can be heard from the front speakers.

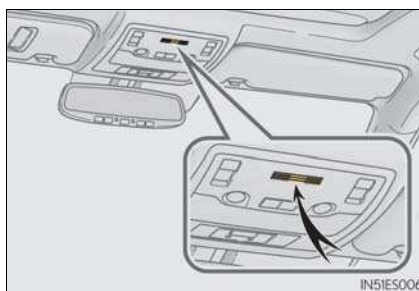

To use the hands-free system, you must register your Bluetooth® phone in the system. (→P. 576)

Operating the system using voice commands

By following voice guidance instructions output from the speaker, voice commands enable the operation of the hands-free phone system without

the need to check the display or operate



■ Operation procedure when using voice commands

Press the talk switch and follow voice guidance instructions.

■ Auxiliary commands when using voice commands

The following auxiliary commands can be used when operating the system using a voice command:

“Cancel”:

Exits the hands-free phone system

“Repeat”:

Repeats the previous voice guidance instruction

“Go back”:

Returns to the previous procedure

“Help”:


Reads aloud the function summary if a help comment is registered for the selected function

Using the hands-free phone system for the first time

Before using the hands-free phone system, it is necessary to register a cellular phone in the system. The system will enter phone registration mode automatically when starting the system with no cellular phone registered. Follow the procedure below to register (pair) a cellular phone:

- 1 Press the off-hook switch or the talk switch.

The introductory guidance and phone name registration instructions are heard.

- 2 Select "Pair Phone" using a voice command or .

- 3 Register a phone name by either of the following methods:

- a. Select "Record Name" using , and say the name to be registered.

- b. Press the talk switch and say the name to be registered.

A voice guidance instruction to confirm the input is heard.

- 4 Select "Confirm" using a voice command or .


A passkey is displayed and heard, and a voice guidance instruction for inputting the passkey into the cellular phone is heard.

- 5 Input the passkey into the cellular phone.

Refer to the manual that comes with the cellular phone for the operation of the phone.

Guidance for registration completion is heard.

If the cellular phone has a Bluetooth[®] audio player, the audio player can be registered at the same time. A voice guidance instruction to register a Bluetooth[®] audio player is heard.

- 6 Select “Yes” or “No” using a voice command or .

(Bluetooth® audio player →P. 542)

Menu list of the hands-free phone system

■ Normal operation

First menu	Second menu	Third menu	Operation detail
“Callback”	-	-	Dialing a number stored in the incoming call history memory
“Redial”	-	-	Dialing a number stored in the outgoing call history memory
“Phone-book”	“Add Entry”	-	Adding a new phone number
	“Change Name”	-	Changing the registered name in the phone book
	“Delete Entry”	-	Deleting the registered data
	“Del Spd Dial”	-	Deleting speed dials
	“List Names”	-	Listing the registered data
	“Speed Dial”	-	Setting speed dials

First menu	Second menu	Third menu	Operation detail
"Setup"	"Security"	"Set PIN"	Setting a PIN code
		"Phbk Lock"	Locking the phone book
		"Phbk Unlock"	Unlocking the phone book
	"Phone Setup"	"Pair Phone"	Registering the cellular phone to be used
		"Connect"	Selecting a cellular phone to be used
		"Change Name"	Changing the registered name of a cellular phone
		"List Phones"	Listing the registered cellular phones
		"Set Passkey"	Changing the passkey
		"Delete Phone"	Deleting a registered cellular phone
	"System Setup"	"Guidance Vol"	Setting voice guidance volume
		"Device Name"	Displaying the Bluetooth [®] device address and name
"Initialize"		Initializing the system	

■ Short cut key operation

First menu Second menu	Second menu	Operation detail
"Dial XXX (name)"	-	Dialing a name registered in the phone book
"Phone book add Entry"	-	Adding a new phone number
"Phone book Change name"	-	Changing a registered name in the phone book
"Phone book Delete Entry"	-	Deleting the registered data
"Phone book List names"	-	Listing the registered data
"Phone book Set Speed Dial"	-	Setting speed dials
"Phone book Delete Speed Dial"	-	Deleting speed dials
"Dial XXX (number)"	-	Dialing by inputting a number
"Phonebook"	"Phonebook Unlock"	Unlocking the phone book
	"Phonebook Lock"	Locking the phone book

■ **Automatic volume adjustment**

When vehicle speed reaches 50 mph (80 km/h) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 43 mph (70 km/h) or less.

■ **When using a voice command**


For numbers, say a combination of single digits from zero to nine, # (pound), * (star), and + (plus).

Say the command correctly and clearly.

■ **Situations in which the system may not recognize your voice**

- When driving on rough roads
- When driving at high speeds
- When air is blowing out of the vents onto the microphone
- When the air conditioning fan emits a loud noise

■ **Operations that cannot be performed while driving**

- Operating the system with 
- Registering a cellular phone to the system

■ **Changing the passkey**

→P. 588

Making a phone call

Functions

- **Making a phone call**
 - Dialing by inputting a number
“Dial by number”
 - Dialing by inputting a name
“Dial by name”
 - Speed dialing
 - Dialing a number stored in the outgoing history memory
“Redial”
 - Dialing a number stored in the incoming history memory
“Call back”
- **Receiving a phone call**
 - Answering a phone call
 - Refusing a phone call
- **Transferring a phone call**
- **Call waiting**
- **Using the call history memory**
 - Dialing
 - Storing number in the phone book
 - Deleting

Dialing by inputting a number

- 1 Press the talk switch and say “Dial by number”.
- 2 Press the talk switch and say the phone number.
- 3 Dial by one of the following methods:
 - a. Press the off-hook switch.
 - b. Press the talk switch and say “Dial”.

-
-
- c. Select “Dial” using



Dialing by inputting a name

- 1 Press the talk switch and say “Dial by name”.
- 2 Select a registered name to be input by either of the following methods:
 - a. Press the talk switch and say a registered name.
 - b. Press the talk switch and say “List Names”. Press the talk switch when the desired name is read aloud.
- 3 Dial by one of the following methods:
 - a. Press the off-hook switch.
 - b. Press the talk switch and say “Dial”.

-
-
- c. Select “Dial” using



Speed dialing

- 1 Press the off-hook switch.
- 2 Press the preset button in which the desired number is registered.
- 3 Press the off-hook switch.

When receiving a phone call

■ Answering a phone call

Press the off-hook switch.

■ Refusing a phone call

Press the on-hook switch.

Transferring a phone call

A call can be transferred between the cellular phone and system while dialing, receiving a call, or during a call. Use one of the following methods:

a. Operate the cellular phone.

Refer to the manual that comes with the cellular phone for the operation of the phone.

b. Press the off-hook switch*¹.

c. Press the talk switch and say "Call Transfer"*².

*¹: This operation can be performed only when transferring a call from the cellular phone to the system during a call.

*²: While the vehicle is in motion, calls cannot be transferred from the system to the cellular phone.

Call waiting

When a call is interrupted by an incoming call from a third party, the following options will become available:


● Answer the incoming call: Press the off-hook switch. (Press the off-hook switch again as necessary to switch back and forth between calls.)

● Refuse the incoming call: Press the on-hook switch.


Using the call history memory

Follow the procedure below to use a number stored in the call history memory:


- 1 Press the talk switch and say “Redial” (when using a number stored in the outgoing call history memory) or “Call back” (when using a number stored in the incoming call history memory).
- 2 Select the number by either of the following methods:
 - a. Say “Previous” or “Go back” until the desired number is displayed.

b. Select the desired number using  .

- 3 The following operations can be performed:

Dialing: Press the off-hook switch or select “Dial” using a voice command or  .

Storing the number in the phone book: Select “Store” and then

“Confirm” using a voice command or  .

Deleting: Select “Delete” and then “Confirm” using a voice command

or  .

■ **Call waiting**

- If your phone does not support HFP Ver. 1.5, this function cannot be used.
- Call waiting operation may differ depending on your cellular phone and service provider.

■ **Call history**

Up to 5 numbers can be stored in each of the outgoing and incoming call history memories.

■ **When talking on the phone**

- Do not talk at the same time as the other party.
- Keep the volume of the incoming voice down. Otherwise, voice echo will increase.

Setting a cellular phone

Registering a cellular phone in the hands-free phone system allows the system to function. The following functions can be used for registered cellular phones:


Functions and operation procedures

To enter the menu for each function, follow the steps below using a voice

command or  :

- Registering a cellular phone
 1. "Setup" → 2. "Phone Setup" → 3. "Pair Phone"
- Selecting a cellular phone to be used
 1. "Setup" → 2. "Phone Setup" → 3. "Connect Phone (Connect)"
- Changing the registered name of a cellular phone
 1. "Setup" → 2. "Phone Setup" → 3. "Change Name"
- Listing the registered cellular phones
 1. "Setup" → 2. "Phone Setup" → 3. "List Phones"
- Changing the passkey
 1. "Setup" → 2. "Phone Setup" → 3. "Set Passkey"
- Deleting a registered cellular phone
 1. "Setup" → 2. "Phone Setup" → 3. "Delete Phone"

Registering a cellular phone

Select "Pair Phone" using a voice command or  , and perform the procedure for registering a cellular phone. (→P. 576)

Selecting a cellular phone to be used

- 1 Select “Connect Phone (Connect)” using a voice command or



- ▶ Pattern A

- 2 Select the cellular phone to be used by either of the following methods,

and select “Confirm” by using a voice command or



- a. Press the talk switch and say the name of the desired cellular phone.
- b. Press the talk switch and say “List Phones”. When the name of the desired cellular phone is read aloud, press the talk switch.

- ▶ Pattern B

- 3 Select the cellular phone to be used using



Changing the registered name of a cellular phone

- 1 Select “Change Name” using a voice command or




- ▶ Pattern A


- 2 Select the name of the cellular phone to be changed by either of the following methods, and select “Confirm” using a voice command or



- a. Press the talk switch and say the name of the desired cellular phone.
- b. Press the talk switch and say “List Phones”. When the name of the desired cellular phone is read aloud, press the talk switch.


▶ Pattern B

2 Select the desired cellular phone name to be changed using .

3 Press the talk switch or select “Record Name” using , and say the new name.

4 Select “Confirm” using a voice command or .

Listing the registered cellular phones


Select “List Phones” using a voice command or . The list of registered cellular phones will be read aloud.

When listing is complete, the system returns to “Phone Setup”.

Pressing the talk switch while the name of a cellular phone is being read aloud selects the cellular phone, and the following functions will become available:

- Selecting a cellular phone: “Connect Phone (Connect)”
- Changing a registered name: “Change Name”
- Deleting a cellular phone: “Delete Phone”

Changing the passkey


- 1 Select "Set Passkey" using a voice command or .

▶ Pattern A

- 2 Press the talk switch, say a 4 to 8-digit number, and select "Confirm"

using a voice command or .

▶ Pattern B

- 2 Select a 4 to 8-digit number using .


The number should be input 1 digit at a time.

- 3 When the entire number to be registered as a passkey has been input,

press  again.


If the number to be registered has 8 digits, pressing of the knob is not necessary.

Deleting a registered cellular phone

- 1 Select "Delete Phone" using a voice command or .

▶ Pattern A

- 2 Select the cellular phone to be deleted by either of the following meth-

ods and select "Confirm" using a voice command or  :

- a. Press the talk switch and say the name of the desired cellular phone.
- b. Press the talk switch and say "List Phones". When the name of the desired cellular phone is read aloud, press the talk switch.

▶ Pattern B

- 2 Select the desired cellular phone to be deleted using



If the cellular phone to be deleted is paired as a Bluetooth[®] audio player, the registration of the audio player can be deleted at the same time. A voice guidance instruction to delete a Bluetooth[®] audio player is heard.

- 3 Select “Yes” or “No” using a voice command or



(Bluetooth[®] audio player →P. 542)

■ **The number of cellular phones that can be registered**

Up to 6 cellular phones can be registered in the system.

Security and system setup


Security setting items and operation procedures

To enter the menu for each function, follow the steps below using a voice

command or  :

- Setting or changing the PIN (Personal Identification Number)
 1. "Setup" → 2. "Security" → 3. "Set PIN"
- Locking the phone book
 1. "Setup" → 2. "Security" → 3. "Phonebook Lock (Phbk Lock)"
- Unlocking the phone book
 1. "Setup" → 2. "Security" → 3. "Phonebook Unlock (Phbk Unlock)"


System setup items and operation procedures

To enter the menu for each function, follow the steps below using  :


- Setting voice guidance volume
 1. "Setup" → 2. "System Setup" → 3. "Guidance Vol"
- Displaying the Bluetooth[®] device address and name
 1. "Setup" → 2. "System Setup" → 3. "Device Name"
- Initializing the system
 1. "Setup" → 2. "System Setup" → 3. "Initialize"

Setting or changing the PIN


■ Setting a PIN


- 1 Select "Set PIN" using a voice command or .

- 2 Enter a PIN using a voice command or .


When using , input the code 1 digit at a time.

■ Changing the PIN


- 1 Select "Set PIN" using a voice command or .

- 2 Enter the registered PIN using a voice command or .


- 3 Enter a new PIN using a voice command or .

When using , input the code 1 digit at a time.

Locking or unlocking the phone book

- 1 Select "Phonebook Lock (Phbk Lock)" or "Phonebook Unlock (Phbk Unlock)" using a voice command or  .


- 2 Input the PIN by either of the following methods and select "Confirm"

using a voice command or  :

a. Press the talk switch and say the registered PIN.


b. Input a new PIN using  .

Setting voice guidance volume




- 1 Select "Guidance Vol" using  .

- 2 Change the voice guidance volume.



To decrease the volume: Turn  counterclockwise.

To increase the volume: Turn  clockwise.

Displaying the Bluetooth® device address and name

- 1 Select “Device Name” using .
- 2 Turn  to display the Bluetooth® device address and name.
- 3 Select “Go Back” using  to return to “System Setup”.

Initializing the system

- 1 Select “Initialize” and then “Confirm” using .
- 2 Select “Confirm” again using .

■ **Initialization**

- The following data in the system can be initialized:
 - Phone book
 - Outgoing and incoming call history
 - Speed dials
 - Registered cellular phone data
 - Security code
 - Registered Bluetooth[®] enabled portable player data
 - Passkey for the cellular phones
 - Passkey for the Bluetooth[®] audio players
 - Guidance volume
 - Receiver volume
 - Ring tone volume
- Once the initialization has been completed, the data cannot be restored to its original state.

■ **When the phone book is locked**

The following functions cannot be used:

- Dialing by inputting a name
- Speed dialing
- Dialing a number stored in the call history memory
- Using the phone book

Using the phone book

Phonebook items and operation procedures


To enter the menu for each function, follow the steps below using a voice

command or  :


- Adding a new phone number
 1. "Phonebook" → 2. "Add Entry"
- Changing the registered name in the phone book
 1. "Phonebook" → 2. "Change Name"
- Listing the registered data
 1. "Phonebook" → 2. "List Names"
- Setting speed dials
 1. "Phonebook" → 2. "Set Speed Dial (Speed Dial)"
- Deleting the registered data
 1. "Phonebook" → 2. "Delete Entry"
- Deleting speed dials
 1. "Phonebook" → 2. "Delete Speed Dial (Del Spd Dial)"

Adding a new phone number

The following methods can be used to add a new phone number:


- Inputting a phone number using a voice command
- Transferring data from the cellular phone
- Inputting a phone number using 
- Selecting a phone number from the outgoing or incoming call history

■ Adding procedure

1 Select "Add Entry" using a voice command or .

2 Use one of the following methods to input a telephone number:

Inputting a telephone number using a voice command:

STEP2-1 Select "By Voice" using a voice command or .

STEP2-2 Press the talk switch, say the desired number, and select "Confirm" using a voice command.

Transferring data from the cellular phone:

STEP2-1 Select "By Phone" and then "Confirm" using a voice com-


mand or .


STEP2-2 Transfer the data from the cellular phone.


Refer to the manual that comes with the cellular phone for details on transferring data.



STEP2-3 Select the data to be registered by either of the following methods:

a. Say "Previous" or "Next" until the desired data is displayed, and select "Confirm" using a voice command.

b. Select the desired data using .


Inputting a phone number using  :

STEP2-1 Select "Manual Input" using  .

STEP2-2 Input a phone number using  , and press  again.

Input the phone number 1 digit at a time.

Selecting a phone number from the outgoing or incoming call history:

STEP2-1 Select "Call History" using a voice command or  .

STEP2-2 Select "Outgoing" or "Incoming" using a voice command


or  .

STEP2-3 Select the data to be registered by either of the following methods:

a. Say "Previous" or "Go back" until the desired data is displayed, and select "Confirm" using a voice command.


b. Select the desired data using  .

- 3 Select the name to be registered by either of the following methods,

and select “Confirm” using a voice command or  :

a. Press the talk switch and say the desired name.

b. Select “Record Name” using  and say the desired name.

- 4 Select “Confirm” using a voice command or  .

In 4, selecting “Set Speed Dial (Speed Dial)” instead of “Confirm” registers the newly added phone number as a speed dial.

Changing the registered name in the phone book

- 1** Select “Change Name” using a voice command or



- ▶ Pattern A

- 2** Select the name to be changed by either of the following methods, and

select “Confirm” using a voice command or



- Press the talk switch and say the desired name.
- Press the talk switch and say “List Names”. When the desired name is read aloud, press the talk switch.

- ▶ Pattern B

- 2** Select the desired name to be changed using



- 3** Press the talk switch or select “Record Name” using




and say

the new name.

- 4** Select “Confirm” using a voice command or



Listing the registered data

Select “List Names” using a voice command or . The list of the registered data will be read aloud.

When listing is complete, the system returns to the “Phonebook”.

Pressing the talk switch while the desired data is being read aloud selects the data, and the following function will become available:

- Dialing: “Dial”
- Changing a registered name: “Change Name”
- Deleting an entry: “Delete Entry”
- Setting a speed dial: “Set Speed Dial (Speed Dial)”


Setting speed dials

- 1 Select “Set Speed Dial (Speed Dial)” using a voice command or



- ▶ Pattern A

- 2 Select the data to be registered as a speed dial by either of the follow-


ing methods and select “Confirm” using a voice command or  :

- a. Press the talk switch and say the desired name.
- b. Press the talk switch and say “List Names”. When the desired name is read aloud, press the talk switch.

- ▶ Pattern B


- 2 Select the desired data using .

- 3 Select the desired preset button and register the data into speed dial by either of the following methods:
 - a. Press the desired preset button and select “Confirm” by using a voice

command or .


- b. Press and hold the desired preset button.

Deleting the registered data

- 1 Select “Delete Entry” using a voice command or .


▶ Pattern A

- 2 Select the data to be deleted by either of the following methods and

select “Confirm” using a voice command or  :

- a. Press the talk switch and say the name of the desired phone number.
 - b. Press the talk switch and say “List Names”. When the name of the desired phone number is read aloud, press the talk switch.

▶ Pattern B

- 2 Select the desired data to be deleted using .

 
Deleting speed dials

- 1 Select “Delete Speed Dial (Del Spd Dial)” using a voice command or



- 2 Press the preset button to which the desired speed dial is registered


and select “Confirm” using a voice command or



■ Limitation of number of digits

A phone number that exceeds 24 digits cannot be registered.

Interior lights list

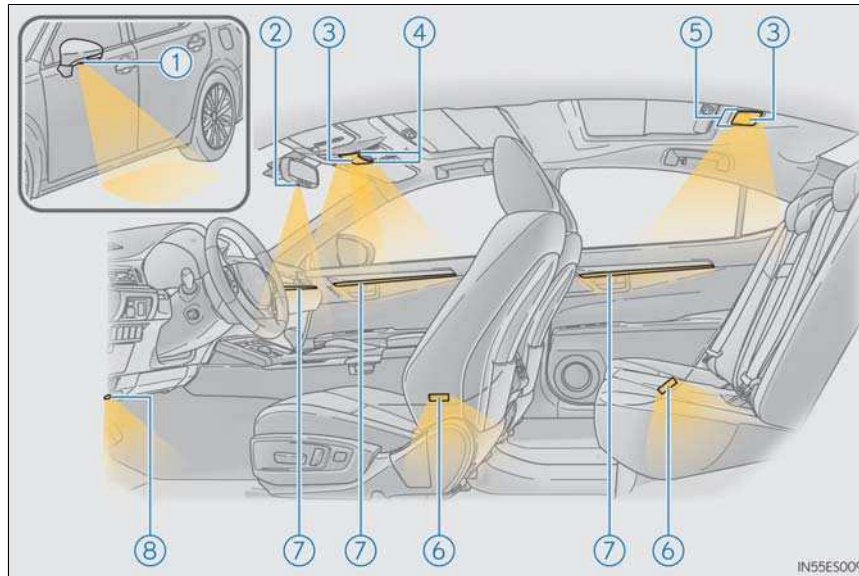


- | | |
|-----------------------------------|----------------------------------|
| ① Outer foot lights | ⑤ Rear personal lights (→P. 604) |
| ② Shift lever light | ⑥ Door courtesy lights |
| ③ Interior light (→P. 604) | ⑦ Ornament lights (if equipped) |
| ④ Front personal lights (→P. 604) | ⑧ Footwell lights |

When the instrument panel light control switch is turned to minimum and the tail lights are on, the ornament lights and the footwell lights will turn off. (→P. 94)

Interior light

- ① Turns the light on/off

The rear personal lights are also turned on/off by the interior light operation. However, if the interior light is turned off after being turned on while the rear personal lights are turned on, the rear personal lights will not turn off simultaneously.

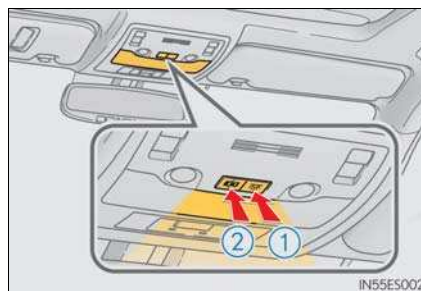


- ② Turns the door position on

Personal lights

■ Front


Turns the light on/off

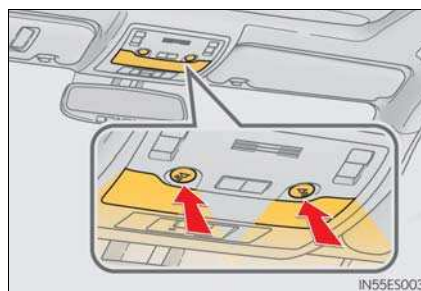

■ Rear

Turns the light on/off

If the lights are turned on by interior light operation, the lights cannot turn off by pressing the switch.

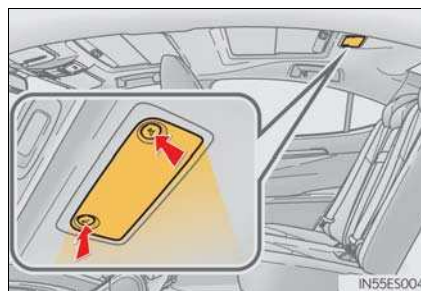

■ Illuminated entry system

The lights automatically turn on/off according to "START STOP ENGINE" <"POWER"> switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

■ To prevent 12-volt battery discharge


If the following lights remain on when the door is not fully closed and the personal/interior light main switch is in the door position, the lights will go off automatically after 20 minutes:

- Outer foot lights
- Personal/interior light
- Door courtesy lights
- Ornament lights (if equipped)
- Footwell lights


■ Customization

Setting (e.g. the time elapsed before lights turn off) can be changed.
(Customizable features: →P. 852)

List of storage features

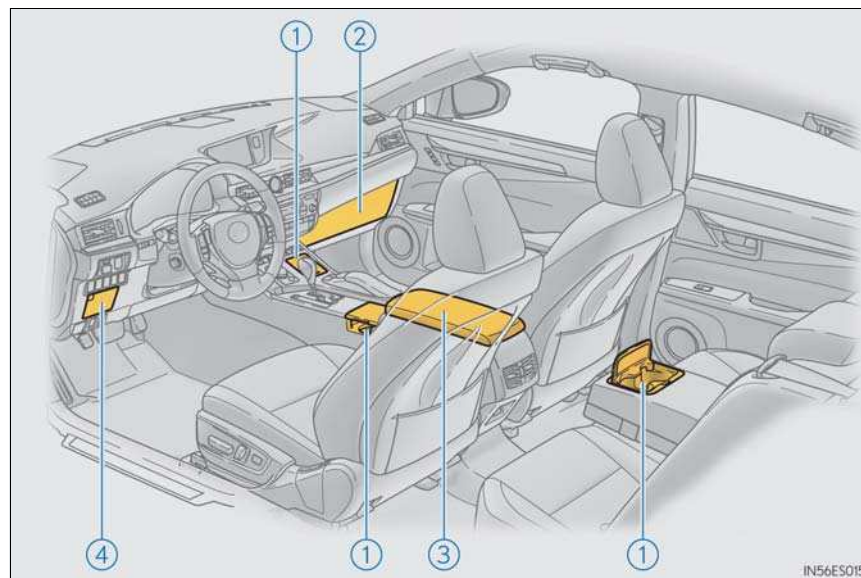

- | | | | |
|---------------|-----------|-----------------|-----------|
| ① Cup holders | (→P. 610) | ③ Console box | (→P. 609) |
| ② Glove box | (→P. 608) | ④ Auxiliary box | (→P. 611) |

 CAUTION**■ Items that should not be left in the storage spaces**

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.


■ When driving or when the storage compartments are not in use

Keep the lids closed.

In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open lid or the items stored inside.

Glove box

- ① Open (press the button)
- ② Unlock with the mechanical key
- ③ Lock with the mechanical key

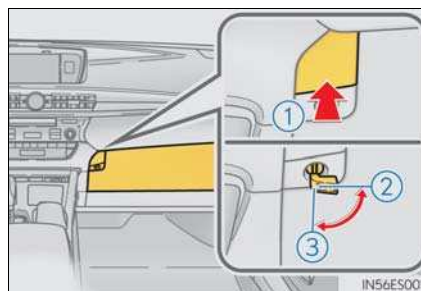

■ Glove box light

The glove box light turns on when the tail lights are on.

■ Trunk opener main switch

The trunk opener main switch is located in the glove box. (→P. 145)

■ Removing the insert

The insert inside the glove box can be removed. (→P. 708)


Console box

Push the knob to release the lock, and lift the armrest to open fully.



Tray in the console box

The tray slides forward/backward and can be removed.

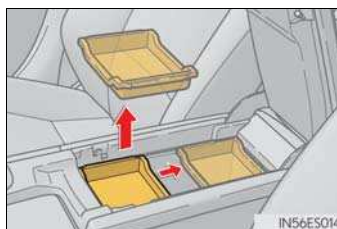

Console box light

The console box light turns on when the tail lights are on.


⚠ CAUTION

When using the console box with half-open, do not apply too much load on the armrest. Doing so may damage the armrest and may cause you to injure yourself.

Cup holders


■ Driver's side

- ① To open, move the cup holder lid until it locks.
- ② To close, press and release the cup holder lid.

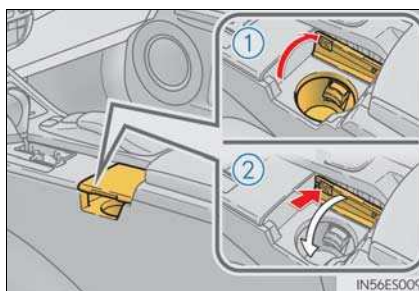


■ Front passenger's side

To open, press down and release the cup holder lid.

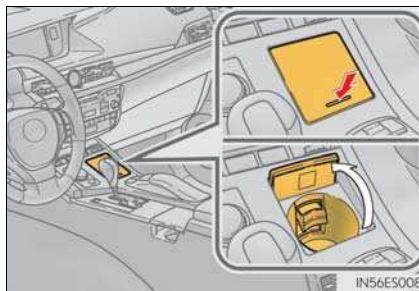

■ Rear

To open, pull down the armrest and press in and release the rear cup holder on the armrest.

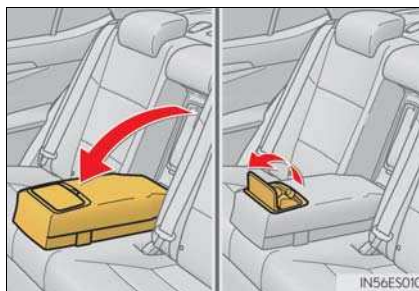

⚠ CAUTION**■ Items unsuitable for the cup holders**

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury. If possible, cover hot drinks to prevent burns.

■ Items unsuitable for the cup holder (front passenger's side)


Do not place anything larger than a 32 oz cup in the cup holder. Doing so may prevent the switches from being operated properly or block the driver's view of the switches, which may cause an accident.

⚠ NOTICE**■ To prevent damage to the rear cup holder**

Stow the cup holder before stowing the armrest.

Auxiliary box

Press in the button.

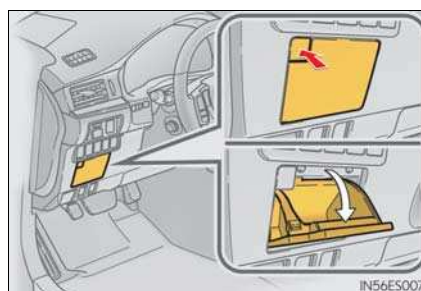


Trunk features

Cargo hooks

Raise the hooks when needed.

The cargo hooks are provided for securing loose items.

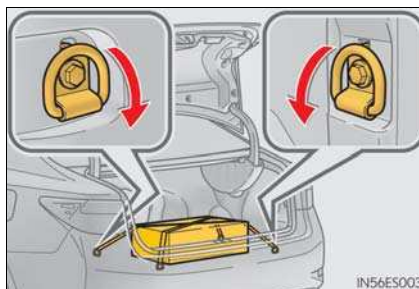


Grocery bag hooks




Luggage mat

- 1 Pull the lever upwards when lifting the luggage mat up.

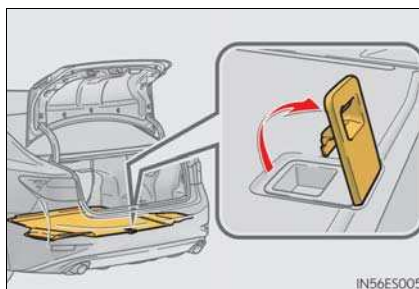

- 2 The lever can be hooked on the edge of the trunk.

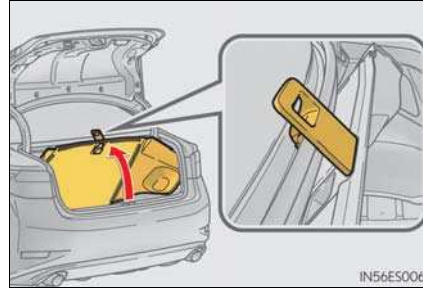

⚠ CAUTION

■ **When the cargo hooks are not in use**

To avoid injury, always return the cargo hooks to their stowed positions.

⚠ NOTICE


■ **When closing the trunk**

Do not leave the luggage mat lever hooked on the edge of the trunk.
The luggage mat may get damaged.

Sun visors and vanity mirrors

Sun visors


- ① To set the visor in the forward position, flip it down.
- ② To set the visor in the side position, flip down, unhook, and swing it to the side.
- ③ To use the side extender, place the visor in the side position, then slide it backward.

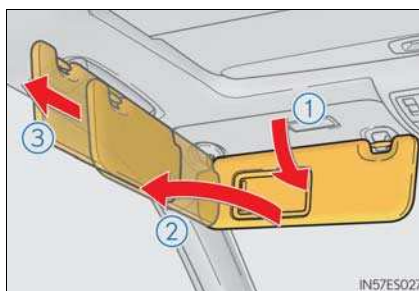

Vanity mirrors

Slide the cover to open.

The light turns on when the cover is opened.

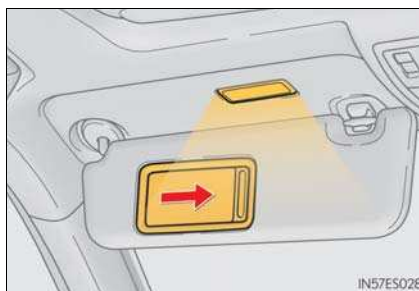

⚠ NOTICE


■ To prevent 12-volt battery discharge

Do not leave the vanity lights on for extended periods while the engine is not running <hybrid system is not operating>.

Clock

The clock can be adjusted by pressing the buttons.

- ① Pressing and holding will move the clock hands backward.
- ② Pressing and holding will move the clock hands forward.

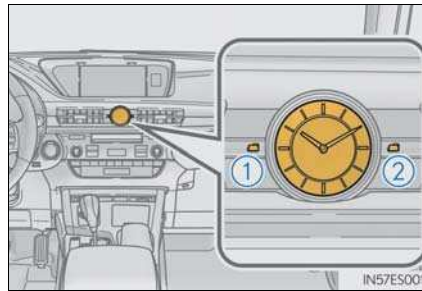


Power outlets

The power outlets can be used for 12V accessories that run on less than 10A.


■ Front

Open the lid.

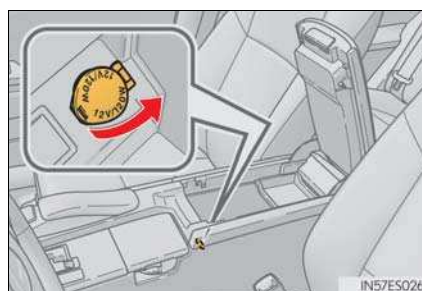

■ Rear

Open the lid.

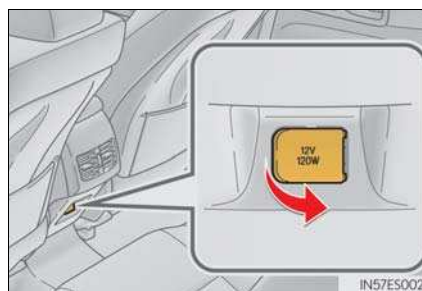

■ The power outlets can be used when

The "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode.

 NOTICE**■ To avoid damaging the power outlets**

Close the power outlet lids when the power outlets are not in use.
Foreign objects or liquids that enter the power outlets may cause a short circuit.

■ To prevent blown fuse

Do not use an accessory that uses more than 12V 10A.

■ To prevent 12-volt battery discharge


Do not use the power outlets longer than necessary when the engine is not running
<hybrid system is not operating>.

Heated steering wheel*

The heated steering wheel heats the side grips of the steering wheel.

Turns the heater on/off

The indicator light comes on when the heater is operating.

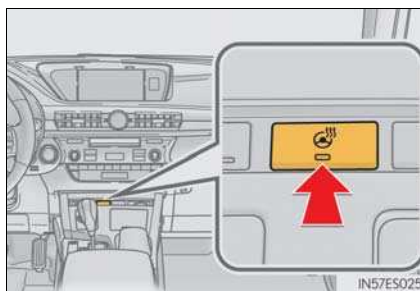

■ Operating condition

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.


■ Timer

The heated steering wheel will automatically turn off after about 30 minutes.

■ If the indicator light flashes

Press the button to turn the heated steering wheel off and then press the button again. If the indicator light still flashes, a malfunction may be occurring. Turn the heated steering wheel off and have the vehicle inspected by your Lexus dealer.

*: If equipped

 CAUTION**■ Burns**

Care should be taken to prevent injury if anyone in the following categories comes in contact with the steering wheel when the heated steering wheel is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

 NOTICE**■ To prevent 12-volt battery discharge**

Turn the switch off when the engine is not running <hybrid system is not operating>.

Seat heaters* /seat ventilators*


The seat heaters and ventilators heat the seats and maintain good air-flow by blowing air from the seats.

Seat heaters

Heats the seat

The indicator light comes on.

The higher the number of dots, the warmer the seat becomes.

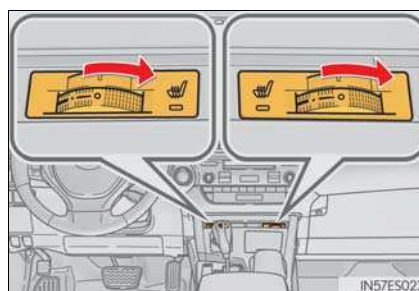

Seat heaters and ventilators

① Heats the seat


The indicator light comes on.

The higher the number of dots, the warmer the seat becomes.

② Blows air from the seat

The indicator light comes on.


The higher the number of dots, the stronger the airflow becomes.

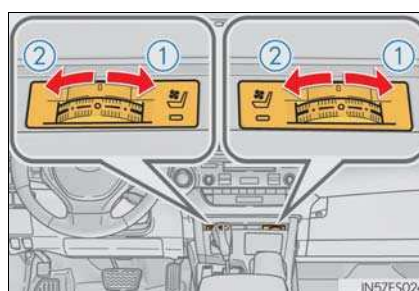

*: If equipped

■ **The seat heaters/seat ventilators can be used when**

The “START STOP ENGINE” <“POWER”> switch is in IGNITION ON <ON> mode.

 **CAUTION**

■ **Burns**

- Use caution when seating the following persons in a seat with the seat heater on to avoid the possibility of burns:
 - Babies, small children, the elderly, the sick and the physically challenged
 - Persons with sensitive skin
 - Persons who are fatigued
 - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Do not cover the seat with anything when using the seat heater.
Using the seat heater with a blanket or cushion increases the temperature of the seat and may lead to overheating.
- Do not use seat heater more than necessary. Doing so may cause minor burns or overheating.

 **NOTICE**

■ **To prevent damage to the seat heaters/seat ventilators**

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

■ **To prevent 12-volt battery discharge**

Turn the seat heaters/seat ventilators off when the engine is not running <hybrid system is not operating>.

Armrest

Fold down the armrest for use.



 NOTICE


- To prevent damage to the armrest
Do not apply too much load on the armrest.

Rear sunshade* /rear door sunshades*

Rear sunshade

The rear sunshade can be raised and lowered by operating the button shown below.


Raise/lower

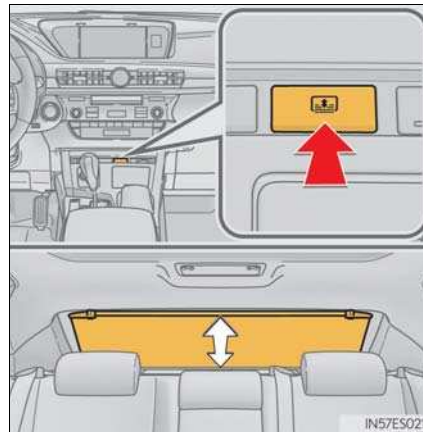

Rear door sunshades

Pull the tab of the rear door sunshade and hook the shade on using the anchors.

To retract the rear door sunshade, unhook the shade and retract it slowly.

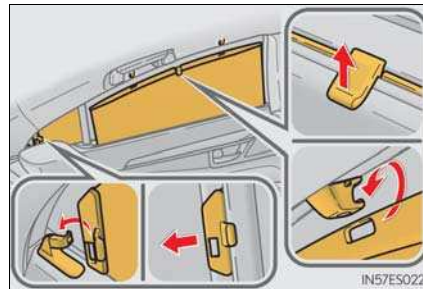

5

Interior features

*: If equipped

■ The rear sunshade can be used when

The "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

■ Operating the rear sunshade after the engine <hybrid system> is turned off

The rear sunshade can be operated for approximately 1 minute even after the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY mode or turned off.

■ Reverse operation feature

To ensure adequate rear visibility, the rear sunshade automatically lowers when the shift lever is shifted to R.

However, the rear sunshade is raised again if any of the following occurs:


- The button is pressed again.*
- Shift the shift lever into P.
- The shift lever is shifted out of R, and the vehicle reaches a speed of 9 mph (15 km/h).

If the engine <hybrid system> is off when the rear sunshade has been lowered due to the reverse operation feature, it will not be raised even when the engine <hybrid system> is turned on again and the vehicle reaches a speed of 9 mph (15 km/h). To raise the sunshade again, press the button.

*: Occasionally, the reverse function may not be carried out after the switch has been pressed. Repeat the above operation to operate the function.

■ Customization

Time elapsed before the reverse operation feature activates can be changed.
(Customizable features: →P. 852)

 CAUTION**■ When the rear sunshade is being operated**

Do not place fingers or other objects in the fastener section or in the opening. They may get caught, causing injury.

 NOTICE**■ To prevent 12-volt battery discharge**

Do not operate the rear sunshade when the engine is not running <hybrid system is not operating>.

■ To ensure normal operation of the rear sunshade and rear door sunshades

Observe the following precautions.

- Do not place excessive load on the motor or other components of the rear sunshade.
- Do not place objects where they may hinder opening and closing operations.
- Do not attach items to the rear sunshade and rear door sunshades.
- Keep the opening clean and clear of obstructions.
- Do not operate the rear sunshade continuously for long periods of time.

Trunk storage extension*

Long objects can be loaded into the vehicle by utilizing the trunk space and rear seat area.

- 1 Fold down the armrest.



- 2 Fold down the handle and open the armrest door.



CAUTION


■ When not in use

Ensure that the armrest door is closed.
In the event of sudden braking, items stored in the trunk may be thrown forward into the cabin, resulting in injury.

*: If equipped

Coat hooks

The coat hooks are provided with the rear assist grips.

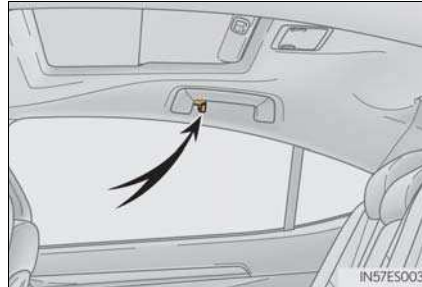


CAUTION

■ Items that cannot be hung on the coat hook

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

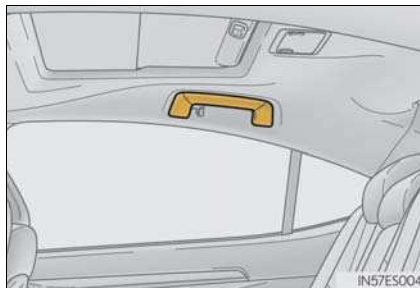

CAUTION

■ Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.

NOTICE

■ To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

Garage door opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].

Programming the HomeLink[®]

The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

- ① Indicator light
- ② Buttons

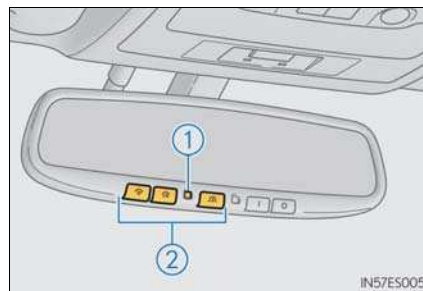


■ Before programming HomeLink[®]

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door openers manufactured after 1995 may be equipped with **rolling code protection**. If this is the case, you will need a step-ladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.

■ Programming HomeLink®

- 1 Point the remote control transmitter for the device 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.


Keep the HomeLink® indicator light in view while programming.

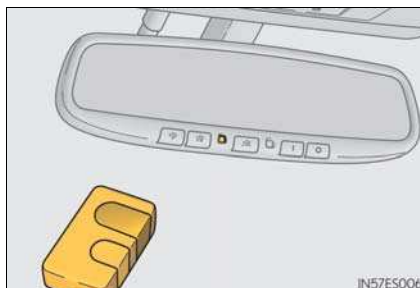

► For U.S.A. owner's

- 2 Press and hold the HomeLink® button you want to program and the handheld transmitter button simultaneously. When the HomeLink® indicator light changes from a slow to a rapid flash, you can release both buttons.

Programming has completed when the indicator light changes to a rapid flash.

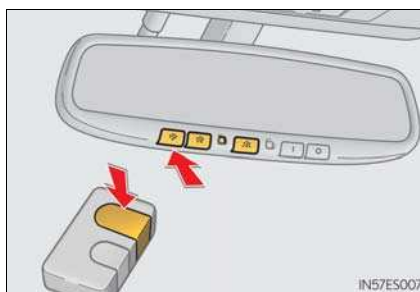


► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

- 2 With one hand, press and hold the HomeLink® button you want to program. With your other hand, press and release the remote control transmitter every 2 seconds and repeat this cycle until the HomeLink® indicator light starts to flash rapidly. Then, release the buttons.

3 Test the HomeLink[®] operation by pressing the newly programmed button and observing the indicator light:


- If the indicator light is solid/continuous, programming has been completed and your device should activate when the HomeLink[®] button is pressed and released.
- If the indicator light blinks rapidly for 2 seconds and then turns into a solid/continuous light, proceed with the following instructions **4** for programming a rolling code system.

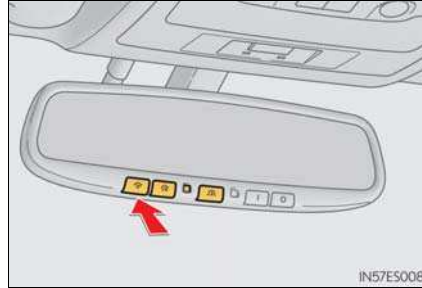


- ▶ Programming a rolling code system

- 4** Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Please refer to the operator’s manual supplied with the garage door opener motor for details.

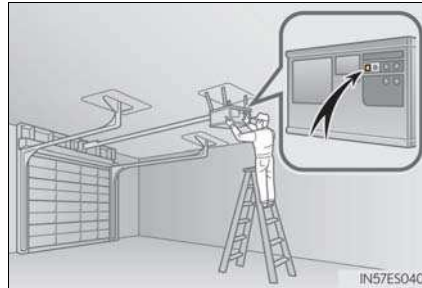


- 5** Press and release the “Learn” or “Smart” button. Perform **6** within 30 seconds after performing **5**.

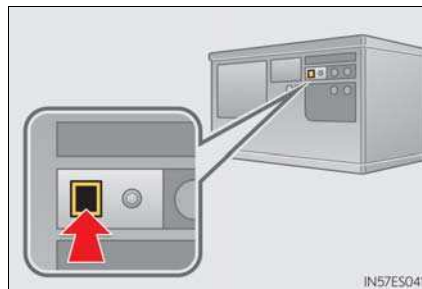

- 6** Press and hold the programmed HomeLink® button (located inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor activates when the HomeLink® button is pressed, the garage door opener motor recognizes the HomeLink® signal.

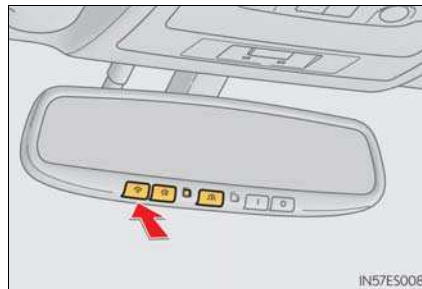

- 7** Repeat the steps above to program another device for any of the remaining HomeLink® buttons.

■ Reprogramming a single HomeLink[®] button


When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink[®] button.
- 2 When the HomeLink[®] indicator starts flashing, continue to hold the HomeLink[®] button and perform “Programming HomeLink[®]” from 1 (it takes 20 seconds for the HomeLink[®] indicator to start flashing).

Erasing the entire HomeLink[®] memory (all three programs)

Press and hold the 2 outside buttons shown in the illustration for 10 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink[®] memory.

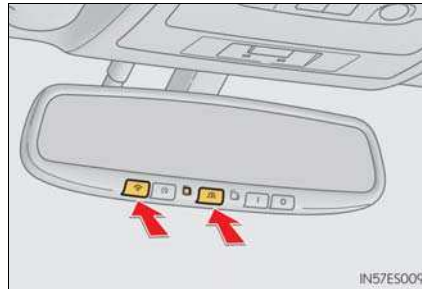

■ **Programs stored in the HomeLink® memory**

- The registered codes are not erased even if the 12-volt battery cable is disconnected.
- If learning failed when registering a different code to a HomeLink® button that already has a code registered to it, the already registered code is not erased.

■ **Certification for the garage door opener**

- ▶ For vehicles sold in the U.S.A.

FCC ID: NZLOBIHL4

FCC ID: NZLWZLHL4

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- ▶ For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

■ **When support is necessary**

Visit on the web at www.homelink.com or call 1-800-355-3515.

⚠ CAUTION**■ When programming a garage door or other remote control device**

The garage door or other device may operate, so ensure people and objects are out of danger to prevent potential harm.

■ Conforming to federal safety standards

Do not use the HomeLink[®] compatible transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an interfering object. A door or device without these features increases the risk of death or serious injury.

■ When operating or programming HomeLink[®]


Never allow a child to operate or play with the HomeLink[®] buttons.

Compass*

The compass on the inside rear view mirror indicates the direction in which the vehicle is heading.

Operation

To turn the compass on or off, push the switch.

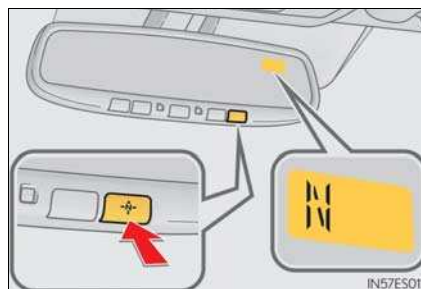


Displays and directions

Display	Direction
"N"	North
"NE"	Northeast
"E"	East
"SE"	Southeast
"S"	South
"SW"	Southwest
"W"	West
"NW"	Northwest

*: If equipped

Calibrating the compass

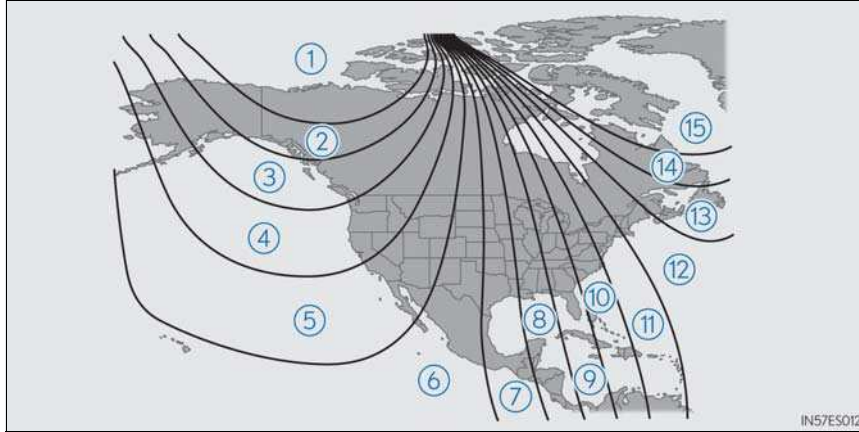


The direction display deviates from the true direction determined by the earth's magnetic field. The amount of deviation varies according to the geographic position of the vehicle.

If you cross over one of the map boundaries shown in illustration, the compass will deviate.

To obtain higher precision or perfect calibration, refer to "Deviation calibration".

■ **Deviation calibration**

- 1 Stop the vehicle in a place where it is safe to drive in a circle.
- 2 Press the switch until a number (1 to 15) appears on the compass display.

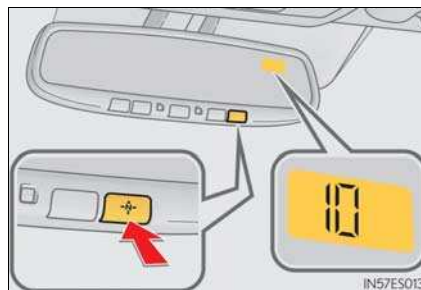


- 3 Press the switch and referring to the map above, select the number of the zone where you are.
If the direction is displayed several seconds after adjustment, the calibration is complete.

■ **Circling calibration**

When "C" appears on the display, drive the vehicle at 5 mph (8 km/h) or less in a circle until a direction is displayed.

If there is not enough space to drive in a circle, drive around the block until the direction is displayed.

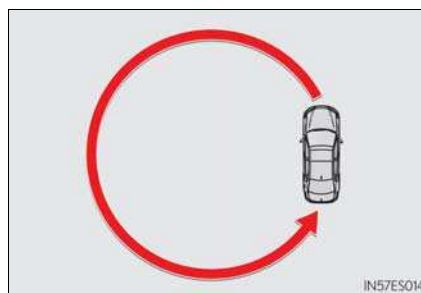

■ Conditions unfavorable to correct operation

The compass may not show the correct direction in the following conditions:

- The vehicle is stopped immediately after turning.
- The vehicle is on an inclined surface.
- The vehicle is in a place where the earth's magnetic field is subject to interference by artificial magnetic fields (underground car park/parking lot, under a steel tower, between buildings, roof car park/parking lot, near an intersection, near a large vehicle, etc.).
- The vehicle has become magnetized.
(There is a magnet or metal object near the inside rear view mirror.)
- The 12-volt battery has been disconnected.
- A door is open.

⚠ CAUTION**■ While driving the vehicle**

Do not adjust the display. Adjust the display only when the vehicle is stopped.

■ When doing the circling calibration

Secure a wide space, and watch out for people and vehicles in the vicinity. Do not violate any local traffic rules while performing circling calibration.

 NOTICE

■ **To avoid the compass malfunctions**

Do not place magnets or any metal objects near the inside rear view mirror.
Doing this may cause the compass sensor to malfunction.

■ **To ensure normal operation of the compass**

- Do not perform a circling calibration of the compass in a place where the earth's magnetic field is subject to interference by artificial magnetic fields.
- During calibration, do not operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

Safety Connect*


Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

By using the Safety Connect service, you are agreeing to be bound by the Telematics Subscription Service Agreement and its Terms and Conditions, as in effect and amended from time to time, a current copy of which is available at Lexus.com. All use of the Safety Connect service is subject to such then-applicable Terms and Conditions.

System components

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

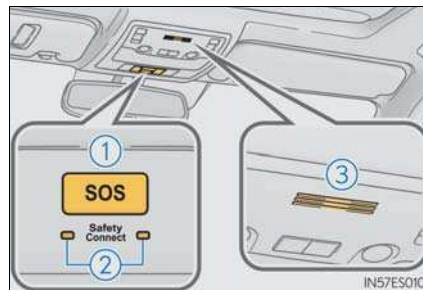

5

Interior features

*: If equipped

Services

Subscribers have the following Safety Connect services available:

- Automatic Collision Notification*
Helps drivers receive necessary response from emergency service providers. (→P. 644)
*: U.S. Patent No. 7,508,298 B2
- Stolen Vehicle Location
Helps drivers in the event of vehicle theft. (→P. 645)
- Emergency Assistance Button (“SOS”)
Connects drivers to response-center support. (→P. 645)
- Enhanced Roadside Assistance
Provides drivers various on-road assistance. (→P. 645)

Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

■ Safety Connect Services Information

- Phone calls using the vehicles Bluetooth® technology will not be possible during Safety Connect.
- Safety Connect is available beginning Fall 2009 on select Lexus models. Contact with the Safety Connect response center is dependent upon the telematics device being in operative condition, cellular connection availability, and GPS satellite signal reception, which can limit the ability to reach the response center or receive emergency service support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms is available; charges vary by subscription term selected.
- Automatic Collision Notification, Emergency Assistance and Stolen Vehicle Location will function in the United States, including Hawaii and Alaska, and in Canada, and Enhanced Roadside Assistance will function in the United States (except Hawaii) and in Canada. No Safety Connect services will function outside of the United States in countries other than Canada.
- Safety Connect services are not subject to section 255 of the Telecommunications Act and the device is not TTY compatible.

■ Languages

The Safety Connect response center will offer support in multiple languages. The Safety Connect system will offer voice prompts in English and Spanish. Please indicate your language of choice when enrolling.

■ When contacting the response center

You may be unable to contact the response center if the network is busy.

Safety Connect LED light Indicators

When the “START STOP ENGINE” <“POWER”> switch is turned to IGNITION ON <ON> mode, the red indicator light comes on for 2 seconds then turns off. Afterward, the green indicator light comes on, indicating that the service is active.

The following indicator light patterns indicate specific system usage conditions:

- Green indicator light on = Active service
- Green indicator light flashing = Safety Connect call in process
- Red indicator light (except at vehicle start-up) = System malfunction (contact your Lexus dealer)
- No indicator light (off) = Safety Connect service not active

Safety Connect services

■ Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle’s location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

■ Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

■ Emergency Assistance Button (“SOS”)

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

■ Enhanced Roadside Assistance

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

Safety information for Safety Connect

Important! Read this information before using Safety Connect.

■ Exposure to radio frequency signals

The Safety Connect system installed in your vehicle is a low-power radio transmitter and receiver. It receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by the following U.S. and international standards bodies.

- ANSI (American National Standards Institute) C95.1 [1992]
- NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
- ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, and government health agencies and industries reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of Safety Connect complies with the FCC guidelines in addition to those standards.

■ Certification for Lexus Enform with Safety Connect

FCC ID: O9EGTM1

FCC ID: O6Y-CDMRF101

FCC ID: N7NGTM2

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.
If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Automatic car washes

- Fold the mirrors before washing the vehicle. Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.
- Hybrid vehicles: Rear spoiler may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

■ When using a car wash

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- Place the key in a position 6 ft. (2 m) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart access system with push-button start. (→P. 129)

■ Aluminum wheels

- Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the paint.
- Do not use detergent on the wheels when they are hot, for example after driving for long distance in the hot weather.
- Wash detergent from the wheels immediately after use.

■ Bumpers and side moldings

Do not scrub with abrasive cleaners.


⚠ CAUTION

■ **When washing the vehicle**

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

■ **When cleaning the windshield (with rain-sensing windshield wipers)**

Turn off the wiper switch.
If AUTO mode is selected, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

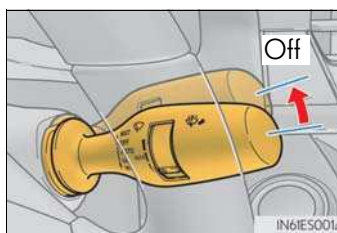

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■ **Precautions regarding exhaust pipes**

Exhaust gases cause exhaust pipes to become quite hot.
When washing the vehicle, be careful not to touch any pipes until they have cooled sufficiently, as touching hot exhaust pipes can cause burns.

■ **Precaution regarding the Blind Spot Monitor (if equipped)**

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult your Lexus dealer.

 NOTICE**■ To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)**

- Wash the vehicle immediately in the following cases:
 - After driving near the sea coast
 - After driving on salted roads
 - If coal tar or tree sap is present on the paint surface
 - If dead insects, insect droppings or bird droppings are present on the paint surface
 - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled with dust or mud
 - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

■ When using an automatic car wash (with rain-sensing windshield wipers)

Turn off the wiper switch.
If AUTO mode is selected, the wipers may operate and the wiper blades may be damaged.

■ When cleaning the windshield

Raise the wipers in line with the windshield. (→P. 329)
Failure to do so may result in damage to the wipers and/or the hood.

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.
Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

Cleaning the synthetic leather areas

- Remove loose dirt using a vacuum cleaner.
- Apply a mild soap solution to the synthetic leather using a sponge or soft cloth.
- Allow the solution to soak in for a few minutes. Remove the dirt and wipe off the solution with a clean, damp cloth.

■ Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

■ When cleaning the carpeted portions of the glove box, console box, etc.

If a strong adhesive tape is used, there is a possibility that the surface of the carpet could be damaged.

⚠ CAUTION

■ Water in the vehicle

- Gasoline vehicles: Do not splash or spill liquid in the vehicle.
Doing so may cause electrical components etc. to malfunction or catch fire.
- Hybrid vehicles: Do not splash or spill liquid in the vehicle, such as on the floor and in the hybrid battery (traction battery) air vents or in the luggage compartment.
Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet.
(→P. 40)
An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

■ Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

 NOTICE**■ Cleaning detergents**

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
 - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
 - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

■ When cleaning the inside of the windshield (vehicles with LDA [Lane Departure Alert] and Automatic High Beam)

Be careful not to touch the camera sensor (→P. 269).

If the camera is accidentally scratched or hit, LDA and Automatic High Beam system may not operate properly or may cause a malfunction.

■ Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. It is the owner's responsibility to perform regular checks. Lexus recommends performing the following maintenance:

General maintenance

General maintenance should be performed on a daily basis. This can be done by yourself or by a Lexus dealer.

Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For details about maintenance items and schedules, refer to the "Warranty and Service Guide", "Owner's Manual Supplement" or "Scheduled Maintenance".

Do-it-yourself maintenance

You can perform some maintenance procedures by yourself. Please be aware that do-it-yourself maintenance may affect warranty coverage.

The use of Lexus repair manuals is recommended.

For details about warranty coverage, refer to the separate "Owner's Guide", "Warranty and Service Guide", "Owner's Manual Supplement" or "Warranty Booklet".

■ Repair and replacement

It is recommended that genuine Lexus parts be used for repairs to ensure performance of each system. If non-Lexus parts are used in replacement or if a repair shop other than a Lexus dealer performs repairs, confirm the warranty coverage.

■ Reset the maintenance data (U.S.A. only)

After the required maintenance is performed according to the maintenance schedule, please reset the maintenance data.

To reset the data, follow the procedure described below:

- 1 Switch the display to the trip meter "A" (→P. 94) when the engine <hybrid system> is running <operating>.
- 2 Turn the "START STOP ENGINE" <"POWER"> switch off.
- 3 While pressing the "ODO TRIP" button (→P. 94), turn the "START STOP ENGINE" <"POWER"> switch to the IGNITION ON <ON> mode (do not start the engine <hybrid system> because otherwise the reset mode will be canceled).

The message shown in the illustration will appear on the display.

Continue to press and hold the button until the trip meter displays "000000".

**■ Allow inspection and repairs to be performed by a Lexus dealer**

- Lexus technicians are well-trained specialists and are kept up to date with the latest service information. They are well informed about the operations of all systems on your vehicle.
- Keep a copy of the repair order. It proves that the maintenance that has been performed is under warranty coverage. If any problem should arise while your vehicle is under warranty, your Lexus dealer will promptly take care of it.

⚠ CAUTION**■ If your vehicle is not properly maintained**

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ Handling of the 12-volt battery

- Engine exhaust, some of its constituents, and a wide variety of automobile components contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm. Work in a well ventilated area.
- Oils, fuels and fluids contained in vehicles as well as waste produced by component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Avoid exposure and wash any affected area immediately.
- 12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 685, 690)

General maintenance

Listed below are the general maintenance items that should be performed at the intervals specified in the “Warranty and Service Guide” or “Owner’s Manual Supplement”. It is recommended that any problem you notice should be brought to the attention of your Lexus dealer or qualified service shop for advice.

Engine compartment

Items	Check points
12-volt battery (gasoline vehicles)	Check the battery fluid level and connections. (→P. 685)
Brake fluid	Is the brake fluid at the correct level? (→P. 684)
Engine coolant (gasoline vehicles)	Is the engine coolant at the correct level? (→P. 681)
Engine/power control unit coolant (hybrid vehicles)	Is the engine/power control unit coolant at the correct level? (→P. 681)
Engine oil	Is the engine oil at the correct level? (→P. 676)
Exhaust system	There should not be any fumes or strange sounds.
Radiator/condenser	The radiator and condenser should be free from foreign objects. (→P. 683)
Washer fluid	Is there sufficient washer fluid? (→P. 689)

Luggage compartment

Items	Check points
12-volt battery (hybrid vehicles)	Check the connections. (→P. 690)

Vehicle interior

Items	Check points
Accelerator pedal	<ul style="list-style-type: none"> The accelerator pedal should move smoothly (without uneven pedal effort or catching).
Automatic transmission "Park" mechanism (gasoline vehicles)/Hybrid transmission "Park" mechanism (hybrid vehicles)	<ul style="list-style-type: none"> When parked on a slope and the shift lever is in P, is the vehicle securely stopped?
Brake pedal	<ul style="list-style-type: none"> Does the brake pedal move smoothly? Does the brake pedal have appropriate clearance from the floor? (→P. 834) Does the brake pedal have the correct amount of free play? (→P. 834)
Brakes	<ul style="list-style-type: none"> The vehicle should not pull to one side when the brakes are applied. The brakes should work effectively. The brake pedal should not feel spongy. The brake pedal should not get too close to the floor when the brakes are applied.

Items	Check points
Head restraints	<ul style="list-style-type: none"> Do the head restraints move smoothly and lock securely?
Indicators/buzzers	<ul style="list-style-type: none"> Do the indicators and buzzers function properly?
Lights	<ul style="list-style-type: none"> Do all the lights come on? Are the headlights aimed correctly?
Parking brake	<ul style="list-style-type: none"> Does the parking brake pedal move smoothly? brake pedal move smoothly? When parked on a slope and the parking brake is on, is the vehicle securely stopped?
Seat belts	<ul style="list-style-type: none"> Do the seat belts operate smoothly? The seat belts should not be damaged.
Seats	<ul style="list-style-type: none"> Do the seat controls operate properly?
Steering wheel	<ul style="list-style-type: none"> Does the steering wheel rotate smoothly? Does the steering wheel have the correct amount of free play? There should not be any strange sounds coming from the steering wheel.

Vehicle exterior

Items	Check points
Doors/trunk	<ul style="list-style-type: none"> Do the doors/trunk operate smoothly?
Engine hood	<ul style="list-style-type: none"> Does the engine hood lock system work properly?
Fluid leaks	<ul style="list-style-type: none"> There should not be any signs of fluid leakage after the vehicle has been parked.
Tires	<ul style="list-style-type: none"> Is the tire inflation pressure correct? The tires should not be damaged or excessively worn. Have the tires been rotated according to the maintenance schedule? The wheel nuts should not be loose.

CAUTION

■ If the engine <hybrid system> is running <operating>

Turn the engine <hybrid system> off and ensure that there is adequate ventilation before performing maintenance checks.

Emission inspection and maintenance (I/M) programs

Some states have vehicle emission inspection programs which include OBD (On Board Diagnostics) checks. The OBD system monitors the operation of the emission control system.

If the malfunction indicator lamp comes on

The OBD system determines that a problem exists somewhere in the emission control system. Your vehicle may not pass the I/M test and may need to be repaired. Contact your Lexus dealer to service the vehicle.

Your vehicle may not pass the I/M test in the following situations:

- When the 12-volt battery is disconnected or discharged
Readiness codes that are set during ordinary driving are erased. Also, depending on your driving habits, the readiness codes may not be completely set.
- When the fuel tank cap is loose
The malfunction indicator lamp comes on indicating a temporary malfunction and your vehicle may not pass the I/M test.

When the malfunction indicator lamp still remains on after several driving trips

The error code in the OBD system will not be cleared unless the vehicle is driven 40 or more times.

If your vehicle does not pass the I/M test


Contact your Lexus dealer to prepare the vehicle for re-testing.

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Items	Parts and tools
12-volt battery condition (gasoline vehicles) (→P. 685)	<ul style="list-style-type: none"> • Warm water • Baking soda • Grease • Conventional wrench (for terminal clamp bolts) • Distilled water
12-volt battery condition (hybrid vehicles) (→P. 690)	<ul style="list-style-type: none"> • Grease • Conventional wrench (for terminal clamp bolts)
Brake fluid level (→P. 684)	<ul style="list-style-type: none"> • FMVSS No.116 DOT 3 or SAE J1703 brake fluid • Rag or paper towel • Funnel (used only for adding brake fluid)
Engine coolant level (gasoline vehicles) (→P. 681)	<ul style="list-style-type: none"> • “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology <p>For the U.S.A.:</p> <p>“Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water.</p> <p>For Canada:</p> <p>“Toyota Super Long Life Coolant” is pre-mixed with 55% coolant and 45% deionized water.</p>
Engine/power control unit coolant level (hybrid vehicles) (→P. 681)	<ul style="list-style-type: none"> • Funnel (used only for adding coolant)


Items	Parts and tools
Engine oil level (→P. 676)	<ul style="list-style-type: none"> • “Toyota Genuine Motor Oil” or equivalent • Rag or paper towel • Funnel (used only for adding engine oil)
Fuses (→P. 712)	<ul style="list-style-type: none"> • Fuse with same amperage rating as original
Light bulbs (→P. 724)	<ul style="list-style-type: none"> • Bulb with same number and wattage rating as original • Phillips-head screwdriver • Flathead screwdriver • Wrench
Radiator and condenser (→P. 683)	—
Tire inflation pressure (→P. 703)	<ul style="list-style-type: none"> • Tire pressure gauge • Compressed air source
Washer fluid (→P. 689)	<ul style="list-style-type: none"> • Water or washer fluid containing anti-freeze (for winter use) • Funnel (used only for adding water or washer fluid)

 **CAUTION**

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

■ When working on the engine compartment

- Hybrid vehicles: Make sure that the “POWER ON” on the multi-information display and the “READY” indicator are both off.
- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Gasoline vehicles: Be careful not to touch the engine, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Hybrid vehicles: Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Gasoline vehicles: Do not smoke, cause sparks or expose an open flame to fuel or the 12-volt battery. Fuel and 12-volt battery fumes are flammable.
- Hybrid vehicles: Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.
- Gasoline vehicles: Be extremely cautious when working on the 12-volt battery. It contains poisonous and corrosive sulfuric acid.

 CAUTION**■ When working near the electric cooling fans or radiator grille**

Be sure the "START STOP ENGINE" <"POWER"> switch is off.

With the "START STOP ENGINE" <"POWER"> switch in IGNITION ON <ON> mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 683)

■ Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.

 NOTICE**■ If you remove the air cleaner filter**


Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

Hood


Release the lock from the inside of the vehicle to open the hood.

- 1 Pull the hood lock release lever.

The hood will pop up slightly.

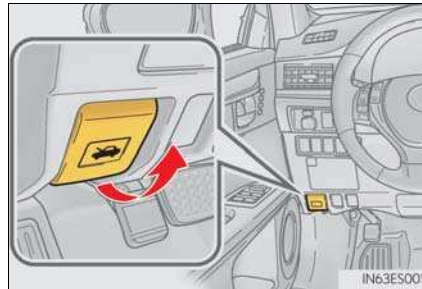

- 2 Pull up the auxiliary catch lever and lift the hood.

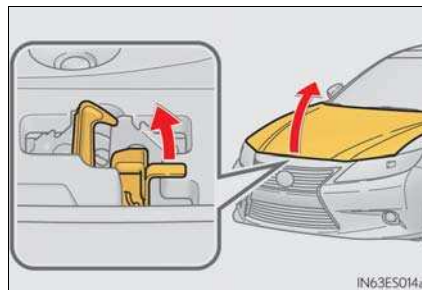

⚠ CAUTION

■ Pre-driving check

Check that the hood is fully closed and locked.


If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

Positioning a floor jack


When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

◆ Front

▶ Gasoline vehicles

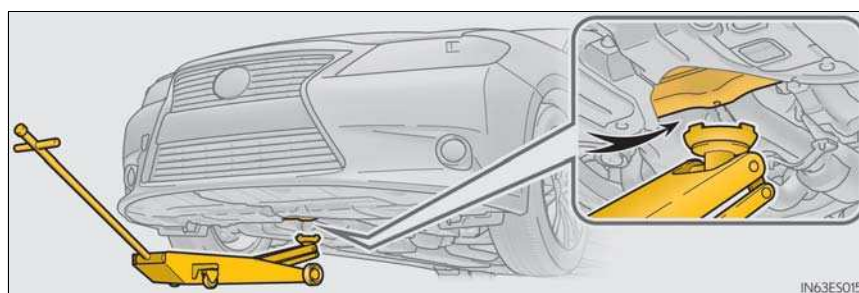


▶ Hybrid vehicles

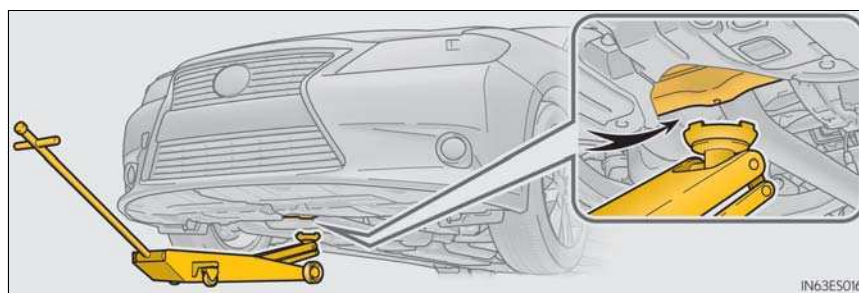


◆ Rear

▶ Gasoline vehicles

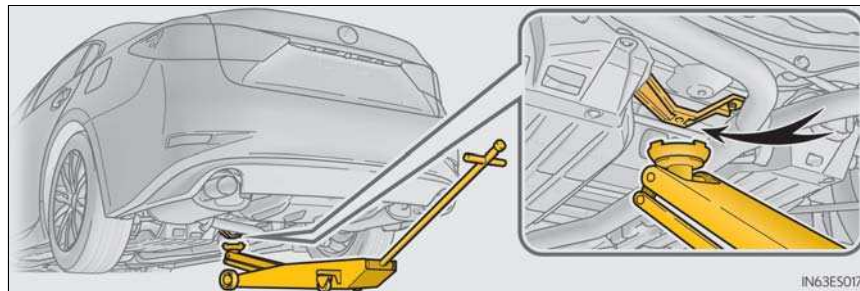


▶ Hybrid vehicles

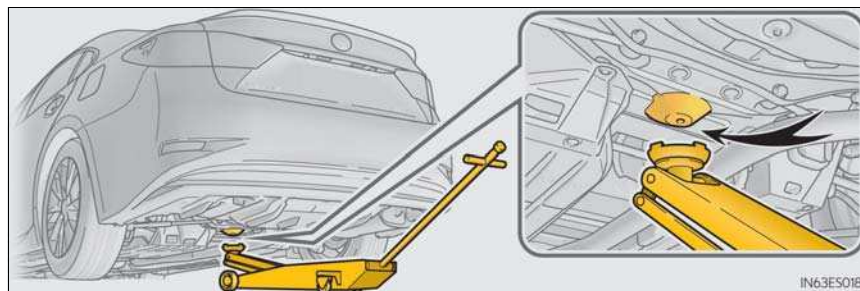

⚠ CAUTION**■ When raising your vehicle**

Make sure to observe the following precautions to reduce the possibility of death or serious injury:


- Lift up the vehicle using a floor jack such as the one shown in the illustration.

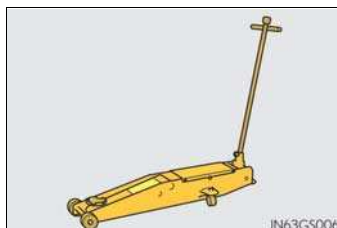

- When using a floor jack, follow the instructions of the manual provided with the jack.
- Do not use the jack that was supplied with your vehicle.
- Do not put any part of your body underneath the vehicle when it is supported only by the floor jack.
- Always use floor jack and/or automotive jack stands on a solid, flat, level surface.
- Do not start the engine <hybrid system> while the vehicle is supported by the floor jack.
- Stop the vehicle on level, firm ground, firmly set the parking brake and shift the shift lever to P.
- Make sure to set the floor jack properly at the jack point.
Raising the vehicle with an improperly positioned floor jack will damage the vehicle and may cause the vehicle to fall off the floor jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any object on top of or underneath the floor jack.

Engine compartment

► Gasoline vehicles (2GR-FE engine)

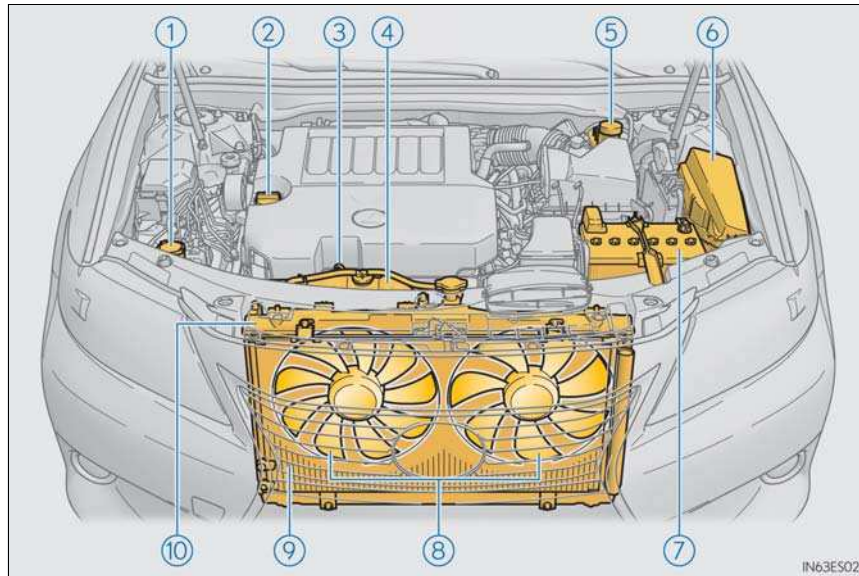


- | | |
|---------------------------------------|-----------------------------------|
| ① Washer fluid tank (→P. 689) | ⑤ Brake fluid reservoir (→P. 684) |
| ② Engine oil filler cap (→P. 678) | ⑥ Fuse box (→P. 712) |
| ③ Engine oil level dipstick (→P. 676) | ⑦ 12-volt battery (→P. 685) |
| ④ Engine coolant reservoir (→P. 681) | ⑧ Electric cooling fans |
| | ⑨ Condenser (→P. 683) |
| | ⑩ Radiator (→P. 683) |

6

Maintenance and care

► Hybrid vehicles (2AR-FXE engine)

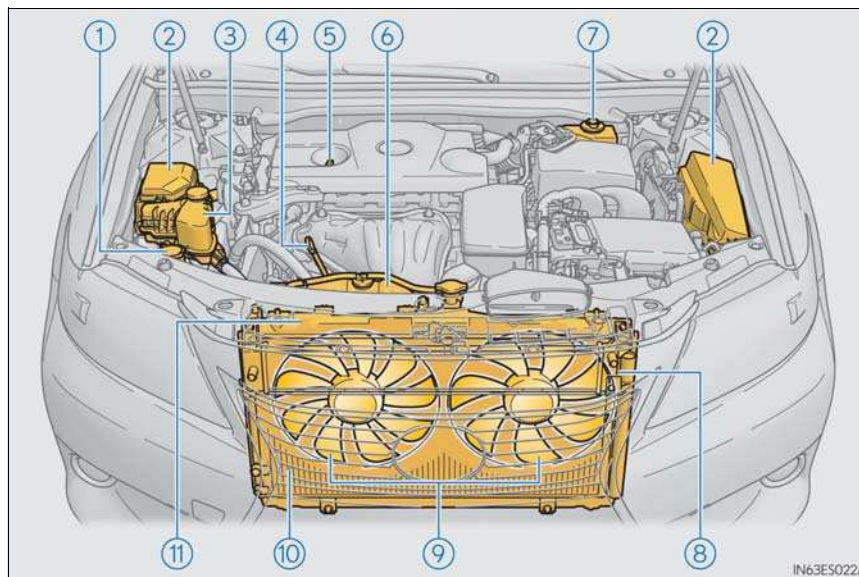


- | | |
|--|---|
| ① Washer fluid tank (→P. 689) | ⑥ Engine coolant reservoir (→P. 681) |
| ② Fuse boxes (→P. 712) | ⑦ Brake fluid reservoir (→P. 684) |
| ③ Power control unit coolant reservoir (→P. 681) | ⑧ Power control unit coolant radiator (→P. 683) |
| ④ Engine oil level dipstick (→P. 676) | ⑨ Electric cooling fans |
| ⑤ Engine oil filler cap (→P. 678) | ⑩ Condenser (→P. 683) |
| | ⑪ Engine coolant radiator (→P. 683) |

■ 12-volt battery (hybrid vehicles)

→P. 690


Engine compartment cover

■ Removing the engine compartment cover

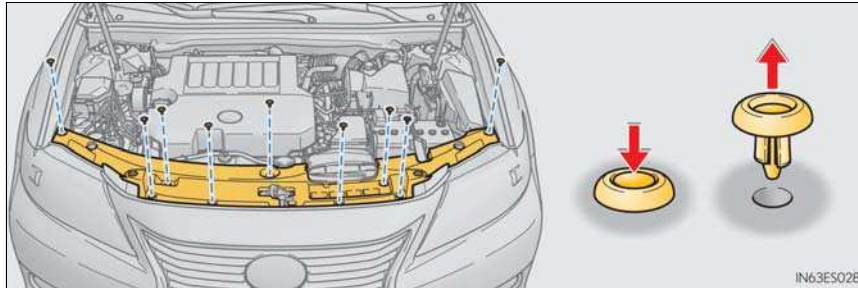

■ Installing the clips

- ① Push up center portion
- ② Insert
- ③ Press

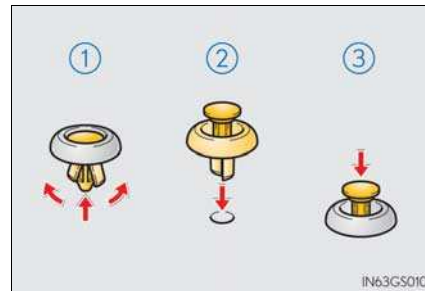

⚠ NOTICE

■ Checking the engine compartment cover after installation

Make sure that the cover is securely installed in its original position.

Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.

■ Checking the engine oil

1 Park the vehicle on level ground.

▶ Gasoline vehicles


After warming up the engine and turning it off, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

▶ Hybrid vehicles


After warming up the engine and turning off the hybrid system, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

2 Holding a rag under the end, pull the dipstick out.

▶ Gasoline vehicles

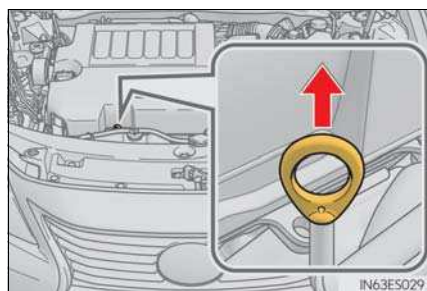

▶ Hybrid vehicles

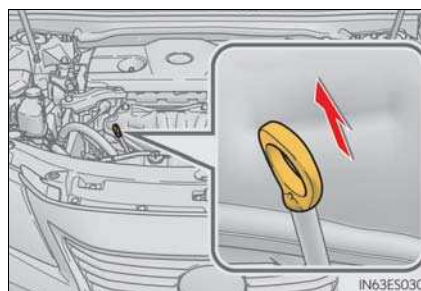


3 Wipe the dipstick clean.

4 Reinsert the dipstick fully.


- 5 Holding a rag under the end, pull the dipstick out and check the oil level.

► Gasoline vehicles

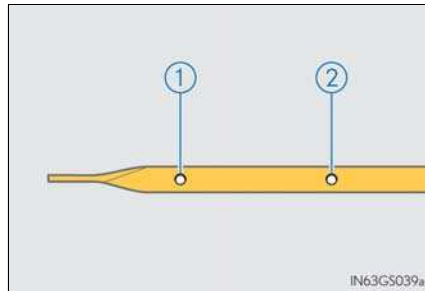

- ① Low
- ② Full

► Hybrid vehicles

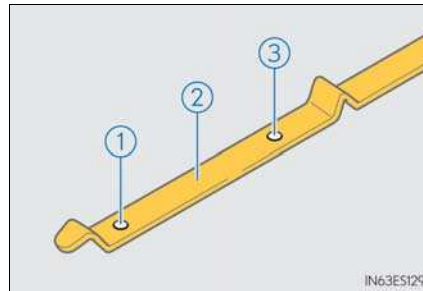

- ① Low
- ② Measuring side
- ③ Full


- 6 Wipe the dipstick and reinsert it fully.

■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

▶ Gasoline vehicles

▶ Hybrid vehicles

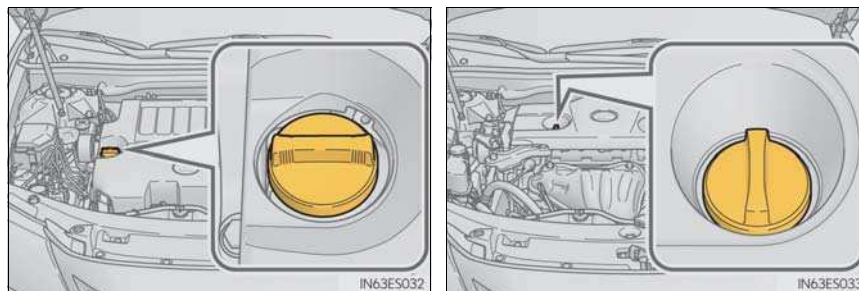

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 830
Oil quantity (Low → Full)	1.6 qt. (1.5 L, 1.3 Imp.qt.)
Items	Clean funnel

- 1 Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

⚠ CAUTION

■ Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Lexus dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

 NOTICE**■ To prevent serious engine damage**

Check the oil level on a regular basis.

■ When replacing the engine oil

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.


Coolant

The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the engine <hybrid system> is cold.

■ Engine coolant reservoir

- ① Reservoir cap
- ② “FULL” line
- ③ “LOW” line


If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 813, 816)

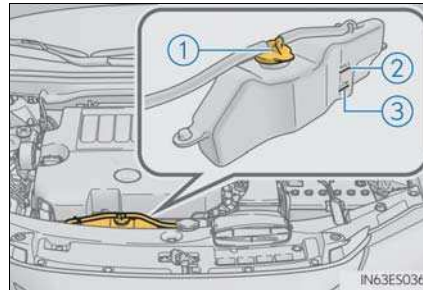

■ Power control unit coolant reservoir (hybrid vehicles)

- ① Reservoir cap
- ② “FULL” line
- ③ “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 816)

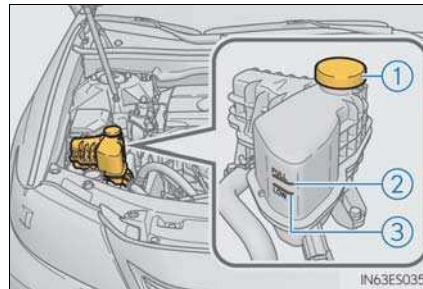

■ **Coolant selection**

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

U.S.A.:

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -31°F [-35°C])

Canada:


"Toyota Super Long Life Coolant" is a mixture of 55% coolant and 45% deionized water. (Minimum temperature: -44°F [-42°C])

For more details about coolant, contact your Lexus dealer.

■ **If the coolant level drops within a short time of replenishing**

Visually check the radiator, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have your Lexus dealer test the cap and check for leaks in the cooling system.

 **CAUTION**

■ **When the engine <hybrid system> is hot**

Do not remove the engine/power control unit coolant reservoir caps.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

 **NOTICE**

■ **When adding coolant**

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■ **If you spill coolant**

Be sure to wash it off with water to prevent it from damaging parts or paint.

Radiator and condenser

Check the radiator and condenser and clear away any foreign objects. If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by your Lexus dealer.

CAUTION

■ **When the engine <hybrid system> is hot**


Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

Brake fluid


■ Checking fluid level

The brake fluid level should be between the “MAX” and “MIN” lines on the tank.

▶ Gasoline vehicles

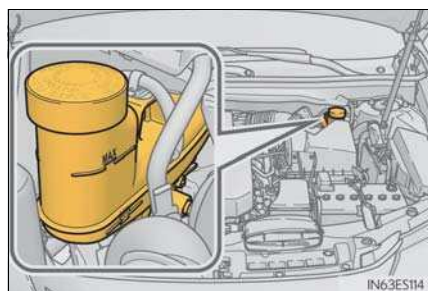

▶ Hybrid vehicles

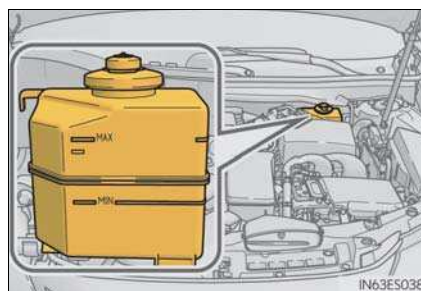

■ Adding fluid

Make sure to check the fluid type and prepare the necessary item.

Fluid type	FMVSS No.116 DOT 3 or SAE J1703 brake fluid
Items	Clean funnel

■ Brake fluid can absorb moisture from the air

Excess moisture in the brake fluid can cause a dangerous loss of braking efficiency. Use only newly opened brake fluid.

⚠ CAUTION

■ When filling the reservoir

Take care as brake fluid can harm your hands and eyes and damage painted surfaces.

If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.

If you still experience discomfort, see a doctor.

 NOTICE

■ **If the fluid level is low or high**

It is normal for the brake fluid level to go down slightly as the brake pads wear out or when the fluid level in the accumulator is high.
If the reservoir needs frequent refilling, there may be a serious problem.


12-volt battery (gasoline vehicles)

Check the 12-volt battery as follows.

■ **12-volt battery exterior**

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

- ① Terminals
- ② Hold-down clamp

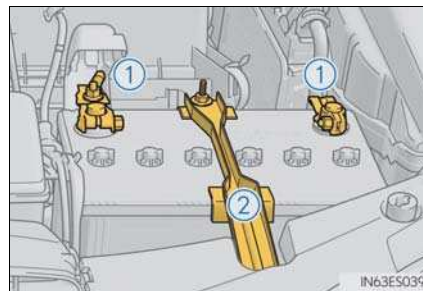


■ **Checking 12-volt battery fluid**

Check that the level is between the “UPPER LEVEL” and “LOWER LEVEL” lines.

- ① “UPPER LEVEL” line
- ② “LOWER LEVEL” line

If the fluid level is at or below the “LOWER LEVEL” line, add distilled water.

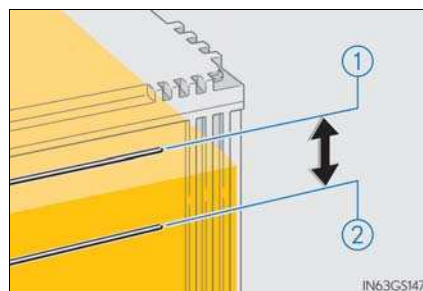


■ Adding distilled water

1 Remove the vent plug.

2 Add distilled water.

If the "UPPER LEVEL" line cannot be seen, check the fluid level by looking directly at the cell.

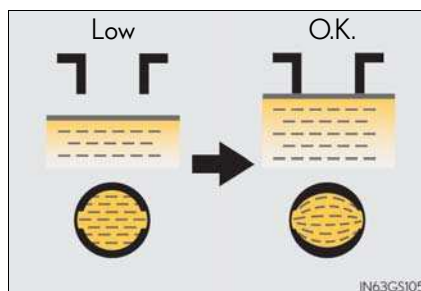

3 Put the vent plug back on and close it securely.

■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the "START STOP ENGINE" switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ After recharging/reconnecting the 12-volt battery

The engine may not start. Follow the procedure below to initialize the system.

- 1 Shift the shift lever to P.
- 2 Open and close any of the doors.
- 3 Restart the engine.
 - Unlocking the doors using the smart access system with push-button start may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
 - Start the engine with the "START STOP ENGINE" switch in ACCESSORY mode. The engine may not start with the "START STOP ENGINE" switch turned off. However, the engine will operate normally from the second attempt.
 - The "START STOP ENGINE" switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the "START STOP ENGINE" switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the engine before disconnect the 12-volt battery. Take extra care when connecting the 12-volt battery if the "START STOP ENGINE" switch mode prior to discharge is unknown.


If the engine will not start even after multiple attempts, contact your Lexus dealer.

⚠ CAUTION

■ Chemicals in the 12-volt battery

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

 CAUTION**■ Where to safely charge the 12-volt battery**

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

■ How to recharge the 12-volt battery

Only perform a slow charge (5 A or less). The 12-volt battery may explode if charged at a quicker rate.

■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
Drink a large quantity of water or milk. Get emergency medical attention immediately.

 NOTICE**■ When recharging the 12-volt battery**


Never recharge the 12-volt battery while the engine is running. Also, be sure all accessories are turned off.

■ When adding distilled water

Avoid overfilling. Water spilled during 12-volt battery recharging may cause corrosion.

Washer fluid

If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

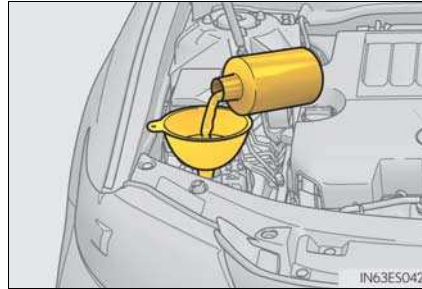

CAUTION

■ When adding washer fluid

Do not add washer fluid when the engine <hybrid system> is hot or running <operating> as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

NOTICE

■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.


■ Diluting washer fluid

Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.

12-volt battery (hybrid vehicles)


Location

The 12-volt battery is located on the right-hand side of luggage compartment.

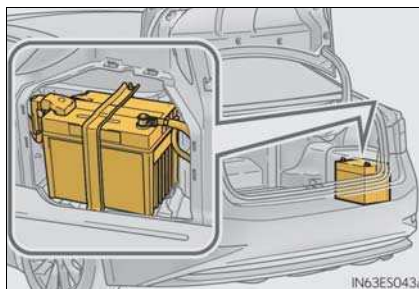


Removing the 12-volt battery cover

Remove the 12-volt battery cover.

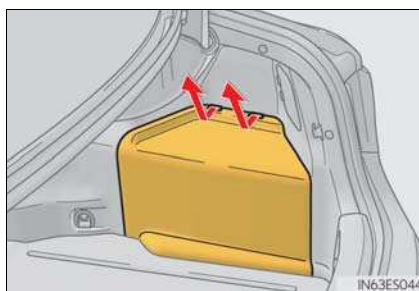

Installing the 12-volt battery cover


- ① Install the cover
- ② Lift the tab to secure to the trunk liner

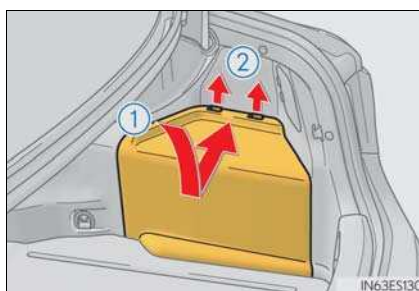

Exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

- ① Terminals
- ② Hold-down clamp

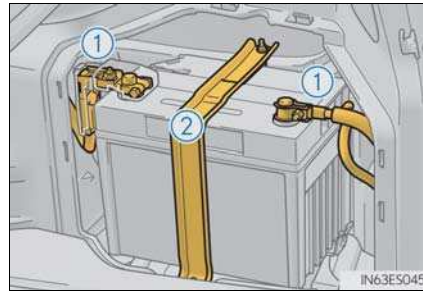

■ Before recharging


When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the “POWER” switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ After recharging/reconnecting the 12-volt battery

- The hybrid system may not start. Follow the procedure below to initialize the system.
 - 1 Shift the shift lever to P.
 - 2 Open and close any of the doors.
 - 3 Restart the hybrid system.
- Unlocking the doors using the smart access system with push-button start may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the hybrid system with the “POWER” switch in ACCESSORY mode. The hybrid system may not start with the “POWER” switch turned off. However, the hybrid system will operate normally from the second attempt.
- The “POWER” switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the “POWER” switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the “POWER” switch before disconnect the 12-volt battery. Take extra care when connecting the 12-volt battery if the “POWER” switch mode prior to discharge is unknown.

If the system will not start even after multiple attempts at all methods above, contact your Lexus dealer.

 CAUTION**■ Chemicals in the 12-volt battery**

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:


- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

■ Where to safely charge the 12-volt battery

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

■ How to recharge the 12-volt battery

Only perform a slow charge (5 A or less). The 12-volt battery may explode if charged at a quicker rate.

 CAUTION**■ Emergency measures regarding electrolyte**

- If electrolyte gets in your eyes
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
Drink a large quantity of water or milk. Get emergency medical attention immediately.

■ When replacing the 12-volt battery

Use a 12-volt battery designed for this vehicle. Failure to do so may cause gas (hydrogen) to enter the passenger compartment, causing a fire or explosion.

For replacement of the 12-volt battery, contact your Lexus dealer.

 NOTICE**■ When recharging the 12-volt battery**

Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

Tires


Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

- ① New tread
- ② Treadwear indicator
- ③ Worn tread

The location of treadwear indicators is shown by the "TWI" or "Δ" marks, etc., molded on the sidewall of each tire.



Check spare tire condition and pressure if not rotated.

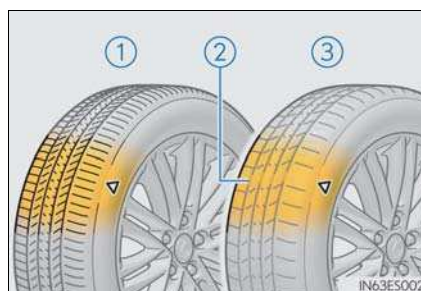

Tire rotation

Rotate the tires in the order shown.

- ▶ Vehicles with compact spare tire
- ▶ Vehicles with full-size spare tire

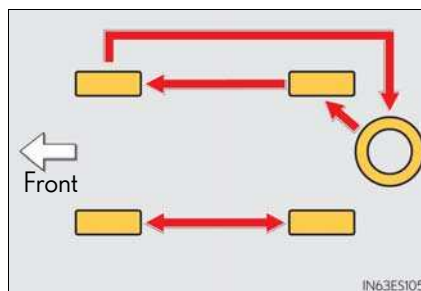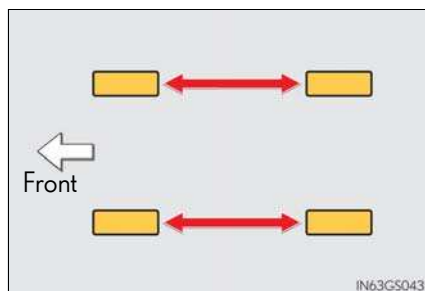

To equalize tire wear and extend tire life, Lexus recommends that tire rotation is carried out at the same interval as tire inspection.

Do not fail to initialize the tire pressure warning system after tire rotation.

Tire pressure warning system

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

- If the tire pressure drops below a predetermined level, the driver is warned by a screen display and a warning light. (→P. 775)
- The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display. (→P. 101)

◆ Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by your Lexus dealer. (→P. 697)

◆ Initializing the tire pressure warning system

- The tire pressure warning system must be initialized in the following circumstances:
 - When rotating the tires.
 - When the tire inflation pressure is changed such as when changing traveling speed or load weight.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

■ How to initialize the tire pressure warning system

- 1** Park the vehicle in a safe place and turn the “START STOP ENGINE” <“POWER”> switch off.


Initialization cannot be performed while the vehicle is moving.

- 2** Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 835)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3** Turn the “START STOP ENGINE” <“POWER”> switch to IGNITION ON <ON> mode.

- 4** Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

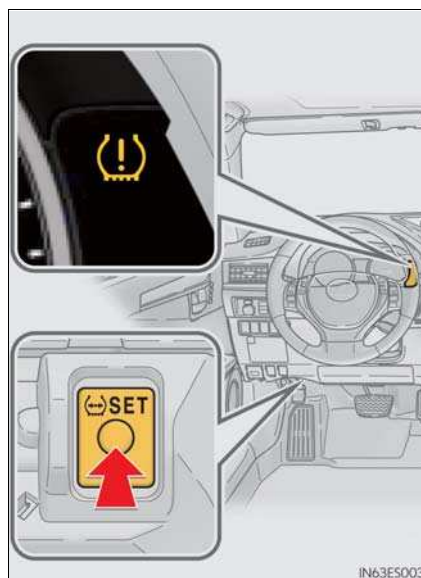

- 5** Wait for a few minutes with the “START STOP ENGINE” <“POWER”> switch in IGNITION ON <ON> mode and then turn the “START STOP ENGINE” <“POWER”> switch off.

◆ Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by your Lexus dealer.

■ When to replace your vehicle's tires

Tires should be replaced if:

- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Lexus dealer.

■ Replacing tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 20 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ When rotating the tires

Make sure that the "START STOP ENGINE" <"POWER"> switch is off. If the tires are rotated while the "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode, the tire position information will not be updated.

If this accidentally occurs, either turn the "START STOP ENGINE" <"POWER"> switch to off and then to IGNITION ON <ON> mode, or initialize the system after checking that the tire pressure is properly adjusted.


■ Low profile tires (P225/45R18 tires)

Generally, low profile tires will wear more rapidly and tire grip performance will be reduced on snowy and/or icy roads when compared to standard tires. Be sure to use snow tires or tire chains on snowy and/or icy roads and drive carefully at a speed appropriate for road and weather conditions.

■ Maximum load of tire

Check that the maximum load of the replacement tire is greater than 1/2 of the Gross Axle Weight Ratings (GAWR) of either the front axle or the rear axle, whichever is greater.

For the GAWR, see the Certification Label. For the maximum load of the tire, see the load limit at maximum cold tire inflation pressure mentioned on the sidewall of the tire. (→P. 840)

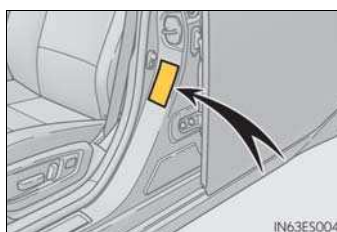

■ Tire types

● Summer tires

Summer tires are high-speed performance tires best suited to highway driving under dry conditions. Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered roads or icy roads, the use of snow tires is recommended. When installing snow tires, be sure to replace all four tires.

● All season tires

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions as well as for use year-round. All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

● Snow tires

For driving on snow-covered roads or icy roads, we recommend using snow tires. If you need snow tires, select tires of the same size, construction and load capacity as the originally installed tires. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restrictions. Snow tires should be installed on all wheels. (→P. 326)

■ **If the tread on snow tires wears down below 0.16 in. (4 mm)**

The effectiveness of the tires as snow tires is lost.

■ **Situations in which the tire pressure warning system may not operate properly**

- In the following cases, the tire pressure warning system may not operate properly.
 - If non-genuine Lexus wheels are used.
 - A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
 - A tire has been replaced with a tire that is not of the specified size.
 - Tire chains etc. are equipped.
 - Lock nuts are equipped.
 - An auxiliary-supported run-flat tire is equipped.
 - If a window tint that affects the radio wave signals is installed.
 - If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
 - If the tire inflation pressure is extremely higher than the specified level.
 - If the spare tire is in a location subject to poor radio wave signal reception.*
 - If a large metallic object which can interfere with signal reception is put in the trunk.*

*: Vehicles with a full-size spare tire only

- Performance may be affected in the following situations.
 - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
 - When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

If tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by driving and changing the radio wave conditions.
- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

■ **The initialization operation**

- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the “START STOP ENGINE” <“POWER”> switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the “START STOP ENGINE” <“POWER”> switch has been turned to IGNITION ON <ON> mode for the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

■ **When initialization of the tire pressure warning system has failed**

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by your Lexus dealer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After carrying out the initialization procedure, the tire pressure warning light blinks for 1 minute then stays on after driving for 20 minutes.

■ **Tire pressure warning system certification**

MODEL/FCC IDs:

Transmitter: PAXPMVC010

Initiator: HYQ22AAA

- ▶ For vehicles sold in the U.S.A.

Note:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

- ▶ For vehicles sold in Canada

Note:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ When inspecting or replacing tires

Observe the following precautions to prevent accidents. Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.


- Do not mix tires of different makes, models or tread patterns.
Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
Do not use tires if you do not know how they were used previously.
- Do not tow if your vehicle has a compact spare tire (if equipped) installed.

■ When initializing the tire pressure warning system

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

■ Caution regarding interference with electronic devices

- People with implanted pacemakers or cardiac defibrillators should not come within 17.7 in. (450 mm) of the tire pressure warning system initiators. The radio waves may affect the operation of such devices.

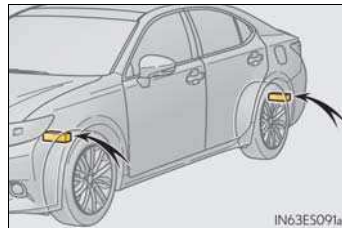

- Users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE**■ Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps**

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact your Lexus dealer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Lexus dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 695)

■ Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ Low profile tires (P225/45R18 tires)

Low profile tires may cause greater damage than usual to the tire wheel when sustaining impact from the road surface. Therefore, pay attention to the following:

- Be sure to use proper tire inflation pressure. If tires are under-inflated, they may be damaged more severely.
- Avoid potholes, uneven pavement, curbs and other road hazards. Failure to do so may lead to severe tire and wheel damage.


■ If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

Tire inflation pressure


Tire inflation pressure

The recommended cold tire inflation pressure and tire size are displayed on the tire and loading information label. (→P. 835)

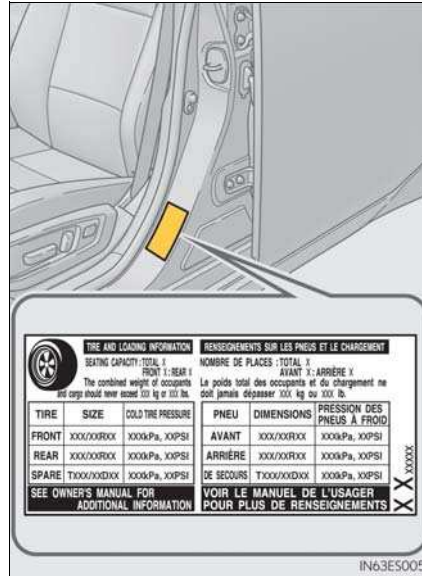

Inspection and adjustment procedure

- ① Tire valve
- ② Tire pressure gauge

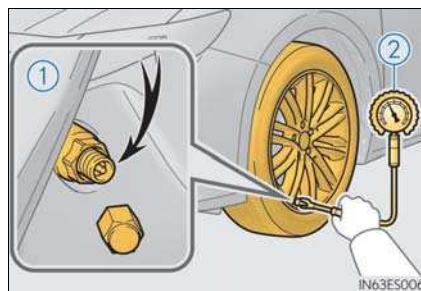

- 1 Remove the tire valve cap.
- 2 Press the tip of the tire pressure gauge onto the tire valve.
- 3 Read the pressure using the gauge gradations.
- 4 If the tire inflation pressure is not at the recommended level, adjust the pressure.
If you add too much air, press the center of the valve to deflate.
- 5 After completing the tire inflation pressure measurement and adjustment, apply soapy water to the valve and check for leakage.
- 6 Put the tire valve cap back on.

■ Tire inflation pressure check interval

You should check tire inflation pressure every two weeks, or at least once a month.
Do not forget to check the spare.

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency
- Reduced driving comfort and tire life
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by your Lexus dealer.

■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.
If your vehicle has been parked for at least 3 hours or has not been driven for more than 1 mile or 1.5 km, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.
The appearance of the tire can be misleading. In addition, tire inflation pressure that is even just a few pounds off can affect ride quality and handling.
- Do not reduce tire inflation pressure after driving. It is normal for tire inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight.
Passengers and luggage weight should be placed so that the vehicle is balanced.

CAUTION

■ Proper inflation is critical to save tire performance

Keep your tires properly inflated. Otherwise, the following conditions may occur and result in an accident causing death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Poor sealing of the tire bead
- Wheel deformation and/or tire separation
- A greater possibility of tire damage from road hazards

NOTICE

■ When inspecting and adjusting tire inflation pressure

Be sure to put the tire valve caps back on.
Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps are lost, replace them as soon as possible.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*.

Replacement wheels are available at your Lexus dealer.

*: Conventionally referred to as "offset".

Lexus does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

Aluminum wheel precautions

- Use only Lexus wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1000 miles (1600 km).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

■ When replacing wheels

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 695)

⚠ CAUTION**■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

⚠ NOTICE**■ Replacing tire pressure warning valves and transmitters**


- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Lexus dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Lexus dealer.
- Ensure that only genuine Lexus wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

Air conditioning filter


The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

Removal method


- 1 Turn the "START STOP ENGINE" <"POWER"> switch off.
- 2 Open the glove box. Lift and remove the partition.

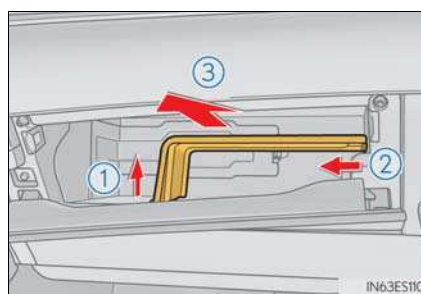


- 3 Remove the glove box cover.

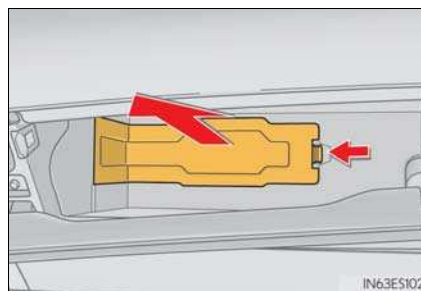

- 4 Remove the filter cover.

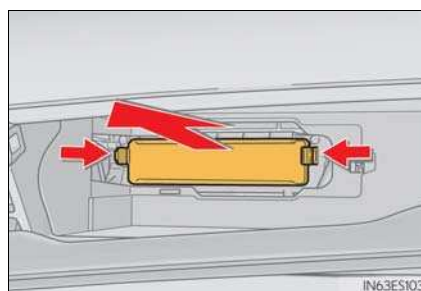

- 5 Slide and pull out the filter.
Replace it with a new one.
The “↑UP” marks shown on the filter
should be pointing up.

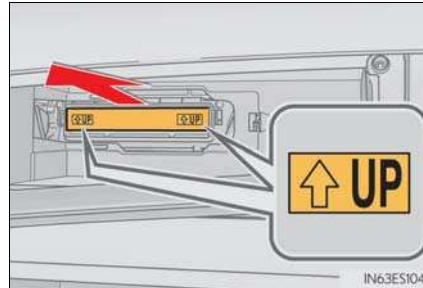

■ Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the “Owner’s Manual Supplement” or “Scheduled Maintenance”.)

■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.

⚠ NOTICE

■ When using the air conditioning system

Make sure that a filter is always installed.
Using the air conditioning system without a filter may cause damage to the system.

Electronic key battery


Replace the battery with a new one if it is depleted.

You will need the following items:

- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032


Replacing the battery

- 1 Take out the mechanical key.

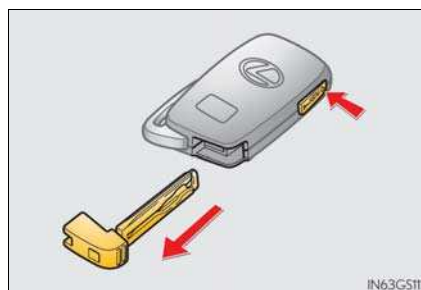


- 2 Remove the cover.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

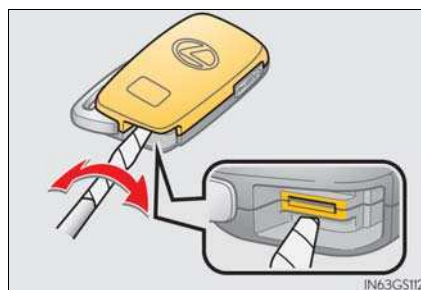

- 3 Remove the depleted battery.

Insert a new battery with the "+" terminal facing up.

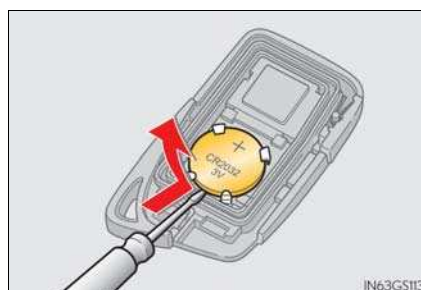

■ Use a CR2032 lithium battery

- Batteries can be purchased at your Lexus dealer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local laws.

■ If the electronic key battery is depleted

The following symptoms may occur:

- The smart access system with push-button start and wireless remote control will not function properly.
- The operational range will be reduced.

⚠ CAUTION**■ Removed battery and other parts**

Keep away from children. These parts are small and if swallowed by a child, they can cause choking. Failure to do so could result in death or serious injury.

⚠ NOTICE**■ For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:


- Always work with dry hands.
Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.

Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.


- 1 Turn the "START STOP ENGINE" <"POWER"> switch off.
- 2 After a system failure, see "Fuse layout and amperage ratings" for details about which fuse to check. (→P. 715)
- 3 Open the Fuse box cover.
 - ▶ Engine compartment (type A fuse box)

Push the tab in and lift the lid off.

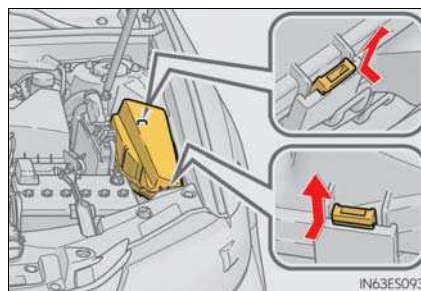


- ▶ Engine compartment (type B fuse box) (hybrid vehicles only)

Push the tab in and lift the lid off.

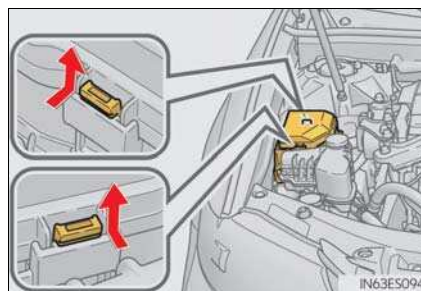


► Driver's side instrument panel

Remove the lid.

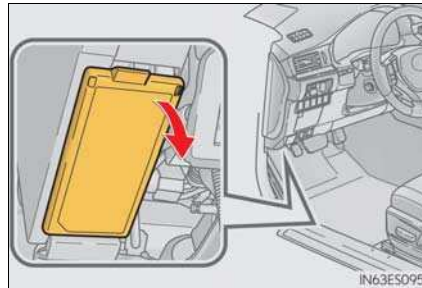

4 Remove the fuse with the pullout tool.

Only type A fuse can be removed using the pullout tool.

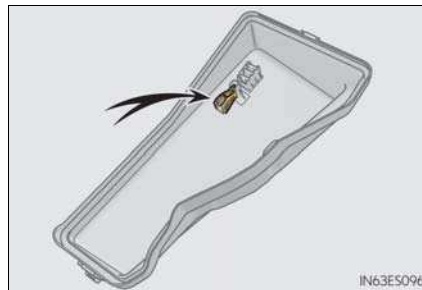

5 Check if the fuse is blown.

① Normal fuse

② Blown fuse


Type A and B:

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


Type C:

Contact your Lexus dealer.


► Type A

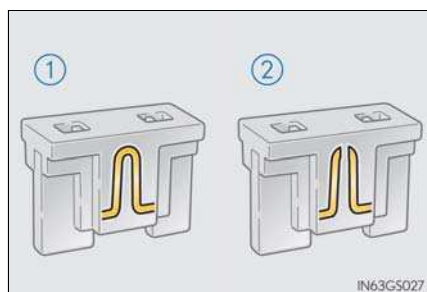

► Type B

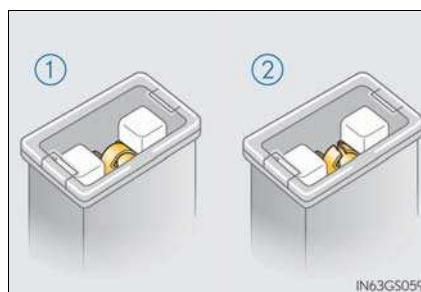


► Type C

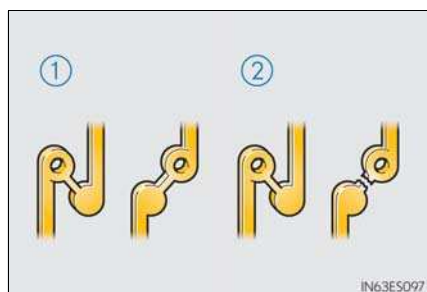


Fuse layout and amperage ratings

■ Engine compartment (type A fuse box)

● Fuse block

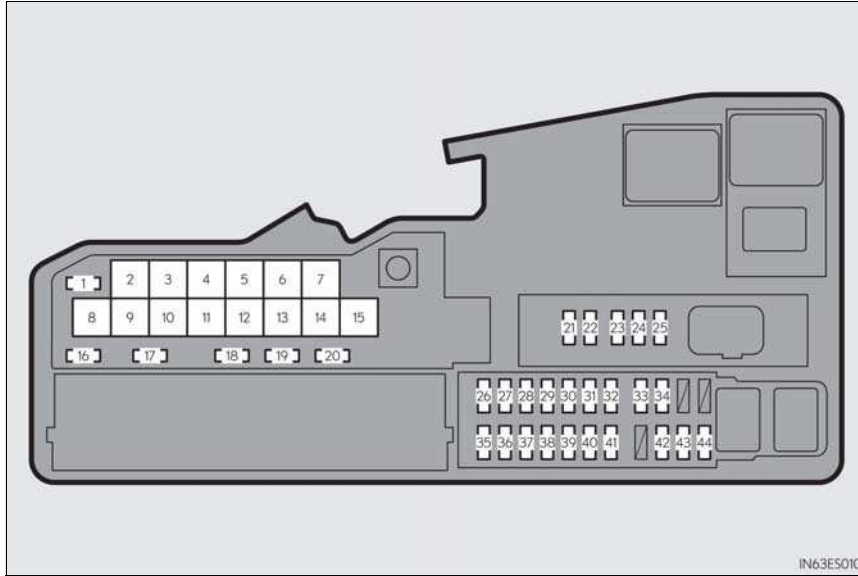

● Fuse block on the back of the cover

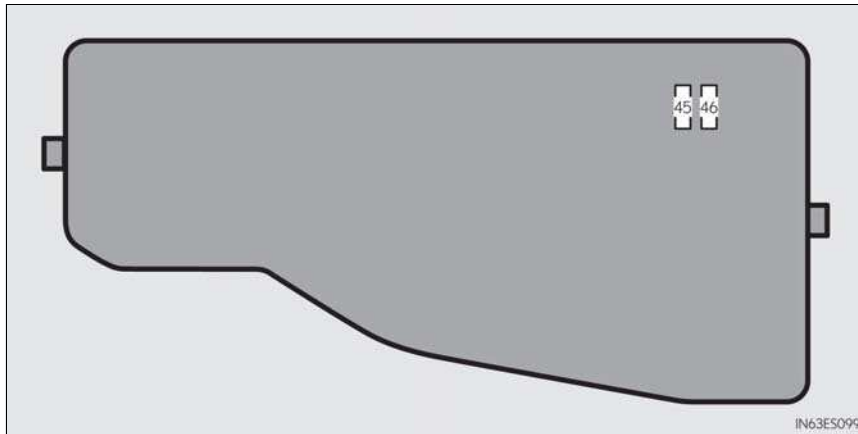

Fuse		Ampere	Circuit
1	WIP-S	5	Driver support system, windshield wipers
2	FAN	50	Electric cooling fan
3	H-LP CLN	30	No circuit
4	ENG W/PMP* ¹	30	Cooling system
5	PTC HTR NO.2	50	PTC heater
6	PTC HTR NO.1	50	PTC heater
7	HTR	50	Air conditioning system
8	ALT* ²	140	Charging system
	DC/DC* ¹	120	Hybrid system
9	ABS NO.2* ²	30	VSC, ABS
10	ST/AM2* ²	30	Starting system
	ABS NO.1* ¹	30	VSC, ABS
11	H-LP-MAIN	30	H-LP RH-LO, H-LP LH-LO
12	ABS MTR NO.2* ¹	50	VSC, ABS
13	ABS NO.1* ²	50	VSC, ABS
	ABS MTR NO.1* ¹	50	VSC, ABS
14	R/B NO.2* ¹	50	IGCT MAIN, INV W/PMP
15	EPS	80	Electric power steering
16	S-HORN	7.5	S-HORN
17	DEICER	15	Windshield deicer
18	HORN	10	Horn
19	TV	15	Multi-information display, audio display, Remote Touch, audio system, gauges and meters
20	AMP NO.2	30	Audio system
21	EFI NO.2	15	Multipoint fuel injection system, sequential multipoint fuel system, electronic controlled transmission


Fuse		Ampere	Circuit
22	EFI NO.3	10*2	Multiport fuel injection system, sequential multiport fuel system, air intake system, exhaust system
		7.5*1	Multiport fuel injection system, sequential multiport fuel system, air intake system
23	INJ	7.5	Multiport fuel injection system, sequential multiport fuel system
24	ECU-IG2 NO.3	7.5	Multiport fuel injection system, sequential multiport fuel system, electronic controlled transmission, power management system, steering lock system, cruise control system
25	IGN	15	Starting system
26	D/L-AM2	25	Power door lock system
27	IG2-MAIN	25	INJ, IGN
28	ALT-S*2	7.5	Charging system
	DC/DC-S*1	7.5	Hybrid system
29	MAYDAY	5	MAYDAY
30	TURN&HAZ	15	Turn signal lights, emergency flashers
31	STRG LOCK	10	Steering lock system
32	AMP	30	Audio system
33	H-LP LH-LO	15	Left-hand headlight
34	H-LP RH-LO	15	Right-hand headlight
35	EFI-MAIN NO.1	30	EFI NO.2, EFI NO.3, fuel system
36	SMART	5	Smart access system with push-button start, occupant classification system
37	ETCS	10	Multiport fuel injection system, sequential multiport fuel system
38	ABS NO.2*1	7.5	VSC, ABS
39	EFI NO.1	7.5	Multiport fuel injection system, sequential multiport fuel system, electronic controlled transmission

Fuse		Ampere	Circuit
40	A/F*2	20	Air intake system
	EFI-MAIN NO.2*1	20	Fuel system, air intake system, exhaust system
41	AM2	7.5	Power management system, smart access system with push-button start
42	PANEL	10	Switch illumination, audio system, multi-information display, audio display, shift lever light, glove box light, console box light, Remote Touch, intuitive parking assist switch illumination
43	DOME	7.5	Clock, footwell lights, vanity lights, ornament lights, personal lights, door courtesy lights
44	ECU-B NO.1	10	Smart access system with push-button start, main body ECU, steering sensor, gauges and meters, gateway ECU, electric tilt and telescopic steering column, power seats, overhead module, outside mirror control ECU, power trunk opener and closer ECU
45	SPARE	25	Spare fuse
46	SPARE	30	Spare fuse

*1: Hybrid vehicles


*2: Gasoline vehicles

■ Engine compartment (type B fuse box) (hybrid vehicles only)

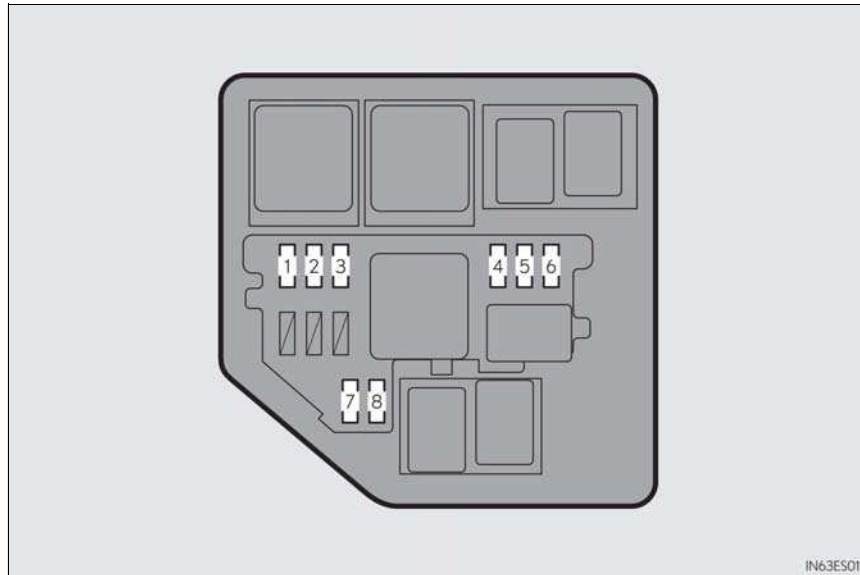

	Fuse	Ampere	Circuit
1	BATT FAN	7.5	Battery cooling fan
2	INV W/PMP RLY	7.5	INV W/PMP RLY
3	DC/DC IGCT	10	Hybrid system
4	INV	7.5	Hybrid system
5	BATT VL SSR	10	Hybrid system
6	PM IGCT	7.5	Power management system, hybrid system
7	IGCT-MAIN	25	INV W/PMP RLY, INV, DC/DC IGCT, BATT VL SSR, PM IGCT, BATT FAN
8	INV W/PMP	15	Hybrid system

■ Driver's side instrument panel

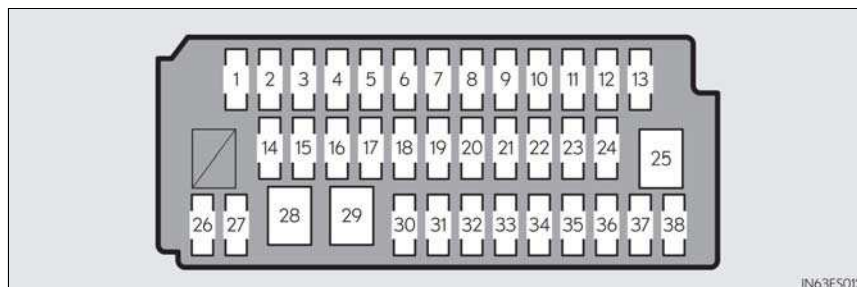

Fuse		Ampere	Circuit
1	ECU-IG1NO.2	10	Main body ECU, audio system, shift lock system, outside mirror control ECU, tension reducer, windshield wipers, heated steering wheel, multi-information display, audio display, intuitive parking assist, tire pressure warning system, moon roof, auto anti-glare inside rear view mirror, raindrop sensor, rear sunshade, wireless door lock system, power trunk opener and closer ECU
2	ECU-IG1NO.1	10	FAN, DEICER, VSC, ABS, charging system, steering sensor, electronic controlled transmission, electric power steering, gateway ECU, electric tilt and telescopic steering column
3	PANEL NO.2	5	Clock
4	TAIL	15	Parking lights, side marker lights, license plate lights
5	DOOR F/R	20	Power window, outside mirror control ECU
6	DOOR R/R	20	Power window
7	DOOR F/L	20	Power window, outside mirror control ECU
8	DOOR R/L	20	Power window
9	H-LP LVL	7.5	Automatic headlight leveling system
10	WASHER	10	Windshield washer
11	A/C-IG1	7.5	Air conditioning system, PTC heater, gauges and meters, seat heaters and ventilators

	Fuse	Ampere	Circuit
12	WIPER	25	Windshield wipers
13	BKUP LP	7.5	Multiport fuel injection system, sequential multiport fuel system, electronic controlled transmission, audio system, navigation system, back-up lights
14	FUEL OPN	10	Fuel filler door opener
15	EPS-IG1	10	Electric power steering
16	P/OUTLET RR	15	Power outlet
17	RADIO-ACC	5	Audio system, Remote Touch, multi-information display, audio display, navigation system
18	S/HTR&FAN F/R	10	Seat heaters and ventilators
19	S/HTR&FAN F/L	10	Seat heaters and ventilators
20	OBD	7.5	On-Board diagnosis system
21	ECU-B NO.2	10	Power window master switch, air conditioning system, smart access system with push-button start, tire pressure warning system, rear sunshade
22	STRG HTR	10	Heated steering wheel
23	PTL	25	Power trunk opener and closer ECU
24	STOP	7.5	Power management system, multiport fuel injection system, sequential multiport fuel system, VSC, ABS, electronic controlled transmission, driver support system, engine room junction block assy, tail lights, high mounted stoplight, smart access system with push-button start, shift lock system
25	P/SEAT F/L	30	Power seats
26	A/C-B	7.5	Air conditioning system
27	S/ROOF	10	Moon roof
28	P/SEAT F/R	30	Power seats
29	PSB	30	Pre-collision seat belt
30	D/L-AM1	20	Main body ECU

	Fuse	Ampere	Circuit
31	TI&TE	20	Electric tilt and telescopic steering column
32	A/B	10	Occupant classification system, SRS airbag system
33	ECU-IG2 NO.1	7.5	Gauges and meters
34	ECU-IG2 NO.2	7.5	VSC, ABS, gateway ECU, smart access system with push-button start, SRS airbag system
35	CIG& P/OUTLET	15	Power outlet
36	ECU-ACC	7.5	Main body ECU, gauges and meters, outside rear view mirrors
37	ECU-IG1 NO.3	10	Intuitive parking assist, driver support system, skid control buzzer, Blind Spot Monitor, radar sensor
38	S/HTR RR	20	No circuit

■ After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 724)
- If the replaced fuse blows again, have the vehicle inspected by your Lexus dealer.

■ If there is an overload in a circuit

The fuses are designed to blow, protecting the wiring harness from damage.

■ When replacing light bulbs

Lexus recommends that you use genuine Lexus products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

⚠ CAUTION**■ To prevent system breakdowns and vehicle fire**

Observe the following precautions.

Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Lexus fuse or equivalent.
Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.

⚠ NOTICE**■ Before replacing fuses**

Have the cause of electrical overload determined and repaired by your Lexus dealer as soon as possible.

Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact your Lexus dealer.


For more information about replacing other light bulbs, contact your Lexus dealer.

Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 836)


Bulb locations

■ Front

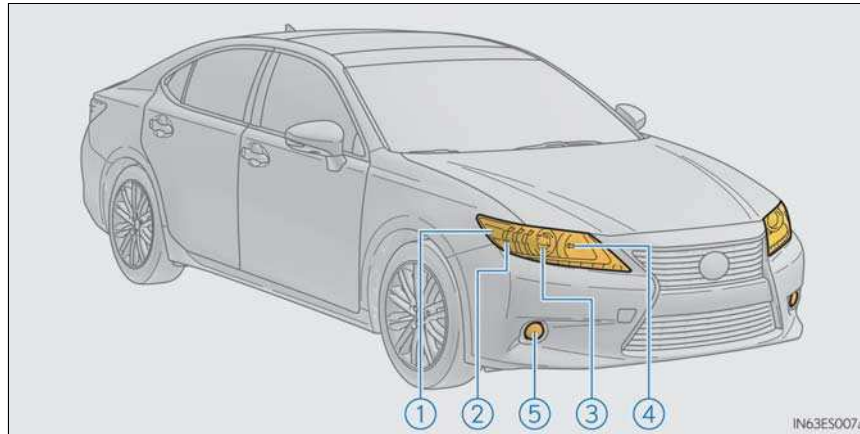

- ① Front side marker light
- ② Front turn signal light
- ③ Headlight low beam (halogen bulb)
- ④ Headlight high beam
- ⑤ Fog light

■ Rear

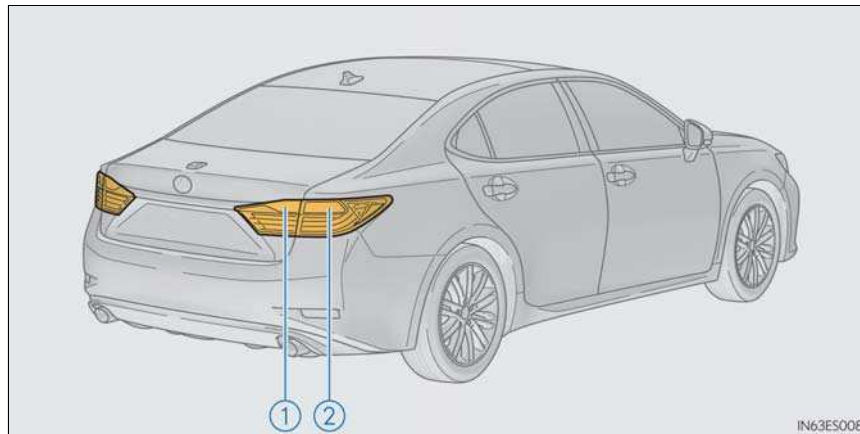


- ① Back-up light
- ② Rear turn signal light


Replacing light bulbs

■ Headlight high beam

- 1 Turn the bulb base counter-clockwise.

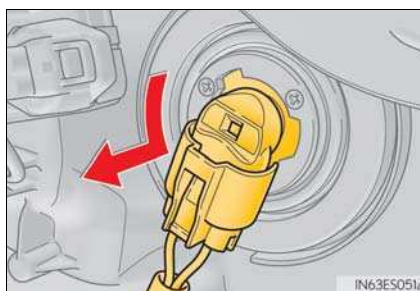


- 2 Unplug the connector while pressing the lock release.

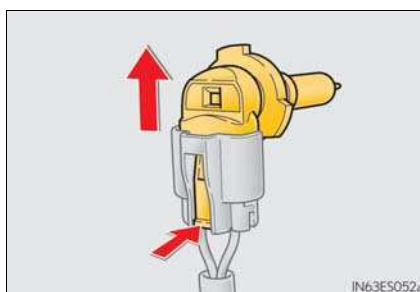


- 3 Exchange the light bulb, and install the bulb base.

Align the 3 tabs on the light bulb with the mounting, and insert.

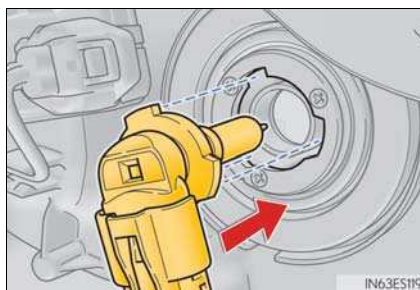


- 4 Turn and secure the bulb base.

Shake the bulb base gently to check that it is not loose, turn the headlights on once and visually confirm that no light is leaking through the mounting.

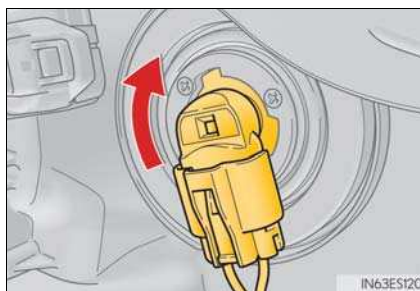


■ Headlight low beam (halogen bulb)

- 1** Turn the bulb base counter-clockwise.

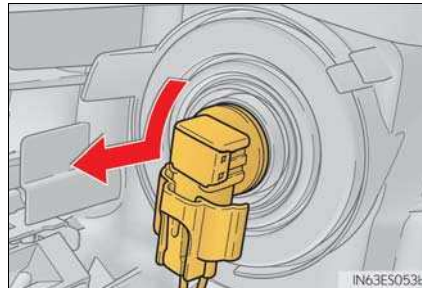


- 2** Unplug the connector while pressing the lock release.

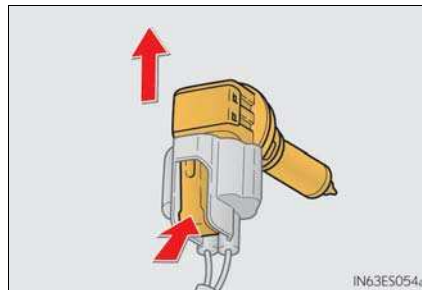


- 3** Exchange the light bulb, and install the bulb base.

Align the 3 tabs on the light bulb with the mounting, and insert.

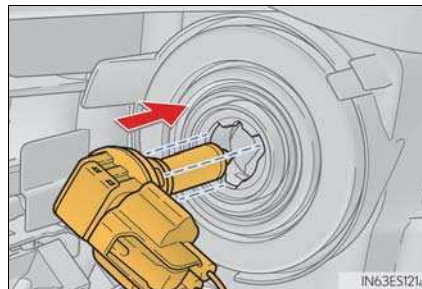


- 4** Turn and secure the bulb base.

Shake the bulb base gently to check that it is not loose, turn the headlights on once and visually confirm that no light is leaking through the mounting.

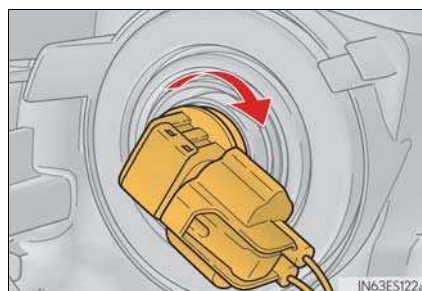


■ Fog lights


- 1 Remove the bolt and partly remove the under cover, and unplug the connector while pushing the lock release.

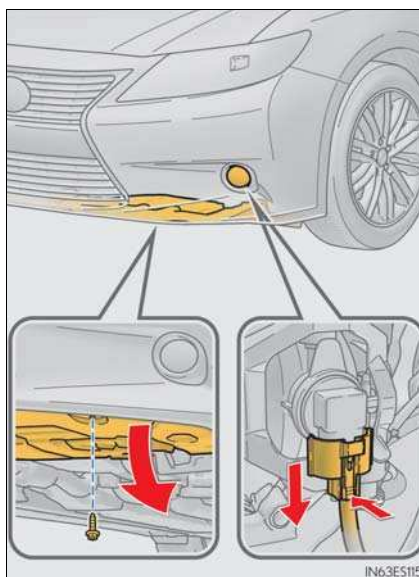

- 2 Turn the bulb base counter-clockwise.

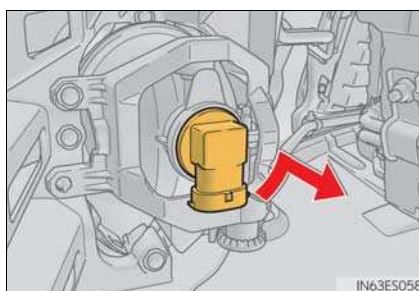


- 3 Set the new light bulb.
Align the 3 tabs on the light bulb with the mounting, and insert. Turn it clockwise to set.

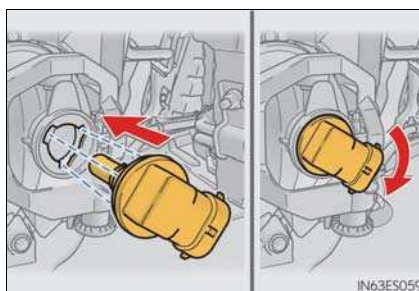

4 Set the connector.

After installing the connector, shake the bulb base gently to check that it is not loose, turn the fog lights on once and visually confirm that no light is leaking through the mounting.

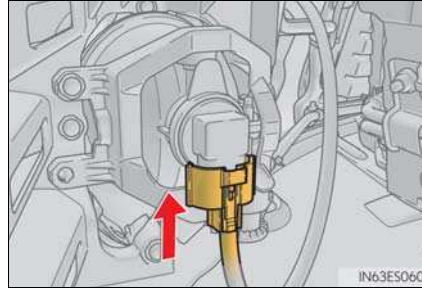

■ Front turn signal lights

- 1 To allow enough working space, turn the steering wheel to the opposite side of the bulb to be replaced.




Remove the 3 fender liner clips and 1 screw.

Turn the steering wheel to the left when replacing the right side light bulb, and turn the steering wheel to the right when replacing the left side light bulb.


To take out the clips, turn the head of the clip to unlock, then remove by pulling.

- 2 While holding the clamp open, pull and remove the tabs and open the fender liner.

- 3 Turn the bulb base counter-clockwise.

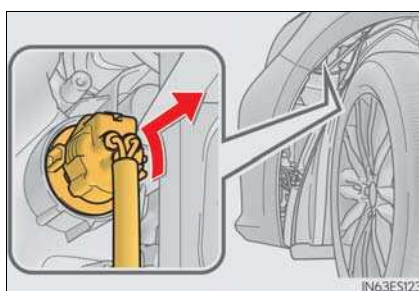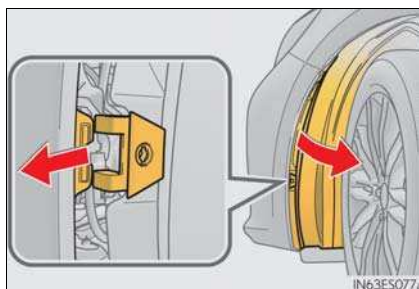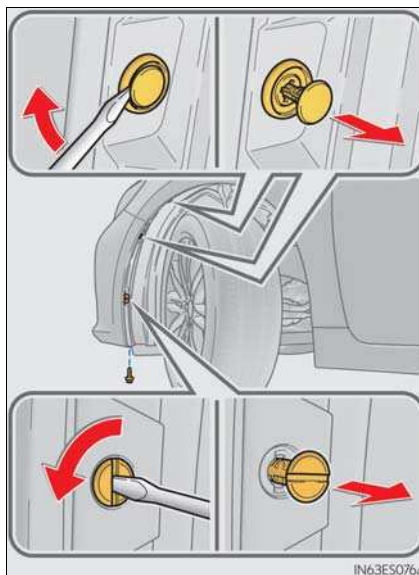


- 4** Remove the light bulb.

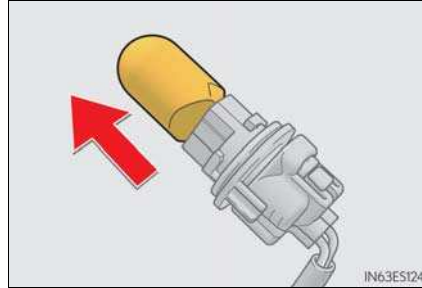

- 5** When installing, reverse the steps listed.

After installing the bulb base, reinstall the fender liner and install the clips and screw.

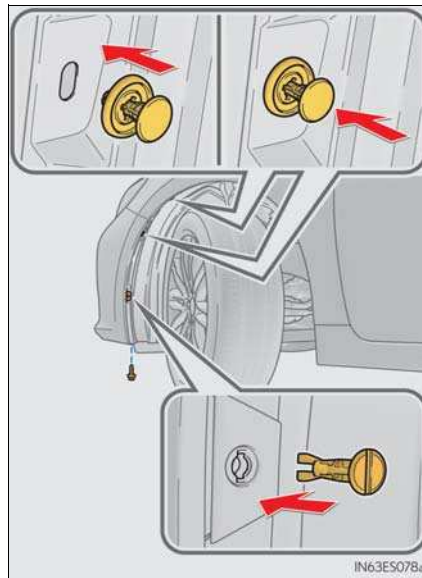


■ **Front side marker lights**


- 1** Partly remove the fender liner.

Perform the procedure for “Front turn signal lights” from step 1 to 2.
(→P.730)


- 2** Turn the bulb base counter-clockwise.

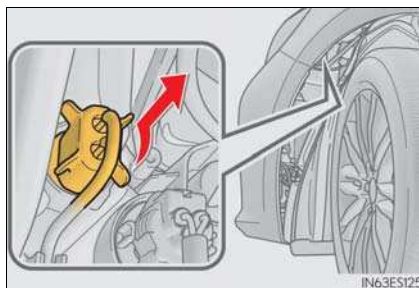

- 3** Remove the code from clip.

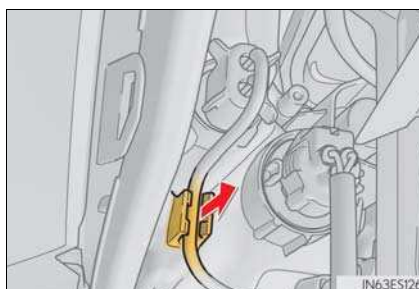


- 4** Remove the light bulb.

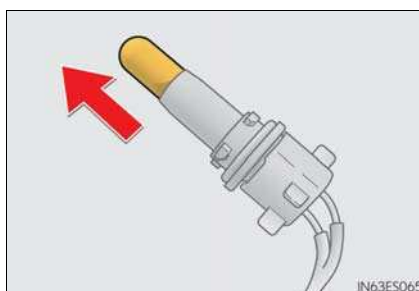


- 5 When installing, reverse the steps listed.

After installing the bulb base, reinstall the fender liner and install the clips and screw.

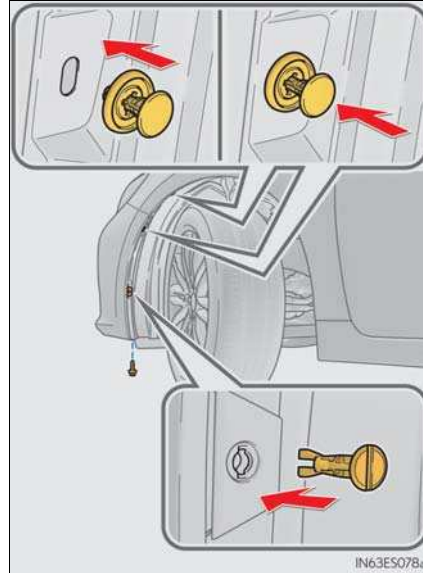

■ **Rear turn signal lights**

- 1** Open the trunk lid and remove the cover.

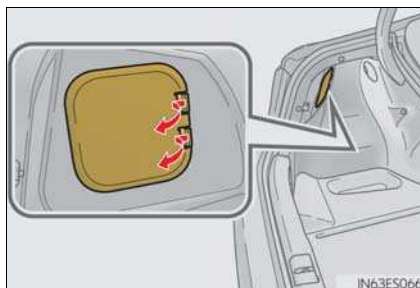

- 2** Turn the bulb base counter-clockwise.



- 3** Remove the light bulb.




- 4** When installing, reverse the steps listed.


■ Back-up lights

- 1 Open the trunk lid.
- 2 For the left side (vehicles with power trunk opener and closer only): Pry out each side of the trunk closer switch in turn by inserting a screwdriver into the base.

To prevent damage, cover the tip of the screwdriver with a rag.

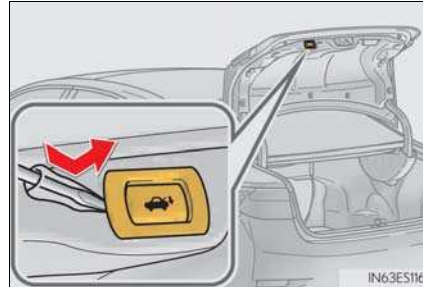


- 3 Remove the clips on whichever side you are replacing and open the cover of the trunk lid.

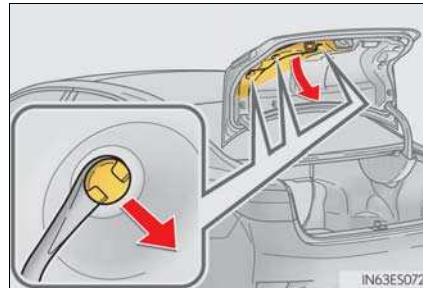


- 4 Turn the bulb base counter-clockwise.

When installing, pass the wire around the connector rib and make sure that it does not rest on top of the connector rib.

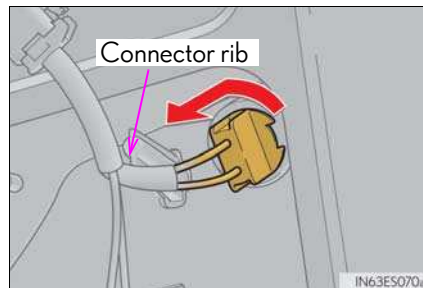

- 5 Remove the light bulb.

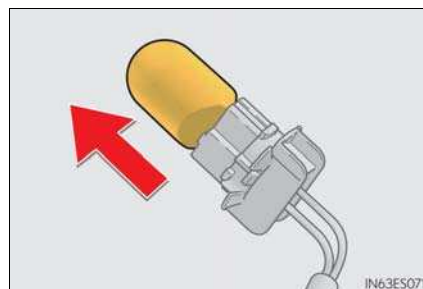

- 6 When installing, reverse the steps listed.

■ Replacing the following bulbs

If any of the lights listed below has burnt out, have it replaced by your Lexus dealer.

- Headlight low beams (discharge bulbs)
- Parking lights and daytime running lights
- Side turn signal lights
- Stop/tail lights
- Tail lights
- Rear side marker lights
- High mounted stoplight
- License plate lights
- Outer foot lights

■ Discharge headlights (if equipped)

If voltage to the discharge bulbs is insufficient, the bulbs may not come on, or may go out temporarily. The discharge bulbs will come on when normal power is restored.

■ LED lights

The lights other than the headlights, fog lights, front turn signal lights, front side marker lights, rear turn signal lights, back-up lights and outer foot lights each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Lexus dealer to have the light replaced.


■ Condensation build-up on the inside of the lens

Contact your Lexus dealer for more information in the following situations. Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction.

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

■ When replacing light bulbs

→P.723

 CAUTION**■ Replacing light bulbs**

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.
The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. Hold the bulb by the plastic or metal portion.
If the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.

■ Discharge headlights (if equipped)

- Contact your Lexus dealer before replacing the discharge headlights (including light bulbs).
- Do not touch the discharge headlight's high voltage socket when the headlights are turned on.
An extremely high voltage of 25000 V will be discharged and could result in death or serious injury by electric shock.
- Do not attempt to take apart or repair the headlight bulbs, connectors, power supply circuits, or related components.
Doing so could result in electric shock and death or serious injury.

■ To prevent damage or fire

- Make sure bulbs are fully seated and locked.
- Check the wattage of the bulb before installing to prevent heat damage.

Emergency flashers

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.


Press the switch.

All the turn signal lights will flash.

To turn them off, press the switch once again.

▶ Type A

▶ Type B

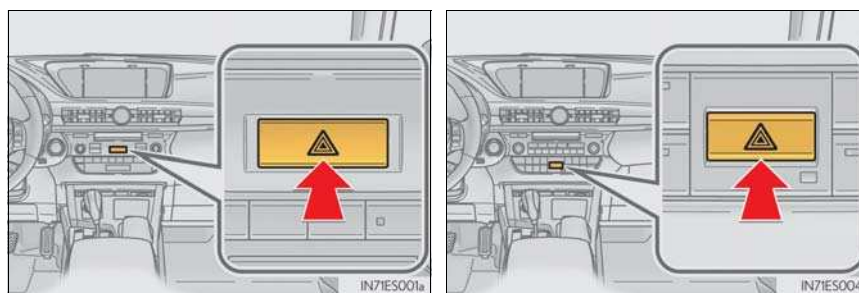

■ Emergency flashers

Gasoline vehicles: If the emergency flashers are used for a long time while the engine is not operating, the 12-volt battery may discharge.


Hybrid vehicles: If the emergency flashers are used for a long time while the hybrid system is not operating (while the "READY" indicator is not illuminated), the 12-volt battery may discharge.

If your vehicle has to be stopped in an emergency


Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1 Steadily step on the brake pedal with both feet and firmly depress it.
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2 Shift the shift lever to N.
 - ▶ If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the engine <hybrid system>.
 - ▶ If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.


- 4 Gasoline vehicles: To stop the engine, press and hold the "START STOP ENGINE" switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

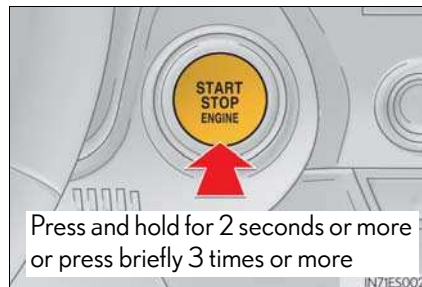

Hybrid vehicles: To stop the hybrid system, press and hold the "POWER" switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

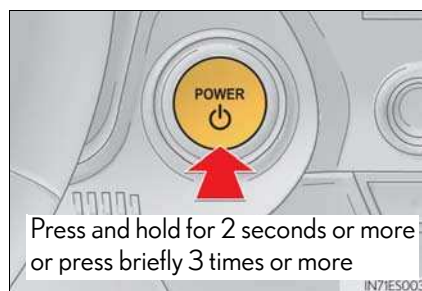

- 5 Stop the vehicle in a safe place by the road.

 CAUTION**■ If the engine <hybrid system> has to be turned off while driving**

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine <hybrid system>.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Lexus dealer or a commercial towing service, using a lift-type truck or flat bed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.


Before towing

The following may indicate a problem with your transmission. Contact your Lexus dealer before towing.

- The engine is running <hybrid system is operating> but the vehicle will not move.
- The vehicle makes an abnormal sound.

Emergency towing

Gasoline vehicles: If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet. This should only be attempted on hard surfaced roads for short distances at low speeds.

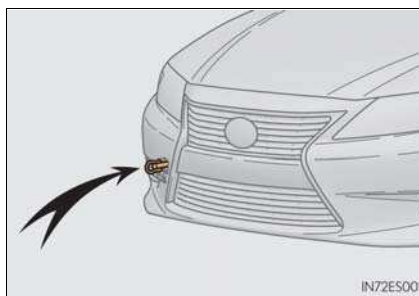

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Hybrid vehicles: If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet. This should only be attempted on hard surfaced roads for short distances at under 18 mph (30 km/h).


A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Installing towing eyelet


- 1 Take out the towing eyelet (→P. 785)

- 2 Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

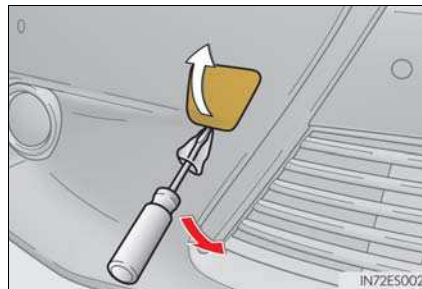

- 3 Insert the towing eyelet into the hole and tighten partially by hand.

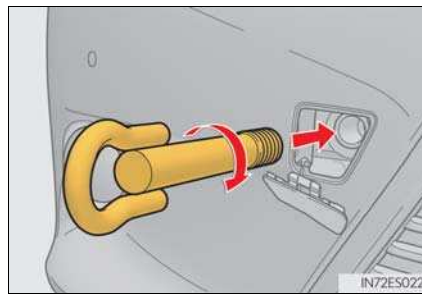


- 4 Tighten down the towing eyelet securely using a wheel nut wrench.

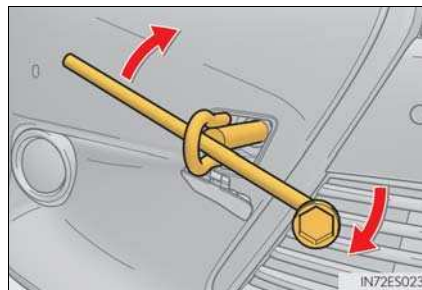

Towing with a sling-type truck


Do not tow with a sling-type truck to prevent body damage.

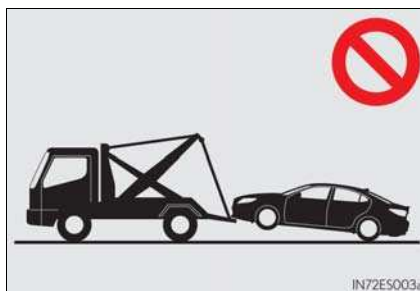

Towing with a wheel-lift type truck


- ▶ From the front

Release the parking brake.

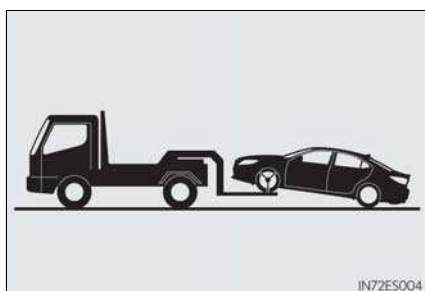


- ▶ From the rear

Use a towing dolly under the front wheels.

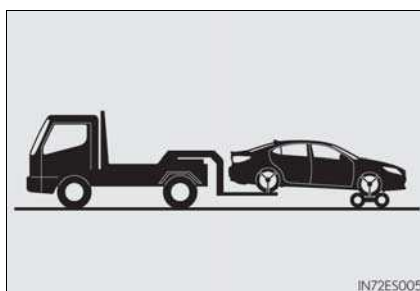


Using a flat bed truck

If your Lexus is transported by a flat bed truck, it should be tied down at the locations shown in the illustration.

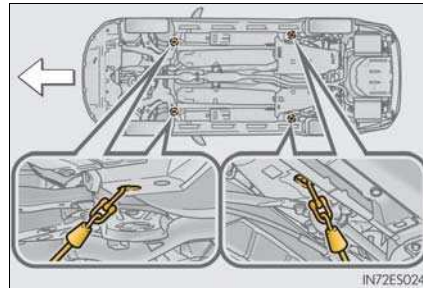


If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

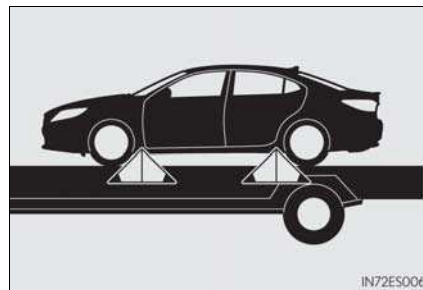

■ Before emergency towing

- 1 Release the parking brake.
- 2 Shift the shift lever to N.
- 3 Gasoline vehicles: Turn the "START STOP ENGINE" switch to ACCESSORY (engine off) or IGNITION ON (engine running) mode.
Hybrid vehicles: Turn the "POWER" switch to ACCESSORY (hybrid system off) or ON (hybrid system operating) mode.

 CAUTION

Observe the following precautions.
Failure to do so may result in death or serious injury.

■ **Caution while towing**

- Use extreme caution when towing the vehicle.
Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelet and the cable or chain. Always be cautious of the surroundings and other vehicles while towing.
- Gasoline vehicles: If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.
Hybrid vehicles: If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ **Installing towing eyelet to the vehicle**

Make sure that towing eyelet is installed securely.
If not securely installed, towing eyelet may come loose during towing.

 NOTICE

■ **To prevent causing serious damage to the transmission when towing using a wheel-lift type truck**

Never tow this vehicle from the rear with the front wheels on the ground.

■ **To prevent damage to the vehicle when towing using a wheel-lift type truck**

When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

■ **To prevent body damage when towing with a sling-type truck**

Do not tow with a sling-type truck, either from the front or rear.

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Lexus dealer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle.
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine <hybrid system>

Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

Fuel pump shut off system (gasoline vehicles)

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

- 1 Turn the "START STOP ENGINE" switch to ACCESSORY mode or turn it off.
- 2 Restart the engine.

 NOTICE

■ **Before starting the engine**

Inspect the ground under the vehicle.



If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Lexus dealer.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning light	Warning light/Details
 (U.S.A.)	Brake system warning light (warning buzzer)* <ul style="list-style-type: none"> • Low brake fluid • Malfunction in the brake booster system This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released the system is operating normally.
 (Canada)	

*: Brake system warning buzzer (hybrid vehicles):

When there is a possible problem that could affect braking performance, the warning light will come on and a warning buzzer will sound.

Parking brake engaged warning buzzer:


→P. 768

■ Brake system warning light operation (hybrid vehicles)

Although depressing the brake pedal repeatedly may cause the red brake system warning light to turn on and the buzzer to sound, this does not indicate a malfunction.






Stop the vehicle immediately.






The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning light	Warning light/Details
	Charging system warning light Indicates a malfunction in the vehicle's charging system

Have the vehicle inspected by your Lexus dealer immediately.





Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer immediately.


Warning light	Warning light/Details
 (U.S.A.)  (Canada)	Malfunction indicator lamp Indicates a malfunction in: <ul style="list-style-type: none"> • The hybrid system (hybrid vehicles); • The electronic engine control system; • The electronic throttle control system; • The electronic automatic transmission control system (gasoline vehicles); or • The electronic hybrid transmission control system (hybrid vehicles)
	SRS warning light Indicates a malfunction in: <ul style="list-style-type: none"> • The SRS airbag system; • The front passenger occupant classification system; or • The seat belt pretensioner system
 (U.S.A.)  (Canada)	ABS warning light Indicates a malfunction in: <ul style="list-style-type: none"> • The ABS; or • The brake assist system

Warning light	Warning light/Details
	<p>Electric power steering system warning light (warning buzzer) Indicates a malfunction in the EPS (Electric Power Steering) system</p>
 <p>PCS (Flashes) (If equipped)</p>	<p>Pre-collision system warning light Indicates a malfunction in the pre-collision system The warning light will operate as follows, even when the system is not malfunctioning:</p> <ul style="list-style-type: none"> • The light will flash quickly when the system is operating. (→P. 306) • The light will turn on when the pre-collision system is disabled. (→P. 307) • The light will flash when the system cannot temporarily be used. (→P. 771)
	<p>Slip indicator Indicates a malfunction in:</p> <ul style="list-style-type: none"> • The VSC system; • The TRAC system; or • The hill-start assist control system (hybrid vehicles) <p>Gasoline vehicles: The light will flash when the VSC or the TRAC is operating. Hybrid vehicles: The light will flash when the ABS, the VSC, the TRAC or the hill-start assist control system is operating.</p>
 <p>(Hybrid vehicles)</p>	<p>Brake system warning light Indicates a malfunction in:</p> <ul style="list-style-type: none"> • The regenerative brake system; or • The electronically controlled brake system
 <p>(If equipped)</p>	<p>Automatic headlight leveling system warning light Indicates a malfunction in the automatic headlight leveling system</p>

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light goes off.

Warning light	Warning light/Details	Correction procedure
	Open door warning light (warning buzzer)*1 Indicates that a door or the trunk is not fully closed	Check that all the doors and the trunk are closed.
	Low fuel level warning light Indicates remaining fuel is approximately 2.6 gal. (9.7 L, 2.1 Imp.gal.)	Refuel the vehicle.
	Seat belt reminder light (warning buzzer)*2 Warns the driver and/or front passenger to fasten their seat belts	Fasten the seat belt. If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) off.
	Master warning light A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.	→P. 761

Warning light	Warning light/Details	Correction procedure
	Tire pressure warning light	
	When the light comes on: Low tire inflation pressure such as <ul style="list-style-type: none"> • Natural causes (→P. 757) • Flat tire (→P. 784) 	Adjust the tire inflation pressure (including the full-size spare tire) to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.
	When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system	Have the system checked by your Lexus dealer.

*1: Open door warning buzzer:

→P. 766

*2: Driver's seat belt buzzer:

The driver's seat belt buzzer sounds to alert the driver that his or her seat belt is not fastened. Once the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode, the buzzer sounds for 6 seconds. If the vehicle reaches a speed of 12 mph (20 km/h), the buzzer sounds once. If the seat belt is still unfastened after 30 seconds, the buzzer will sound intermittently for 10 seconds. Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

Front passenger's seat belt buzzer:

The front passenger's seat belt buzzer sounds to alert the front passenger that his or her seat belt is not fastened. The buzzer sounds once if the vehicle reaches a speed of 12 mph (20 km/h). If the seat belt is still unfastened after 30 seconds, the buzzer will sound intermittently for 10 seconds. Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

■ **SRS warning light**

This warning light system monitors the airbag sensor assembly, front impact sensors, side impact sensors (front door), side impact sensors (front), side impact sensors (rear), driver's seat position sensor, driver's seat belt buckle switch, front passenger occupant classification system (ECU and sensors), "AIR BAG ON" indicator light, "AIR BAG OFF" indicator light, front passenger's seat belt buckle switch, seat belt pretensioner assemblies, airbags, interconnecting wiring and power sources.
(→P. 40)

■ **Front passenger detection sensor, seat belt reminder and warning buzzer**

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ **If the malfunction indicator lamp comes on while driving**

First check the following:

- Is the fuel tank empty?
If it is, fill the fuel tank immediately.
- Is the fuel tank cap loose?
If it is, tighten it securely.

The light will go off after several driving trips.

If the light does not go off even after several trips, contact your Lexus dealer as soon as possible.

■ **When the tire pressure warning light comes on**

Check the tire inflation pressure and adjust to the appropriate level. Pushing the tire pressure warning reset switch will not turn off the tire pressure warning light.

■ The tire pressure warning light may come on due to natural causes

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ When a tire is replaced with a spare tire

Vehicles with a compact spare tire: The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire.

Vehicles with a full-size spare tire: The spare tire is also equipped with a tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire.

■ Conditions that the tire pressure warning system may not function properly

→P. 699

■ If the tire pressure warning light frequently comes on after blinking for 1 minute


If the tire pressure warning light frequently comes on after blinking for 1 minute when the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode, have it checked by your Lexus dealer.

■ Electric power steering system warning light (warning buzzer)

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

■ Warning buzzer

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

 CAUTION

■ **If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact your Lexus dealer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

■ **When the electric power steering system warning light comes on**

The steering wheel may become extremely heavy.
If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.


■ **If the tire pressure warning light comes on**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest Lexus dealer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■ **If a blowout or sudden air leakage should occur**

The tire pressure warning system may not activate immediately.


 CAUTION**■ Maintenance of the tires**

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (tire and load information label). (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label [tire and load information label], you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS-tire pressure warning system) that illuminates a low tire pressure telltale (tire pressure warning light) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale (tire pressure warning light) illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS (tire pressure warning system) is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale (tire pressure warning light).

Your vehicle has also been equipped with a TPMS (tire pressure warning system) malfunction indicator to indicate when the system is not operating properly. The TPMS (tire pressure warning system) malfunction indicator is combined with the low tire pressure telltale (tire pressure warning light). When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

 CAUTION

TPMS (tire pressure warning system) malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS (tire pressure warning system) from functioning properly. Always check the TPMS (tire pressure warning system) malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS (tire pressure warning system) to continue to function properly.

 NOTICE **Precaution when installing a different tire**

When differently constructed tires or tires of different makers, models or tread patterns are installed, the tire pressure warning system may not operate properly.

If a warning message is displayed

If a warning is shown on the multi-information display, stay calm and perform the following actions:




- ① Master warning light
The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.
- ② Multi-information display



If any of the warning light comes on again after the following actions have been performed, contact your Lexus dealer.








Stop the vehicle immediately.





A buzzer sounds and a warning message is shown on the multi-information display. The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.



Warning message	Details
<p data-bbox="403 719 643 763">Engine Oil Pressure Low</p>  	<p data-bbox="675 790 1233 880">Indicates abnormal engine oil pressure The warning light may come on if the engine oil pressure is too low.</p>
<p data-bbox="448 1043 600 1088">Check Hybrid System</p>  <p data-bbox="432 1223 616 1245">(Hybrid vehicles)</p>	<p data-bbox="675 1111 1126 1133">Indicates a malfunction in the hybrid system</p>

Have the vehicle inspected immediately.

A buzzer sounds and a warning message is shown on the multi-information display. Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer.



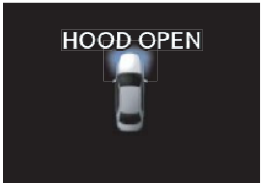

Warning message	Details
 <p>Check PCS System</p>  <p>PCS (Flashes)</p>  <p>(If equipped)</p>	<p>Indicates a malfunction in the pre-collision system</p>
 <p>Check Park Assist Sonar System</p>  <p>(If equipped)</p>	<p>Indicates a malfunction in the intuitive parking assist. The malfunctioning assist-sensor is flashing.</p>
 <p>Check Cruise Control System</p> 	<p>Indicates a malfunction in the dynamic radar cruise control system (if equipped) or the cruise control system</p> <p>Press the "ON/OFF" button once to deactivate the system, and then press the button again to reactivate the system.</p>






Warning message	Details
<div data-bbox="392 472 654 600" style="background-color: black; color: white; padding: 5px; text-align: center;"> Check LDA System </div> <div data-bbox="392 618 485 678" style="text-align: center;">  </div> <div data-bbox="448 685 592 719" style="text-align: center;"> (If equipped) </div>	Indicates a malfunction in the LDA (Lane Departure Alert) system
<div data-bbox="392 759 654 887" style="background-color: black; color: white; padding: 5px; text-align: center;"> Check AHB System </div> <div data-bbox="392 904 485 965" style="text-align: center;">  </div> <div data-bbox="448 972 592 1005" style="text-align: center;"> (If equipped) </div>	Indicates a malfunction in the Automatic High Beam system
<div data-bbox="392 1046 654 1173" style="background-color: black; color: white; padding: 5px; text-align: center;"> Check Power Steering System </div> <div data-bbox="392 1191 485 1252" style="text-align: center;">  </div> <div data-bbox="392 1270 485 1330" style="text-align: center;">  </div>	Indicates a malfunction in the EPS (Electric Power Steering) system

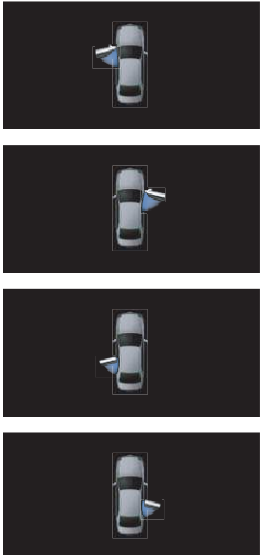



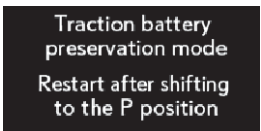

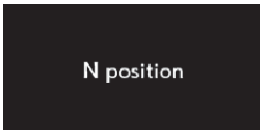

Warning message	Details
<p data-bbox="395 477 651 600">Check BSM System</p>  <p data-bbox="451 689 587 723">(If equipped)</p>	<p data-bbox="675 566 1233 633">Indicates a malfunction in the Blind Spot Monitor with Rear Cross Traffic Alert</p>
<p data-bbox="395 779 651 857">Check Access System with Elec. Key</p>  <p data-bbox="491 913 587 947">(Flashes)</p>	<p data-bbox="675 824 1233 891">Indicates a malfunction in the smart access system with push-button start</p>





Follow the correction procedures.

A buzzer sounds and a warning message is shown on the multi-information display. After taking the specified steps to correct the suspected problem, check that the warning message goes off.



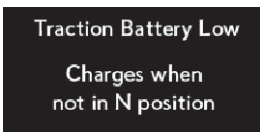

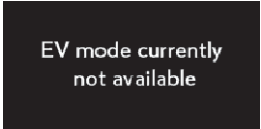
Warning message	Details	Correction procedure
	<p>Indicates that one or more of the doors is not fully closed</p> <p>The system also indicates which doors are not fully closed.</p> <p>If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the door(s) are not yet fully closed.</p>	<p>Make sure that all the doors are closed.</p>
	<p>Indicates that the hood is not fully closed</p> <p>If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the hood is not yet fully closed.</p>	<p>Close the hood.</p>


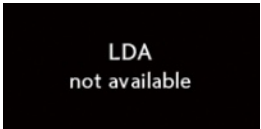


Warning message	Details	Correction procedure
	<p>Indicates that the trunk is not fully closed</p> <p>If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the trunk is not yet fully closed.</p>	<p>Close the trunk.</p>
<p>Window opened</p>  (Flashes)	<p>Indicates that the windows are not fully closed (with the "START STOP ENGINE" <"POWER"> switch off, and the driver's door open)</p>	<p>Close all the windows.</p>
<p>Moon Roof opened</p>  (Flashes)	<p>Indicates that the moon roof is not fully closed (with the "START STOP ENGINE" <"POWER"> switch off, and the driver's door open)</p>	<p>Close the moon roof.</p>
<p>Window/ Moon Roof opened</p>  (Flashes)	<p>Indicates that the windows and the moon roof are not fully closed (with the "START STOP ENGINE" <"POWER"> switch off, and the driver's door open)</p>	<p>Close all the windows and the moon roof.</p>



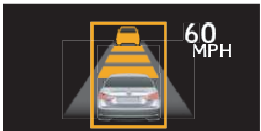

Warning message	Details	Correction procedure
	<p>Indicates that the parking brake is still engaged</p> <p>If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the parking brake is still engaged.</p>	<p>Release the parking brake.</p>
 <p> (Flashes)</p> <p>(Hybrid vehicles)</p>	<p>Indicates that the hybrid battery (traction battery) is low</p>	<p>When stopping the vehicle for a long period of time, shift the shift lever to P. The battery cannot be charged with the shift lever in N.</p>
 <p> (Flashes)</p> <p>(Hybrid vehicles)</p>	<p>Indicates that the hybrid battery (traction battery) power has dropped because a long period of time has elapsed after shifting the shift lever to N</p>	<p>Restart the hybrid system when starting the vehicle.</p>
 <p> (Flashes)</p> <p>(Hybrid vehicles)</p>	<p>Indicates that the accelerator pedal is depressed while the shift position is in N</p>	<p>Release the accelerator pedal and shift the shift lever to D or R.</p>

Warning message	Details	Correction procedure
 (Hybrid vehicles)	Indicates that the EV drive mode is not available* The reason the EV drive mode is not available (the vehicle is idling, battery charge is low, speed is higher than the EV drive mode operating speed range, accelerator pedal is depressed too much) may be displayed.	Use the EV drive mode when it becomes available.
 (Hybrid vehicles)	Indicates that the EV drive mode has been automatically canceled* The reason the EV drive mode is not available (the battery charge is low, speed is higher than the EV drive mode operating speed range, accelerator pedal is depressed too much) may be displayed.	Drive the vehicle for a while.
  (If equipped)	Indicates that engine oil level is low	Check the level of engine oil, and add if necessary.

*: For the EV drive mode operating conditions: →P. 211

Warning message	Details	Correction procedure
 <p>Clean Park Sonar</p>  <p>(If equipped)</p>	<p>Indicates that intuitive parking assist sensor is dirty or covered with ice</p>	<p>Clean the sensor.</p>
<p>Clean Radar Sensor</p>  <p>(If equipped)</p>	<p>Indicates that the radar sensor is dirty or covered with ice</p>	<p>Clean the sensor.</p>
<p>Cruise Control not available</p>  <p>(If equipped)</p>	<p>Indicates that the radar cruise control system is unable to judge vehicle-to-vehicle distance</p>	<ul style="list-style-type: none"> • Turn off the snow mode. • If the windshield wipers are on, turn them off or set them to a mode other than AUTO or high speed wiper operation.
 <p>60 MPH</p> <p>(If equipped)</p>	<p>Indicates that your vehicle is nearing the vehicle ahead (in vehicle-to-vehicle distance mode)</p>	<p>Slow the vehicle by applying the brakes.</p>

Warning message	Details	Correction procedure
 <p>PCS (Flashes) (If equipped)</p>	<p>Indicates that there is a high possibility of a frontal collision, or that the pre-collision braking function is operating</p>	<p>Slow the vehicle by applying the brakes.</p>
  <p>(If equipped)</p>	<p>Indicates that the LDA (Lane Departure Alert) system is suspended The camera sensor temperature is higher than the operation temperature range.</p>	<p>Restart the LDA (Lane Departure Alert) system after driving for a while.</p>
 <p>(If equipped)</p>	<p>Alerts the driver that the vehicle is out of the lane markers (while the LDA [Lane Departure Alert] system is operating) The warning buzzer sounds continuously. The lane line on the side the vehicle deviates from flashes.</p>	<p>Check around the vehicle and steer the vehicle back within the lane markers with safe steering.</p>

Warning message	Details	Correction procedure
<p data-bbox="395 472 651 600">BSM not available</p>  <p data-bbox="453 685 593 719">(If equipped)</p>	<p data-bbox="676 510 944 674">Indicates that the Blind Spot Monitor sensors or the surrounding area on the bumper is dirty or covered with ice</p>	<p data-bbox="963 544 1232 640">Clean the sensor and its surrounding area on the bumper.</p>
<p data-bbox="395 752 651 880">Hybrid System Overheat</p>  <p data-bbox="430 967 616 1001">(Hybrid vehicles)</p>	<p data-bbox="676 745 944 1003">Indicates that the hybrid system has overheated This message may be displayed when driving under severe operating conditions. (For example, when driving up a long steep hill.)</p>	<p data-bbox="963 842 1136 902">Stop and check. (→P. 816)</p>
<p data-bbox="395 1032 651 1160">Fuel Low</p>	<p data-bbox="676 1037 944 1160">Indicates that remaining fuel is approximately 2.6 gal. (9.7 L, 2.1 Imp.gal.) or less</p>	<p data-bbox="963 1081 1152 1115">Refuel the vehicle.</p>
<p data-bbox="395 1200 651 1328">Turn Lights Off</p>  <p data-bbox="491 1370 587 1404">(Flashes)</p>	<p data-bbox="676 1193 944 1451">Indicates that the "START STOP ENGINE" <"POWER"> switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on</p>	<p data-bbox="963 1301 1145 1335">Turn the lights off.</p>
<p data-bbox="395 1480 651 1608">Shift to P position when parked</p>  <p data-bbox="491 1628 587 1662">(Flashes)</p> <p data-bbox="430 1684 616 1718">(Hybrid vehicles)</p>	<p data-bbox="676 1529 944 1653">Indicates that the driver's door was opened with the shift position in any position other than P</p>	<p data-bbox="963 1574 1232 1608">Shift the shift position to P.</p>

■ Warning message in radar cruise mode (if equipped)

In the following cases, the warning message may not be displayed even if vehicle-to-vehicle distance decreases:

- When your vehicle and the vehicle ahead are traveling at the same speed or the vehicle ahead is traveling more quickly than your vehicle
- When the vehicle ahead is traveling at a very low speed
- Immediately after cruise control speed is set
- At the instant the accelerator pedal is depressed

■ The LDA (Lane Departure Alert) system (if equipped)






In the following cases, the warning message will not be displayed even if the vehicle deviates from the lane markers.


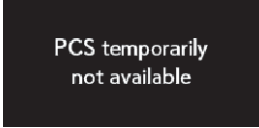
- When the vehicle speed deviates from the operating range of the LDA system functions
- When the lane markers cannot be recognized

Follow the correction procedures.

A warning message is shown on the multi-information display. After taking the specified steps to correct the suspected problem, check that the warning message goes off.

Warning message	Details	Correction procedure
<p>Turn on the high beam to activate AHB System (If equipped)</p>	<p>Indicates that the Automatic High Beam switch is pressed while the headlights are in low beam.</p>	<p>Turn the high beam on and press the Automatic High Beam switch again.</p>
<p>Washer Fluid Low</p>	<p>Indicates that the washer fluid level is low</p>	<p>Add washer fluid.</p>
<p>Maintenance required soon (U.S.A. only)</p>	<p>Indicates that all maintenance according to the driven distance on the maintenance schedule* should be performed soon. Comes on approximately 4500 miles (7200 km) after the maintenance data has been reset.</p>	<p>If necessary, perform maintenance.</p>



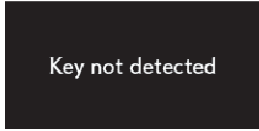

Warning message	Details	Correction procedure
 <p>Maintenance required (U.S.A. only)</p>	<p>Indicates that all maintenance is required to correspond to the driven distance on the maintenance schedule*.</p> <p>Comes on approximately 5000 miles (8000 km) after the maintenance data has been reset. (The indicator will not work properly unless the maintenance data has been reset.)</p>	<p>Perform the necessary maintenance. Please reset the maintenance data after the maintenance is performed (→P. 658)</p>
 <p>TIRE PRESSURE [psi] 33.0 23.0 33.0 33.0</p> 	<p>Indicates that the tire inflation pressure is low</p>	<p>Check the tire inflation pressure, and adjust to the appropriate level.</p>
 <p>TIRE PRESSURE</p> 	<p>Indicates a malfunction in the tire pressure warning system</p>	<p>Stop the vehicle in a safe place and turn the "START STOP ENGINE" <"POWER"> switch off then on again.</p> <p>If the tire pressure warning indicator flashes for 1 minute then illuminates, there is a malfunction in the system. Have the vehicle inspected at your Lexus dealer.</p>




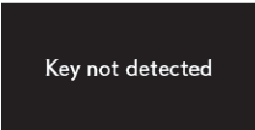

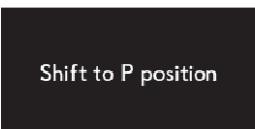

Warning message	Details	Correction procedure
	<p>Indicates that the tire position information cannot be recognized</p>	<p>Drive for a short while and check if the display updates.</p> <p>If the radio wave conditions improve, the display may return to normal. If the tire pressure is still not displayed after driving for several minutes, stop the vehicle in a safe place, turn the "START STOP ENGINE" <"POWER"> switch off then on again, and start driving.</p> <p>If the tire pressure is still not displayed even after repeating this several times, have the vehicle inspected at your Lexus dealer.</p>
 <p>PCS (Flashes) (If equipped)</p>	<p>Indicates that the pre-collision system is not currently functional because the grille cover or the sensor is dirty</p> <p>This message also appears when the pre-collision system is not functional due to overheating.</p>	<ul style="list-style-type: none"> • Check the grille cover and the sensor and clean them if they are dirty. • In case of overheating, the system will become functional once the system cools down.




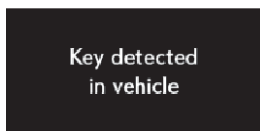



*: Refer to the separate "Scheduled Maintenance" or "Owner's Manual Supplement" for the maintenance interval applicable to your vehicle.



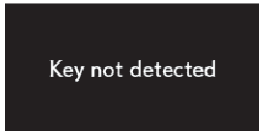

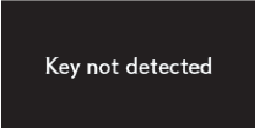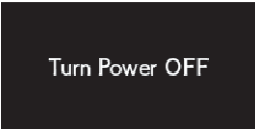

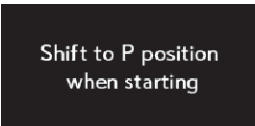

Have the malfunction repaired immediately.

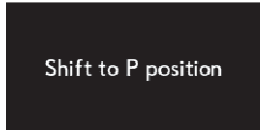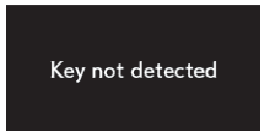
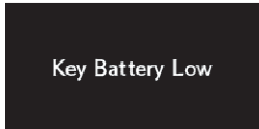

After taking the specified steps to correct the suspected problem, check that the warning message and light go off.







Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	—	  (Flashes)	The electronic key is not detected when an attempt is made to start the engine <hybrid system>.	Start the engine with the electronic key present.
Once	3 times	  (Flashes)	The electronic key was carried outside the vehicle and a door other than the driver's door was opened and closed while the "START STOP ENGINE" <"POWER"> switch was in a mode other than off.	Bring the electronic key back into the vehicle.
			The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was in P and the "START STOP ENGINE" <"POWER"> switch was not turned off.	Turn the "START STOP ENGINE" <"POWER"> switch off or bring the electronic key back into the vehicle.

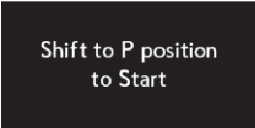

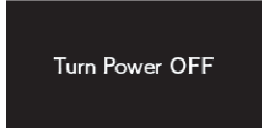

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	Continuous	  (Displayed alternately)  (Flashes)	An attempt was made to exit the vehicle with the electronic key and lock the doors without first turning the "START STOP ENGINE" <"POWER"> switch off when the shift lever was in P.	Turn the "START STOP ENGINE" <"POWER"> switch off and lock the doors again.
9 times	—	  (Flashes)	An attempt was made to drive when the regular key was not inside the vehicle.	Confirm that the electronic key is inside the vehicle.
Continuous	—	  (Flashes)	The driver's door was opened when the shift lever was not in P and the "START STOP ENGINE" <"POWER"> switch was not turned off.	Shift the shift lever to P.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Continuous	Continuous	  (Displayed alternately)  (Flashes)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was not in P and the "START STOP ENGINE" <"POWER"> switch was not turned off.	<ul style="list-style-type: none"> • Shift the shift lever to P. • Bring the electronic key back into the vehicle.
—	Continuous	  (Flashes)	An attempt was made to lock the doors using the smart access system with push-button start while the electronic key was still inside the vehicle.	Retrieve the electronic key from the vehicle and lock the doors again.
Once	Continuous	  (Flashes)	An attempt was made to lock either front door by opening a door and putting the inside lock button into the lock position, then closing the door with the electronic key still inside the vehicle.	Retrieve the electronic key from the vehicle and lock the doors again.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	—	<p>▶ Gasoline vehicles</p>  <p> (Flashes)</p> <p>▶ Hybrid vehicles</p>  <p> (Flashes)</p>	<ul style="list-style-type: none"> When the doors were unlocked with the mechanical key and then the “START STOP ENGINE” <“POWER”> switch was pressed, the electronic key could not be detected in the vehicle. The electronic key could not be detected in the vehicle even after the “START STOP ENGINE” <“POWER”> switch was pressed two consecutive times. 	<p>Touch the electronic key to the “START STOP ENGINE” <“POWER”> switch while depressing the brake pedal.</p>
Once	—	<p>▶ Gasoline vehicles</p>  <p> (Flashes)</p> <p>▶ Hybrid vehicles</p>  <p> (Flashes)</p>	<p>An attempt was made to start the engine <hybrid system> with the shift lever in an incorrect position.</p>	<p>Shift the shift lever to P and start the engine <hybrid system>.</p>

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
—	—		Power was turned off due to the automatic power off function.	Next time when starting the engine <hybrid system>, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery.
Once	—	 	The electronic key has a low battery.	Replace the electronic key battery. (→P. 710)

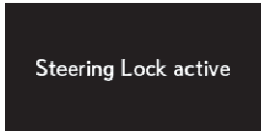Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	—	<p>▶ Gasoline vehicles</p>  <p> (Flashes)</p> <p>▶ Hybrid vehicles</p>  <p> (Flashes)</p>	<p>The driver's door was opened and closed with the "START STOP ENGINE" <"POWER"> switch turned off and then the "START STOP ENGINE" <"POWER"> switch was put in ACCESSORY mode twice without the engine <hybrid system> being started.</p>	<p>Press the "START STOP ENGINE" <"POWER"> switch while depressing the brake pedal.</p>
		<p>During an engine <hybrid system> starting procedure in the event that the electronic key was not functioning properly (→P. 803), the "START STOP ENGINE" <"POWER"> switch was touched with the electronic key.</p>	<p>Press the "START STOP ENGINE" <"POWER"> switch within 10 seconds of the buzzer sounding.</p>	
Once	—	<p> <p> (Flashes)</p> </p>	<p>The steering lock could not be released within 3 seconds of the "START STOP ENGINE" <"POWER"> switch being pressed.</p>	<p>Press the "START STOP ENGINE" <"POWER"> switch while depressing the brake pedal and moving the steering wheel left and right.</p>

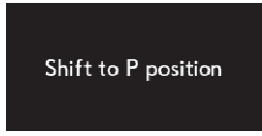Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	—	  (Flashes)	The "START STOP ENGINE" <"POWER"> switch has been turned off with the shift lever in a position other than P or N.	Shift the shift lever to P.
Once	—	  (Flashes)	After the "START STOP ENGINE" <"POWER"> switch has been turned off with the shift lever in a position other than P, the shift lever has been shifted to P.	Turn the "START STOP ENGINE" <"POWER"> switch off.

■ Warning buzzer

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

If you have a flat tire

Remove the flat tire and replace it with the spare tire provided.

For details about tires: →P. 694

CAUTION

■ If you have a flat tire

Do not continue driving with a flat tire.


Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle

- Stop the vehicle on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the engine <hybrid system>.
- Turn on the emergency flashers. (→P. 740)


Location of the spare tire, jack and tools

► Vehicles with a compact spare tire

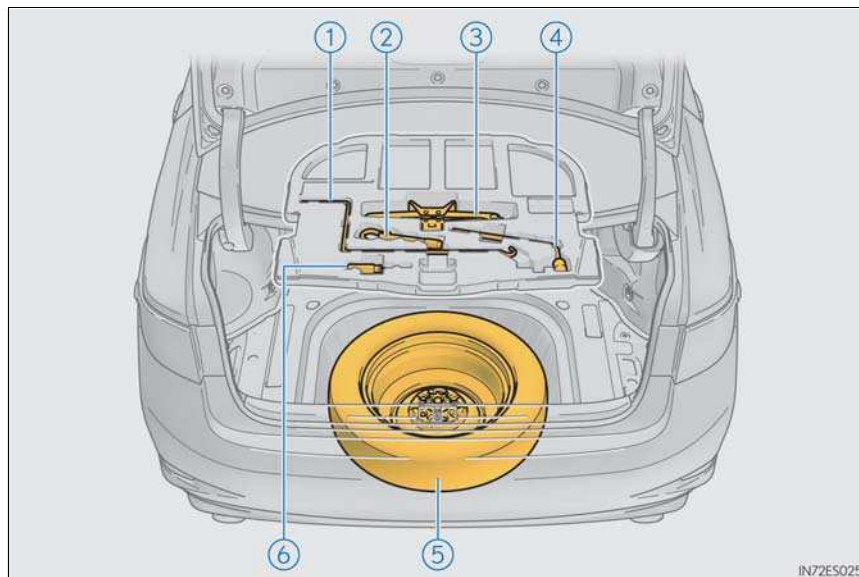


- ① Jack handle
- ② Towing eyelet
- ③ Jack
- ④ Wheel nut wrench
- ⑤ Spare tire
- ⑥ Screwdriver

► Vehicles with a full-size spare tire

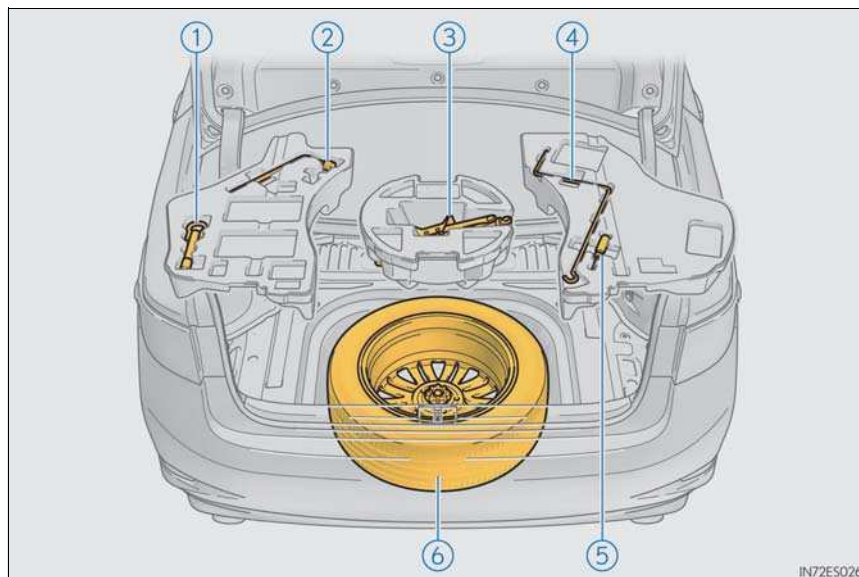

- | | |
|--------------------|---------------|
| ① Towing eyelet | ④ Jack handle |
| ② Wheel nut wrench | ⑤ Screwdriver |
| ③ Jack | ⑥ Spare tire |

 CAUTION

■ Using the tire jack

Observe the following precautions.

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the engine <hybrid system> or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.



Taking out the spare tire

1 Open the luggage mat. (→P. 612)

2 Remove the auxiliary boxes.

▶ Vehicles with a compact spare tire



▶ Vehicles with a full-size spare tire

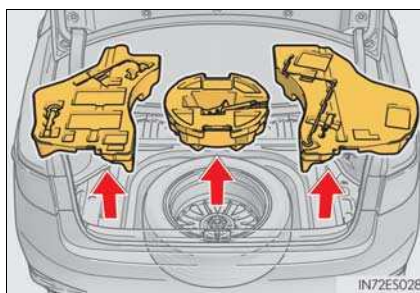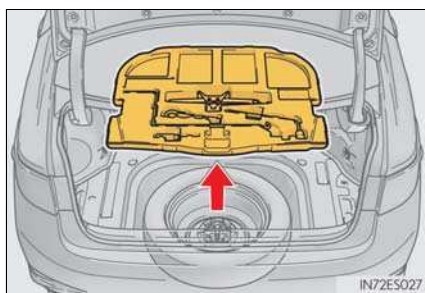

3 Loosen the center fastener that secures the spare tire.

▶ Vehicles with a compact spare tire

▶ Vehicles with a full-size spare tire

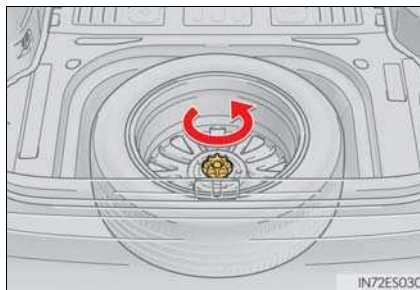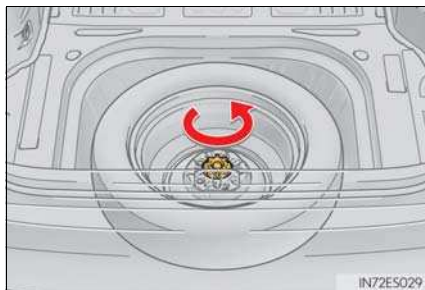


⚠ CAUTION

■ When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.


Replacing a flat tire

- 1 Chock the tires.

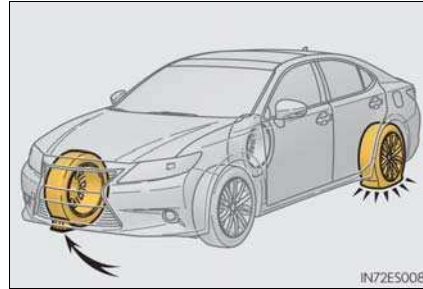


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire

- 2 Slightly loosen the wheel nuts (one turn).

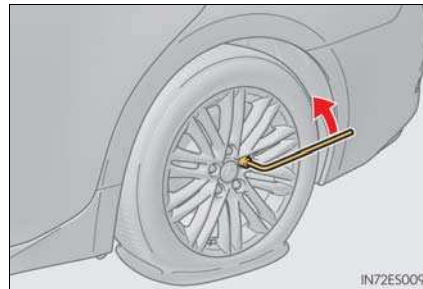


- 3 Turn the tire jack portion (A) by hand until the notch of the jack is in contact with the jack point.

The jack point guides are located under the rocker panel. They indicate the jack point positions.

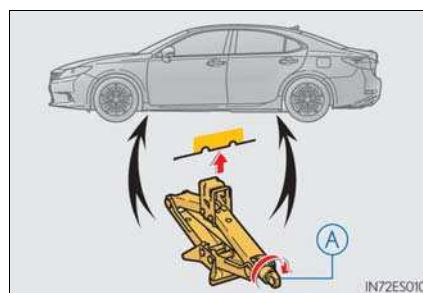

790 7-2. Steps to take in an emergency

- 4 Raise the vehicle until the tire is slightly raised off the ground.

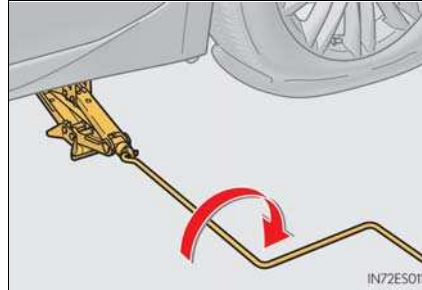



- 5 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.



- 6 Vehicles with a full-size spare tire: Remove the wheel ornament by pushing from the reverse side.

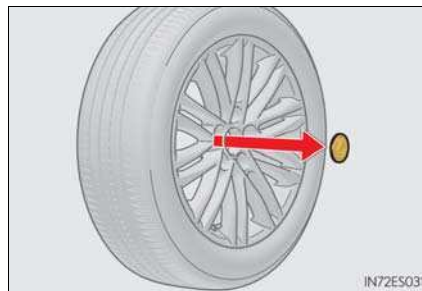

 CAUTION

■ Replacing a flat tire

- Observe the following precautions.

Failure to do so may result in serious injury:

- Do not try to remove the wheel ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.
- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.


After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.

- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
 - Never use oil or grease on the wheel bolts or wheel nuts.
Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
 - Have the wheel nuts tightened with a torque wrench to 76 ft•lbf (103 N•m, 10.5 kgf•m) as soon as possible after changing wheels.
 - Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
 - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
 - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Lexus dealer.

Installing the spare tire


- 1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

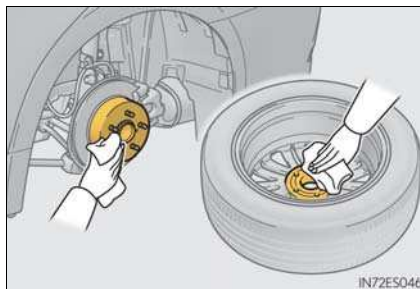


- 2 Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.


When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers come into contact with the disc wheel.

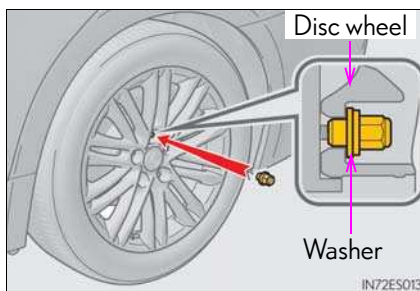

When replacing an aluminum wheel with a steel wheel, tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

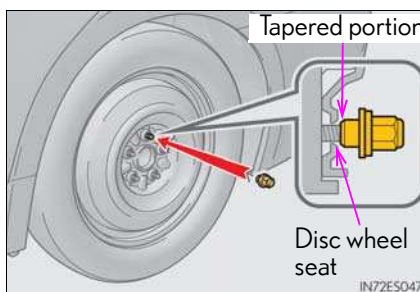


- 3** Lower the vehicle.

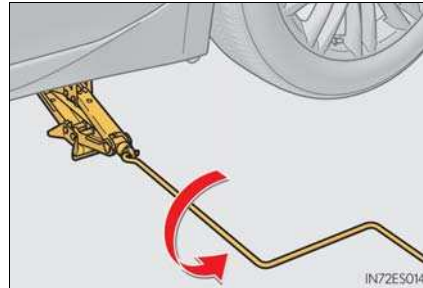


- 4** Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:
76 ft•lbf (103 N•m, 10.5 kgf•m)

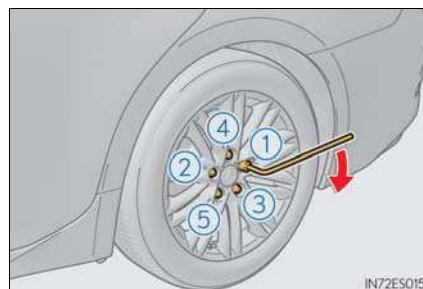

- 5** Vehicles with a full-size spare tire:
Reinstall the wheel ornament.

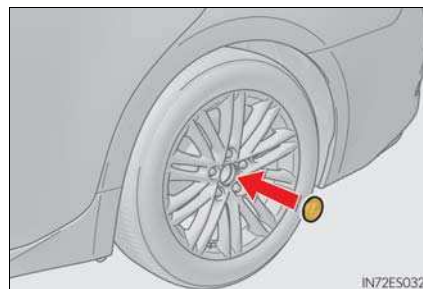

- 6** Stow the flat tire, tire jack and all tools.

■ **The compact spare tire**

- The compact spare tire is identified by the label “TEMPORARY USE ONLY” on the tire sidewall.
Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire.
(→P. 835)

■ **When using the compact spare tire**

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.


■ **When the compact spare tire is equipped**

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires.

■ **If you have a flat front tire on a road covered with snow or ice (vehicles with a compact spare tire)**

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

- 1 Replace a rear tire with the compact spare tire.
- 2 Replace the flat front tire with the tire removed from the rear of the vehicle.
- 3 Fit tire chains to the front tires.

 **CAUTION**
■ When using the compact spare tire

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tires simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

■ When the compact spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- | | |
|---|---|
| • ABS & Brake assist | • LDA (Lane Departure Alert)
(if equipped) |
| • VSC | • Rear view monitor system
(if equipped) |
| • TRAC | • Intuitive parking assist (if equipped) |
| • Cruise control | • Navigation system (if equipped) |
| • Dynamic radar cruise control
(if equipped) | |
| • PCS (if equipped) | |
| • EPS | |

■ Speed limit when using the compact spare tire

Do not drive at speeds in excess of 50 mph (80 km/h) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

■ After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

 NOTICE

■ **Driving with tire chains and the compact spare tire**

Do not fit tire chains to the compact spare tire.
Tire chains may damage the vehicle body and adversely affect driving performance.

■ **When replacing the tires**

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

If the engine will not start (gasoline vehicles)

If the engine will not start even though correct starting procedures are being followed (→P. 197), consider each of the following points:

The engine will not start even though the starter motor operates normally.

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.
Refuel the vehicle.
- The engine may be flooded.
Try to restart the engine again following correct starting procedures.
(→P. 197)
- There may be a malfunction in the engine immobilizer system.
(→P. 80)

The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 805)
- The 12-volt battery terminal connections may be loose or corroded.

The starter motor does not turn over

The engine starting system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, an interim measure is available to start the engine. (→P. 798)

The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the 12-volt battery terminals may be disconnected.
- The 12-volt battery may be discharged. (→P. 805)
- There may be a malfunction in the steering lock system.

Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the engine does not start, the following steps can be used as an interim measure to start the engine if the “START STOP ENGINE” switch is functioning normally:

- 1** Set the parking brake.
- 2** Shift the shift lever to P.
- 3** Turn the “START STOP ENGINE” switch to ACCESSORY mode.
- 4** Press and hold the “START STOP ENGINE” switch for about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

If the hybrid system will not start (hybrid vehicles)

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

The hybrid system will not start even though the correct starting procedure is being followed. (→P. 204)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P. 803)
- There may not be sufficient fuel in the vehicle's tank.
Refuel the vehicle.
- There may be a malfunction in the immobilizer system. (→P. 82)
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P. 800)

The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 809)
- The 12-volt battery terminal connections may be loose or corroded.

The interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the 12-volt battery terminals may be disconnected.
- The 12-volt battery may be discharged. (→P. 809)

Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the "POWER" switch is functioning normally:

- 1** Set the parking brake.
- 2** Shift the shift lever to P.
- 3** Turn the "POWER" switch to ACCESSORY mode.
- 4** Press and hold the "POWER" switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.


If the shift lever cannot be shifted from P

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by your Lexus dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted:


- 1 Set the parking brake.
- 2 Turn the "START STOP ENGINE" <"POWER"> switch to ACCESSORY mode.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.

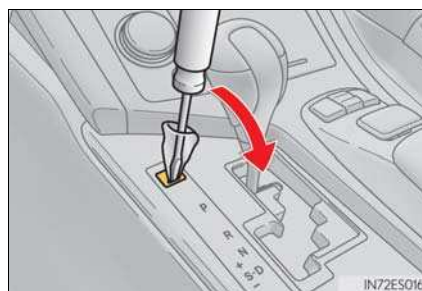

- 5 Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

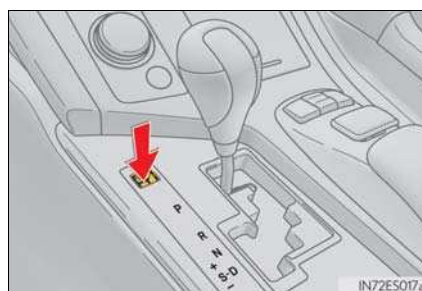

If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P. 130) or the electronic key cannot be used because the battery is depleted, the smart access system with push-button start and wireless remote control cannot be used. In such cases, the doors and trunk can be opened and the engine <hybrid system> can be started by following the procedure below.

Locking and unlocking the doors, unlocking the trunk and key linked functions


■ Doors

Use the mechanical key (→P. 120) in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof (turn and hold)*
- ③ Unlocks the door


Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof (turn and hold)*

*: This setting must be customized at your Lexus dealer.

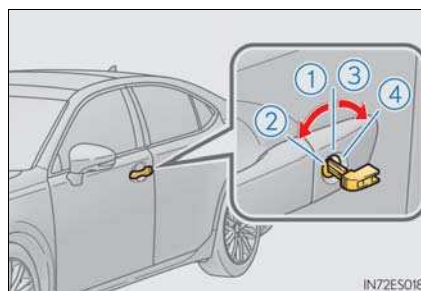

■ Trunk

Turn the mechanical key clockwise to open.

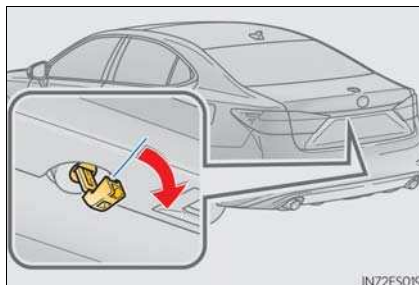


Starting the engine <hybrid system>


1 Ensure that the shift lever is in P and depress the brake pedal.

2 Touch the Lexus emblem side of the electronic key to the "START STOP ENGINE" <"POWER"> switch.

The "START STOP ENGINE" <"POWER"> switch will turn to IGNITION ON <ON> mode.

When the smart access system with push-button start is deactivated in customization setting, the "START STOP ENGINE" <"POWER"> switch will turn to ACCESSORY mode.

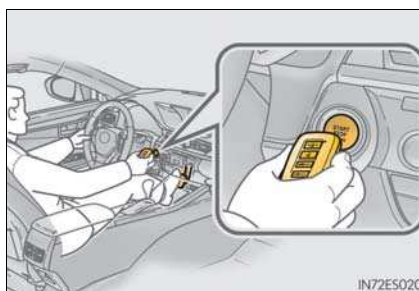

3 Firmly depress the brake pedal and check that  is shown on the multi-information display.

4 Press the "START STOP ENGINE" <"POWER"> switch.

In the event that the engine <hybrid system> still cannot be started, contact your Lexus dealer.

■ **Stopping the engine <hybrid system>**

Shift the shift lever to P and press the “START STOP ENGINE” <“POWER”> switch as you normally do when stopping the engine <hybrid system>.

■ **Replacing the key battery**

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 710)

■ **Changing “START STOP ENGINE” <“POWER”> switch modes**

Release the brake pedal and press the “START STOP ENGINE” <“POWER”> switch in step 3 above.

The engine <hybrid system> does not start and modes will be changed each time the switch is pressed. (→P. 198, 205)

■ **When the electronic key does not work properly**

- Make sure that the smart access system with push-button start has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features →P. 852)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P. 129)


If the 12-volt battery is discharged (gasoline vehicles)

The following procedures may be used to start the engine if the 12-volt battery is discharged.

You can also call your Lexus dealer or a qualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

- 1 Open the hood (→P. 669)
- 2 Connect the jumper cables according to the following procedure:

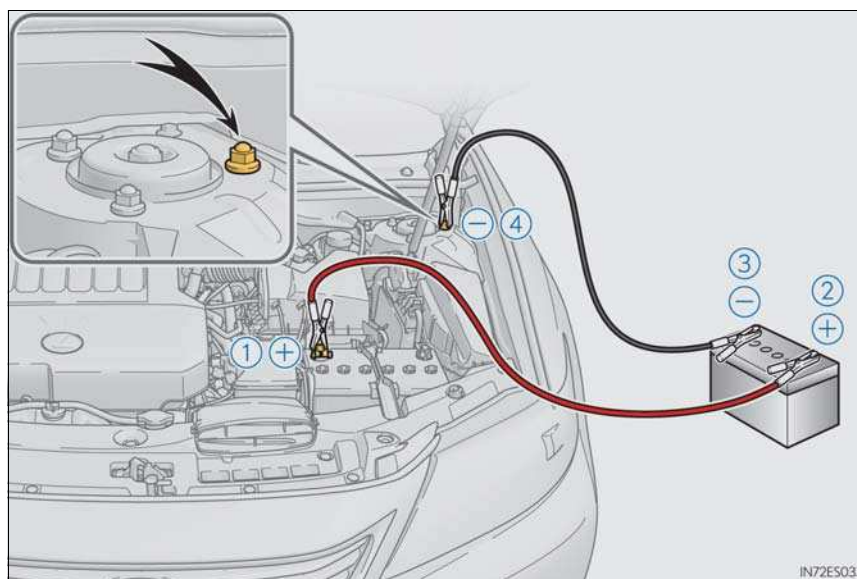

- 1 Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.
- 2 Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.
- 3 Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.

- ④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the 12-volt battery and any moving parts, as shown in the illustration.
- ③ Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.
- ④ Open and close any of the doors of your vehicle with the “START STOP ENGINE” switch off.
- ⑤ Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the “START STOP ENGINE” switch to IGNITION ON mode.
- ⑥ Once the vehicle’s engine has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the engine starts, have the vehicle inspected at your Lexus dealer as soon as possible.

■ **Starting the engine when the 12-volt battery is discharged**

The engine cannot be started by push-starting.

■ **To prevent 12-volt battery discharge**

- Turn off the headlights and the audio system while the engine is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ **Charging the 12-volt battery**

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the engine may be unable to start. (The 12-volt battery recharges automatically during driving.)


■ When recharging or replacing the 12-volt battery

- Make sure the key is not inside the vehicle when recharging or replacing the 12-volt battery to prevent the doors from being locked with the key left inside the vehicle when the alarm operates.
- In some cases, it may not be possible to unlock the doors using the smart access system with push-button start when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The engine may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The "START STOP ENGINE" switch mode is memorized by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the "START STOP ENGINE" switch off.
If you are unsure what mode the "START STOP ENGINE" switch was in before the 12-volt battery discharged, be especially careful when reconnecting the 12-volt battery.

⚠ CAUTION**■ Avoiding 12-volt battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

 CAUTION

■ **12-volt battery precautions**

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.

 NOTICE

■ **When handling jumper cables**

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or engine drive belt.


If the 12-volt battery is discharged (hybrid vehicles)

The following procedures may be used to start the hybrid system if the 12-volt battery is discharged.

You can also call your Lexus dealer or a qualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

- 1 Open the trunk lid and remove the 12-volt battery cover. (→P. 690)
In the event that the trunk opener cannot be used, use the mechanical key to open the trunk. (→P. 802)
- 2 Connect the jumper cables according to the following procedure:

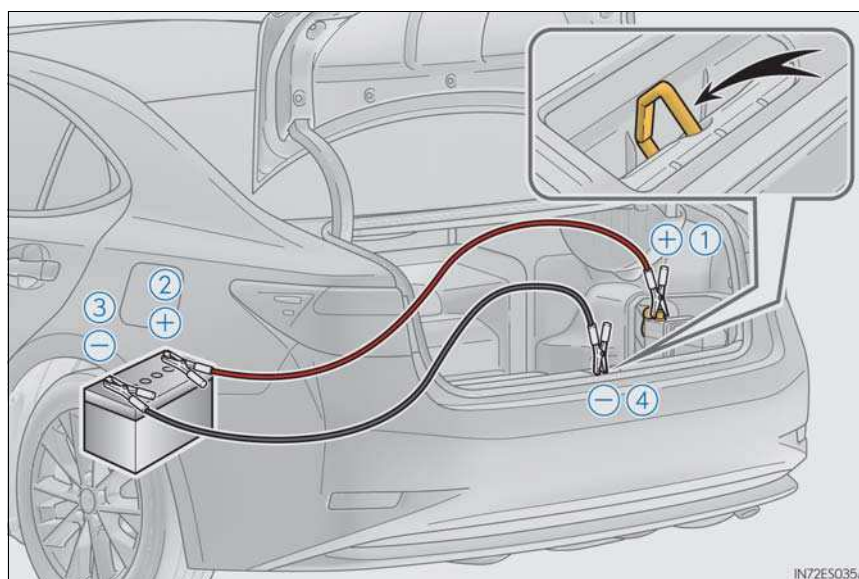

- ① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.
- ② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.
- ③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.
- ④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the 12-volt battery and any moving parts, as shown in the illustration.
- ③ Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.
- ④ Open and close any of the doors of your vehicle with the "POWER" switch off.
- ⑤ Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the "POWER" switch to ON mode.
- ⑥ Make sure the "READY" indicator comes on. If the indicator does not come on, contact your Lexus dealer.
- ⑦ Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the hybrid system starts, have the vehicle inspected at your Lexus dealer as soon as possible.

■ Starting the hybrid system when the 12-volt battery is discharged

The hybrid system cannot be started by push-starting.

■ To prevent 12-volt battery discharge

- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

■ When recharging or replacing the 12-volt battery

- Make sure the key is not inside the vehicle when recharging or replacing the 12-volt battery to prevent the doors from being locked with the key left inside the vehicle when the alarm operates.
- In some cases, it may not be possible to unlock the doors using the smart access system with push-button start when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The hybrid system may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The "POWER" switch mode is memorized by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the "POWER" switch off.

If you are unsure what mode the "POWER" switch was in before the 12-volt battery discharged, be especially careful when reconnecting the 12-volt battery.

⚠ CAUTION**■ Avoiding battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

■ 12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any 12-volt battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that 12-volt battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the 12-volt battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.

■ After recharging the 12-volt battery

Have the 12-volt battery inspected at your Lexus dealer as soon as possible. If the 12-volt battery is deteriorating, continued use may cause the 12-volt battery to emit a malodorous gas, which may be detrimental to the health of passengers.

■ When replacing the 12-volt battery

→P. 693

If your vehicle overheats (gasoline vehicles)

The following may indicate that your vehicle is overheating.



- The needle of the engine coolant temperature gauge (→P. 93) enters the red zone or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- Steam comes out from under the hood.

Follow the correction procedure as described below.

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.
- 2 If you see steam:
Carefully lift the hood after the steam subsides.

If you do not see steam:
Carefully lift the hood.
- 3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.


If a large amount of coolant leaks, immediately contact your Lexus dealer.
- 4 The coolant level is satisfactory if it is between the "FULL" and "LOW" line on the reservoir.

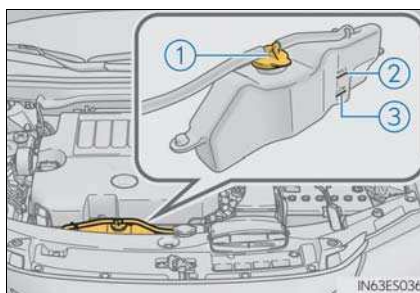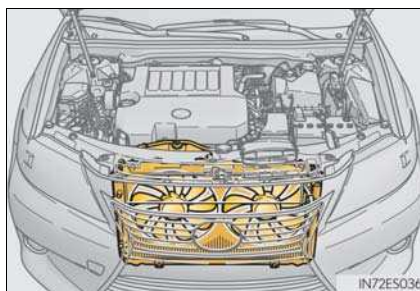

- ① Reservoir cap
- ② "FULL"
- ③ "LOW"

5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

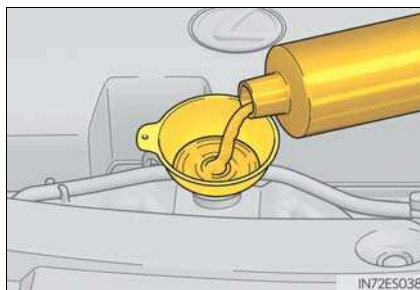

6 Start the engine and turn the air conditioning system on to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly.

(The fan may not operate in freezing temperatures.)

7 If the fan is not operating:

Stop the engine immediately and contact your Lexus dealer.

If the fan is operating:

Have the vehicle inspected at the nearest Lexus dealer.

⚠ CAUTION

■ When inspecting under the hood of your vehicle

Observe the following precautions.

Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fan and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.
- Do not loosen the radiator cap while the engine and radiator are hot. High temperature steam or coolant could spray out.

 NOTICE**■ When adding engine coolant**

Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use commercially available coolant additives.

If your vehicle overheats (hybrid vehicles)

The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P. 93) enters the red zone or a loss of hybrid system power is experienced. (For example, the vehicle speed does not increase.)
- “Hybrid System Overheat” (→P. 772) is shown on the multi-information display.
- Steam comes out from under the hood.

Correction procedures

■ If the needle of the engine coolant temperature gauge enters the red zone

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.
- 2 If you see steam:
Carefully lift the hood after the steam subsides.
If you do not see steam:
Carefully lift the hood.


- 3 After the hybrid system has cooled down sufficiently, inspect the hoses and cooling system for leaks.

If a large amount of coolant leaks, immediately contact your Lexus dealer.




- 4** The coolant level is satisfactory if it is between the “FULL” and “LOW” line on the reservoir.

- ① Reservoir cap
- ② “FULL”
- ③ “LOW”

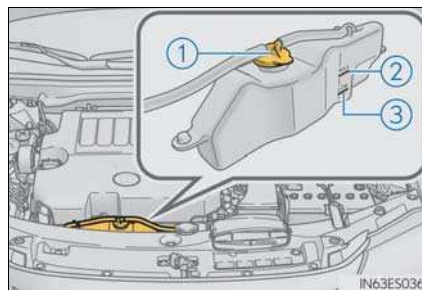

- 5** Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

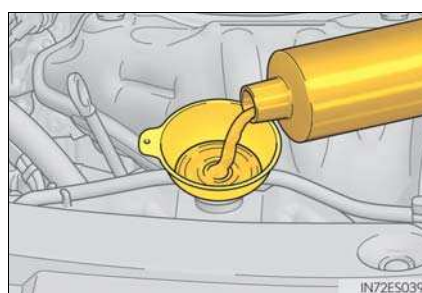

- 6** Start the hybrid system and turn the air conditioning system on to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly.

(The fan may not operate in freezing temperatures.)

- 7** If the fan is not operating:
Stop the hybrid system immediately and contact your Lexus dealer.
- If the fan is operating:
Have the vehicle inspected at the nearest Lexus dealer.

■ If “Hybrid System Overheat” is shown on the multi-information display


- 1 Stop the vehicle in a safe place.
- 2 Stop the hybrid system and carefully lift the hood.

- 3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.



- 4 The coolant level is satisfactory if it is between the “FULL” and “LOW” line on the reservoir.

- 1 Reservoir cap
- 2 “FULL”
- 3 “LOW”

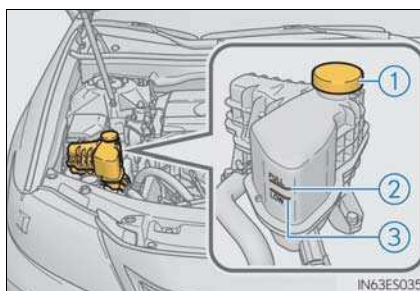


- 5 Add coolant if necessary.
Water can be used in an emergency if coolant is unavailable.



- 6 Start the hybrid system and check for the multi-information display.

If the message does not disappear:
Stop the hybrid system and contact your Lexus dealer.

If the message is not displayed:
Have the vehicle inspected at the nearest Lexus dealer.

 CAUTION**■ When inspecting under the hood of your vehicle**

Observe the following precautions.

Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Check that the indicator on the "POWER" switch and the "READY" indicator are off.
- On hybrid vehicles, the gasoline engine may automatically start, or the cooling fan may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.
- Do not loosen the radiator cap while the hybrid system and radiator are hot. High temperature steam or coolant could spray out.

 NOTICE**■ When adding engine/power control unit coolant**

Add coolant slowly after the hybrid system has cooled down sufficiently. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use commercially available coolant additives.


If the vehicle becomes stuck


Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

- 1 Stop the engine <hybrid system>. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the front wheels.
- 3 Place wood, stones or some other material under the front wheels to help provide traction.
- 4 Restart the engine <hybrid system>.
- 5 Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

■ When it is difficult to free the vehicle

Press  to turn off TRAC.

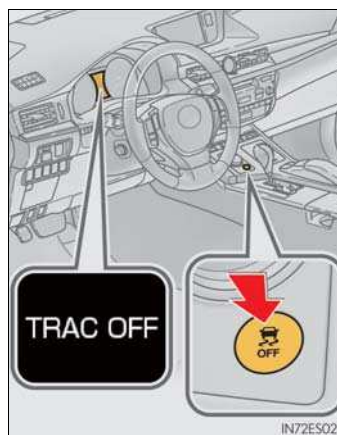

 CAUTION**■ When attempting to free a stuck vehicle**

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

 NOTICE**■ To avoid damaging the transmission and other components**

- Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

Maintenance data (fuel, oil level, etc.)

Dimensions and weight

Overall length	192.7 in. (4895mm)	
Overall width	71.7 in. (1820mm)	
Overall height*	57.1 in. (1450mm)	
Wheelbase	111.0 in. (2820mm)	
Tread	Front	62.6 in. (1590mm)
	Rear	62.0 in. (1575mm)
Vehicle capacity weight (Occupants + luggage)	905 lb. (410 kg)	


*: Unladen vehicle

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.


This number is stamped on the top left of the instrument panel.

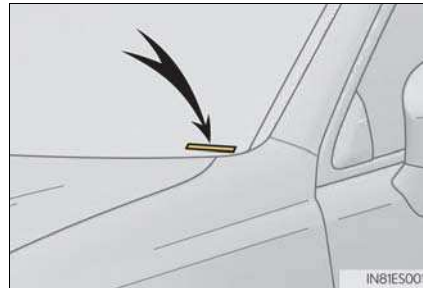

This number is also on the Certification Label.

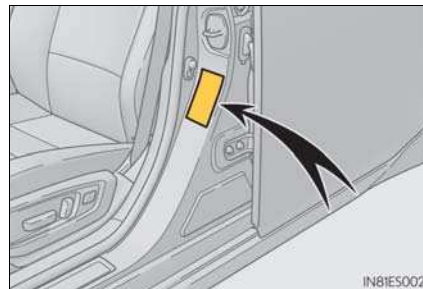


This number is also stamped under the right-hand front seat.

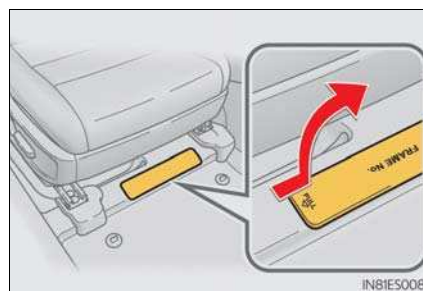


■ **Engine number**

The engine number is stamped on the engine block as shown.

▶ **2GR-FE engine**

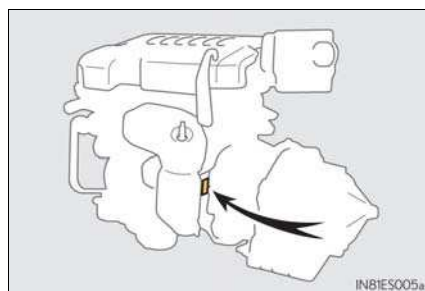

▶ **2AR-FXE engine**

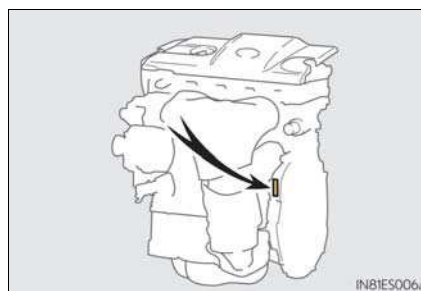

Engine

► Gasoline vehicles

Model	3.5L 6-cylinder (2GR-FE)
Type	6-cylinder V type, 4-cycle, gasoline
Bore and stroke	3.70 × 3.27 in. (94.0 × 83.0 mm)
Displacement	210.9 cu.in. (3456 cm ³)
Valve clearance (engine cold)	Automatic adjustment
Drive belt tension	Automatic adjustment

► Hybrid vehicles

Model	2.5L 4-cylinder (2AR-FXE)
Type	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	3.54 × 3.86 in. (90.0 × 98.0 mm)
Displacement	152.2 cu.in. (2494 cm ³)
Valve clearance (engine cold)	Automatic adjustment

Fuel

Fuel type	Unleaded gasoline only
Octane Rating	87 (Research Octane Number 91) or higher
Fuel tank capacity (Reference)	17.0 gal. (64.35 L, 14.2 Imp.gal.)

Electric motor (Traction motor) (hybrid vehicles)

Type	Permanent magnet synchronous motor
Maximum output	105 kW
Maximum torque	199 ft•lbf (270 N•m, 27.5 kgf•m)

Hybrid battery (Traction battery) (hybrid vehicles)

Type	Nickel-metal hydride battery
Voltage	7.2 V/module
Capacity	6.5 Ah (3HR)
Quantity	34 modules
Overall voltage	244.8 V

Lubrication system

▶ Gasoline vehicles

Oil capacity (Drain and refill — reference ^{*1})	With filter	6.4 qt. (6.1 L, 5.4 Imp.qt.)
	Without filter	6.0 qt. (5.7 L, 5.0 Imp.qt.)

^{*1}: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

▶ Hybrid vehicles

Oil capacity (Drain and refill — reference ^{*2})	With filter	4.6 qt. (4.4 L, 3.9 Imp.qt.)
	Without filter	4.2 qt. (4.0 L, 3.5 Imp.qt.)

^{*2}: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up the engine and turn off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

■ Engine oil selection


“Toyota Genuine Motor Oil” is used in your Lexus vehicle. Use Lexus approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade: ILSAC GF-5 multigrade engine oil

Recommended viscosity: SAE 0W-20

SAE 0W-20 is the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-20 is not available, SAE 5W-20 oil may be used. However, it must be replaced with SAE 0W-20 at the next oil change.

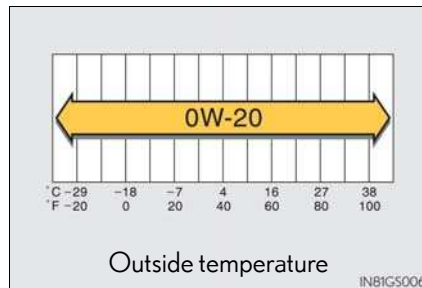

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is added to some oil containers to help you select the oil you should use.



Cooling system

► Gasoline vehicles

Capacity	9.7 qt. (9.2 L, 8.1 Imp.qt.)
Coolant type	Use either of the following: <ul style="list-style-type: none"> • “Toyota Super Long Life Coolant” • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

► Hybrid vehicles

Capacity	Gasoline engine	7.6 qt. (7.2 L, 6.3 Imp.qt.)
	Power control unit	3.4 qt. (3.2 L, 2.8 Imp.qt.)
Coolant type		Use either of the following: <ul style="list-style-type: none"> • “Toyota Super Long Life Coolant” • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system

Spark plug	
Make	<ul style="list-style-type: none"> ▶ Gasoline vehicles DENSO FK20HR11 ▶ Hybrid vehicles DENSO FK16HR-A8
Gap	<ul style="list-style-type: none"> ▶ Gasoline vehicles 0.043 in. (1.1 mm) ▶ Hybrid vehicles 0.031 in. (0.8 mm)

 NOTICE

■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system

▶ Gasoline vehicles

12-volt battery	
Specific gravity reading at 68 °F (20 °C):	1.250 — 1.290 Fully charged 1.160 — 1.200 Half charged 1.060 — 1.100 Discharged
Charging rates	
Quick charge	15 A max.
Slow charge	5 A max.

▶ Hybrid vehicles

12-volt battery	
Open voltage at 68 °F (20 °C):	12.6 — 12.8 V Fully charged 12.2 — 12.4 V Half charged 11.8 — 12.0 V Discharged (Voltage is checked 20 minutes after the hybrid system and all lights are turned off.)
Charging rates	5 A max.

Automatic transaxle (gasoline vehicles)

Fluid capacity*	6.9 qt. (6.5 L, 5.7 Imp.qt.)
Fluid type	Toyota Genuine ATF WS

*: The fluid capacity is the quantity of reference.
If replacement is necessary, contact your Lexus dealer.

NOTICE

■ Transmission fluid type

Using transmission fluid other than "Toyota Genuine ATF WS" may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

Hybrid transaxle (hybrid vehicles)

Fluid capacity*	3.9 qt. (3.7 L, 3.3 Imp.qt.)
Fluid type	Toyota Genuine ATF WS

*: The fluid capacity is a reference quantity.
If replacement is necessary, contact your Lexus dealer.

NOTICE

■ Transmission fluid type

Using transmission fluid other than "Toyota Genuine ATF WS" may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

Brakes

Pedal clearance ^{*1}		▶ Gasoline vehicles 3.58 in. (91 mm) Min. ▶ Hybrid vehicles 3.62 in. (92 mm) Min.
Pedal free play		0.04 – 0.24 in. (1.0 – 6.0 mm)
Brake pad wear limit	Front	0.06 in. (1.5 mm)
	Rear	0.04 in. (1.0 mm)
Parking brake lining wear limit		0.04 in. (1.0 mm)
Parking brake pedal travel ^{*2}		7 — 10 clicks
Fluid type		SAE J1703 or FMVSS No. 116 DOT 3

^{*1}: Minimum pedal clearance when depressed with a force of 112.4 lbf (500 N, 51.0 kgf) while the engine <hybrid system> is running <operating>.

^{*2}: Parking brake pedal travel when depressed with a force of 67.4 lbf (300 N, 30.6 kgf).

Steering

Free play	Less than 1.2 in. (30 mm)
-----------	---------------------------

Tires and wheels

► Type A

Tire size	P215/55R17 93V
Tire inflation pressure (Recommended cold tire inflation pressure)	Front tire 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Rear tire 33 psi (230 kPa, 2.3 kgf/cm ² or bar)
Wheel size	17 × 7J
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

► Type B

Tire size	P225/45R18 91V
Tire inflation pressure (Recommended cold tire inflation pressure)	Front tire 33 psi (230 kPa, 2.3 kgf/cm ² or bar) Rear tire 33 psi (230 kPa, 2.3 kgf/cm ² or bar)
Wheel size	18 × 7 1/2J
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

► Compact spare tire (if equipped)

Tire size	T155/70D17 110M
Tire inflation pressure (Recommended cold tire inflation pressure)	60 psi (420 kPa, 4.2 kgf/cm ² or bar)
Wheel size	17 × 4T
Wheel nut torque	76 ft•lbf (103 N•m, 10.5 kgf•m)

Light bulbs

	Light Bulbs	Bulb No.	W	Type
Exterior	Headlights High beam	9005	60	A
	Low beam (halogen bulbs)	—	55	B
	Low beam (discharge bulbs)	—	35	C
	Fog lights	—	19	D
	Front turn signal lights	7444NA	28/8	E
	Front side marker lights	W5W	5	F
	Rear turn signal lights	WY21W	21	E
Interior	Back-up lights	W16W	16	F
	Outer foot lights	W5W	5	F
	Door courtesy lights	—	5	F
	Vanity lights	—	5	F
	Interior light	—	8	F
	Personal lights	—	8	F
	Trunk light	—	5	F

- A: HB3 halogen bulbs
- B: H11 halogen bulbs
- C: D4S discharge bulbs
- D: H16 halogen bulbs
- E: Wedge base bulbs (amber)
- F: Wedge base bulbs (clear)

Fuel information

You must only use unleaded gasoline in your vehicle.

Select octane rating 87 (Research Octane Number 91) or higher. Use of unleaded gasoline with an octane rating lower than 87 may result in engine knocking. Persistent knocking can lead to engine damage.

At minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB3.5-M93 in Canada.

■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

■ Gasoline quality

In very few cases, driveability problems may be caused by the brand of gasoline you are using. If driveability problems persist, try changing the brand of gasoline. If this does not correct the problem, consult your Lexus dealer.

■ Gasoline quality standards

- Automotive manufacturers in the U.S.A., Europe and Japan have developed a specification for fuel quality called the World-Wide Fuel Charter (WWFC), which is expected to be applied worldwide.
- The WWFC consists of four categories that are based on required emission levels. In the U.S., category 4 has been adopted.
- The WWFC improves air quality by lowering emissions in vehicle fleets, and improves customer satisfaction through better performance.

■ Recommendation of the use of gasoline containing detergent additives

- Lexus recommends the use of gasoline that contains detergent additives to avoid the build-up of engine deposits.
- All gasoline sold in the U.S.A. contains minimum detergent additives to clean and/or keep clean intake systems, per EPA's lowest additives concentration program.
- Lexus strongly recommends the use of Top Tire Detergent Gasoline. For more information on Top Tire Detergent Gasoline and a list of marketers, please go to the official website www.toptiregas.com.


■ Recommendation of the use of cleaner burning gasoline

Cleaner burning gasoline, including reformulated gasoline that contains oxygenates such as ethanol or MTBE (Methyl Tertiary Butyl Ether) is available in many areas.

Lexus recommends the use of cleaner burning gasoline and appropriately blended reformulated gasoline. These types of gasoline provide excellent vehicle performance, reduce vehicle emissions and improve air quality.

■ Non-recommendation of the use of blended gasoline

- Use only gasoline containing a maximum of 10% ethanol.
DO NOT use any flex-fuel or gasoline that could contain more than 10% ethanol, including from any pump labeled E15, E30, E50, E85 (which are only some examples of fuel containing more than 10% ethanol).

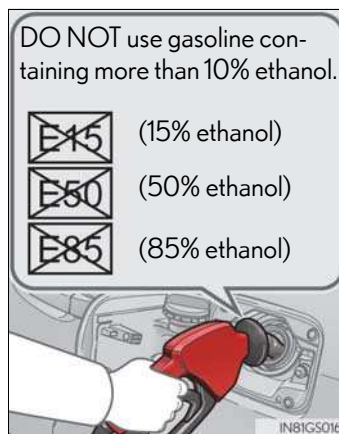

- If you use gasohol in your vehicle, be sure that it has an octane rating no lower than 87.
- Lexus does not recommend the use of gasoline containing methanol.

■ Non-recommendation of the use of gasoline containing MMT

Some gasoline contains an octane enhancing additive called MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

Lexus does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected.

The malfunction indicator lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

■ If your engine knocks

- Consult your Lexus dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

NOTICE

■ Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use leaded gasoline.
Leaded gasoline can cause damage to your vehicle's three-way catalytic converters causing the emission control system to malfunction.
- Do not use gasohol other than the type previously stated.
Other gasohol may cause fuel system damage or vehicle performance problems.
- Using unleaded gasoline with an octane number or rating lower than the level previously stated will cause persistent heavy knocking.
At worst, this will lead to engine damage.

■ Fuel-related poor driveability

If poor driveability is encountered after using a different type of fuel (poor hot starting, vaporization, engine knocking, etc.), discontinue the use of that type of fuel.


■ When refueling with gasohol

Take care not to spill gasohol. It can damage your vehicle's paint.


Tire information

Typical tire symbols

► Full-size tire

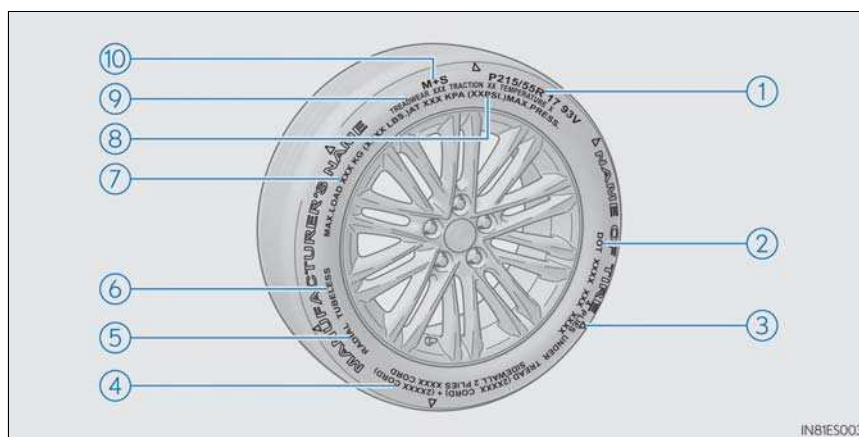


► Compact spare tire

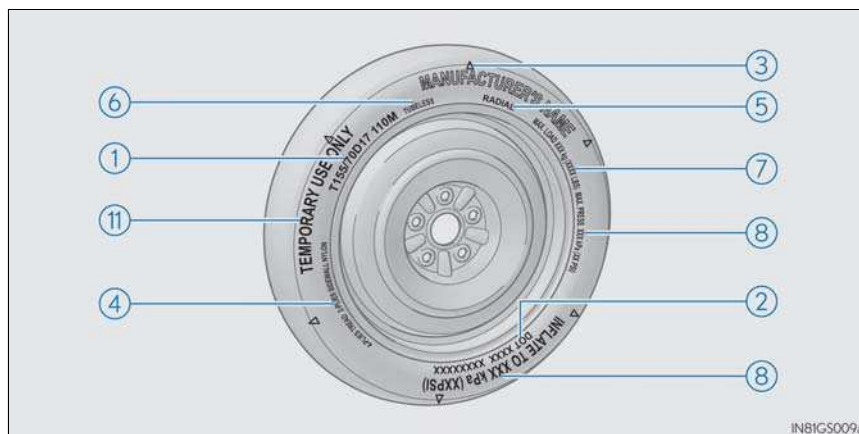

- ① Tire size (→P. 843)
- ② DOT and Tire Identification Number (TIN) (→P. 842)
- ③ Location of treadwear indicators (→P. 694)
- ④ Tire ply composition and materials
Plies are layers of rubber-coated parallel cords. Cords are the strands which form the plies in a tire.
- ⑤ Radial tires or bias-ply tires
A radial tire has "RADIAL" on the sidewall. A tire not marked "RADIAL" is a bias-ply tire.
- ⑥ TUBELESS or TUBE TYPE
A tubeless tire does not have a tube and air is directly put into the tire. A tube type tire has a tube inside the tire and the tube maintains the air pressure.
- ⑦ Load limit at maximum cold tire inflation pressure (→P. 847)
- ⑧ Maximum cold tire inflation pressure (→P. 847)
This means the pressure to which a tire may be inflated.
- ⑨ Uniform tire quality grading
For details, see "Uniform Tire Quality Grading" that follows.
- ⑩ Summer tires or all season tires (→P. 698)
An all season tire has "M+S" on the sidewall. A tire not marked "M+S" is a summer tire.
- ⑪ "TEMPORARY USE ONLY"
A compact spare tire is identified by the phrase "TEMPORARY USE ONLY" molded on its sidewall. This tire is designed for temporary emergency use only.

Typical DOT and Tire Identification Number (TIN)

- ① DOT symbol*
- ② Tire Identification Number (TIN)
- ③ Tire manufacturer's identification mark
- ④ Tire size code
- ⑤ Manufacturer's optional tire type code (3 or 4 letters)
- ⑥ Manufacturing week
- ⑦ Manufacturing year

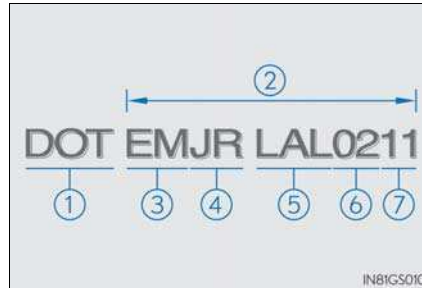


*: The DOT symbol certifies that the tire conforms to applicable Federal Motor Vehicle Safety Standards.

Tire size

■ Typical tire size information


The illustration indicates typical tire size.

- ① Tire use (P = Passenger car, T = Temporary use)
- ② Section width (millimeters)
- ③ Aspect ratio (tire height to section width)
- ④ Tire construction code (R = Radial, D = Diagonal)
- ⑤ Wheel diameter (inches)
- ⑥ Load index (2 digits or 3 digits)
- ⑦ Speed symbol (alphabet with one letter)

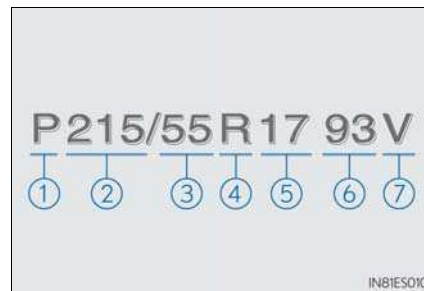


■ Tire dimensions

- ① Section width
- ② Tire height
- ③ Wheel diameter

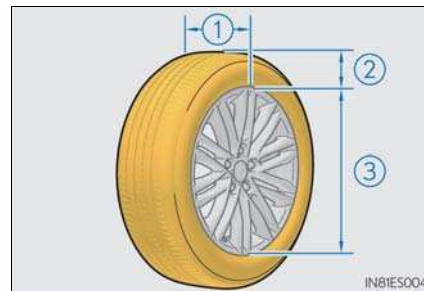

Tire section names

- ① Bead
- ② Sidewall
- ③ Shoulder
- ④ Tread
- ⑤ Belt
- ⑥ Inner liner
- ⑦ Reinforcing rubber
- ⑧ Carcass
- ⑨ Rim lines
- ⑩ Bead wires
- ⑪ Chafer

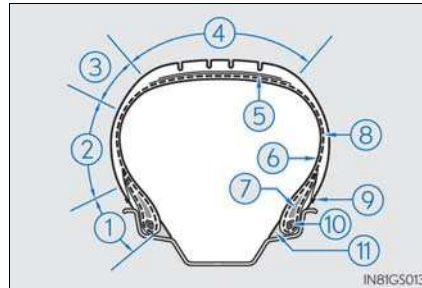

Uniform Tire Quality Grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation.

It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

■ DOT quality grades

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example: Treadwear 200 Traction AA Temperature A

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and a half (1 - 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use. Performance may differ significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

■ Traction AA, A, B, C

The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete.

A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

■ **Temperature A, B, C**

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

Grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades of a tire assume that it is properly inflated and not overloaded.


Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Glossary of tire terminology

Tire related term	Meaning
Cold tire inflation pressure	Tire pressure when the vehicle has been parked for three hours or more, or has not been driven more than 1 mile or 1.5 km under that condition
Maximum inflation pressure	The maximum cold inflated pressure to which a tire may be inflated, shown on the sidewall of the tire
Recommended inflation pressure	Cold tire inflation pressure recommended by a manufacturer
Accessory weight	The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not)
Curb weight	The weight of a motor vehicle with standard equipment, including the maximum capacity of fuel, oil and coolant, and if so equipped, air conditioning and additional weight optional engine
Maximum loaded vehicle weight	The sum of: (a) Curb weight (b) Accessory weight (c) Vehicle capacity weight (d) Production options weight
Normal occupant weight	150 lb. (68 kg) times the number of occupants specified in the second column of Table 1* that follows
Occupant distribution	Distribution of occupants in a vehicle as specified in the third column of Table 1* below
Production options weight	The combined weight of installed regular production options weighing over 5 lb. (2.3 kg) in excess of the standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim
Rim	A metal support for a tire or a tire and tube assembly upon which the tire beads are seated

Tire related term	Meaning
Rim diameter (Wheel diameter)	Nominal diameter of the bead seat
Rim size designation	Rim diameter and width
Rim type designation	The industry manufacturer's designation for a rim by style or code
Rim width	Nominal distance between rim flanges
Vehicle capacity weight (Total load capacity)	The rated cargo and luggage load plus 150 lb. (68 kg) times the vehicle's designated seating capacity
Vehicle maximum load on the tire	The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two
Vehicle normal load on the tire	The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1* below), and dividing by two
Weather side	The surface area of the rim not covered by the inflated tire
Bead	The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim
Bead separation	A breakdown of the bond between components in the bead
Bias ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread
Carcass	The tire structure, except tread and sidewall rubber which, when inflated, bears the load
Chunking	The breaking away of pieces of the tread or sidewall
Cord	The strands forming the plies in the tire
Cord separation	The parting of cords from adjacent rubber compounds
Cracking	Any parting within the tread, sidewall, or innerliner of the tire extending to cord material

Tire related term	Meaning
CT	A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire
Extra load tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Groove	The space between two adjacent tread ribs
Innerliner	The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire
Innerliner separation	The parting of the innerliner from cord material in the carcass
Intended outboard sidewall	(a) The sidewall that contains a whitewall, bears white lettering, or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire, or (b) The outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle
Light truck (LT) tire	A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles
Load rating	The maximum load that a tire is rated to carry for a given inflation pressure
Maximum load rating	The load rating for a tire at the maximum permissible inflation pressure for that tire
Maximum permissible inflation pressure	The maximum cold inflation pressure to which a tire may be inflated
Measuring rim	The rim on which a tire is fitted for physical dimension requirements
Open splice	Any parting at any junction of tread, sidewall, or innerliner that extends to cord material
Outer diameter	The overall diameter of an inflated new tire

Tire related term	Meaning
Overall width	The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs
Passenger car tire	A tire intended for use on passenger cars, multipurpose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 lb. or less.
Ply	A layer of rubber-coated parallel cords
Ply separation	A parting of rubber compound between adjacent plies
Pneumatic tire	A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load
Radial ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread
Reinforced tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Section width	The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands
Sidewall	That portion of a tire between the tread and bead
Sidewall separation	The parting of the rubber compound from the cord material in the sidewall
Snow tire	A tire that attains a traction index equal to or greater than 110, compared to the ASTM E-1136 Standard Reference Test Tire, when using the snow traction test as described in ASTM F-1805-00, Standard Test Method for Single Wheel Driving Traction in a Straight Line on Snow-and Ice-Covered Surfaces, and which is marked with an Alpine Symbol () on at least one sidewall
Test rim	The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire

Tire related term	Meaning
Tread	That portion of a tire that comes into contact with the road
Tread rib	A tread section running circumferentially around a tire
Tread separation	Pulling away of the tread from the tire carcass
Treadwear indicators (TWI)	The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread
Wheel-holding fixture	The fixture used to hold the wheel and tire assembly securely during testing

*: Table 1 — Occupant loading and distribution for vehicle normal load for various designated seating capacities

Designated seating capacity, Number of occupants	Vehicle normal load, Number of occupants	Occupant distribution in a normally loaded vehicle
2 through 4	2	2 in front
5 through 10	3	2 in front, 1 in second seat
11 through 15	5	2 in front, 1 in second seat, 1 in third seat, 1 in fourth seat
16 through 20	7	2 in front, 2 in second seat, 2 in third seat, 1 in fourth seat

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. These preferences can be changed by using the “DISP” button, by using the Remote Touch, Lexus Display Audio system screen, or at your Lexus dealer.

Customizing vehicle features

- **Changing by using the Remote Touch (vehicles with a navigation system)**
Refer to “Navigation System Owner’s Manual”.
- **Changing by using the Lexus Display Audio system screen**
→P. 344
- **Changing by using the “DISP” button**
→P. 103

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

- ① Vehicles with a Lexus Display Audio system: Settings that can be changed using the Lexus Display Audio system
- ② Vehicles with a Lexus Display Audio system: Settings that can be changed using the "DISP" button
- ③ Vehicles with a navigation system: Settings that can be changed using the screen of the navigation system
- ④ Vehicles with a navigation system: Settings that can be changed using the "DISP" button
- ⑤ Vehicles without a Lexus Display Audio system and navigation system: Settings that can be changed using the "DISP" button
- ⑥ Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – = Not available

■ Multi-information display(→P. 98)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
"Language"*	"English" (English)	"Français" (French)	-	○	-	○	○	-
		"Español" (Spanish)	-	○	-	○	○	-
"Units"*	"miles (MPG)"	"km (km/L)"	-	○	-	○	○	-
		"km (L/100km)"	-	○	-	○	○	-
"ECO lamp" (gasoline vehicles) ECO lamp/Eco Driving Indicator Light	"On (Self-lighting)"/ "Off"	"Off"/"Off"	-	○	-	○	○	-
		"On (Always)"/ "Off"	-	○	-	○	○	-
		"On (Always)"/ "On"	-	○	-	○	○	-
"ECO lamp" (hybrid vehicles)	"On (Self-lighting)"	"Off"	-	○	-	○	○	-
		"On (Always)"	-	○	-	○	○	-
"Drive monitor"	"Outside"	"Fuel consumption"	-	○	-	○	○	-
		"Cruising range"	-	○	-	○	○	-
"Tachometer Settings" (hybrid vehicles)	"On (Self-lighting)"	"HV Meter (Always)"	-	○	-	○	○	-
		"Tachometer (Always)"	-	○	-	○	○	-

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
"Lamp brightness"	"Standard"	"Bright"	-	○	-	○	○	-
"SPORT lamp"	"On"	"Off"	-	○	-	○	○	-
"EV driving Indicator" (hybrid vehicles)	"On"	"Off"	-	○	-	○	○	-

*: The default setting varies according to countries.

■ Door lock (→P.139, 802)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
"Unlock on Second Key Turn" (Allows all doors to be unlocked by turning the mechanical key twice in the driver' door)	On (Driver's door unlocked in one step, all doors unlocked in two steps)	Off (All doors unlocked in one step)	-	-	○	-	-	○
"Auto Lock by Speed" (All doors are automatically locked when vehicle speed is approximately 12 mph [20 km/h] or higher)	Off	On	○	-	○	-	○	○
"Auto Lock by Shift from P" (All doors are automatically locked when shifting the shift lever to position other than P)	On	Off	○	-	○	-	○	○
"Auto Unlock by Shift to P" (All doors are automatically unlocked when shifting the shift lever to P)	On	Off	○	-	○	-	○	○
"Auto Unlock by Driver Door" (All doors are automatically unlocked when driver's door is opened)	Off	On	○	-	○	-	○	○


■ Smart access system with push-button start (→P. 123) and wireless remote control (→P. 136)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
"Lock/Unlock Feedback-Tone" (Adjust the volume of buzzer sounds)	5	Off						
		1 to 7	○	-	○	-	○	○
"Lock/Unlock Feedback-Lights" (Enable/disable the operation of the emergency flashers when the vehicle is locked or unlocked)	On	Off	○	-	○	-	○	○
"Auto Relock Timer" (Adjust the time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked)	60 seconds	Off						
		30 seconds	○	-	○	-	○	○
		120 seconds						
Operation buzzer (When the vehicle is locked or unlocked)	On	Off	-	-	-	-	-	○
Open door reminder buzzer (When locking the vehicle)	On	Off	-	-	-	-	-	○

■ Smart access system with push-button start (→P. 123)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
“Access System with Elec. Key” (Smart access system with push-button start can be disabled)	On	Off	-	-	○	-	○	○
“Select Doors to Unlock” (The doors that are unlocked using the smart access system with push-button start can be selected)	Driver’s door	All the doors	○	-	○	-	○	○
Number of consecutive door lock operations	2 times	As many as desired	-	-	-	-	-	○

■ Wireless remote control (→P. 136)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
Wireless remote control	On	Off	-	-	-	-	-	○
“Remote 2-Press Unlock” (Allows all doors to be unlocked by pressing  on the electronic key twice)	On (Driver’s door unlocked in one step, all doors unlocked in two steps)	Off (All doors unlocked in one step)	○	-	○	-	○	○
Trunk unlocking operation	Press and hold (short)	One short press						
		Push twice	-	-	-	-	-	○
		Press and hold (long)						
		Off						
Alarm (panic mode)	On	Off	-	-	-	-	-	○

■ Driving position memory* (→P. 153)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
“Driver’s Seat Easy Exit” (Driver’s seat movement when exiting the vehicle)	Standard	Off	○	–	○	–	○	○
		Partial	○	–	○	–	○	○
Selecting the door linking driving position memory with door unlock operation	Driver’s door	All doors	–	–	–	–	–	○
Automatic adjustment of the mirror angle	On	Off	–	–	–	–	–	○

*: If equipped

■ Power windows (→P. 170) and moon roof (→P. 173)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
Mechanical key linked operation	Off	On	–	–	–	–	–	○
Wireless remote control linked operation (DOWN)	Off	On	–	–	–	–	–	○
Buzzer sounds if operated using wireless remote control	On	Off	–	–	–	–	–	○

■ Power windows (→P. 170)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
One-touch closing	On	Off	-	-	-	-	-	○

■ Moon roof (→P. 173)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
Linked operation of components when door key is used	Slide only	Tilt only	-	-	-	-	-	○
Linked operation of components when wireless remote control is used	Slide only	Tilt only	-	-	-	-	-	○
Automatic operation	On	Off	-	-	-	-	-	○

■ Turn signal lever (→P. 221)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
"Lane Change Signal Flashes" (Time of flashing of the lane change signal flashers)	3	OFF						
		5	-	-	○	-	-	○
		7						

■ Automatic light control system (→P. 224)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
“Headlamps-On Sensitivity” (Adjust the sensitivity of the ambient light sensor)	Standard	-2 to 2	○	-	○	-	-	○
“Headlamps Auto-Off Timer” (Adjust the time elapsed before the headlights automatically turn off)	30 seconds	Off						
		60 seconds	○	-	○	-	○	○
		90 seconds						
Welcome light illumination control	On	Off	-	-	-	-	-	○

■ Lights (→P. 224)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
“Daytime Running Lights” (Daytime running lights can be disabled)*	On	Off	○	-	○	-	○	○

*: Except for Canada

■ Intuitive parking assist* (→P. 271)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
“Distance (Front)” (Detection distance of the front center sensor)	Far	Near	<input type="radio"/>	-	<input type="radio"/>	-	-	<input type="radio"/>
“Distance (Rear)” (Detection distance of the rear center sensor)	Far	Near	<input type="radio"/>	-	<input type="radio"/>	-	-	<input type="radio"/>
“Alert Volume” (Alert volume can be adjusted)	3	1 to 5	<input type="radio"/>	-	<input type="radio"/>	-	-	<input type="radio"/>
“Display” (when intuitive parking assist is operating)	All sensors displayed	Display off	<input type="radio"/>	-	<input type="radio"/>	-	-	<input type="radio"/>

*: If equipped

■ Automatic air conditioning system (→P. 347, 359)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
“Efficient Ventilation Mode” (Switching between outside air and recirculated air mode linked to “AUTO” switch operation)	On	Off	-	-	<input type="radio"/>	-	-	<input type="radio"/>
“Auto A/C Mode” (A/C Auto switch operation)	On	Off	<input type="radio"/>	-	<input type="radio"/>	-	-	<input type="radio"/>
“Smog Sensor Sensitivity” (Exhaust gas sensor sensitivity)	Standard	-3 to 3	<input type="radio"/>	-	<input type="radio"/>	-	-	<input type="radio"/>

■ Illumination (→P. 603)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
Interior lights illumination control	On	Off	-	-	-	-	-	○
“Interior Lights Off Timer” (Time elapsed before the interior lights turn off)	15 seconds	Off						
		7.5 seconds	○	-	○	-	○	○
		30 seconds						
Operation after the “START STOP ENGINE” <“POWER”> switch is turned off	On	Off	-	-	-	-	-	○
Operation when the doors are unlocked	On	Off	-	-	-	-	-	○
Operation when you approach the vehicle with the electronic key on your person	On	Off	-	-	-	-	-	○
Footwell lighting	On	Off	-	-	-	-	-	○
Outer foot lights	On	Off	-	-	-	-	-	○
“Exterior Lights Off Timer” (Time elapsed before the outer foot lights turn off)	15 seconds	Off						
		7.5 seconds	○	-	○	-	○	○
		30 seconds						
“Ambient illumin. (instrument panel)” (Enable/disable operation of the ornament lights on the instrument panel)*	On	Off	-	○	-	○	○	○
Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to +2	-	-	○	-	-	○
Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to +2	-	-	○	-	-	○

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
Enable/disable operation of the outer foot lights when you approach the vehicle with the electronic key on your person	On	Off	-	-	-	-	-	○
Enable/disable operation of the outer foot lights when the doors are unlocked with the power door lock switch	On	Off	-	-	-	-	-	○

*: If equipped

■ Rear sunshade* (→P. 623)

Function	Default setting	Customized setting	①	②	③	④	⑤	⑥
Reverse operation	On	Off	-	-	-	-	-	○
Time elapsed before the reverse operation feature activates	0.7 seconds	0 second						
		0.9 seconds	-	-	-	-	-	○
		1.2 seconds						

*: If equipped

■ Vehicle customization

- When the “Auto Lock by Speed” and “Auto Lock by Shift from P” are both on, the door lock operates as follows.
 - When shifting the shift lever to any position other than P, all the doors will be locked.
 - If the vehicle is started with all the doors locked, the “Auto Lock by Speed” would not operate.
 - If the vehicle is started with any door unlocked, the “Auto Lock by Speed” will operate.
- When the smart access system with push-button start is off, the “Select Doors to Unlock” cannot be customized.
- When the doors remain closed after unlocking the doors and the “Auto Relock Timer” activates, the signals will be generated in accordance with the “Lock/Unlock Feedback-Tone” and the “Lock/Unlock Feedback-Lights” settings.

■ When customizing using the Remote Touch

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent 12-volt battery discharge, leave the engine <hybrid system> running <operating> while customizing the features.

⚠ CAUTION**■ During customization**

As the engine <hybrid system> needs to be running <operating> during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

⚠ NOTICE**■ During customization**

To prevent 12-volt battery discharge, ensure that the engine <hybrid system> is running <operating> while customizing features.

Items to initialize

The following items must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

Item	When to initialize	Reference
Maintenance data (U.S.A. only)	<ul style="list-style-type: none"> • After the maintenance is performed 	P. 658
Tire pressure warning system	<ul style="list-style-type: none"> • When rotating the tires • When changing the tire inflation pressure by changing traveling speed or load weight, etc. 	P. 696

Reporting safety defects for U.S. owners

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the Lexus Division of Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-800-25-LEXUS).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Lexus Division of Toyota Motor Sales, U.S.A., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Ave, S.E., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.


Seat belt instructions for Canadian owners (in French)

The following is a French explanation of seat belt instructions extracted from the seat belt section in this manual.

See the seat belt section for more detailed seat belt instructions in English.

Utilisation adéquate des ceintures de sécurité

- Tirez sur la ceinture épaulière jusqu'à ce qu'elle recouvre entièrement l'épaule; elle ne doit cependant pas toucher le cou ni glisser de l'épaule.
- Placez la ceinture abdominale le plus bas possible sur les hanches.
- Réglez la position du dossier. Tenez-vous assis bien au fond du siège, le dos droit.
- Ne vrillez pas la ceinture de sécurité.

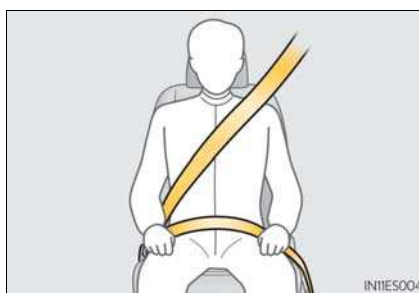

Entretien et soin

■ Ceintures de sécurité

Avec un chiffon ou une éponge, nettoyez à l'aide d'un savon doux et de l'eau tiède. Vérifiez aussi les ceintures régulièrement pour vous assurer qu'elles ne présentent pas d'usure excessive, d'effilochage ou de coupures.

ATTENTION


■ Dommages et usure de la ceinture de sécurité

Vérifiez périodiquement le système de ceintures de sécurité. Assurez-vous qu'il n'y a pas de coupures, d'effilochures ni de pièces desserrées. N'utilisez pas une ceinture de sécurité endommagée avant qu'elle ne soit remplacée. Les ceintures de sécurité endommagées ne peuvent pas protéger les occupants contre les blessures graves, voire mortelles.

SRS airbag instructions for Canadian owners (in French)

The following is a French explanation of SRS airbag instructions extracted from the SRS airbag section in this manual.

See the SRS airbag section for more detailed SRS airbag instructions in English.

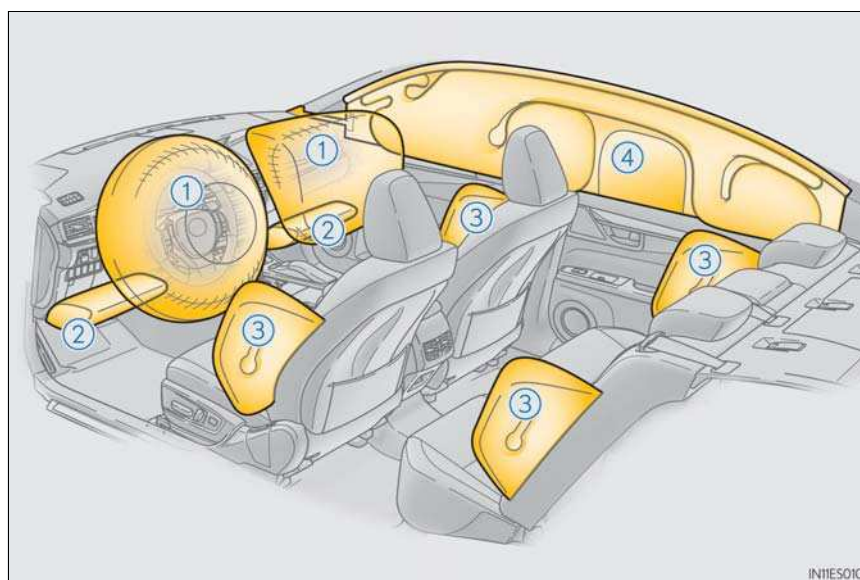


◆ Coussins gonflables SRS avant

- ① Coussin gonflable SRS du conducteur/du passager avant
Peuvent aider à protéger la tête et la poitrine du conducteur et du passager avant contre les impacts avec des composants intérieurs
- ② Coussins gonflables SRS de protection des genoux
Peuvent aider à protéger le conducteur et le passager avant
Un coussin gonflable SRS de protection des genoux pour le siège du passager avant est intégré dans la porte de la boîte à gants.

◆ **Coussins gonflables SRS latéraux et en rideau**

- ③ Coussins gonflables SRS latéraux avant
Peuvent aider à protéger le torse des occupants des sièges avant
- Coussins gonflables SRS latéraux arrière
Peuvent aider à protéger le torse des occupants des sièges latéraux arrière
- ④ Coussins gonflables SRS en rideau
Peuvent aider à protéger principalement la tête des occupants des sièges latéraux

Composants du système de coussins gonflables SRS

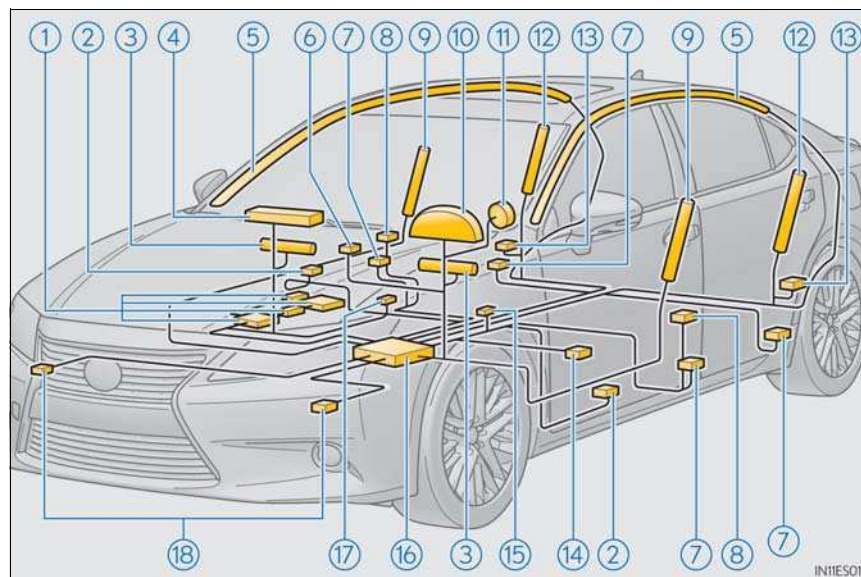

- | | |
|--|--|
| ① Système de classification de l'occupant du siège du passager avant (ECU et capteurs) | ⑩ Lampe témoin SRS |
| ② Capteurs de choc latéral (portières avant) | ⑪ Coussin gonflable du conducteur |
| ③ Coussins gonflables de protection des genoux | ⑫ Coussins gonflables latéraux arrière |
| ④ Coussin gonflable du passager avant | ⑬ Capteurs de choc latéral (arrière) |
| ⑤ Coussins gonflables en rideau | ⑭ Capteur de position de siège du conducteur |
| ⑥ Lampes témoins "AIR BAG ON" et "AIR BAG OFF" | ⑮ Contacteur de boucle de ceinture de sécurité du conducteur |
| ⑦ Dispositifs de tension et limiteurs de force des ceintures de sécurité | ⑯ Module de capteur de coussin gonflable |
| ⑧ Capteurs de choc latéral (avant) | ⑰ Contacteur de boucle de ceinture de sécurité du passager avant |
| ⑨ Coussins gonflables latéraux avant | ⑱ Capteurs de choc avant |

Votre véhicule est doté de COUSSINS GONFLABLES ÉVOLUÉS dont la conception s'appuie sur les normes de sécurité des véhicules à moteur américains (FMVSS208). Le module de capteur de coussin gonflable (ECU) contrôle le déploiement des coussins gonflables en fonction des informations obtenues des capteurs et d'autres éléments affichés dans le diagramme des composants du système ci-dessus. Ces informations comprennent des données relatives à la gravité de l'impact et aux passagers. Au moment du déploiement des coussins gonflables, une réaction chimique se produit dans les gonfleurs et les coussins gonflables se remplissent rapidement d'un gaz non toxique pour limiter le mouvement des occupants.

⚠ ATTENTION**■ Précautions relatives aux coussins gonflables SRS**

Observez les précautions suivantes en ce qui concerne les coussins gonflables SRS.

Les négliger pourrait occasionner des blessures graves, voire mortelles.

- Le conducteur et tous les passagers du véhicule doivent porter leur ceinture de sécurité de la manière appropriée.

Les coussins gonflables SRS sont des dispositifs supplémentaires qui doivent être utilisés de concert avec les ceintures de sécurité.

- Le coussin gonflable SRS du conducteur se déploie avec une force considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le conducteur se trouve très près du coussin gonflable. La National Highway Traffic Safety Administration (NHTSA), aux États-Unis, donne les recommandations suivantes :

La zone à risque d'un coussin gonflable côté conducteur couvre 2 à 3 in. (50 à 75 mm) de la zone de déploiement du coussin gonflable. Pour assurer une marge de sécurité suffisante, restez à 10 in. (250 mm) du coussin gonflable. Cette distance est mesurée depuis le centre du volant jusqu'à votre sternum. Si vous vous tenez à moins de 10 in. (250 mm), vous pouvez changer votre position de conduite de plusieurs manières :

- Reculez votre siège à la position maximale vous permettant d'atteindre encore aisément les pédales.
- Inclinez légèrement le dossier du siège.
Même si les véhicules sont conçus différemment, la plupart des conducteurs peuvent maintenir une distance de 10 in. (250 mm), même si le siège se trouve complètement vers l'avant, simplement en inclinant un peu le dossier du siège vers l'arrière. Si la visibilité avant est moindre après avoir incliné le dossier du siège, utilisez un coussin ferme et non glissant pour être assis plus haut ou relevez le siège si cette option est disponible sur votre véhicule.
- Si votre volant est réglable en hauteur, inclinez-le vers le bas. Cela vous permet d'orienter le coussin gonflable vers votre buste plutôt que vers la tête et vers le cou.

Le siège doit être réglé de la manière recommandée ci-dessus par la NHTSA, tout en gardant le contrôle des pédales et du volant, et la vue sur les commandes du bloc d'instrumentation.

⚠ ATTENTION**■ Précautions relatives aux coussins gonflables SRS**

- Si la rallonge de ceinture de sécurité a été reliée à la boucle des ceintures de sécurité des sièges avant sans avoir été attachée à la plaque de blocage des ceintures de sécurité, les coussins gonflables SRS avant considéreront que le conducteur et le passager avant portent tout de même leur ceinture même si elles ne sont pas attachées. Les coussins gonflables SRS avant peuvent alors ne pas s'activer correctement lors d'une collision, ce qui représente un risque de blessures graves, voire mortelles. Bouclez toujours votre ceinture de sécurité lorsque vous utilisez la rallonge.



- Le coussin gonflable SRS du passager avant se déploie également avec une force considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le passager avant se trouve très près du coussin gonflable. Le siège du passager avant doit se trouver le plus loin possible du coussin gonflable et le dossier doit être réglé de manière à ce que le passager avant soit assis bien droit.
- Le déploiement d'un coussin gonflable risque d'infliger des blessures graves, voire mortelles, aux bébés et aux enfants mal assis ou mal attachés. Un bébé ou un enfant trop petit pour utiliser une ceinture de sécurité doit être correctement retenu à l'aide d'un dispositif de retenue pour enfants. Lexus recommande vivement de placer et d'attacher correctement tous les bébés et tous les enfants sur les sièges arrière du véhicule à l'aide de dispositifs de retenue adaptés. Les sièges arrière sont plus sécuritaires pour les bébés et les enfants que le siège du passager avant. (→P. 55)


⚠ ATTENTION

■ **Précautions relatives aux coussins gonflables SRS**

- Ne vous asseyez pas sur le bord du siège et ne vous appuyez pas sur le tableau de bord.



- Ne laissez pas un enfant se tenir face au coussin gonflable SRS du passager avant ni s'asseoir sur les genoux d'un passager avant.

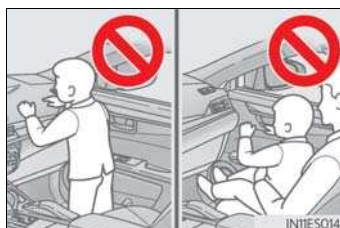

- Ne laissez pas les occupants du siège avant tenir des objets sur leurs genoux.

- Ne vous appuyez pas sur la portière ou sur le longeron du toit, ni sur les montants avant, latéraux ou arrière.



- Ne laissez personne s'agenouiller face à la portière sur le siège du passager ni sortir la tête ou les mains à l'extérieur du véhicule.




⚠ ATTENTION

■ Précautions relatives aux coussins gonflables SRS

- Ne fixez et n'appuyez rien sur des zones telles que le tableau de bord, le tampon de volant, la partie inférieure du bloc d'instrumentation et la porte de la boîte à gants.

Ces objets peuvent se transformer en projectiles lorsque les coussins gonflables SRS du conducteur, du passager avant ou de protection des genoux se déploient.

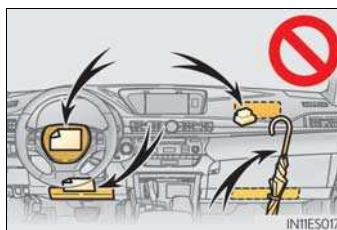

- Ne fixez rien sur les portières, le pare-brise, les glaces latérales, les montants avant ou arrière, le longeron du toit et la poignée d'appui.



- N'accrochez pas de cintres ni d'objets rigides sur les crochets porte-vêtements. Tous ces objets pourraient se transformer en projectiles et vous occasionner des blessures graves, voire mortelles, en cas de déploiement des coussins gonflables SRS en rideau.
- Si un recouvrement de vinyle est placé sur la zone de déploiement du coussin SRS de protection des genoux, veillez à le retirer.
- N'utilisez pas d'accessoires recouvrant les parties du siège où les coussins gonflables SRS latéraux se déploient, car ceux-ci pourraient nuire au déploiement de ces coussins. De tels accessoires peuvent empêcher les coussins gonflables latéraux de se déployer correctement, rendre le système inopérant ou provoquer accidentellement le déploiement des coussins gonflables latéraux, occasionnant des blessures graves, voire mortelles.
- Ne frappez pas et n'appliquez pas une pression importante à l'emplacement des composants de coussins gonflables SRS. Vous risqueriez de provoquer un mauvais fonctionnement des coussins gonflables SRS.

 **ATTENTION**
■ Précautions relatives aux coussins gonflables SRS

- Ne touchez à aucun composant des coussins gonflables SRS immédiatement après leur déploiement (gonflage), car ils pourraient être chauds.
- Si vous avez de la difficulté à respirer après le déploiement des coussins gonflables SRS, ouvrez une portière ou une glace pour laisser entrer l'air, ou quittez le véhicule si vous pouvez le faire en toute sécurité. Dès que possible, nettoyez tous les résidus afin d'éviter les irritations cutanées.
- Si les emplacements de stockage des coussins gonflables SRS, notamment le tampon de volant et les garnitures des montants avant et arrière, sont endommagés ou fissurés, faites-les remplacer par votre concessionnaire Lexus.

■ Modification et mise au rebut des composants du système de coussins gonflables SRS

Ne mettez pas le véhicule au rebut et n'effectuez aucune des modifications suivantes sans d'abord consulter votre concessionnaire Lexus. Les coussins gonflables SRS pourraient fonctionner de manière incorrecte ou se déployer (gonfler) accidentellement, ce qui serait susceptible d'occasionner des blessures graves, voire mortelles.

- Installation, retrait, démontage et réparation des coussins gonflables SRS
- Réparations, modifications, retrait ou remplacement du volant, du bloc d'instrumentation, du tableau de bord, des sièges ou du capitonnage des sièges, des montants avant, latéraux ou arrière et des longerons du toit
- Réparations ou modifications de l'aile ou du pare-chocs avant, ou du côté de l'habitacle
- Installation de lames de déneigement, de treuils, etc. sur la calandre avant (barre safari, barre kangourou, etc.)
- Modifications du système de suspension du véhicule
- Installation d'appareils électroniques tels qu'un émetteur-récepteur radio ou un lecteur de CD
- Modifications à votre véhicule pour une personne aux capacités physiques réduites

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting your Lexus dealer.

The doors cannot be locked, unlocked, opened or closed



You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by your Lexus dealer. (→P. 121)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Lexus dealer immediately. (→P. 122)



The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 710)
- Is the "START STOP ENGINE" <"POWER"> switch in IGNITION ON <ON> mode?
When locking the doors, turn the "START STOP ENGINE" <"POWER"> switch off. (→P. 198, 205)
- Is the electronic key left inside the vehicle?
When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 130)

**The rear door cannot be opened**

- Is the child-protector lock set?

The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 140)

**The trunk lid is closed with the electronic key left inside**

- The function to prevent the electronic key from being left inside the trunk will operate and you can open the trunk as usual. Take the key out from the trunk. (→P. 146)

If you think something is wrong



The engine <hybrid system> does not start

- Did you press the "START STOP ENGINE" <"POWER"> switch while firmly depressing the brake pedal? (→P. 197, 204)
 - Is the shift lever in P? (→P. 200, 207)
 - Is the electronic key anywhere detectable inside the vehicle? (→P. 126)
 - Is the steering wheel unlocked? (→P. 201, 208)
 - Is the electronic key battery weak or depleted?
In this case, the engine <hybrid system> can be started in a temporary way. (→P. 803)
 - Is the 12-volt battery discharged? (→P. 805, 809)
-



The shift lever cannot be shifted from P even if you depress the brake pedal

- Is the "START STOP ENGINE" <"POWER"> switch in IGNITION ON <ON> mode?
If you cannot release the shift lever by depressing the brake pedal with the "START STOP ENGINE" <"POWER"> switch in IGNITION ON <ON> mode (→P. 801)



The steering wheel cannot be turned after the engine <hybrid system> is stopped

- It is locked automatically to prevent theft of the vehicle. (→P. 200, 207)
-



The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?
The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P. 170)
-



The "START STOP ENGINE" <"POWER"> switch is turned off automatically

- Gasoline vehicles: The auto power off function will be operated if the vehicle is left in ACCESSORY or IGNITION ON mode (the engine is not running) for a period of time. (→P. 200)
- Hybrid vehicles: The auto power off function will be operated if the vehicle is left in ACCESSORY or ON mode (the hybrid system is not operating) for a period of time. (→P. 207)

**A warning buzzer sounds during driving**

- The seat belt reminder light is flashing

Are the driver and the front passenger wearing the seat belts?
(→P. 754)

- The parking brake indicator is on

Is the parking brake released? (→P. 222)

Depending on the situation, other types of warning buzzer may also sound. (→P. 751, 761)

**An alarm is activated and the horn sounds**

- Did anyone inside the vehicle open a door during setting the alarm?

The sensor detects it and the alarm sounds. (→P. 84)

To stop the alarm, turn the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode or start the engine <hybrid system>.

**A warning buzzer sounds when leaving the vehicle**

- Is the electronic key left inside the vehicle or the moon roof opened?

Check the message on the multi-information display.

(→P. 761)

**A warning light turns on or a warning message is displayed**

- When a warning light turns on or a warning message is displayed, refer to P. 751, 761.

When a problem has occurred**If you have a flat tire**

- Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P. 784)

**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P. 820)

GAS STATION INFORMATION										
Auxiliary catch lever P. 669	Trunk opener P. 144	Fuel filler door P. 241								
Hood lock release lever P. 669	Fuel filler door opener P. 241	Tire inflation pressure P. 835								
Fuel tank capacity (Reference)	17.0 gal. (64.35 L, 14.2 Imp.gal.)									
Fuel type	Unleaded gasoline only	P. 828								
Cold tire inflation pressure		P. 835								
Engine oil capacity (Drain and refill – reference)	<table border="1"> <thead> <tr> <th></th> <th>2GR-FE</th> <th>qt. (L, Imp.qt.) 2AR-FXE</th> </tr> </thead> <tbody> <tr> <td>With filter</td> <td>6.4 (6.1, 5.4)</td> <td>4.6 (4.4, 3.9)</td> </tr> <tr> <td>Without filter</td> <td>6.0 (5.7, 5.0)</td> <td>4.2 (4.0, 3.5)</td> </tr> </tbody> </table>		2GR-FE	qt. (L, Imp.qt.) 2AR-FXE	With filter	6.4 (6.1, 5.4)	4.6 (4.4, 3.9)	Without filter	6.0 (5.7, 5.0)	4.2 (4.0, 3.5)
	2GR-FE	qt. (L, Imp.qt.) 2AR-FXE								
With filter	6.4 (6.1, 5.4)	4.6 (4.4, 3.9)								
Without filter	6.0 (5.7, 5.0)	4.2 (4.0, 3.5)								
Engine oil type	“Toyota Genuine Motor Oil” or equivalent Oil grade: ILSAC GF-5 multigrade engine oil Recommended viscosity: SAE 0W-20 P. 829									

Introduction

NAVIGATION SYSTEM OWNER'S MANUAL

This manual explains the operation of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of the navigation system differ depending on whether the functions and/or a contract existed and the map data available at the time of producing this document.

NAVIGATION SYSTEM

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 139 through 141.

TOYOTA MOTOR CORPORATION

IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.

CAUTION

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE


- This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

SYMBOLS USED IN ILLUSTRATIONS



Safety symbol


The symbol of a circle with a slash through it means “Do not”, “Do not do this”, or “Do not let this happen.”

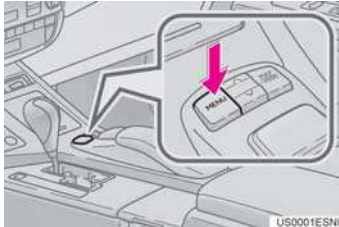

Arrows indicating operations

- ➔ Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

HOW TO READ THIS MANUAL

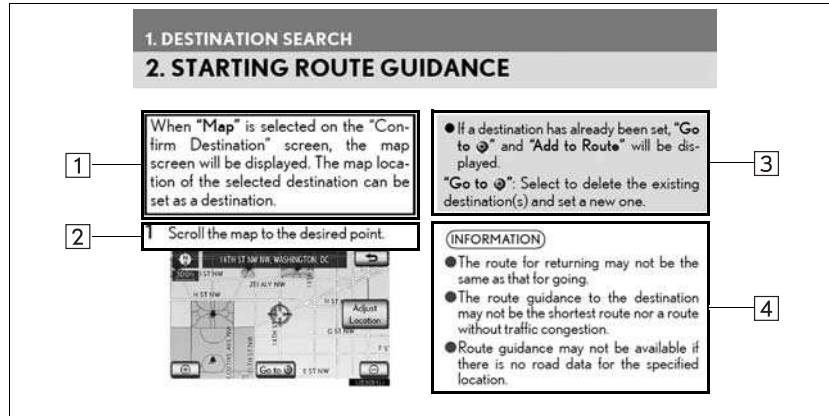

No.	Name	Description
1	Operational Outlines	An outline of the operation is explained.
2	Main Operations	The steps of an operation are explained.
3	Related Operations	A main operation's supplementary operations are described.
4	Information	Useful information for the user is described.

INFORMATION FOR HYBRID VEHICLES IS WRITTEN IN BRACKETS NEXT TO THE INFORMATION FOR GASOLINE VEHICLES

Different writing styles for gasoline and hybrid vehicles


► Example

When the "START STOP ENGINE"^{*1} <"POWER">^{*2} switch is in ACCESSORY or IGNITION ON^{*1} <ON>^{*2} mode, the initial screen will be displayed and the system will begin operating.

*1: Gasoline vehicle

*2: Hybrid vehicle

SAFETY INSTRUCTION

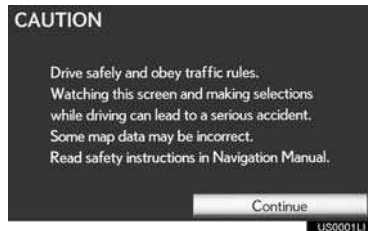

To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.

CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.


The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

1. NAVIGATION OPERATION

1. Remote Touch

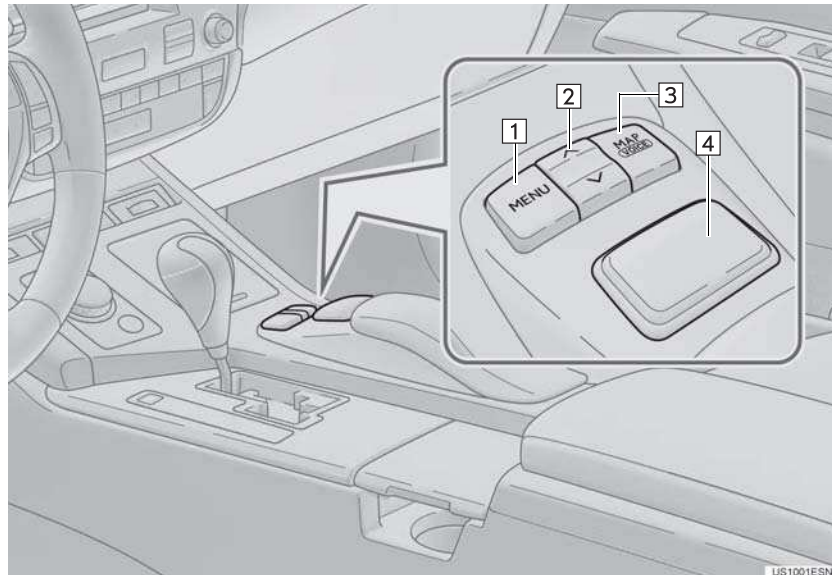

No.	Name	Function	Page
1	"MENU" button	Press to display the "Menu" screen.	22
2	"Λ·V" button	Press to change the scale of the map and to scroll the list screen.	33, 36, 48
3	"MAP/VOICE" button	Press to repeat a voice guidance, cancel the screen scroll, start guidance, and display the current position.	40
4	Remote Touch knob	Move in the desired direction to select a function, letter and map screen button. Press to enter the selected function, letter or map screen button.	33

1. NAVIGATION OPERATION

2. MAP SCREEN



US1020Lia

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates whether the map orientation is set to north-up or heading-up. Selecting this symbol changes the map orientation. Both north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).	49
2	Scale indicator	This figure indicates the map scale.	48
3	Zoom out button	Select to reduce the map scale.	48
4	“◀◀ Off”	Select to obtain a broader view. Some of the buttons on the screen will not be displayed. They are displayed again by selecting “On ▶▶”.	130
5	“Mark”	Select to register the current position or the cursor position as an address book entry.	41

No.	Name	Function	Page
6	"Route"	Select to change the route.	97, 99
7	"Show on Map"	Select to browse information about guidance route, to set the POI (Point of Interest) icons to be displayed on the screen, to record the route, etc.	104, 342, 367
8	Zoom in button	Select to magnify the map scale.	48
9	Foot print map button	Select to display the foot print map and the building information.	48
10	"Map Mode"	Select to display the "Map Mode" screen.	45
11	Distance and time to destination	Select to display the distance, estimated travel and arrival time to the destination.	96
12	XM indicator	This mark is displayed when XM information is received.	340, 342
13	"GPS" mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	139

*: Press and hold the "PWR-VOL" knob for 3 seconds or more to turn off the screen and restart the navigation system. Do this when the vehicle-mounted device response is extremely slow.


INFORMATION

- Remove dirt from the display and its surrounding area by lightly wiping with a soft, dry cloth, such as a cloth used for cleaning glasses with plastic lenses. Scrubbing too hard or using a hard cloth could scratch the display. Also, the display is treated with a coating, and could be damaged by coming into contact with benzine or alkaline solution.
- When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

1. NAVIGATION OPERATION

3. REGISTERING HOME

- 1 Press the "MENU" button on the Remote Touch.

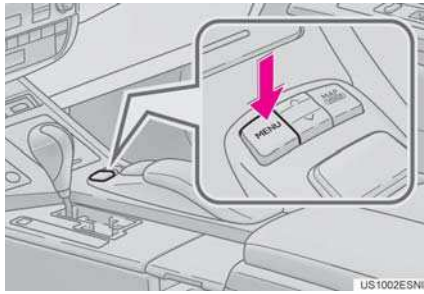

- 2 Select "Destination" and press the Remote Touch knob.



- 3 Select "Go Home" and press the Remote Touch knob.



If a home address has not been registered, it can be registered by selecting "Go Home".

- 4 Select "Yes" and press the Remote Touch knob.



- 5 There are 4 different methods to search your home. (See "DESTINATION SEARCH" on page 68.)




- 6 Select "Enter" and press the Remote Touch knob.



The "Edit Home" screen is displayed.

- 7 Select "OK" and press the Remote Touch knob.

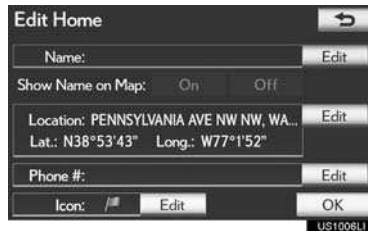

Registration of home is complete.

Home can also be registered by selecting "**Navigation**" on the "Setup" screen. (See "REGISTERING HOME" on page 109.)


The name, location, phone number and icon can be changed. (See "EDITING HOME" on page 110.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 69.)

1. NAVIGATION OPERATION

4. REGISTERING PRESET DESTINATIONS

- 1 Press the "MENU" button on the Remote Touch.

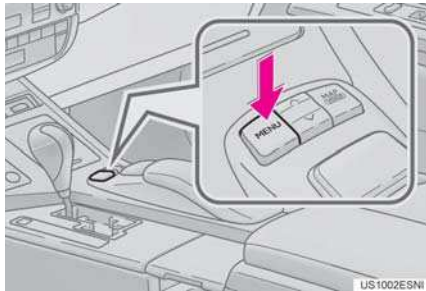

- 2 Select "Destination" and press the Remote Touch knob.



- 3 Select one of the preset destination buttons and press the Remote Touch knob.




A preset destination can be set to any preset destination button that has not yet been set.

- 4 Select "Yes" and press the Remote Touch knob.



- 5 There are 4 different methods to search preset destinations. (See "DESTINATION SEARCH" on page 68.)

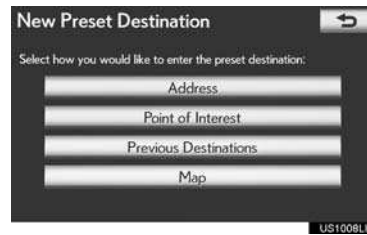

- 6 Select "Enter" and press the Remote Touch knob.



The "Edit Preset Destination" screen is displayed.

- 7 Select "OK" and press the Remote Touch knob.



Registration of preset destinations is complete.

Preset destinations can also be registered by selecting "Navigation" on the "Setup" screen. (See "REGISTERING PRESET DESTINATIONS" on page 112.)


The name, location, phone number and icon can be changed. (See "EDITING PRESET DESTINATIONS" on page 113.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 69.)

1. NAVIGATION OPERATION

5. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the "MENU" button on the Remote Touch.

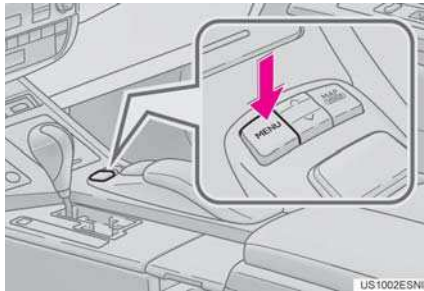


- 2 Select "Destination" and press the Remote Touch knob.



- 3 There are 11 different methods to search destinations. (See "DESTINATION SEARCH" on page 68.)


► Page 1

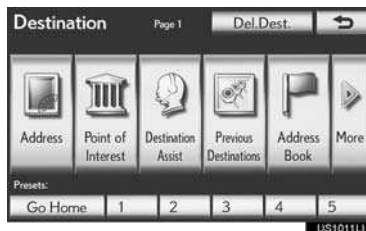

► Page 2



- 4 Select "Go to" and press the Remote Touch knob.

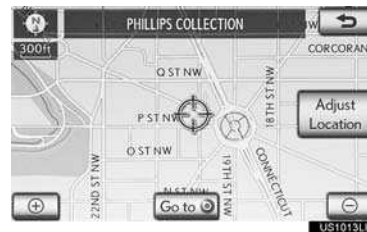

The navigation system performs a search for the route.

- 5 Select "OK" and press the Remote Touch knob. Then start driving.




Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 87.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

1. NAVIGATION OPERATION

6. SETTING HOME AS THE DESTINATION

- 1 Press the "MENU" button on the Remote Touch.

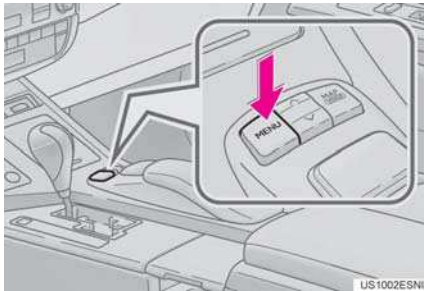

- 2 Select "Destination" and press the Remote Touch knob.




- 3 Select "Go Home" and press the Remote Touch knob.



"Go Home" can be used if your home address has been registered. (To register home, see "REGISTERING HOME" on page 109.)

Your home address is set as the destination. The navigation system performs a search for the route.

- 4 Select "OK" and press the Remote Touch knob. Then start driving.

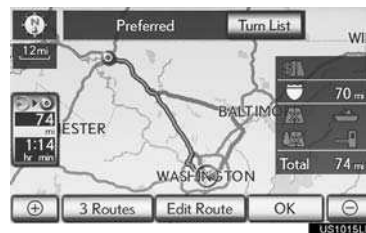

Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 87.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

2. FUNCTION INDEX

1. NAVIGATION SYSTEM FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	12
Displaying the current position	40
Viewing the current position vicinity map	40
Changing the scale	48
Changing the map orientation	49
Displaying Points of Interest	104
Displaying the estimated travel/arrival time to the destination	96
Selecting the map mode	45
Deleting map screen buttons	130
Displaying traffic information	341

Searching destinations	Page
Searching the destination	68
Changing the selected search area	68
Operating the map location of the selected destination	87

► Route guidance

Before starting route guidance	Page
Setting the destination	87
Viewing alternative routes	88
Starting route guidance	87


Before starting or during route guidance	Page
Viewing the route	87
Adding destinations	97
Changing the route	99
Displaying the estimated travel/arrival time to the destination	96

During route guidance	Page
Pausing route guidance	103
Adjusting route guidance volume	63
Deleting the destination	98
Displaying the entire route map	100
► Useful functions	
Address book	Page
Registering address book entries	114
Marking icons on the map	116
Information	Page
Displaying vehicle maintenance	133
Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	146
Making a call on a Bluetooth® phone	157
Receiving a call on the Bluetooth® phone	165
Voice command system	Page
Operating the system with your voice	308

3. QUICK REFERENCE

1. "Menu" SCREEN

Press the "MENU" button on the Remote Touch to display the "Menu" screen.

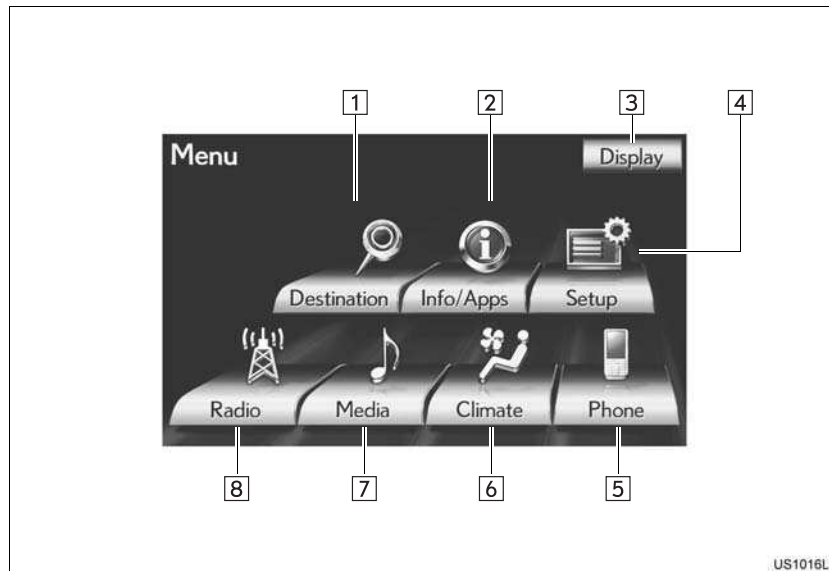


No.	Name	Function	Page
1	"Destination"	Select to display the "Destination" screen.	14, 16, 18, 19, 24, 68, 363, 365
2	"Info/Apps" ("Info")	Select to display the "Information" screen. For vehicles sold in Canada, "Info" is used instead of "Info/Apps".	28, 322, 327, 330, 333, 337, 341, 356, 359, 368
3	"Display"	Select to adjust the contrast and brightness of the screens, turn the display off, etc.	38
4	"Setup"	Select to display the "Setup" screen.	26, 51, 62, 108, 125, 133, 172, 194, 288, 344, 371
5	"Phone"	Select to display the hands-free operation screen.	152
6	"Climate"	Select to display the air conditioning control screen.	294
7	"Media"	Select to display the media control screen.	211
8	"Radio"	Select to display the radio control screen.	211

3. QUICK REFERENCE

2. "Destination" SCREEN

The "Destination" screen enables a destination search. Press the "MENU" button on the Remote Touch, then select "Destination" to display the "Destination" screen.

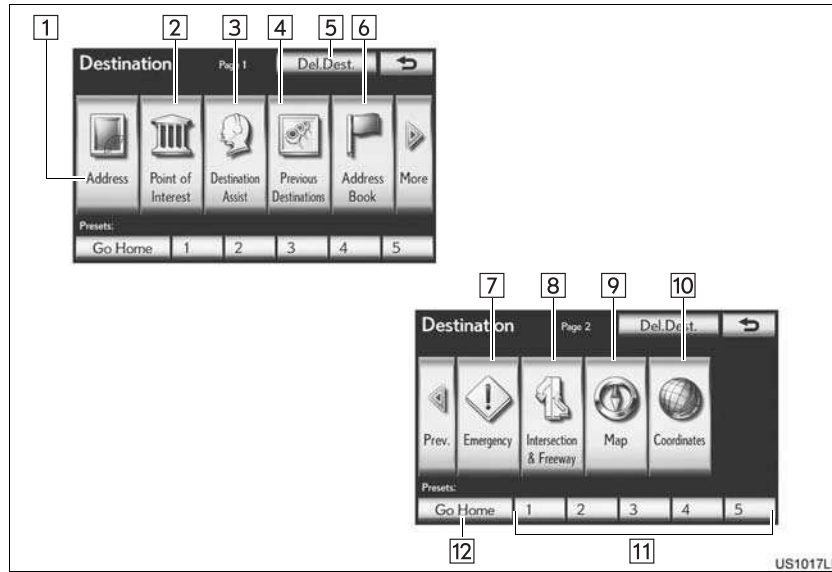


No.	Name	Function	Page
1	"Address"	Select to input a house number and the street address using the input keys.	70
2	"Point of Interest"	Select one of the POIs that have already been stored in the system's database.	73, 365
3	"Destination Assist"	Select to provide you with live assistance finding destinations via the Lexus Enform with Safety Connect response center.	80, 363
4	"Previous Destinations"	Select a destination from any of the last 100 previously set destinations and from the previous starting point.	80
5	"Del.Dest."	Select to delete set destinations.	86

No.	Name	Function	Page
6	"Address Book"	Select the desired location from a registered entry in "Address book". (To register address book entries, see "REGISTERING ADDRESS BOOK ENTRIES" on page 115.)	81
7	"Emergency"	Select one of the 4 categories of emergency service points that have already been stored in the system's database.	81
8	"Intersection & Freeway"	Select to enter the names of 2 intersecting streets or a freeway (interstate) entrance or exit. This is helpful if only the general vicinity, not the specific address, is known.	82
9	"Map"	Select to enable setting a destination by specifying a location on the map screen.	85
10	"Coordinates"	Select to enter latitude and longitude coordinates.	85
11	Preset destination buttons	Select one of the 5 preset destination points as a destination. If a preset destination point has not been registered, a message will be displayed asking if it is desirable to set a destination to the preset screen button. (To register a preset destination, see "REGISTERING PRESET DESTINATIONS" on page 112.)	69
12	"Go Home"	Select your personal home address without having to enter the address each time. If a home address has not been registered, a message will be displayed and the setting screen will automatically appear. (To register home, see "REGISTERING HOME" on page 109.)	69

3. QUICK REFERENCE

3. "Setup" SCREEN

The items shown on the "Setup" screen can be set. Press the "MENU" button on the Remote Touch, then select "Setup" to display the "Setup" screen.

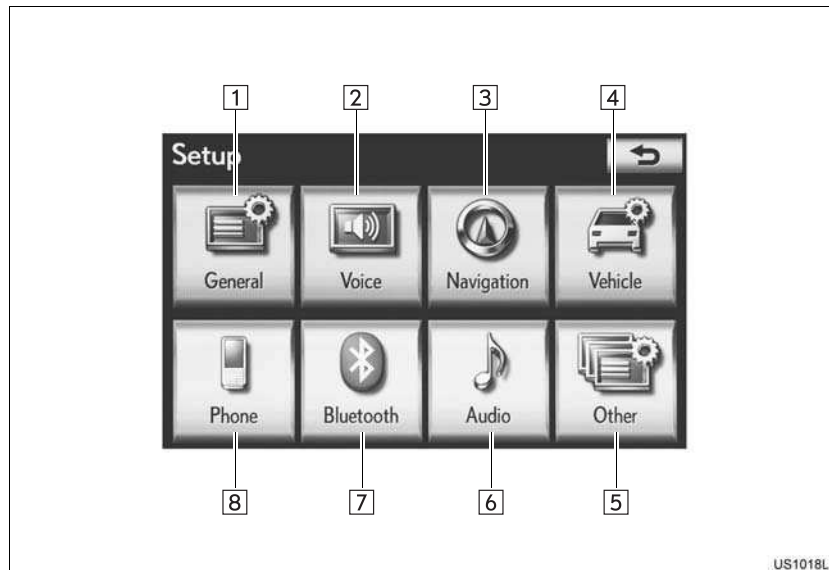


No.	Name	Function	Page
1	"General"	Select to change the selected language, operation sound, automatic screen change settings, etc.	51
2	"Voice"	Select to set the voice guidance settings.	62
3	"Navigation"	Select to set home, preset destinations, address book, areas to avoid, etc. or to delete previous destinations.	108
4	"Vehicle"	Select to set vehicle information such as maintenance information.	133
5	"Other"	Select to set Lexus Insider, XM Sports, XM Stocks and XM Fuel Prices.	344, 371
6	"Audio"	Select to set iPod and HD Radio™ channel settings.	288
7	"Bluetooth*"	Select to set Bluetooth® phones and Bluetooth® audio devices.	194
8	"Phone"	Select to set the phone sound, phonebook, message settings, etc.	172

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. QUICK REFERENCE

4. "Information" SCREEN

This screen can be used to display the XM satellite system, fuel consumption, etc. Press the "MENU" button on the Remote Touch, then select "Info/Apps" ("Info") to display the "Information" screen.

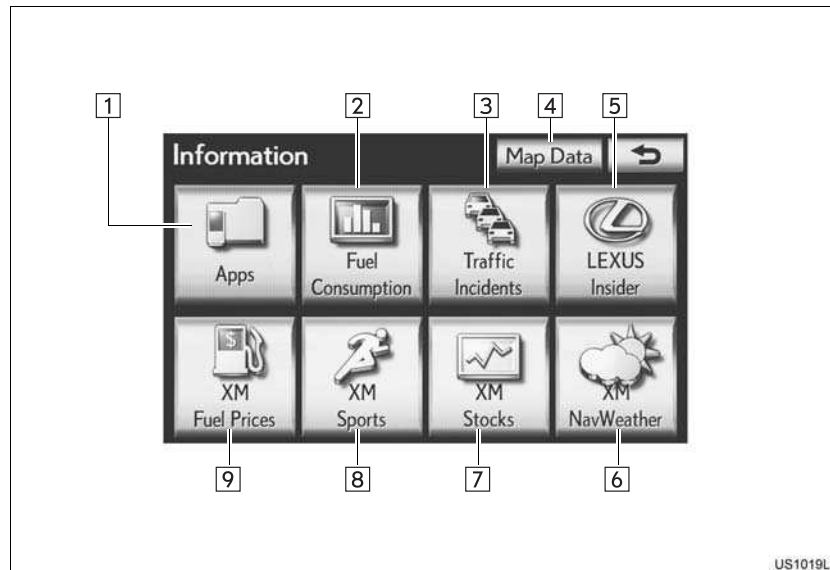

No.	Name	Function	Page
1	"Apps"	Select to display the "Apps" screen.	356, 359
2	"Fuel Consumption"	Select to display the fuel consumption screen.	Owner's Manual
3	"Traffic Incidents"	Select to display traffic incidents.	341
4	"Map Data"	Select to display map data information.	322
5	"LEXUS Insider"	Select to display the "LEXUS Insider" screen.	368
6	"XM NavWeather"	Select to display weather information.	337
7	"XM Stocks"	Select to display personally selected stocks information.	330
8	"XM Sports"	Select to display personally selected sports teams information.	327
9	"XM Fuel Prices"	Select to display current fuel prices and gas station locations information.	333

1. BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN

- 1 When the "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode, the initial screen will be displayed and the system will begin operating.



- Images shown on the initial screen can be changed to suit individual preferences. (See page 56.)

CAUTION

- When the vehicle is stopped with the engine running <the hybrid system operating>, always apply the parking brake for safety.

- After a few seconds, the "CAUTION" screen will be displayed.




- After about 5 seconds, the "CAUTION" screen automatically switches to the map screen. (If a button other than the "MAP/VOICE" button on the Remote Touch is pressed, the function's corresponding screen will be displayed.)

- When the navigation system is turned on in a screen other than the map screen, the "CAUTION" screen will be displayed when the screen is changed to the map screen for the first time after it has been turned on.

MAINTENANCE INFORMATION

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Maintenance Reminder" screen will be displayed when the navigation system is turned on.

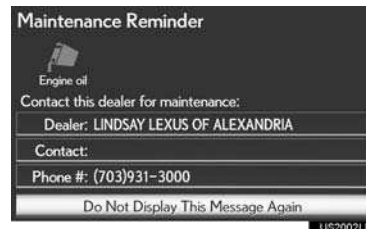


- This screen goes off if the screen is not operated for several seconds.
- To prevent this screen from being displayed again, select "Do Not Display This Message Again".
- To register maintenance information, see "MAINTENANCE" on page 133.

1. BASIC INFORMATION BEFORE OPERATION


2. HOW TO USE THE Remote Touch

This navigation system can be operated by the Remote Touch when the "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode.

- 1 Use the Remote Touch knob to select the desired button on the screen.

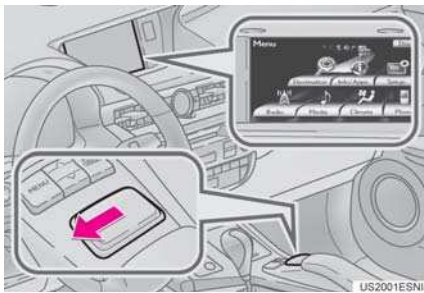

- 2 To select the button on the screen, press the Remote Touch knob. Once a button has been selected, the screen will change.

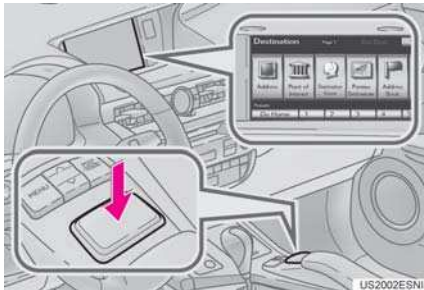

- When the pointer moves close to a button, it will be automatically pulled onto that button. The strength of this pull can be adjusted. (See page 60.)
- The pointer will disappear from the screen if it is not moved for 6 seconds. Operation of the Remote Touch knob will cause the pointer to reappear.
- Press the "▲" button on the Remote Touch to zoom in on the map screen and the "▼" button to zoom out. These buttons can also be used to scroll up and down on list screens.
- Press the "MENU" button on the Remote Touch to set a destination or adjust settings for the audio/video system, air conditioning system, etc.
- The map screen can be returned to by pressing the "MAP/VOICE" button on the Remote Touch.

⚠ CAUTION

- Do not allow fingers, fingernails or hair to become caught in the Remote Touch as this may cause an injury.
- Be careful when touching the Remote Touch in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

1. BASIC INFORMATION BEFORE OPERATION

NOTICE

- Do not allow the Remote Touch to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Remote Touch to excessive pressure or strong impact as the knob may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Remote Touch as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Remote Touch knob.
- If your hand or any object is on the Remote Touch knob when the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY mode, the Remote Touch knob may not operate properly.

INFORMATION

- Under extremely cold conditions, the Remote Touch knob may react slowly.


1. BASIC INFORMATION BEFORE OPERATION

TO DISPLAY THE LIST

- 1 Select "OK" to search for an address or a name.



- Matching items from the database are listed even if the entered address or name is incomplete.
- The list will be displayed automatically if the maximum number of characters is entered or the number of matching items is 5 or less.

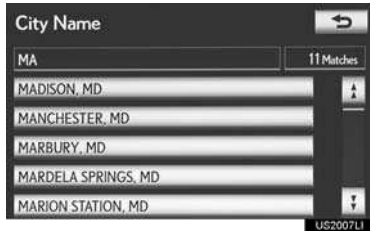


INFORMATION

- The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays "***" on the screen.

LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

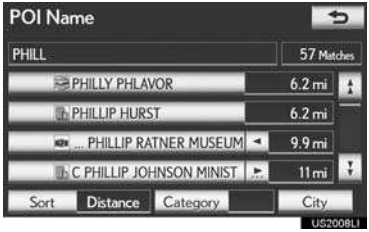

Icon	Function
	Select to skip to the next or previous page.
	Select and hold or to scroll through the displayed list.
	This indicates the displayed screen's position.
	If appears to the right of an item name, the complete name is too long to display. Select to scroll to the end of the name.
	Select to move to the beginning of the name.


INFORMATION

- The "Λ" and "v" buttons on the Remote Touch can be used to scroll up and down on list screens.


SORTING

The order of a list displayed on the screen can be rearranged.

- 1 Select "Sort".

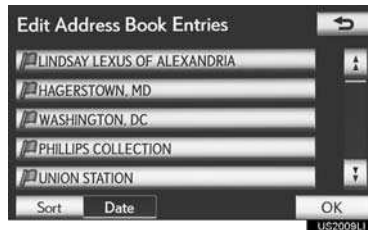

- 2 Select the desired sorting criteria.

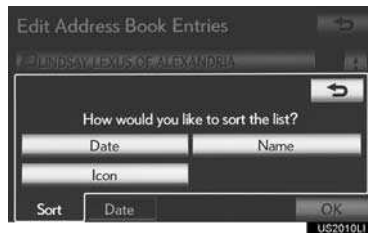

Screen button	Function
"Distance"	Select to sort in order of distance from the current position.
"Date"	Select to sort in order of date.
"Category"	Select to sort in order of category.
"Icon"	Select to sort in order of icon.
"Name"	Select to sort in order of name.
"Brand"	Select to sort in order of brand name. (XM functions)
"Price"	Select to sort in order of price. (XM functions)

2
BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION


4. SCREEN ADJUSTMENT

The contrast and brightness of the screen display and the image the camera displays can be adjusted. The display can also be turned off, and/or changed to either day or night mode. (For information regarding audio/video screen adjustment, see "AUDIO SCREEN ADJUSTMENT" on page 244.)

SCREEN SETTINGS ADJUSTMENT

ADJUSTING SCREEN DISPLAY AND CAMERA SETTINGS


- 1 Press the "MENU" button on the Remote Touch.

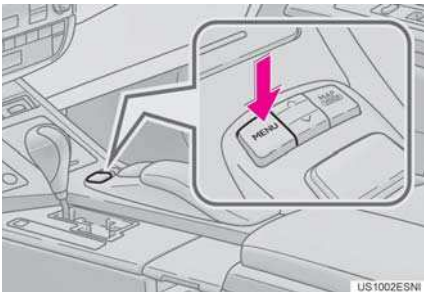

- 2 Select "Display".




- ▶ Adjusting the screen display

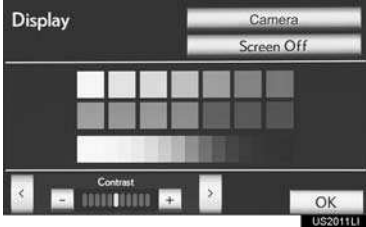

"Camera": Select to adjust the image the camera displays.

- ▶ Adjusting the image the camera displays

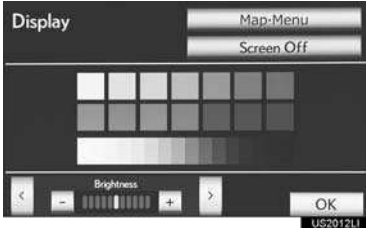


"Map-Menu": Select to return to the screen display settings.

CONTRAST AND BRIGHTNESS ADJUSTMENT

The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings. The display can also be turned off.

- 1 Select "<" or ">" to select the desired function ("Contrast" or "Brightness").

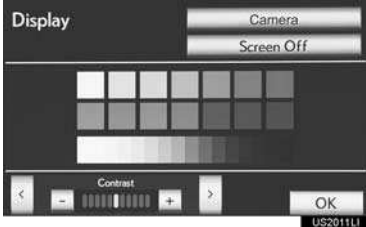

- 2 Select the desired screen button to adjust contrast and brightness.


Screen button	Function
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

- 3 After adjusting the screen, select "OK".
- The screen goes off when "Screen Off" is selected. To turn the screen back on, press any button on the audio panel or on the Remote Touch. The selected screen appears.

CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode.

- 1 To display the screen in day mode, even with the headlight switch on, select "Day Mode" for brightness and contrast control.

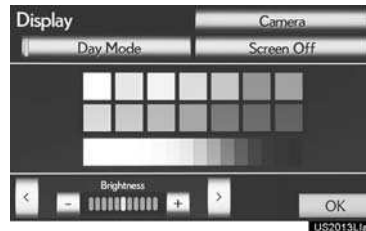

- The displays condition is not changed to night mode even if headlight switch is turned on when the vehicle is in a bright area, such as outside in direct sunlight.

INFORMATION

- If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the engine <hybrid system> turned off.

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

5. MAP SCREEN OPERATION

CURRENT POSITION DISPLAY

When starting the navigation system, the current position is displayed first. This screen displays the current position and a map of the surrounding area.

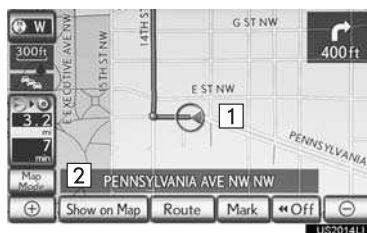

- The current position mark (1) appears in the center or bottom center of the map screen.
- A street name will appear on the bottom of the screen, depending on the scale of the map (2).
- The screen can be returned to this map screen that shows the current position at any time, from any screen by pressing the "MAP/VOICE" button on the Remote Touch.

- To correct the current position manually, see page 130.

INFORMATION


- While driving, the current position mark is fixed on the screen and the map moves.
- The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.

INFORMATION

- After 12-volt battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.

SCREEN SCROLL OPERATION

When any point on the map is selected, that point moves to the center of the screen and is shown by the cursor mark (1).

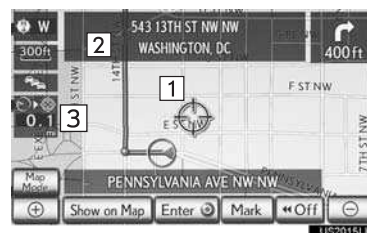

- Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.
- To scroll over the map, place the pointer in a position near the desired destination and then press and hold the Remote Touch knob. The map will continue scrolling in that direction until the knob is released.
- A street name, city name, etc. of the selected point will be shown, depending on the scale of the map (2). Distance from the current position to the selected point will also be shown (3).

- After the screen is scrolled, the map remains centered at the selected location until another function is activated. The current position mark will continue to move along your actual route and may move off the screen. When the “MAP/VOICE” button on the Remote Touch is pressed, the current position mark returns to the center of the screen and the map moves as the vehicle proceeds along the designated route.
- When the scroll feature is used, the current position mark may disappear from the screen. Press the “MAP/VOICE” button on the Remote Touch to display the current position on the map screen.


TO REGISTER THE CURSOR POSITION AS AN ADDRESS BOOK ENTRY


Address book entry registration enables easy access to a specific point.

- 1 Select “Mark”.



- 2 This screen is displayed.

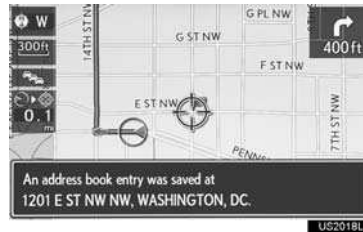

- The registered point is shown by  on the map.
- To change the icon or name, etc., see “EDITING ADDRESS BOOK ENTRIES” on page 115.

TO SET THE CURSOR POSITION AS A DESTINATION

A specific point on the map can be set as a destination using the scroll function.

- 1 Select “Enter”.



- The screen changes and displays the map location of the selected destination and the route preference. (See “STARTING ROUTE GUIDANCE” on page 87.)

INFORMATION


- Up to 100 address book entries can be registered. If there is an attempt to register more than 100 address book entries, an error message will appear.

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

TO SEE INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

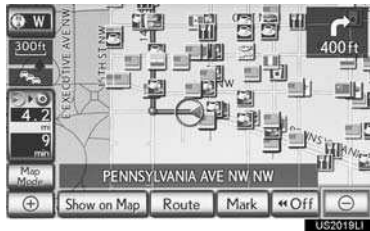

- To display information about an icon, set the cursor on it.


POI INFORMATION


When the cursor is set on a POI icon, the name and **"Info"** are displayed at the top of the screen.

1 Select **"Info"**.



2 Information such as the name, address, position and phone number are displayed.

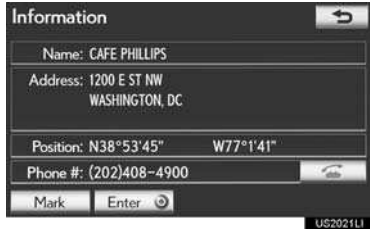

- If **"Enter"** is selected, the cursor position will be set as a destination.
- If a destination has already been set, **"Go Directly"** and **"Add to Route"** will be displayed.
- "Go Directly"**: Select to delete the existing destination(s) and set a new one.
- "Add to Route"**: Select to add a destination.
- To register this POI as an address book entry, select **"Mark"**. (See "REGISTERING ADDRESS BOOK ENTRIES" on page 115.)
- If  is selected, the registered phone number can be called.
- The desired POI can be displayed on the map screen. (See "DISPLAY POI ICONS" on page 104.)


■ ADDRESS BOOK ENTRY INFORMATION

When the cursor is set on an address book entry icon, the name and “Info” are displayed at the top of the screen.

1 Select “Info”.



2 Information such as the name, address, position and phone number are displayed.

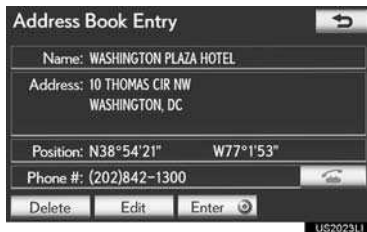

● If “Enter” is selected, the cursor position will be set as a destination.

● If a destination has already been set, “Go Directly” and “Add to Route” will be displayed.

“Go Directly”: Select to delete the existing destination(s) and set a new one.

“Add to Route”: Select to add a destination.

● To edit an address book entry, select “Edit”. (See “EDITING ADDRESS BOOK ENTRIES” on page 115.)

● To delete an address book entry, select “Delete”.

● If is selected, the registered phone number can be called.

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION


■ DESTINATION INFORMATION

When the cursor is set on a destination icon, the name and “Info” are displayed on the top of the screen.


- 1 Select “Info”.

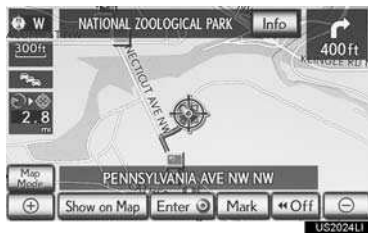

- 2 Information such as the name, address, position and phone number are displayed.

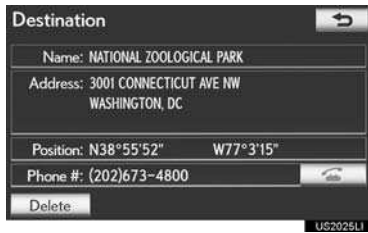


- To delete a destination, select “Delete”.

● If  is selected, the registered phone number can be called.

■ XM NavTraffic® TEXT INFORMATION

When the XM NavTraffic® icon on the map screen is selected, the XM NavTraffic® information bar will appear on the upper part of the screen.

- 1 Select “Info”.

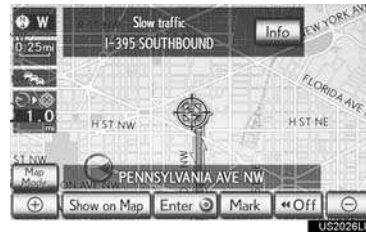

- 2 Traffic information will be displayed on the screen.




- To display detailed traffic event information, select “Detail”.




SWITCHING THE SCREENS

Any of the screen configurations can be selected.

1 Select "Map Mode".

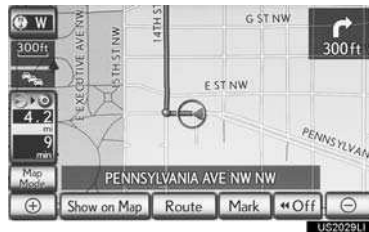

2 Select the screen buttons to select the desired configuration.

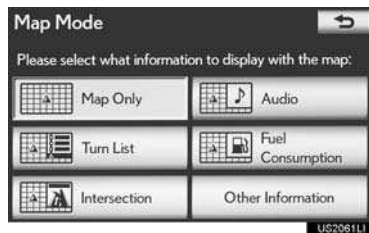

- Depending on the conditions, certain screen configuration buttons cannot be selected.

Screen button	Function
"Map Only"	Select to display the single map screen. (See page 46.)
"Turn List"	Select to display the turn list screen. (See page 92.)

Screen button	Function
"Intersection"	Select to display the intersection guidance screen or the guidance screen on the freeway. (See page 91.)
"Audio"	Select to display the audio screen. (See page 46.)
"Fuel Consumption"	Select to display the fuel consumption screen. (See page 46.)
"Other Information"	Select to display the following 4 screen configurations: "Dual map", "Compass", "Turn-by-Turn Arrow" and "Freeway Exit List".
"Dual map"	Select to display the dual map screen. (See page 46.)
"Compass"	Select to display the compass mode screen. (See page 47.)
"Turn-by-Turn Arrow"	Select to display the turn-by-turn arrow screen. (See page 92.)
"Freeway Exit List"	Select to display the freeway exit list screen. (See page 90.)

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

SCREEN CONFIGURATIONS

MAP ONLY

This is a regular map screen.

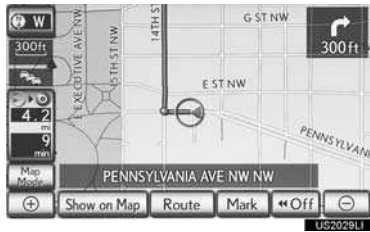

- The screen shows the single map.
- While on a different screen, selecting **"Map Only"** will display the single map screen.

AUDIO

The audio screen and the map screen are displayed.



- Information on the current radio station or track is displayed.
- If a different screen is displayed, select **"Audio"** on the "Map Mode" screen.
- For audio system operation, refer to **"AUDIO/VIDEO SYSTEM OPERATION"**. (See page 208.)

FUEL CONSUMPTION

The fuel consumption screen and the map screen are displayed.



- Selecting **"<"** or **">"** allows selection of the desired mode (**"Energy Monitor"***, **"Trip Information"** or **"Past Record"**).
- *: Hybrid vehicle

- If a different screen is displayed, select **"Fuel Consumption"** on the "Map Mode" screen.
- For an explanation on each fuel consumption mode, refer to **"FUEL CONSUMPTION"**. For details, refer to **"Owner's Manual"**.

DUAL MAP

The map screen can be split into two.




- This screen shows the dual map. The map on the left is the main map.

- While on a different screen, selecting “Dual map” will display the dual map screen.

■ EDITING RIGHT MAP

The right side map can be edited by selecting any point on the right side map.

- 1 Select the desired screen button.

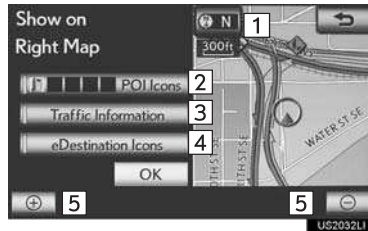

- The following procedures can be performed on this screen:

No.	Function
1	Changing the orientation of the map
2	Displaying POI icons
3	Showing XM NavTraffic [®] information (See page 342.)
4	Displaying eDestination icons (See page 367.)
5	Changing the map scale

- 2 Select “OK” when editing is completed.

- The screen returns to the dual map screen.

■ COMPASS

The current position is indicated with a compass.



- Information about the destination, current position and a compass is displayed on the screen.

- While on a different screen, selecting “Compass” will display the compass mode screen.

(INFORMATION)

- The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.
- When the vehicle travels out of the coverage area, the guidance screen changes to the compass mode screen.

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

MAP SCALE

1 Select or to change the scale of the map screen.



- The scale bar and indicator at the bottom of the screen indicate the map scale menu. The scale range is from 150 ft. (50 m) to 250 miles (400 km).
- Select and hold or to continue changing the scale of the map screen.
- The scale of the map screen can be changed by selecting the scale bar directly. This function is not available while driving.

INFORMATION

- Press the “^” button on the Remote Touch to zoom in on the map screen and the “v” button to zoom out.
- The map scale is displayed under the north-up or heading-up symbol at the top left of the screen.
- When the map scale is at the maximum range of 250 miles (400 km), is not shown. When the map scale is at the minimum range of 150 ft. (50 m), is not shown. In areas where the foot print map is available the map scale changes from to when at the minimum range.


FOOT PRINT MAP

For the area which is covered by the foot print map (Some areas in the following cities: Detroit, Chicago, N.Y., L.A), you can switch to the foot print map on a scale of 75 ft. (25 m).

TO SWITCH TO THE FOOT PRINT MAP

changes into when the map is scaled down to 150 ft. (50 m).

1 To display the foot print map, select

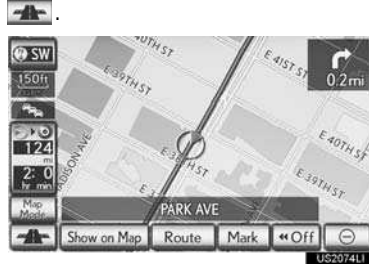

- To delete the foot print map display, select .

INFORMATION

- If the map or the current position is moved to the area which is not covered by the foot print map, the screen scale automatically changes to 150 ft. (50 m).
- On the foot print map, a one way street is displayed by .
- It is not possible to perform scrolling on the foot print map while driving.

Building footprints in the database were created and provided by MAPMASTER.

1. BASIC INFORMATION BEFORE OPERATION

TO DISPLAY BUILDING INFORMATION

Information is available only for buildings for which information is recorded on the map data.

- 1 Select "Info" while the foot print map is displayed.



- Details of POIs in some buildings may be displayed.
- For detailed POI information, select the building name. You can see details of the selected POIs.




ORIENTATION OF THE MAP


The orientation of the map can be changed from north-up to heading-up by selecting the orientation symbol at the top left of the screen.


- 1 Select  or .

- ▶ North-up screen

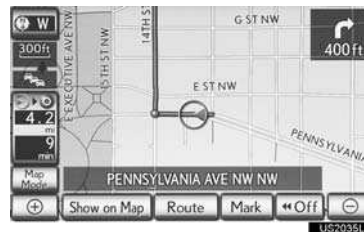

- ▶ Heading-up screen

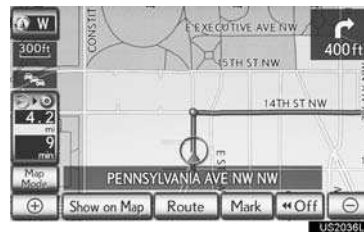

: North-up symbol

Regardless of the direction of vehicle travel, north is always up.

: Heading-up symbol

The direction of vehicle travel is always up.

- Both the north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

STANDARD MAP ICONS


Icon	Name
	Island
	Park
	Industry
	Business facility
	Airport
	Military
	University
	Hospital
	Stadium
	Shopping mall
	Golf

2. SETUP

1. GENERAL SETTINGS

Used for language selection and the on/off settings of operation sounds and automatic screen change, etc.

- 1 Press the "MENU" button on the Remote Touch.

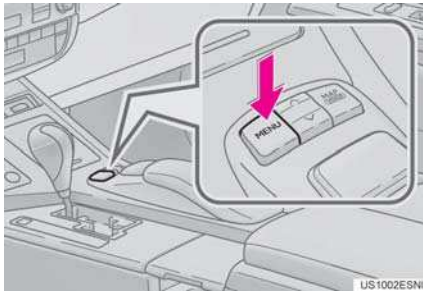


- 2 Select "Setup".



- 3 Select "General".







- 4 Select the items to be set.

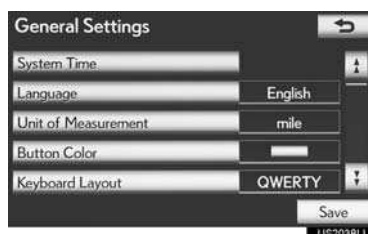

- 5 Select "Save".

SCREENS FOR GENERAL SETTINGS

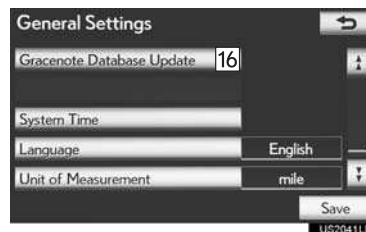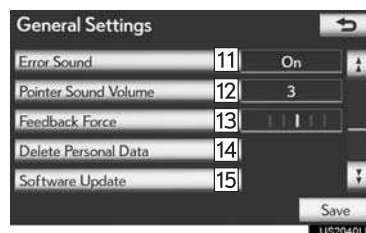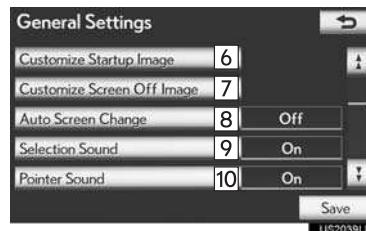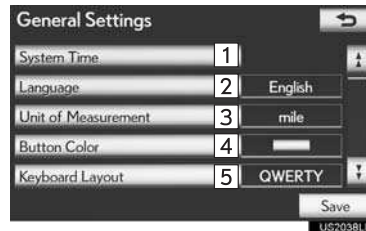

2

BASIC FUNCTION

- On this screen, the following functions can be performed:

2. SETUP


No.	Function
1	Select to change the time zone and select "On" or "Off" for daylight saving time. (See "SYSTEM TIME SETTINGS" on page 53.)
2	Select to change the language. (See "SELECTING A LANGUAGE" on page 54.)
3	Select to change the distance unit. (See "UNIT OF MEASUREMENT" on page 54.)
4	Select to change the screen button color. (See "SELECTING A BUTTON COLOR" on page 55.)
5	Select to change the keyboard layout. (See "SELECTING A KEYBOARD LAYOUT" on page 55.)
6	Select to customize the startup image. (See "CHANGING THE STARTUP IMAGE" on page 56.)
7	Select to customize the screen off image. (See "CHANGING THE SCREEN OFF IMAGE" on page 58.)

No.	Function
8	Select to set automatic screen changes from the audio/air conditioning control screen to the previous screen to "On" or "Off". If "On" is selected, the screen will automatically return to the previous screen from the audio/air conditioning control screen after 20 seconds.
9	Select to turn the selection sounds "On" or "Off".
10	Select to turn the pointer sounds "On" or "Off".
11	Select to turn the error sounds "On" or "Off".
12	Select to adjust the pointer sound volume. (See "POINTER SOUND VOLUME SETTINGS" on page 60.)
13	Select to adjust the strength of the pull from the buttons to the pointer. (See "SETTING A FEEDBACK FORCE" on page 60.)
14	Select to delete personal data. (See "DELETING PERSONAL DATA" on page 61.)
15	Select to update program versions. For details, contact your Lexus dealer.
16	Select to update gracenote database versions. For details, contact your Lexus dealer.

SYSTEM TIME SETTINGS

Used for changing time zones and the on/off settings of daylight saving time.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "System Time".

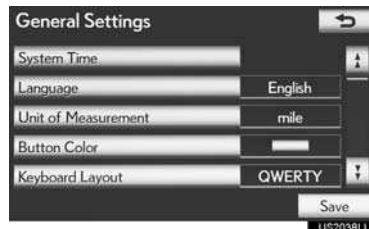

- 4 Select the items to be set.



- On this screen, the following functions can be performed:


No.	Function
1	Select to change the time zone. (See "TIME ZONE" on page 53.)
2	To select "On" or "Off" for daylight saving time.

- 5 Select "Save".


TIME ZONE

A time zone can be selected and GMT can be set.


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "System Time" on the "General Settings" screen.
- 4 Select "Time Zone".

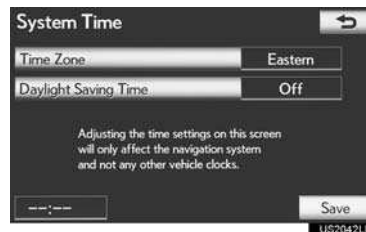

- 5 Select the desired time zone.

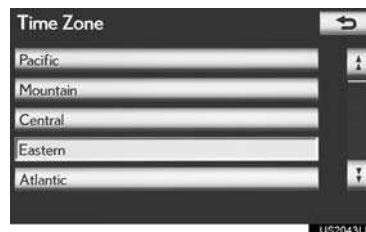

- If "Other" is selected, the zone can be adjusted manually. Select "+" or "-" to adjust the time zone and then select "OK".

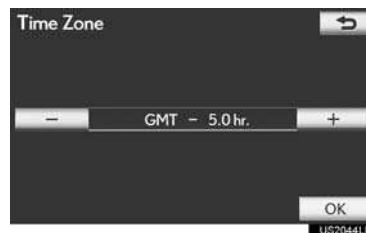


- 6 Select "Save".

2. SETUP

SELECTING A LANGUAGE

The language can be changed.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Language”.

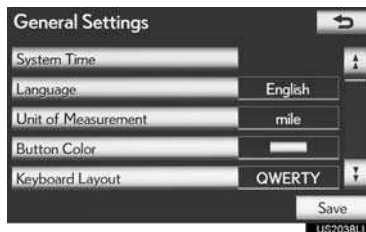

- 4 Select the desired screen button.




- 5 Select “Yes”.
- The previous screen will be displayed.
- 6 Select “Save”.


UNIT OF MEASUREMENT

Distance unit can be changed.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Unit of Measurement”.

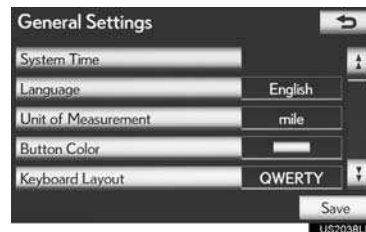

- 4 Select “km” or “mile”.

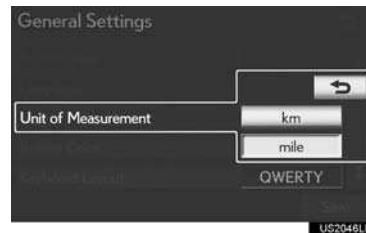


- The previous screen will be displayed.
- 5 Select “Save”.

- This function is available only in English or Spanish. To change language, see “SELECTING A LANGUAGE” on page 54.


SELECTING A BUTTON COLOR

The color of the screen buttons can be changed.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Button Color".

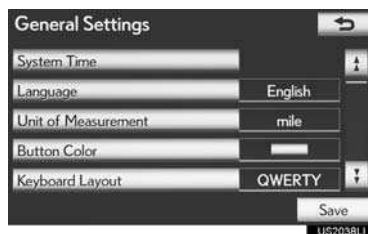

- 4 Select the desired screen button color.

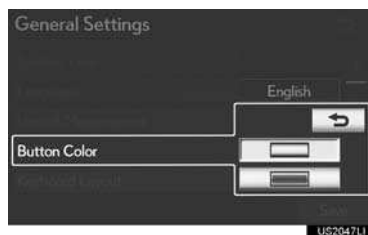


- The previous screen will be displayed.

- 5 Select "Save".


SELECTING A KEYBOARD LAYOUT

Keyboard layout can be changed.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Keyboard Layout".

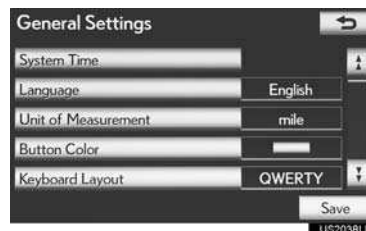

- 4 Select "ABC" or "QWERTY" of "Keyboard Layout" to change the keyboard layout.

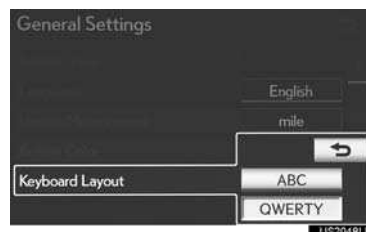

- The previous screen will be displayed.


- 5 Select "Save".

2


BASIC FUNCTION

■ LAYOUT TYPE

▶ “ABC” type

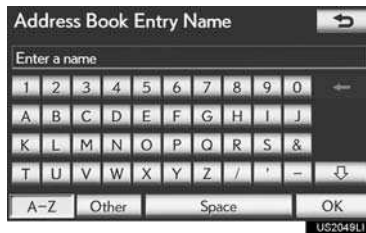

▶ “QWERTY” type

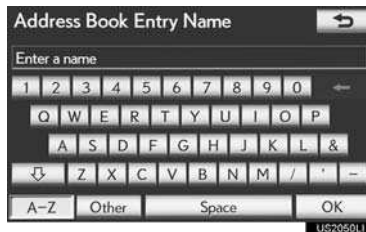

CHANGING THE STARTUP IMAGE

When the “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode, the initial screen will be displayed.


An image can be copied from a USB memory and used as the startup image. (For information regarding the startup image, see “INITIAL SCREEN” on page 32.)

INFORMATION


- When saving the images to a USB, name the folder that the startup image is saved to “StartupImage” and name the folder that the screen off image is saved to “DisplayOffImage”. If these folder names are not used, the navigation system cannot download the images. (The folder names are case sensitive.)
- The images file extension is JPG or JPEG.
- The images file name, including the file extension, can be up to 32 characters.
- Image files of 10 MB or less can be saved.
- Up to 3 images can be downloaded.

■ TRANSFERRING DATA

- 1 Grip the knob to release the lock, and lift the armrest to open.

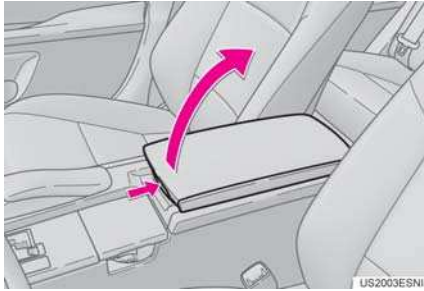


- 2 Open the cover and connect a USB memory.

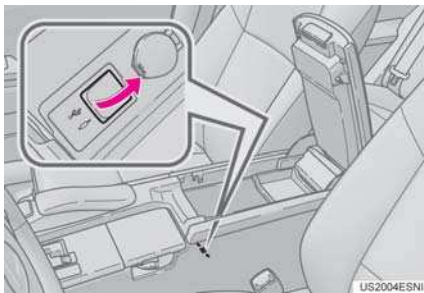

- Turn on the power of the USB memory if it is not turned on.
- 3 Close the console box.
 - 4 Press the "MENU" button on the Remote Touch, then select "Setup".
 - 5 Select "General" on the "Setup" screen.

- 6 Select "Customize Startup Image".

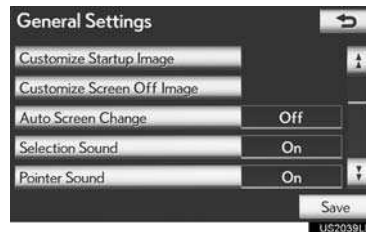


- 7 Select "Transfer".



- 8 Select "Yes".

■ SETTING THE STARTUP IMAGE

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Customize Startup Image" on the "General Settings" screen.
- 4 Select the desired image.

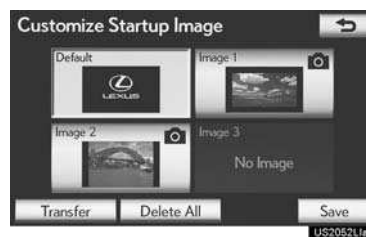

- 5 Select "Save".


2

BASIC FUNCTION

2. SETUP

■ DELETING TRANSFERRED IMAGES

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Customize Startup Image" on the "General Settings" screen.
- 4 Select "Delete All".

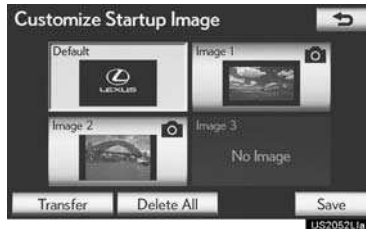


- 5 Select "Yes".

■ CHANGING THE SCREEN OFF IMAGE


Select "Screen Off" to turn off the screen. An image can be copied from a USB memory and can be set to display when "Screen Off" is selected. (For more information on "Screen Off", see "SCREEN ADJUSTMENT" on page 38.)

■ TRANSFERRING DATA

- 1 Grip the knob to release the lock, and lift the armrest to open.

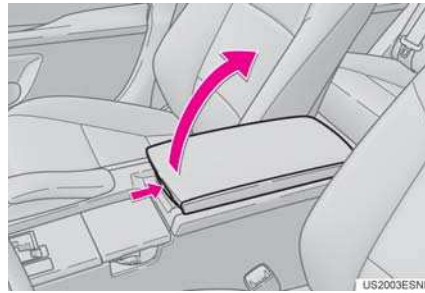


- 2 Open the cover and connect a USB memory.

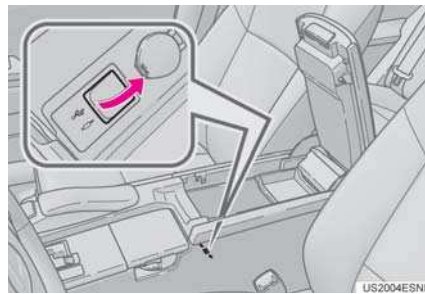

- Turn on the power of the USB memory if it is not turned on.

- 3 Close the console box.
- 4 Press the "MENU" button on the Remote Touch, then select "Setup".
- 5 Select "General" on the "Setup" screen.
- 6 Select "Customize Screen Off Image".

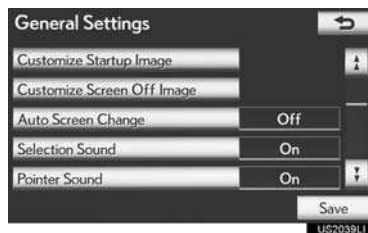


- 7 Select "Transfer".



- 8 Select "Yes".

■ SETTING THE SCREEN OFF IMAGE


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Customize Screen Off Image" on the "General Settings" screen.
- 4 Select the desired image.

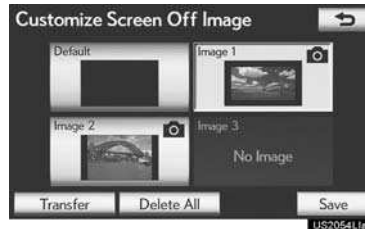

- 5 Select "Save".

■ DELETING TRANSFERRED IMAGES

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Customize Screen Off Image" on the "General Settings" screen.
- 4 Select "Delete All".

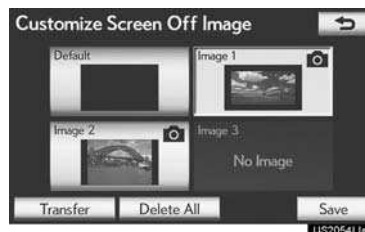

- 5 Select "Yes".


2

BASIC FUNCTION


POINTER SOUND VOLUME SETTINGS

The pointer sound volume can be adjusted.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Pointer Sound Volume”.

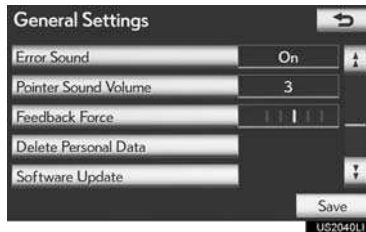

- 4 Select the desired button.

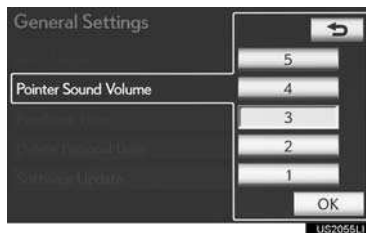


- 5 Select “OK”.
- 6 Select “Save”.


SETTING A FEEDBACK FORCE

When the pointer moves close to a button, it will be automatically pulled onto that button. The strength of this pull can be adjusted.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “General” on the “Setup” screen.
- 3 Select “Feedback Force”.

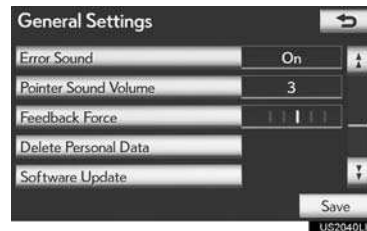


- 4 Select “+” or “-”.

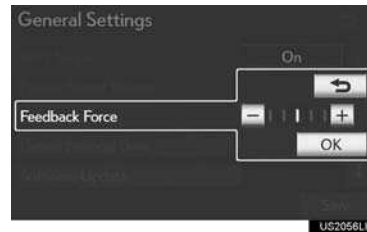


- 5 Select “OK”.
- 6 Select “Save”.

DELETING PERSONAL DATA

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "General" on the "Setup" screen.
- 3 Select "Delete Personal Data".

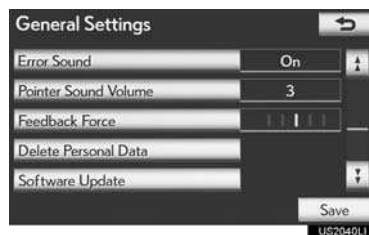

- 4 Select "Delete".

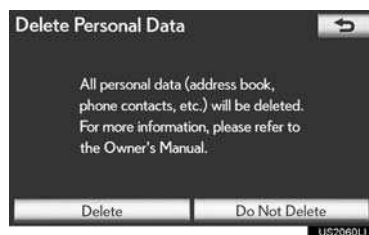

- 5 Select "Yes".

- The following personal data can be deleted or returned to their default settings:

- Maintenance conditions
- Maintenance information off setting
- Address book
- Areas to avoid
- Previous points
- Route guidance
- Route trace
- Phonebook data
- Call history data
- Speed dial data
- Bluetooth® phone data
- Phone sound settings
- Phone display settings
- Message settings
- Audio setting
- Bluetooth® audio setting
- Startup image data
- Screen off image data
- Downloaded Apps

INFORMATION

- This function is not available while driving.

2


BASIC FUNCTION

2. SETUP

2. VOICE SETTINGS

Voice guidance etc. can be set.

1 Press the "MENU" button on the Remote Touch.

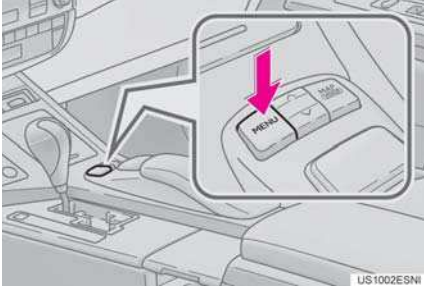


2 Select "Setup".



3 Select "Voice".





4 Select the items to be set.

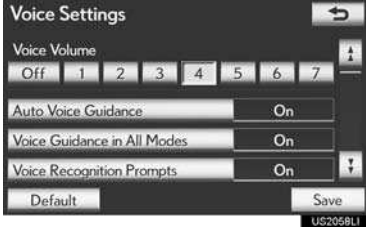

5 Select "Save".

SCREEN FOR VOICE SETTINGS

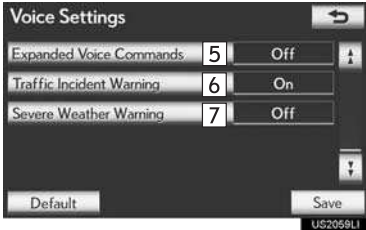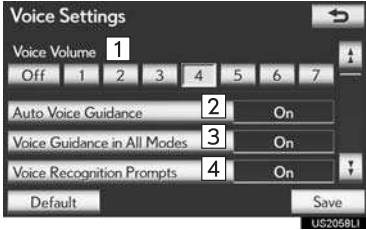

● On this screen, the following functions can be performed:


No.	Function
1	The voice guidance volume can be adjusted or switched off. (See "VOICE VOLUME" on page 63.)
2	Voice guidance during route guidance can be set to "On" or "Off".
3	Voice guidance during audio/video and/or air conditioning system use can be set to "On" or "Off".
4	Voice recognition prompts can be set to "On" or "Off". This setting can also be changed on the "Shortcut Menu" screen. (See page 308.)
5	When "On" is selected, the audio/video and air conditioning systems can be operated using voice commands.
6	When using the traffic information function, voice guidance can be set to "On" or "Off". (See "TRAFFIC INCIDENT WARNING" on page 64.)
7	When using the XM NavWeather™ function, the severe weather warning can be set to "On" or "Off".

- To reset all setup items, select "Default".

VOICE VOLUME

The voice guidance volume can be adjusted or switched off.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Voice" on the "Setup" screen.
- 3 Select the desired level by selecting the appropriate number.

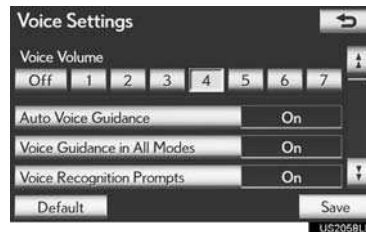

- If voice guidance is not needed, select "Off" to disable the feature.
- 4 Select "Save".

2


BASIC FUNCTION

2. SETUP

TRAFFIC INCIDENT WARNING

Traffic congestion information can be received via voice guidance while being guided to the desired destination.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Voice” on the “Setup” screen.
- 3 Select “On” of “Traffic Incident Warning”.

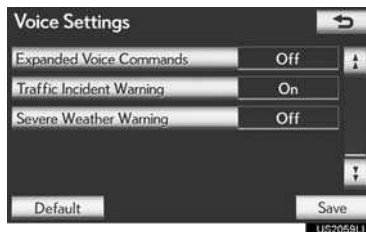


- 4 Select “Save”.

INFORMATION

- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate. (See page 342.)

1. DESTINATION SEARCH


- 1 Press the "MENU" button on the Remote Touch.

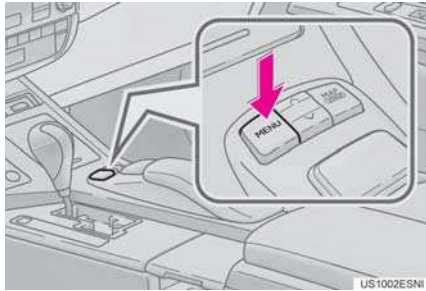

- 2 Select "Destination".



- 3 This screen is displayed.

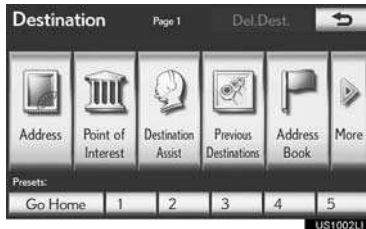

- One of 11 different methods can be used to search a destination. (See pages 69 through 85.)


INFORMATION

- When searching a destination, the response to the screen button may be slow.

SELECTING THE SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using "Address", "Point of Interest" or "Intersection & Freeway".

- 1 Select "Change State/Province" to display a list of the states/provinces/territories of the United States and Canada.

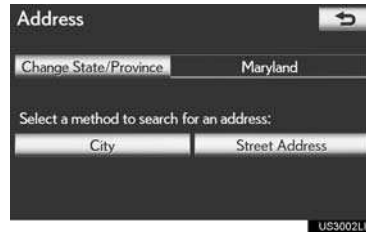

- For map database information and updates, see "MAP DATABASE VERSION AND COVERAGE AREA" on page 322.
- If a state (province) has not been selected yet, "Select State/Province" is displayed.


- 2 Select the desired state (province).



- The previous screen will be displayed.

DESTINATION SEARCH BY HOME

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Go Home"**.

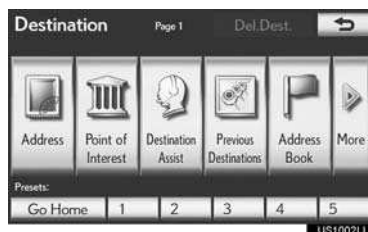

- Your home address is set as the destination. The navigation system performs a search for the route.
- 4 Select **"OK"**.


- To use this function, it is necessary to set a home address. (To register home, see page 109.)

INFORMATION

- If a home address has not been registered, a message confirming if it is desirable to set a home will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the set home address if **"OK"** is selected even while driving.

DESTINATION SEARCH BY PRESET DESTINATIONS

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select any of the preset destination buttons (1-5).

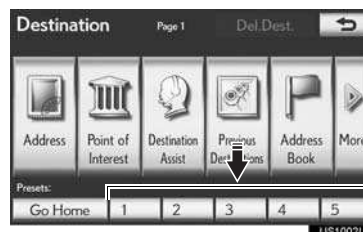

- The selected preset destination point is set as the destination. The navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

- 4 Select **"OK"**.

- To use this function, it is necessary to set preset destinations to the preset screen buttons (1-5). (See "REGISTERING PRESET DESTINATIONS" on page 112.)

3

NAVIGATION SYSTEM

1. DESTINATION SEARCH

INFORMATION

- If a preset destination point has not been registered, a message confirming if it is desirable to set a preset destination will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the preset destination point if "OK" is selected even while driving.

DESTINATION SEARCH BY "Address"


There are 2 methods to search a destination by address:
 (a) Search by city
 (b) Search by street address

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Destination" on the "Menu" screen.
- 3 Select "Address" on the "Destination" screen.
- 4 Select the desired search method.



SELECTING A CITY TO SEARCH

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Address" on the "Destination" screen.
- 3 Select "City".

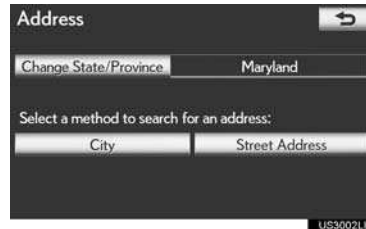

- 4 Input a city name.




- 5 Select the screen button of the desired city name from the displayed list.



- 6 Input the street name and select "OK".



- 7 When the desired street name is found, select the corresponding screen button.

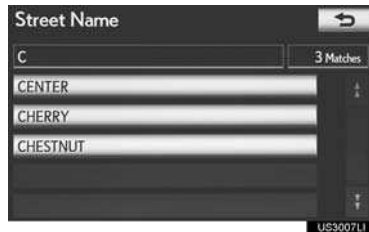

- When the desired street name is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

- 8 Input a house number.



- If the same address exists in more than 1 city, the current screen changes to the address list screen.

SEARCHING FROM THE LAST 5 CITIES

- 1 Select "Last 5 Cities".



- 2 Select the screen button of the desired city name from the displayed list.



- The current screen changes to the screen for inputting a street name. (See "SELECTING A CITY TO SEARCH" on page 70.)

INFORMATION

- If the navigation system has never been used, this function will not be available.

3 NAVIGATION SYSTEM


1. DESTINATION SEARCH

SEARCH BY STREET ADDRESS

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Address" on the "Destination" screen.
- 3 Select "Street Address".



- 4 Select numbers directly on the screen to input the house number.

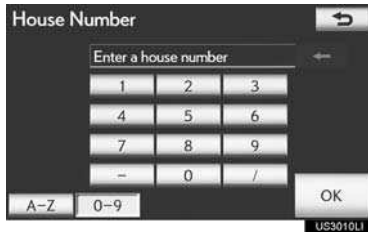


- After inputting the house number, select "OK" to display the screen for inputting the street name.

- 5 Input the street name and select "OK".



- 6 When the desired street name is found, select the corresponding screen button.

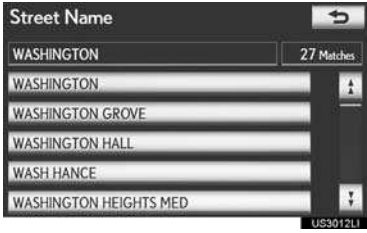


- When the desired street name is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

- If the same address exists in more than 1 city, a screen requesting the city name to be input or selected will be displayed.

- 7 Input a city name.



- 8 Select the screen button of the desired city name from the displayed list.

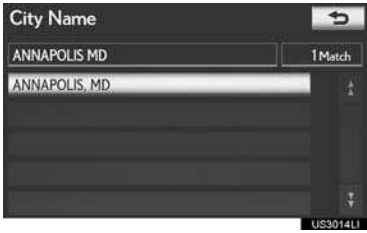


INFORMATION

- A street name can be searched using only the body part of its name.
- For example: S WESTERN AVE
 - A search can be performed by inputting "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

DESTINATION SEARCH BY "Point of Interest"

There are 4 methods to search a destination by Points of Interest:

- (a) Search by name
 - (b) Search by category
 - (c) Search by phone #
 - (d) Search by eDestination
- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
 - 2 Select "Destination" on the "Menu" screen.
 - 3 Select "Point of Interest" on the "Destination" screen.
 - 4 Select the desired search method.

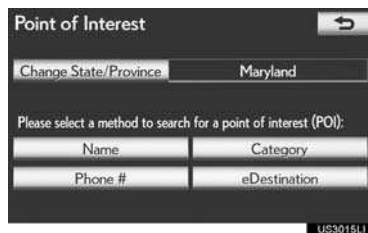


SEARCH BY "Name"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Point of Interest" on the "Destination" screen.
- 3 Select "Name" on the "Point of Interest" screen.
- 4 Input the name of the POI.



- 5 Select the screen button of the desired destination.

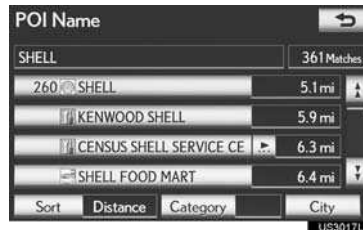


- When the desired destination is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)
- When inputting the name of a specific POI, and there are 2 or more sites with the same name, the list screen is displayed.

3 NAVIGATION SYSTEM

1. DESTINATION SEARCH

- 6 Select the screen button of the desired destination.

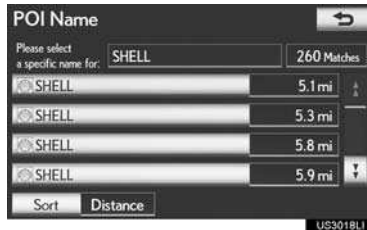

- If the same name exists in more than 1 city, a search can be performed more easily using "City" or "Category". (See "SELECTING A CITY TO SEARCH" on page 74 and "SELECTING FROM THE CATEGORIES" on page 75.)


- The desired POI can be displayed on the map screen. (See "DISPLAY POI ICONS" on page 104.)

INFORMATION

- To search for a facility name using multiple search words, put a space between each word.

■ SELECTING A CITY TO SEARCH

- 1 Select "City".

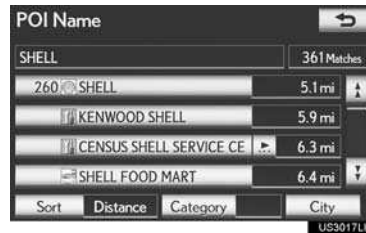


- 2 Input the city name.




- To cancel the city setting, select "Any City".

- 3 Select the screen button of the desired city name from the displayed list.

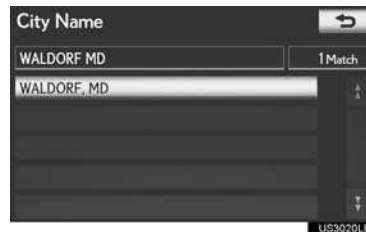


■ SELECTING FROM THE CATEGORIES


1 Select "Category".

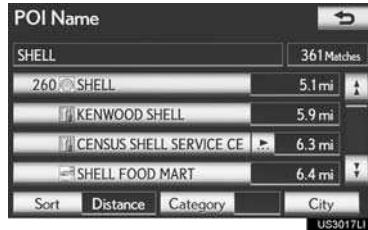

2 Select the screen button of the desired category.

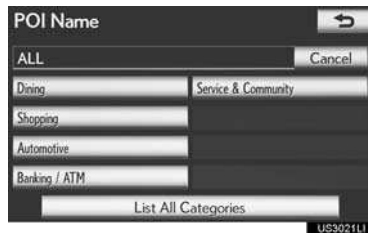

- If the desired POI category is on the screen, select its screen button to display a detailed list of the POI category.
- If the desired POI category is not on the screen, select "List All Categories" to list all POI categories.

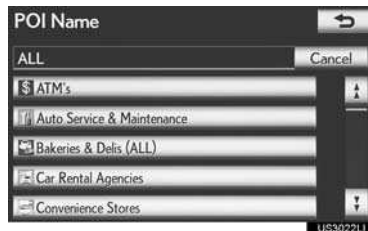


- When the desired category is selected, the POI name list screen is displayed.


SEARCH BY "Category"

The destination can be set by selecting the search point and the POI category.

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Point of Interest" on the "Destination" screen.
- 3 Select "Category".

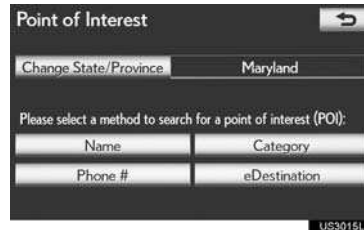

4 This screen is displayed.

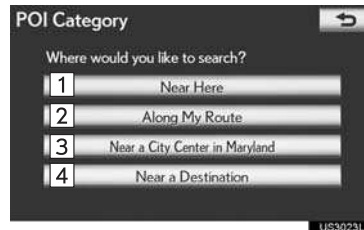

3 NAVIGATION SYSTEM

1. DESTINATION SEARCH

- On this screen, the following operations can be performed:

No.	Function
1	Select to set the search point from near the current position.
2	Select to set the search point from along the selected route.
3	Select to set the search point from near a city center.
4	Select to set the search point from near a destination.

INFORMATION

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

■ SETTING THE SEARCH POINT FROM NEAR HERE

- 1 Select "Near Here".
- The search point is set at the current position, and the "POI Category" screen will be displayed. (See page 78.)

■ SETTING THE SEARCH POINT FROM ALONG MY ROUTE


- 1 Select "Along My Route".
- The search point is set and the "POI Category" screen will be displayed. (See page 78.)

■ SETTING THE SEARCH POINT FROM NEAR CITY CENTER

- 1 Select "Near a City Center in XX*".
- 2 Input the city center name.



- 3 Select the screen button of the desired city center name.

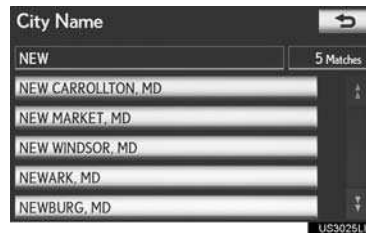

- The search point is set and the "POI Category" screen will be displayed. (See page 78.)
- *: XX represents the selected search area name.

■ SELECTING FROM THE LAST 5 CITIES

- 1 Select "Near a City Center in XX*".
- 2 Select "Last 5 Cities".



- 3 Select the screen button of the desired city center name.




- The search point is set and the "POI Category" screen will be displayed. (See page 78.)

*: XX represents the selected search area name.

■ SETTING THE SEARCH POINT FROM NEAR A DESTINATION

- 1 Select "Near a Destination".
- 2 Select the screen button of the desired destination.

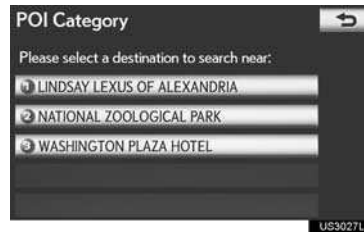

- The search point is set and the "POI Category" screen will be displayed. (See page 78.)


3 NAVIGATION SYSTEM

1. DESTINATION SEARCH

■ TO SEARCH FOR POIs NEAR THE SEARCH POINT


When the search point is set, the "POI Category" screen will be displayed.

1 Select the desired POI category.

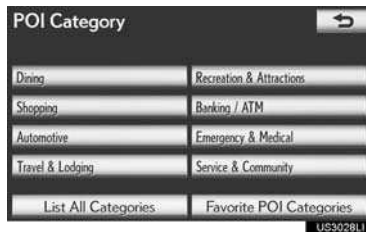

- If the desired POI category is not on the screen, select "List All Categories" to list all POI categories.
- If "Favorite POI Categories" is selected, a search can be performed using the 6 POIs that have been previously set. For more details, see "POI CATEGORY CHANGE (SELECT POI ICONS)" on page 129.

2 Select the desired POI category from the list.

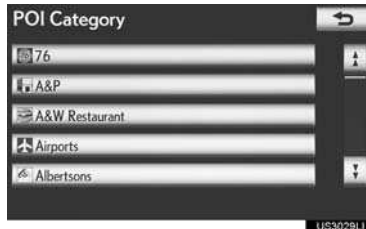

3 Select the screen button of the desired item.




- When the desired item is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

SEARCH BY "Phone #"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Point of Interest" on the "Destination" screen.
- 3 Select "Phone #" on the "Point of Interest" screen.
- 4 Input a phone number.



- 5 After inputting a phone number, select "OK".
- When a phone number is input, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)
 - If there is more than 1 site with the same number, the following screen will be displayed.

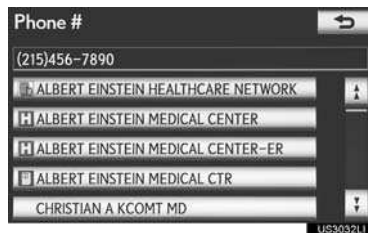

- To set an address book entry as a destination using the phone number, the number must already be registered with the address book entry. (See page 118.)

INFORMATION

- If there is no match for the phone number input, a list of identical numbers with different area codes will be displayed.

SEARCH BY "eDestination"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
 - 2 Select "Point of Interest" on the "Destination" screen.
 - 3 Select "eDestination" on the "Point of Interest" screen.
- With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. Up to 200 locations can be stored online and accessed or updated at any time. Locations can be organized into up to 20 folders. (See "eDestination" on page 365.)




3 NAVIGATION SYSTEM

1. DESTINATION SEARCH


DESTINATION SEARCH BY “Destination Assist”

- 1 Press the **“MENU”** button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select **“Destination”** on the “Menu” screen.
- 3 Select **“Destination Assist”** on the “Destination” screen.
 - Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI). After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle’s navigation system. (See “Destination Assist” on page 363.)

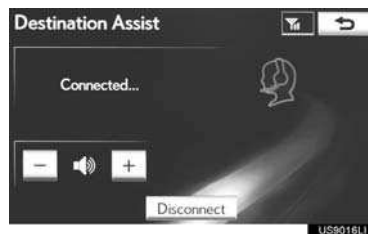

DESTINATION SEARCH BY “Previous Destinations”

- 1 Press the **“MENU”** button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select **“Destination”** on the “Menu” screen.
- 3 Select **“Previous Destinations”** on the “Destination” screen.
- 4 Select the screen button of the desired destination.

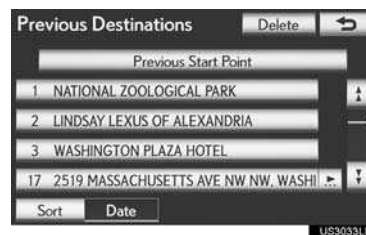


- The previous starting point and up to 100 previously set destinations are displayed on the screen.
- “Delete”**: Select to delete the previous destination. (To delete previous destinations, see page 86.)
- When the desired destination is selected, the “Confirm Destination” screen may be displayed. If **“Go”** is selected on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 87.)

- The list of previous destinations can also be deleted by selecting **"Delete Previous Dest."** on the "Navigation Settings" screen when the vehicle is stopped. (See "DELETING PREVIOUS DESTINATIONS" on page 124.)

- When the desired address book entry is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

DESTINATION SEARCH BY "Address Book"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Address Book"** on the "Destination" screen.
- 4 Select the screen button of the desired address book entry.

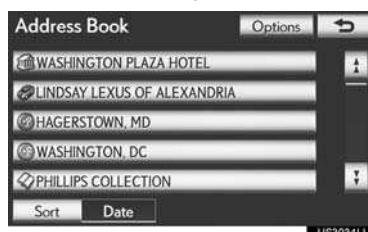

- A list of registered address book entries is displayed.

"Options": Select to register or edit address book entries. (See page 115.)

DESTINATION SEARCH BY "Emergency"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
 - 2 Select **"Destination"** on the "Menu" screen.
 - 3 Select **"Emergency"** on the second page of the "Destination" screen.
- The display changes to a screen to select police stations, dealers, hospitals or fire stations.
- 4 Select the desired emergency category.



- The selected emergency category is displayed.

3

NAVIGATION SYSTEM

1. DESTINATION SEARCH

5 Select the screen button of the desired destination.



- When the desired destination is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)


INFORMATION

- The navigation system does not guide in areas where route guidance is unavailable. (See page 140.)
- The emergency function can be used even while driving.
- While driving, only the currently displayed items and the items on the next page can be viewed.

DESTINATION SEARCH BY "Intersection & Freeway"

There are 2 methods to search a destination by Intersection & Freeway:
 (a) Search by intersection
 (b) Search by freeway

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Destination" on the "Menu" screen.
- 3 Select "Intersection & Freeway" on the second page of the "Destination" screen.
- 4 Select the desired method.

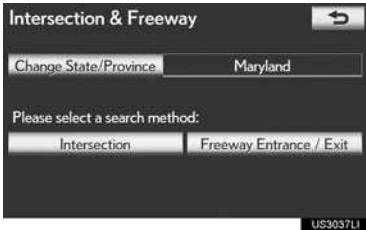


SEARCH BY "Intersection"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Intersection & Freeway" on the second page of the "Destination" screen.
- 3 Select "Intersection" on the "Intersection & Freeway" screen.
- 4 Input the name of the first intersecting street which is located near the destination to be set, and select "OK".



- 5 Select the screen button of the desired item.

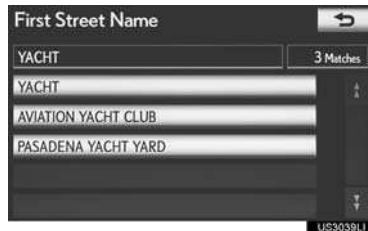

- 6 Input the name of the second intersecting street.




- 7 Select the screen button of the desired item.



- When the desired item is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

INFORMATION

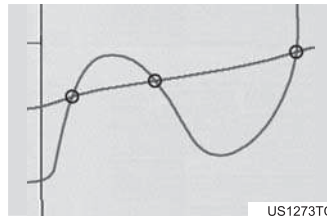

- If the same 2 streets cross at more than 1 intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "STARTING ROUTE GUIDANCE" on page 87.)

3 NAVIGATION SYSTEM


1. DESTINATION SEARCH

SEARCH BY “Freeway Entrance / Exit”


- 1 Press the “MENU” button on the Remote Touch, then select “Destination”.
- 2 Select “Intersection & Freeway” on the second page of the “Destination” screen.
- 3 Select “Freeway Entrance / Exit” on the “Intersection & Freeway” screen.
- 4 Input a freeway name.



- 5 Select the screen button of the desired freeway.

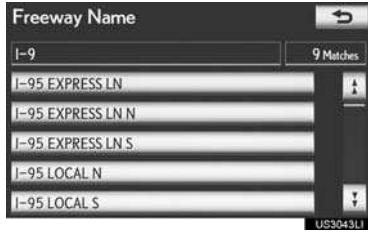

- 6 Select “Entrance” or “Exit”.

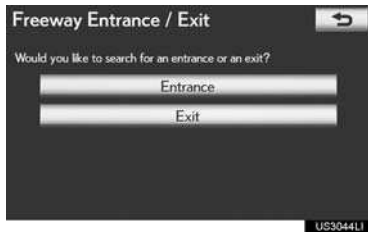

- 7 Input a freeway entrance or exit name, and select “OK”.



- 8 Select the screen button of the desired entrance or exit name.




- When the desired entrance or exit is selected, the “Confirm Destination” screen may be displayed. If “Go” is selected on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 87.)


INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).

DESTINATION SEARCH BY
"Map"

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Destination" on the "Menu" screen.
- 3 Select "Map" on the second page of the "Destination" screen.
- 4 Scroll the map to the desired point.

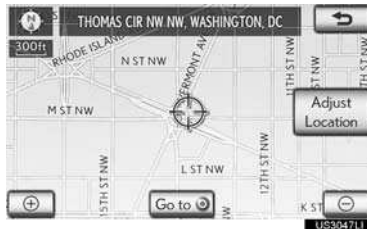


- 5 Select "Go to" .
 - The navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

INFORMATION

- Guidance starts if "OK" is selected even while driving. However, the cursor cannot be moved.

DESTINATION SEARCH BY
"Coordinates"

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Destination" on the "Menu" screen.
- 3 Select "Coordinates" on the second page of the "Destination" screen.
- 4 Input the latitude and the longitude.

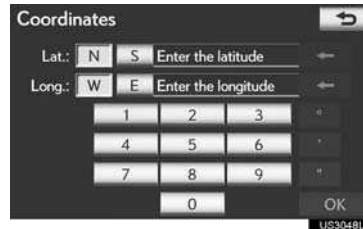

- 5 After inputting the latitude and longitude, select "OK".
 - When the desired screen button is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 87.)

DELETING SET DESTINATIONS


A set destination can be deleted.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Del.Dest."** on the "Destination" screen.
 - When more than 1 destination is set, a list will be displayed on the screen.
- 4 Select the destination to be deleted.



"Delete All": Select to delete all destinations on the list.

- 5 Select **"Yes"** to delete the destination(s).

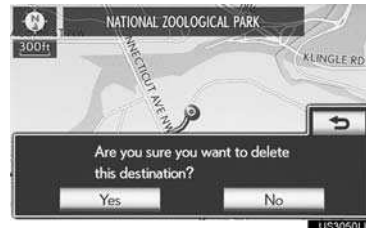

- A message appears to confirm the request to delete.
- If **"Yes"** is selected, the data cannot be recovered. If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.
- If **"No"** is selected, the previous screen will be displayed.

● Set destinations can also be deleted by selecting **"Route"**. (See "DELETING DESTINATIONS" on page 98.)

1. DESTINATION SEARCH

2. STARTING ROUTE GUIDANCE

When **“Map”** is selected on the **“Confirm Destination”** screen, the map screen will be displayed. The map location of the selected destination can be set as a destination.

- 1 Scroll the map to the desired point.



“Adjust Location”: Select to adjust the position in smaller increments.



- When an arrow facing the desired point is selected, the map scrolls in that direction.
- The scroll stops when the selection of the arrow is released.

- 2 Select **“Go to”**.

- The system starts route search and displays recommended routes.


- If a destination has already been set, **“Go to”** and **“Add to Route”** will be displayed.

“Go to”: Select to delete the existing destination(s) and set a new one.

“Add to Route”: Select to add a destination.

“Info”: If this screen button is displayed on the top of the screen, select it to view items such as name, address, position and phone number.

- 3 To start guidance, select **“OK”**.

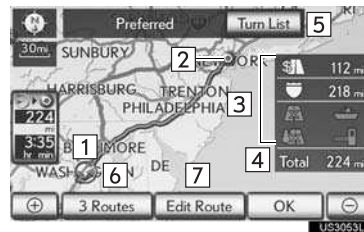

No.	Function
1	Current position
2	Destination point
3	Type of route and its distance
4	Distance of the entire route
5	Select to display a list of the turns required to reach the destination.
6	Select the desired route from 3 possible routes. (See page 88.)
7	Select to change the route. (See page 89.)

3

NAVIGATION SYSTEM

1. DESTINATION SEARCH

- Guidance can be paused or resumed. (See "PAUSING AND RESUMING GUIDANCE" on page 103.)
- If "OK" is selected until a beep sounds, demo mode will start. Press the "MAP/VOICE" button on the Remote Touch to end demo mode.

CAUTION

- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

INFORMATION


- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the point selected is set as the destination.

3 ROUTES SELECTION


1 Select "3 Routes".



2 Select "Preferred", "Alternate" or "Short".

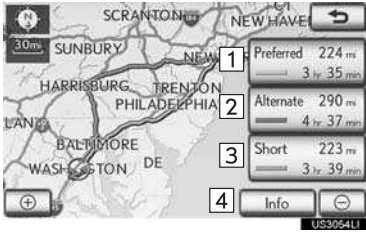

No.	Function
1	Select to display the recommended route.
2	Select to display the alternative route.
3	Select to display the route that is the shortest distance to the set destination.
4	Select to display the information shown below about each of the 3 routes.

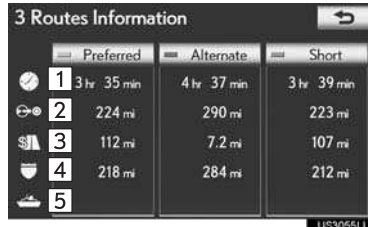

No.	Function
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Toll road
4	Freeway
5	Ferry


EDIT ROUTE

Conditions for the route to the destination can be set again.

1 Select "Edit Route".



2 This screen is displayed.

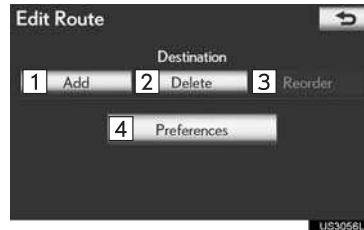

No.	Function	Page
1	Select to add destinations.	97
2	Select to delete destinations.	98
3	Select to reorder destinations.	97
4	Select to display the choices available when setting the conditions the system uses to determine the route to the destination.	101

3
NAVIGATION SYSTEM

INFORMATION

- Even if the "Freeways" indicator is dimmed, the route cannot avoid including a freeway in some cases. (See page 101.)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

2. ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN

During route guidance, various types of guidance screens can be displayed depending on conditions.

SCREEN LAYOUT



No.	Function
1	Distance to the next turn and an arrow indicating the turning direction
2	Guidance route
3	Current position
4	Distance and travel/arrival time to the destination
5	Current street name


INFORMATION

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.
- When arriving at the set destination the destination name will be displayed on the top of the screen. Selecting "Off" clears the display.

DURING FREEWAY DRIVING

During freeway driving, the freeway exit information screen will be displayed.


This screen displays the distance to the next junction/exit, or POIs in the vicinity of the freeway exit.

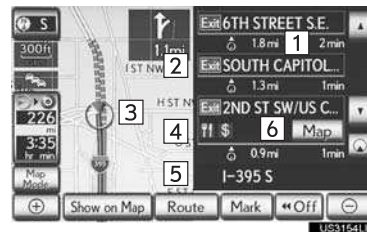

No./Icon	Function
1	Distance from the current position to the exit or junction
2	Exit number and junction name
3	Current position
4	POIs that are close to a freeway exit
5	Current street name
6	Select to display the selected map of the exit vicinity.
	Select to scroll to farther junctions or exits.
	Select to scroll to closer junctions or exits.
	Select to display the closest 3 junctions or exits.

**WHEN APPROACHING A
FREEWAY EXIT OR
JUNCTION**

When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

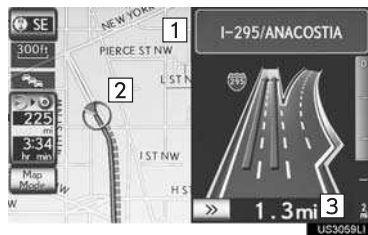


No.	Function
1	Next street name
2	Current position
3	Distance from the current position to the exit or junction

>>: Select to hide the freeway guidance screen.

- Select “Intersection”, or press the “MAP/VOICE” button on the Remote Touch, to change back to the freeway guidance screen.

**WHEN APPROACHING AN
INTERSECTION**

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.

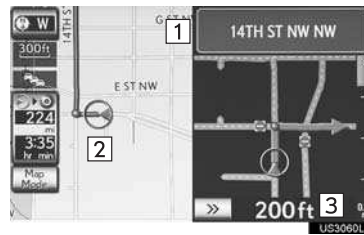

No.	Function
1	Next street name
2	Current position
3	Distance to the intersection

>>: Select to hide the intersection guidance screen.

- Select “Intersection”, or press the “MAP/VOICE” button on the Remote Touch, to change back to the intersection guidance screen.

3
NAVIGATION SYSTEM


2. ROUTE GUIDANCE

OTHER SCREENS

TURN LIST SCREEN

On this screen, the list of turns on the guidance route can be viewed.

- 1 Select "Turn List" during guidance to display the turn list.

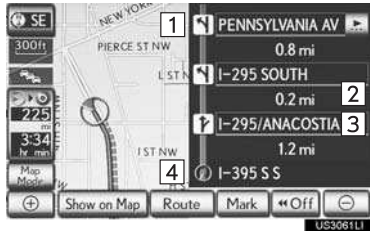


No.	Function
1	Turn direction
2	Distance between turns
3	Next street or destination name
4	Current street name

ARROW SCREEN

On this screen, information about the next turn on the guidance route can be viewed.

- 1 Select "Turn-by-Turn Arrow" during guidance to display the arrow screen.

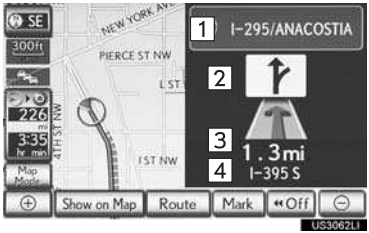


No.	Function
1	Exit number or street name
2	Turn direction
3	Distance to the next turn
4	Current street name

2. ROUTE GUIDANCE

2. TYPICAL VOICE GUIDANCE PROMPTS


As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.

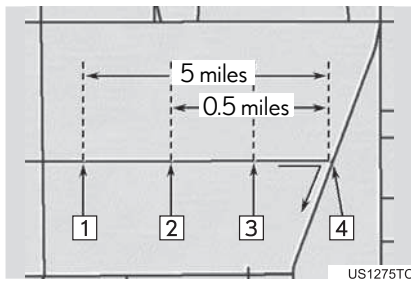

No.	Voice guidance
1	"Proceed about 5 miles to Main street."
2	"In half of a mile, right turn onto Main street."
3	"Next right."/"Right turn ahead."
4	(Beep sound only)

INFORMATION

- The street names may not be pronounced correctly or clearly due to the text-to-speech function.
- On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver the vehicle.

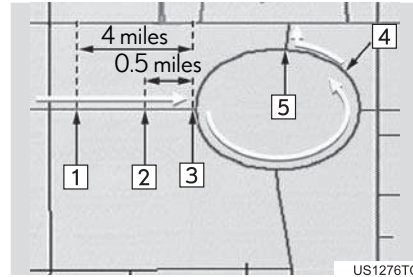


No.	Voice guidance
1	"Proceed about 4 miles to the traffic circle."
2	"In half of a mile, traffic circle ahead and then the 3rd exit onto Main street."
3	"The 3rd exit ahead."
4	"The exit ahead."
5	(Beep sound only)


3

NAVIGATION SYSTEM

2. ROUTE GUIDANCE

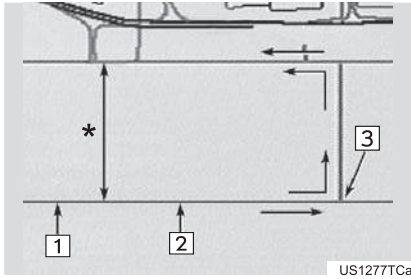

US1277TCa

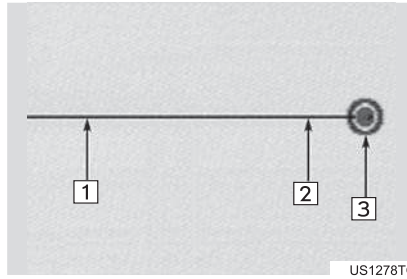

US1278TC

*: The system indicates a U-turn if the distance between 2 one-way roads (of opposite directions) is less than 50 ft. (15 m) in residential areas or 164 ft. (50 m) in non-residential areas.

● The system announces the approach to the final destination.

No.	Voice guidance
1	"In half of a mile, make a legal U-turn."
2	"Make a legal U-turn ahead."
3	(Beep sound only)

No.	Voice guidance
1	"In half of a mile, your destination is ahead."
2	"Your destination is ahead."
3	"You have arrived at your destination. The route guidance is now finished."


- If a voice guidance command cannot be heard, press the "MAP/VOICE" button on the Remote Touch to hear it again.
- To adjust the voice guidance volume, see "VOICE VOLUME" on page 63.

INFORMATION

- If the system cannot determine the current position correctly (in cases of poor GPS signal reception), the voice guidance may be early or late.

■ ROUTES INCLUDING IPD ROADS

Even when on IPD roads (roads that are not completely digitized in our database), you will be guided along the searched route via voice guidance.

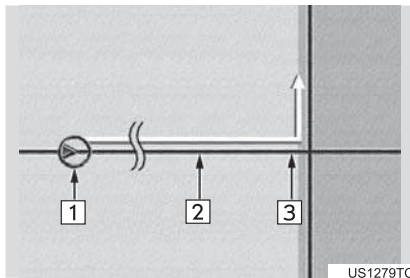

- After it has made a route calculation, the system will advise the user whether IPD roads are included in the route or not.
- The portion of the route that covers IPD roads is indicated by light blue.

No.	Voice guidance
1	"On the way to your destination, there will be roads with incomplete data."
2	"In half of a mile, left turn."
3	"Next left. Upcoming roads have incomplete data. Please carefully observe the local traffic restrictions, as they may not match the navigation guidance."

- IPD roads are roads that are not yet completely digitized in our database. However, their geometry, name and administrative coding are already known.

⚠ CAUTION

- Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads. The route guidance may not have the updated information such as the direction of a one way street.

2. ROUTE GUIDANCE

3. DISTANCE AND TIME TO DESTINATION

When the vehicle is on the guidance route, the distance and the estimated travel/arrival time to the destination are displayed. When the vehicle is not on the guidance route, the distance and direction of the destination are displayed.

When driving on the guidance route with more than 1 destination set, the distance and estimated travel/arrival time from the current position to each destination are displayed.

- 1 Select the screen button indicated by the arrow.



- 2 Select the number screen button to display the desired destination.



- The distance, estimated travel time and estimated arrival time from the current position to the selected destination are displayed.

Icon	Function
	Estimated travel time is displayed.
	Estimated arrival time is displayed.
	Select to switch to estimated arrival time.
	Select to switch to estimated travel time.
	Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

INFORMATION

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the set vehicle speed information. (See "DRIVING SPEEDS" on page 127.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.

2. ROUTE GUIDANCE

4. SETTING AND DELETING DESTINATIONS


ADDING DESTINATIONS

Destinations can be added and routes can be searched again.


- 1 Select "Route".



- 2 Select "Add".

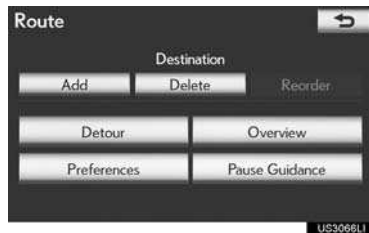


- 3 Input an additional destination in the same way as a destination search. (See "DESTINATION SEARCH" on page 68.)
- 4 Select the desired "Add Destination Here" to insert the new destination into the route.

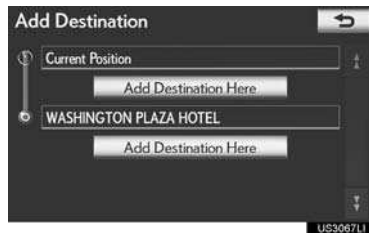


REORDERING DESTINATIONS

When more than 1 destination is set, the arrival order of the destinations can be changed.


- 1 Select "Route".

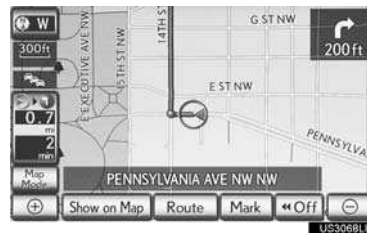

- 2 Select "Reorder".

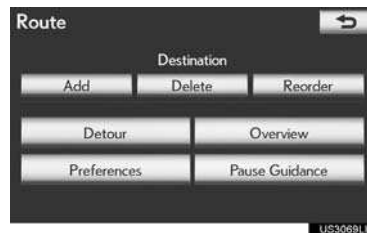

- 3 Select the desired destination and select "Move Up" or "Move Down" to change the arrival order.

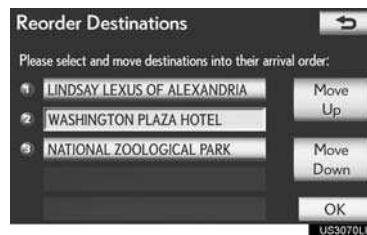

- 4 After selecting the destinations, select "OK".

- The system searches for the guidance route again, and displays the entire route.

2. ROUTE GUIDANCE


DELETING DESTINATIONS

A set destination can be deleted.

1 Select "Route".



2 Select "Delete".

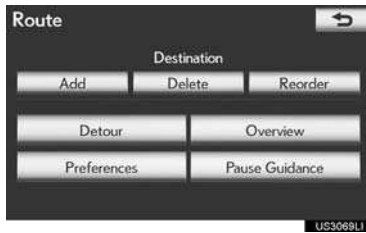

- When more than 1 destination is set, a list will be displayed on the screen.

3 Select the destination to be deleted.



"Delete All": Select to delete all destinations on the list.

- A message appears to confirm the request to delete.

4 Select "Yes" to delete the destination(s).

- If **"Yes"** is selected, the data cannot be recovered. If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.
- If **"No"** is selected, the previous screen will be displayed.


2. ROUTE GUIDANCE

5. SETTING ROUTE


DETOUR SETTING

While the route guidance is operating, the route can be changed to detour around a section of the route where a delay is caused by road repairs, or an accident, etc.


1 Select "Route".

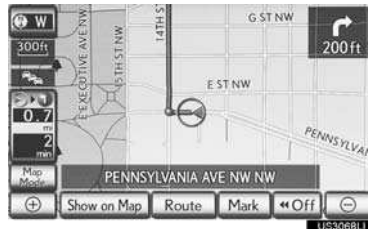

2 Select "Detour".

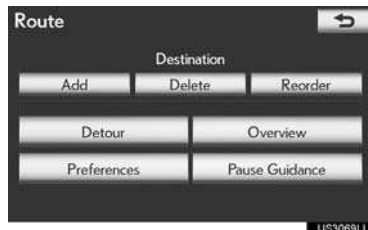

3 Select a screen button to select the desired detour distance.

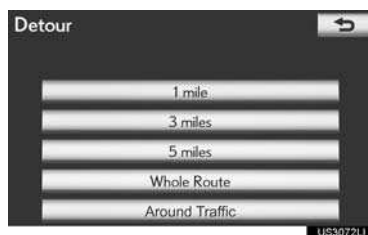

"1 mile (km)", "3 miles (km)" or "5 miles (km)": Select one of these screen buttons to start the detour process. After detouring, the system returns to the original guidance route.

"Whole Route": Select to make the system calculate an entire new route to the destination.

"Around Traffic": Select to make the system search for the route based on the traffic congestion information received from XM NavTraffic®. For details, see "XM NavTraffic®" on page 341.

INFORMATION



● This picture shows an example of how the system would guide around a delay caused by a traffic jam.

1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.

2 This route indicates the detour suggested by the system.

● When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).

● The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

3

NAVIGATION SYSTEM


2. ROUTE GUIDANCE

ROUTE OVERVIEW


- 1 Select "Route".



- 2 Select "Overview".

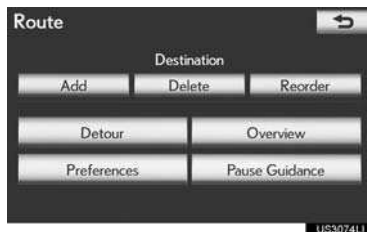

- 3 The entire route from the current position to the destination is displayed.

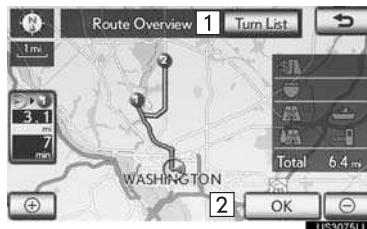

No.	Function
1	Select to display a list of the turns required to reach the destination.
2	Select to start guidance.

TURN LIST

- 1 Select or to skip to the next page of the list of roads. Select and hold or to scroll through the list of roads.



: This mark indicates the direction in which you should turn at the intersection.

"Map": The selected point is displayed on the map screen.



INFORMATION


- However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

ROUTE PREFERENCE


TO SELECT ROUTE TYPE

The Preferred, Short or Alternative route can be selected.


1 Select "Route".

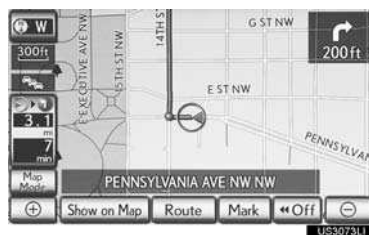

2 Select "Preferences".

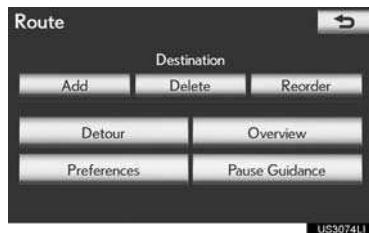

3 Select "Preferred", "Short" or "Alternate" and select "OK".

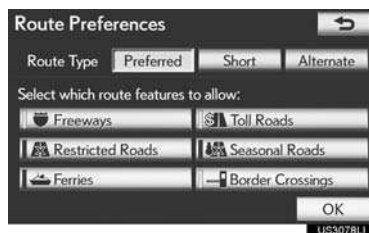

4 The entire route from the starting point to the destination is displayed.



"OK": Select to start guidance.

"Edit Route": Select to change a route. (See page 89.)

3 NAVIGATION SYSTEM

TO SELECT ROUTE FEATURES


A number of choices are available when setting the conditions the system uses to determine the route to the destination.

1 Select "Route".




2. ROUTE GUIDANCE

- 2 Select **“Preferences”** to display conditions that can be selected when the system determines the route to the destination.

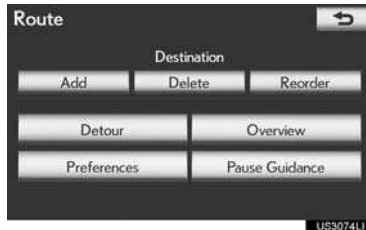

- 3 Select the desired route preferences.

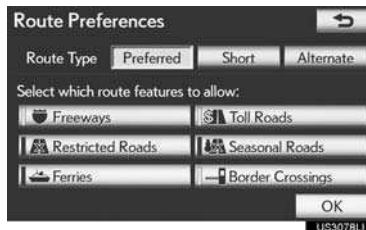

- The system will avoid using routes that include items whose indicators are off.
- 4 After selecting the desired route preference, select **“OK”**.

STARTING ROUTE FROM ADJACENT ROAD


The route guidance can be started from an adjacent road.

(e.g. When route guidance is set on the freeway, but the vehicle is driven parallel along the freeway.)


- 1 Select **“Route”**.



- 2 Select **“Preferences”**.

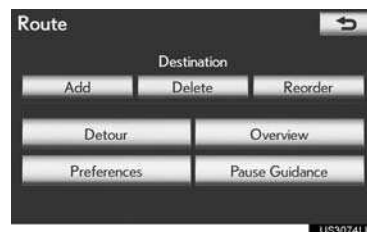

- 3 Select **“Start from Adjacent Road”**.

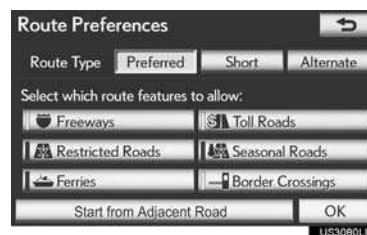

INFORMATION

- When there is no adjacent road, this screen button will not be displayed.


PAUSING AND RESUMING GUIDANCE

TO PAUSE GUIDANCE

1 Select "Route".



2 Select "Pause Guidance".

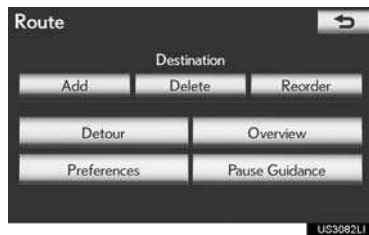

- The screen will return to the current position map without route guidance.

INFORMATION

- Without route guidance, "Pause Guidance" cannot be used.

TO RESUME GUIDANCE

1 Select "Route".



2 Select "Resume Guidance".



- The map screen, with the current position displayed, will be returned to.

3 NAVIGATION SYSTEM

SHOW ON MAP

DISPLAY POI ICONS

POI icons such as gas stations and restaurants can be displayed on the map screen. Their location can also be set as a destination and used for route guidance.


1 Select "Show on Map".



2 Select "Select POI" to display a particular type of POI icon on the screen.



- When the POI icons to be displayed on the map screen have already been set, "Change POI" is displayed.

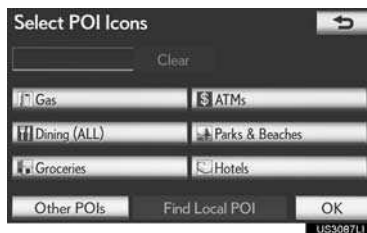


- A screen with a limited choice of POI will be displayed. (To change the displayed POI list, see page 129.)

SELECTING POI ICONS TO BE DISPLAYED

Up to 5 categories of icons can be displayed on the map screen.

1 Select the desired POIs category to display POI location icons on the map screen.

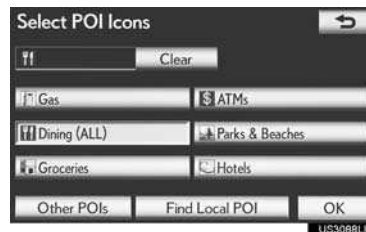

- By selecting the desired POI category and then selecting "OK", the selected POI icons are displayed on the map screen.

- To turn off the POI icons on the map screen, select "Clear".


"Other POIs": Select to display other POI categories if the desired POIs cannot be found on the limited choice screen.

"Find Local POI": Select to search for the nearest POIs. Then select one of the categories. The system will list the points within 20 miles (32 km). (See page 105.)


2 Select "Other POIs" on the "Select POI Icons" screen.

- When a POI category is selected from either the limited list or the complete list, the icons of those locations will be displayed on the map screen.

3 Select the desired POI categories.

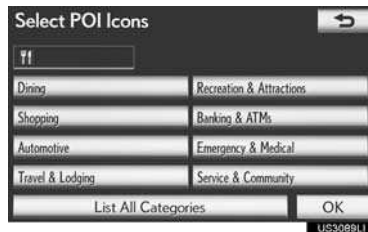

- The selected category's icon will appear on the top left of the screen.
- By selecting the desired POI category and then selecting "OK", the selected POI icons are displayed on the map screen.
- If the desired POI category is not on the screen, select "List All Categories" to list all POI categories.

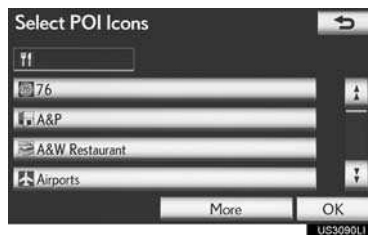


- Select the desired POI categories from the list.
 - The selected category icon appears on the top left of the screen.
 - By selecting the desired POI category and then selecting "OK", the selected POI icons are displayed on the map screen.
 - To return to the POI category selection screen, select "More".

TO DISPLAY THE LOCAL POI LIST

Points of Interest that are within 20 miles (32 km) of the current position will be listed from among the selected categories.

1 Select "Find Local POI".

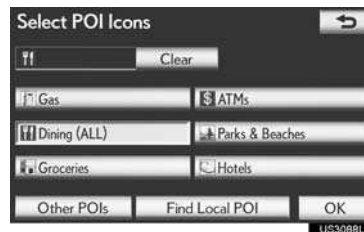

2 Select the screen button of the desired POI.



- The selected POIs are displayed on the map screen.
- "Near...": Select to search for POIs near the current position or along the route.

3 NAVIGATION SYSTEM

2. ROUTE GUIDANCE



No.	Function
1	Select to display the list of POIs near the current position.
2	Select to display the list of POIs along the route.

TO SET A POI AS A DESTINATION

One of the Point of Interest icons can be selected on the map screen as a destination and can be used for route guidance.

- 1 Directly select the desired POI icon to set it as a destination.




- The map will shift so that the icon is centered on the screen and overlaps with the cursor. At this time, the distance from the current position is displayed on the screen. The distance shown is measured as a straight line from the current position to the POI.

- 2 When the desired POI overlaps with the cursor, select **“Enter”**.


- The screen changes and displays the map location of the selected destination and route preference. (See **“STARTING ROUTE GUIDANCE”** on page 87.)

TO HIDE POI ICONS

- 1 Select **“Show on Map”**.

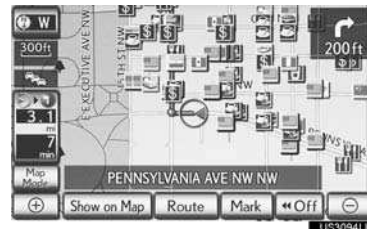

- 2 Select **“POI Icons”**.

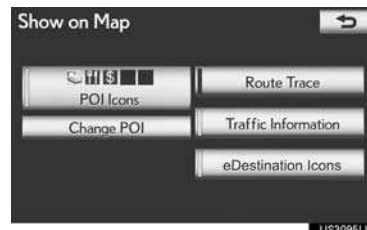

- The **“POI Icons”** indicator is dimmed.
- The map screen will be displayed with the POI icons hidden.
- To display the POI icons again, select **“POI Icons”** on the **“Show on Map”** screen.

ROUTE TRACE

Up to 124 miles (200 km) of the traveled route can be stored and retraced on the display.

INFORMATION

- This feature is available when the map scale is more than 30 miles (50 km).

TO START RECORDING THE ROUTE TRACE

- 1 Select "Show on Map".



- 2 Select "Route Trace".



- The "Route Trace" indicator is highlighted.

TO STOP RECORDING THE ROUTE TRACE

- 1 Select "Show on Map".



- 2 Select "Route Trace".



- Selecting "Yes" stops recording and the route trace remains displayed on the screen.
- Selecting "No" stops recording and the route trace is erased.

3. ADDRESS BOOK


1. NAVIGATION SETTINGS

Points or areas on the map can be registered.

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 69, and "DESTINATION SEARCH BY "Address Book"" on page 81.)

Registered areas to avoid, will be avoided when the system searches for a route.

- 1 Press the "MENU" button on the Remote Touch.

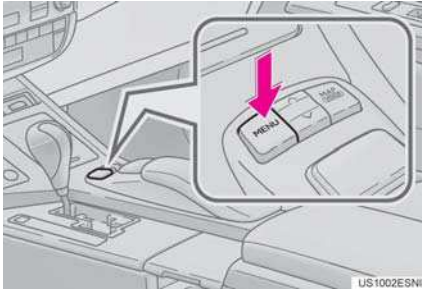


- 2 Select "Setup".



- 3 Select "Navigation".



- 4 Select the desired items to be set.

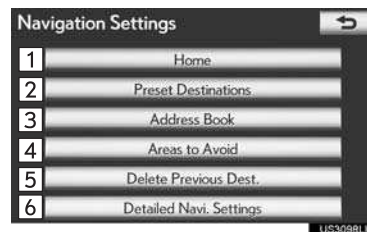


- On this screen, the following operations can be performed:

No.	Function	Page
1	Select to set home.	109
2	Select to set preset destinations.	111
3	Select to set the address book.	114
4	Select to set areas to avoid.	119
5	Select to delete previous destinations.	124
6	Select to set detailed navigation settings.	125

SETTING UP THE "Home"

If home has been registered, that information can be recalled by selecting **"Go Home"** on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 69.)

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Home"**.

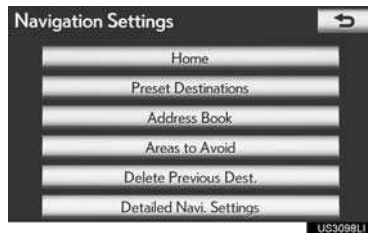

- 5 Select the desired screen button.



No.	Function	Page
1	Registering home	109
2	Editing home	110
3	Deleting home	111


3 NAVIGATION SYSTEM

REGISTERING HOME

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Home"** on the "Navigation Settings" screen.
- 4 Select **"Set Home"**.



- 5 Select the desired screen button and enter the location in the same way as for a destination search. (See "DESTINATION SEARCH" on page 68.)

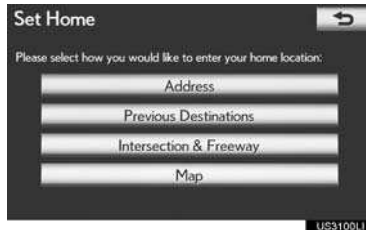

- When registration of home is completed, the "Edit Home" screen will be displayed.

- 6 Select "OK".


• To edit registered information, see "EDITING HOME" on page 110.

EDITING HOME

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Home" on the "Navigation Settings" screen.
- 4 Select "Edit".



- 5 Select "Edit" next to the item to be edited.

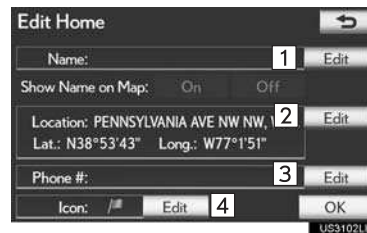

No.	Function	Page
1	Select to edit the home name. The name can be displayed on the map.	117
2	Select to edit location information.	117
3	Select to edit the phone number.	118
4	Select to change the icon to be displayed on the map.	116

"Show Name on Map": The name of a home can be set to be displayed on the map by selecting "On" or "Off". (See page 117.)

- 6 Select "OK".

DELETING HOME

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Home"** on the "Navigation Settings" screen.
- 4 Select **"Delete"**.




- 5 Select **"Yes"** to delete home and select **"No"** to cancel the deletion.

SETTING UP THE "Preset Destinations"

If preset destination has been registered, that information can be recalled by using **"Preset Destinations"** on the "Navigation Settings" screen. (See "DESTINATION SEARCH BY PRE-SET DESTINATIONS" on page 69.)

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Preset Destinations"**.

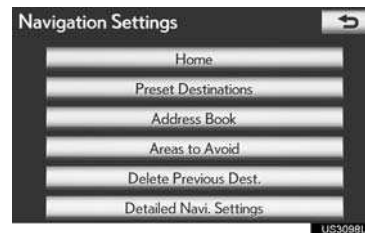

3

NAVIGATION SYSTEM

- 5 Select the desired screen button.




No.	Function	Page
1	Registering a preset destination	112
2	Editing a preset destination	113
3	Deleting a preset destination	113

REGISTERING PRESET DESTINATIONS


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Preset Destinations" on the "Navigation Settings" screen.
- 4 Select "Set".



- 5 Select the desired screen button and enter the location in the same way as for a destination search. (See "DESTINATION SEARCH" on page 68.)

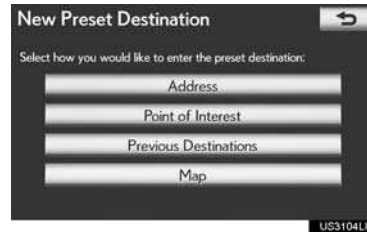

- 6 Select a position for this preset destination.

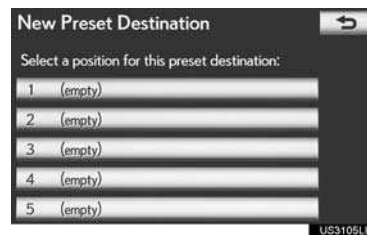

- When registration of a preset destination is completed, the "Edit Preset Destination" screen will be displayed.

- 7 Select "OK".

- To edit registered information, see "EDITING PRESET DESTINATIONS" on page 113.

EDITING PRESET DESTINATIONS


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Preset Destinations" on the "Navigation Settings" screen.
- 4 Select "Edit".



- 5 Select the screen button of the desired preset destination.



- 6 Select "Edit" next to the item to be edited.

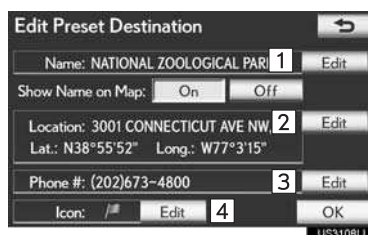

No.	Function	Page
1	Select to edit the preset destination name. The name can be displayed on the map.	117
2	Select to edit location information.	117
3	Select to edit the phone number.	118
4	Select to change the icon to be displayed on the map.	116

"Show Name on Map": The name of a preset destination can be set to be displayed on the map by selecting "On" or "Off". (See page 117.)

- 7 Select "OK".

DELETING PRESET DESTINATIONS

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Preset Destinations" on the "Navigation Settings" screen.

3. ADDRESS BOOK

4 Select "Delete".



5 Select the preset destination to be deleted.



Screen button	Function
"Select All"	Select all preset destinations.
"Unselect All"	Select to cancel the "Select All" function.


6 Select "Delete".

7 Select "Yes" to delete the preset destination and select "No" to cancel the deletion.


SETTING UP THE "Address Book"

Points or areas on the map can be registered.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Navigation" on the "Setup" screen.
- 4 Select "Address Book".

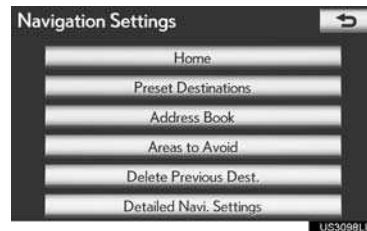


5 Select the desired screen button.

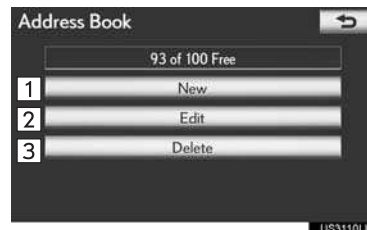


No.	Function	Page
1	Registering address book entries	115
2	Editing address book entries	115
3	Deleting address book entries	118

REGISTERING ADDRESS BOOK ENTRIES

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Address Book" on the "Navigation Settings" screen.
- 4 Select "New".

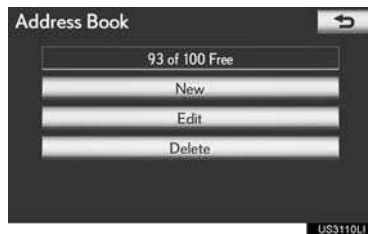

- 5 Select the desired screen button and enter the location in the same way as for a destination search. (See "DESTINATION SEARCH" on page 68.)

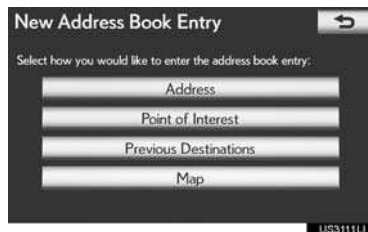

- After the address book entry has been registered, the "Edit Address Book Entry" screen will be displayed.

- 6 Select "OK".

- To edit registered information, see "EDITING ADDRESS BOOK ENTRIES" on page 115.


INFORMATION

- Up to 100 address book entries can be registered.


EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Address Book" on the "Navigation Settings" screen.
- 4 Select "Edit".

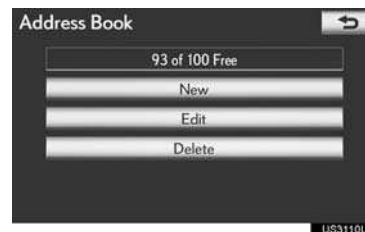


- 5 Select the screen button of the desired address book entry.

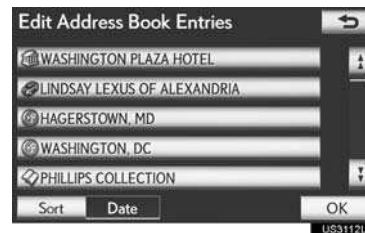

3. ADDRESS BOOK

- 6 Select "Edit" next to the item to be edited.

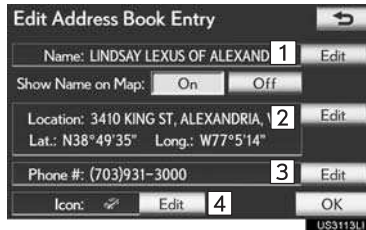


No.	Function	Page
1	Select to edit the address book entry name. The name can be displayed on the map.	117
2	Select to edit location information.	117
3	Select to edit the phone number.	118
4	Select to change the icon to be displayed on the map.	116

"Show Name on Map": The name of an address book entry can be set to be displayed on the map by selecting "On" or "Off". (See page 117.)


- 7 Select "OK".

■ TO CHANGE "Icon"

- 1 Select "Edit".

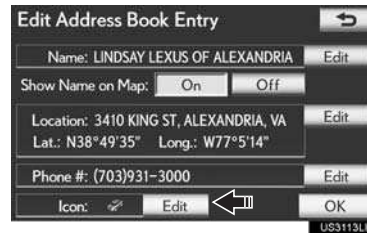

- 2 Select the desired icon.

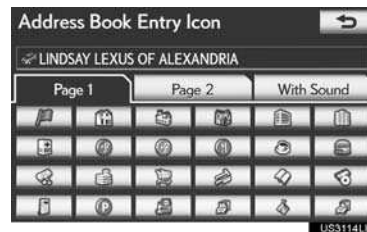


- Change pages by selecting the "Page 1", "Page 2" or "With Sound" tab.



■ SOUND ICONS

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

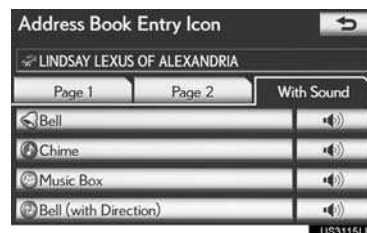- 1 Select the "With Sound" tab on the "Address Book Entry Icon" screen.
- 2 Select the desired sound icon.



- The next screen appears when "Bell (with Direction)" is selected.

- 3 Select either  or  to adjust the direction. Then select "OK".




INFORMATION


- The bell sounds only when the vehicle approaches this point in the direction that has been set.

TO CHANGE "Name"

- 1 Select "Edit".

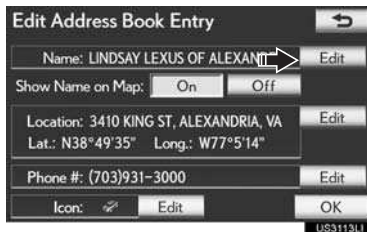


- 2 Enter the name using the alphanumeric keys.

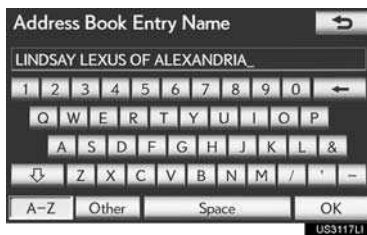

- Up to 70 characters can be entered.
- 3 Select "OK".
- The previous screen will be displayed.


DISPLAYING ADDRESS BOOK ENTRY NAMES


- 1 Select "On" to display the name on the map and select "Off" to not display it.

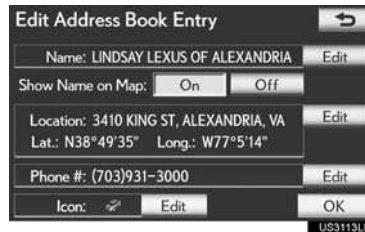

TO CHANGE "Location"

- 1 Select "Edit".

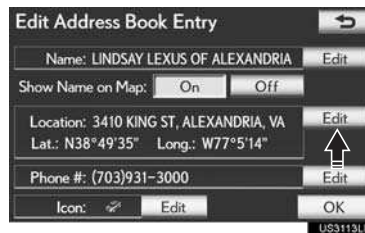

- 2 Select one of the 8 directional screen buttons to move the cursor  to the desired point on the map.



- 3 Select "OK".


- The previous screen will be displayed.

3 NAVIGATION SYSTEM


3. ADDRESS BOOK

■ TO CHANGE “Phone #” (PHONE NUMBER)

- 1 Select “Edit”.

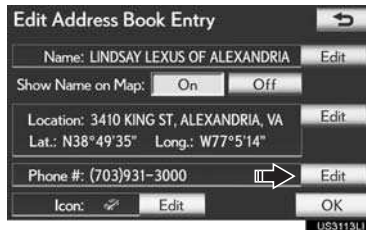

- 2 Enter the number using the number keys.

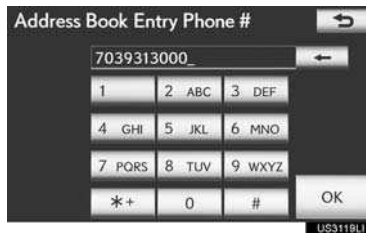


- 3 Select “OK”.

- The previous screen will be displayed.


DELETING ADDRESS BOOK ENTRIES

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Navigation” on the “Setup” screen.
- 3 Select “Address Book” on the “Navigation Settings” screen.

- 4 Select “Delete”.

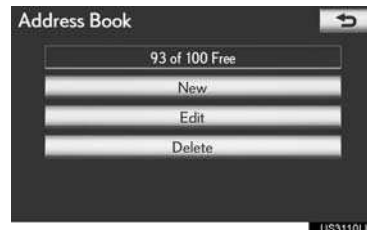

- 5 Select the address to be deleted.

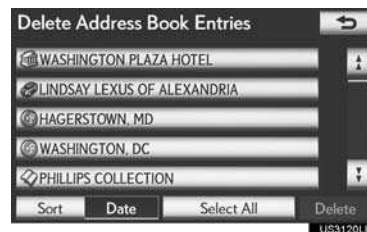

Screen button	Function
“Select All”	Select all registered addresses.
“Unselect All”	Select to cancel the “Select All” function.


- 6 Select “Delete”.

- 7 Select “Yes” to delete the address book entries and select “No” to cancel the deletion.

SETTING UP THE "Areas to Avoid"

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as areas to avoid.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Navigation" on the "Setup" screen.
- 4 Select "Areas to Avoid".

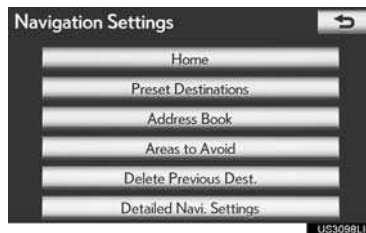


- 5 Select the desired screen button.




No.	Function	Page
1	Registering areas to avoid	119
2	Editing areas to avoid	120
3	Deleting areas to avoid	123

REGISTERING AREAS TO AVOID


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Areas to Avoid" on the "Navigation Settings" screen.
- 4 Select "New".

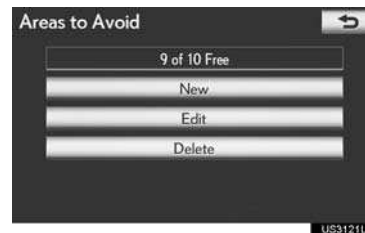

- 5 Select the desired screen button and enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “DESTINATION SEARCH” on page 68.)

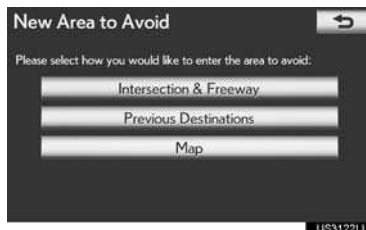

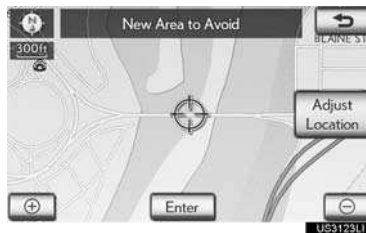


- 6 Scroll the map to the desired point.



“Adjust Location”: Select to adjust the position in smaller increments.

- 7 Select “Enter”.

- 8 Select either  or  to change the size of the area to be avoided.

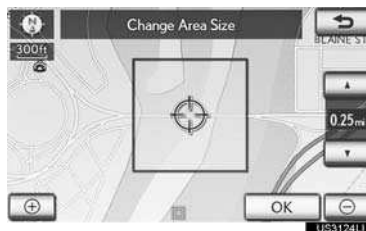

- 9 Select “OK”.

- When registration of an area to avoid is completed, the “Area to Avoid” screen will be displayed.

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

EDITING AREA TO AVOID

The name, location and/or area size of a registered area can be edited.


- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Navigation” on the “Setup” screen.
- 3 Select “Areas to Avoid” on the “Navigation Settings” screen.
- 4 Select “Edit”.



- 5 Select the area to be avoided.



- 6 Select "Edit" next to the item to be edited.

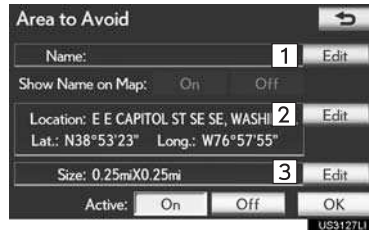

No.	Function	Page
1	Select to edit the name of the area to avoid. The name can be displayed on the map.	121
2	Select to edit area location.	122
3	Select to edit area size.	122


"Show Name on Map": The name of an area to be avoided can be set to be displayed on the map by selecting "On" or "Off". (See page 121.)

"Active": The area to avoid feature can be set to "On" or "Off".

- 7 Select "OK".

■ TO CHANGE "Name"

- 1 Select "Edit".

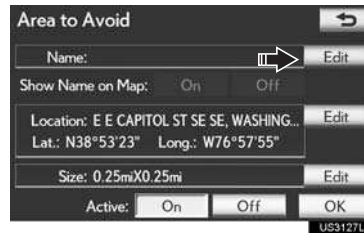

- 2 Enter the name using the alphanumeric keys.




- Up to 70 characters can be entered.

- 3 Select "OK".

- The previous screen will be displayed.

■ DISPLAYING NAMES OF AREAS TO BE AVOIDED

- 1 Select "On", next to "Show Name on Map", to display the name of an area to be avoided on the map. Select "Off" not to display it.

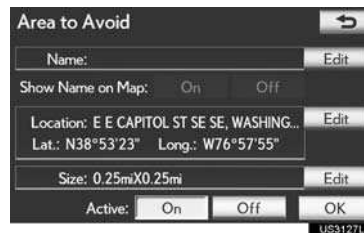


3 NAVIGATION SYSTEM

3. ADDRESS BOOK

■ TO CHANGE “Location”

1 Select “Edit”.

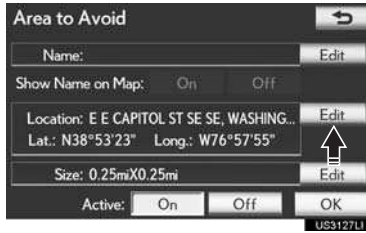

2 Select one of the 8 directional screen buttons to move the cursor to the desired point on the map.




3 Select “OK”.

- The previous screen will be displayed.

■ TO CHANGE “Size”

1 Select “Edit”.

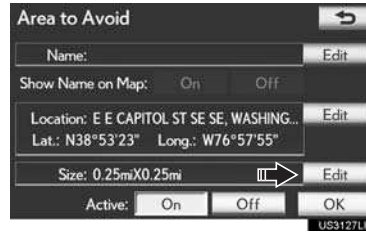

2 Select either ▲ or ▼ to change the size of the area to be avoided.



3 Select “OK”.

- The previous screen will be displayed.

DELETING AREAS TO AVOID

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the **"Setup"** screen.
- 3 Select **"Areas to Avoid"** on the **"Navigation Settings"** screen.
- 4 Select **"Delete"**.
- 5 Select the area to be deleted.
- 6 Select **"Delete"**.
- 7 Select **"Yes"** to delete the area(s) and select **"No"** to cancel the deletion.



- 5 Select the area to be deleted.




Screen button	Function
"Select All"	Select all registered areas to avoid.
"Unselect All"	Select to cancel the "Select All" function.


DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Delete Previous Dest."**.

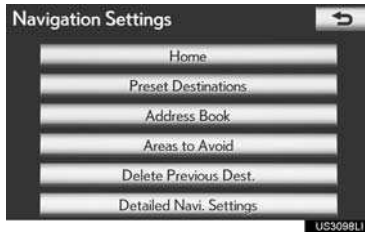

- 5 Select the previous destination to be deleted.

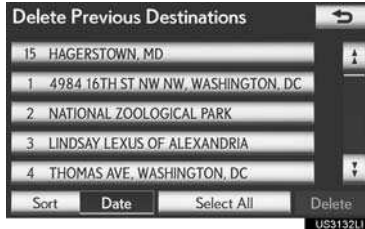

Screen button	Function
"Select All"	Select all previous destinations.
"Unselect All"	Select to cancel the "Select All" function.


- 6 Select **"Delete"**.
- 7 Select **"Yes"** to delete the destination(s) and select **"No"** to cancel the deletion.

4. SETUP

1. DETAILED NAVIGATION SETTINGS

Settings are available for driving speeds, favorite POI categories, automatic screen change, "◀◀ Off" function, etc.

- 1 Press the "MENU" button on the Remote Touch.

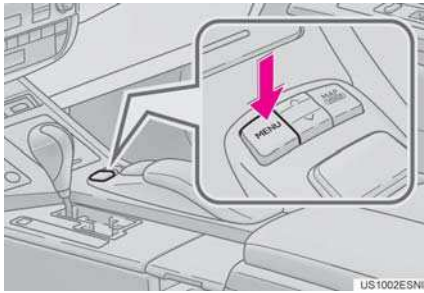


- 2 Select "Setup".




- 3 Select "Navigation".



- 4 Select "Detailed Navi. Settings".


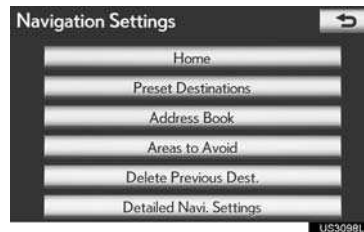


- 5 Select the items to be set.

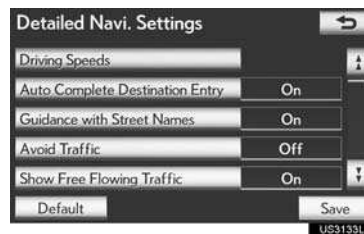

- 6 Select "Save".

SCREENS FOR NAVIGATION SETTINGS

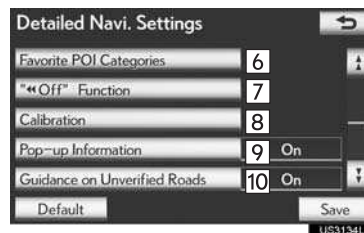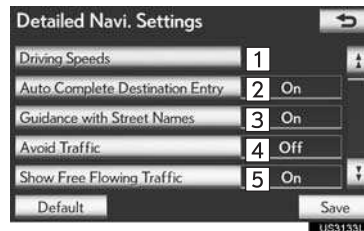

- On this screen, the following functions can be performed:

3 NAVIGATION SYSTEM

4. SETUP

No.	Function
1	Select to set the average cruising speed. (See "DRIVING SPEEDS" on page 127.)
2	Select to set the automatic input function to "On" or "Off".
3	Select to set the voice guidance for the next street name to "On" or "Off" during route guidance.
4	Select to set the automatic reroute of the guidance route to avoid heavy congestion to "On" or "Off". (See "AUTO AVOID TRAFFIC" on page 127.)
5	Select to set the indication of freely flowing traffic by the arrow to "On" or "Off". (See "SHOW FREE FLOWING TRAFFIC" on page 128.)
6	Select to set displayed POI icon categories. (See "POI CATEGORY CHANGE (SELECT POI ICONS)" on page 129.)


No.	Function
7	Select to set screen buttons to be displayed on the map screen when "◀◀ Off" is selected. (See "SCREEN LAYOUT FUNCTION (◀◀ Off Function)" on page 130.)
8	Select to adjust the current position mark manually. Miscalculation of the distance caused by tire replacement can also be adjusted. (See "CURRENT POSITION/TIRE CHANGE CALIBRATION" on page 130.)
9	Select to set the display of pop-up information to "On" or "Off". (See "POP-UP INFORMATION" on page 132.)
10	Select to set IPD road guidance to "On" or "Off". (For information on IPD roads, see page 95.)

- To reset all setup items, select "Default".


DRIVING SPEEDS

The speed that is used for the calculation of the estimated travel time and estimated arrival time can be set.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Driving Speeds".

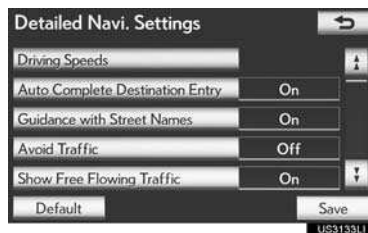

- 5 Select "<" or ">" to set the average vehicle speeds for "Residential", "Main Streets" and "Freeways".

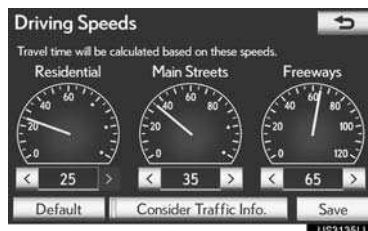

- To set the default speeds, select "Default".
- To use settings based on traffic information, select "Consider Traffic Info.".

- 6 After setting of the desired speeds is completed, select "Save".

INFORMATION

- The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.
- The time shown on the screen may vary greatly depending on progress along the route, which may be affected by conditions such as traffic jams and construction work.
- Up to 99 hours 59 minutes can be displayed.


3

NAVIGATION SYSTEM

AUTO AVOID TRAFFIC

The guidance route automatically changes to another route to avoid heavy congestion when "Avoid Traffic" is turned on.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Avoid Traffic".

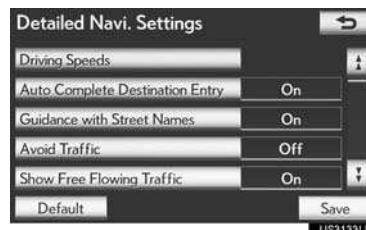

4. SETUP

5 Select "On" or "Off".

6 Select "Save".

- When congestion information about the guidance route has been received, a screen will appear to ask if it is desirable to reroute to avoid the congestion.
- Select "Yes" to reroute. Another route to avoid the congestion will appear.
- Select "No" if it is not desirable to reroute.


INFORMATION

- When the "Traffic Information" indicator is dimmed, "Avoid Traffic", "Traffic Incident Warning" and "Show Free Flowing Traffic" will not operate. (See page 342.)

SHOW FREE FLOWING TRAFFIC

Free flowing traffic can be shown by an arrow when "Show Free Flowing Traffic" is turned on.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Show Free Flowing Traffic".

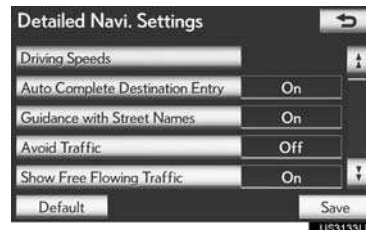

5 Select "On" or "Off".

6 Select "Save".


INFORMATION

- When the "Traffic Information" indicator is dimmed, "Avoid Traffic", "Traffic Incident Warning" and "Show Free Flowing Traffic" will not operate. (See page 342.)


POI CATEGORY CHANGE (SELECT POI ICONS)

Select up to 6 POI icons to be displayed on the map screen.


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Favorite POI Categories".

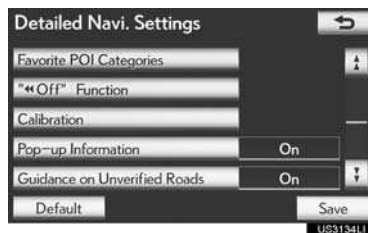

- 5 Select the category to be changed.

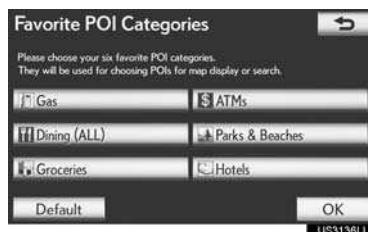


- 6 Select the desired group.

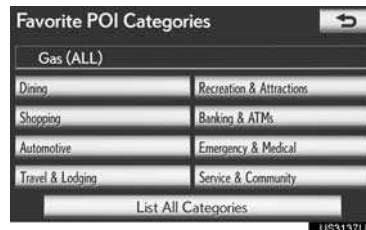

- If the desired POI category is not on the screen, select "List All Categories" to list all POI categories.

- 7 Select the desired category.

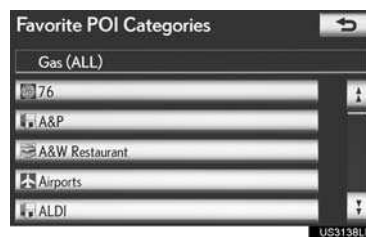

- The screen returns to the "Favorite POI Categories" screen.

- 8 Select "OK".

3


NAVIGATION SYSTEM

4. SETUP

SCREEN LAYOUT FUNCTION ("◀◀Off" Function)

Each screen button and current street name on the map screen can be displayed or hidden.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "◀◀Off" Function".

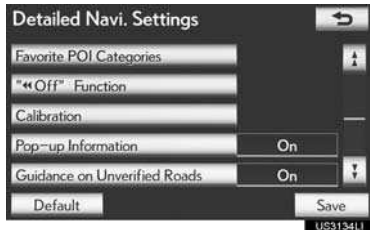

- 5 Select the screen buttons to be turned off. The selected screen buttons will be dimmed.




- To set the setting as a default, select "Default".
- 6 Select "OK".
 - The previous screen will be displayed.
 - 7 Select "Save".


CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Calibration".

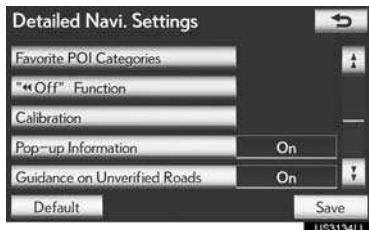

- 5 Select the desired screen button.

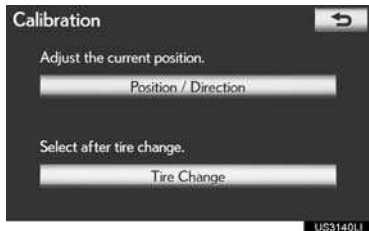


- For additional information on the accuracy of a current position, see "LIMITATIONS OF THE NAVIGATION SYSTEM" on page 139.


POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Select "Position / Direction".

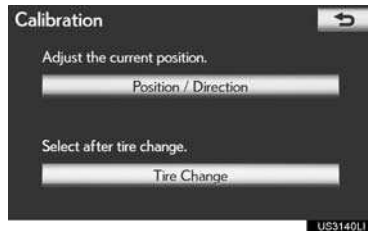


- 2 Select one of the 8 directional screen buttons to move the cursor to the desired point on the map.

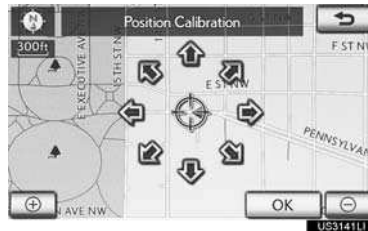

- 3 Select "OK".

- 4 Select either [left arrow] or [right arrow] to adjust the direction of the current position mark.

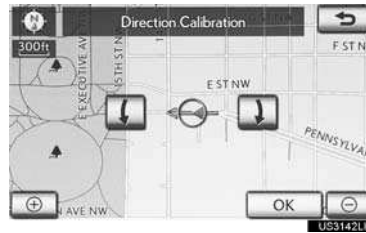


- 5 Select "OK".

- The map will be displayed.

TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

- 1 To perform the distance calibration procedure, select "Tire Change".

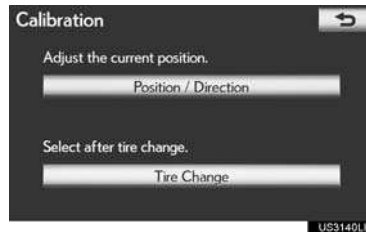

- The message appears and the quick distance calibration is automatically started. A few seconds later, a map will be displayed.

3 NAVIGATION SYSTEM

4. SETUP


INFORMATION

- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

POP-UP INFORMATION


When **“Pop-up information”** is turned on, pop-up information will be displayed.

- 1 Press the **“MENU”** button on the Remote Touch, then select **“Setup”**.
- 2 Select **“Navigation”** on the **“Setup”** screen.
- 3 Select **“Detailed Navi. Settings”** on the **“Navigation Settings”** screen.
- 4 Select **“Pop-up Information”**.

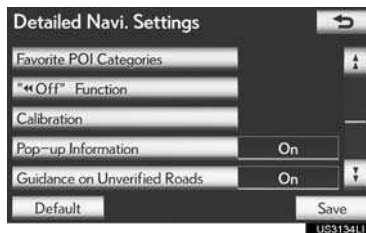

- 5 Select **“On”** or **“Off”**.
 - 6 Select **“Save”**.
- When **“Pop-up Information”** is turned off, the following messages will not be displayed.

- ▶ This message appears when the map scale is over 0.5 miles (800 m).

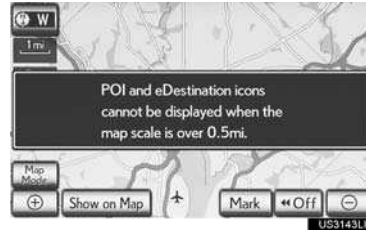

- ▶ This message appears when the map is switched to dual map screen mode.




4. SETUP

2. VEHICLE SETTINGS


MAINTENANCE

When the navigation system is turned on, the "Maintenance Reminder" screen displays when it is time to replace a part or certain components. (See page 32.)

- 1 Press the "MENU" button on the Remote Touch.

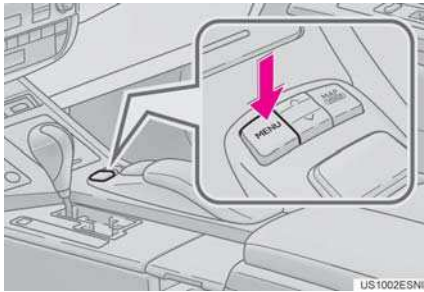


- 2 Select "Setup".

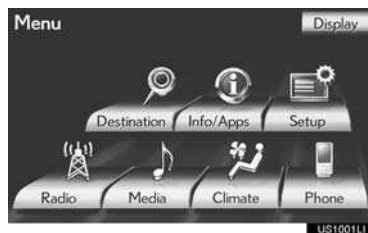


- 3 Select "Vehicle".



- 4 Select "Maintenance".

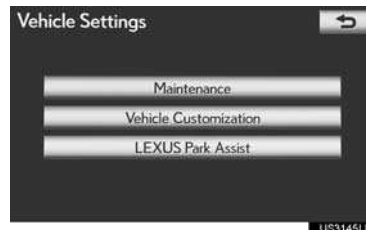

- 5 Select the desired screen button.

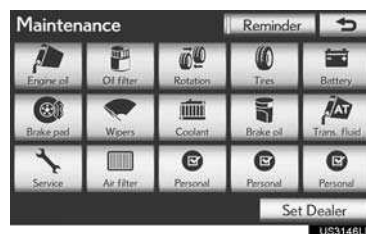

- Setting maintenance information. (See page 133.)
- Setting dealer. (See page 135.)


3 NAVIGATION SYSTEM

MAINTENANCE INFORMATION SETTING

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Vehicle" on the "Setup" screen.
- 3 Select "Maintenance" on the "Vehicle Settings" screen.

4. SETUP

4 Select the desired screen button.

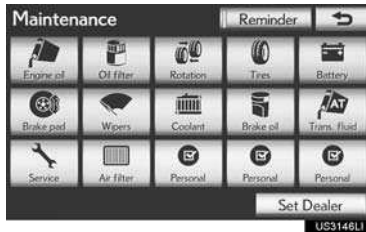


- When the vehicle needs to be serviced, the screen button color will change to orange.

Screen button	Function
"Engine oil"	Replace engine oil
"Oil filter"	Replace engine oil filter
"Rotation"	Rotate tires
"Tires"	Replace tires
"Battery"	Replace 12-volt battery
"Brake pad"	Replace brake pads
"Wipers"	Replace wiper blades
"Coolant"	Replace coolant
"Brake oil"	Replace brake fluid
"Trans. fluid"	Replace transmission fluid
"Service"	Scheduled maintenance
"Air filter"	Replace air filter

Screen button	Function
"Personal"	New information items can be created separately from provided ones.
"Delete All"	Select to cancel all conditions which have been input.
"Reset All"	Select to reset the item which has satisfied a condition.
"Set Dealer"	Select to register dealer information. (See "DEALER SETTING" on page 135.)
"Dealer Info."	Select to edit dealer information. (See "DEALER SETTING" on page 135.)
"Reminder"	When this screen button is selected, the indicator is illuminated. The system is set to give maintenance information with the "Maintenance Reminder" screen. (See page 32.)

5 Input the conditions.

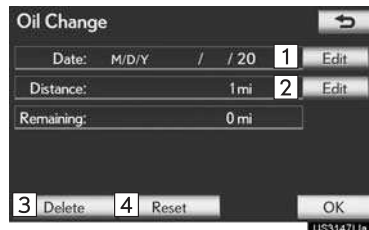

No.	Function
1	Select to input the next maintenance date.
2	Select to input the driving distance until the next maintenance check.
3	Select to cancel the date and distance conditions.
4	Select to reset the date and distance conditions.

6 Select "OK".

- The screen then returns to the "Maintenance" screen.


INFORMATION

- For scheduled maintenance information, refer to "Warranty and Services Guide/Owner's Manual Supplement/Scheduled Maintenance".
- Depending on driving or road conditions, the actual date and distance maintenance should be performed may differ from the stored date and distance in the system.


DEALER SETTING

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Vehicle" on the "Setup" screen.
- 3 Select "Maintenance" on the "Vehicle Settings" screen.
- 4 Select "Set Dealer".

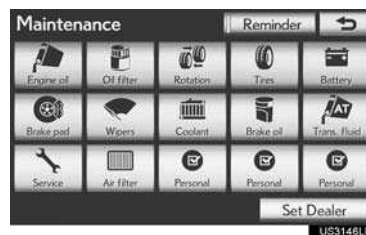

- 5 If a dealer has not been registered, enter the location of a dealer in the same way as for a destination search. (See "DESTINATION SEARCH" on page 68.)

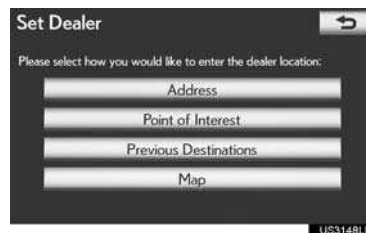

4. SETUP

- When “Set Dealer” registration is finished, the “Dealer” screen is displayed.


6 Select “Edit” next to the item to be edited.



No.	Function
1	Select to enter the name of a dealer. (See page 136.)
2	Select to enter the name of a dealer member. (See page 136.)
3	Select to set the location. (See page 137.)
4	Select to enter the phone number. (See page 137.)
5	Select to delete the dealer information displayed on the screen.
6	Select to set the displayed dealer as a destination. (See “STARTING ROUTE GUIDANCE” on page 87.)

■ TO EDIT “Dealer” OR “Contact”

1 Select “Edit” next to “Dealer” or “Contact”.

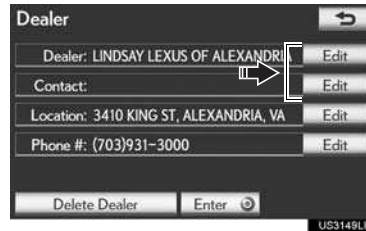

2 Enter the name using the alphanumeric keys.




- Up to 70 characters can be entered for dealer and 24 characters for contact.

3 Select “OK”.


- The previous screen will be displayed.

■ TO EDIT "Location"

- 1 Select "Edit" next to "Location".

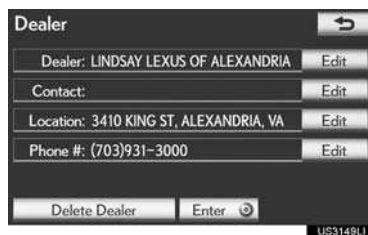

- 2 Select one of the 8 directional screen buttons to move the cursor to the desired point on the map screen.

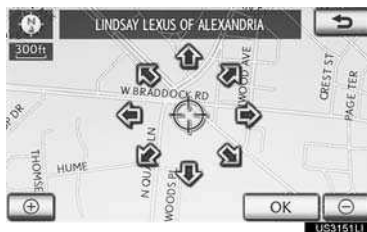


- 3 Select "OK".

- The previous screen will be displayed.

■ TO EDIT "Phone #" (PHONE NUMBER)

- 1 Select "Edit" next to "Phone #".

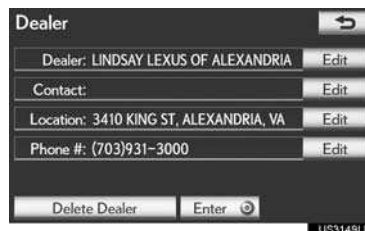

- 2 Enter the number using number keys.



- 3 Select "OK".

- The previous screen will be displayed.


3

NAVIGATION SYSTEM

VEHICLE CUSTOMIZATION

Vehicle settings can be changed.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Vehicle"** on the "Setup" screen.
- 4 Select **"Vehicle Customization"**.

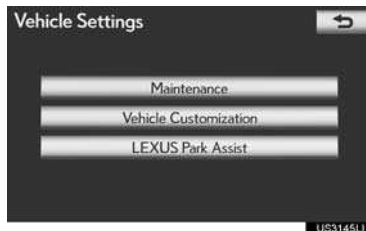

- 5 Select the desired items to be set.
 - For a list of the settings that can be changed, refer to "Owner's Manual".
- 6 After changing the settings, select **"Save"**. A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

 CAUTION

- When performing the customization procedure, ensure that there is sufficient ventilation in the vehicle and surrounding area. If there is insufficient ventilation, exhaust gases may collect and enter the vehicle. Exhaust gases include harmful carbon monoxide (CO) and inhaling them may lead to death or a serious health hazard.

INFORMATION


- To avoid discharging the 12-volt battery, perform the customization procedure with the engine running <the hybrid system operating>.

5. GPS (GLOBAL POSITIONING SYSTEM)

1. LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.

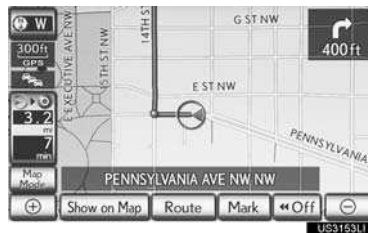

When the vehicle is receiving signals from satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

- The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

5. GPS (GLOBAL POSITIONING SYSTEM)

- Accurate current position may not be shown in the following cases:
 - When driving on a small angled Y-shaped road.
 - When driving on a winding road.
 - When driving on a slippery road such as in sand, gravel, snow, etc.
 - When driving on a long straight road.
 - When freeway and surface streets run in parallel.
 - After moving by ferry or vehicle carrier.
 - When a long route is searched during high speed driving.
 - When driving without setting the current position calibration correctly.
 - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
 - When leaving a covered parking lot or parking garage.
 - When a roof carrier is installed.
 - When driving with tire chains installed.
 - When the tires are worn.
 - After replacing a tire or tires.
 - When using tires that are smaller or larger than the factory specifications.
 - When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration, see page 130.
- Inappropriate route guidance may occur in the following cases:
 - When turning at an intersection off the designated route guidance.
 - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
 - When turning at an intersection for which there is no route guidance.
 - When passing through an intersection for which there is no route guidance.
 - During auto reroute, the route guidance may not be available for the next turn to the right or left.
 - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
 - After auto reroute, the route may not be changed.
 - If an unnecessary U-turn is shown or announced.
 - If a location has multiple names and the system announces 1 or more of them.
 - When a route cannot be searched.
 - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
 - Your destination point might be shown on the opposite side of the street.
 - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
 - The road and map data stored in the navigation system may not be complete or may not be the latest version.

- After replacing a tire, implement the operation described in "TIRE CHANGE CALIBRATION". (See page 131.)


INFORMATION


- This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.



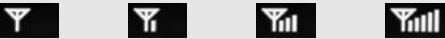
5. GPS (GLOBAL POSITIONING SYSTEM)

1. PHONE OPERATION

1. QUICK REFERENCE

Bluetooth® phones can be operated via the navigation system's screen. To display the hands-free operation screen, press the "MENU" button on the Remote Touch and then select "Phone", or the  switch on the steering wheel.

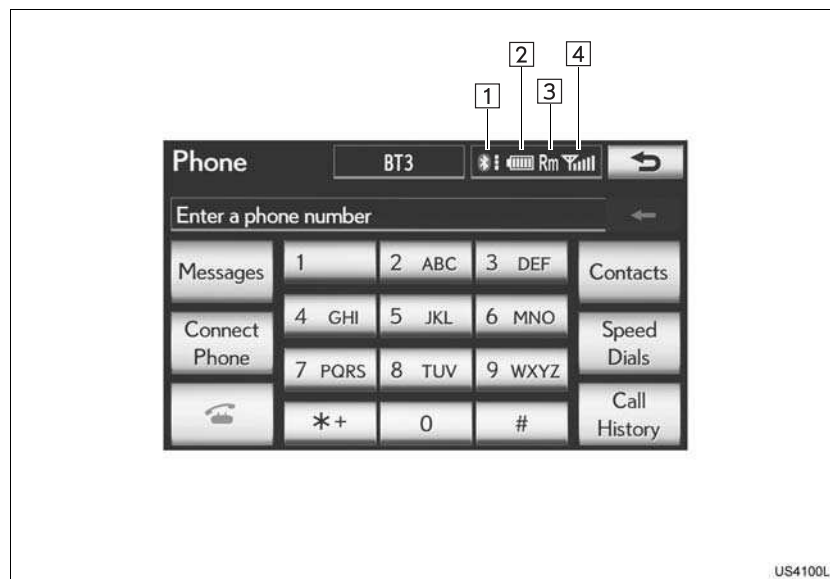

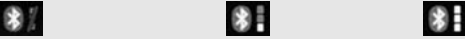No.	Name	Function
1	The condition of Bluetooth® connection	 <p>No connection ← → Good</p> <p>An antenna for the Bluetooth® connection is built in the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places:</p> <ul style="list-style-type: none"> • The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box and console box). • The cellular phone touches or is covered with metal materials. <p>Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.</p> <p>When the cellular phone is not connected, "No Connect" is displayed.</p>
2	The amount of battery charge left	 <p>Empty ← → Full</p> <p>This is not displayed when the Bluetooth® is not connected. The amount displayed does not always correspond with the amount displayed on the cellular phone. The amount of battery charge left may not be displayed depending on the type of phone you have. This system does not have a charging function.</p>
3	The receiving area	<p>"Rm" is displayed when receiving in a roaming area. The receiving area may not be displayed depending on the type of phone you have.</p>
4	The level of reception	 <p>Poor ← → Excellent</p> <p>The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have.</p> <p>When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed.</p>

4
PHONE

1. PHONE OPERATION

2. PHONE (HANDS-FREE SYSTEM FOR CELLULAR PHONE)

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth®. Bluetooth® is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.

- For registering and setting of the phone, see "PHONE SETTINGS" on page 172 and "Bluetooth® SETTINGS" on page 194.

CAUTION

- While driving, do not use a cellular phone or connect the Bluetooth® phone.
- An antenna for the Bluetooth® connection is built in the instrument panel. People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using cellular phones, users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

NOTICE

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

INFORMATION

- If your cellular phone does not support Bluetooth®, this system cannot function.
- In the following conditions, the system may not function:
 - The cellular phone is turned off.
 - The current position is outside the communication area.
 - The cellular phone is not connected.
 - The cellular phone has a low battery.
- When using Bluetooth® audio and hands-free at the same time, the following problems may occur:
 - The Bluetooth® connection may be cut.
 - Noise may be heard on the Bluetooth® audio playback.

INFORMATION

- This system supports the following services:
 - Bluetooth® Specification Ver.1.1 or higher (Recommended: Ver.2.1 + EDR or higher)
 - Profiles
 - HFP (Hands Free Profile) Ver.1.0 or higher (Recommended: Ver.1.5 or higher)
 - OPP (Object Push Profile) Ver.1.1 or higher
 - PBAP (Phone Book Access Profile) Ver.1.0 or higher
 - MAP (Message Access Profile) Ver.1.0 or higher
 - SPP (Serial Port Profile) Ver.1.1 or higher*
- If your cellular phone does not support HFP, registering the Bluetooth® phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
- If the connected Bluetooth® phone version is older than recommended or incompatible, this function may not be used.
- Refer to <http://www.lexus.com/> to find approved Bluetooth® phones for this system.


*: This profile is necessary when using Apps. (See "APPS" on page 356.)




Bluetooth is a registered trademark of Bluetooth SIG, Inc.

USING THE PHONE SWITCH

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

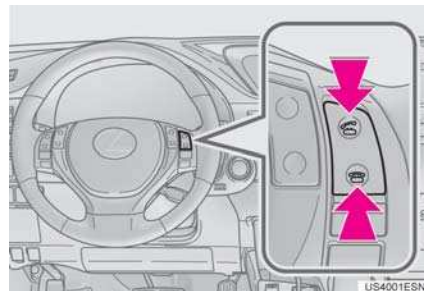

- The microphone can be used when talking on the phone.

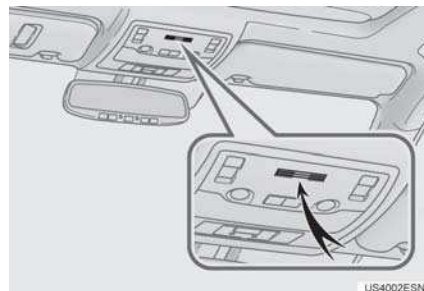


4
PHONE

1. PHONE OPERATION

INFORMATION

- The other party's voice will be heard from the front speakers. The audio/video system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
 - Driving on an unpaved road. (Making excessive traffic noise.)
 - Driving at high speeds.
 - The roof or windows are open.
 - The air conditioning vents are pointed towards the microphone.
 - The sound of the air-conditioning fan is loud.
 - There is a negative effect on sound quality due to the phone and/or network being used.

USING THE STEERING SWITCHES

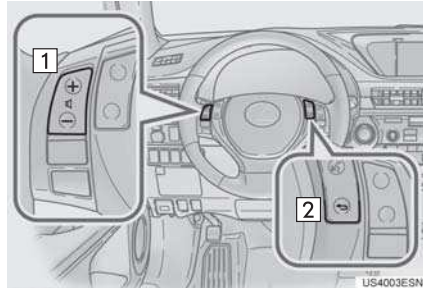

1 Volume control switch

- Press the "+" side to increase the volume.
- Press the "-" side to decrease the volume.

2 Back switch

- Press the back switch to return to the previous screen.

ABOUT THE PHONEBOOK IN THIS SYSTEM

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
 - Phonebook data
 - Call history data
 - Speed dial data
 - Image data
 - All phone settings
 - Message settings

INFORMATION

- When a phone's registration is deleted, the above-mentioned data is also deleted.

WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (See "DELETING PERSONAL DATA" on page 61.)

- The following data in the system can be initialized:
 - Phonebook data
 - Call history data
 - Speed dial data
 - Image data
 - All phone settings
 - Message settings

INFORMATION

- Once initialized, the data and settings will be erased. Pay much attention when initializing the data.

4

PHONE

1. PHONE OPERATION

► U.S.A.

- **FCC ID: BABFT0033A**
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

⚠ CAUTION

- **FCC WARNING**
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **CAUTION: Radio Frequency Radiation Exposure**
This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).
- **Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► Canada

- **IC: 2024B-FT0033A**
- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

⚠ CAUTION

- **CAUTION: Radio Frequency Radiation Exposure**
This equipment complies with IC radiation exposure limits set forth for uncontrolled equipment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).
- **ATTENTION : Exposition aux radiations des fréquences radioélectriques**
Cet équipement se conforme aux limites d'exposition aux radiations établies par Industrie Canada pour un environnement non contrôlé ainsi qu'aux directives d'exposition aux fréquences radioélectriques (RF) émises par Industrie Canada dans la norme CNR-102. Cet équipement émet un niveau d'énergie RF faible à un point tel qu'il se conforme sans devoir effectuer d'évaluation d'exposition maximum admissible (MPE). Lorsque l'équipement est installé et utilisé, il est toutefois souhaitable de laisser au moins 20 cm entre l'antenne et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).
- This Category II radiocommunication device complies with Industry Canada Standard RSS-310.
- Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

1. PHONE OPERATION


3. REGISTER A Bluetooth® PHONE

To use the hands-free system, it is necessary to register a phone with the system. Once the phone has been registered, it is possible to make a hands-free call.


If a Bluetooth® phone has not been registered yet, it is necessary to register it first according to the following procedure. A Bluetooth® phone cannot be registered while driving.


- See “REGISTERING A Bluetooth® DEVICE” on page 195 of additional registration when registering.

- 1 Press the “MENU” button on the Remote Touch.

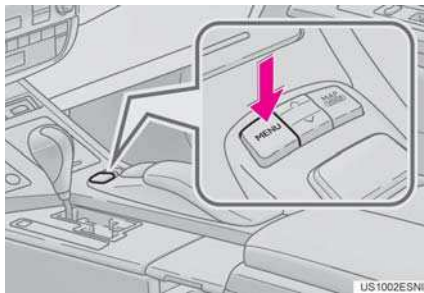

- 2 Select “Phone”.

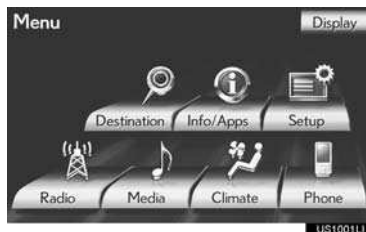

- The “Phone” screen can be displayed by pressing  on the steering wheel.

- 3 Select “Yes” to register a phone.



- If 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. See “When 5 Bluetooth® devices have already been registered” on page 153.

- 4 When this screen is displayed, operate the Bluetooth® device.



- Search for the navigation system displayed on the system's screen using your Bluetooth® device, and register the Bluetooth® device.

For details about operating the Bluetooth® device, see the manual that comes with it.

- A passcode is not required for SSP (Secure Simple Pairing) compatible Bluetooth® phones. Depending on the type of Bluetooth® phone being connected, a message confirming registration may be displayed on the Bluetooth® phone's screen. Respond and operate the Bluetooth® phone according to the confirmation message.


- To cancel the registration, select “Cancel”.
 - If the Bluetooth® phone to be registered has a Bluetooth® audio function, this can be registered at the same time.
- 5 This screen will be displayed when registration is complete.



- When using the same phone, it is not necessary to register it again.
- ▶ When this screen is displayed, follow the guidance on the screen to try again.



- ▶ When another Bluetooth® device is connected

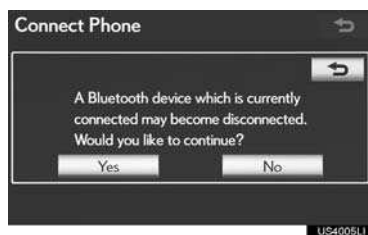

- When another Bluetooth® device is currently connected, this screen is displayed.
- To disconnect the Bluetooth® device, select “Yes”.

- ▶ When 5 Bluetooth® devices have already been registered

- 1 When 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. Select “Yes” to delete 1 or more.
- 2 Select the device to be deleted, then select “Remove”.
- 3 Select “Yes”.

- ▶ If the Bluetooth® phone has a Bluetooth® audio function




- When the Bluetooth® phone to be registered has a Bluetooth® audio function, this audio function will be registered automatically at the same time and this screen may be displayed. If this screen is displayed, select “Yes” to connect the audio function or select “No” to cancel the connection.

4 PHONE

CONNECTING A Bluetooth® PHONE

AUTOMATICALLY

When a phone is registered, auto connection is turned on. Always set it to this mode and leave the Bluetooth® phone in a location where connection can be established.

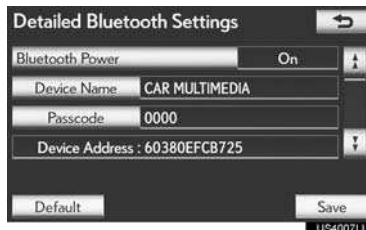

- For automatic connection, see “CHANGING “Bluetooth* Power”” on page 202.



- When the “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode, the system searches for a nearby registered cellular phone.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


- The system will connect with the phone that was last connected, if it is nearby. When “Display Phone Status” is set to “On”, the connection status is displayed. (See “Bluetooth® DEVICE CONNECTION STATUS DISPLAY SETTINGS” on page 204.)
- This screen appears when the Bluetooth® phone is first connected after the “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode.

INFORMATION

- It may take time if the phone connection is carried out during Bluetooth® device playback. Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.


MANUALLY

When the auto connection has failed or “Bluetooth* Power” is turned off, it is necessary to connect Bluetooth® manually.

- 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing  on the steering wheel.
- 2 Select “Connect Phone”.



- 3 Select the screen button corresponding to the desired phone connection.

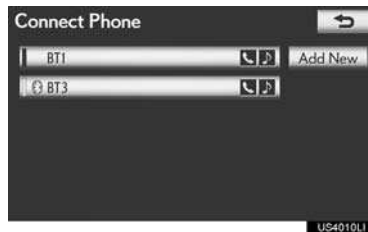

- When the cellular phone’s device name has not been able to be obtained, “Device 1” to “Device 5” will be displayed in the order the phones were registered.
- *: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 4 This screen is displayed.



- 5 When the connection is completed, this screen is displayed.



- Now you can use the Bluetooth® phone.
- ▶ When a phone is connected while Bluetooth® audio is playing



- This screen is displayed, and the Bluetooth® audio will stop temporarily.

4
PHONE

RECONNECTING THE Bluetooth® PHONE

If a Bluetooth® phone is disconnected due to poor reception from the Bluetooth® network when the “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode, the system automatically reconnects the Bluetooth® phone. When “**Display Phone Status**” is set to “**On**”, the connection status is displayed.

- If a Bluetooth® phone is disconnected on purpose, such as turning it off, this does not happen. Reconnect the Bluetooth® phone manually.

1. PHONE OPERATION


4. CALL ON THE Bluetooth® PHONE

After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are 7 methods by which a call can be made. These are described below.




BY DIAL

A call can be made by inputting the phone number.

This cannot be operated while driving.

- 1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “Phone” on the “Menu” screen.
 - The “Phone” screen can be displayed by pressing  on the steering wheel.
- 3 Select the desired keys to input the phone number.



- Each time  is selected, an input digit is deleted.
- 4 Select  or press the  switch on the steering wheel.
 - Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

BY PHONEBOOK

Calls can be made by using the phonebook data which is transferred from the registered cellular phone.

The phonebook changes depending on the phone connected. Up to 1000 contacts (maximum of 3 numbers per contact) can be registered in each phonebook.

This cannot be operated while driving.

- 1 Select “Contacts”.



- 2 Select the desired data from the list.





4
PHONE

1. PHONE OPERATION

- 3 Select the desired number from the list.



- 4 Select  or press the  switch on the steering wheel.

WHEN THE PHONEBOOK IS EMPTY

- 1 Select "Contacts".



- 2 Select "Yes" or "Transfer" to automatically transfer the phonebook from the connected phone.

- Select "Manual" to transfer the phonebook manually. (See "TRANSFERRING A PHONE NUMBER" on page 175.)
- Select "No" or "Cancel" to cancel transferring.
- If your cellular phone is neither PBAP nor OPP compatible, the phonebook cannot be transferred.

- ▶ PBAP compatible models



- ▶ PBAP incompatible but OPP compatible models



- 3 Transfer the phonebook data to the system using the Bluetooth® phone.

- Depending on the type of cellular phone, OBEX authentication may be required when transferring phonebook data. Enter "1234" into the Bluetooth® phone.



- This screen appears while transferring. To cancel this function, select "Cancel".

INFORMATION

- Depending on the type of Bluetooth® phone:
 - It may be necessary to perform additional steps on the phone when transferring phonebook data.
 - The registered image on the phonebook may not appear when phonebook data is transferred.
- 4 When the data transfer from a PBAP incompatible but OPP compatible model is complete, “Done” will appear on the screen. Select “Done”.




BY SPEED DIAL

Calls can be made using registered phone numbers which can be selected from a phonebook. (See “REGISTERING THE SPEED DIAL” on page 183 for registering the speed dial.) This can be operated while driving.

- 1 Select “Speed Dials”.



- 2 Select the desired number to call.

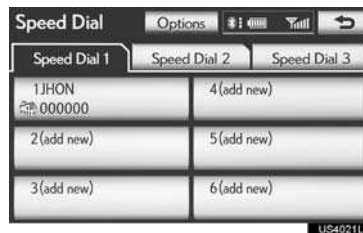

- The list to be displayed can be changed by selecting the “Speed Dial 1”, “Speed Dial 2” or “Speed Dial 3” tab.



4
PHONE

1. PHONE OPERATION

BY CALL HISTORY

CALLS CAN BE MADE BY CALL HISTORY WHICH HAS 4 FUNCTIONS

All: all calls (missed, incoming or outgoing)
 Up to 25 call history items can be selected from the "All" tab while driving.
Missed: calls that were missed
Incoming: calls that were received
Outgoing: calls that were made

3 Select  or press the  switch on the steering wheel.



1 Select "Call History".





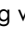


2 Select the desired data from the list.





● The list to be displayed can be changed by selecting the "All", "Missed", "Incoming" or "Outgoing" tab.

CALLS CAN BE MADE USING THE LATEST CALL HISTORY ITEM

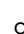- 1 Press the "MENU" button on the Remote Touch, then select "Phone".
 - The "Phone" screen can be displayed by pressing  on the steering wheel.
- 2 Press the  switch on the steering wheel to display the "Call History" screen.
- 3 Press the  switch on the steering wheel to select the latest history item.
- 4 Select  or press the  switch on the steering wheel to call the latest history item.
 - When making a call by phonebook, the name (if registered) is displayed.
 - When making a call to the same number continuously, only the most recent call is listed in call history.
 - When a phone number registered in the phonebook is received, the name and the number are displayed.
 - Number-withheld calls are also memorized in the system.
 - International phone calls may not be made depending on the type of cellular phone you have.

BY VOICE RECOGNITION

Calls can be made by giving a voice command. (For the operation and command of voice recognition, see "VOICE COMMAND SYSTEM" on page 308.) This can be operated while driving.

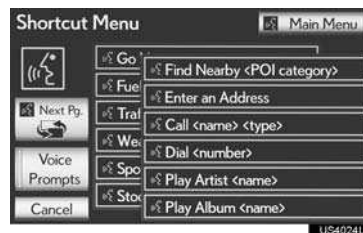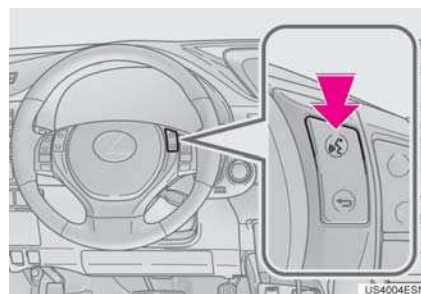

4


PHONE

VOICE COMMAND EXAMPLE: CALL NAME

- 1 Press the talk switch.
 - "Call <name> <type>" is displayed in the "Shortcut Menu" screen.
 - When "Call <name> <type>" on the "Shortcut Menu" screen is dimmed, the phonebook's voice command recognition cannot be used. Check the Bluetooth® connection and if the contacts have been transferred to the navigation system.
- 2 Say the name, or the name and type of phone, of a registered contact.
 - In the same manner as it is displayed on the screen, "Call <name> <type>", after saying "Call" say the name, or the name and type of phone, of a contact.
For example: "Call", "John Smith" or "Call", "Mary Davis", "Mobile"
 - There are 4 types of phones: Home, Mobile, Office and Other.
 - Short or abbreviated names in the phonebook may not be recognized. Change names in the phonebook to full names.
 - Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say "Yes" or "No".
 - When the system recognizes multiple names from the phonebook, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say the number of the name from the candidate list (number 1 and number 2) to select a name from the candidate list.

- When a contact has multiple phone numbers registered in the phonebook, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (number 1 and number 2) to select a phone number from the candidate list.

- 3 Say "Dial" to call the phone number.

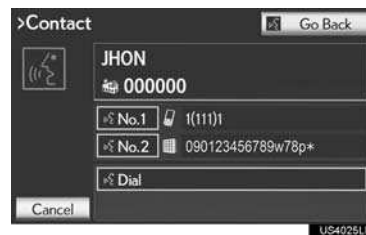

VOICE COMMAND EXAMPLE: DIAL NUMBER

- 1 Press the talk switch.
 - "Dial <number>" is displayed in the "Shortcut Menu" screen.
 - When "Dial <number>" on the "Shortcut Menu" screen is dimmed, the phone number voice recognition cannot be used. Check the Bluetooth® phone connection.
- 2 Say the phone number.
 - In the same manner as it is displayed on the screen, "Dial <number>", after saying "Dial" say the phone number.
 - Say the phone number one digit at a time.
For example, if the phone number is 2345678:
Say "two three four five six seven eight"
Do not say "twenty three forty five sixty seven eight"

- The system can recognize the following types of phone numbers:
 - 3 digit numbers (911, 411, 611)
 - 7 digit numbers (Local phone numbers)
 - 10 digit numbers (Area code + Local phone number)
 - 11 digit phone numbers (1 + Area code + Local phone number)
 - As the system cannot recognize additional numbers, say the complete number without stopping.
 - When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (number 1 and number 2) to select a phone number from the candidate list.
- 3** Say *"Dial"* to call the phone number.


INTERNATIONAL CALL

To dial a phone number that is not a 3, 7, 10 or 11 digit number, for example an international number, use "International Call".

- 1** Go to the "Main Menu" screen by pressing the talk switch on the steering wheel and saying *"Main menu"* or select *"Main Menu"*.
 - 2** Say *"Use a phone"*.
 - 3** Say *"International call"*.
- Up to 24 digits can be recognized when using the international call function. The number can also be divided into multiple groups and recognized.

4

PHONE

Calling without the voice recognition: After the desired phone number is displayed, a call can also be made by pressing the  switch on the steering wheel.

Canceling the voice recognition: The voice recognition will be canceled when either of the following is performed:

- Press and hold the talk switch.
- Select *"Cancel"*.



1. PHONE OPERATION

CALLING USING AN SMS/MMS MESSAGE


Calls can be made to an SMS (Short Message Service)/MMS (Multimedia Messaging Service) message sender's phone number. This can be operated while driving.


1 Select "Messages".



- When "Message Transfer" is set to "Off", a confirmation screen will be displayed. Select "Yes". (See page 187.)
- 2 Select the "SMS/MMS" tab and then select the desired received message from the list.
- The tab display may vary depending on the type of cellular phone.
- 3 Select  or press the  switch on the steering wheel.

BY POI CALL

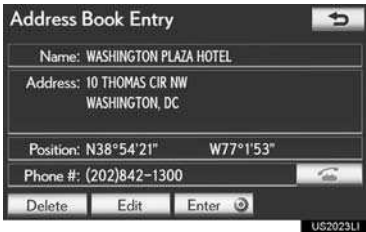

A call can be made by selecting  when it is displayed on the screen from the navigation system. (See "TO SEE INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET" on page 42 and "VIEW DETAILED FUEL PRICE INFORMATION" on page 333.)





1. PHONE OPERATION

5. RECEIVE ON THE Bluetooth® PHONE

When a call is received, this screen is displayed with a sound.

- 1 Select  or press the  switch on the steering wheel to talk on the phone.



To refuse to receive the call: Select  or press the  switch on the steering wheel.

To adjust the volume of a received call: Select “-” or “+”, turn the “PWR-VOL” knob, or use the volume switch on the steering wheel.

INFORMATION

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The incoming call display mode can be set. (See “INCOMING CALL DISPLAY” on page 192.)

4

PHONE



1. PHONE OPERATION

6. TALK ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.



To adjust the volume of the other party's voice: Select “-” or “+”, turn the “PWR·VOL” knob, or use the volume switch on the steering wheel.

To hang up the phone: Select  or press the  switch on the steering wheel.

To mute your voice: Select “Mute”.

To input a key: Select “0-9”.

To transfer the call: Select “Handset Mode” to change from hands-free call to cellular phone call. Select “Handsfree Mode” to change from cellular phone call to hands-free call.

INFORMATION

- Changing from hands-free call to cellular phone call is not possible while driving.
- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.



WHEN YOU SELECT “0-9”

INPUTTING A KEY

Inputting a key is not possible while driving.

- 1 Select the desired number to input the key.



To hang up the phone: Select  or press the  switch on the steering wheel.



TONE SIGNAL

If a continuous tone signal is registered in a phonebook, this screen appears. (If not registered, "Send" and "Clear" are not displayed.) This can be operated while driving.

- 1 Confirm the number displayed on the screen and select "Send". The number before marked sign will be sent.



- When "Clear" is selected, this function is finished and the normal tone screen appears.

To hang up the phone: Select  or press the  switch on the steering wheel.

INFORMATION

- The continuous tone signal is the marked sign (p or w) and the number that follows the phone number. (e.g. 056133w0123p#1*)
- When the "p" pause tone is used, after waiting 2 seconds the tone data up until the next pause tone will be automatically sent. When the "w" pause tone is used, the tone data up until the next pause tone will be automatically sent after user operation.
- This operation can be done when it is desirable to operate an answering machine or use a telephone service in a bank for example. The phone number and the code number in the phonebook can be registered.

4

PHONE



BY VOICE RECOGNITION

"Send Tones" can be operated by giving a command during a call.



- The operating procedure is similar to other voice recognition operations. (For the operation of voice recognition, see "VOICE COMMAND SYSTEM" on page 308.)

INCOMING CALL WAITING



When a call is interrupted by a third party while talking, this screen is displayed.

- 1 Select  or press the  switch on the steering wheel to start talking with the other party.



- Select  or press the  switch on the steering wheel to refuse the call.



- Each time  is selected or the  switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

INFORMATION


- If your cellular phone does not support HFP Ver. 1.5, this function cannot be used.
- The ring tone that has been set in the "Phone Sound Settings" screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the navigation system and Bluetooth® phone may sound simultaneously when there is an incoming call. (See "RING TONE SETTING" on page 173.)

1. PHONE OPERATION

7. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying using the navigation system (Quick reply).


CHECKING MESSAGES

- 1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “Phone” on the “Menu” screen.
 - The “Phone” screen can be displayed by pressing  on the steering wheel.
- 3 Select “Messages”.



- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.
- When “Message Transfer” is set to “Off”, a confirmation screen will be displayed. Select “Yes”. (See page 187.)

- 4 Select the screen button corresponding to the desired message.

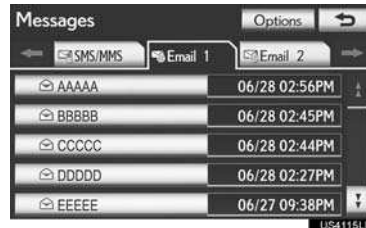

- Messages are displayed in the appropriate connected Bluetooth® phone’s registered mail address folder. Select the tab of the desired folder to be displayed.

- 5 Messages can be checked.





- Selecting “Previous” or “Next” displays the previous or next message.
- Only received messages on the connected Bluetooth® phone can be displayed.
- The text of the message is not displayed while driving.

4

PHONE

- 6 Select **"Play"** to start reading out of the message. Select **"Stop"** to stop the function.
- Select **"-"** or **"+"**, turn the **"PWR-VOL"** knob, or use the volume switch on the steering wheel to adjust the message read out volume.
- The message read out function is available even while driving.

- When the received message is an e-mail and **"Update Message Read Status on Phone"** is set to **"On"**, **"Mark as Unread"** or **"Mark as Read"** can be selected. Select **"Mark as Unread"** to mark mails that have been read on the Bluetooth® phone as unread. Conversely, select **"Mark as Read"** to mark mails that have not been read on the Bluetooth® phone as read. (See **"MESSAGE SETTINGS"** on page 187.)
- For SMS/MMS, selecting  or pressing the  switch on the steering wheel calls the sender. (See page 164.)
- Select **"Reply"** to reply to the message. (See page 170.)

REPLYING (QUICK REPLY)

- 1 Select **"Reply"**.



- 2 Select the screen button corresponding to the desired message.



- 3 Select **"Send"**.

- While the message is being sent, a sending message screen is displayed.

- 4 This screen will be displayed if message delivery fails.




- Select **"Retry"** to attempt to send the message again or select **"Cancel"** to cancel.

EDITING REPLY MESSAGES


- 1 Reply messages can be edited while the vehicle is parked. Select "Edit".




- 2 Select the screen button corresponding to the desired message.

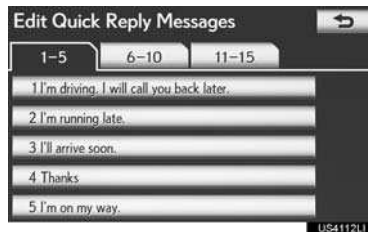

- 3 Select "OK" when editing is completed.

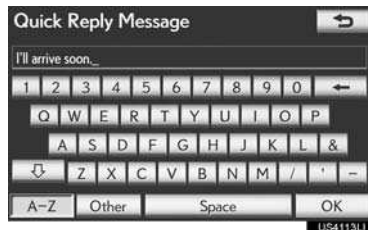
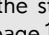



- 4 Select .

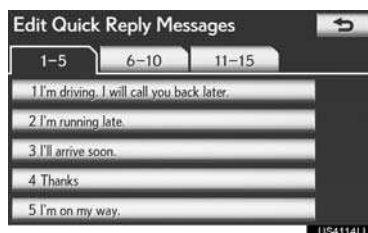

NEW MESSAGE NOTIFICATION

If "New Message Pop-up" and "New Message Voice Notification" are set to "On", a notification appears on the screen and a voice notification will be heard when a new message arrives. (See "MESSAGE SETTINGS" on page 187.)

- 1 Select "Read" to check the message.
 - The "Messages" screen will be displayed.
 - When "Automatic Message Readout" is set to "On", the message will be automatically read out. (See "MESSAGE SETTINGS" on page 187.)
- For SMS/MMS, selecting  or pressing the  switch on the steering wheel calls the sender. (See page 164.)
- To check the message later, select "Ignore" or .

4


PHONE

2. SETUP

1. PHONE SETTINGS

The phonebook can be edited. Volume, display and message settings can also be changed.

- 1 Press the "MENU" button on the Remote Touch.

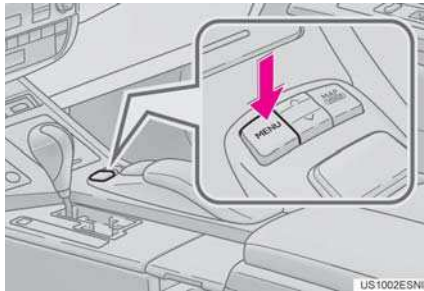


- 2 Select "Setup".



- 3 Select "Phone".




- 4 Perform each setting according to the procedures outlined on the following pages.

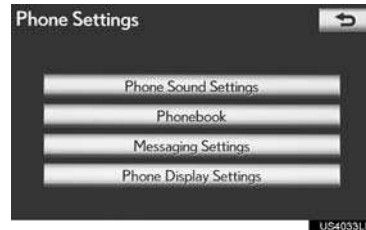


PHONE SOUND SETTINGS

The call and ring tone volume can be adjusted. A ring tone can be selected.

- 1 Select "Phone Sound Settings".

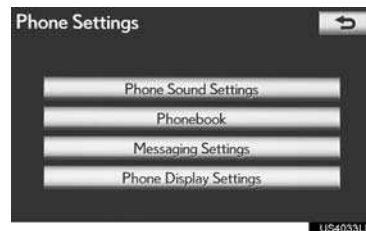

- 2 Perform each setting according to the procedures outlined on the following pages.

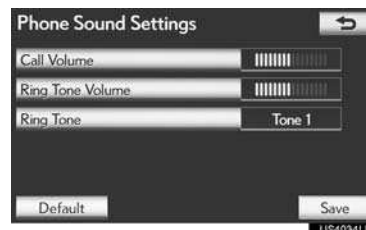


- 3 When all settings are completed, select "Save".

INFORMATION

- The system will automatically increase the volume when the speed exceeds 50 mph (80 km/h).

CALL VOLUME SETTING


- 1 Select **"Call Volume"** on the "Phone Sound Settings" screen.
- 2 Select **"-"** or **"+"** to adjust the call volume.

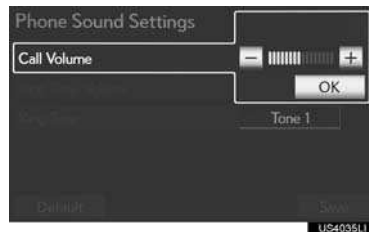

- 3 Select **"OK"**.

RING TONE VOLUME SETTING


- 1 Select **"Ring Tone Volume"** on the "Phone Sound Settings" screen.
- 2 Select **"-"** or **"+"** to adjust the ring tone volume.

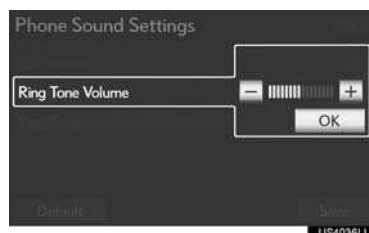

- 3 Select **"OK"**.

RING TONE SETTING

- 1 Select **"Ring Tone"** on the "Phone Sound Settings" screen.
- 2 Select the screen button corresponding to the desired ring tone.

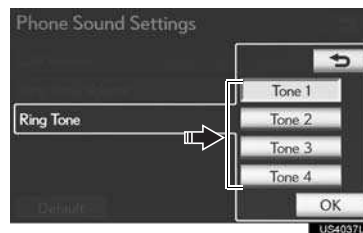

- Ring tones can be heard by selecting the screen buttons.

- 3 Select **"OK"**.

INITIALIZING THE SETTINGS


The settings can be initialized.

- 1 Select **"Default"** on the "Phone Sound Settings" screen.
- 2 Select **"Yes"**.

PHONEBOOK


The call history can be deleted and phonebook and speed dial settings can be changed.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Phone"** on the "Setup" screen.
- 4 Select **"Phonebook"**.

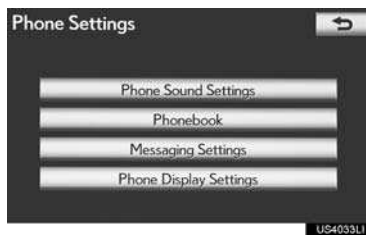

US4038L1

- 5 Perform each setting according to the procedures outlined on the following pages.

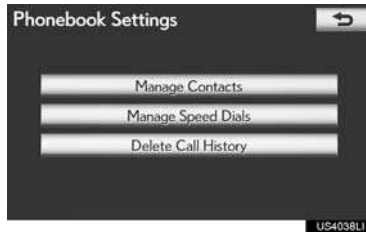

US4038L1


INFORMATION

- Phonebook data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

SETTING THE PHONEBOOK

The phonebook can be transferred from a Bluetooth® phone to the system. The phonebook also can be added, edited and deleted.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Phone"** on the "Setup" screen.
- 3 Select **"Phonebook"** on the "Phone Settings" screen.
- 4 Select **"Manage Contacts"**.

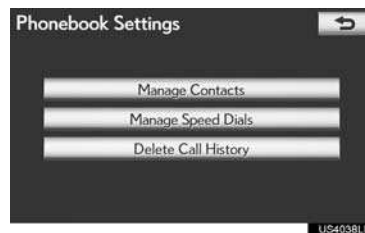


US4038L1

- 5 Perform each setting according to the procedures outlined on the following pages.



US4039L1

■ THE “Contacts” SCREEN CAN ALSO BE DISPLAYED

- 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
- The “Phone” screen can be displayed by pressing  on the steering wheel.
- 2 Select “Contacts” on the “Phone” screen.
- 3 Select “Options”.



- 4 Select “Manage Contacts”.



■ TRANSFERRING A PHONE NUMBER

The phone numbers in a Bluetooth® phone can be transferred to the system. The system can manage up to 5 phonebooks. Up to 1000 contacts (maximum of 3 numbers per contact) can be registered in each phonebook.

Operation methods differ between PBAP compatible and PBAP incompatible but OPP compatible Bluetooth® phones.


If your cellular phone is neither PBAP nor OPP compatible, the phonebook cannot be transferred.

- ▶ For PBAP compatible Bluetooth® phones

- 1 Select “Transfer Contacts”.



- 2 Select “Update Contacts”.

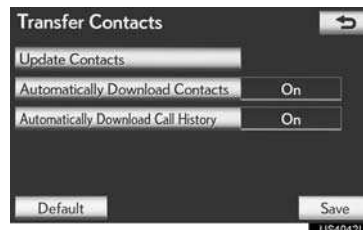

2. SETUP

3 Transfer the phonebook data to the system using the Bluetooth® phone.

- This operation may be unnecessary depending on the cellular phone model.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring phonebook data. Enter "1234" into the Bluetooth® phone.



- This screen appears while transferring. To cancel this function, select "Cancel".
- If another Bluetooth® device is connected when transferring phonebook data, depending on the phone, the connected Bluetooth® device may need to be disconnected.

▶ PBAP compatible models automatic data transfer setting


When a PBAP compatible phone is connected, the phone's phonebook data can be automatically transferred.

1 Select "Transfer Contacts".




2 Select "Automatically Download Contacts" to transfer the phonebook from a connected cellular phone.

Select "Automatically Download Call History" to transfer the call history from a connected cellular phone.

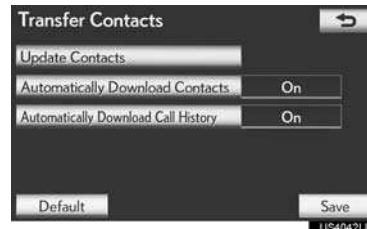

3 Select "On".

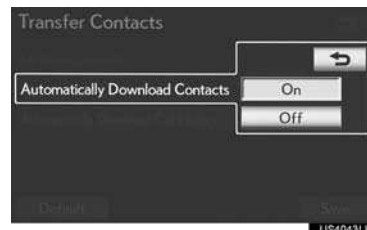

4 Select "Save".

INFORMATION


- Depending on the type of Bluetooth® phone, the registered image on the phonebook may not appear when phonebook data is transferred.

► For PBAP incompatible but OPP compatible Bluetooth® phones

1 Select “Transfer Contacts”.



2 Select “Replace Contacts” or “Add Contacts”.

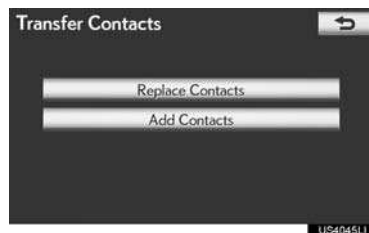

- If the phonebook contains phonebook data, this screen is displayed.

3 Transfer the phonebook data to the system using a Bluetooth® phone.


- Depending on the type of cellular phone, OBEX authentication may be required when transferring phonebook data. Enter “1234” into the Bluetooth® phone.



- This screen appears while transferring. To cancel this function, select “Cancel”. If “Add Contacts” is selected and there is an interruption during the transfer of data, the phonebook data transferred until then will be stored in the system. This is not the case when “Cancel” is selected.

4 When the transfer is complete, “Done” will appear on the screen. Select “Done”.

► When another Bluetooth® device is connected

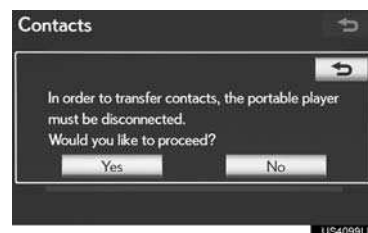


- When another Bluetooth® device is currently connected, this screen is displayed.
- To disconnect it, select “Yes”.

4
PHONE


► From “Contacts” screen

Phonebooks of PBAP incompatible but OPP compatible phones can also be transferred from the “Contacts” screen.

- 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing  on the steering wheel.
- 2 Select “Contacts” on the “Phone” screen.
- 3 Select “Transfer”.



- 4 This screen is displayed. The following operations are performed in the same manner as when they are performed from the “Setup” screen.

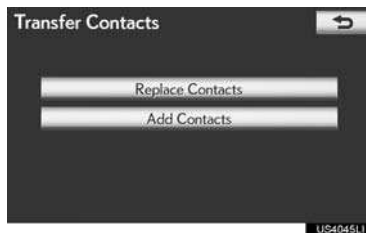

■ REGISTERING THE PHONE-BOOK DATA

The phonebook data can be registered. Up to 3 numbers per person can be registered. New phonebook data cannot be added for PBAP compatible Bluetooth® phones.

- 1 Select “New Contact”.



- 2 Use the software keyboard to input the name and select “OK”.




- 3 Input the phone number and select “OK”.




- To use a tone signal after the phone number, input the tone signal too.

- 4 Select the phone type.

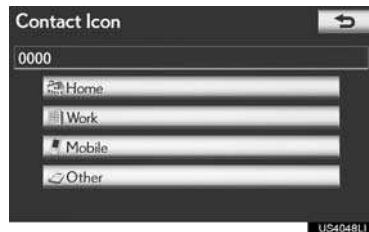

- 5 When 2 or less numbers in total are registered to this contact, this screen is displayed.

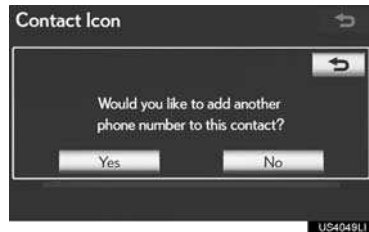

- To add a number to this contact, select "Yes".


■ EDITING THE PHONEBOOK DATA

The phone number can be registered in "Phone # 1", "Phone # 2" and "Phone # 3" separately. Phonebooks cannot be edited for PBAP compatible Bluetooth® phones via the navigation system.


- 1 Select "Edit Contacts".



- 2 Select the desired data to edit.

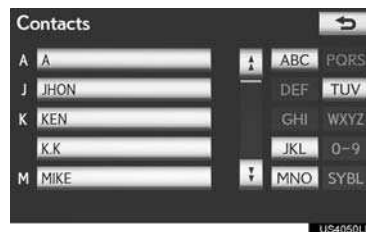


- 3 Select the desired name or number.

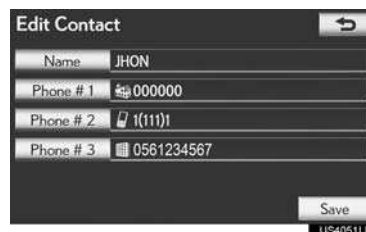

- 4 Edit the name or the number. (See "REGISTERING THE PHONEBOOK DATA" on page 178.)
- 5 Select "Save" when editing is completed.


4
PHONE

■ THE “Edit Contact” SCREEN CAN ALSO BE DISPLAYED


- ▶ From the “Contact” screen
 - 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing  on the steering wheel.
 - 2 Select “Contacts” on the “Phone” screen.
 - 3 Select the desired data from the list on the “Contacts” screen.
 - 4 Select “Options”.



- 5 Select “Edit”.

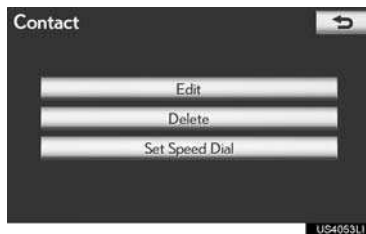


- ▶ From the “Call History” screen

- 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
- The “Phone” screen can be displayed by pressing  on the steering wheel.
- 2 Select “Call History” on the “Phone” screen.
- 3 Select the desired number from the list on the “Call History” screen.
- 4 Select “Add to Contacts” or “Update Contact”.



- 5 If “Update Contact” has been selected, this screen will be displayed. Select the desired data from the list.

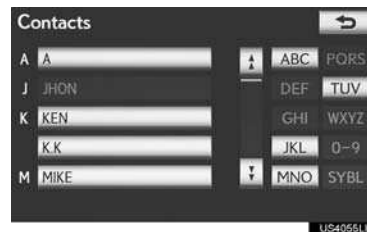


■ DELETING THE PHONEBOOK DATA

The data can be deleted.
When selling or disposing of the vehicle, delete all your data on the system.
For PBAP compatible phones, delete the phonebook data after setting **"Automatically Download Contacts"** to **"Off"**. (See "PBAP compatible models automatic data transfer setting" on page 176.)

- 1 Select **"Delete Contacts"**.



- 2 Select the desired data or **"Select All"**, then select **"Delete"**.

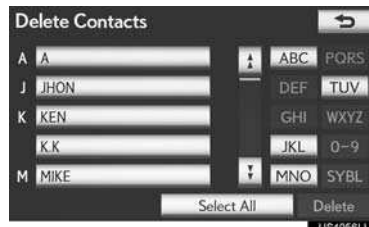

- Multiple data can be selected and deleted at the same time.

- 3 Select **"Yes"**.

■ ALTERNATIVE PHONEBOOK DATA DELETION METHOD

- ▶ PBAP incompatible but OPP compatible models

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Phone"**.

- The "Phone" screen can be displayed by pressing on the steering wheel.


- 2 Select **"Contacts"** on the "Phone" screen.

- 3 Select the desired data from the list on the "Contacts" screen.

- 4 Select **"Options"**.



- 5 Select **"Delete"**.

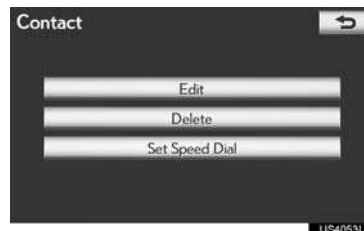

- 6 Select **"Yes"**.

(INFORMATION)

- When a Bluetooth[®] phone is deleted, the phonebook data will be deleted at the same time.

SPEED DIALS SETTING

Speed dials can be registered and deleted.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Phone” on the “Setup” screen.
- 3 Select “Phonebook” on the “Phone Settings” screen.
- 4 Select “Manage Speed Dials”.




- 5 Perform each setting according to the procedures outlined on the following pages.



THE “Speed Dials” SCREEN CAN ALSO BE DISPLAYED


- ▶ From the “Speed Dial” screen
 - 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing on the steering wheel.
 - 2 Select “Speed Dials” on the “Phone” screen.
 - 3 Select “Options”.

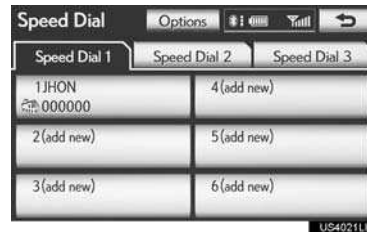

- ▶ From the “Contacts” screen
 - 1 Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing on the steering wheel.
 - 2 Select “Contacts” on the “Phone” screen.
 - 3 Select “Options”.



4 Select "Manage Speed Dials".

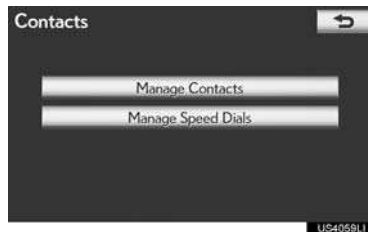

REGISTERING THE SPEED DIAL

Speed dial numbers can be registered by selecting the desired number from the phonebook. Up to 18 numbers per phone can be registered as a speed dial.


1 Select "New".




2 Select the desired data to be registered.



3 Select the desired phone number.

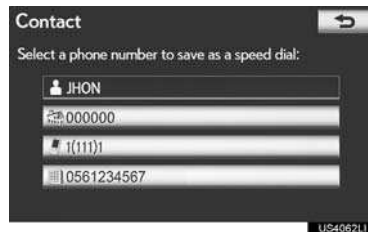

4 Select the desired speed dial location.

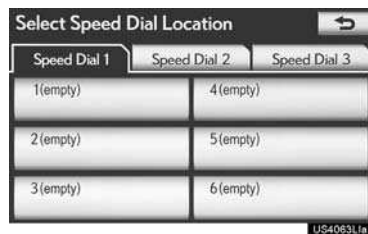


PHONE

5 If a location that is already in use is selected, this screen will be displayed.




Select "Yes" to replace it.


6 When this screen is displayed, the operation is complete.

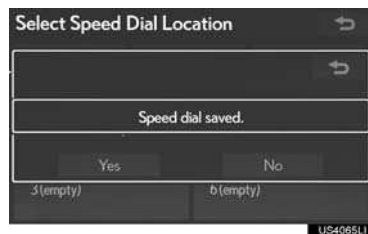

■ THE SPEED DIAL CAN ALSO BE REGISTERED

▶ From the "Speed Dial" screen


- 1 Press the "MENU" button on the Remote Touch, then select "Phone".
- The "Phone" screen can be displayed by pressing  on the steering wheel.
- 2 Select "Speed Dials" on the "Phone" screen.
- 3 Select "(add new)".

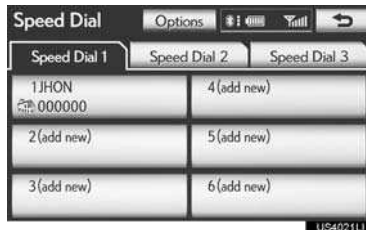


- 4 Select "Yes" to set new speed dial.




- 5 Select the desired data to be registered.

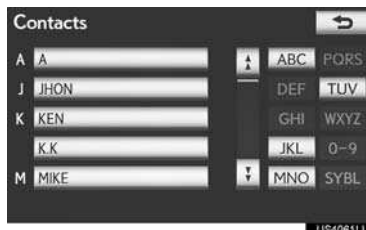

- 6 Select the desired phone number.

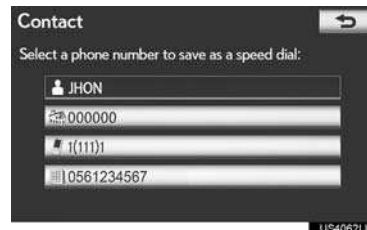


▶ From the "Contact" screen


- 1 Press the "MENU" button on the Remote Touch, then select "Phone".
- The "Phone" screen can be displayed by pressing  on the steering wheel.
- 2 Select "Contacts" on the "Phone" screen.
- 3 Select the desired data from the list on the "Contacts" screen.
- 4 Select "Options".



- 5 Select "Set Speed Dial".

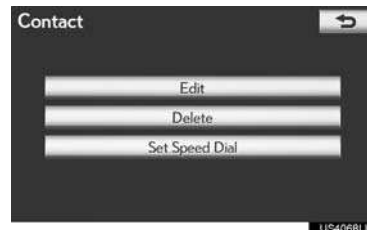

- 6 This screen is displayed.

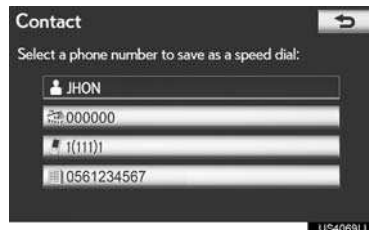


- The following operations are performed in the same manner as when they are performed from the "Setup" screen.


DELETING THE SPEED DIAL

The speed dial can be deleted.

- 1 Select "Delete".

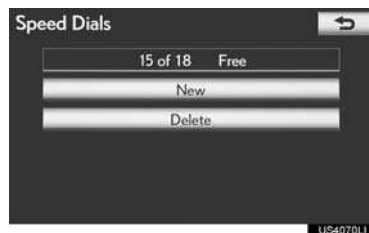

- 2 Select the desired data, or to delete all the data select "Select All", then select "Delete".

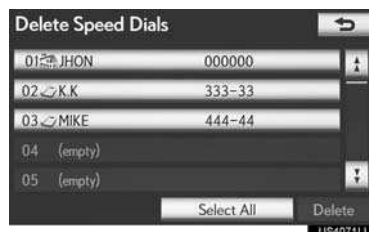

- Multiple data can be selected and deleted at the same time.


- 3 Select "Yes".

DELETING CALL HISTORY

The call history can be deleted.

For PBAP compatible phones, delete the call history after setting "**Automatically Download Call History**" to "Off". (See "PBAP compatible models automatic data transfer setting" on page 176.)

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Phone" on the "Setup" screen.
- 3 Select "Phonebook" on the "Phone Settings" screen.
- 4 Select "Delete Call History".

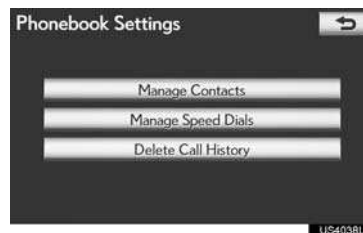


- 5 Select the desired history to be deleted.



4
PHONE

- 6 Select the desired data, or to delete all the data select “Select All”, then select “Delete”.

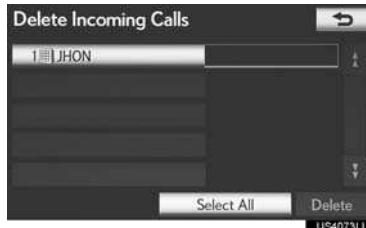

- Multiple data can be selected and deleted at the same time.


- 7 Select “Yes”.

■ THE CALL HISTORY CAN ALSO BE DELETED

- Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing on the steering wheel.
- Select “Call History” on the “Phone” screen.
- Select “Delete”.



- 4 This screen is displayed.

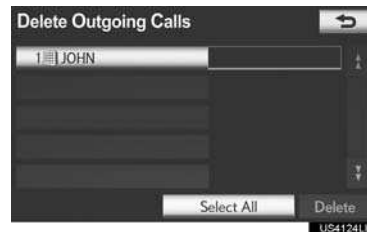

- The following operations are performed in the same manner as when they are performed from the “Setup” screen.
 - Other call history can be operated similarly.
- ▶ Deleting after call history has been displayed

- Press the “MENU” button on the Remote Touch, then select “Phone”.
 - The “Phone” screen can be displayed by pressing on the steering wheel.
- Select “Call History” on the “Phone” screen.
- Select the desired history to be deleted.



- 4 Select "Delete".




- 5 Select "Yes".


MESSAGE SETTINGS

Message settings can be changed.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Phone" on the "Setup" screen.
- 4 Select "Messaging Settings".

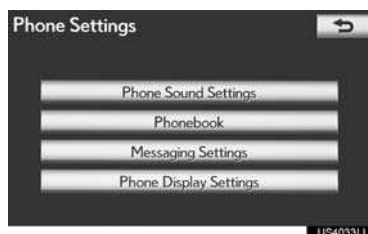

- 5 Perform each setting according to the procedures outlined on the following pages.

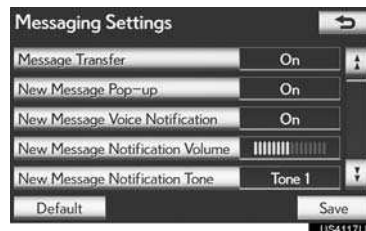


- 6 Select "Save" when each setting is completed.

THE "Messaging Settings" SCREEN CAN ALSO BE DISPLAYED

4



- 1 Press the "MENU" button on the Remote Touch, then select "Phone".
 - The "Phone" screen can be displayed by pressing on the steering wheel.
- 2 Select "Messages" on the "Phone" screen.
- 3 Select "Options".

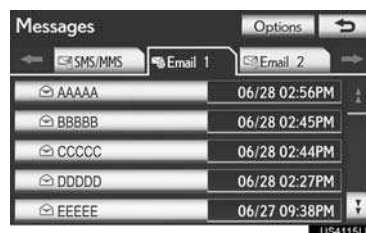

PHONE

2. SETUP

SCREEN FOR “Messaging Settings”

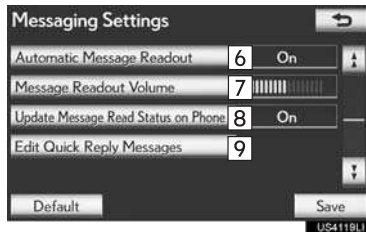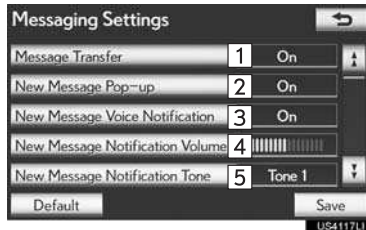

- On this screen, the following functions can be operated:

No.	Function
1	Select to set message forwarding from cellular phones to “On” or “Off”.
2	Select to set the new message notification display to “On” or “Off”.
3	Select to set the new message voice notification to “On” or “Off”.

No.	Function
4	Select to adjust the new message notification volume. (See “NEW MESSAGE NOTIFICATION VOLUME SETTINGS” on page 189.)
5	Select a new message voice notification tone. (See “NEW MESSAGE NOTIFICATION TONE SETTINGS” on page 189.)
6	Select to set the automatic message read out function to “On” or “Off”.
7	Select to adjust the message read out volume. (See “MESSAGE READ OUT VOLUME SETTINGS” on page 190.)
8	Select to set the cellular phone’s message read and unread status update function to “On” or “Off”.
9	Select to edit quick reply messages. (See “EDIT QUICK REPLY MESSAGES” on page 190.)

- To reset all setup items, select “Default”.


INFORMATION

- Depending on the phone, these functions may not be available.

NEW MESSAGE NOTIFICATION VOLUME SETTINGS

The new message notification volume can be adjusted.

- 1 Select "New Message Notification Volume".

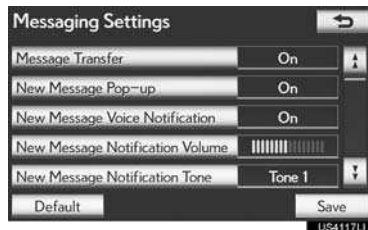

- 2 Select "-" or "+" to adjust the new message notification volume.



- 3 Select "OK".


INFORMATION

- The system will automatically increase the volume when the speed exceeds 50 mph (80 km/h).


NEW MESSAGE NOTIFICATION TONE SETTINGS

A new message voice notification tone can be selected.

- 1 Select "New Message Notification Tone".

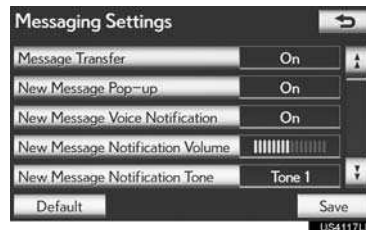

- 2 Select the desired new message notification tone.

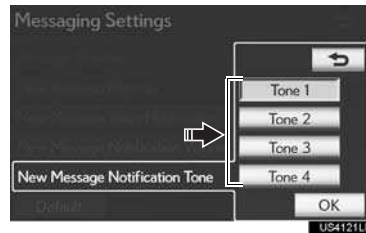

- New message notification tones can be heard by selecting the screen buttons.

- 3 Select "OK".

4


PHONE

2. SETUP


MESSAGE READ OUT VOLUME SETTINGS

Message read out volume can be adjusted.

- 1 Select "Message Readout Volume".

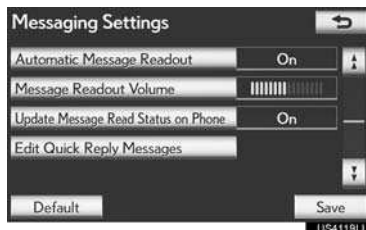

- 2 Select "-" or "+" to adjust the message read out volume.

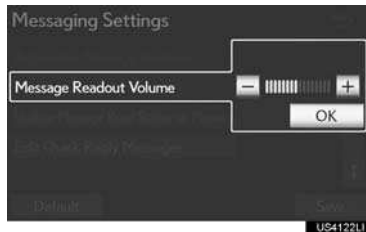

- 3 Select "OK".


INFORMATION

- The system will automatically increase the volume when the speed exceeds 50 mph (80 km/h).

EDIT QUICK REPLY MESSAGES

Quick reply messages can be edited. 15 messages have already been stored.

- 1 Select "Edit Quick Reply Messages".

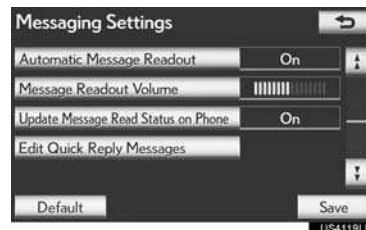

- 2 Select the screen button corresponding to the desired message.




- 3 Use the software keyboard to edit the message.

- 4 Select "OK".

INITIALIZING THE SETTINGS

The settings can be initialized.

- 1 Select "Default".

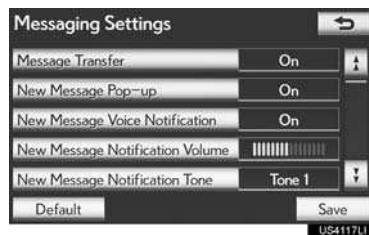


- 2 Select "Yes".

PHONE DISPLAY SETTINGS

The phone display settings can be changed.


- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Phone" on the "Setup" screen.
- 4 Select "Phone Display Settings".

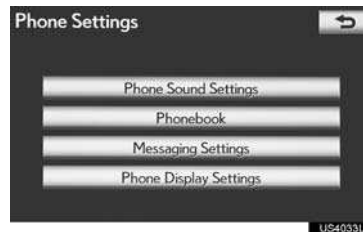

4


PHONE

- 5 Perform each setting according to the procedures outlined on the following pages.

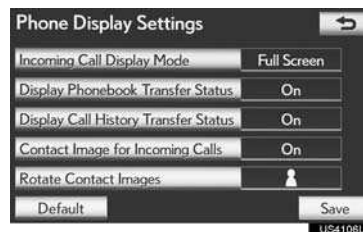

- 6 When each setting is completed, select "Save".

SCREEN FOR “Phone Display Settings”

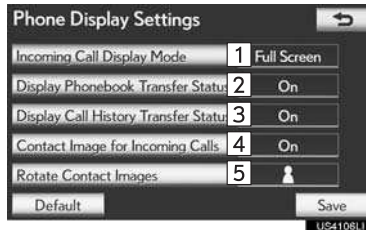

- On this screen, the following functions can be operated:

No.	Function
1	Select to change the incoming call display. (See “INCOMING CALL DISPLAY” on page 192.)
2	For PBAP compatible models, select to set the display of the automatic phonebook transfer completion message to “On” or “Off”.
3	For PBAP compatible models, select to set the display of the automatic call history transfer completion message to “On” or “Off”.
4	For PBAP compatible models, select to set the display of images during calls to “On” or “Off”.
5	For PBAP compatible models, select to set the orientation of images displayed during calls. (See “ROTATING CONTACT IMAGES” on page 193.)

- To reset all setup items, select “Default”.

INFORMATION


- Depending on the phone, these functions may not be available even if the phone is PBAP compatible.

INCOMING CALL DISPLAY


The type of incoming call display can be selected.



- 1 Select “Incoming Call Display Mode”.

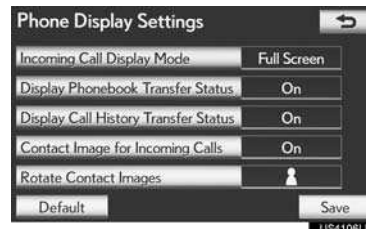

2 Select "Full Screen" or "Drop Down".

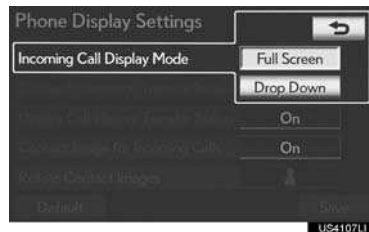


Screen button	Function
"Full Screen"	When a call is received, the hands-free screen is displayed and it can be operated on the screen.
"Drop Down"	The message is displayed on the upper side of the screen and it can only be operated via the steering wheel switches.

3 Select "Save".

ROTATING CONTACT IMAGES

For PBAP compatible models, when "Contact Image for Incoming Calls" is set to "On", images stored together with phone numbers in the cellular phone's phonebook will be transferred and displayed during the incoming call. The orientation of the image can be set.

1 Select "Rotate Contact Images".

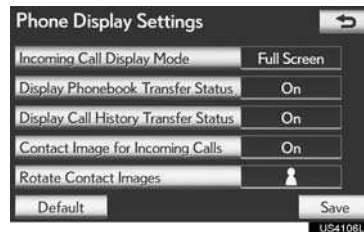

2 Select the desired orientation of the image to be displayed.




3 Select "Save".

INITIALIZING THE SETTINGS

The settings can be initialized.

1 Select "Default".

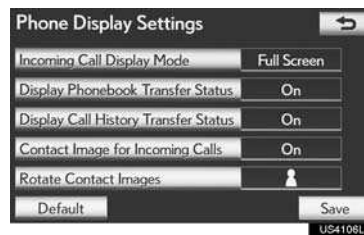

2 Select "Yes".


4 PHONE

2. SETUP

2. Bluetooth® SETTINGS

A Bluetooth® device can be set up.

- 1 Press the “MENU” button on the Remote Touch.

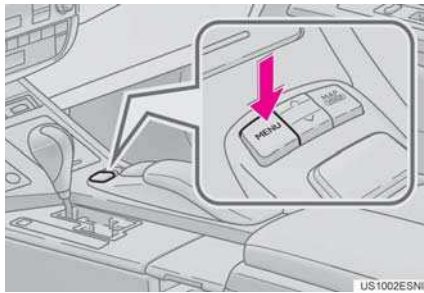


- 2 Select “Setup”.



- 3 Select “Bluetooth*”.




- 4 Perform each setting according to the procedures outlined on the following pages.

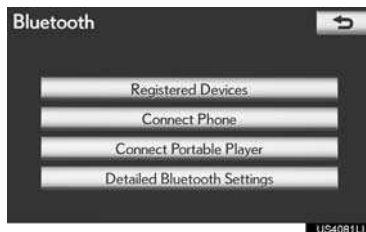

REGISTERED DEVICES

A Bluetooth® device can be registered, deleted or set up.

- 1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “Setup” on the “Menu” screen.
- 3 Select “Bluetooth*” on the “Setup” screen.
- 4 Select “Registered Devices”.

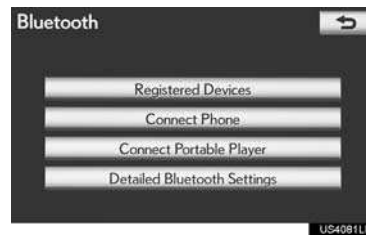

- 5 Perform each setting according to the procedures outlined on the following pages.




*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

REGISTERING A Bluetooth® DEVICE

Bluetooth® devices compatible with phones (HFP) and portable players (AVP) can be registered simultaneously. Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.

- 1 Select "Add New" to register a Bluetooth® device to the system.

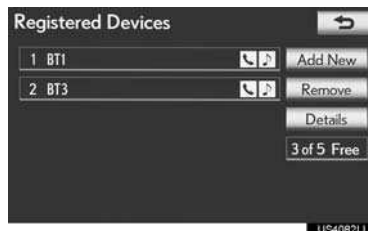

- If 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. See "When 5 Bluetooth® devices have already been registered" on page 196.

- 2 When this screen is displayed, operate the Bluetooth® device.



- Search for the navigation system displayed on the system's screen using your Bluetooth® device, and register the Bluetooth® device.

For details about operating the Bluetooth® device, see the manual that comes with it.

- A passcode is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® phone being connected, a message confirming registration may be displayed on the Bluetooth® phone's screen. Respond and operate the Bluetooth® phone according to the confirmation message.

- To cancel the registration, select "Cancel".

- 3 When the connection is completed, this screen is displayed.




- When using the same device, it is not necessary to register it again.



4
PHONE

- When this screen is displayed, follow the guidance on the screen to try again.

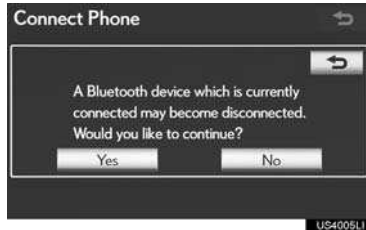


- When another Bluetooth® device is currently connected, this screen is displayed.
- To disconnect the Bluetooth® device, select **“Yes”**.
- ▶ When 5 Bluetooth® devices have already been registered


- 1 When 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. Select **“Yes”** to delete 1 or more.
- 2 Select the device to be deleted, then select **“Remove”**.
- 3 Select **“Yes”**.

DELETING A Bluetooth® DEVICE

- 1 Select **“Remove”**.

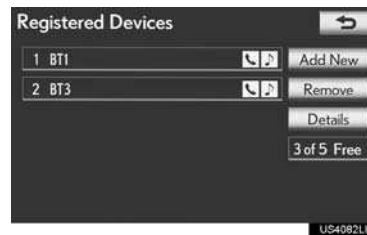

- 2 Select the desired device, or to delete all the devices select **“Select All”**, then select **“Remove”**.

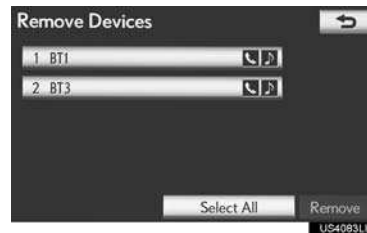

- Multiple devices can be selected and deleted at the same time.

- 3 Select **“Yes”**.

INFORMATION

- When deleting a Bluetooth® phone, the phonebook data will be deleted at the same time.

EDITING THE Bluetooth® DEVICE

The Bluetooth® device's information can be displayed on the screen. The displayed information can also be edited.

“Device Name”: The name of the Bluetooth® device which is displayed on the screen. It can be changed to a desired name.

- Even if the device name is changed, the name registered in your Bluetooth® device does not change.

“Device Address”: The device address is unique to each device. It cannot be changed.

- If 2 Bluetooth® devices have been registered with the same device name, the devices can be distinguished referring to the device's address.


“My Phone Number”: The phone number of the Bluetooth® phone is displayed on the screen. Depending on the type of phone, the phone number may not be displayed.

“Profiles”: The compatibility profile of the Bluetooth® device is displayed on the screen.


“Connect Portable Player from”: There are 2 portable player connection settings available; **“Vehicle”** and **“Portable Player”**.

■ CHANGING A DEVICE NAME

- 1 Select **“Details”**.

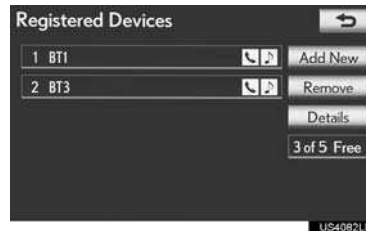

- 2 Select the device to be edited.

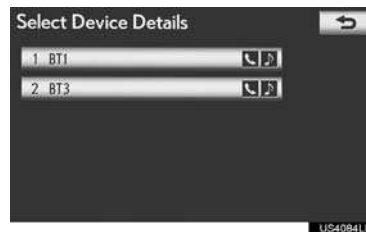

- 3 Select **“Device Name”**.



- 4 Use the software keyboard to input the device name and select **“OK”**.



- 5 Confirm the device name and select **“OK”**.

4
PHONE

■ **SETTING PORTABLE PLAYER CONNECTION METHOD**

- 1 Select "Connect Portable Player from".



- 2 Select the desired connection method.



“**Vehicle**”: Select to connect the audio system to the portable player.

“**Portable Player**”: Select to connect the portable player to the audio system.

- Depending on the portable player, the “**Vehicle**” or “**Portable Player**” connection method may be best. As such, refer to the manual that comes with the portable player.

- 3 Select “OK”.


SELECTING A Bluetooth® PHONE

If more than 1 Bluetooth® phone has been registered, it is necessary to select which phone to connect to.

It is possible to select from up to 5 registered Bluetooth® devices (Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.)


Although up to 5 Bluetooth® phones can be registered in the system, only 1 Bluetooth® phone can function at a time.

- 1 Press the “**MENU**” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “**Setup**” on the “Menu” screen.
- 3 Select “**Bluetooth***” on the “Setup” screen.
- 4 Select “**Connect Phone**”.

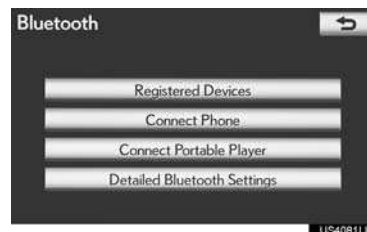

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

5 Select the phone to be connected.

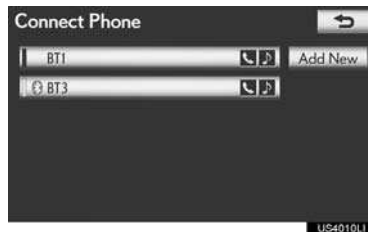

- The indicator of the selected Bluetooth® phone will turn on.

- If the desired Bluetooth® phone is not on the list, select **"Add New"** to register the phone. (See page 195.)

- The currently connected Bluetooth® phone's screen button will have a Bluetooth® mark displayed on it. If the currently connected Bluetooth® phone's screen button is selected, the Bluetooth® phone can be disconnected. Select **"Yes"** to disconnect.

6 This screen is displayed.



7 When the result message is displayed, the Bluetooth® phone can be used.




▶ When a phone is connected while Bluetooth® audio is playing

- This screen is displayed, and the Bluetooth® audio will stop temporarily.



▶ When another Bluetooth® device is connected

- When another Bluetooth® device is currently connected, this screen is displayed. To disconnect the Bluetooth® device, select **"Yes"**.

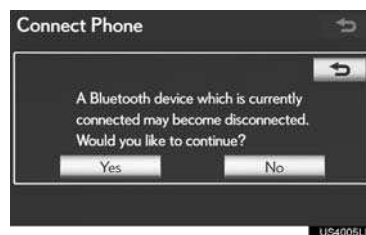

4
PHONE


SELECTING PORTABLE PLAYER

If more than 1 portable player has been registered, it is necessary to select which portable player to connect to.


It is possible to select from up to 5 registered Bluetooth® devices (Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.)

Although up to 5 portable players can be registered in the system, only 1 portable player can function at a time.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Bluetooth*" on the "Setup" screen.
- 4 Select "Connect Portable Player".

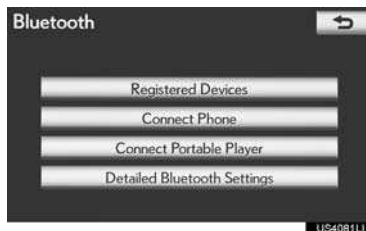

- 5 Select the desired portable player to be connected.

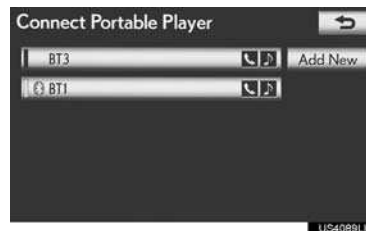


- The indicator of the selected portable player will turn on.
- If the desired portable player is not on the list, select "Add New" to register the portable player. (See page 195.)
- The currently connected portable player's screen button will have a Bluetooth® mark displayed on it. If the currently connected portable player's screen button is selected, the portable player can be disconnected. Select "Yes" to disconnect.

- 6 This screen is displayed.




*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 7 When the result message is displayed, the portable player can be used.

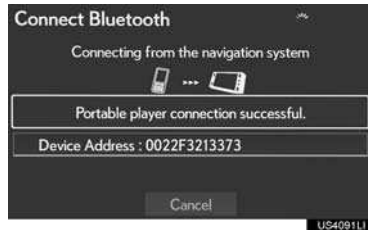


- ▶ When another Bluetooth® device is connected
- When another Bluetooth® device is currently connected, this screen is displayed. To disconnect it, select "Yes".

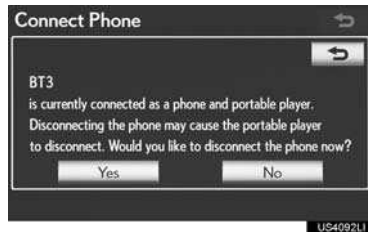

DETAILED Bluetooth® SETTINGS

The Bluetooth® settings can be confirmed and changed.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Bluetooth*" on the "Setup" screen.
- 4 Select "Detailed Bluetooth* Settings".

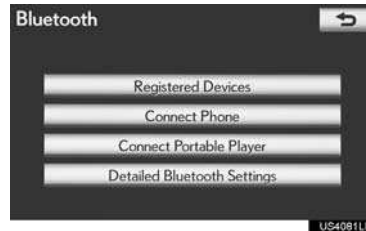


4

PHONE

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

5 This screen is displayed.

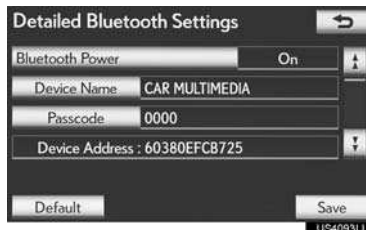

- The information displays the following items:

Screen button/ Screen item	Information
"Device Name"	This name will be displayed on the device when it is connected. It can be changed to a desired name.
"Passcode"	The password that was set when the Bluetooth® device was registered can be changed.
Device Address	The device address is unique to each device. It cannot be changed.
Profiles	The compatibility profile of the Bluetooth® device is displayed on the screen. (See pages 146 and 264.)

- If it is desirable to change the settings, refer to the following pages.
- When the settings have been changed, select **"Save"**.

CHANGING THE Bluetooth® SETTINGS

The Bluetooth® settings can be changed according to the following procedures.

■ CHANGING "Bluetooth* Power"

The "Bluetooth* Power" display shows the following state.

When "Bluetooth* Power" is "On":

The Bluetooth® device is automatically connected when the "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode.


When "Bluetooth* Power" is "Off":

The Bluetooth® device is disconnected, and the system will not connect to it next time.


- The **"Bluetooth* Power"** auto connection state can be set on or off.
 - **"On"**: The auto connection is turned on.
 - **"Off"**: The auto connection is turned off.
- The auto connection state cannot be changed from **"On"** to **"Off"** while driving, but it can be changed from **"Off"** to **"On"**.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 1 Select "Bluetooth* Power".

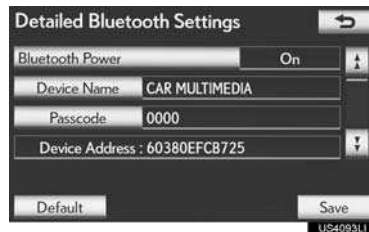

- 2 Select "On" or "Off".

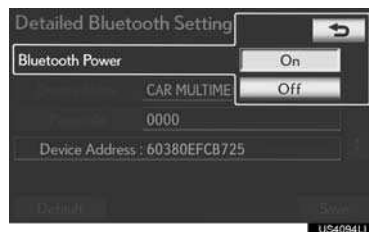


- 3 Select "Save".


- In the event the state of "Bluetooth* Power" is changed from "Off" to "On", Bluetooth® connection will begin.

■ EDITING THE DEVICE NAME

- 1 Select "Device Name".

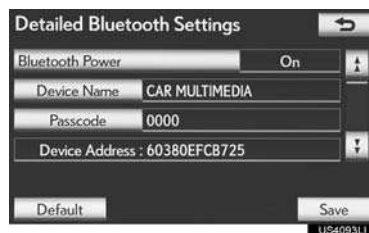


- 2 Use the software keyboard to input the device name and select "OK".

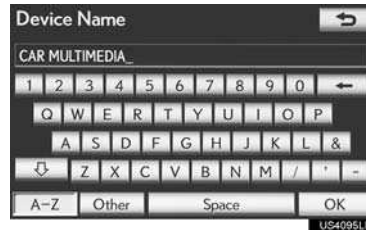


- 3 Select "Save".

■ EDITING THE PASSCODE

- 1 Select "Passcode".

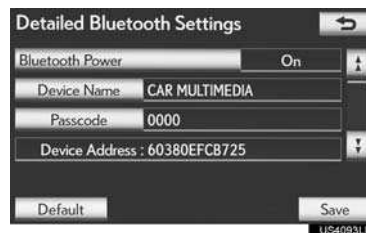

- 2 Input a passcode and select "OK".

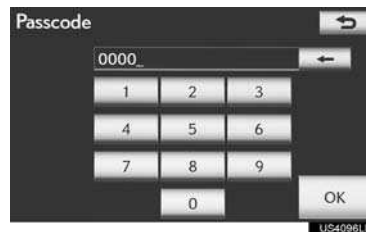


- 3 Select "Save".

- *: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


Bluetooth® DEVICE CONNECTION STATUS DISPLAY SETTINGS

When "Bluetooth* Power" is "On" and the "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode, the Bluetooth® phone and portable player's connection status can be displayed. (See "CHANGING "Bluetooth* Power"" on page 202.)

- 1 Select "Display Phone Status" or "Display Portable Player Status".

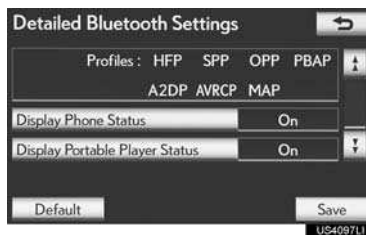

- 2 Select "On".

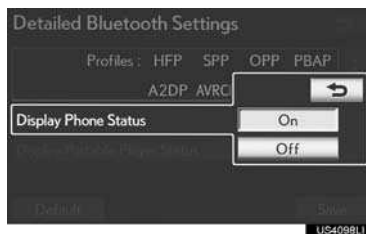


- 3 Select "Save".

INITIALIZING THE Bluetooth® SETTINGS

The settings can be initialized.

- 1 Select "Default".

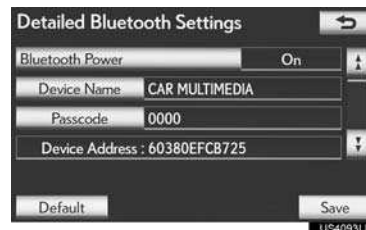

- 2 Select "Yes".

- If the state of "Bluetooth* Power" is changed from "Off" into "On", Bluetooth® connection will begin.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4

PHONE

1. AUDIO/VIDEO SYSTEM OPERATION

1. QUICK REFERENCE

Operations such as selecting a preset station and adjusting the sound balance are carried out on the screen.


► Using the instrument panel

Press the “**RADIO**” or “**MEDIA**” button to display the audio/video screen.

► Using the Remote Touch

Press the “**MENU**” button on the Remote Touch, then select “**Radio**” or “**Media**” to display the audio/video screen.

If a Mark Levinson brand audio system is installed, the “**Mark Levinson**” logo is shown on the panel.

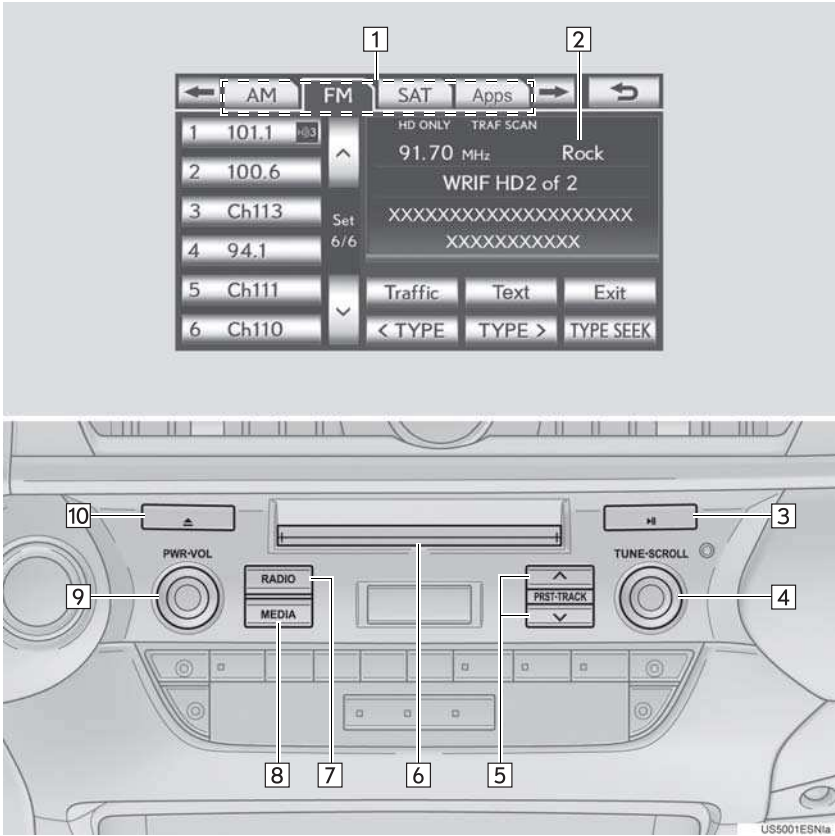

1. AUDIO/VIDEO SYSTEM OPERATION

No.	Name	Function	Page
1	Function menu tab	Select the desired radio or media mode screen tab.	211
2	Function menu display screen	Select to control the selected radio or media mode.	211
3	"⏸" button	Press to mute/unmute or pause/resume the current operation.	–
4	"TUNE-SCROLL" knob	Turn to step up and step down the station band, change to the next or previous satellite radio channel, or skip to the next or previous track, DVD chapter, etc.	217, 227, 234, 236, 241, 255, 261, 269
5	"PRST-TRACK" button	Press the "∧" or "∨" button to preset up or down for a station or channel, or to change a desired track, file or chapter. Press and hold the "∧" or "∨" button to seek up or down for a station or channel, or to fast forwarding/rewinding for a track, file or chapter.	218, 228, 234, 236, 241, 255, 261, 269
6	Disc slot	Insert discs into the slot.	233
7	"RADIO" button	Press to display the radio control screen.	211
8	"MEDIA" button	Press to display the media control screen.	211
9	"PWR·VOL" knob	Press to turn the audio/video system on and off, and turn to adjust the volume.	211
10	"▲" button	Press to eject a disc.	233

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION

2. SOME BASICS

This section describes some of the basic features of the audio/video system. Some information may not pertain to your system.

Your audio/video system works when the "START STOP ENGINE" <"POWER"> switch is turned to ACCESSORY or IGNITION ON <ON> mode.

CAUTION


- For vehicles sold in U.S.A. and Canada:
Part 15 of the FCC Rules
FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Laser products
 - USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
 - THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

NOTICE

- To prevent the 12-volt battery from being discharged, do not leave the audio/video system on longer than necessary when the engine is not running <the hybrid system is not operating>.

VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.

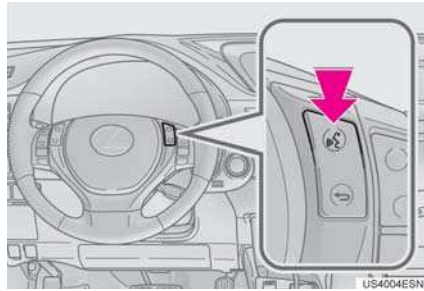


- For the operation of the voice command system and its list of commands, see pages 308 and 317.

AUDIO SPLIT SCREEN DISPLAY

The audio split screen can be displayed while the map screen is displayed. For details, see page 46.



TURNING THE SYSTEM ON AND OFF

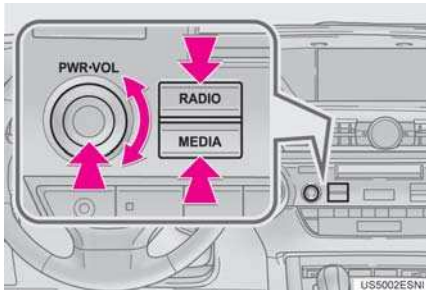

“RADIO”, “MEDIA” button: Press to display screen buttons for the audio/video system.


“PWR-VOL” knob: Press to turn the audio/video system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

- A function that enables automatic return to the previous screen from the audio/video screen can be selected. See page 51 for details.

SWITCHING BETWEEN FUNCTIONS

► Using the instrument panel

- 1 Each time the “RADIO” or “MEDIA” button is pressed, the audio control mode changes.

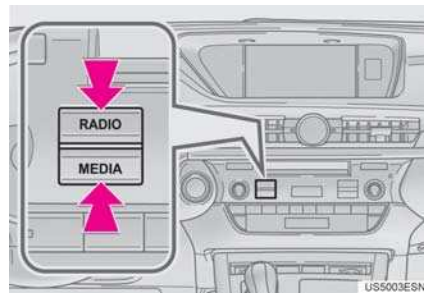


“RADIO” button: To display the “AM”, “FM”, “SAT” and “Apps” tabs on the screen. (Radio mode)

“MEDIA” button: To display the “DISC”, “BT Audio”, “AUX”, “USB” and “iPod” tabs on the screen. (Media mode)

► Using the Remote Touch

- 1 Press the “MENU” button on the Remote Touch.

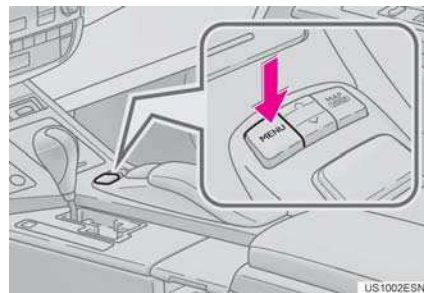

1. AUDIO/VIDEO SYSTEM OPERATION

2 Select "Radio" or "Media".



3 Select the desired tab.



- Up to 4 tabs can be displayed on the screen. Select or , located either side of the screen tabs, to display tabs from the previous or next page.
- The desired audio mode can be found by selecting or and then selecting that audio mode tab.

INFORMATION

- If a disc is not inserted, the DVD player cannot be turned on.
- The DVD player can be turned off by ejecting a disc.
- When radio or media mode is selected, the respective screen buttons are displayed on the screen.
- Dimmed screen buttons cannot be operated.


DSP CONTROL

1 Press the "RADIO" or "MEDIA" button. (Using the instrument panel)
Press the "MENU" button on the Remote Touch and select "Radio" or "Media". (Using the Remote Touch)

2 Select .



3 Select the "DSP" tab to display this screen.

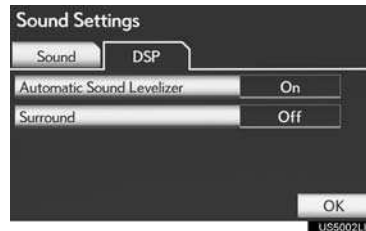

4 Select the desired items to be set.

5 Select "OK".

AUTOMATIC SOUND LEVELIZER (ASL)

The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.

- 1 Select **"Automatic Sound Levelizer"**.
- 2 Select **"On"** or **"Off"**.

SURROUND FUNCTION

This function can create a feeling of presence.

- 1 Select **"Surround"**.
- 2 Select **"On"** or **"Off"**.

tone and balance

tone


How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

balance

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

- 1 Select the **"Sound"** tab to display this screen.

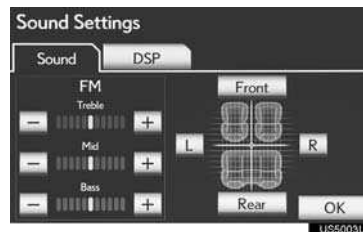

2 Select the desired screen button.

Screen button	Function
"Treble" "+" or "-"	Select to adjust high-pitched tones.
"Mid" "+" or "-"	Select to adjust mid-pitched tones.
"Bass" "+" or "-"	Select to adjust low-pitched tones.
"Front" or "Rear"	Select to adjust the sound balance between the front and rear speakers.
"L" or "R"	Select to adjust the sound balance between the left and right speakers.

3 Select "OK".

INFORMATION

- The tone of each mode (such as AM, FM and DVD player) can be adjusted.


SELECTING SCREEN SIZE

Before selecting screen size, it is necessary to insert a DVD disc and select DISC mode.


- 1 Press the "MEDIA" button. (Using the instrument panel)
Press the "MENU" button on the Remote Touch and select "Media". (Using the Remote Touch)
- 2 Select the "DISC" tab.
- 3 Select "Options".




- 4 Select "Wide".

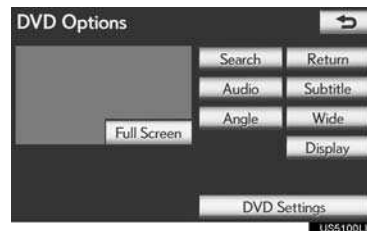

5 Select the desired screen button.

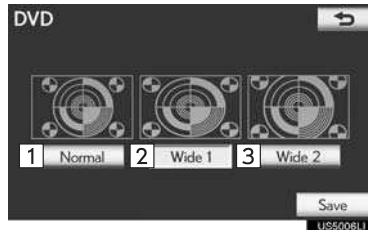


No.	Function
1	Select to display a 3 : 4 screen, with either side in black.
2	Select to widen the 3 : 4 screen horizontally to fill the screen.
3	Select to widen the 3 : 4 screen vertically and horizontally, by the same ratio, to fill the screen.

● When  is selected, the previous screen is displayed.

6 Select "Save".

DVD PLAYER

1 When inserting a disc, gently insert the disc with the label facing up.

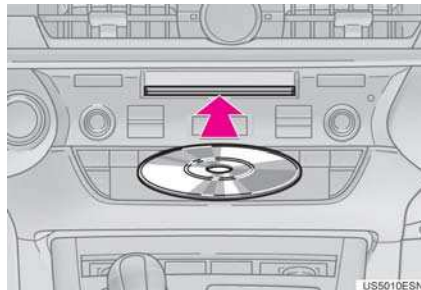

NOTICE

- Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

INFORMATION

- The player is intended for use with 4.7 in. (12 cm) discs only.

5

AUDIO/VIDEO SYSTEM

AUX PORT

The sound of portable audio players connected to the AUX port can be enjoyed. For details, refer to "Owner's Manual".

- 1 Press the "MEDIA" button to display the media control screen and select the "AUX" tab or press the "MEDIA" button repeatedly to change to AUX mode.
 - For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.

CAUTION

- Do not connect portable audio device or operate the controls.

NOTICE

- Depending on the size and shape of the portable audio device that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the portable audio device or the terminal, etc.
- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

INFORMATION

- When the portable audio player is not connected to the AUX port, the tab will be dimmed.

USB PORT

A USB memory/iPod can be connected to the USB port. For details, see "CONNECTING A USB MEMORY" on page 254 and "CONNECTING iPod" on page 260.

- 1 Press the "MEDIA" button to display the media control screen and select the "USB" or "iPod" tab or press the "MEDIA" button repeatedly to change to USB memory/iPod mode.
 - For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.

INFORMATION

- When a USB memory/iPod is not connected with the USB port, the tab will be dimmed.


1. AUDIO/VIDEO SYSTEM OPERATION

3. RADIO OPERATION

LISTENING TO THE RADIO

SELECTING A RADIO STATION


- 1 Press the "RADIO" button.

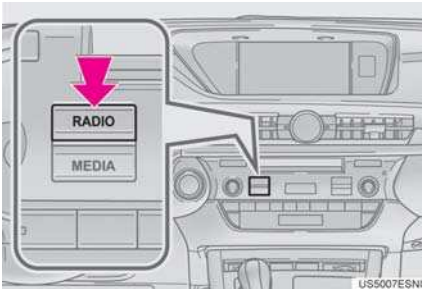

- 2 Select the "AM", "FM", "SAT" or "Apps" tab or press the "RADIO" button repeatedly to select the desired tab.
 - For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.

STEP UP AND DOWN THE STATION BAND

- 1 Turn the knob clockwise to step up the station band or counterclockwise to step down.

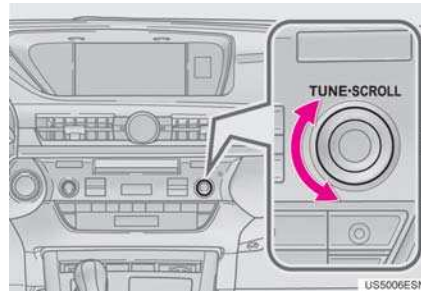

INFORMATION

- The radio automatically changes to stereo reception when a stereo broadcast is received.

5

AUDIO/VIDEO SYSTEM

PRESETTING A STATION

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

- 1 Tune in the desired station.
- 2 Select one of the left side screen buttons (1-6) and hold it until a beep is heard. This sets the frequency to the screen button. The station's frequency will be displayed in the screen button.



- To change the preset station to a different one, follow the same procedure.

SELECTING A STATION

Tune in the desired station using one of the following methods.

Preset tuning: Select one of the mix preset channels on the left side of the screen or press the “^” or “v” button of “PRST-TRACK” to select the desired station. The screen button is highlighted and the station frequency appears on the screen.

Seek tuning: Press and hold the “^” or “v” button of “PRST-TRACK”. The radio will begin seeking up or down for a station of the nearest frequency and will stop when a station is found. Each time the button is pressed, the stations will be searched automatically one after another.

To scan all the frequencies: Select “SCAN”. “SCAN” will appear on the screen. The radio will find the next station and stay there for 10 seconds if “All” or “HD Only” is selected, or 5 seconds if “Analog” is selected, and then scan again. To stay tuned to a station and stop the scanning, select “SCAN” again. (To set HD Radio™ system, see page 288.)

RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the “FM info” indicator is on.

SELECTING A DESIRED TYPE

1 Select “Options”.



2 Select “TYPE >” or “< TYPE” to move forward and backward through the program list.



- Once a program type has been set, “TYPE SEEK” will appear on the screen.
- The program list is in the following order:
 - Classical
 - Country
 - EasyLis (Easy Listening)
 - Inform (Information)
 - Jazz
 - News
 - Oldies
 - Other
 - Pop Music
 - Religion
 - Rock
 - R&B (Rhythm and Blues)
 - Sports
 - Talk
 - Traffic (Not available when “HD Radio Settings” are set to analog.)
 - Alert (Emergency Alert)

3 Select “TYPE SEEK” and the system will start to seek for stations in the relevant program type.

INFORMATION

- If no relevant program can be found, “no type” will appear on the screen.

5 AUDIO/VIDEO SYSTEM

TRAFFIC ANNOUNCEMENT

A station that regularly broadcasts traffic information is automatically located.



“Traffic”: Select to seek a traffic program station. “TRAF SEEK” will appear on the screen.

INFORMATION

- If no traffic program station is found, “No Traffic” will appear on the screen.
- If a traffic program station is found, the name of the traffic program station will be displayed for a while.


1. AUDIO/VIDEO SYSTEM OPERATION

4. HD Radio™ TECHNOLOGY INFORMATION

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.

USING HD Radio™ TECHNOLOGY

- 1 Press the "RADIO" button.

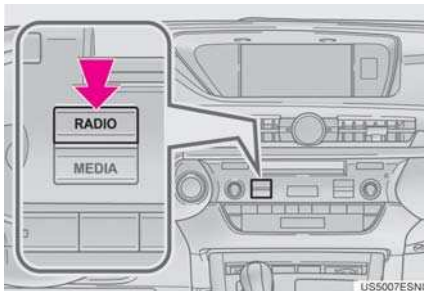

- 2 Select the "AM" or "FM" tab or press the "RADIO" button repeatedly to select the desired tab.



- For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.
- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 10 seconds.
- An orange "HD" logo indicator will be displayed on the screen when in digital. The "HD" logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
- The song title, artist name and music genre will appear on the screen when available by the radio station.

- 3 This screen will be displayed if "Options" is selected.



- When "Text" is selected, information such as the artist name, song title, album title and music genre of the track being listened to are displayed on the text screen. To display messages from the station, select "Additional Information".
- When "TYPE >" or "< TYPE" is selected, a program type will be searched. Once a program type has been set, "TYPE SEEK" will appear on the screen. (See "SELECTING A DESIRED TYPE" on page 219.)

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION

AVAILABLE HD Radio™ TECHNOLOGY

MULTICAST

On the FM radio frequency most digital stations have “multiple” or supplemental programs on one FM station.

1 Select “Multicast”.




- Each time “Multicast” is selected, the supplemental program changes.
- If “Multicast” is selected when tuned to the last of the supplemental programs, the main program will be returned to.

TAG


1 Select “Tag” to bookmark the music information.



2 Grip the knob to release the lock, and lift the armrest to open.

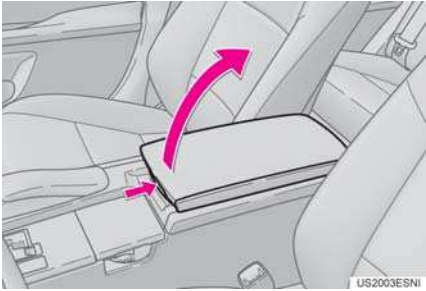

3 Open the cover and connect iPod using an iPod cable.

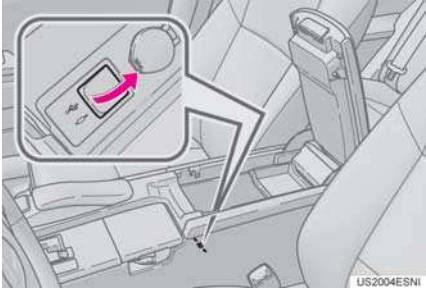

- Turn on the power of the iPod if it is not turned on.
- Once an iPod is connected, the music tag moves from the radio into the iPod.
- When the iPod is connected to iTunes, the “tagged” information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album which had been listened to on their radio.

4 Close the console box.

INFORMATION

- If tagging the music information fails, “Saving the HD Radio tag failed.” will be displayed on the screen. If this occurs, tag the information again.
- HD Radio™ stations can be preset.

1. AUDIO/VIDEO SYSTEM OPERATION

TROUBLESHOOTING GUIDE

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Selecting "Analog" can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

1. AUDIO/VIDEO SYSTEM OPERATION

5. RADIO OPERATION (XM Satellite Radio BROADCAST)

HOW TO SUBSCRIBE TO AN XM Satellite Radio

To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary.

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

HOW TO SUBSCRIBE

It is necessary to enter into a separate service agreement with XM Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and digital satellite tuner.

- For complete information on subscription rates and terms, or to subscribe to XM Satellite Radio:

- ▶ U.S.A.

Refer to www.siriusxm.com or call 1-866-635-2349.

- ▶ Canada

Refer to www.xmradio.ca or call 1-877-438-9677.

INFORMATION

- XM Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM Satellite Radio customer service agreement.
- Customers should have their radio ID ready; the radio ID can be found by tuning to "CH 000" on the radio. For details, see "DISPLAYING THE RADIO ID" below.
- All fees and programming are the responsibility of XM Satellite Radio and are subject to change.

SATELLITE TUNER TECHNOLOGY NOTICE

Lexus's satellite radio tuners are awarded Type Approval Certificates from XM Satellite Radio Inc. as proof of compatibility with the services offered by XM Satellite Radio.


DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

- If "CH 000" is selected using the "TUNE-SCROLL" knob, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

LISTENING TO SATELLITE RADIO

- 1 Press the "RADIO" button.

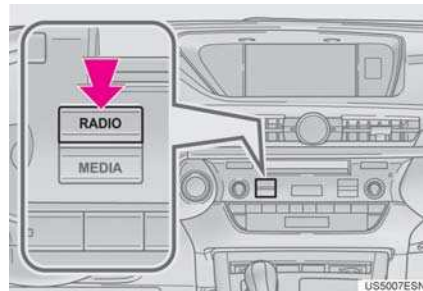

- 2 Select the "SAT" tab or press the "RADIO" button repeatedly until the "SAT" tab is selected.



- For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.
- 3 Turn the "TUNE-SCROLL" knob to select the next or previous channel.
- Turning the knob quickly allows rapid scrolling through the channel list.

5

AUDIO/VIDEO SYSTEM

CHANNEL CATEGORY

- 1 Select either “TYPE >” or “< TYPE” to go to the next or previous category.



PRESETTING A CHANNEL

- 1 Tune in the desired channel.
- 2 Select one of the left side screen buttons (1-6) and hold it until a beep is heard. This sets the frequency to the screen button. The channel number will be displayed in the screen button.



- To change the preset channel to a different one, follow the same procedure.

SELECTING A CHANNEL

Tune in the desired channel using one of the following methods.

Preset tuning: Select the channel selector screen button (1-6) or press the “^” or “v” button of “PRST·TRACK” to listen to the desired channel. The selected screen button (1-6) is highlighted and its related information appears on the right side of the screen.

To select a channel within the current category: Press and hold the “^” or “v” button of “PRST·TRACK”. The radio will change up or down to a channel within the current channel category.



To scan the currently selected channel category: Select “SCAN”. “SCAN” appears on the screen. The radio will find the next channel in the same channel category, stay there for a few seconds, and then scan again. To select a channel, select “SCAN” again.

DISPLAYING THE TITLE AND NAME

- 1 Select **Text** to display the artist name and song title currently being listening to.



INFORMATION

- Up to 64 alphanumeric characters can be displayed. (Some information will not be fully displayed.)


IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
Ck Antenna	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Lexus certified dealer for assistance.
Ch Unauth	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "CH 000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
No Signal	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
Loading	The unit is acquiring audio or program information. Wait until the unit has received the information.
Ch Off Air	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
Ch Unavail	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel.

INFORMATION

- Contact the XM Listener Care Center at 1-866-635-2349 (U.S.A.) or 1-877-438-9677 (Canada).

 **NOTICE**

- This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Information to user
 - Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

INFORMATION

- This XM tuner supports "Audio Services" (Music and Talk) of only XM Satellite Radio and "Text Information*" linked to the respective "Audio Services".

*: Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.


1. AUDIO/VIDEO SYSTEM OPERATION

6. RADIO OPERATION (INTERNET RADIO BROADCAST)

LISTENING TO INTERNET RADIO

One of Apps's features is the ability to listen to internet radio. In order to use this service, an Apps compatible phone and the navigation system needs to be set. For details, refer to the "APPS" section. (See page 356.)

- 1 Press the "RADIO" button.

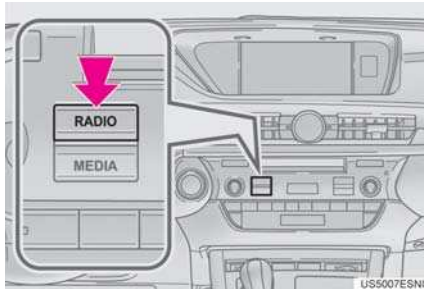

- 2 Select the "Apps" tab or press the "RADIO" button repeatedly until the "Apps" tab is selected.



- For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.
- If a compatible phone is already registered, it will be connected automatically.

- If a compatible phone has not been registered or the Bluetooth® connection cannot be completed correctly, select "Connect" to register and/or connect your phone. (See page 194.)

- When connection is complete, the application screen can be displayed.

3 Select "View Application Screen".

- The internet radio application screen is displayed.
- Perform operations according to the displayed application screen.
- By pressing the "RADIO" button, the "Audio" screen can be returned to.

INFORMATION

- Other applications can be activated while listening to internet radio.
- An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using Apps by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.
- Services requiring a separate contract can also be used.*
- Some parts of "Apps" can be adjusted using the switches on the steering wheel.
- If internet radio has never been listened to by activating "Apps" from the "Information" screen, the "Apps" tab will be dimmed.

*: For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

1. AUDIO/VIDEO SYSTEM OPERATION

7. DVD PLAYER OPERATION


For safety reasons, the DVD video discs can only be viewed when the following conditions are met:

- (a) The vehicle is completely stopped.
- (b) The "START STOP ENGINE" <"POWER"> switch is in ACCESSORY or IGNITION ON <ON> mode.
- (c) The parking brake is applied.

While driving in DVD video mode, only the DVD's audio can be heard.

INSERTING A DISC


- 1 Insert a disc into the disc slot.

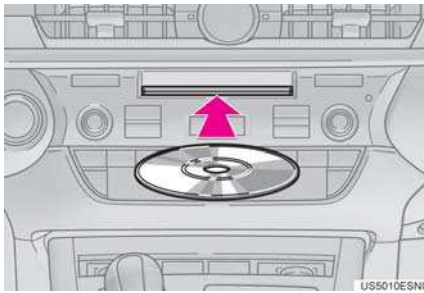

- After insertion, the disc is automatically loaded.

EJECTING A DISC

- 1 Press the "▲" button and remove the disc.

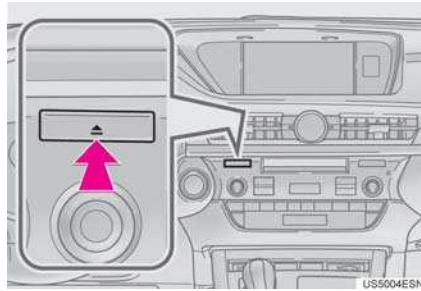


INFORMATION

- If a disc is inserted with the label facing down, it cannot be played.

PLAYING A DISC

- 1 Press the "MEDIA" button if a disc has already been loaded in the disc slot.

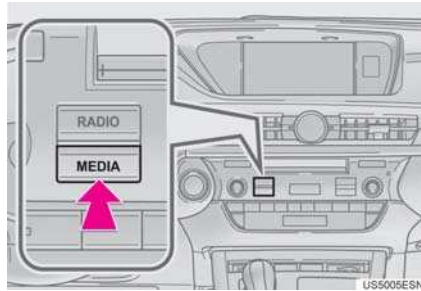

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION


- 2 Select the "DISC" tab or press the "MEDIA" button repeatedly until the "DISC" tab is selected.



- For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.

PLAYING AN AUDIO DISC

- 1 Select the "DISC" tab.

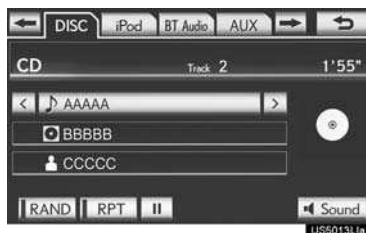


- When CD-TEXT information exists, the name and artist of the CD currently being listened to will be displayed.

: Select to pause the track.

: Select to resume playing the track.

SELECTING A DESIRED TRACK

ON THE AUDIO TOP SCREEN

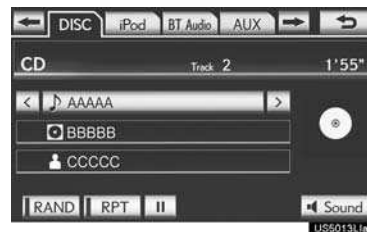


, : Select to skip to the next or previous track.

"PRST:TRACK" button: Press the "∧" or "∨" button of "PRST:TRACK" repeatedly until the desired track number appears on the screen. The player will start playing the selected track from the beginning.

"TUNE-SCROLL" knob: Turn the knob clockwise or counterclockwise to skip to the desired track.

■ ON THE TRACK LIST SCREEN

- 1 Select the track name screen button to display the CD's track list.

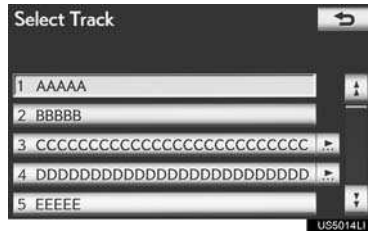

- 2 Select the desired track number. The player will start playing the selected track from the beginning.

, : Select to move the list up or down by 5 track groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.


"PRST-TRACK" button: Press the "∧" or "∨" button of "PRST-TRACK" to scroll through the track list one by one.

"TUNE-SCROLL" knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track list.

, : If appears to the right of an item name, the complete name is too long for the screen. Select to scroll to the end of the name. Select to move to the beginning of the name.

■ FAST FORWARDING OR REWINDING

- 1 Press and hold the "∧" or "∨" button of "PRST-TRACK" to fast forward or rewind the disc.

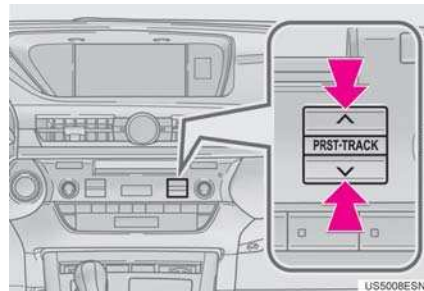


- When the button is released, the player resumes playing from that position.

REPEATING

The track currently being listened to can be repeated.

■ REPEATING A TRACK

- 1 Select "RPT" while the track is playing.

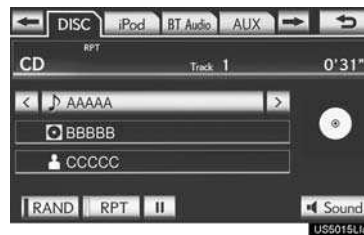

- "RPT" appears on the screen. When the track is finished, the player will automatically play it again. To cancel this function, select "RPT" again.

5


AUDIO/VIDEO SYSTEM

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

PLAYING THE TRACKS ON THE DISC IN RANDOM ORDER

- 1 Select "RAND" while the disc is playing.

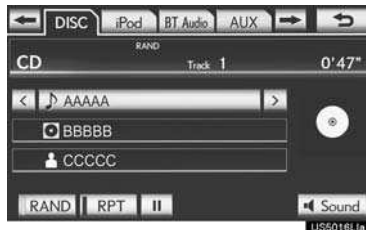


- Once "RAND" appears on the screen, the system selects a track randomly from the disc currently being listened to. To cancel this function, select "RAND" again.

INFORMATION

- If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.

PLAYING AN MP3/WMA DISC

- 1 Select the "DISC" tab.

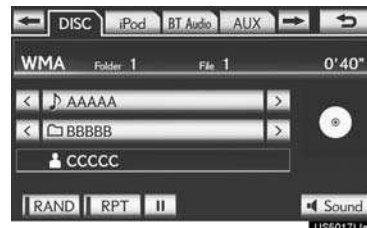


- The file name, folder name and artist name currently being listened to and the disc icon are displayed on the screen.

⏸: Select to pause the file.

▶: Select to resume playing the file.

SELECTING A DESIRED FOLDER


ON THE AUDIO TOP SCREEN

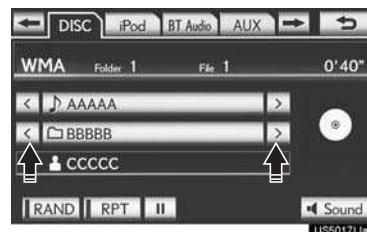

⏪, ⏩: Select to skip to the next or previous folder.

■ ON THE FOLDER LIST SCREEN

- 1 Select the folder name screen button to display the following folder list screen.

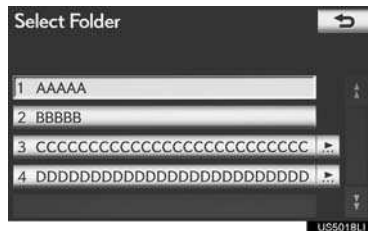

- 2 Select the desired folder number to display the folder's file list. From the file list, select the desired file number.


, : Select to move the list up or down by 5 folder groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the folder list.

, : If appears to the right of an item name, the complete name is too long for the screen. Select to scroll to the end of the name. Select to move to the beginning of the name.

■ FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “PRST-TRACK” to fast forward or rewind the file.

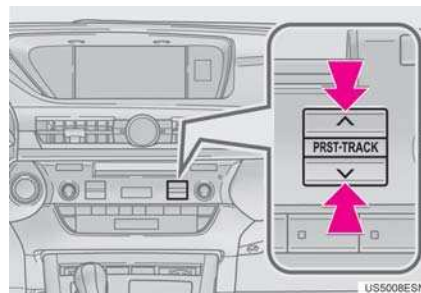


- When the button is released, the player resumes playing from that position.

SELECTING A DESIRED FILE

5 AUDIO/VIDEO SYSTEM

■ ON THE AUDIO TOP SCREEN

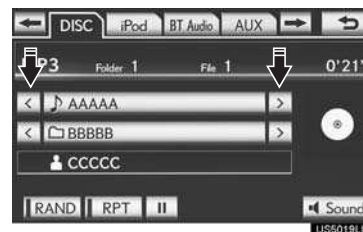

, : Select to skip to the next or previous file.

“PRST-TRACK” button: Press the “^” or “v” button of “PRST-TRACK” repeatedly until the desired file number appears on the screen. The player will start playing the selected file from the beginning.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to skip to the desired file.

1. AUDIO/VIDEO SYSTEM OPERATION

■ ON THE FILE LIST SCREEN

- 1 Select the file name screen button to display the following file list screen.



- 2 Select the desired file number. The player will start playing the selected file from the beginning.

, : Select to move the list up or down by 5 file groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.


“PRST-TRACK” button: Press the “^” or “v” button of “PRST-TRACK” to scroll through the file list one by one.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the file list.

, : If appears to the right of an item name, the complete name is too long for the screen. Select to scroll to the end of the name. Select to move to the beginning of the name.

■ FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “PRST-TRACK” to fast forward or rewind the file.

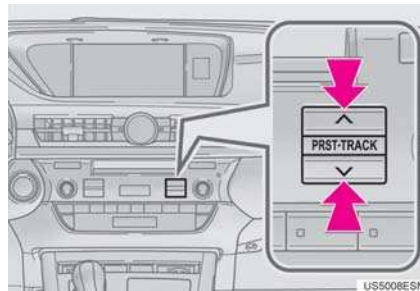


- When the button is released, the player resumes playing from that position.

REPEATING

The file or folder currently being listened to can be repeated.

■ REPEATING A FILE

- 1 Select “RPT” while the file is playing.

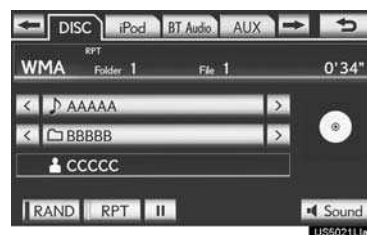

- Each time “RPT” is selected, the mode changes as follows:
 - ▶ When “RAND” is off
 - File Repeat → Folder Repeat → Off
 - ▶ When “RAND” is on
 - File Repeat → Off
- “RPT” appears on the screen. When the file is finished, the player will automatically play it again. To cancel this function, select “RPT” repeatedly until the repeat mode turns off.

REPEATING A FOLDER


- 1 Select “RPT” repeatedly until “FLD.RPT” appears on the screen.
- When the folder is finished, the player will automatically go back to the beginning of the folder and play it again. To cancel this function, select “RPT” again.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

PLAYING FILES FROM ONE FOLDER IN RANDOM ORDER

- 1 Select “RAND” while the disc is playing.

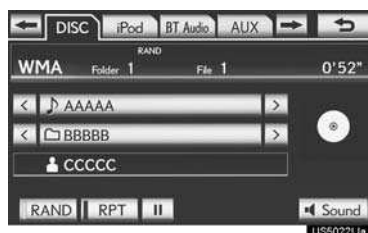

- Each time “RAND” is selected, the mode changes as follows:
 - Random (1 Folder Random) → Folder Random (1 Disc Random) → Off
- Once “RAND” appears on the screen, the system selects a file randomly from the folder currently being listened to. To cancel this function, select “RAND” repeatedly until the random mode turns off.

PLAYING THE FILES IN ALL THE FOLDERS ON THE DISC IN RANDOM ORDER

- 1 Select “RAND” repeatedly until “FLD.RAND” appears on the screen.
- Once “FLD.RAND” appears on the screen, the system selects a file randomly from all of the existing folders. To cancel this function, select “RAND” again.

INFORMATION

- When a file is skipped or the system is inoperative, select “RAND” to reset.

OPERATING A DVD DISC

The playback condition of some DVD discs may be determined by the DVD software producer. This DVD player plays a disc as the software producer intended. As such some functions may not work properly. Be sure to read the instruction manual that comes with the individual DVD disc. For detailed information about DVD video discs, see "DVD PLAYER AND DVD VIDEO DISC INFORMATION" on page 252.

PRECAUTIONS ON DVD VIDEO DISC

When recording with a DVD video, audio tracks may not record in some cases while the menu is displayed. As audio will not play in this case, verify that the video tracks are playing and then activate playback.

When playback of a disc is completed:

If an audio CD or MP3/WMA disc is playing, the first track or file starts.

If a DVD video is playing, playback will stop or the menu screen will be displayed.


The title/chapter number and playback time display may not appear while playing back certain DVD video discs.

CAUTION

- Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

PLAYING A DVD DISC

- 1 Press the **"MEDIA"** button if a disc has already been loaded in the disc slot.

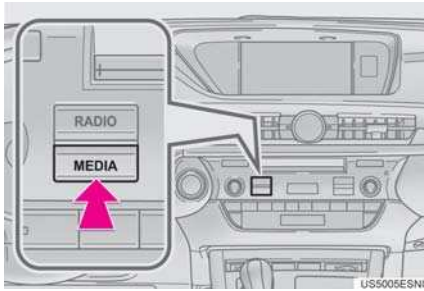


- 2 Select the **"DISC"** tab or press the **"MEDIA"** button repeatedly until the **"DISC"** tab is selected.




- For the Remote Touch operation method, see **"SWITCHING BETWEEN FUNCTIONS"** on page 211.
- Select **"Options"** on the **"DVD"** screen, then select **"Wide"** on the **"DVD Options"** screen. The screen mode can be changed.
- If **"Full Screen"** is selected when the vehicle is completely stopped and the parking brake is applied, the video screen returns.

DISPLAYING DVD CONTROLS


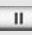






- If  is selected, while watching a DVD, the DVD controls will appear.

INFORMATION

- If  appears on the screen when a control is selected, the operation relevant to the control is not permitted.





DESCRIPTION OF DVD VIDEO CONTROLS

Screen button	Function
"Top Menu", "Menu"	Select to display the menu screen for DVD video.
	The menu control key appears on the screen. (See page 242.)
	Select to pause the video screen.
	Select to rewind during playback.
	Select to stop the video screen.
	Select to resume normal play during pause.
	Select to fast forward during playback and forward frame by frame during pause.


CHANGING A CHAPTER

- 1 Press the "∧" or "∨" button of "PRST-TRACK" or turn the "TUNE-SCROLL" knob to change the chapter.

SELECTING A MENU ITEM

- 1 Select the menu item using    or  and select "Enter". The player starts playing the disc from the start of the selected item.



- When  is selected, the previous screen is displayed.

INFORMATION


- According to the DVD disc, some menu items can be selected directly. (For details, see the manual that comes with the DVD disc provided separately.)

DVD OPTIONS

- 1 Select the "DISC" tab.
- 2 Select "Options".



- 3 This screen is displayed.

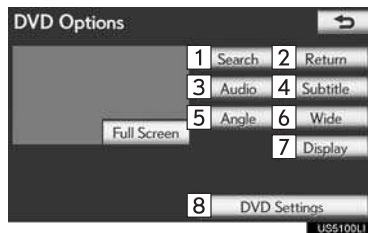

No.	Function
1	Select to display the title search screen. (See page 243.)
2	Select to display the predetermined scene on the screen and start playing.
3	Select to display the audio selection screen. (See page 244.)
4	Select to display the subtitle selection screen. (See page 244.)
5	Select to display the angle selection screen. (See page 244.)
6	Select to display the screen mode screen. (See page 214.)

No.	Function
7	Select to display the image quality adjustment screen. (See page 244.)
8	Select to display the initial setup screen. (See page 245.)

SEARCHING BY TITLE

- 1 Select "Search" on the "DVD Options" screen.
- 2 Enter the title number and select "OK".





- The player starts playing video for that title number.
- If the wrong numbers are entered, select to delete the numbers.
- When is selected, the previous screen is displayed.

5 AUDIO/VIDEO SYSTEM

CHANGING THE AUDIO LANGUAGE


- 1 Select **"Audio"** on the "DVD Options" screen.
- 2 Each time **"Change"** is selected, the audio language is changed.

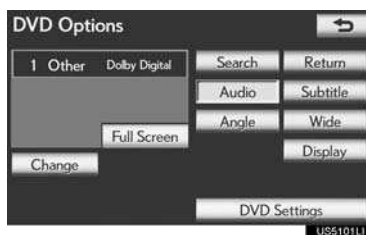


- The languages available are restricted to those available on the DVD disc.
- When  is selected, the previous screen is displayed.

CHANGING THE SUBTITLE LANGUAGE

- 1 Select **"Subtitle"** on the "DVD Options" screen.
- 2 Each time **"Change"** is selected, the language the subtitles are displayed in is changed.

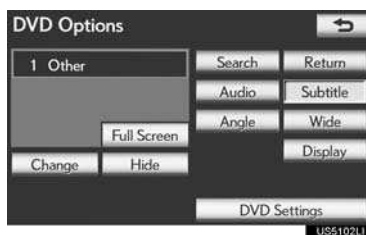



- The languages available are restricted to those available on the DVD disc.
- When **"Hide"** is selected, the subtitles can be hidden.
- When  is selected, the previous screen is displayed.

CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select **"Angle"** on the "DVD Options" screen.
- 2 Each time **"Change"** is selected, the angle is changed.

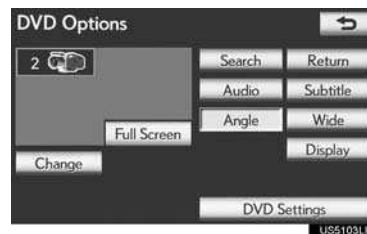


- The angles available are restricted to those available on the DVD disc.
- When  is selected, the previous screen is displayed.

AUDIO SCREEN ADJUSTMENT

The brightness, contrast, color and tone of the screen can be adjusted. In addition, the display can be turned off and the screen can be changed to either day or night mode.

■ CONTRAST, BRIGHTNESS, COLOR AND TONE ADJUSTMENT

- 1 Select **"Display"** on the **"DVD Options"** screen.
- 2 Select **"<"** or **">"** to display the desired item to be adjusted.


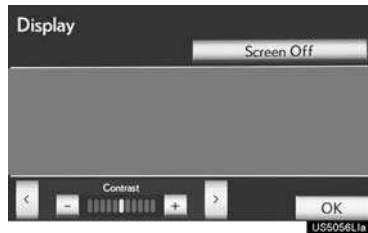


Screen button	Function
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.
"Color" "R"	Select to strengthen the red color of the screen.
"Color" "G"	Select to strengthen the green color of the screen.
"Tone" "+"	Select to strengthen the tone of the screen.
"Tone" "-"	Select to weaken the tone of the screen.

- 3 After adjusting the screen, select **"OK"**.
 - The screen goes off when **"Screen Off"** is selected. To turn the screen back on, press any button on the audio panel or on the Remote Touch. The selected screen appears.

DVD SETTINGS

- 1 Select **"DVD Settings"** on the **"DVD Options"** screen.
- 2 Select the items to be set.

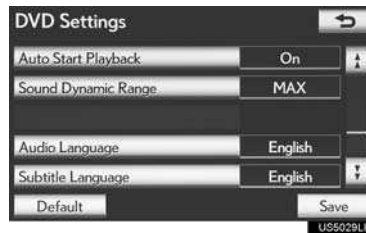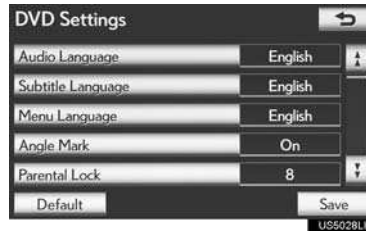


- 3 After the initial setting has been changed, select **"Save"**.
 - This screen will close, and the system will return to the previous screen.
 - When **"Default"** is selected, all menus are initialized.

5 AUDIO/VIDEO SYSTEM


■ AUDIO LANGUAGE

The audio language can be changed.

- 1 Select **"Audio Language"** on the "DVD Settings" screen.
- 2 Select the desired language to be heard on the "Audio Language" screen.
 - If the desired language to be heard cannot be found on this screen, select **"Other"** and enter a language code. For entry of a language code, see "ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE" on page 248.
 - To return to the "DVD Settings" screen, select .
- 3 Select **"Save"** on the "DVD Settings" screen.


■ SUBTITLE LANGUAGE

The subtitle language can be changed.

- 1 Select **"Subtitle Language"** on the "DVD Settings" screen.
- 2 Select the desired language to be read on the "Subtitle Language" screen.
 - If the desired language to be read cannot be found on this screen, select **"Other"** and enter a language code. For entry of a language code, see "ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE" on page 248.
 - To return to the "DVD Settings" screen, select .
- 3 Select **"Save"** on the "DVD Settings" screen.

■ MENU LANGUAGE

The language on the DVD video menu can be changed.

- 1 Select **"Menu Language"** on the "DVD Settings" screen.
- 2 Select the desired language to be read on the "Menu Language" screen.
 - If the desired language to be read cannot be found on this screen, select **"Other"** and enter a language code. For entry of a language code, see "ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE" on page 248.
 - To return to the "DVD Settings" screen, select .
- 3 Select **"Save"** on the "DVD Settings" screen.




■ ANGLE MARK

The multi-angle mark can be turned on or off on the screen while discs that are multi-angle compatible are being played.

- 1 Select **"Angle Mark"** on the "DVD Settings" screen.
- 2 Select **"On"** or **"Off"**.
- 3 Select **"Save"** on the "DVD Settings" screen.

■ PARENTAL LOCK

The level of viewer restrictions can be changed.

- 1 Select **"Parental Lock"** on the "DVD Settings" screen.
- 2 Enter the 4-digit personal code on the "Key Code" screen.
 - If the wrong numbers are entered, select  to delete the numbers.
 - To return to the "DVD Settings" screen, select .
- 3 Select a parental level (1-8) on the "Select Restriction Level" screen.
 - To return to the "DVD Settings" screen, select .
- 4 Select **"Save"** on the "DVD Settings" screen.

■ AUTO START PLAYBACK

Discs that are inserted while the vehicle is in motion will automatically start playing. Certain discs may not play.

- 1 Select **"Auto Start Playback"** on the "DVD Settings" screen.
- 2 Select **"On"** or **"Off"**.
- 3 Select **"Save"** on the "DVD Settings" screen.

■ SOUND DYNAMIC RANGE

The difference between the lowest volume and the highest volume can be adjusted.

- 1 Select **"Sound Dynamic Range"** on the "DVD Settings" screen.
- 2 Select **"MAX"**, **"STD"** or **"MIN"**.
- 3 Select **"Save"** on the "DVD Settings" screen.

5



AUDIO/VIDEO SYSTEM

**ENTER AUDIO/SUBTITLE/
MENU LANGUAGE CODE**

If “Other” on the “Audio Language” screen, “Subtitle Language” screen or “Menu Language” screen is selected, the desired language to be heard or read can be selected by entering a language code.

- 1 Enter the 4-digit language code.



- If the wrong numbers are entered, select  to delete the numbers.
 - To return to the “DVD Settings” screen, select .
- 2 Select “OK”.
 - 3 Select “Save” on the “DVD Settings” screen.

Code	Language
0514	English
1001	Japanese
0618	French
0405	German
0920	Italian
0519	Spanish
2608	Chinese
1412	Dutch
1620	Portuguese
1922	Swedish
1821	Russian
1115	Korean
0512	Greek
0101	Afar
0102	Abkhazian
0106	Afrikaans
0113	Amharic
0118	Arabic
0119	Assamese
0125	Aymara
0126	Azerbaijani
0201	Bashkir
0205	Byelorussian
0207	Bulgarian
0208	Bihari
0209	Bislama

1. AUDIO/VIDEO SYSTEM OPERATION

Code	Language	Code	Language
0214	Bengali, Bangla	0825	Armenian
0215	Tibetan	0901	Interlingua
0218	Breton	0905	Interlingue
0301	Catalan	0911	Inupiak
0315	Corsican	0914	Indonesian
0319	Czech	0919	Icelandic
0325	Welsh	0923	Hebrew
0401	Danish	1009	Yiddish
0426	Bhutani	1023	Javanese
0515	Esperanto	1101	Georgian
0520	Estonian	1111	Kazakh
0521	Basque	1112	Greenlandic
0601	Persian	1113	Cambodian
0609	Finnish	1114	Kannada
0610	Fiji	1119	Kashmiri
0615	Faroese	1121	Kurdish
0625	Frisian	1125	Kirghiz
0701	Irish	1201	Latin
0704	Scottish-Gaelic	1214	Lingala
0712	Galician	1215	Laotian
0714	Guarani	1220	Lithuanian
0721	Gujarati	1222	Latvian, Lettish
0801	Hausa	1307	Malagasy
0809	Hindi	1309	Maori
0818	Croatian	1311	Macedonian
0821	Hungarian	1312	Malayalam

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION

Code	Language	Code	Language
1314	Mongolian	1912	Slovenian
1315	Moldavian	1913	Samoan
1318	Marathi	1914	Shona
1319	Malay	1915	Somali
1320	Maltese	1917	Albanian
1325	Burmese	1918	Serbian
1401	Nauru	1919	Siswati
1405	Nepali	1920	Sesotho
1415	Norwegian	1921	Sundanese
1503	Occitan	1923	Swahili
1513	(Afan) Oromo	2001	Tamil
1518	Oriya	2005	Telugu
1601	Panjabi	2007	Tajik
1612	Polish	2008	Thai
1619	Pashto, Pushto	2009	Tigrinya
1721	Quechua	2011	Turkmen
1813	Rhaeto-Romance	2012	Tagalog
1814	Kirundi	2014	Setswana
1815	Romanian	2015	Tongan
1823	Kinyarwanda	2018	Turkish
1901	Sanskrit	2019	Tsonga
1904	Sindhi	2020	Tatar
1907	Sango	2023	Twi
1908	Serbo-Croatian	2111	Ukrainian
1909	Sinhalese	2118	Urdu
1911	Slovak	2126	Uzbek

Code	Language
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

IF THE PLAYER MALFUNCTIONS

If the player or another unit equipped with the player malfunctions, the audio/video system will display a message. These are described below.

If “Check DISC” appears on the screen: It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, “Check DISC” will also appear on the screen. For appropriate discs for the player, see “AUDIO/VIDEO SYSTEM OPERATING HINTS” on page 277.

If “Region code error” appears on the screen: It indicates that the DVD region code is not set properly.

If the malfunction is not rectified: Take your vehicle to your Lexus dealer.

INFORMATION

- If an MP3/WMA disc contains CD-DA files only, the CD-DA files can be played. If an MP3/WMA disc contains CD-DA files and files other than CD-DA files, only MP3/WMA files can be played.

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION







DVD PLAYER AND DVD VIDEO DISC INFORMATION

DVD VIDEO DISCS

This DVD player conforms to NTSC/PAL color TV formats. DVD video discs conforming to another format such as SECAM cannot be used.

Region codes: Some DVD video discs have a region code indicating which countries the DVD video disc can be played in on this DVD player. If the DVD video disc is not labeled as "ALL" or "1", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "Region code error" appears on the screen. Even if the DVD video disc does not have a region code, there are cases when it cannot be used.

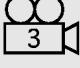MARKS SHOWN ON DVD VIDEO DISCS

NTSC/PAL	Indicates NTSC/PAL format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
 	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

DVD VIDEO DISC GLOSSARY

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help users enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

- Level 1: DVD video discs for children can be played.
- Level 2 - 7: DVD video discs for children and G-rated movie can be played.
- Level 8: All types of the DVD video discs can be played.

Multi-angle feature: The same scene can be enjoyed from different angles.

Multi-language feature: The subtitle and audio language can be selected.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes, see page 252.

Audio: This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

Title and chapter: Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A unit smaller than that of title. A title comprises of several chapters.

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

1. AUDIO/VIDEO SYSTEM OPERATION

8. USB MEMORY OPERATION

Connecting a USB memory enables users to enjoy music from the vehicle speakers.

⚠ CAUTION


- Do not operate the player's controls or connect the USB memory while driving.

⚠ NOTICE


- Depending on the size and shape of the USB memory that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the USB memory or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

CONNECTING A USB MEMORY

- 1 Grip the knob to release the lock, and lift the armrest to open.

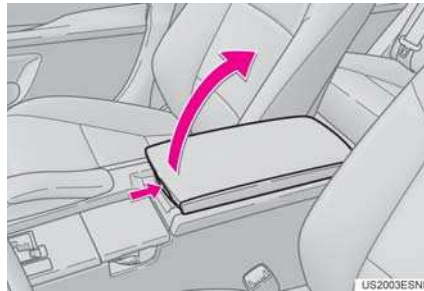

- 2 Open the cover and connect a USB memory.

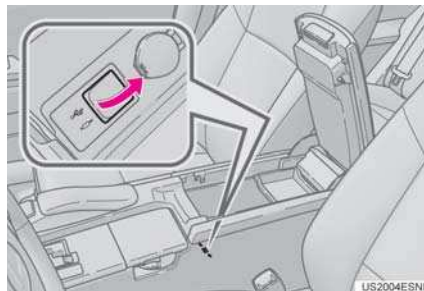


- Turn on the power of the USB memory if it is not turned on.
- 3 Close the console box.

PLAYING A USB MEMORY

PLAYING AND PAUSING A USB MEMORY

- 1 Press the "MEDIA" button if a USB memory has already been connected.

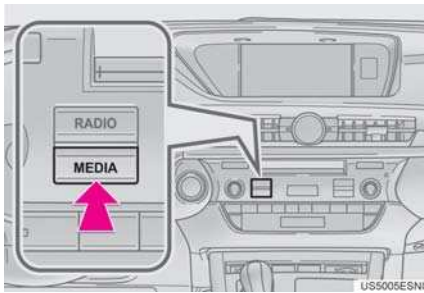


- 2 Select the "USB" tab or press the "MEDIA" button repeatedly until the "USB" tab is selected.
 - For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.

▶ Tag mode



▶ Folder mode

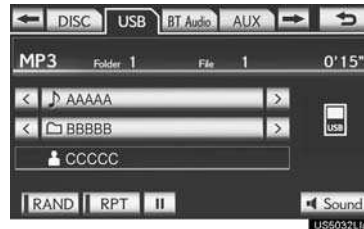

INFORMATION

- If tag information exists, the file/folder names will be changed to track/album names.

▶ : Select to start playing the music.

|| : Select to pause the music.

- To start playing the music again, select ▶.

INFORMATION

- When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume playing from the same point it was last used.
- Depending on the USB memory that is connected to the system, certain functions may not be available.


5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION

SELECTING A DESIRED FOLDER/ALBUM

■ ON THE USB TOP SCREEN

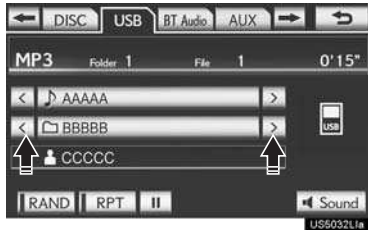

, : Select to skip to the next or previous folder/album.

SELECTING A DESIRED FOLDER, ARTIST OR ALBUM

1 Select the folder/album name screen button.



2 Select the desired tab and select the desired folder, artist or album.



● Character screen buttons, "ABC", "DEF" etc., allow a direct jump to list entries that begin with the same letter as the character button.

Each time the same character screen button is selected, the list starting with the subsequent character is displayed.


, : Select to move the list up or down by 5 folder/artist/album groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.

"TUNE-SCROLL" knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the folder/artist/album list.

, : If appears to the right of an item name, the complete name is too long for the screen. Select to scroll to the end of the name. Select to move to the beginning of the name.

SELECTING A DESIRED FILE/TRACK

ON THE USB TOP SCREEN

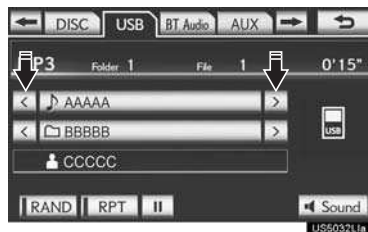

: Select to skip to the next or previous file/track.

“PRST-TRACK” button: Press the “^” or “v” button of **“PRST-TRACK”** repeatedly until the desired file/track number appears on the screen. The player will start playing the selected file/track from the beginning.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to skip to the desired file/track.

ON THE FILE/TRACK LIST SCREEN

1 Select the file/track name screen button to display the following file/track list screen.



2 Select the desired file/track number. The player will start playing the selected file/track from the beginning.

: Select to move the list up or down by 5 file/track groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.

“PRST-TRACK” button: Press the “^” or “v” button of **“PRST-TRACK”** to scroll through the file/track list one by one.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the file/track list.


: If appears to the right of an item name, the complete name is too long for the screen. Select to scroll to the end of the name. Select to move to the beginning of the name.

5

AUDIO/VIDEO SYSTEM

■ FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “PRST-TRACK” to fast forward or rewind the file/track.

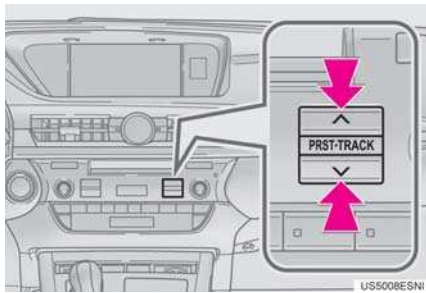


- When the button is released, the player resumes playing from that position.

■ REPEATING

The file or folder currently being listened to can be repeated.

■ REPEATING A FILE/TRACK

- 1 Select “RPT” while the file or track is playing.

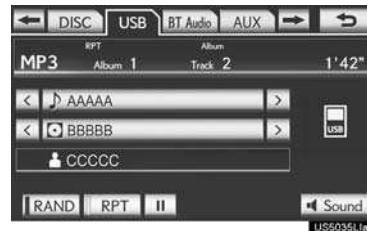

- Each time “RPT” is selected, the mode changes as follows:
 - ▶ When “RAND” is off
 - File/Track Repeat → Folder/Album Repeat → Off
 - ▶ When “RAND” is on
 - File/Track Repeat → Off
- “RPT” appears on the screen. When the file/track is finished, the player will automatically play it again. To cancel this function, select “RPT” repeatedly until the repeat mode turns off.

■ REPEATING A FOLDER/ALBUM


- 1 Select “RPT” repeatedly until “FLD.RPT” appears on the screen.
- When the folder/album is finished, the player will automatically go back to the beginning of the folder/album and play it again. To cancel this function, select “RPT” again.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

■ PLAYING FILES/TRACKS IN RANDOM ORDER

- 1 Select "RAND" while the file or track is playing.

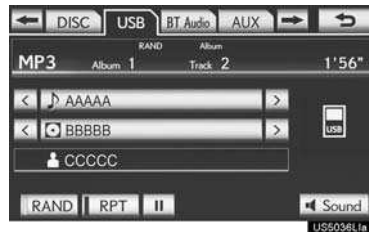

- Each time "RAND" is selected, the mode changes as follows:
 - Random (1 Folder/Album Random) → Folder/Album Random (All Folder/Album Random) → Off
- Once "RAND" appears on the screen, the system selects a file/track randomly from the folder/album currently being listened to. To cancel this function, select "RAND" repeatedly until the random mode turns off.

■ ALL FOLDER/ALBUM RANDOM PLAY

- 1 Select "RAND" repeatedly until "FLD.RAND" appears on the screen.
- Once "FLD.RAND"/"ALB.RAND" appears on the screen, the system selects a file randomly from all of the existing folders or albums. To cancel this function, select "RAND" again.

1. AUDIO/VIDEO SYSTEM OPERATION

9. iPod OPERATION

Connecting an iPod enables users to enjoy music from the vehicle speakers.

⚠ CAUTION

- Do not operate the player's controls or connect the iPod while driving.

⚠ NOTICE


- Depending on the size and shape of the iPod that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the iPod or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION


- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.

CONNECTING iPod

- 1 Grip the knob to release the lock, and lift the armrest to open.

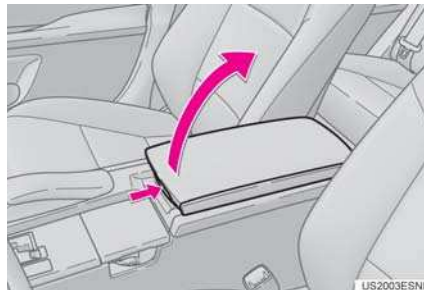

- 2 Open the cover and connect iPod using an iPod cable.

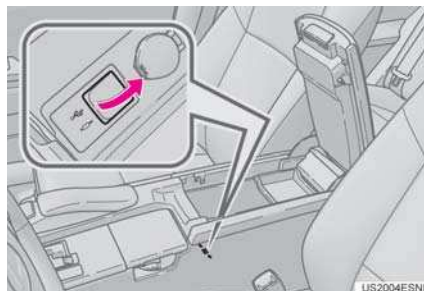


- Turn on the power of the iPod if it is not turned on.
- 3 Close the console box.

PLAYING iPod


PLAYING AND PAUSING iPod


- 1 Press the "MEDIA" button if an iPod has already been connected.

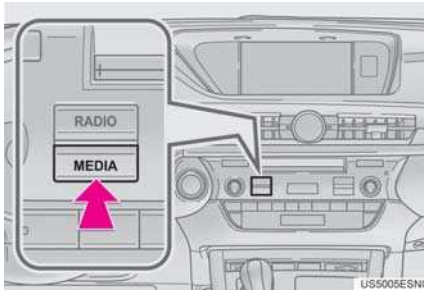


- 2 Select the "iPod" tab or press the "MEDIA" button repeatedly until the "iPod" tab is selected.
- For the Remote Touch operation method, see "SWITCHING BETWEEN FUNCTIONS" on page 211.



: Select to start playing the music.

: Select to pause the music.

- To start playing the music again, select .

INFORMATION

- When the iPod connected to the system includes iPod video, the system can only output the sound by selecting "Video" on the "iPod" screen.
- Depending on the iPod, the video sound may not be able to be heard.
- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to "On" or "Off". See "iPod SETTINGS" on page 289. It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process. Only the iPod cover art that is saved in JPEG format can be displayed.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available.

5

AUDIO/VIDEO SYSTEM

SELECTING A PLAY MODE

- 1 Select "Browse".




1. AUDIO/VIDEO SYSTEM OPERATION

2 Select the desired play mode.



SELECTING A DESIRED TRACK

■ ON THE iPod TOP SCREEN

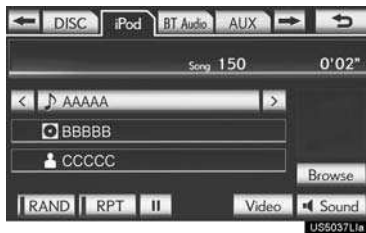

: Select to skip to the next or previous track.

“PRST-TRACK” button: Press the “^” or “v” button of “PRST-TRACK” repeatedly until the desired track number appears on the screen. The player will start playing the selected track from the beginning.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to skip to the desired track.

■ ON THE TRACK LIST SCREEN

1 Select the track name screen button to display the following track list screen.



2 Select the desired track number. The player will start playing the selected track from the beginning.

: Select to move the list up or down by 5 track groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.


“PRST-TRACK” button: Press the “^” or “v” button of “PRST-TRACK” to scroll through the track list one by one.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track list.

: If appears to the right of an item name, the complete name is too long for the screen. Select to scroll to the end of the name. Select to move to the beginning of the name.

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “PRST-TRACK” to fast forward or rewind the player.

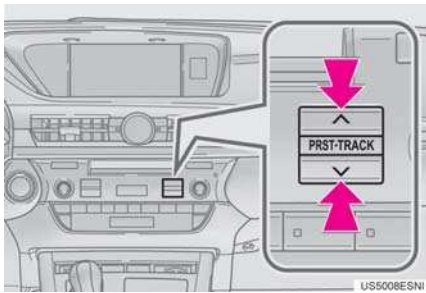


- When the button is released, the player resumes playing from that position.

REPEATING

The track currently being listened to can be repeated.

- 1 Select “RPT” while the track is playing.

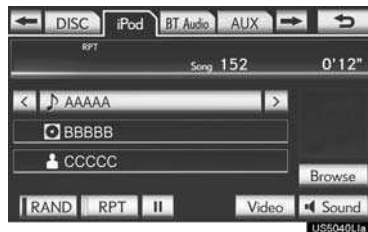

- “RPT” appears on the screen. When the track is finished, the player will automatically play it again. To cancel this function, select “RPT” again.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

PLAYING TRACKS IN RANDOM ORDER

- 1 Select “RAND” while the track is playing.



- Each time “RAND” is selected, the mode changes as follows:
 - Track Shuffle → Album Shuffle → Off
- Once “RAND” appears on the screen, the system selects a track randomly from all of the existing albums on the iPod. To cancel this function, select “RAND” twice.

PLAYING ALBUMS IN RANDOM ORDER


- 1 Select “RAND” repeatedly until “ALB.RAND” appears on the screen.
- Once “ALB.RAND” appears on the screen, the system selects an album randomly from all of the existing albums on the iPod. To cancel this function, select “RAND” again.

1. AUDIO/VIDEO SYSTEM OPERATION

10. Bluetooth® AUDIO OPERATION

The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

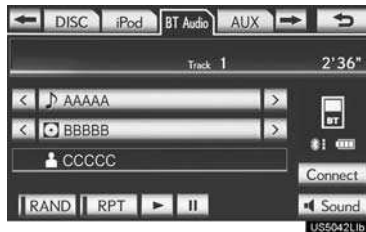

Bluetooth is a trademark owned by Bluetooth SIG, Inc.

CAUTION


- Do not operate the player's controls or connect to the Bluetooth® audio system while driving.
- An antenna for the Bluetooth® connection is built in the instrument panel. People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using portable players, users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

NOTICE

- Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

INFORMATION

- In the following conditions, the system may not function:
 - The portable player is turned off.
 - The portable player is not connected.
 - The portable player has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- Portable players must correspond to the following specifications in order to be connected to the Bluetooth® audio system. However, some functions may be limited depending on the type of portable player. Also, the different screen is displayed depending on which portable player is connecting.
 - Bluetooth® Specification
Ver.1.1 or higher
(Recommended: Ver.2.1 + EDR or higher)
 - Profile
A2DP (Advanced Audio Distribution Profile) Ver.1.0 or higher
(Recommended: Ver.1.2 or higher)
AVRCP (Audio/Video Remote Control Profile) Ver.1.0 or higher
(Recommended: Ver.1.4 or higher)
- Refer to <http://www.lexus.com/> to find approved Bluetooth® devices for this system.

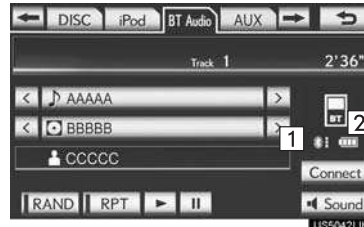

1 The quality of the Bluetooth® connection is indicated as follows:

: An excellent connection to Bluetooth®.

: Indicates a bad connection to Bluetooth®, resulting in possible deterioration of audio quality.

: No connection to Bluetooth®.

2 Indicates the amount of battery charge left.



5
AUDIO/VIDEO SYSTEM

INFORMATION

- Remaining charge is not displayed while the Bluetooth® device is connecting.
- The amount of charge left does not always correspond correctly with your portable player.
- This system does not have a charging function.
- An antenna for Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may not be good and the system may not function when using a Bluetooth® portable player in the following conditions:
 - The portable player is obstructed by certain objects (behind a seat or in the glove box or console box).
 - The portable player selects or is covered with metal materials.
- Leave the Bluetooth® portable player in a place where the condition of Bluetooth® connection is good.

● Portable player information is registered when the portable player is connected to the Bluetooth® audio system. When selling or disposing of the vehicle, remove the Bluetooth® audio information from the system. (See "DELETING A Bluetooth® DEVICE" on page 196.)

► U.S.A.

● **FCC ID: BABFT0033A**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **CAUTION**

- **FCC WARNING**
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **CAUTION: Radio Frequency Radiation Exposure**
This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).
- **Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► Canada

● IC: 2024B-FT0033A

- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 CAUTION

- CAUTION: Radio Frequency Radiation Exposure
This equipment complies with IC radiation exposure limits set forth for uncontrolled equipment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).
- ATTENTION : Exposition aux radiations des fréquences radioélectriques
Cet équipement se conforme aux limites d'exposition aux radiations établies par Industrie Canada pour un environnement non contrôlé ainsi qu'aux directives d'exposition aux fréquences radioélectriques (RF) émises par Industrie Canada dans la norme CNR-102. Cet équipement émet un niveau d'énergie RF faible à un point tel qu'il se conforme sans devoir effectuer d'évaluation d'exposition maximum admissible (MPE). Lorsque l'équipement est installé et utilisé, il est toutefois souhaitable de laisser au moins 20 cm entre l'antenne et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).
- This Category II radiocommunication device complies with Industry Canada Standard RSS-310.
- Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

CONNECTING A Bluetooth® AUDIO PLAYER

To use the Bluetooth® audio system, it is necessary to register a portable player with the system. Once the portable player has been registered, it is possible to listen to the music.

Once the portable player has been registered, it is possible to listen to music through the navigation system. (See "REGISTERING A Bluetooth® DEVICE" on page 195.)

INFORMATION

- For operating the portable player, see the instruction manual that comes with it.

WHEN "Bluetooth* Power" IS ON

- The portable player will be automatically connected under the following conditions:
 - The "START STOP ENGINE" <"POWER"> switch is in either ACCESSORY or IGNITION ON <ON> mode.
 - When "Bluetooth* Power" is switched from off to on.
 - When the portable player is disconnected for some reason.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

WHEN "Bluetooth* Power" IS OFF

Manually connect the portable player in accordance with the following procedure.

- 1 Select "Connect".



- 2 Select the desired portable player.



- 3 When the connection is completed, this screen is displayed. It is now possible to use the portable player.



INFORMATION

- Selecting “**Connect Portable Player**” on the “Bluetooth*” screen also connects a Bluetooth® audio player. (See page 200.)
- When none of the selectable portable players have been registered, a screen confirming registration is displayed. Registration method is the same as phone registration. (See page 152.)
- When the currently connected portable player is selected, a screen confirming the selected player’s disconnection is displayed. (See page 201.)
- If connection fails once, a changing connection method confirmation screen is displayed. If connection fails 2 or more times, a message will be displayed. When this message is displayed, try again.

RECONNECTING THE PORTABLE PLAYER


If the portable player is disconnected due to poor reception from the Bluetooth® network when the “START STOP ENGINE” <“POWER”> switch is in ACCESSORY or IGNITION ON <ON> mode, the system automatically reconnects the portable player.

- If the Bluetooth® device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


PLAYING Bluetooth® AUDIO**PLAYING AND PAUSING Bluetooth® AUDIO**


- 1 Press the “**MEDIA**” button if a Bluetooth® audio player has already been connected.

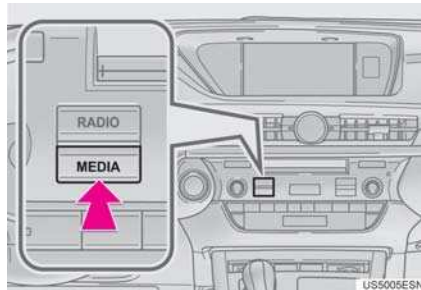



- 2 Select the “**BT Audio**” tab or press the “**MEDIA**” button repeatedly until the “**BT Audio**” tab is selected.

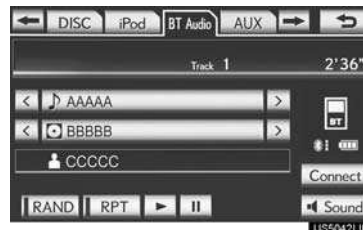

- For the Remote Touch operation method, see “**SWITCHING BETWEEN FUNCTIONS**” on page 211.



: Select to start playing the music.


: Select to pause the music.

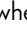

- To start playing the music again, select .

- Depending on the portable player that is connected to the system, the music may start playing when selecting  while it is paused. Conversely, the music may pause when selecting  while it is playing.

SELECTING A DESIRED TRACK/FOLDER/ALBUM

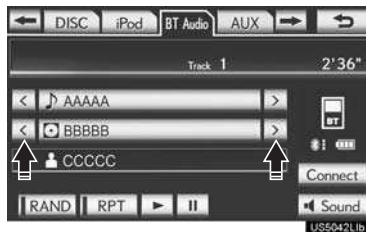■ ON THE AUDIO TOP SCREEN




, : Select to skip to the next or previous folder/album.



■ ON THE PLAYLIST SCREEN

- 1 Select the album name screen button to display the following playlist screen.



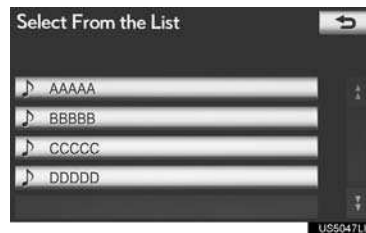




- 2 Select the desired screen button.
- If the folder name screen button is selected, the track list screen is displayed.
- 3 Select the desired track name screen button.



, : Select to move the list up or down by 5 track/folder groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.


“PRST:TRACK” button: Press the “^” or “v” button of “PRST:TRACK” to scroll through the track list one by one.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track/folder list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “PRST-TRACK” to fast forward or rewind the song.

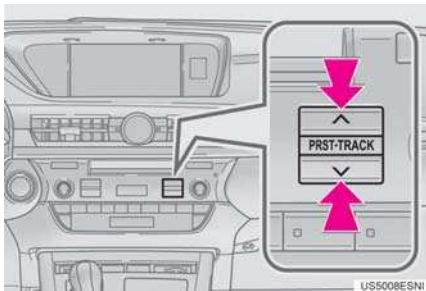


- When the button is released, the player resumes playing from that position.

INFORMATION

- Depending on the portable player that is connected to the system, certain functions may not be available.
- Some titles may not be displayed depending on the type of portable player.

SELECTING A DESIRED TRACK

ON THE AUDIO TOP SCREEN

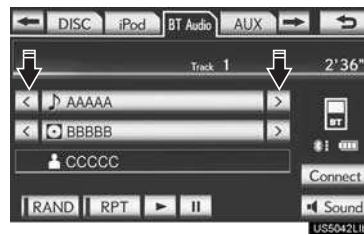


➤, ⏪: Select to skip to the next or previous track.

“PRST-TRACK” button: Press the “^” or “v” button of “PRST-TRACK” repeatedly until the desired track number appears on the screen. The player will start playing the selected track from the beginning.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to skip to the desired track.



ON THE TRACK LIST SCREEN

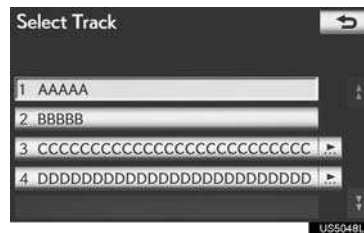- 1 Select the track name screen button to display the following track list screen.








5 AUDIO/VIDEO SYSTEM

- 2 Select the desired track number. The player will start playing the selected track from the beginning.

 : Select to move the list up or down by 5 track groups. If either of these screen buttons is selected when the top/bottom page of the list is displayed, the last/first page is displayed.

“PRST-TRACK” button: Press the “^” or “v” button of “PRST-TRACK” to scroll through the track list one by one.

“TUNE-SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track list.

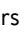
 : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.

(INFORMATION)

- Depending on the portable player that is connected to the system, certain functions may not be available.

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “PRST-TRACK” to fast forward or rewind the track.

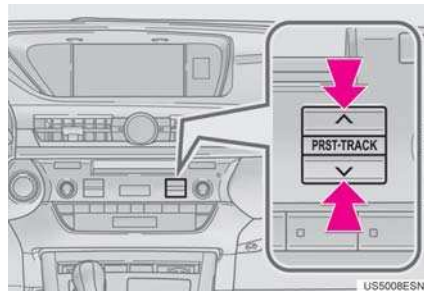


- When the button is released, the player resumes playing from that position.

REPEATING

The track or album currently being listened to can be repeated.

REPEATING A TRACK

- 1 Select "RPT" while the track is playing.

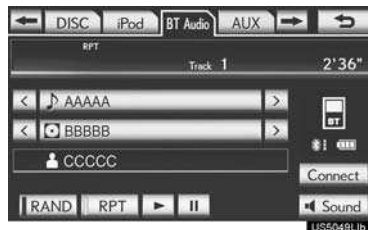

- Each time "RPT" is selected, the mode changes as follows:
 - Track Repeat → Album Repeat → Off
- "RPT" appears on the screen. When the track is finished, the player will automatically play it again. To cancel this function, select "RPT" repeatedly until the repeat mode turns off.

REPEATING AN ALBUM


- 1 Select "RPT" repeatedly until "ALB.RPT" appears on the screen.
- When the album is finished, the player will automatically go back to the beginning of the album and play it again. To cancel this function, select "RPT" again.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

PLAYING THE TRACKS ON THE ALBUM IN RANDOM ORDER

- 1 Select "RAND" while the track is playing.

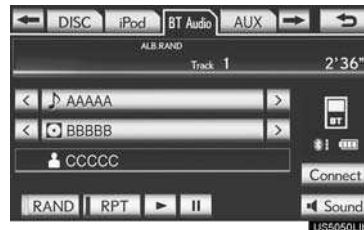

- Each time "RAND" is selected, the mode changes as follows:
 - Album Random → All Track Random → Off
- Once "RAND" appears on the screen, the system selects a track randomly from the album currently being listened to. To cancel this function, select "RAND" repeatedly until the random mode turns off.

5

AUDIO/VIDEO SYSTEM

■ **PLAYING TRACKS FROM ALL THE ALBUMS IN RANDOM ORDER**

- 1 Select "RAND" repeatedly until "ALB.RAND" appears on the screen.
- Once "ALB.RAND" appears on the screen, the system selects a track randomly from all of the existing albums on the Bluetooth[®] device. To cancel this function, select "RAND" again.


INFORMATION

- Depending on the portable player that is connected to the system, certain functions may not be available.

1. AUDIO/VIDEO SYSTEM OPERATION

11. AUDIO/VIDEO REMOTE CONTROLS (STEERING SWITCHES)

Some parts of the audio/video system can be adjusted using the switches on the steering wheel.

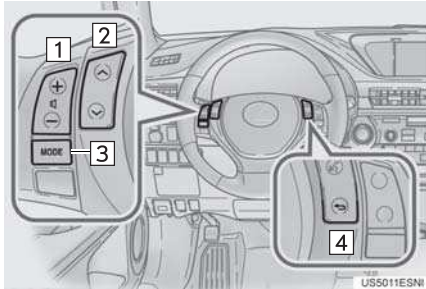

No.	Switch
1	Volume control switch
2	"^ v" switch
3	"MODE" switch
4	Back switch

1 Volume control switch

- Press the "+" side to increase the volume. The volume continues to increase while the switch is being pressed.
- Press the "-" side to decrease the volume. The volume continues to decrease while the switch is being pressed.

2 "^ v" switch

▶ Radio

To select a preset station/channel: Quickly press and release the "^" or "v" switch. Repeat this to select the next preset station/channel.

To seek a station/channel: Press and hold the "^" or "v" switch until a beep is heard. Repeat this to find the next station/channel. If either switch is pressed during seek mode, seeking will be canceled.

- To seek up or down the frequency, press and hold the switch until a beep is heard. When you release the switch, the radio will begin seeking up or down for a station/channel. Repeat to find the next station/channel.

▶ DVD player

- Use the "^" or "v" switch to skip up or down to a different track, file or chapter in either direction.

To select a desired track, file or chapter: Quickly press and release the "^" or "v" switch until the desired track, file or chapter to play is selected. To return to the beginning of the current track, file or chapter, press the "v" switch once quickly.

To select a desired folder: Press and hold the "^" or "v" switch until a beep is heard to change to the next or the previous folder. Repeat it until the desired folder is selected.

5

AUDIO/VIDEO SYSTEM

▶ Bluetooth® audio player

- Use the “^” or “v” switch to skip up or down to a different track or album in either direction.

To select a desired track: Quickly press and release the “^” or “v” switch until the desired track is selected. To return to the beginning of the current track, press the “v” switch once quickly.

To select a desired album: Press and hold the “^” or “v” switch until a beep is heard to change to the next or the previous album. Repeat it until the desired album is selected.

▶ USB memory/iPod

- Use the “^” or “v” switch to skip up or down to a different file or track in either direction.

To select a desired file or track: Press the “^” or “v” switch until the desired file or track is selected. To return to the beginning of the current file or track, press the “v” switch once quickly.

To select a desired folder or album (USB memory only): Press and hold the “^” or “v” switch until a beep is heard to change to the next or the previous folder or album. Repeat it until the desired folder or album is selected.

3 “MODE” switch

- Press the “MODE” switch to select an audio mode. Each press changes the mode sequentially if the desired mode is ready to use.
- To turn the audio/video system on, press the “MODE” switch.
- Press and hold the “MODE” switch to mute/unmute or pause/resume the current operation.

4 Back switch

- Press the back switch to return to the previous screen.

1. AUDIO/VIDEO SYSTEM OPERATION

12. AUDIO/VIDEO SYSTEM OPERATING HINTS

NOTICE

- To ensure correct audio/video system operations:
 - Be careful not to spill beverages over the audio/video system.
 - Do not put anything other than an appropriate disc into the disc slot.
 - The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/video system which you are listening to. However, this does not indicate a malfunction.

RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with the radio – it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

FM

Fading and drifting stations: Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path: FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering: These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping: If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

5

AUDIO/VIDEO SYSTEM

AM

Fading: AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference: When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static: AM is easily affected by external sources of electrical noise, such as high tension power lines, lightning or electrical motors. This results in static.

XM

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

iPod



- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

COMPATIBLE MODELS

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

Made for

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Depending on differences between models or software versions etc., some models might be incompatible with this system.

USB MEMORY

- USB memory that can be used for MP3 and WMA playback:
 - USB communication formats: USB 2.0 HS (480 Mbps) and FS (12 Mbps)
 - File formats: FAT 16/32
 - Correspondence class: Mass storage class

CARING FOR YOUR DVD PLAYER AND DISC



- This DVD player is intended for use with 4.7 in. (12 cm) discs only.
- Extremely high temperatures can keep the DVD player from working. On hot days, use the air conditioning system to cool the inside of the vehicle before using the player.
- Bumpy roads or other vibrations may make the DVD player skip.
- If moisture gets into the DVD player, the discs may not be able to be played. Remove the discs from the player and wait until it dries.

CAUTION

- DVD players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.


1. AUDIO/VIDEO SYSTEM OPERATION

DVD PLAYER


Audio CDs		
DVD video discs		

- Use only discs marked as shown above. The following products may not be playable on your player:
 - SACD
 - dts CD
 - Copy-protected CD
 - DVD audio
 - Video CD
 - DVD+R
 - DVD+RW
 - DVD-RAM


▶ Special shaped discs

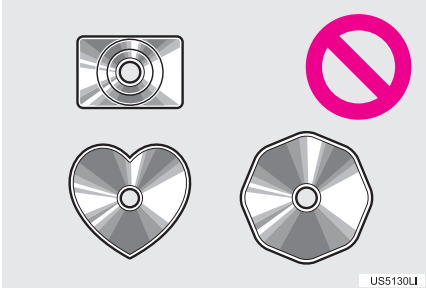


▶ Transparent/translucent discs

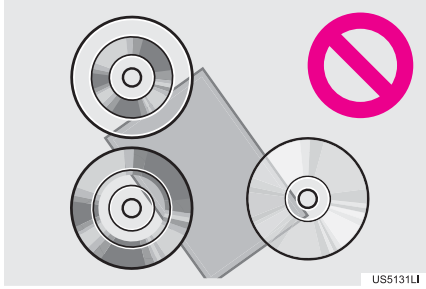

▶ Low quality discs

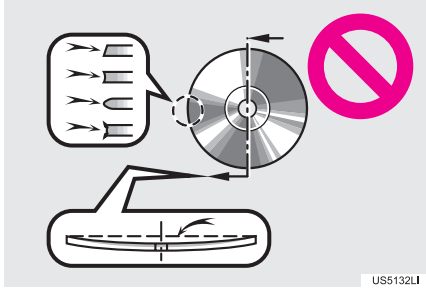


▶ Labeled discs

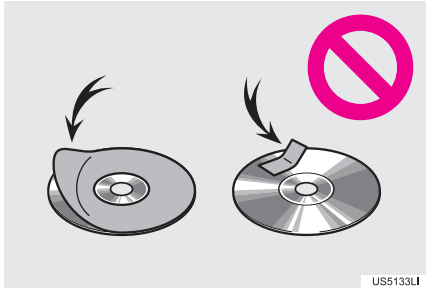


 **NOTICE**

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring. The use of such discs may damage the player, or it may be impossible to eject the disc.

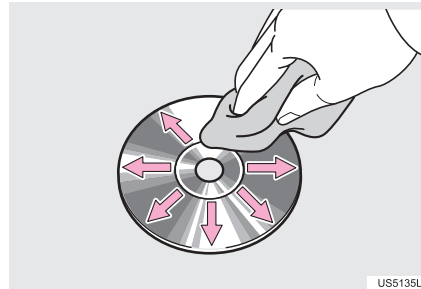

To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

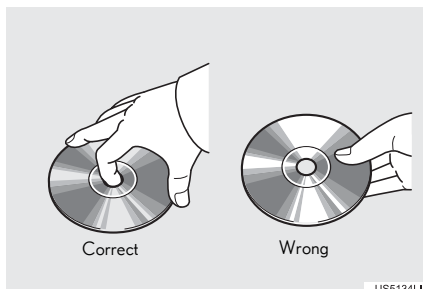

- Handle discs carefully, especially when inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when not in use. Store them in their plastic cases away from moisture, heat and direct sunlight.

MP3/WMA FILES

5

AUDIO/VIDEO SYSTEM

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.
- The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.
- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma).
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- The MP3/WMA player can play only the first session when using multi-session compatible CDs.

- MP3 player: MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.
- USB memory: MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3 and Ver. 2.4 formats. The unit cannot display track title and artist name in other formats.
- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz.


SAMPLING FREQUENCY

- MP3 files for MP3 player:
MPEG1 LAYER 3 – 32, 44.1, 48 kHz
MPEG 2 LSF LAYER 3 – 16, 22.05, 24 kHz
 - MP3 files for USB memory:
MPEG 1 AUDIO LAYER 2, 3 – 32, 44.1, 48 kHz
MPEG 2 AUDIO LAYER 2, 3 – 16, 22.05, 24 kHz
 - WMA files for WMA player:
Ver. 7, 8, 9 (9.1/9.2) CBR – 32, 44.1, 48 kHz
 - WMA files for USB memory:
Ver. 7, 8, 9 (9.1/9.2) CBR – 32, 44.1, 48 kHz
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.


PLAYABLE BIT RATES

- MP3 files for MP3 player:
MPEG1 LAYER 3 – 32 to 320 kbps
MPEG2 LSF LAYER 3 – 8 to 160 kbps
 - MP3 files for USB memory:
MPEG 1 AUDIO LAYER 3 – 32 to 320 kbps
MPEG 2 AUDIO LAYER 3 – 8 to 160 kbps
 - WMA files for WMA player:
Ver. 7, 8 CBR – 48 to 192 kbps
Ver. 9 (9.1/9.2) CBR – 48 to 320 kbps (VBR*)
 - WMA files for USB memory:
Ver. 9 (9.1/9.2) CBR – 48 to 320 kbps (VBR*)
- *: Variable Bit Rate
- The MP3/WMA player does not play back MP3/WMA files from discs recorded using packet write data transfer (UDF format). Discs should be recorded using “pre-mastering” software rather than packet-write software.
 - M3u playlists are not compatible with the audio player.
 - MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
 - The player is compatible with VBR (Variable Bit Rate).
 - When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fast forward or reverse operations are used.

- It is not possible to check folders that do not include MP3/WMA files.
- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than 2 levels of folders.

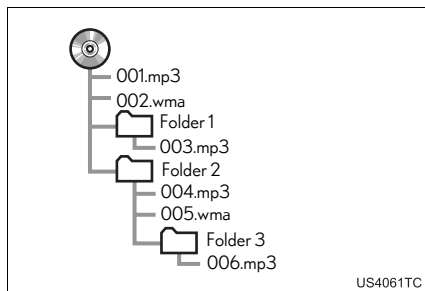

 - The play order of the compact disc with the structure shown above is as follows:



- MP3/WMA player: It is possible to play up to 192 folders or 255 files on one disc.
- USB memory: It is possible to play up to 3000 folders, 255 files per folder or 9999 files in the device.
- The order changes depending on the personal computer and MP3/WMA encoding software you use.

CD-R AND CD-RW DISCS

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

TERMS

PACKET WRITE

- This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 TAG

- This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

WMA TAG

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

ISO 9660 FORMAT

- This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are 2 levels of regulations.
- Level 1: The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)
- Level 2: The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

m3u

- Playlists created using “WINAMP” software have a playlist file extension (.m3u).

MP3

- MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA

- WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.

- Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.



- CD and music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

● Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

1. AUDIO/VIDEO SYSTEM OPERATION

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present
Gracenote


2. SETUP

1. AUDIO SETTINGS

HD Radio™ SYSTEM SETTINGS

HD Radio™ system can be set using the procedure outlined below.

1 Press the “MENU” button on the Remote Touch.

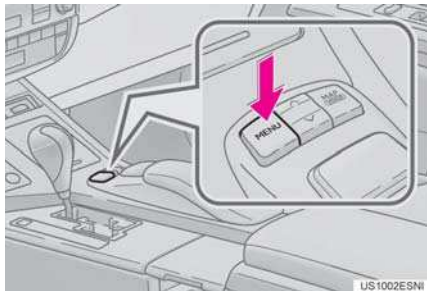

2 Select “Setup”.



3 Select “Audio”.




4 Select “HD Radio Settings”.



5 Select “HD Radio/Analog Setting”.



6 Select the item to be set.

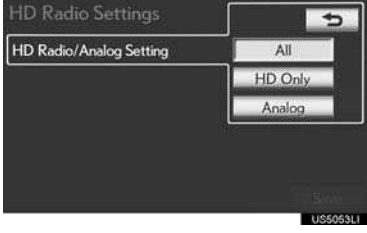

Screen button	Function
“All”	Select to receive both analog and digital broadcasts.
“HD Only”	Select to receive only digital broadcasts.
“Analog”	Select to receive only analog broadcasts.

7 Select “Save”.


iPod SETTINGS

iPod can be set using the procedure outlined below.

COVER ART DISPLAY SETTINGS

When the track currently being played has cover art data, it can be displayed.

- 1 Press the "MENU" button on the Remote Touch.

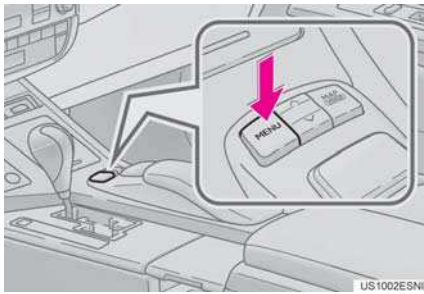


- 2 Select "Setup".



- 3 Select "Audio".



- 4 Select "iPod Settings".

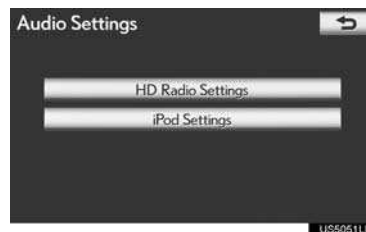

- 5 Select "Display Cover Art".



- 6 Select "On" or "Off".



5


AUDIO/VIDEO SYSTEM

2. SETUP

1. AIR CONDITIONING SYSTEM OPERATION

1. QUICK REFERENCE


Press the “MENU” button on the Remote Touch, then select “Climate” to display the air conditioning control screen.

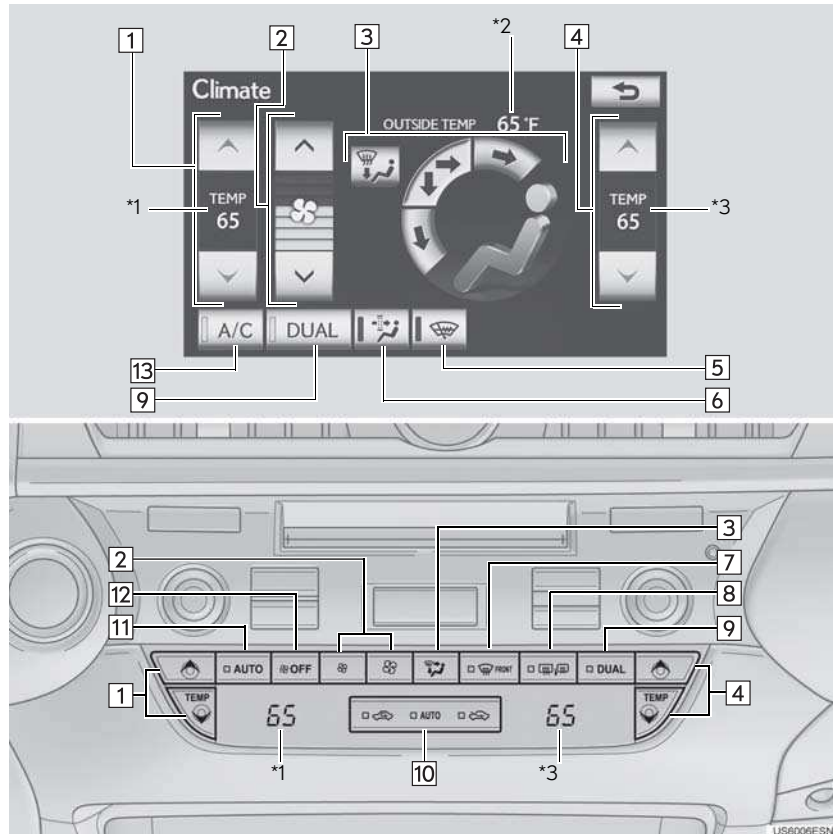

- *1: Driver side temperature display
- *2: Outside temperature display
- *3: Passenger side temperature display

No.	Name	Function	Page
1	Driver's side temperature control button	Press/select to control the driver's side temperature.	296
2	Fan speed control buttons	Press/select to change fan speed.	297

1. AIR CONDITIONING SYSTEM OPERATION

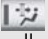No.	Name	Function	Page
3	Air flow control buttons	Press/select to change the air outlets.	298
4	Passenger's side temperature control button	Press/select to control the passenger's side temperature. When you press/select this button, the "DUAL" indicator light will turn on, and the mode will change to independent mode.	296
5	Windshield wiper deicer (If equipped)	Select to prevent ice from building up on the windshield and wiper blades.	301
6	 (Micro dust and pollen filter button)	Select to remove micro dust and pollen.	302
7	Windshield air flow button	Press to defog the windshield.	297
8	Rear window and outside rear view mirror defogger button	Press to defog the rear window and outside rear view mirror.	301
9	"DUAL" button/"DUAL"	Press/select to set the temperatures independently for the driver's, and front passenger's seat.	296
10	Air intake control button	Press to change the function between outside air, recirculated air and automatic mode.	299
11	"AUTO" button	Press to use the automatic air conditioning system.	295
12	"OFF" button	Press to turn the fan off.	295, 297
13	"A/C"	Select to change the air conditioning between on and off.	302

6

AIR CONDITIONING


1. AIR CONDITIONING SYSTEM OPERATION

2. SOME BASICS

CLIMATE CONTROL

The "START STOP ENGINE" <"POWER"> switch must be in IGNITION ON <ON> mode.

1 Press the "MENU" button on the Remote Touch.

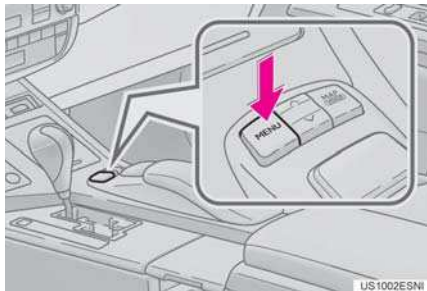

2 Select "Climate".



- A function that enables automatic return to the previous screen from the air conditioning control screen can be selected. See page 51 for details.

NOTICE


- To prevent 12-volt battery discharge, do not leave the air conditioning system on longer than necessary when the engine <hybrid system> is stopped.

INFORMATION

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic operation mode.

VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.

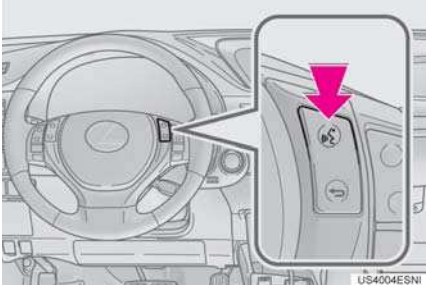

- For the operation of the voice command system and the list of commands, see pages 308 and 317.


1. AIR CONDITIONING SYSTEM OPERATION

3. AUTOMATIC AIR CONDITIONING SYSTEM


USING THE AUTOMATIC AIR CONDITIONING SYSTEM

Air outlets and fan speed are automatically adjusted according to the temperature setting.

- 1 Press the "AUTO" button.

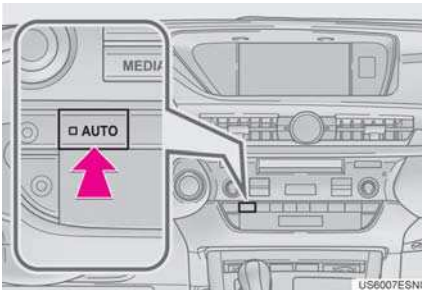


- 2 Press the air intake control button to switch to automatic air intake mode.

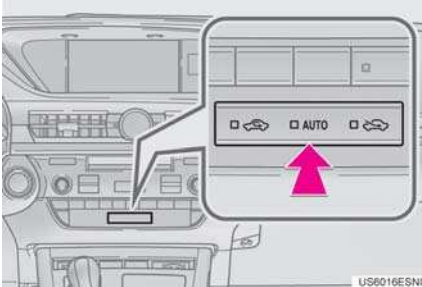

- The air conditioning system automatically switches between outside air and recirculated air modes.


- ▶ Using the instrument panel

- 3 Press the "Λ" button on "TEMP" to increase the temperature and "v" to decrease the temperature.

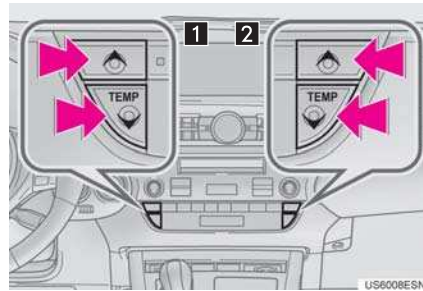

- ▶ Using the screen

- 3 Select "Λ" (increase) or "v" (decrease).

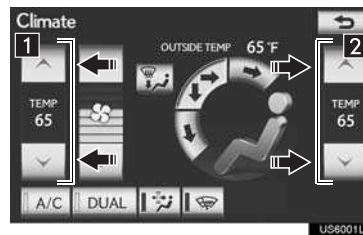

- 1 Left-hand front seat side temperature control
- 2 Right-hand front seat side temperature control

- The temperature for the driver's and front passenger's seats can be set separately.
- Only the "Λ" and "v" buttons on "TEMP" (driver's side) can be used to adjust the temperature for all seats.

- Press the "OFF" button to turn the fan off.

6


AIR CONDITIONING

1. AIR CONDITIONING SYSTEM OPERATION

ADJUST THE SETTINGS MANUALLY

SETTING THE VEHICLE INTERIOR TEMPERATURE

- ▶ Using the instrument panel
 - 1 Press the “^” button on “TEMP” to increase the temperature and “v” to decrease the temperature.

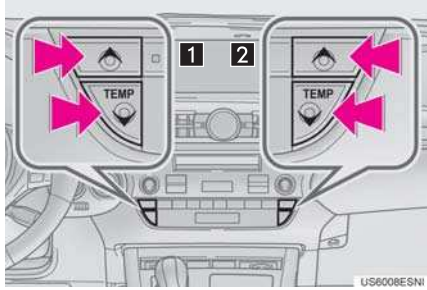

- ▶ Using the screen
 - 1 Select “^” (increase) or “v” (decrease).




- 1 Left-hand front seat side temperature control
 - 2 Right-hand front seat side temperature control
- The temperature for the driver’s and front passenger’s seats can be set separately.
- Only the “^” and “v” buttons on “TEMP” (driver’s side) can be used to adjust the temperature for all seats.

DUAL

“DUAL” is used to set the temperatures independently for the driver’s seat and front passenger seat.

- ▶ Using the instrument panel
 - 1 Press the “DUAL” button.

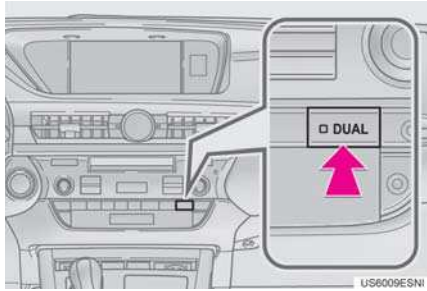



- ▶ Using the screen
 - 1 Select “DUAL”.




- When the indicator on “DUAL” is on, the temperature for the driver’s and front passenger’s seats can be set separately.


SETTING THE FAN SPEED


► Using the instrument panel

- 1 Press the  button on fan speed control button to increase the fan speed and press the  button to decrease the fan speed. (7 levels)

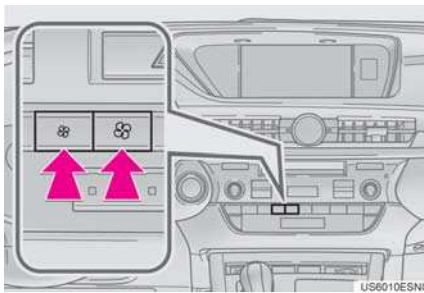

► Using the screen

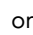
- 1 Select “^” on  to increase the fan speed and “v” to decrease the fan speed. (7 levels)

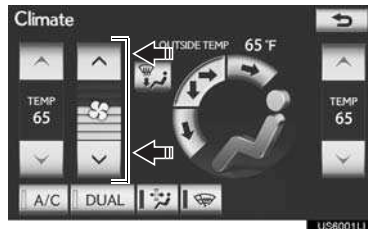

- Press the “OFF” button to turn the fan off.

DEFOGGING THE WINDSHIELD

- 1 Press the windshield air flow button.

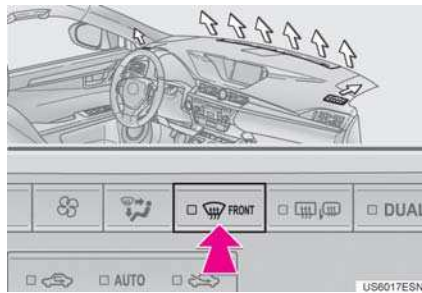

- The air conditioning system control operates automatically.
- Recirculated air mode will automatically switch to outside air mode.

CAUTION

- To prevent the windshield from fogging up
 - Do not use the windshield air flow button during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

6

AIR CONDITIONING


1. AIR CONDITIONING SYSTEM OPERATION

SWITCHING THE AIR OUTLETS AND AIR FLOW

The outlets from which air is delivered can be selected manually.


► Using the instrument panel

- 1 Press the air outlet selector button.

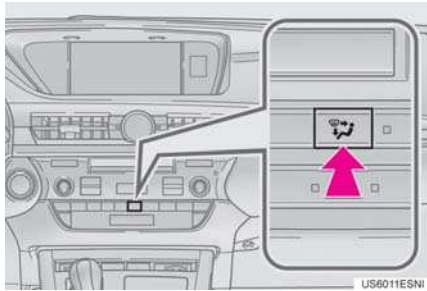


► Using the screen


- 1 Select any mode on the screen.

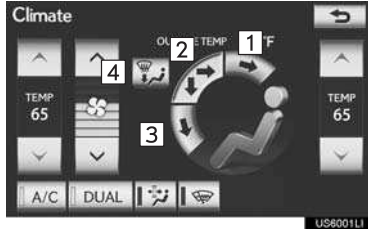

► Air flows to the upper body (Panel)

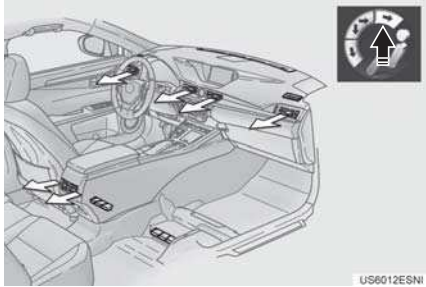


► Air flows to the upper body and feet (Bi-level)

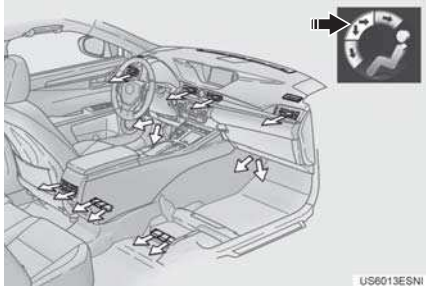


No.	Function
1	Panel
2	Bi-level
3	Floor
4	Floor/windshield

- ▶ Air flows to the feet (Floor)

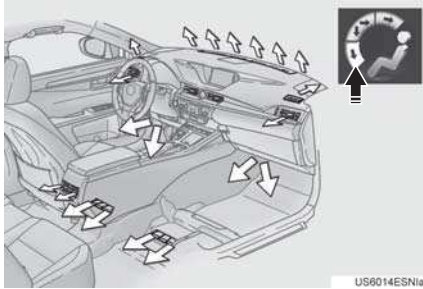

US6014ESNi

- ▶ Air flows to the feet and the windshield defogger operates (Floor/windshield)

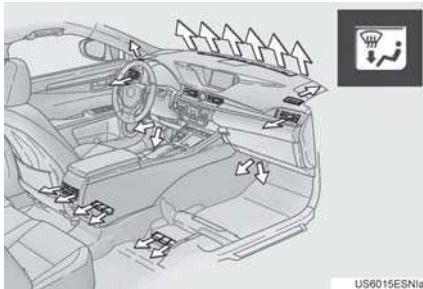


US6015ESNi

SWITCHING BETWEEN OUTSIDE AIR AND RECIRCULATED AIR MODES

The mode switches among recirculated air mode, "AUTO" mode and outside air mode each time the button is pressed.

- 1 Press the air intake control button.

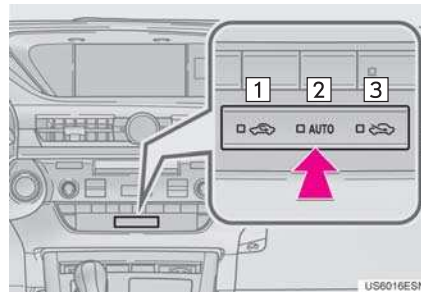

US6016ESNi

- When the system is switched to automatic mode, the air conditioning system operates automatically.

No.	Function
1	Recirculated air mode
2	"AUTO" mode
3	Outside air mode


6

AIR CONDITIONING

1. AIR CONDITIONING SYSTEM OPERATION


ADJUSTING THE POSITION OF AND OPENING AND CLOSING THE AIR OUTLETS

► Front center outlets

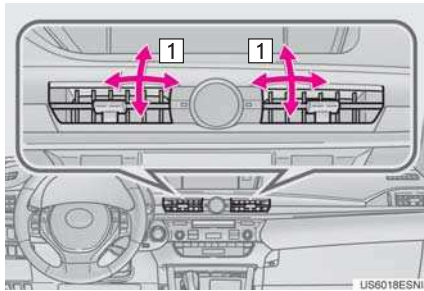


No.	Function
1	Direct air flow to the left or right, up or down

► Front side outlets

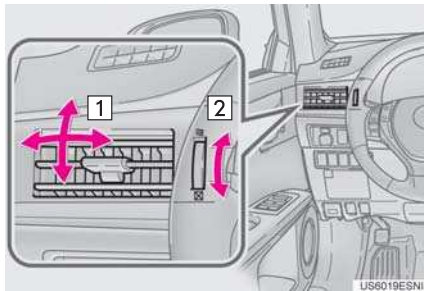

No.	Function
1	Direct air flow to the left or right, up or down
2	Turn the knob to open or close the vent

► Rear center outlets

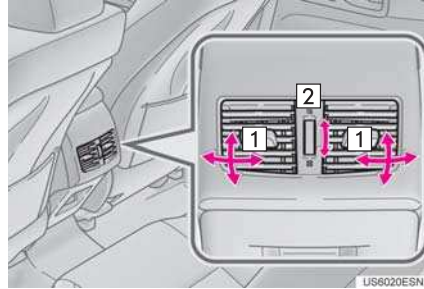


No.	Function
1	Direct air flow to the left or right, up or down
2	Turn the knob to open or close the vent

REAR WINDOW AND OUTSIDE REAR VIEW MIRROR DEFOGGERS

These features are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

The "START STOP ENGINE" <"POWER"> switch must be in IGNITION ON <ON> mode.

- 1 Press the rear window and outside rear view mirror defogger button.

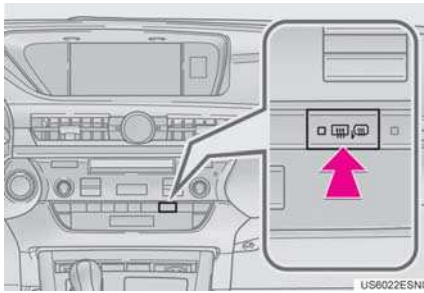

- The defoggers will automatically turn off after 15 to 60 minutes. The operation time changes according to the ambient temperature and vehicle speed.

CAUTION

- When the outside rear view mirror defoggers are on, do not touch the rear view mirror surfaces, as they can become very hot and burn you.

NOTICE

- To prevent 12-volt battery discharge, turn the defoggers off when the engine is off.

WINDSHIELD WIPER DE-ICER*

This feature is used to prevent ice from building up on the windshield and wiper blades.

The "START STOP ENGINE" <"POWER"> switch must be in IGNITION ON <ON> mode.

- 1 Select windshield wiper de-icer.



- The windshield wiper de-icer will automatically turn off after approximately 15 minutes.

CAUTION

- When the windshield wiper de-icer is on, do not touch the glass at the lower part of the windshield or to the side of the front pillars as the surfaces can become very hot and burn you.

6

AIR CONDITIONING

*: If equipped

1. AIR CONDITIONING SYSTEM OPERATION


MICRO DUST AND POLLEN FILTER

Outside air mode switches to recirculated air mode. Pollen is removed from the air that flows to the upper part of the body.

- 1 Select .



- Usually the system will turn off automatically after approximately 1 to 3 minutes.

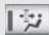- To stop the operation, select  again.

AIR CONDITIONING SYSTEM OPERATING HINTS

OPERATION OF THE AIR CONDITIONING SYSTEM IN ECO DRIVE MODE (HYBRID VEHICLE)

- In the Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
 - Engine speed and compressor operation controlled to restrict heating/cooling capacity
 - Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations:
 - Adjust the fan speed and temperature
 - Turn off Eco drive mode (refer to "Owner's Manual".)

REGISTERING AIR CONDITIONING SETTINGS TO ELECTRONIC KEYS

- Unlocking the vehicle using an electronic key and turning the "START STOP ENGINE" <"POWER"> switch to IGNITION ON <ON> mode will recall that key's registered air conditioning settings.
- When the "START STOP ENGINE" <"POWER"> switch is turned off, the current air conditioning settings will automatically be registered to the electronic key that was used to unlock the vehicle. The system may not operate correctly if more than one electronic key is in the vicinity or if the smart access system with push button start is used to unlock a passenger door. Settings for the electronic key and the corresponding door can be changed. Contact your Lexus dealer.

USING AUTOMATIC MODE

- Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.
- Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after "AUTO" is pressed.

FOGGING UP OF THE WINDOWS

- The windows will easily fog up when the humidity in the vehicle is high. Selecting "A/C" on will dehumidify the air from the outlets and defog the windshield effectively.
- If "A/C" is switched off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.



CAUTION

- To prevent the windshield from fogging up
 - Do not use the windshield air flow button during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

WINDSHIELD FOG DETECTION FUNCTION*

- When automatic mode is set, the humidity sensor (see page 305) detects fog on the windshield and controls the air conditioning system to prevent fog.

OUTSIDE/RECIRCULATED AIR MODE

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

*: If equipped

1. AIR CONDITIONING SYSTEM OPERATION


WHEN THE OUTSIDE TEMPERATURE EXCEEDS 75°F (24°C) AND THE AIR CONDITIONING SYSTEM IS ON

- In order to reduce the air conditioning power consumption, the air conditioning system may switch to recirculated air mode automatically. This may also reduce fuel consumption.
- Recirculated air mode is selected as a default mode when the "START STOP ENGINE" <"POWER"> switch is turned to IGNITION ON <ON> mode.
- It is possible to switch to outside air mode at any time by pressing the air intake control button.

AUTOMATIC MODE FOR AIR INTAKE CONTROL

- In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.
When the dehumidification function is off, and the fan is operating, turning automatic mode on will activate the dehumidification function.

MICRO DUST AND POLLEN FILTER

- In order to prevent the windshield from fogging up when the outside air is cold, the following may occur:
 - Outside air mode does not switch to recirculated air mode.
 - The dehumidification function operates.
 - The operation cancels after approximately 1 minute.
- In rainy weather, the windows may fog up. Press the windshield air flow button.
- In extremely humid weather, the windows may fog up.
- The pollens are filtered out even if  is turned off.

OUTSIDE TEMPERATURE

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
 - When stopped, or driving at low speeds (less than 12 mph [20 km/h])
 - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

WHEN THE OUTSIDE TEMPERATURE FALLS TO NEARLY 32°F (0°C)

- The dehumidification function may not operate even when "A/C" is selected.

AIR CONDITIONING ODORS

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

AIR CONDITIONING FILTER


- The air conditioning filter may clog after long use. The filter may need to be replaced if the air flow of the air conditioner and heater experiences extreme reductions in operating efficiency, or if the windows fog up easily. (For details, refer to "Owner's Manual".)

CUSTOMIZATION

- Settings can be changed. (For details, refer to "Owner's Manual".)

HUMIDITY SENSOR*

NOTICE

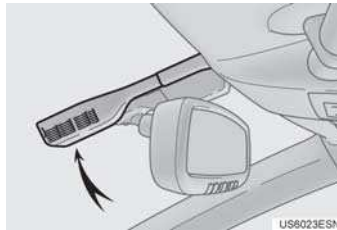

- In order to detect fog on the windshield, a sensor which monitors the temperature of the windshield, the surround humidity, etc. is installed. (See page 303.) Follow these points to avoid damaging the sensor:
 - Do not disassemble the sensor
 - Do not spray the glass cleaner on the sensor or subject it to strong impacts
 - Do not stick anything on the sensor

*: If equipped

1. AIR CONDITIONING SYSTEM OPERATION

1. VOICE COMMAND SYSTEM OPERATION

1. VOICE COMMAND SYSTEM


The voice command system enables the navigation, audio/video, hands-free and air conditioning systems to be operated using voice commands.

The operating procedures of voice commands from the "Shortcut Menu" screen are explained here.

INFORMATION

- Commands that are not displayed in the "Shortcut Menu" screen can be operated from the "Main Menu" screen.

STEERING SWITCHES FOR THE VOICE COMMAND SYSTEM

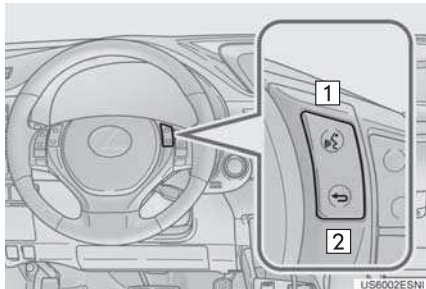

1 Talk switch


- Press the talk switch to start the voice command system.
- To cancel voice recognition, press and hold the talk switch.

2 Back switch

- Press the back switch to return to the previous screen.

VOICE COMMAND SYSTEM OPERATION

- 1 Press the talk switch.
 - After the "Shortcut Menu" screen has been displayed, voice guidance will commence.
 - Voice guidance for the voice command system can be skipped by pressing the talk switch.
- 2 After a beep sounds, say the command of your choice.

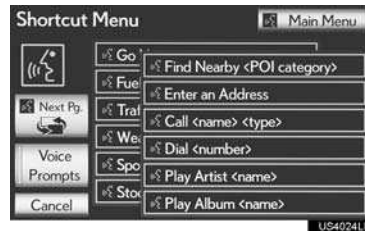

- Voice commands are marked with . Some commonly used commands are displayed on the screen.
- By saying "Next page" or "Previous page", or by selecting "Next Pg. / Prev. Pg.", the screen will display the commands displayed on the page in the background.
- Saying "Main menu" or selecting "Main Menu" when the "Shortcut Menu" screen is displayed will display the "Main Menu" screen.
- Registered POIs, registered names in the phonebook etc., can be said in the place of the "<>" next to the commands. (See page 317.)
For example: Say "Find nearby dining", "Call John" etc.

- Saying **"Help"** prompts voice guidance to offer examples of commands and operation methods.

3 Say the command displayed on the screen.



- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
 - Say **"Go back"**.
 - Select **"Go Back"**.
 - Press the back switch on the steering wheel.
- To cancel voice recognition, select **"Cancel"**, or press and hold the talk switch.


INFORMATION

- If the navigation system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- If a voice command cannot be recognized within 6 seconds, voice guidance will say "Pardon?" ("Command not recognized." will be displayed on the screen) and voice command reception will restart.
- If a voice command cannot be recognized 2 consecutive times, the voice command guidance system will say "Paused. To restart voice recognition, push the talk switch. To cancel voice recognition, push and hold the talk switch." Voice recognition will then be suspended. Select **"Cancel"** or **"Go Back"**, or press the back switch on the steering wheel.
- The voice recognition prompt can be set to on or off when **"Voice Prompts"** is selected. This setting can also be changed on the "Voice Settings" screen. (See page 62.)
- When **"Voice Prompts"** is selected, voice recognition will be temporarily suspended. Press the talk switch again.
- Voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.

1. VOICE COMMAND SYSTEM OPERATION

MICROPHONE

It is unnecessary to speak directly into the microphone when giving a command.

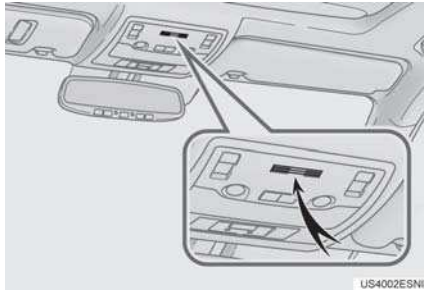

INFORMATION

- Wait for the confirmation beep before speaking a command.
- Voice commands may not be recognized if:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while voice commands are spoken.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
 - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
 - There is excessive background noise, such as wind noise.

VOICE COMMAND EXAMPLE: SEARCHING FOR A ROUTE TO YOUR HOME

- 1 Press the talk switch.
- 2 Say "Go home".
 - A confirmation screen will be displayed showing the recognition results.
- 3 Say "Yes" or select "Yes".
 - The system starts searching for a route to your home.



- When the voice command is recognized, the map of the area around the home address will be displayed and route guidance to the home address will begin.
- If a home address is not registered, voice guidance will say "Your home is not set. Please try again after setting a home location." and you will be prompted to enter a home address. (See page 109.)

VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS

- 1 Press the talk switch.
- 2 Say **"Enter an address"**.
 - If the destination's state/province has not been set or is not contained in the voice command recognition list, the screen to input a state/province will be displayed.



- Some areas cannot be recognized by the voice recognition system.

- For information regarding the state/province setting to perform a destination search by address, see "SELECTING THE SEARCH AREA" on page 68.

- 3 Say **"<city name>"**.
 - Say the desired city name that belongs to the set state in the place of the "<".
 - Say **"Change State"** to change the set voice recognition state.

- 4 Say **"<street name>"**.

- Say the desired full street name, or main body of the street name that belongs to the set state in the place of the "<".
- The voice command recognition is designed to recognize the main body of the official street name.

For example, if the official street name is **"East Main Street"**, the voice command recognition will recognize **"Main"**.

- 5 Say **"<house number>"**.

- Say the desired number, cardinal/intercardinal direction etc. in the place of the "<".

For example: Say **"West 555"**.

- Inputting the house number can be skipped.

- 6 Say **"Start guidance"** or **"Show map"**. Alternatively, select **"Start Guidance"** or **"Show Map"**.



- After this, follow the voice guidance and search for a destination route by voice command operation.

7

VOICE COMMAND SYSTEM

INFORMATION

- Even if the state set using voice recognition is different from the set state in the "Address" screen (which was set when a destination was set manually), the set state in the "Address" screen will not change. (For more information on the "Address" screen, see "SELECTING THE SEARCH AREA" on page 68.)
- The house number voice recognition conditions are outlined below:
 - Numerals: 10 digits or less
 - Numerals and cardinal/intercardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "and".)
 - Cardinal/Inter-cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "and".)
 - Numerals are recognized as single digits only.
 - The cardinal/intercardinal direction and hyphens are only recognized once.
 - The following cardinal/intercardinal directions can be recognized: North, East, West, South, North East, North West, South East and South West.
- When inputting the house number is skipped and the recognized candidate list has multiple entries and so forth, the full street name may need to be recognized. If this occurs, say the full street name. For example, say "East Main Street" and "East Main Street" will be recognized.

**VOICE COMMAND
EXAMPLE: SEARCH FOR A
TRACK USING ARTIST NAME
OR ALBUM NAME**

- 1 Press the talk switch.
 - "Play Artist <name>" and "Play Album <name>" are displayed in the "Shortcut Menu" screen.
- 2 Say "Play artist <name>" or "Play album <name>".
 - Say the desired artist name or album name in the place of the "<>".
 - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed.
- 3 Say "Yes" or select "Yes".
 - When "Play Artist <name>" is used to play music, the first track is selected randomly. For operations beyond playing music, refer to the "AUDIO/VIDEO SYSTEM" section of this manual.



- The system starts playing music.

- Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

INFORMATION

- A USB memory or iPod must be connected to enable track searching and playback. (See "USB MEMORY OPERATION" on page 254 and "iPod OPERATION" on page 260.)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
 - When the USB memory or iPod data has changed.
 - When the voice recognition language is changed. (See page 54.)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.
- While "Play Music" is displayed in the "Shortcut menu" screen, say "**Play music**" to display the music screen from which searching for a track using a voice command can be performed.
- When "Play Music" is dimmed in the "Shortcut Menu" screen, it is not possible to search for a track using a voice command. In this situation, reduce the amount of music data in the USB memory or iPod and update the recognition data to enable searching by voice command.

1. VOICE COMMAND SYSTEM OPERATION

2. NATURAL SPEECH INFORMATION (ENGLISH ONLY)

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation. Not all voice commands are displayed in the short cut menu.

INFORMATION

- The "Set a Destination", "Use the Phone", "Play Music" and "Get Information" commands displayed on the "Shortcut Menu" screen can be operated using natural language speech recognition technology.
- If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

EXPRESSION EXAMPLES FOR EACH FUNCTION

Command	Expression examples
"Go Home"	<i>Let's go home. Take me home.</i>
"Enter an Address"	<i>I wanna enter an address, please. Put in an address.</i>
"Find Nearby <POI category>"	<i>Find nearby <Restaurants> for me. I need to see the nearby <Restaurants>.</i>
"Call <name> <type>"	<i>Get me <Robert Brown>. I need to call <Robert Brown> at <Work> right away.</i>
"Dial <number>"	<i>Please dial the number <3334445555>. Ring <3334445555>.</i>
"Play Artist <name>"	<i>Play the artist <XXXXX>. I'd like to hear the band <XXXXX>.*</i>
"Play Album <name>"	<i>Play album <XXXXX>. Music from album <XXXXX>.*</i>

*: Say the desired artist name or album name in the place of the "<>".

Command	Expression examples
"Traffic"	<i>How's the traffic? Check the traffic.</i>
"Weather"	<i>What's the weather like? Let's get a forecast.</i>
"Sports Scores"	<i>Team scores. How are my favorite teams doing?</i>
"Stock Quotes"	<i>Stock quotes. How are my stocks doing?</i>
"Fuel Prices"	<i>Let's check fuel prices. Find the cheapest gas prices.</i>

INFORMATION

- Commands that are not displayed in the "Shortcut Menu" screen can be accessed from the main menu.
- For example, to make an "International Call", say "**Main menu**" while the "Shortcut Menu" screen is being displayed. Then say "**Use the phone**" followed by saying the desired number, e.g. "**123456789**".


1. VOICE COMMAND SYSTEM OPERATION

3. EXPANDED VOICE COMMANDS

Selecting “On” next to “Expanded Voice Commands” on the “Voice Settings” screen enables voice command operation of the audio/video and air conditioning system. (See page 62.) For more information on operations that can be controlled using expanded voice commands, refer to “COMMAND LIST”. (See page 317.)

VOICE COMMAND EXAMPLE: TURN THE AUDIO SYSTEM ON

- 1 Press the talk switch.
- 2 Say “Audio on”.

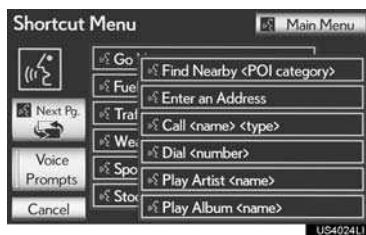

INFORMATION

- Commands relating to operation of the audio/video and air conditioning systems can only be performed when the audio and air conditioning systems are turned on.
- Expanded voice commands can be recognized when the “Shortcut Menu” screen is displayed.

1. VOICE COMMAND SYSTEM OPERATION

4. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- All commands are listed in the table.
 - For devices that are not installed in the vehicle, the related commands will not be displayed in the "Shortcut Menu" screen. Also, according to conditions, other commands may not be displayed in the "Shortcut Menu" screen.
 - The functions available may vary according to the navigation system installed.
- Voice recognition language can be changed. (See "SELECTING A LANGUAGE" on page 54.)

▶ "Set a Destination"

Command	Action	Shortcut Menu
"Find Nearby <POI category>"	Displays a list of <POI category* ¹ > near the current position.	○
"Enter an Address"	Enables setting a destination by saying the address.	○
"Go Home"	Displays the route to home.	○
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.	–
"Destination by Phone Number"* ²	Enables setting a destination by saying the phone number.	–

*¹: For example; Gas stations, Restaurants, etc.

*²: To use this function, say "**Main menu**" and then "**Set a destination**" while the "Shortcut Menu" screen is being displayed.

7

VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION

▶ “Use the Phone” (See “BY VOICE RECOGNITION” on page 161.)

Command	Action	Shortcut Menu
“Call <name> <type>”	Calls made by saying a name from the phone-book. For example: Say “ <i>Call John Smith</i> ”, “ <i>Call John Smith, mobile</i> ” etc.	○
“Dial <number>”	Calls made by saying the phone number. For example: Say “ <i>Dial 911</i> ”, “ <i>Dial 5556667777</i> ” etc.	○
“International Call” ^{*1}	Calls international numbers by saying the phone number.	—

^{*1}: To use this function, say “*Main menu*” and then “*Use the phone*” while the “Shortcut Menu” screen is being displayed.

▶ “Play Music”

Command	Action	Shortcut Menu
“Play Artist <name>”	Plays tracks by the selected artist. For example: Say “ <i>Play artist <XXXXX></i> ” ^{*1}	○
“Play Album <name>”	Plays tracks from the selected album. For example: Say “ <i>Play album <XXXXX></i> ” ^{*1}	○
“Play Song <name>” ^{*2}	Plays the selected track. For example: Say “ <i>Play song Summertime</i> ”, “ <i>Play song Concerto in A Major</i> ” etc.	—
“Play Playlist <name>” ^{*2}	Plays tracks from the selected playlist. For example: Say “ <i>Play playlist My Favorite Songs</i> ”, “ <i>Play Playlist Classic Hits</i> ” etc.	—

^{*1}: Say the desired artist name or album name in the place of the “<>”.

^{*2}: To use this function, say “*Main menu*” and then “*Play music*” while the “Shortcut menu” screen is being displayed.

▶ “Get Information”

Command	Action	Shortcut Menu
“Traffic”	Displays the traffic incident list.	○
“Weather”	Displays weather information.	○
“Sports Scores”	Displays the sports list.	○
“Stock Quotes”	Displays the stocks list.	○
“Fuel Prices”	Displays the fuel prices list.	○
“Lexus Insider”	Displays the Lexus insider list.	–

▶ Select audio mode

When Expanded Voice Commands are turned “On”. (See page 316.)

Command	Action	Shortcut Menu
“Radio”	Sets the audio mode to radio.	○
“AM”	Selects the AM band.	○
“FM”	Selects the FM band.	○
“Satellite radio”	Selects the satellite radio mode.	○
“Disc”	Selects the disc audio mode.	○
“Auxiliary”	Selects the auxiliary audio mode.	○
“Bluetooth* audio”	Selects the Bluetooth® audio mode.	○
“iPod”	Selects the iPod audio mode.	○
“USB audio”	Selects the USB audio mode.	○
“Audio on”	Turns the audio system on.	○
“Audio off”	Turns the audio system off.	○

7

VOICE COMMAND SYSTEM

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

1. VOICE COMMAND SYSTEM OPERATION

► Climate command

When Expanded Voice Commands are turned "On". (See page 316.)

Command	Action	Shortcut Menu
"Automatic climate control"	Turns air conditioning system on and off.	○
"Warmer"	Turns temperature up.	○
"Cooler"	Turns temperature down.	○

INFORMATION

- Commands that have a "○" in the Shortcut Menu column can be recognized from the "Shortcut Menu" screen.
- Commands that have a "—" in the Shortcut Menu column can only be recognized from the screen that they are displayed in.


1. INFORMATION DISPLAY

1. MAP DATABASE VERSION AND COVERAGE AREA

MAP INFORMATION

Coverage areas and legal information can be displayed and map data can be updated.


- 1 Press the "MENU" button on the Remote Touch.

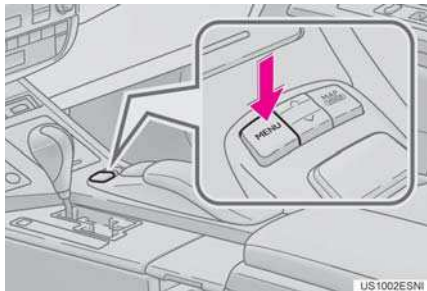

- 2 Select "Info/Apps".




- 3 Select "Map Data".

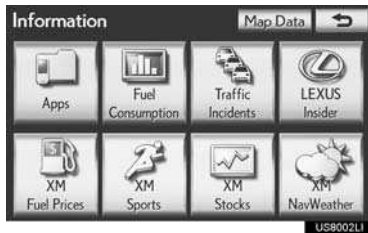

- The "Map Information" screen will be displayed.

INFORMATION


- Map data updates are available for a fee. Contact your Lexus dealer for further information.
- The "Map Information" screen displays **1** "Map Version" and **2** "Map Update ID". This data is needed to perform a map data update.

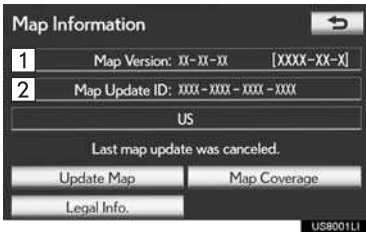

LEGAL INFORMATION

Legal information related to the map data can be displayed.

- 1 Press the "MENU" button on the Remote Touch, then select "Info/Apps".
- 2 Select "Map Data" on the "Information" screen.
- 3 Select "Legal Info."

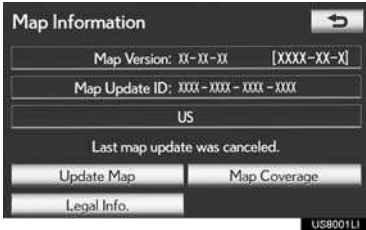


- The "Legal Information" screen will be displayed.

MAP COVERAGE

Map data coverage areas can be displayed.

- 1 Press the “MENU” button on the Remote Touch, then select “Info/Apps”.
- 2 Select “Map Data” on the “Information” screen.
- 3 Select “Map Coverage”.

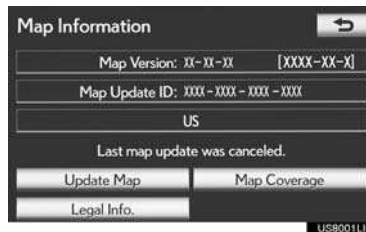

- The “Map Data Coverage” screen will be displayed.

CERTIFICATION

- ▶ For vehicles sold in Canada

- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.
- Cet appareil est conforme au CNR-310 d'Industrie Canada. Son exploitation est autorisée sous réserve que l'appareil ne cause pas de brouillage préjudiciable.

2. XM FUNCTION-OVERVIEW

1. XM SERVICES

XM services are subscription-based XM Satellite Radio services to provide convenient features to subscribers.

- With an active XM subscription, the following features are available:
 - XM Sports*¹ (See page 327.)
 - XM Stocks*¹ (See page 330.)
 - XM Fuel Prices*² (See page 333.)
 - XM NavWeather™*² (See page 337.)
 - XM NavTraffic®*² (See page 341.)

*¹: Available at no extra charge with an active XM Satellite Radio subscription.

*²: Available via separate XM subscription(s).

SUBSCRIPTION(S)

- XM NavTraffic®, XM NavWeather™ and XM TravelLink require separate XM subscription(s). XM Sports*, XM Stocks* and XM Fuel Prices are available with an XM TravelLink subscription. After a 90-day trial, you must contact XM and set up the appropriate XM subscription(s) to continue receiving these services.

*: XM Sports and XM Stocks are included with an XM Satellite Radio subscription.

AVAILABILITY OF SERVICE(S)

- The XM NavTraffic® service is available in the contiguous 48 U.S. states and Canada.
- The XM NavWeather™, XM Sports, XM Stocks and XM Fuel Prices services are available in the contiguous 48 U.S. states.

ACTIVATION OF SERVICE(S)

- To receive XM NavTraffic®, XM NavWeather™, XM Sports, XM Stocks and XM Fuel Prices services, the XM service must be activated. To activate the service, call the XM Listener Care Center at 1-866-635-2349 (U.S.A.) or 1-877-438-9677 (Canada).
- Customers should have their radio ID ready. The radio ID can be found by selecting "CH 000" on the radio. For details, see "DISPLAYING THE RADIO ID" on page 227.

INFORMATION

- For further details about the service, contact your Lexus dealer.
- XM Satellite Radio is responsible for all fees and services, which are subject to change.

XM RADIO SERVICES – DESCRIPTIONS

■ RADIO AND ENTERTAINMENT

XM offers more than 170 satellite radio channels of commercial-free music and premier sports, news, talk, and entertainment. XM is broadcast via satellites to millions of listeners across the continental United States. XM subscribers listen to XM on satellite radio receivers for the car, home, and portable use. More information about XM is available online at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada).

■ INFOTAINMENT AND DATA SERVICES

XM offers a variety of advanced Infotainment and data services.

XM RADIO SERVICES – SUBSCRIPTION INSTRUCTIONS

For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included.

Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada). XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

- ▶ U.S.A. Customers
Visit www.siriusxm.com or call 1-866-635-2349
- ▶ Canadian Customers
Visit www.xmradio.ca or call 1-877-438-9677

8

INFORMATION

XM RADIO SERVICES – LEGAL DISCLAIMERS AND WARNINGS

Fees and Taxes – Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions subject to Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada). XM service only available in the 48 contiguous United States and Canada*.

*: Canada – some deterioration of service may occur in extreme northern latitudes. This is beyond the control of XM Satellite Radio.

Explicit Language Notice – Channels with frequent explicit language are indicated with an “XL” preceding the channel name. Channel blocking is available for XM Satellite Radio receivers by notifying XM at;

- ▶ U.S.A. Customers
Visit www.siriusxm.com or calling 1-866-635-2349
- ▶ Canadian Customers
Visit www.xmradio.ca or calling 1-877-438-9677

It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the XM Satellite Radio System or that support the XM website, the Online Service or any of its content. Furthermore, the AMBE[®] voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.


Note: this applies to XM receivers only and not XM Ready devices.

3. XM FUNCTION OPERATION

1. XM Sports

XM Sports is a service included with an XM Satellite Radio subscription. This service is also available with an XM Travellink subscription. With this service, you can receive updates via the navigation system on your personally selected sports teams.


- 1 Press the “MENU” button on the Remote Touch.

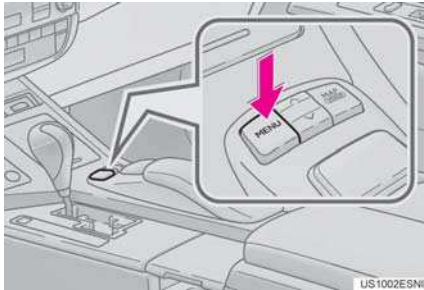

- 2 Select “Info/Apps”.



- 3 Select “XM Sports”.

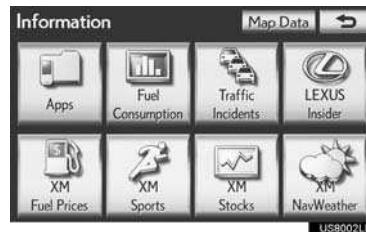

- The “XM Sports” screen is displayed.
- The following operations can be performed:
 - Sports information can be received. (See page 327.)
 - XM Sports settings can be set. (See page 328.)

RECEIVE SPORTS INFORMATION

The desired teams must be added in order to receive information. (See page 328.)

- 1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “Info/Apps” on the “Menu” screen.
- 3 Select “XM Sports” on the “Information” screen.

8

INFORMATION

3. XM FUNCTION OPERATION

- 4 Select the desired team to receive information.



- Teams for which there is no current data available will be dimmed and you will not be able to select them.
- 5 Select the individual information item to hear it, or select **“Read All”** to hear all available information for that team.



- The selected information will be read out in its entirety.

XM Sports SETTINGS – ADD OR DELETE TEAMS

To input your personalized XM Sports team.

- 1 Press the **“MENU”** button on the Remote Touch. (See **“Remote Touch”** on page 10.)
- 2 Select **“Info/Apps”** on the **“Menu”** screen.
- 3 Select **“XM Sports”** on the **“Information”** screen.
- 4 Select **“Options”**.



- 5 Perform each setting according to the procedures outlined on the following pages.



- Personalized XM Sports teams can also be input from the **“Setup”** screen. (See **“XM SETTINGS”** on page 344.)

ADD SPORTS TEAM

- 1 Select "Add Sports Team".




- Up to 5 teams can be added and saved in the system for which information will be received. The desired teams can be changed at any time. Teams must be added one at a time.

- 2 Select the desired sporting league of the team.




- 3 Select the name of the desired team to be added from the list that appears.

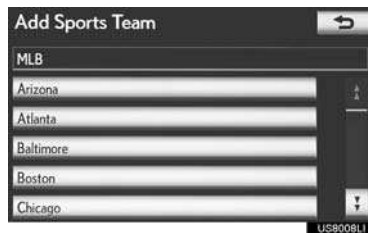

- 4 Select "Yes" to confirm or "No" to cancel.

DELETE SPORTS TEAMS

- 1 Select "Delete Sports Teams".

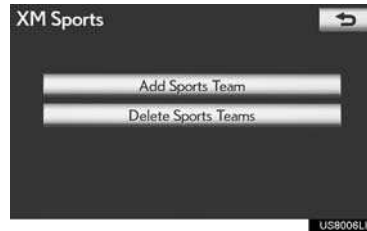

- 2 Select the individual sports team to be deleted or select "Select All" to delete all the teams, and select "Delete".




- 3 Select "Yes" to confirm or "No" to cancel.

3. XM FUNCTION OPERATION

2. XM Stocks

XM Stocks is a service included with an XM Satellite Radio subscription. This service is also available with an XM TravelLink subscription. With this service, you can receive updates via the navigation system on your personally selected stocks.

1 Press the "MENU" button on the Remote Touch.

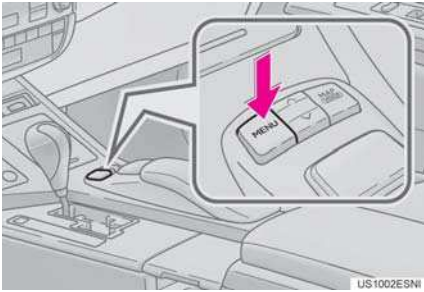

2 Select "Info/Apps".



3 Select "XM Stocks".



- The "XM Stocks" screen is displayed.
- The following operations can be performed:
 - Stock data can be received. (See page 331.)
 - XM Stocks setting can be set. (See page 331.)

RECEIVE STOCK DATA

You must first add your desired stocks prior to receiving data. (See page 331.)

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Info/Apps" on the "Menu" screen.
- 3 Select "XM Stocks" on the "Information" screen.
- 4 Select an individual stock to hear its related data, or select "Read All" to hear the data for all the stocks saved in the system.



- The selected data will be read out in its entirety.
- Stock data may be delayed by approximately 20 minutes.

XM Stocks SETTINGS – ADD OR DELETE STOCKS

To input your personalized XM Stocks settings.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Info/Apps" on the "Menu" screen.
- 3 Select "XM Stocks" on the "Information" screen.
- 4 Select "Options".



- 5 Perform each setting according to the procedures outlined on the following pages.



- Personalized XM Stocks settings can also be input from the "Setup" screen. (See "XM SETTINGS" on page 344.)


8

INFORMATION


3. XM FUNCTION OPERATION

ADD STOCK

1 Select "Add Stock".

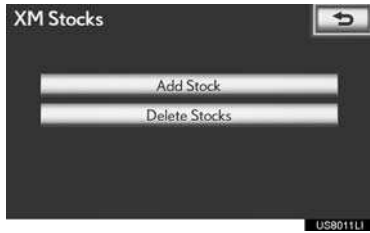

2 Input the desired stock symbol.

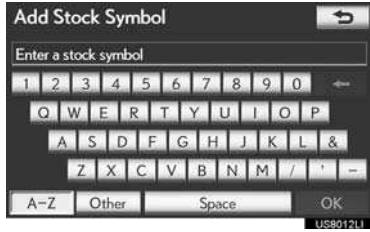


3 When finished, select "OK".


- Up to 10 individual stock symbols can be added and saved in the system for which information will be received. Stocks must be input one at a time. To enter a stock, the symbol of the desired stock must be known.

DELETE STOCKS

1 Select "Delete Stocks".

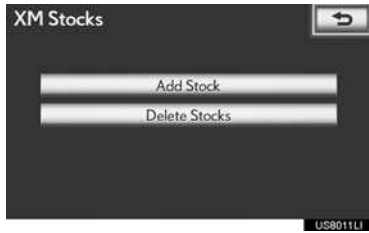

2 Select the individual stock to be deleted or select "Select All" to delete all the stocks, and select "Delete".

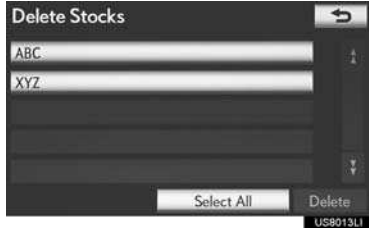

3 Select "Yes" to confirm or "No" to cancel.


3. XM FUNCTION OPERATION

3. XM Fuel Prices

XM Fuel Prices is a service included with an XM TravelLink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

SHOW XM Fuel Prices INFORMATION


- 1 Press the “MENU” button on the Remote Touch.

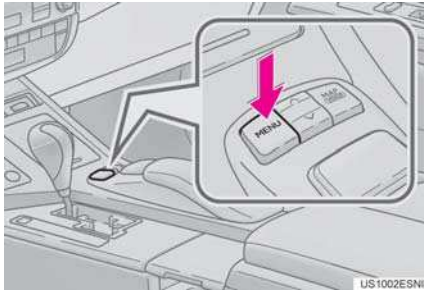

- 2 Select “Info/Apps”.




- 3 Select “XM Fuel Prices”.

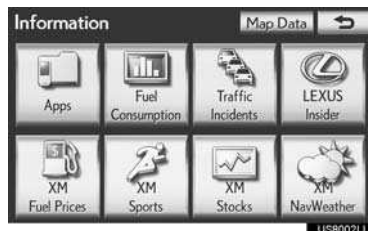

- The “Fuel Price” screen is displayed.

XM Fuel Prices SCREEN

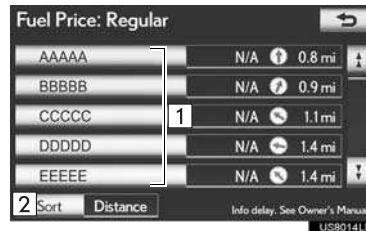

- 1 Gas station name
- 2 Sort

VIEW DETAILED FUEL PRICE INFORMATION

- 1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “Info/Apps” on the “Menu” screen.
- 3 Select “XM Fuel Prices” on the “Information” screen.
- 4 Select the desired gas station from the list.




- The location of the selected gas station will be displayed on the map screen.


8 INFORMATION

3. XM FUNCTION OPERATION

5 Select "Info".

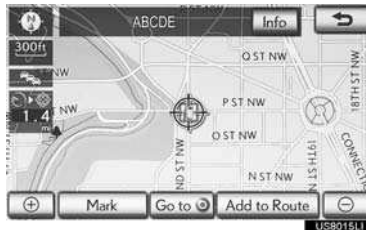

- When the map scale is at the maximum range of 0.5 miles (800 m), is not shown. When the map scale is at the minimum range of 150 ft. (50 m), is not shown.

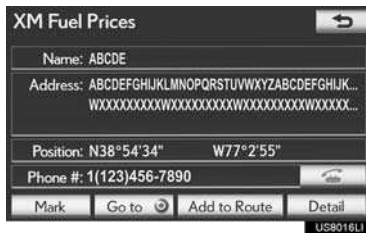

"Mark": Select to mark the selected gas station on the map screen.

"Go to": Select to set the selected gas station as a destination with route directions.

"Add to Route": Select to add the selected gas station as a destination.

"Detail": Select to read the selected gas station's information.

- If is selected, the registered phone number can be called.

INFORMATION


- The information displayed is received via satellite radio. Depending on the time the information is received, the displayed information may not be up to date.

XM Fuel Prices SETTINGS

The desired fuel type, preferred brand, and show prices reported can be registered.

REGISTER FUEL TYPE

- 1 Press the "MENU" button on the Remote Touch.

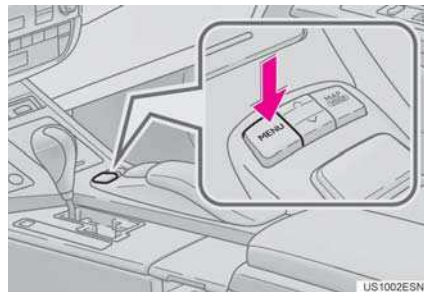


- 2 Select "Setup".




- 3 Select "Other".



- 4 Select "XM Fuel Prices".

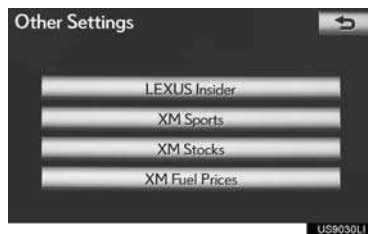


- 5 Select "Fuel Type".

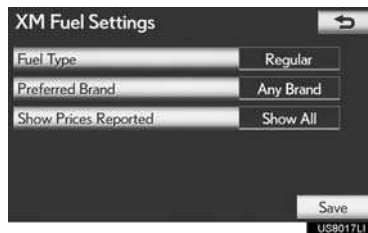

- 6 Select the desired fuel type.
 - "Premium", "Midgrade", "Regular" or "Diesel" can be selected.
- 7 Select "Save".

REGISTER PREFERRED BRAND


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Other" on the "Setup" screen.
- 3 Select "XM Fuel Prices" on the "Other Settings" screen.
- 4 Select "Preferred Brand".

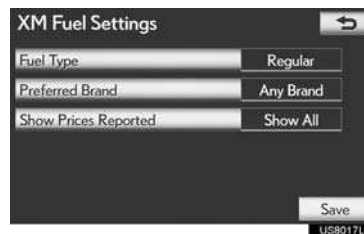

- 5 Select the preferred brand.
- 6 Select "Save".

REGISTER SHOW PRICES REPORTED

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Other" on the "Setup" screen.
- 3 Select "XM Fuel Prices" on the "Other Settings" screen.
- 4 Select "Show Prices Reported".

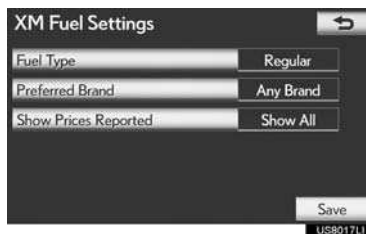

- 5 Select the desired period.
 - "Last 24 Hours", "Last 2 Days" or "Show All" can be selected.
 - If "Show All" is selected, information about gas stations which fuel prices are not provided is also displayed on the list.
- 6 Select "Save".

3. XM FUNCTION OPERATION


4. XM NavWeather™

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map screen.

- The following operations can be performed:
 - Show XM NavWeather™ information: Weather forecast information is displayed on the map screen. (See page 337.)
 - Weather information: Weather information for the selected city is displayed. (See page 339.)
 - Weather warnings: Weather warnings issued within a radius of approximately 15 miles (25 km) or 7.8 miles (12.5 km) around the vehicle are displayed on the warning screen. (See page 340.)

SHOW XM NavWeather™ INFORMATION


- 1 Press the “MENU” button on the Remote Touch.

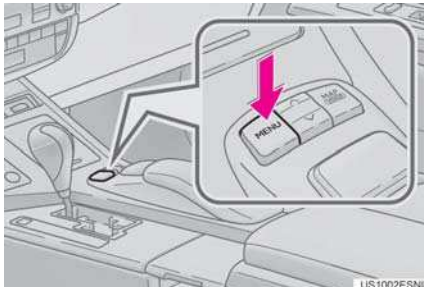

- 2 Select “Info/Apps”.




- 3 Select “XM NavWeather”.

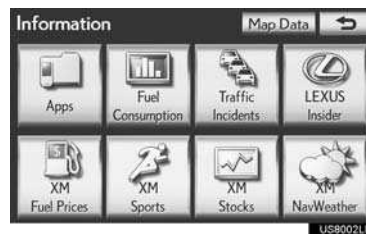

- The XM NavWeather screen is displayed.

XM NavWeather™ SCREEN

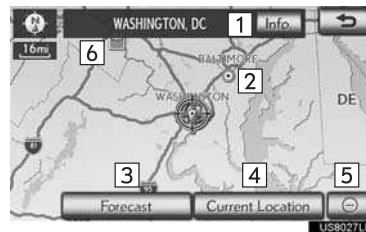

- 1 “Info.”

- When the city icon is selected, “Info.” is displayed on the map screen. Selecting this screen button displays the “Forecast” screen. (See page 339.)

8

INFORMATION

3. XM FUNCTION OPERATION

2 City icon

- When this screen button is selected, city names and "Info." are displayed on the upper part of the screen.

3 "Forecast"

- When this screen button is selected, the city selection screen is displayed.



- Select a city to display weather information. Weather information of the selected city will be displayed. (See page 339.)

4 "Current Location"

- When "Current Location" is selected, the current position is displayed.

5 Zoom in/out screen button


- The scale of the map can be changed. Three zoom levels can be selected; 16 miles (26 km), 30 miles (48 km) and 60 miles (97 km).

6 Weather icons and grids

- Inclement weather information is displayed on the map using weather icons and grids. Selecting an icon shows the related information at the top of the screen.


Icon	Weather
	Tornado
	Hurricane
	Storm
	Flood
	Winter
	Wind
	Extremes
	Other
	Hail storm
	Severe thunderstorm
	Heavy fog
	Heavy freezing rain/ice
	Heavy snow
	Heavy rain

WEATHER INFORMATION

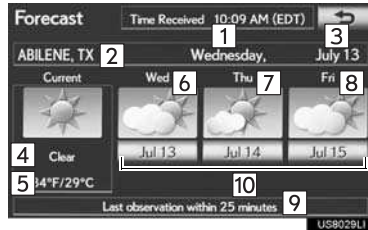

No.	Function
1	Received time
2	City name
3	Today's date
4	Current weather
5	Current temperature
6	Today's weather
7	Tomorrow's weather
8	Day after tomorrow's weather
9	Observed time (Time elapsed since last update)
10	Specified day's weather

- When the specified day's weather screen button is selected, weather information for a specified day is displayed.

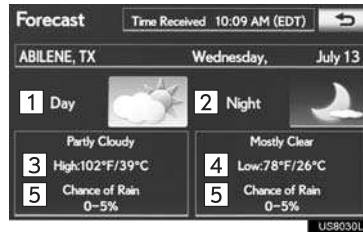

No.	Function
1	Daytime weather
2	Nighttime weather
3	Maximum temperature
4	Minimum temperature
5	Precipitation probability

8

INFORMATION

3. XM FUNCTION OPERATION

WEATHER WARNINGS

Weather warnings issued within a radius of approximately 15 miles (25 km) or 7.8 miles (12.5 km) around the vehicle are displayed on the warning screen.



“Weather Map”: When this screen button is selected, the “XM NavWeather” screen is displayed.

“OK”: When this screen button is selected, the screen returns to the map of the current position.

XM NavWeather™ INDICATOR



- When an XM NavWeather™ warning is issued within the vicinity, the XM NavWeather™ indicator will appear on the map screen.

3. XM FUNCTION OPERATION

5. XM NavTraffic®

The subscription-based XM NavTraffic® service allows the navigation system to display traffic information on the map screen.

The following operations can be performed:


- Show XM NavTraffic® Information: Traffic information is displayed on the map screen. (See page 342.)
- Auto Avoid Traffic: If any heavy congestion or moderate traffic has been detected on the guidance route, it may be possible for you to select another route offered by the system. (See page 127.)
- Traffic Incident Warning: Traffic congestion information is provided using voice guidance. (See page 64.)
- Show Free Flowing Traffic: Freely flowing traffic is shown by the arrow on the map. (See page 128.)

INFORMATION

- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate. (See page 342.)

SHOW TRAFFIC EVENT


- 1 Press the “MENU” button on the Remote Touch.

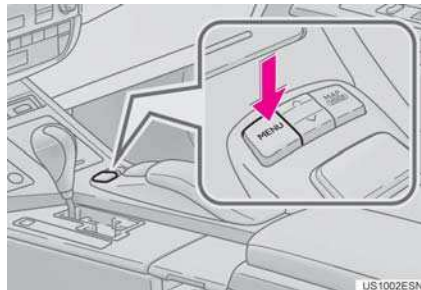

- 2 Select “Info/Apps”.



- 3 Select “Traffic Incidents”.

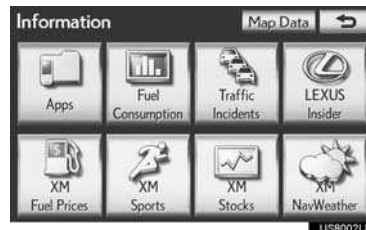


- A list of current traffic incidents is displayed along with information on the incident's distance and position relative to the vehicle.

8

INFORMATION

3. XM FUNCTION OPERATION

- Select the desired traffic event.

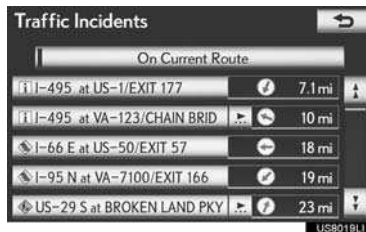


“On Current Route”: Select to display the traffic congestion information for the selected route, or the road which the current vehicle is on. If a route has not been set, “On Current Road” will be displayed.

- This screen is displayed.



- Guidance route traffic information is displayed on the screen. Select “Detail” to display detailed traffic event information.

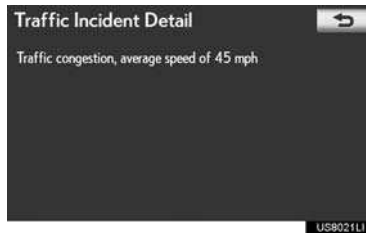


SHOW XM NavTraffic® INFORMATION

- Select “Show on Map”.




- Select “Traffic Information”.

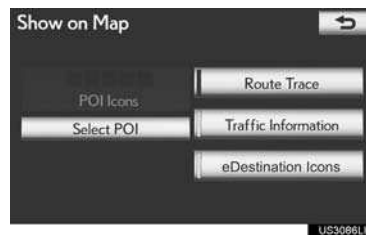


- The “Traffic Information” indicator is highlighted.

- XM NavTraffic® information is displayed on the map screen.

- On the map screen

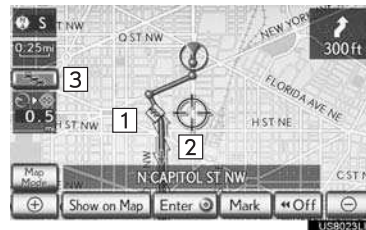

- On the freeway information screen

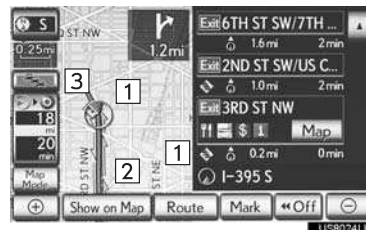

1 XM NavTraffic[®] icon

- When any traffic information is received, the XM NavTraffic[®] icon will appear on the map screen. Selecting the XM NavTraffic[®] icon on the screen will start voice guidance for the traffic information. (See page 44.)
- When the XM NavTraffic[®] icon is selected, voice guidance for the traffic information will start even if "Off" for "Traffic Incident Warning" is selected.

2 XM NavTraffic[®] information arrow

- When any XM NavTraffic[®] information is received, the XM NavTraffic[®] information arrow will appear on the map screen. The color of the arrow changes depending on the traffic information received.

Color	Function
Red	Heavy congestion
Yellow	Moderate traffic
Green	Freely flowing traffic

3 XM NavTraffic[®] indicator

- When any XM NavTraffic[®] information is received, the XM NavTraffic[®] indicator will appear on the screen. The color of the indicator changes depending on the traffic information received.

Color	Function
White	Traffic information has been received.
Yellow	Traffic restriction information on the guidance route has been received (screen button*).
Red	Congestion information on the guidance route has been received (screen button*).


*: Selecting the XM NavTraffic[®] indicator will start voice guidance.

4. SETUP

1. XM SETTINGS

Used for changing settings for XM Sports, XM Stocks and XM Fuel Prices.

- 1 Press the "MENU" button on the Remote Touch.

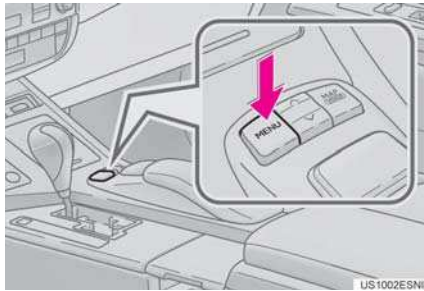


- 2 Select "Setup".



- 3 Select "Other".



- 4 Select the item to be set.

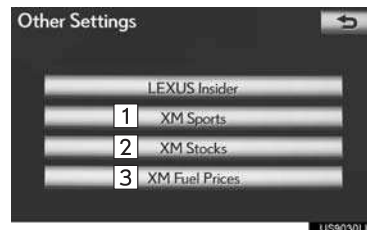

- On this screen, the following functions can be performed:

No.	Function	Page
1	Select to set XM Sports.	327
2	Select to set XM Stocks.	330
3	Select to set XM Fuel Prices.	333

1. LEXUS ENFORM WITH SAFETY CONNECT-OVERVIEW

1. FUNCTIONAL OVERVIEW

Lexus Enform with Safety Connect is a feature that includes Apps, Destination Assist, eDestination, Lexus Insider, and Safety Connect.

- The functions included in Lexus Enform with Safety Connect are classified into the following three types.

Type A: Function achieved by using a cellular phone

Type B: Function achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module) and the navigation system

Type C: Function achieved by using DCM

Function	Type
Apps	Type A
Destination Assist	Type B
eDestination	Type B
Lexus Insider	Type B
Safety Connect	Type C

- Each function is available in the following areas:
 - Apps is available in the 48 states, D.C. and Alaska.
 - Destination Assist and eDestination are available in the contiguous United States.
 - Lexus Insider is available in the contiguous 48 states and Canada.
 - Safety Connect includes four features.
Automatic Collision Notification, Emergency Assistance and Stolen Vehicle Location are available in the United States, including Hawaii and Alaska, and in Canada, and Enhanced Roadside Assistance is available in the United States (except Hawaii) and in Canada.

(INFORMATION)


- The actual service availability is dependent on the network condition.

1. LEXUS ENFORM WITH SAFETY CONNECT-OVERVIEW

2. TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE

Of the functions included with Lexus Enform with Safety Connect, only Apps can be achieved by using a cellular phone.

Apps is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before Apps can be used, a few settings need to be performed. (See page 350.)

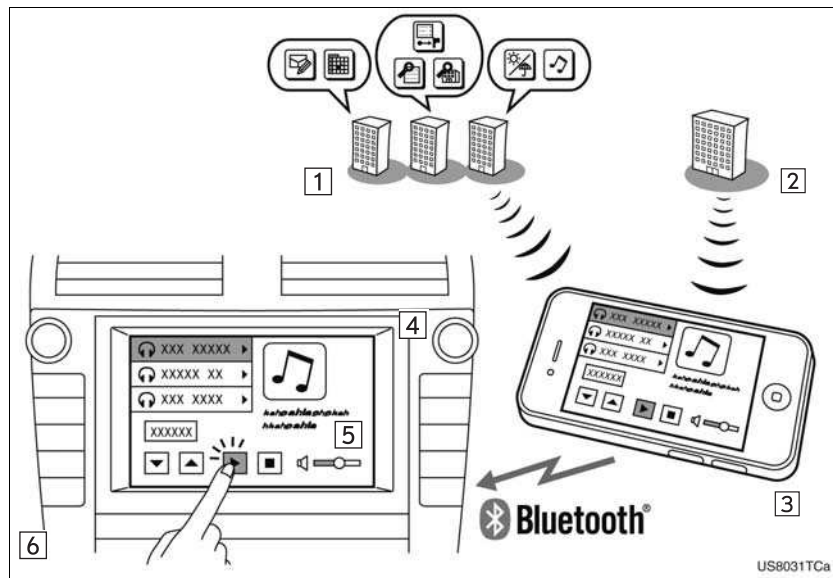

1. LEXUS ENFORM WITH SAFETY CONNECT-OVERVIEW

No.	Name	Function
1	Contents provider	Provides contents to the navigation system via a cellular phone.
2	Application server	Provides applications to the navigation system via a cellular phone.
3	Cellular phone*	Using the Apps application, communication is relayed between the navigation system, the application server and the contents provider. A cellular phone cannot be operated while communicating.
4	Application player	Runs applications on the navigation system. The navigation system is equipped with an application player.
5	Applications ("Apps")	Displays and sounds the usable contents from the contents providers via a cellular phone on the application player.
6	Navigation system	Contents received, via a cellular phone, from the contents provider servers are displayed on the navigation screen.

*: For known compatible phones, refer to <http://www.lexus.com/bluetooth/>.

BEFORE USING THE FUNCTION

SUBSCRIPTION

- Apps will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service. (See page 351.)
- When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract.*
- Services requiring a separate contract can also be used.*

*: For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

AVAILABILITY OF SERVICE

- Apps is available in the 48 states, D.C. and Alaska.

INFORMATION

- When using Apps, depending on the details of your cellular phone contract, data usage fees may apply. Confirm data usage fees before using this service.
- In this section, the required operations to activate "Apps", connect a cellular phone to the navigation system and registration steps for Apps are explained. For details regarding Apps operations and each of the "Apps", refer to <http://www.lexus.com/enform/>.

INITIALIZING PERSONAL DATA

The personal data used in "Apps" can be reset. (See "DELETING PERSONAL DATA" on page 61.)

- The following personal data can be deleted and returned to their default settings:
 - Downloaded contents
 - Radio stations that were listened to
 - Input history


INFORMATION

- Once initialized, data will be erased. Pay close attention when initializing the data.

PREPARATION BEFORE USING APPS

SETTINGS REQUIRED TO USE APPS

Perform the settings in the following order.

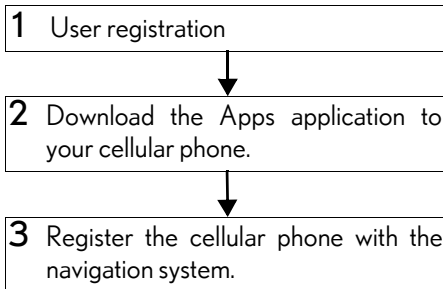

In order to use Apps, the following settings must first be performed:

- User registration with the service contract (See page 350.)
- Download the Apps application onto your cellular phone, and login to the application. (See page 351.)
- Register the cellular phone that the Apps application was downloaded to with the navigation system. (See page 351.)
- Register a Bluetooth® phone with the hands-free system. (For detailed information about registration and settings, see “Bluetooth® SETTINGS” on page 194.)

USER REGISTRATION

When purchasing the vehicle, an email address is registered at your Lexus dealer. If your email address was not registered at your Lexus dealer, your email address can be registered at the Lexus drivers website. A user registration guidance email containing a web address will be sent.

- 1 Perform user registration from the designated web address.

INFORMATION

- If your email address was not registered at your Lexus dealer when the vehicle was purchased, an email address can be registered at <http://www.lexus.com/enform/>.

REGISTERING THE APPS APPLICATION

- 1 Download the Apps application using your cellular phone.
- 2 Run the Apps application on your cellular phone.
- 3 Enter a user name and password into the Apps application. Login to the application.

INFORMATION

- "Apps" can only be used when the Apps application has been downloaded to your cellular phone and the application is running.
- Apps operational procedures can also be confirmed by visiting <http://www.lexus.com/enform/>.
- In order to use "Apps", it is necessary to run the Apps application, enter your user name and password and display the main menu on the cellular phone.
- An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using Apps by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.

1. LEXUS ENFORM WITH SAFETY CONNECT-OVERVIEW


3. TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM

Of the functions included with Lexus Enform with Safety Connect, Destination Assist, eDestination, and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers.

The services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

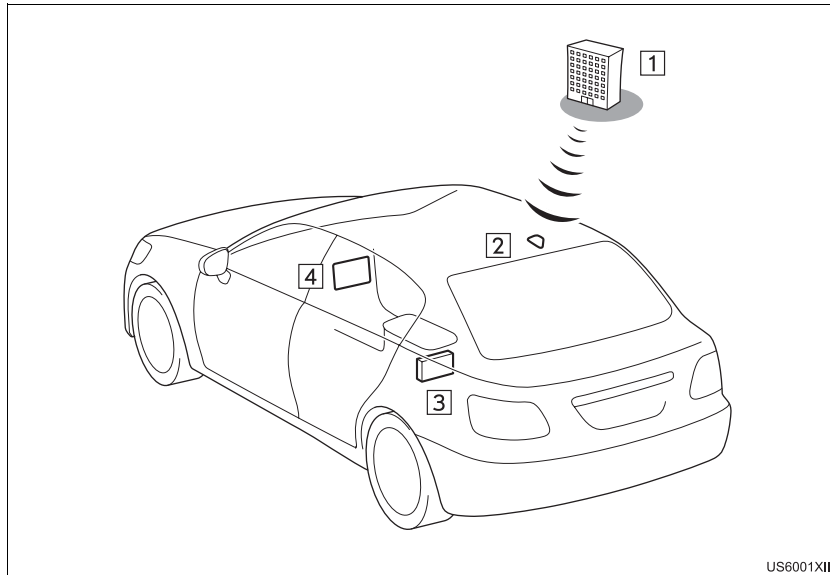

US6001XII

No.	Name	No.	Name
1	Lexus' designated response center	3	DCM
2	TEL, GPS antenna	4	Navigation system

BEFORE USING THE FUNCTION

SUBSCRIPTION

- After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select “**Destination Assist**” in your vehicle for further subscription details. (See page 363.)

AVAILABILITY OF SERVICE(S)

- Destination Assist and eDestination are available in the contiguous United States.
- Lexus Insider is available in the contiguous 48 states and Canada.

ACTIVATION OF SERVICE(S)

- Enrollment in Lexus Enform with Safety Connect (via your dealership) is required to activate all services.

- Certification for Lexus Enform with Safety Connect

FCC ID: O9EGTM1
FCC ID: O6Y-CDMRF101
FCC ID: N7NGTM2

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. LEXUS ENFORM WITH SAFETY CONNECT-OVERVIEW

INFORMATION

- Exposure to radio frequency signals:
The Lexus Enform with Safety Connect system installed in your vehicle is a low power radio transmitter and receiver. The system receives and also sends out radio frequency (RF) signals.
- In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.
 - ANSI (American National Standards Institute) C95.1 [1992]
 - NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
 - ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]
- Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of Lexus Enform with Safety Connect complies with the FCC guidelines in addition to those standards.

INFORMATION

- Available beginning Fall 2009 on select Lexus models. Contact with the Lexus Enform with Safety Connect response center is dependent upon the telematics device being in operative condition, cellular connection availability, navigation map data, and GPS satellite signal reception, which can limit the ability to reach the response center or receive support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms is available; charges vary by subscription term selected.
- The Lexus Enform with Safety Connect response center will offer support in multiple languages.
- Select Lexus Enform with Safety Connect-subscribed vehicles are capable of communicating vehicle information, triggering owner reminder notifications. Owners who do not wish to have their vehicle transmit this information can opt out of the service at the time of enrollment or by calling 1-800-255-3987 and follow the prompt for Lexus Enform with Safety Connect.
- For further details about the service, contact your Lexus dealer.
- Lexus Enform with Safety Connect services are not subject to section 255 of the Telecommunications Act and the device is not TTY compatible.

1. LEXUS ENFORM WITH SAFETY CONNECT-OVERVIEW

4. TYPE C: FUNCTION ACHIEVED BY USING DCM

Of the functions included with Lexus Enform with Safety Connect, Safety Connect can be achieved by using DCM.
For details, refer to "Owner's Manual".

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION


1. APPS

ACTIVATING "APPS"

Each time "Apps" is activated, the system checks for updates. When there are no updates available, the main menu screen will be displayed right after a screen indicating that updates are being checked for has been displayed.

ACTIVATING "APPS"

1 Press the "MENU" button on the Remote Touch.

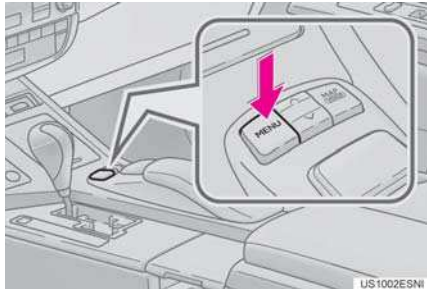


2 Select "Info/Apps".




3 Select "Apps".



4 A screen indicating that updates are being checked for will be displayed.

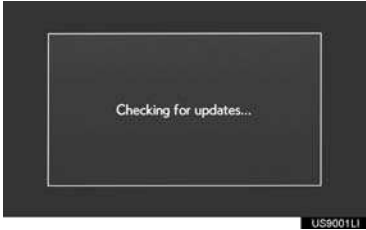


5 Select "OK".

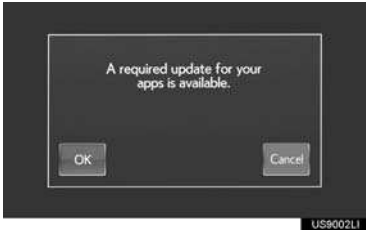

- To cancel updating, select "Cancel".
- After selecting "Cancel", the "Information" screen will be displayed.
- The "Information" screen will also be displayed if updating fails.


2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

- 6 A screen indicating that an update is in progress will be displayed.

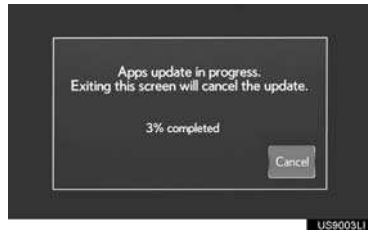

- To stop updating, select **“Cancel”**.
- After selecting **“Cancel”**, the **“Information”** screen will be displayed.
- The **“Information”** screen will also be displayed if updating fails.

- 7 Select **“OK”**.

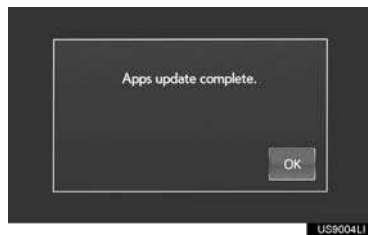

- 8 When updating is complete, the main menu screen will be displayed.



- The screen shown above is only an example. The actual screen may be different.
- For details about the function and service of each application displayed in the main menu, refer to <http://www.lexus.com/enform/>.

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

IF A MESSAGE APPEARS ON THE SCREEN

When problems occur starting up the application player, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.


Message	Display conditions	Corrective action
"This feature is unavailable during an emergency call."	Safety Connect is being implemented.	After Safety Connect is finished, perform the operation again.
"This feature is unavailable while transferring contacts."	Contacts are being transferred manually from the phonebook.	When the transfer of contacts is complete, perform the operation.
"There is a problem with the Bluetooth* connection. For troubleshooting assistance, please visit lexus.com or call 1-800-255-3987."	The cellular phone cannot be connected.	Refer to http://www.lexus.com/enform/ to confirm if the phone is compatible or not.
"This feature is unavailable during a handsfree call."	A hands-free call is in progress.	After the hands-free call is finished, perform the operation.
"To use the services, an active application needs to be running on your phone. For more information, please visit lexus.com ."	The Apps application cannot be connected to Bluetooth* SPP.	Refer to http://www.lexus.com/enform/ to confirm if the phone is Bluetooth* SPP compatible or not, and then activate the Apps application.
"Communication error. Please try again."	Communication was disconnected.	After a few moments, retry the operation.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

LINKING "APPS" AND NAVIGATION LOCAL FUNCTION

The navigation system's setting a destination and making a hands-free call can be performed via "Apps".


- 1 Press the "MENU" button on the Remote Touch.

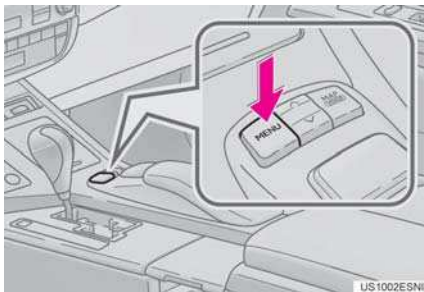


- 2 Select "Info/Apps".



- 3 Select "Apps".

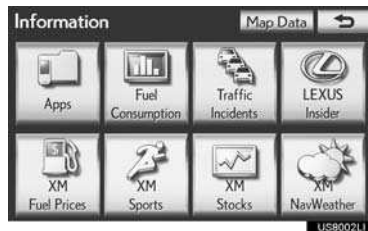

- 4 A screen indicating that updates are being checked for will be displayed.

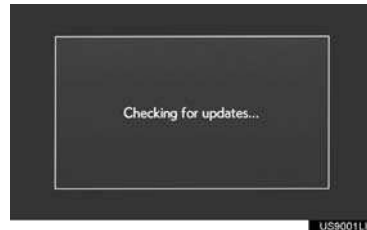

- 5 When updating is complete, the main menu screen will be displayed.



- The screen shown above is only an example. The actual screen may be different.
- For details about the function and service of each application displayed in the main menu, refer to <http://www.lexus.com/enform/>.

INFORMATION

- Some parts of "Apps" can be adjusted using the switches on the steering wheel.

SETTING A DESTINATION USING "APPS"

Locations that were searched using "Apps" can be set as a destination.

- 1 Select "Map".



- 2 Select "Go to" with the location icon.



- 3 To start guidance, select "OK".



- For the operation of the route guidance screen and the function of each screen button, see "STARTING ROUTE GUIDANCE" on page 87.


MAKING A PHONE CALL USING "APPS"

Phone calls can be made to locations which were searched using "Apps".

- 1 Select "Call".



- 2 Select "Yes".

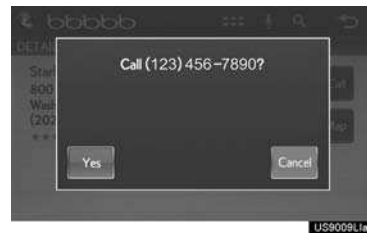

- To cancel making a phone call, select "Cancel".

- 3 A screen indicating that a call is in progress will be displayed.



- For phone operation and the function of each screen button, see "TALK ON THE Bluetooth® PHONE" on page 166.

INPUTTING KEYWORD OPERATION

A keyword can be input to “Apps” by the software keyboard or voice recognition function.

- The keyboard layout can be changed. (See page 55.)

INPUTTING A KEYWORD USING THE SOFTWARE KEYBOARD

- 1 Select the character input space.



- 2 Select the screen buttons to input the desired characters, and then select “OK”.



- 3 Input characters will be reflected on the character input space.



- For details on operating the keyboard, see “INPUTTING LETTERS AND NUMBERS/LIST SCREEN OPERATION” on page 35.

INPUTTING A KEYWORD USING THE VOICE RECOGNITION FUNCTION

Voice recognition is a function that uses the center’s database to enable the use of the voice recognition function.

- 1 Select the microphone screen button.



2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

2 When this screen is displayed, say the desired keyword.



- Completion of saying the keyword will be detected automatically.

3 Search results will be displayed on the screen.



- The screen shown above is only an example. The actual screen may be different.

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION


2. Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other Points of Interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

MAKE A CALL WITH Destination Assist


- 1 Press the "MENU" button on the Remote Touch.

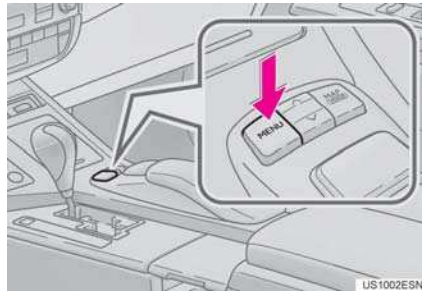

- 2 Select "Destination".




- 3 Select "Destination Assist".

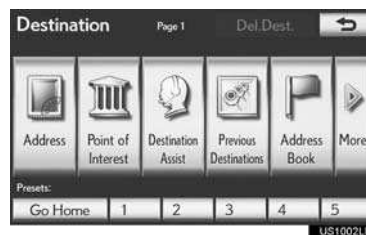

- The "Destination Assist" screen is displayed.

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

4 When an agent comes on the line, tell the agent the address, business name, or the type of POI or service you would like to locate.

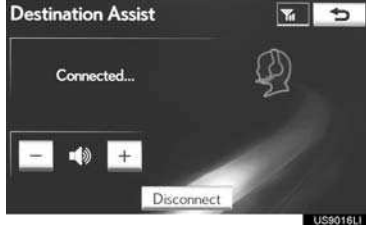

- To adjust the call volume, select “-” or “+” on the “Destination Assist” screen, or use the volume switch on the steering wheel during the call.
- To hang up the phone, select “Disconnect” on the “Destination Assist” screen or press the switch on the steering wheel.

5 After the agent helps you determine your location of choice, this screen is displayed. Select the button of the screen for the appropriate action.



- “Mark”: Select to mark the POI on the navigation map.
- “Map”: Select to display the POI on the navigation map.
- “Go”: Select to set the POI as a destination with route directions.
- “Detail”: Select to read the POI notes you entered online, if any.
- If is selected, the registered phone number can be called.

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

3. eDestination

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. Up to 200 locations can be stored online and accessed or updated at any time.

- Locations can be organized into up to 20 personalized folders.


INFORMATION

- You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contains the locations to be sent to your vehicle can be created. (See Lexus Enform with Safety Connect Guide for more information.)

DOWNLOAD eDestinations

After updating eDestination folders online, the information to update the data in the vehicle will be needed to download.


- 1 Press the "MENU" button on the Remote Touch.

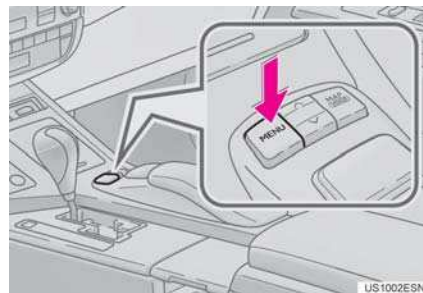


- 2 Select "Destination".



- 3 Select "Point of Interest".

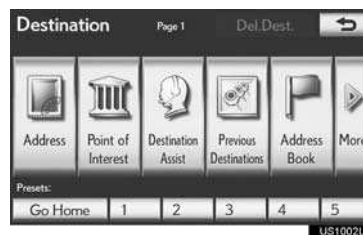


4 Select “eDestination”.

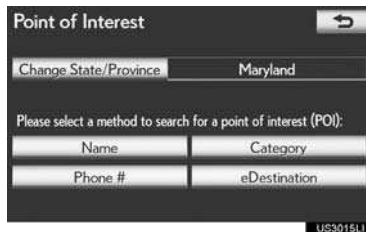

- The “eDestination” screen is displayed.

5 Select “Download”.

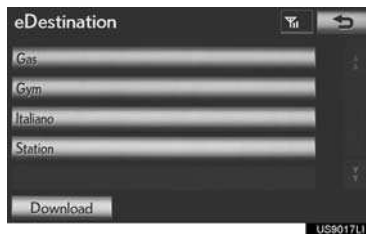

6 Select “Yes” to confirm or “No” to cancel download.

- When “Yes” is selected, your most recent online eDestination data will be loaded to the navigation system.



RETRIEVE AN eDestination


1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)

2 Select “Destination” on the “Menu” screen.


3 Select “Point of Interest” on the “Destination” screen.

4 Select “eDestination” on the “Point of Interest” screen.

5 Select the desired eDestination folder.

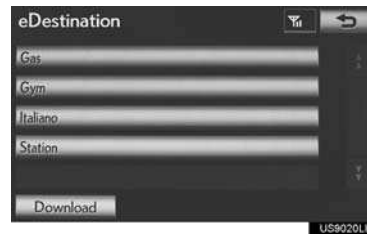

6 Select the desired location.

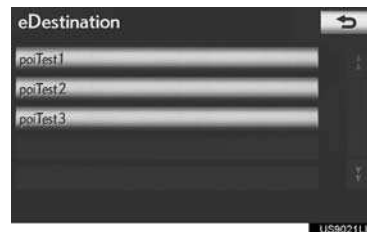

- 7 Select the button of the screen for the appropriate action.




“Mark”: Select to mark the POI on the navigation map.

“Map”: Select to display the POI on the navigation map.

“Go”: Select to set the POI as a destination with route directions.

“Detail”: Select to read the POI notes you entered online, if any.


- If  is selected, the registered phone number can be called.

SHOW eDestination ICONS

- 1 Select “Show on Map”.



- 2 Select “eDestination Icons”.

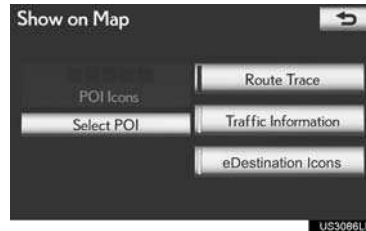

- The “eDestination Icons” indicator is highlighted.


2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

4. Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time. You may opt out of receiving Lexus Insider messages at any time. (See page 370.)

VIEW AND PLAY RECEIVED Lexus Insider MESSAGES

1 Press the "MENU" button on the Remote Touch.

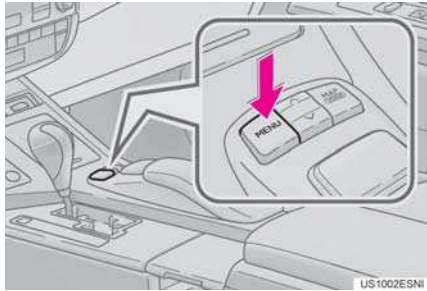

2 Select "Info/Apps".




3 Select "LEXUS Insider".



• The "LEXUS Insider" screen is displayed.

4 Select the desired article title from the Lexus Insider menu to play that broadcast or select "Read All" to listen to all stored Lexus Insider broadcasts.

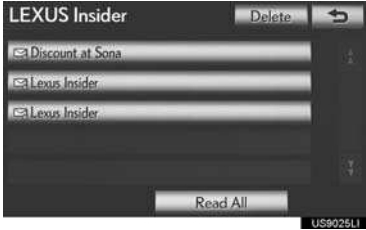





• When "Read All" is selected, "Stop" is displayed. To stop listening to the broadcast, select "Stop".

• To disrupt the audio read of Lexus Insider, press the "MODE" switch on the steering wheel, or press the "RADIO" or "MEDIA" button on the audio system.

ABOUT ICONS

- Icons appear at the left of the Lexus Insider story titles and indicate the following:

Icon	Article
	Unread article
	Previously read article
	Unread article with downloadable Point of Interest (POI)
	Previously read article with downloadable Point of Interest (POI)

LISTEN TO ANOTHER ARTICLE

- 1 After selecting an individual article, select **“Next”** or **“Previous”** to listen to another article.



- The **“Λ”** or **“V”** switch on the steering wheel can be used to move to the previous or next article.
- To stop listening to the broadcast, select **“Stop”** or press the **“PWR-VOL”** knob on the audio system.

DOWNLOAD A POI

Some Lexus Insider stories will contain a downloadable POI relevant to the content.


- 1 If it contains a POI, **“Enter”** can be selected to download it to the navigation system.
- 2 Select **“Go to”** to set the POI as a destination with route directions.




2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

DELETE Lexus Insider ARTICLE

1 Select "Delete".

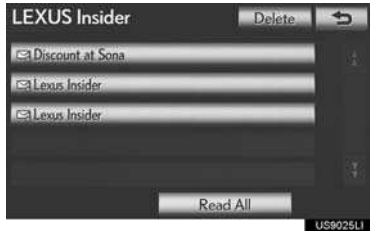

2 Select the individual article title to be deleted or "Select All" to delete all the article titles, and select "Delete".

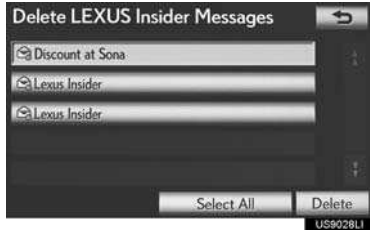

3 Select "Yes" to confirm or "No" to cancel.

NEW MESSAGE NOTIFICATION

When the vehicle is first powered on and a new Lexus Insider article is available, a notification will appear on the navigation screen. The notice will appear for only approximately 6 seconds unless one of the options listed is selected.

1 When the new message notification appears, any of the following options can be selected.




"Listen Now": Select to play newly received Lexus Insider article(s).
"Listen Later": Select to remove notification screen without playing articles. Notification will be displayed again when the vehicle is next powered on.

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

Lexus Insider SETTINGS

To change Lexus Insider settings, notification, and opt in or out of article receipt.

- 1 Press the "MENU" button on the Remote Touch.

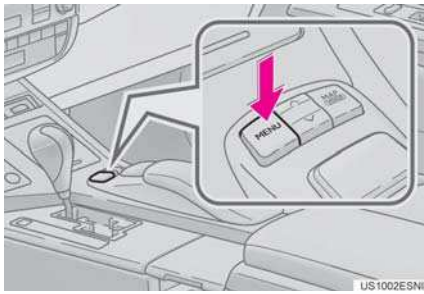


- 2 Select "Setup".




- 3 Select "Other".



- 4 Select "LEXUS Insider".

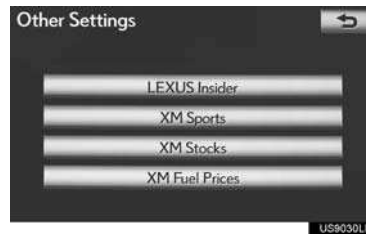

- 5 This screen is displayed.

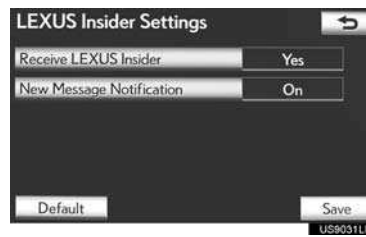


- Perform each setting according to the procedures outlined on the following pages.

2. LEXUS ENFORM WITH SAFETY CONNECT OPERATION

RECEIVE/OPT OUT OF Lexus Insider

- 1 Select "Receive LEXUS Insider".
- 2 Select "Yes" to receive Lexus Insider articles or "No" to opt out of receiving articles.

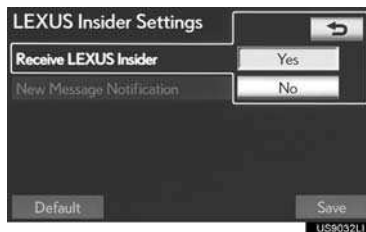


- 3 Select "Save".

NEW MESSAGE NOTIFICATION

Automatic notification of new Lexus Insider articles is available and is the default setting.


- 1 Select "New Message Notification".
- 2 Select "On" or "Off".

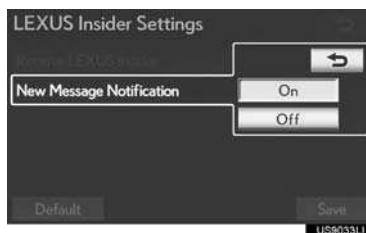

- 3 Select "Save".

RESTORE THE DEFAULT Lexus Insider SETTINGS

- 1 Select "Default".

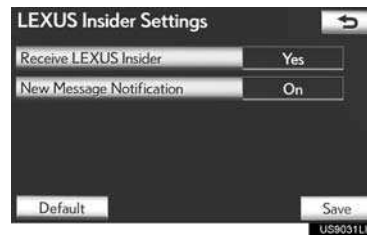

- 2 Select "Yes" to confirm or "No" to cancel.

1. REAR VIEW MONITOR SYSTEM

1. REAR VIEW MONITOR SYSTEM

REAR VIEW MONITOR SYSTEM

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle with fixed guide lines on the screen while backing up, for example while parking.

INFORMATION

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

DRIVING PRECAUTIONS

When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the rear view monitor system.

⚠ CAUTION

- The rear view monitor system is a supplemental device intended to assist the driver when backing up. Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear. Use caution, just as you would when backing up any vehicle.
- Never back up while looking only at the screen. The image shown on the screen may differ from the actual state, and you could collide with another vehicle or obstacles if backing up looking only at the screen, possibly causing an accident. When backing up, be sure to check in front of and behind the vehicle, both directly and with mirrors.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- The instructions given are only guidelines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the rear view monitor system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.


⚠ CAUTION

- Do not use system in the following cases:
 - On icy or slick road surfaces, or in snow
 - When using tire chains or emergency tires
 - When the trunk is not closed completely
 - On roads that are not flat or straight, such as curves or slopes.
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the fixed guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (See page 379.)

1. REAR VIEW MONITOR SYSTEM

SCREEN DESCRIPTION

The rear view monitor system screen will be displayed if the shift lever is shifted to the "R" position while the "START STOP ENGINE" <"POWER"> switch is in IGNITION ON <ON> mode.

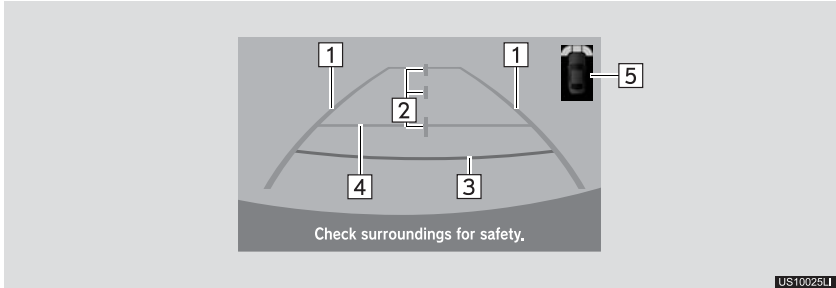

No.	Display	Function
1	Vehicle width extension guide lines	Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none"> The displayed width is wider than the actual vehicle width.
2	Vehicle center guide lines	These lines indicate the estimated vehicle center on the ground.
3	Distance guide lines	Shows distance behind the vehicle. <ul style="list-style-type: none"> Displays a point approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.
4	Distance guide line	Shows distance behind the vehicle. <ul style="list-style-type: none"> Displays a point approximately 3 ft. (1 m) (blue) from the edge of the bumper.
5	Intuitive parking assist	If an obstacle is detected while the intuitive parking assist is on, a display is shown in the top right corner of the screen.

 CAUTION

- The position of the fixed guide lines displayed on the screen may change in accordance with the number of passengers, the amount of cargo etc. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- The vehicle width extension guide lines are wider than the actual width of the vehicle. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.

CANCELING REAR VIEW MONITOR SYSTEM

The rear view monitor system is canceled when the shift lever is shifted into any position other than the "R" position.


- When the shift lever is shifted to the "R" position and any mode button (such as "MENU" button on the Remote Touch) is pressed
 - ➔ The rear view monitor system is canceled, and the screen is switched to the mode of the button that was pressed.

1. REAR VIEW MONITOR SYSTEM

2. REAR VIEW MONITOR SYSTEM PRECAUTIONS

AREA DISPLAYED ON SCREEN

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle.

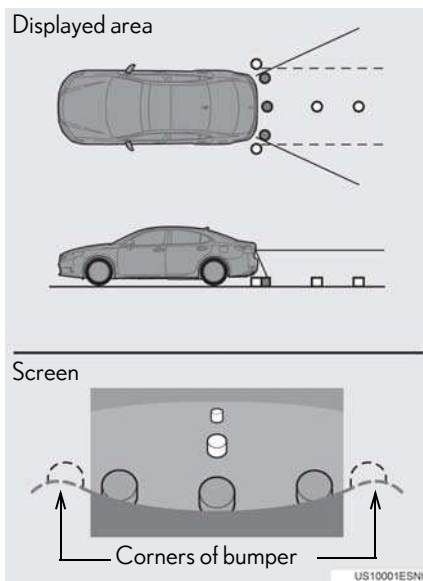


- The image adjustment procedure for the rear view monitor system screen is the same as the procedure for adjusting the navigation screen. (See page 38.)

INFORMATION

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

THE CAMERA

The camera for the rear view monitor system is located as shown in the illustration.

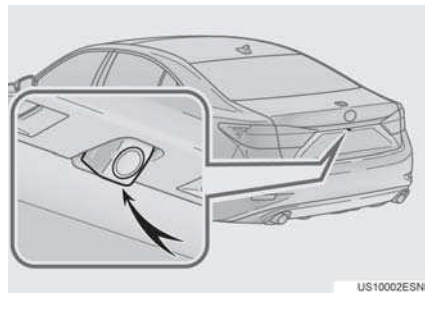

USING THE CAMERA

If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.

**NOTICE**

- The rear view monitor system may not operate properly in the following cases, or if the precautions described below are not followed.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - Do not strongly rub the camera lens. If the camera lens is scratched, it cannot transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
 - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
 - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Lexus dealer as soon as possible.


DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD

- The distance guide lines and the vehicle width extension guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width extension guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the fixed guide lines on the screen and the actual distance /course on the road.

1. REAR VIEW MONITOR SYSTEM


WHEN THE GROUND BEHIND THE VEHICLE SLOPES UP SHARPLY

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

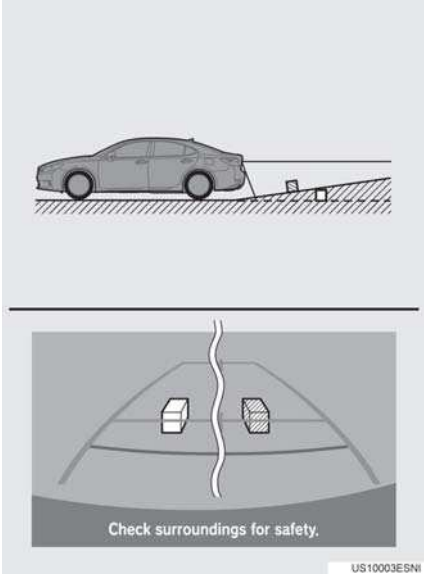


WHEN THE GROUND BEHIND THE VEHICLE SLOPES DOWN SHARPLY

The distance guide lines will appear to be further from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

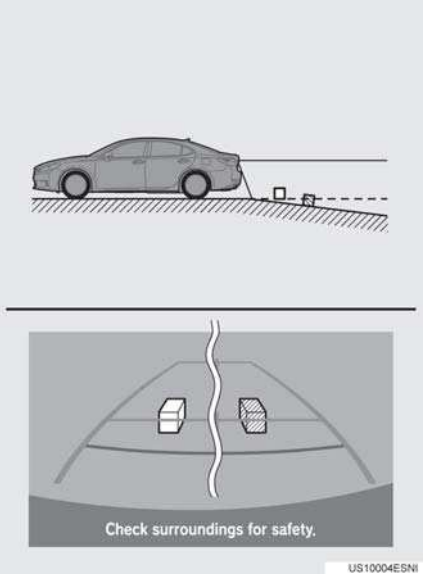

WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the fixed guide lines on the screen and the actual distance/course on the road.

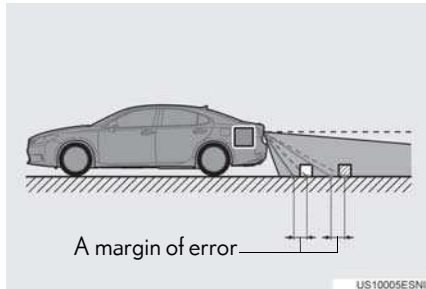


WHEN APPROACHING THREE-DIMENSIONAL OBJECTS

The distance guide lines are displayed according to flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

VEHICLE WIDTH EXTENSION GUIDE LINES

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the vehicle width extension guide lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the vehicle width extension guide lines. In reality if you back up as guided by the vehicle width extension guide lines, the vehicle may hit the truck.

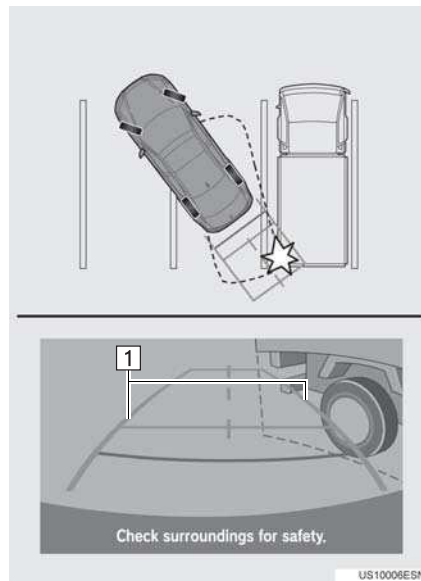


▶ 1 Vehicle width extension guide lines

1. REAR VIEW MONITOR SYSTEM

DISTANCE GUIDE LINES

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is furthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

Positions of A, B and C

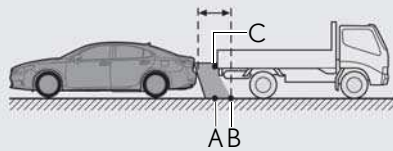

US10007ESNI

1. REAR VIEW MONITOR SYSTEM

3. THINGS YOU SHOULD KNOW

IF YOU THINK SOMETHING IS WRONG

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Lexus dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none">• The vehicle is in a dark area• The temperature around the lens is either high or low• The outside temperature is low• There are water droplets on the camera• It is raining or humid• Foreign matter (mud etc.) is adhering to the camera• Sunlight or headlights are shining directly into the camera• The vehicle is under fluorescent lights, sodium lights, mercury lights etc.	Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.) The procedure for adjusting the picture quality of the rear view monitor system is the same as the procedure for adjusting the navigation screen. (See page 38.)
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	Rinse the camera lens with water and wipe it clean with a soft cloth. Wash with a mild soap if the dirt is stubborn.
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Lexus dealer.
The fixed guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Lexus dealer.

1. REAR VIEW MONITOR SYSTEM

Map database information and updates

This system uses the maps of DENSO.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM. BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL TERMS AND CONDITIONS SET FORTH BELOW.

LICENSE GRANT

DENSO CORPORATION ("DENSO"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

OWNERSHIP

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by Tele Atlas North America, Inc. ("TANA") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE.

The DATABASE comprises confidential and proprietary information and materials of TANA. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TANA and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

LIMITATION OF LIABILITY

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

U.S. GOVERNMENT RIGHTS

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data - commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control.

Contractor/manufacturer is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643. 0330. The DATABASE is made by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed.

If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

END-USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2009* NAVTEQ. All rights reserved.

* original publication date

NAVTEQ holds a non-exclusive license from the United States Postal Service[®] to publish and sell ZIP+4[®] information.

©United States Postal Service[®] 2009*. Prices are not established, controlled or approved by the United States Postal Service[®]. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.
*original publication date

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by DENSO and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

NOTICE OF USE
CONTRACTOR
(MANUFACTURER/SUPPLIER)
NAME: NAVTEQ
CONTRACTOR
(MANUFACTURER/SUPPLIER)
ADDRESS: 425 West Randolph
Street, Chicago, Illinois 60606
This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this data was provided.
© 2009* NAVTEQ - All rights reserved. *original publication date

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

END USER NOTICE

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by Infogroup Inc. ("Infogroup"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the Infogroup POI Data shall be retained by Infogroup.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOGROUP MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of Liability

EITHER INFOGROUP OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

Open source license

This product uses the following open source software.

· T-Kernel

This Product uses the Source Code of T-Kernel under T-License granted by the T-Engine Forum (www.t-engine.org).

· C Library

This product includes software developed by the University of California, Berkeley and its contributors. This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

Copyright © 1982, 1985, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1982, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1982, 1986, 1989, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1982, 1986, 1991, 1993, 1994 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1983, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1987, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1987, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1988 Regents of the University of California. All rights reserved.

Copyright © 1988 University of Utah.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by the Systems Programming Group of the University of Utah Computer Science Department and Ralph Campbell.

Copyright © 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1988, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by Arthur David Olson of the National Cancer Institute.

Copyright © 1989 The Regents of the University of California. All rights reserved.

Copyright © 1989 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1989, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1990, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Chris Torek.

Copyright © 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1991, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Berkeley Software Design, Inc.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Ralph Campbell.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This software was developed by the Computer Systems Engineering group at Lawrence Berkeley Laboratory under DARPA contract BG 91-66 and contributed to Berkeley. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Ralph Campbell. This file is derived from the MIPS RISC Architecture book by Gerry Kane.

Copyright © 1993 The Regents of the University of California. All rights reserved.

Copyright © 1994 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Andrew Hume of AT&T Bell Laboratories. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986 Regents of the University of California. All rights reserved.

Copyright © 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions Copyright © 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED "AS IS" AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright © 1982, 1986, 1990, 1993
The Regents of the University of
California. All rights reserved.

Copyright © 1983, 1993 The Regents
of the University of California. All rights
reserved.

Copyright © 1990, 1993 The Regents
of the University of California. All rights
reserved.

Redistribution and use in source and
binary forms, with or without
modification, are permitted provided
that the following conditions are met:

1. Redistributions of source code must
retain the above copyright notice, this
list of conditions and the following
disclaimer.
2. Redistributions in binary form must
reproduce the above copyright notice,
this list of conditions and the following
disclaimer in the documentation and/or
other materials provided with the
distribution.
3. Neither the name of the University
nor the names of its contributors may be
used to endorse or promote products
derived from this software without
specific prior written permission.

THIS SOFTWARE IS PROVIDED BY
THE REGENTS AND
CONTRIBUTORS "AS IS" AND ANY
EXPRESS OR IMPLIED
WARRANTIES, INCLUDING, BUT
NOT LIMITED TO, THE IMPLIED
WARRANTIES OF
MERCHANTABILITY AND FITNESS
FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT
SHALL THE REGENTS OR
CONTRIBUTORS BE LIABLE FOR
ANY DIRECT, INDIRECT,
INCIDENTAL, SPECIAL,
EXEMPLARY, OR
CONSEQUENTIAL DAMAGES
(INCLUDING, BUT NOT LIMITED
TO, PROCUREMENT OF
SUBSTITUTE GOODS OR
SERVICES; LOSS OF USE, DATA,
OR PROFITS; OR BUSINESS
INTERRUPTION) HOWEVER
CAUSED AND ON ANY THEORY
OF LIABILITY, WHETHER IN
CONTRACT, STRICT LIABILITY, OR
TORT (INCLUDING NEGLIGENCE
OR OTHERWISE) ARISING IN ANY
WAY OUT OF THE USE OF THIS
SOFTWARE, EVEN IF ADVISED OF
THE POSSIBILITY OF SUCH
DAMAGE.

This product includes software developed by the NetBSD Foundation, Inc. and its contributors.

Copyright © 1996 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by J.T. Conklin.

Copyright © 1997 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.

Copyright © 1997,98 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by J.T. Conklin.

Copyright © 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.

This code was contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1998 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1998, 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus J. Klein.

Copyright © 1999, 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Julian Coleman.

Copyright © 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Dieter Baron and Thomas Klausner.

Copyright © 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Jun-ichiro itojun Hagino and by Klaus Klein.

Copyright © 2001 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
4. Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by Christos Zoulas.

Copyright © 1997 Christos Zoulas. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Christos Zoulas.
4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by Winning Strategies, Inc.
Copyright © 1994 Winning Strategies, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Winning Strategies, Inc.
4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright ©1999 Citrus Project, All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1995 Carnegie-Mellon University. All rights reserved. Author: Chris G. Demetriou

Copyright © 1995, 1996 Carnegie-Mellon University. All rights reserved. Author: Chris G. Demetriou

Permission to use, copy, modify and distribute this software and its documentation is hereby granted, provided that both the copyright notice and this permission notice appear in all copies of the software, derivative works or modified versions, and any portions thereof, and that both notices appear in supporting documentation.

CARNEGIE MELLON ALLOWS FREE USE OF THIS SOFTWARE IN ITS "AS IS" CONDITION. CARNEGIE MELLON DISCLAIMS ANY LIABILITY OF ANY KIND FOR ANY DAMAGES WHATSOEVER RESULTING FROM THE USE OF THIS SOFTWARE.

Carnegie Mellon requests users of this software to return to Software Distribution Coordinator or Software.Distribution@CS.CMU.EDU School of Computer Science Carnegie Mellon University Pittsburgh PA 15213-3890 any improvements or extensions that they make and grant Carnegie the rights to redistribute these changes.

· TCP/IP, Socket Library

This product includes software developed by the University of California, Berkeley and its contributors.

Copyright © 1980, 1983, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1987, 1989 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1985, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1985, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1989, 1993, 1995 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 2004 by Internet Systems Consortium, Inc. ("ISC")
Portions Copyright © 1996-1999 by Internet Software Consortium.
Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND ISC DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Portions Copyright © 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED "AS IS" AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

This product includes software developed by WIDE Project and its contributors.

Portions Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by WIDE Project and its contributors.
4. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1988 Stephen Deering.

Copyright © 1982, 1986 Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. [rescinded 22 July 1999]
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986, 1988
Regents of the University of California.
All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Rights, responsibilities and use of this software are controlled by the agreement found in the "LICENSE.H" file distributed with this source code. "LICENSE.H" may not be removed from this distribution, modified, enhanced nor references to it omitted.

Copyright 1983 by the Massachusetts Institute of Technology

Copyright 1984 by the Massachusetts Institute of Technology

Copyright 1984, 1985 by the Massachusetts Institute of Technology

Copyright 1990 by NetPort Software

Copyright 1990-1993 by NetPort Software.

Copyright 1990-1994 by NetPort Software.

Copyright 1990-1996 by NetPort Software.

Copyright 1990-1997 by NetPort Software.

Copyright 1993 by NetPort Software

Copyright 1986 by Carnegie Mellon

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

· OpenSSL

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.

(<http://www.openssl.org/>) This product includes cryptographic software written by Eric Young (eyay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

OpenSSL License

Copyright © 1998-2008 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"

4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.

5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.

6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright © 1995-1998 Eric Young (ey@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscape's SSL. This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com). Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.