

tC

2008

EMAIL

www.scion.com

> [Contact](#)

-

CHAT

www.scion.com

> [Have a Question?](#)

> [Contact](#)

-

PHONE

1.866.70.SCION

-

MAIL

SCION

19001 S. Western Ave.

D102, P.O. Box 2742

Torrance, CA 90509-2742

USA

-

WEB

www.scion.com

-

QUICK REFERENCE GUIDE

GET INFORMED.
ROLL.

©2008 Scion, a marque of
Toyota Motor Sales, U.S.A., Inc.

00505-QRG08-TC



what moves you

2008 SCION tC

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION tC.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of SCION tC operations. Every tC owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door opener and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
FEATURES/OPERATIONS	
Air Conditioning/Heating	14
Automatic Transmission	8
AUX audio jack	14
Clock	14
Cruise control	10
Cup holders	8
iPod jack	15
Light control-Instrument panel	13
Lights & turn signals	11
Panorama moonroof	12
Parking brake	8
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	9
Steering wheel switches	15
Tilt steering wheel	10
Windows	13
Windshield wipers & washers	12
SAFETY AND EMERGENCY FEATURES	
Door locks	16
Seat belts	16
Spare tire & tools	17
Tire Pressure Warning System reset	16


OVERVIEW



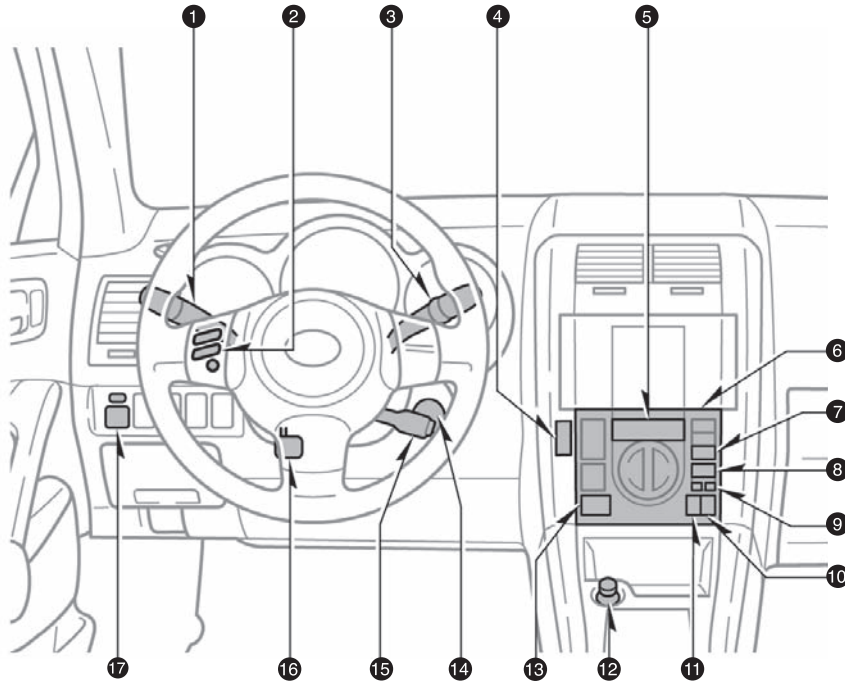



Instrument panel

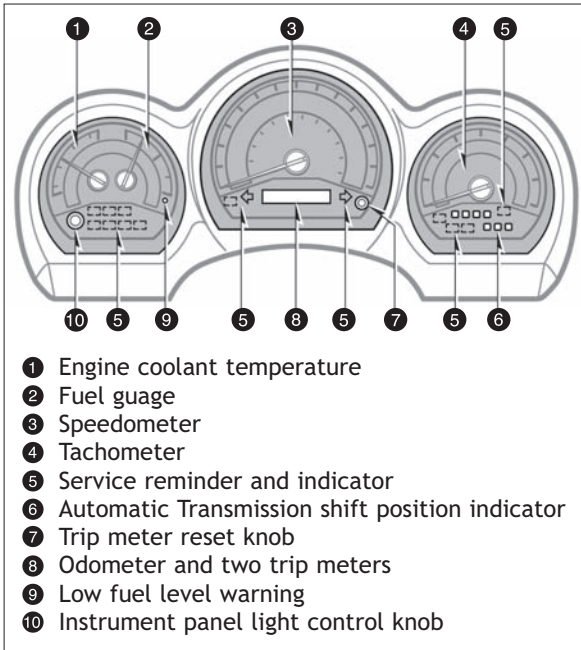

- ① Headlight and turn signal controls
- ② Steering wheel switches
- ③ Wiper and washer controls
- ④ Emergency flasher switch
- ⑤ Clock, Air Conditioning and outside temperature display
- ⑥ Air Conditioning controls
- ⑦ Rear window defogger switch
- ⑧ Outside temperature display button
- ⑨ Clock adjustment buttons
- ⑩ Front passenger seat belt reminder light
- ⑪ Front passenger occupant classification indicator light
- ⑫ Cigarette lighter
- ⑬ Engine immobilizer system indicator light
- ⑭ Ignition
- ⑮ Cruise control
- ⑯ Tilt steering lock release
- ⑰ Power side view mirror controls

Instrument cluster






 





-  Engine oil replacement reminder¹
-  Turn signal indicators
-  Headlight high beam indicator
-  Cruise control indicator²
-  Automatic Transmission indicator
-  Anti-lock Brake System warning¹

CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

 
Indicator symbols


-  Brake system warning¹
-  Driver seat belt reminder¹
-  Front passenger seat belt reminder¹
-  Battery warning¹
-  Malfunction/Check Engine indicator¹
-  Low engine oil pressure warning¹
-  Open door warning¹
-  Airbag SRS warning¹
-  Low Tire Pressure Warning¹

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2008 Owner’s Manual.


² If this light flashes, refer to “Cruise control,” Section 1-7, 2008 Owner’s Manual.

Fuel tank door opener and cap

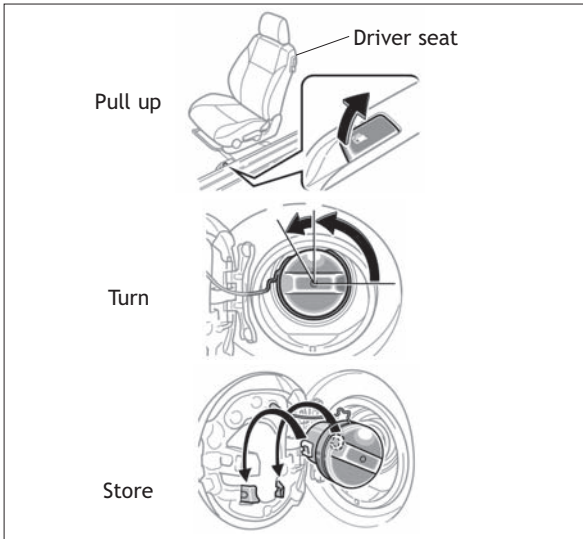

NOTE: Tighten cap until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Keyless entry

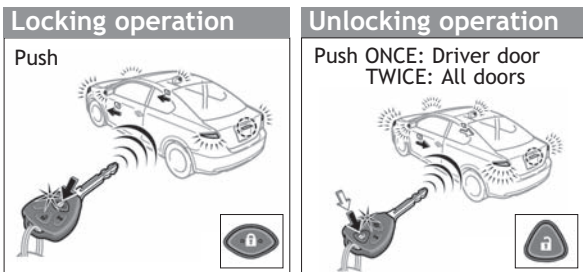


NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.


Panic button



Hood release

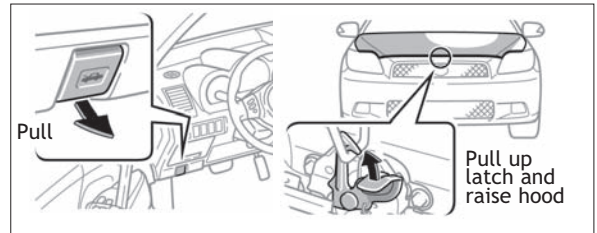

Engine maintenance

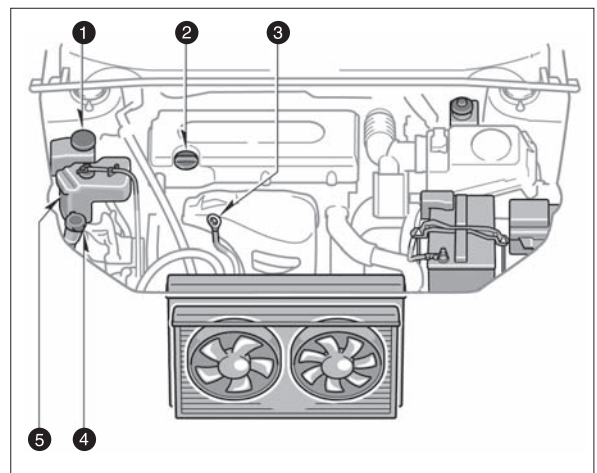


- 1 Power steering fluid reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank
- 5 Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS

Automatic Transmission (if equipped)


- P** Park¹
- R** Reverse
- N** Neutral
- D** Drive
- 3** Third gear
- 2** Second gear
- L** First gear

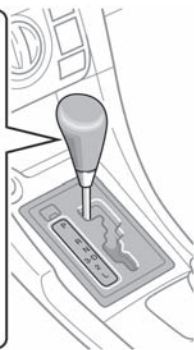


¹The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

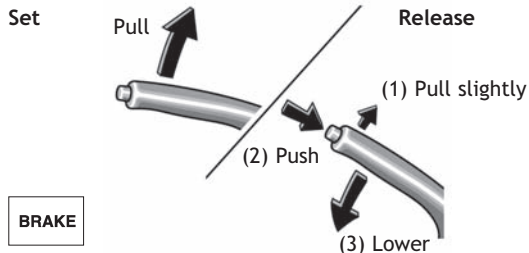

Cup holders

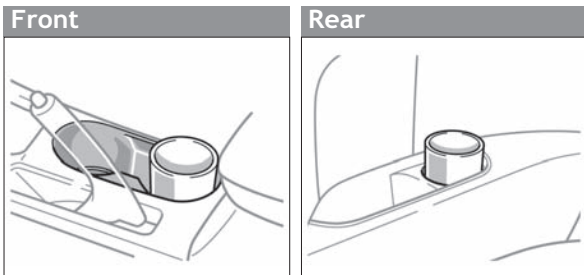


Seat adjustments-Front




- ① Position
- ② Cushion angle (if equipped)
- ③ Height crank (driver side only)
- ④ Seatback angle
- ⑤ Seatback lock release (if equipped)


Seat adjustments-Rear

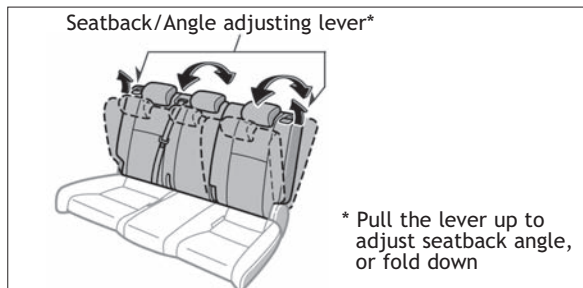

Seats-Head restraints

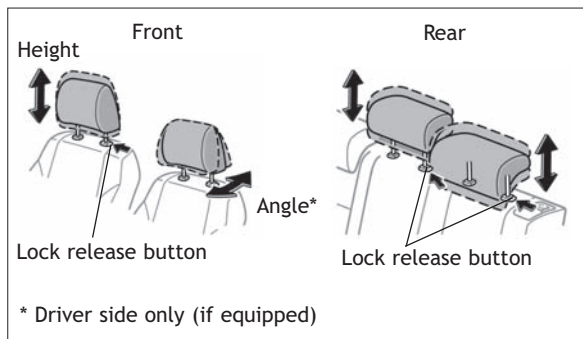

Tilt steering wheel

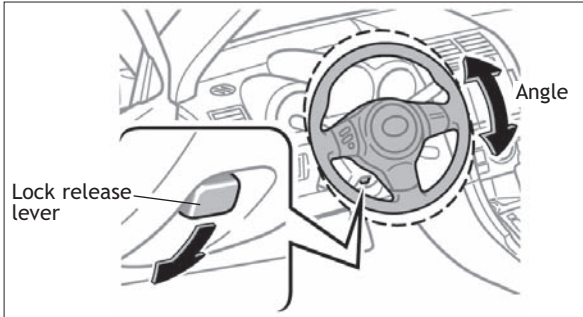


Hold wheel, push lever down, set angle, then return lever.


Note: Do not attempt to adjust while the vehicle is in motion.

Cruise control (if equipped)

Turning system ON/OFF

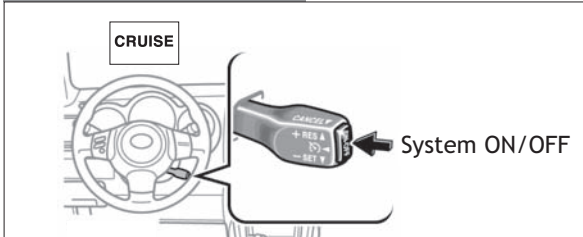

Functions

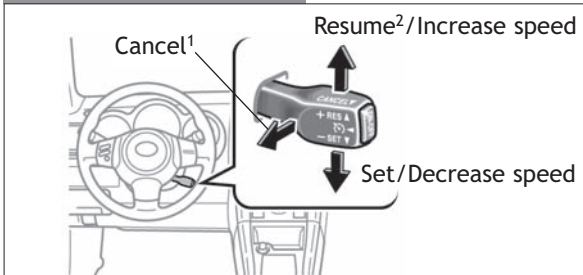


¹ The set speed may also be cancelled by depressing the brake pedal or pushing ON/OFF.


² If vehicle speed falls below 25 mph, the set speed will not resume.

Lights & turn signals

Headlights

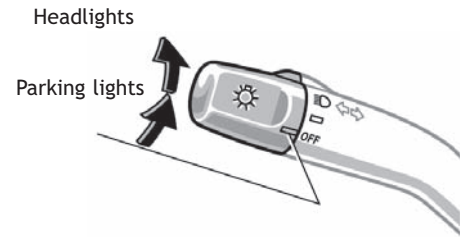


High beam

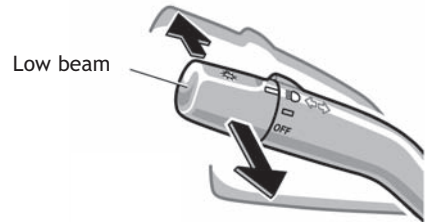


High beam flasher

Automatic light cutoff system Automatically turns lights off when driver's door is opened with the engine off.


Turn signals

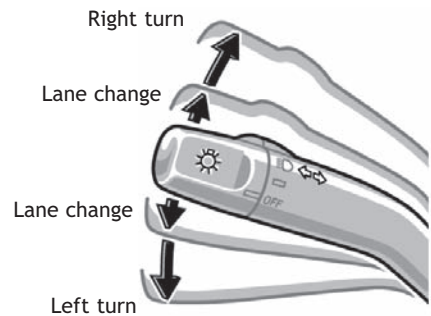

Windshield wipers & washers

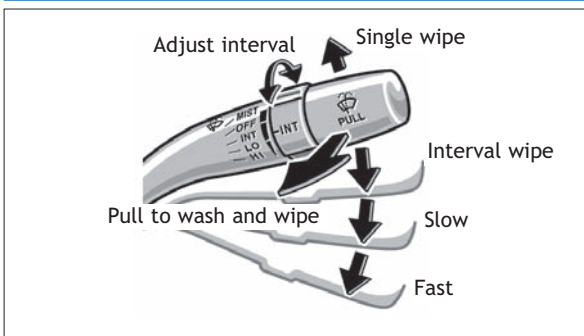


Panorama moonroof (if equipped)

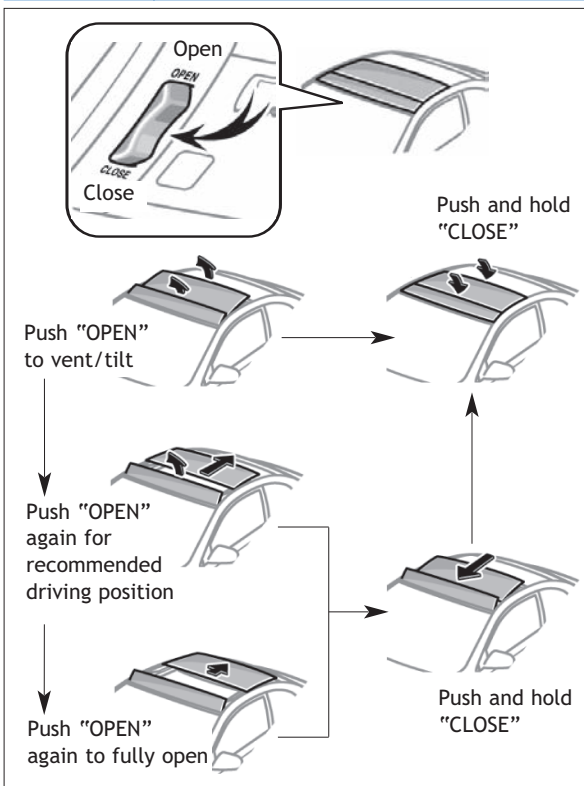

NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Windows

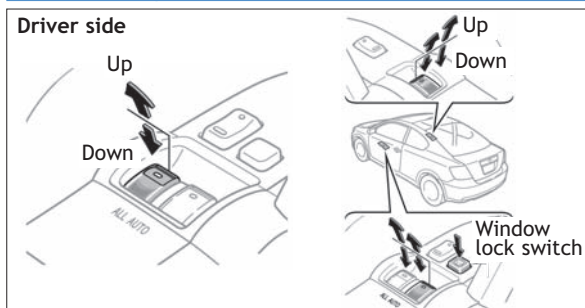

Window operation


Automatic operation Push the switch completely down or pull* it completely up and release to fully open or close. To stop window mid-way, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


NOTE: If battery is disconnected, the windows need to be reinitialized. Refer to the *Owner's Manual* for more details.

* If equipped with auto close

Light control-Instrument panel

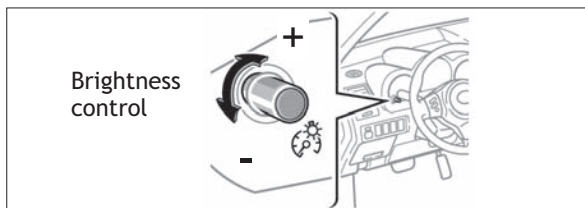


Power outlet (if equipped)

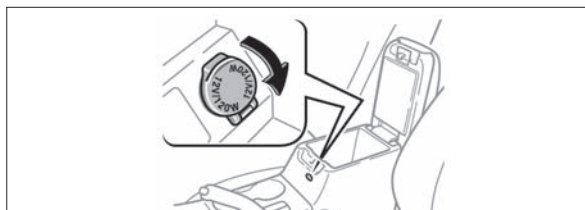

Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.

Air Conditioning/Heating

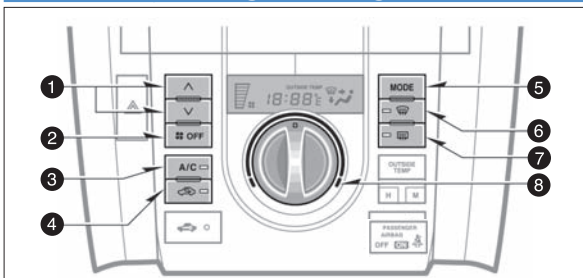

- 1 Fan speed
- 2 Air Conditioning/Heating system OFF
- 3 Air Conditioning ON/OFF
- 4 Fresh or recirculated cabin air
- 5 Vent selector
In " " mode, use fresh air (" " indicator light "OFF") to reduce window fogging.
- 6 Windshield air flow
- 7 Rear defogger
- 8 Temperature


AUX audio jack




By inserting a mini plug (not included) into the AUX jack, you can listen to music from a portable audio device through the vehicle's speaker system. If you do not have a SCION genuine audio system, you will not be able to use the AUX jack.

Refer to the *SCION Audio or Navigation System Owner's Manual* for more details.

Clock

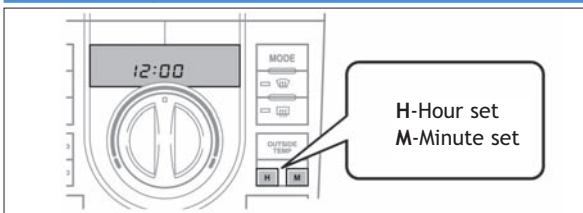

Steering wheel switches (if equipped)

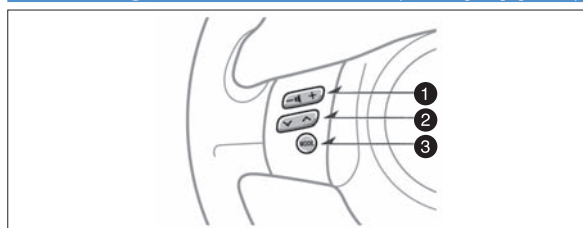

- 1 " - + " Volume control
- 2 " v ^ "
 - In radio mode Push to select a preset station; push and hold to seek the next strong station.
 - In CD mode Push to skip up or down to a next/previous track.
- 3 "MODE" Push to turn audio "ON" and select an audio mode. Push and hold to turn audio system "OFF."

Refer to the *SCION Audio System Owner's Manual* or the *SCION Navigation System Owner's Manual* for more details.

iPod jack




By inserting an iPod customer cable connector into the iPod jack, you can charge the iPod battery and listen to music from your iPod through the vehicle's speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the iPod jack.


Refer to the *SCION Audio or Navigation System Owner's Manual* for more details.

SAFETY AND EMERGENCY FEATURES

Door locks

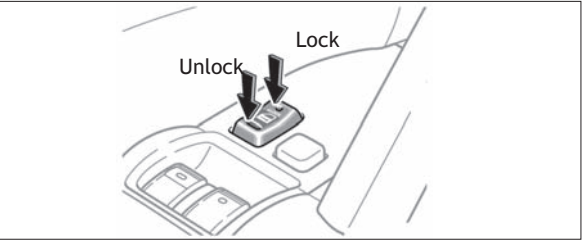


Seat belts

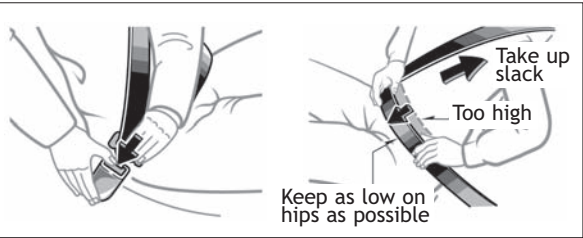

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Warning System reset

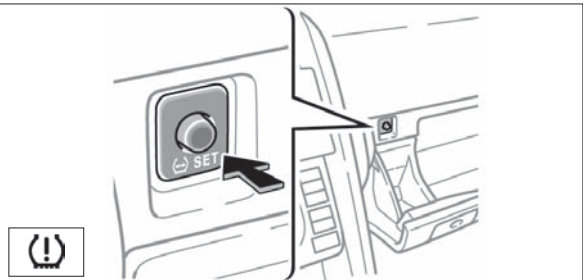


If tire pressure becomes critically low on any of the tires (excluding spare), indicator comes on. Pushing "SET" button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.


Refer to the *Owner's Manual* for details on system reset initialization.

Spare tire & tools

Tool location

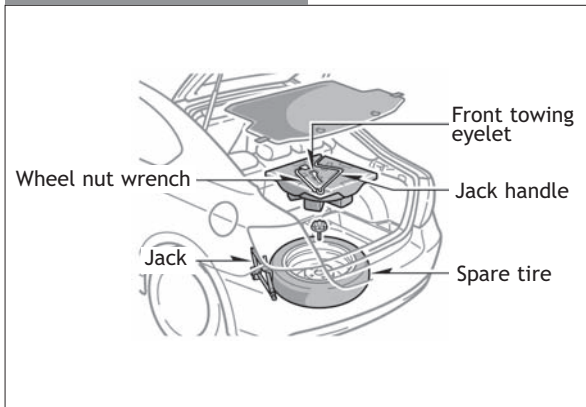

Removing the spare tire

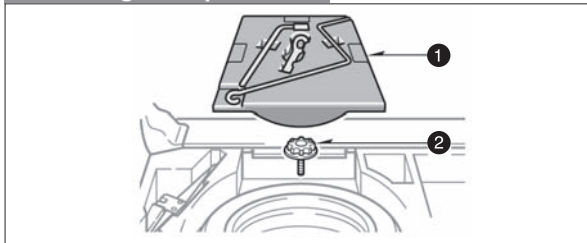

- 1 Remove the spare tire cover.
- 2 Loosen and remove the bolt.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.