



ToyotaOwnersOnline.com

CUSTOMER EXPERIENCE CENTER

1-800-331-4331

# VENZA

2 0 1 0

## QUICK REFERENCE GUIDE



**Mixed Sources**

 
Product group from well-managed  
forests, controlled sources and  
recycled wood or fiber  
www.fsc.org Cert no. SGS-COC-005612  
© 1996 Forest Stewardship Council



# 2010 Venza

## Doors-Child safety locks


Rear door

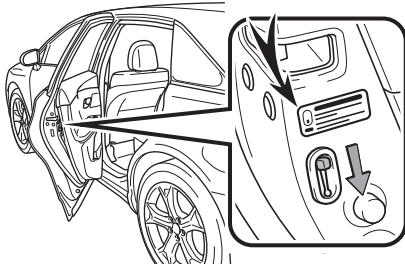


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

## Spare tire & tools

 Tool location

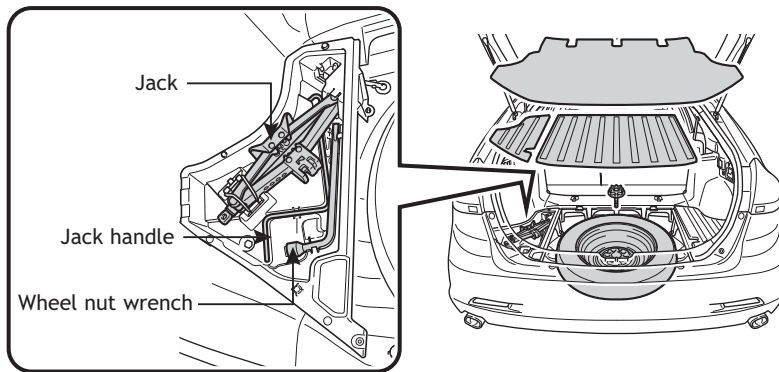

## Removing the spare tire

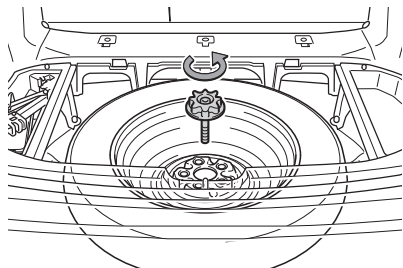 

Loosen and remove the bolt

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Venza.

### ! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Venza operations. Every Venza owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1,2</sup></b>	<b>6</b>
Light control-Instrument panel	9
<b>Smart Key system<sup>1,2</sup></b>	<b>7</b>

## FEATURES/OPERATIONS

Air Conditioning/Heating	16-17
Audio	18-19
<b>Auto lock functions<sup>1</sup></b>	<b>11</b>
Automatic Transmission	10
Cruise control	20
Customizable features	23
Enhanced VSC OFF button	16
Garage door opener (HomeLink <sup>®</sup> ) <sup>3</sup>	21
Hill-start Assist Control (HAC)	15
<b>Lights<sup>1,2</sup> &amp; turn signals</b>	<b>14-15</b>
Moonroof	13
<b>Multi-information display (clock)<sup>2</sup></b>	<b>22</b>
Parking brake	10
Power outlets-12V DC	21
Power outlet-120V AC	21
Rear seat entertainment system	20
Seat adjustments-Front	11
Seat adjustments-Rear	11
Seat heaters	17
Seats-Head restraints	12
Seats-Folding rear row seats	12
Tilt and telescopic steering wheel	10
Telephone controls (Bluetooth <sup>®</sup> )	23
Windows-Power	13
Windshield wipers & washers	15

## SAFETY AND

## EMERGENCY FEATURES

<b>Door locks<sup>1,2</sup></b>	<b>24</b>
Doors-Child safety locks	25
Seat belts	24
Seat belts-Shoulder belt anchor	24
Spare tire & tools	25
Tire Pressure Monitoring (warning) System	24

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

 
 
<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.



# OVERVIEW

## Instrument panel

### Steering wheel controls

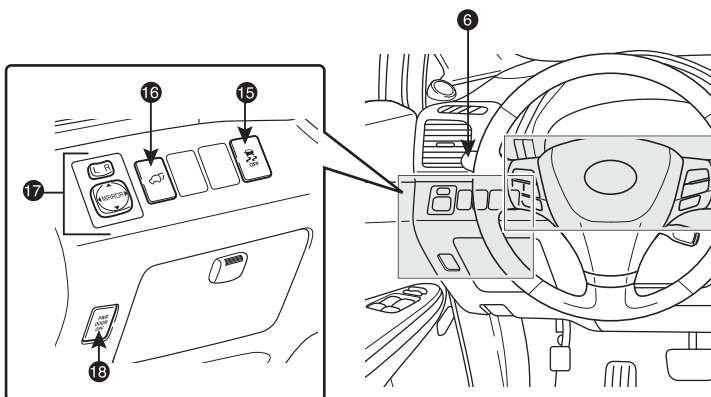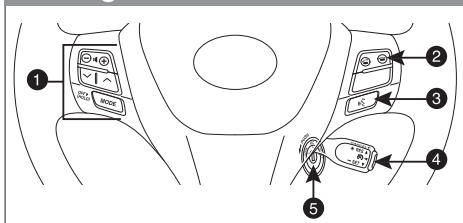

- 1 Steering wheel audio controls
- 2 Telephone controls<sup>1,2</sup>
- 3 Voice command button<sup>1,2</sup>
- 4 Cruise control
- 5 Ignition switch (standard key)<sup>1</sup>
- 6 Headlight, turn signal and front fog light<sup>1</sup> controls
- 7 Wiper and washer controls
- 8 "ENGINE START STOP" switch (Smart Key)<sup>1</sup>
- 9 Multi-information display
- 10 Audio system<sup>2</sup>
- 11 Emergency flasher button
- 12 Multi-information display switches

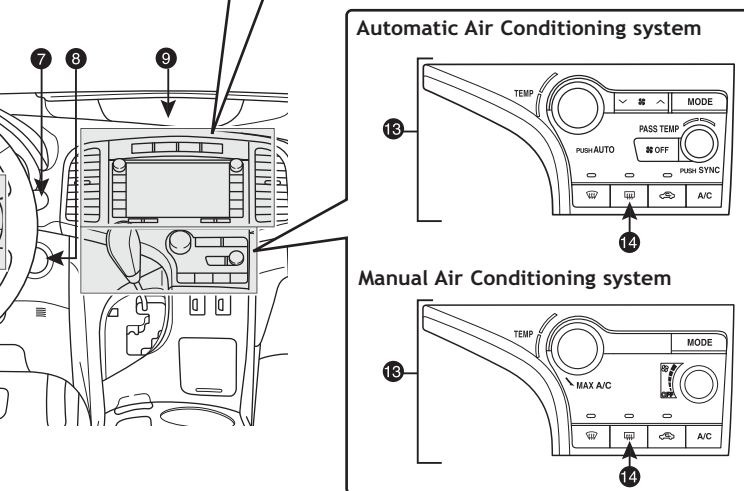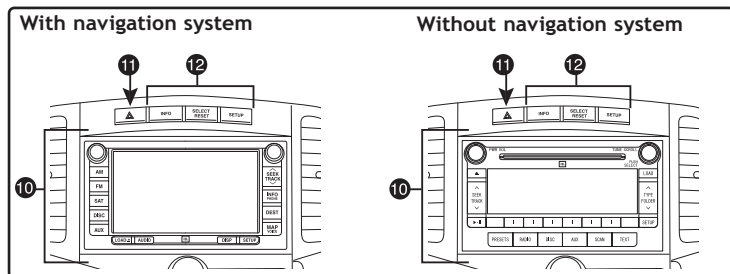  


- 13 Air Conditioning controls
- 14 Outside rearview mirrors<sup>1</sup>/Rear window defogger button/Windshield wiper de-icer<sup>1</sup>
- 15 Enhanced VSC/TRAC OFF switch
- 16 Power back door switch<sup>1</sup>
- 17 Power rearview mirror controls
- 18 Power back door main switch<sup>1</sup>

<sup>1</sup> If equipped

<sup>2</sup> For vehicles with navigation system, refer to the "Navigation System Owner's Manual."

## Instrument cluster

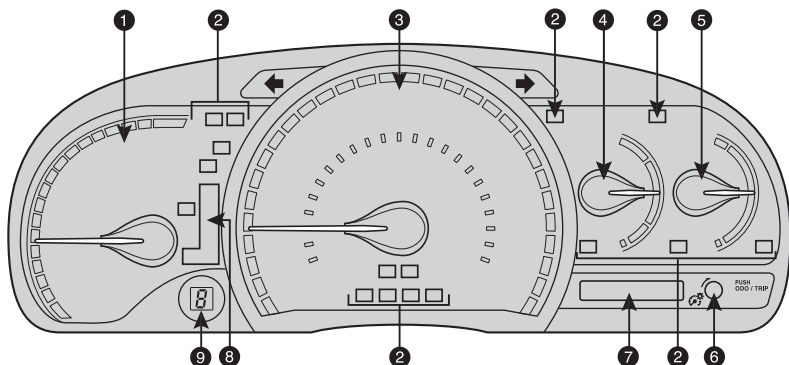 

- ❶ Tachometer
- ❷ Service indicator and reminder
- ❸ Speedometer
- ❹ Fuel gauge
- ❺ Engine coolant temperature
- ❻ Odometer/Trip meter and trip meter reset button/Instrument panel light control
- ❼ Odometer and two trip meters
- ❽ Automatic Transmission shift position indicator
- ❾ Automatic Transmission shift range display

## Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2010 Owner's Manual.



Brake system warning<sup>1</sup>



Driver seat belt reminder  
(alarm will sound if speed is over 12 mph)



Front passenger seat belt reminder  
(alarm will sound if speed is over 12 mph)



Charging system warning<sup>1</sup>



AIR BAG ON and AIR BAG OFF indicator<sup>1</sup>

























Malfunction/Check Engine indicator<sup>1</sup>



Active torque control 4WD system warning<sup>1</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If this light flashes, refer to "Cruise control," Section 2-4, 2010 Owner's Manual.

	Electric power steering system warning <sup>1</sup>
	Low windshield washer fluid level warning <sup>1</sup>
	Smart Key system warning
	Low fuel level warning
	Open door warning
	Airbag SRS warning <sup>1</sup>
	Master warning
	Low Tire Pressure Warning <sup>1</sup>
	 Headlight low/high beam indicator
	Turn signal indicator
	Fog light indicator
	Slip indicator/Hill-start Assist Control indicator <sup>1</sup>
	<b>SET</b> Cruise control indicator <sup>2</sup>
	<b>ABS</b> Anti-lock Brake System warning <sup>1</sup>
	<b>AUTO</b> Automatic high beam indicator <sup>3</sup>
	Security indicator
	<b>OFF</b> Vehicle Stability Control OFF indicator <sup>1</sup>
	<b>TRAC OFF</b> Traction Control OFF indicator
	Low Engine oil pressure warning <sup>1</sup>
	Automatic headlight leveling system warning <sup>1</sup>
	<b>MAINT REQD</b> Engine oil replacement reminder <sup>1</sup>

<sup>3</sup> For details, refer to "Headlight switch," Section 2-3, 2010 Owner's Manual.

## Keyless entry

### Locking operation

Without Smart Key system



With Smart Key system



### Unlocking operation

Without Smart Key system



With Smart Key system

 


Push ONCE: Driver door  
TWICE: All doors




**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

### Panic button

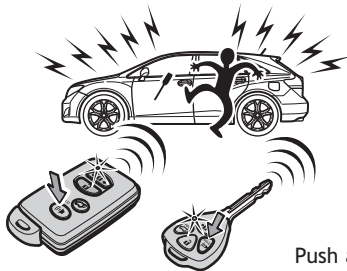


Push and hold

 



## Smart Key system (if equipped)
 
### Start function

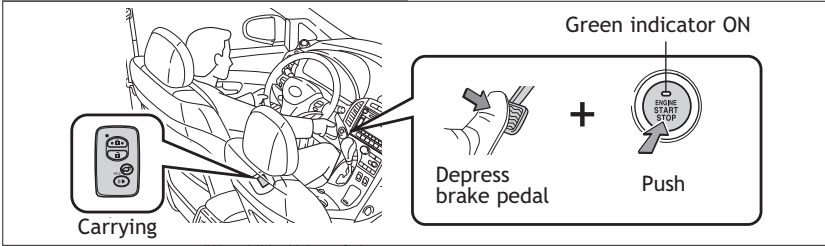

**NOTE:** Gear shift lever must be in Park and brake pedal depressed.

### Power (without starting engine)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

#### ACCESSORY

Accessories such as the radio will operate.

 
#### ON

Power ON; the engine not running.


#### OFF

All systems OFF.


### Locking operation

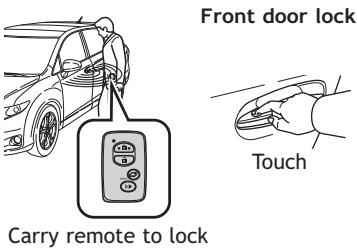

### Unlocking operation

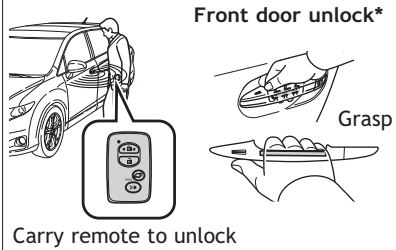 




### Back door lock/unlock

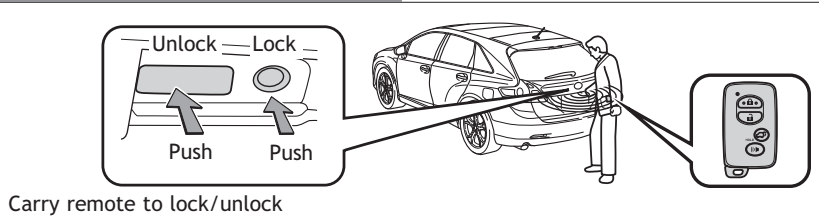 

\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.



**NOTE:** Doors may also be locked/unlocked using remote.

## Fuel tank door release and cap

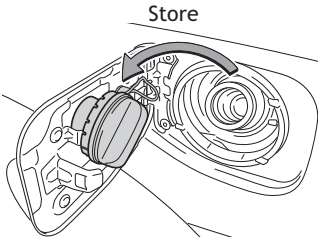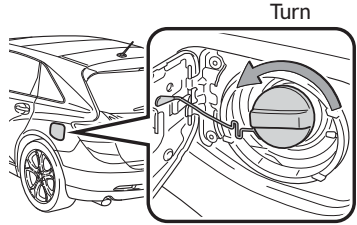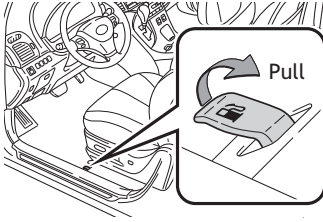   


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.


## Hood release

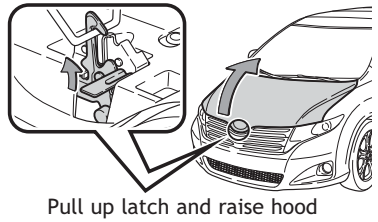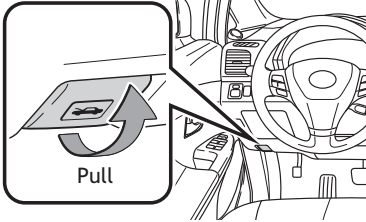  


Engage support rod

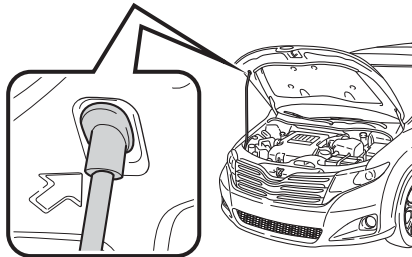 

## Light control-Instrument panel

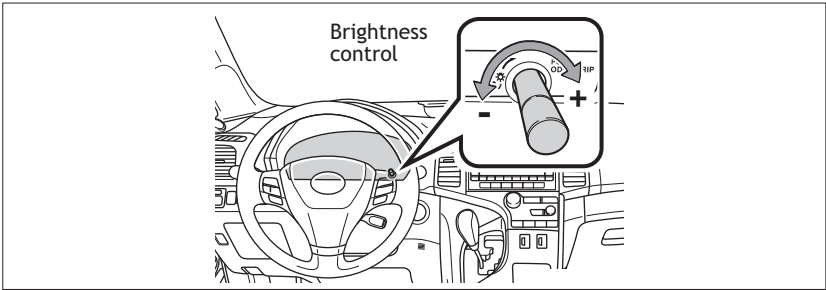 

## Engine maintenance

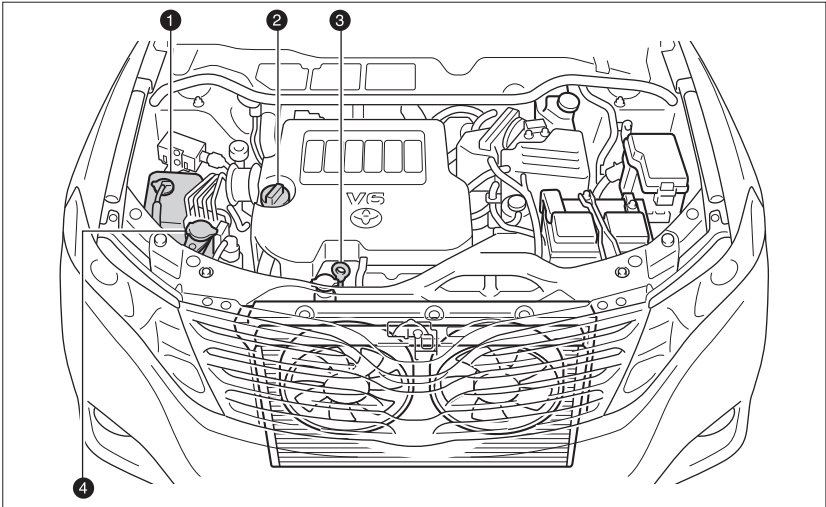 


- 1 Engine coolant reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

# FEATURES/OPERATIONS
 
## Automatic Transmission

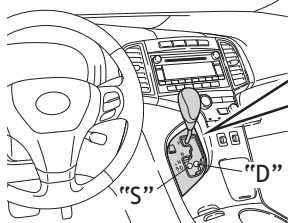

<b>P</b>	Park*
<b>R</b>	Reverse
<b>N</b>	Neutral
<b>D</b>	Drive
<b>S</b>	"S" mode

\* The "ENGINE START STOP" switch/engine switch must be "ON" and the brake pedal depressed to shift from Park.


### "S" (Sequential) mode

 Shift the shift lever to "S" position from "D" position.


- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Parking brake

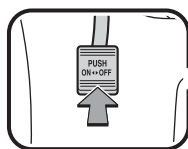

**BRAKE**

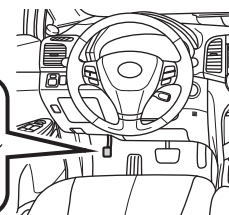 


Set: Depress  
Release: Depress again

## Tilt and telescopic steering wheel

 Lock release lever



Angle

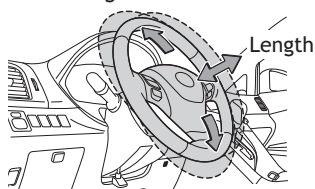

Hold wheel, push lever down, set angle and length, and return lever.

**NOTE:** Do not attempt to adjust while the vehicle is in motion.

## Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "ENGINE START STOP" switch or engine switch OFF.

 
Refer to the *Owner's Manual* for more details.

## Seat adjustments-Front

### Manual seat




### Power seat (if equipped)

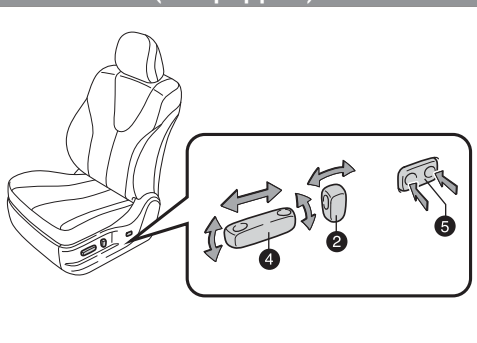

- 1 Seat position (forward/backward)
- 2 Seatback angle
- 3 Height crank (driver side only)
- 4 Seat position; cushion angle and height (driver side only)
- 5 Lumbar support


## Seat adjustments-Rear

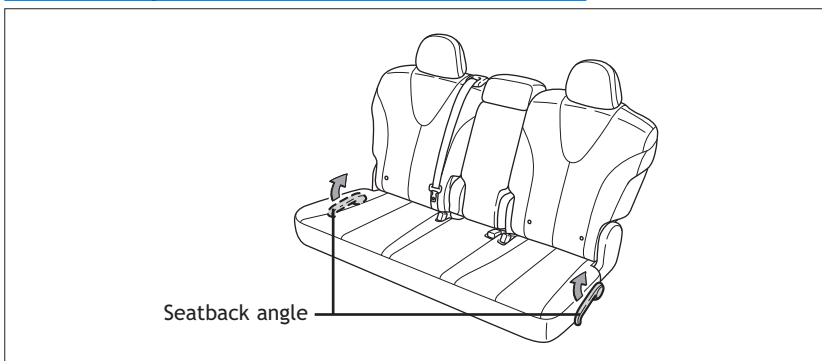 


Refer to the *Owner's Manual* for more details.

## Seats-Head restraints


 
Front and rear (excluding center) seats

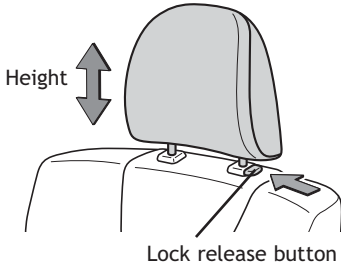


Rear center

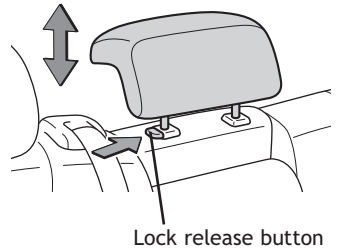 


## Seats-Folding rear row seats

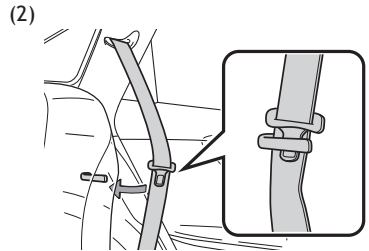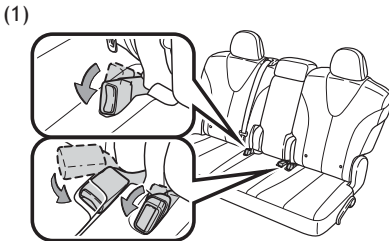  

 (3) From inside

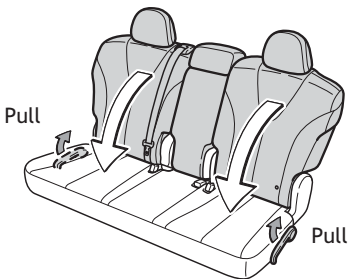


From outside

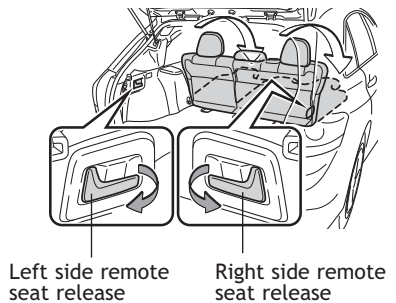 

- (1) Stow the seat belt buckles.
- (2) Hook the seat belt to the seat belt hangers.
- (3) Fold down the seatbacks.

## Windows-Power

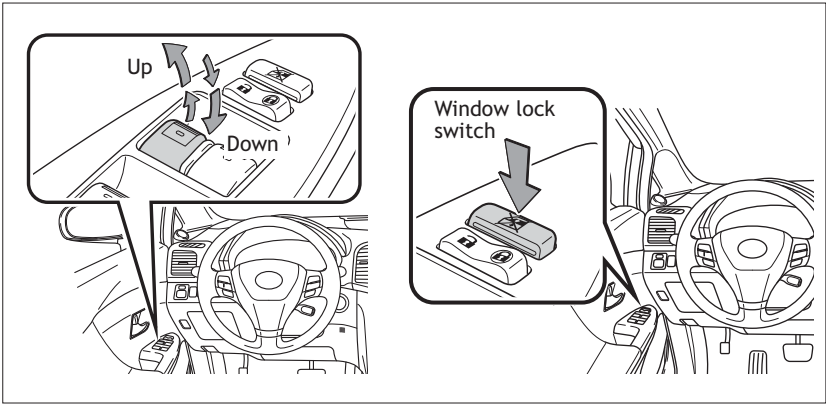 


**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

## Moonroof (if equipped)

 
### Sliding operation

Recommended driving position to minimize wind noise.

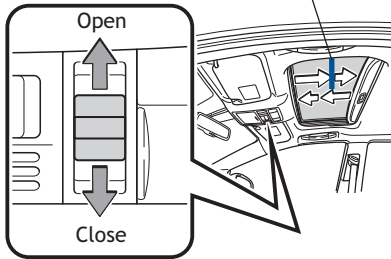


Push once to open partway; again to open completely.

### Tilting operation

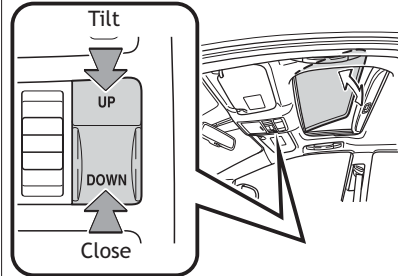 


## Lights & turn signals
 
### Headlights

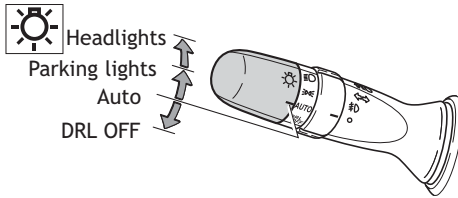

#### Without automatic high beam

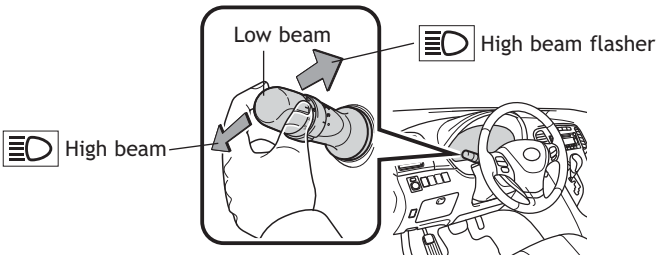 


-**Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.


-**Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

### Automatic high beam (if equipped)

 
#### Activate\*

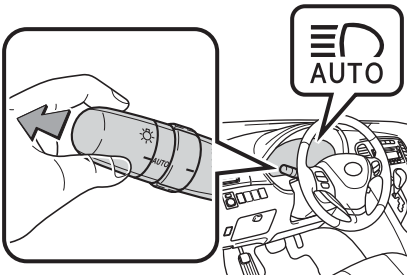

#### Manual high beam ON

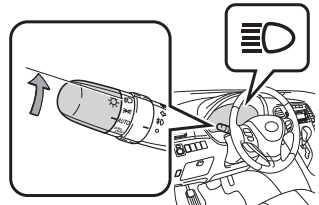 


#### Deactivate

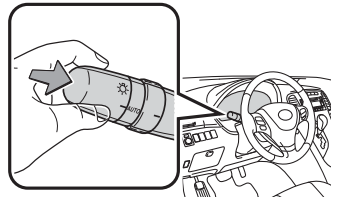 


\* Refer to the *Owner's Manual* for details on activating the automatic high beams.



### Front fog lights (if equipped)

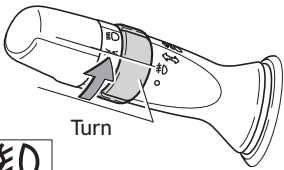 


Turn



Front fog lights come on only when the headlights are on low beam.

### Turn signals

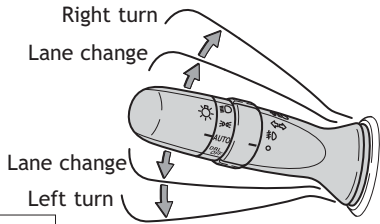 


Right turn

Lane change

Lane change


Left turn



## Windshield wipers & washers
 
### Front

\* Intermittent windshield wiper frequency adjustment  
Rotate to increase/decrease wiper frequency.

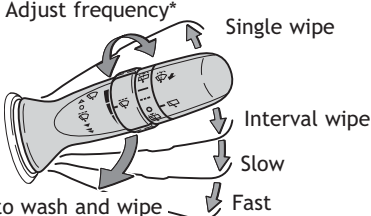

Adjust frequency\*

Single wipe


Interval wipe

Slow

Fast

Pull to wash and wipe

### Rear

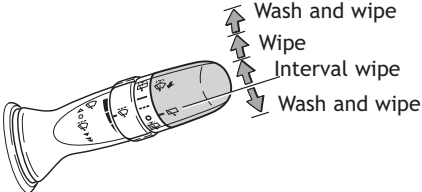 


Wash and wipe

Wipe

Interval wipe

Wash and wipe

## Hill-start Assist Control (HAC)

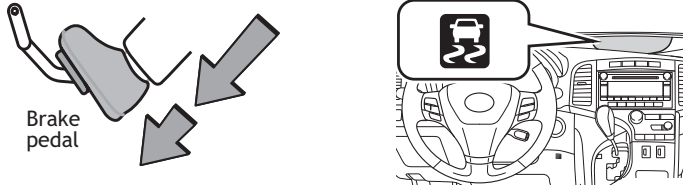 


Brake pedal

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

## Enhanced VSC OFF button

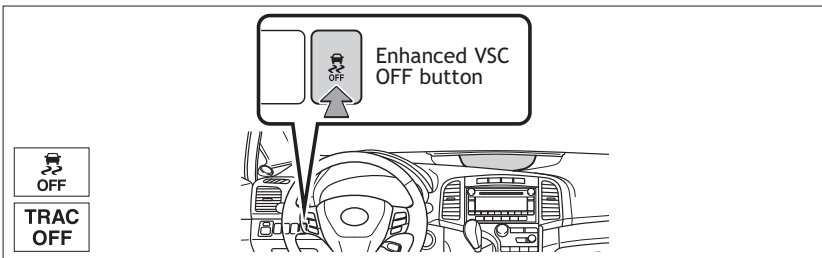 


The Enhanced VSC OFF button is used to switch between modes related to the TRAC and Enhanced VSC functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.


## Air Conditioning/Heating
 
### Manual Air Conditioning

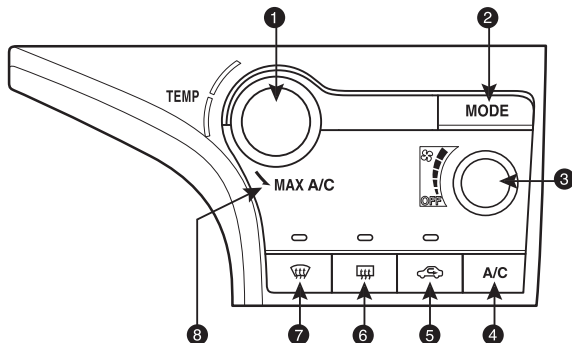



- ① Temperature selector
- ② Airflow vent  
In "👤" mode, use fresh air ("🚗" indicator OFF) to reduce window fogging. "🌬️" mode uses fresh air only.
- ③ Fan speed
- ④ Air Conditioning ON/OFF  
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ⑤ Fresh or recirculated cabin air
- ⑥ Rear window defogger/Windshield wiper de-icer (if equipped)
- ⑦ Windshield defogger
- ⑧ Select for maximum cooling. Air intake will automatically be set to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.

## Automatic Air Conditioning (if equipped)

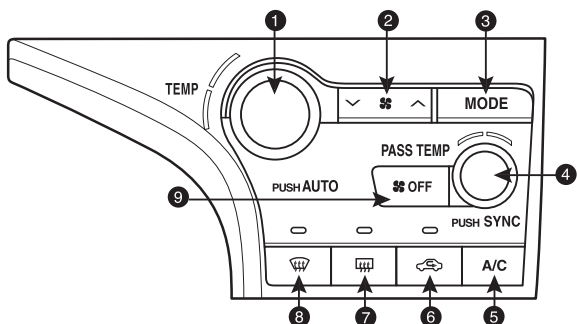 

- 1** Push: Automatic climate control ON  
 Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.  
 Turn: Temperature selector (driver side)
- 2** Fan speed
- 3** Airflow vent  
 In “” mode, use fresh air (“” indicator OFF) to reduce window fogging. “” mode uses fresh air only.
- 4** Push: Dual operation ON/OFF  
 Separate temperature setting or synchronize temperature setting for driver and passenger.  
 Turn: Temperature selector (front passenger side)
- 5** Air Conditioning ON/OFF
- 6** Fresh or recirculated cabin air
- 7** Outside rearview mirror/Rear window defogger/Windshield wiper de-icer (if equipped)
- 8** Windshield defogger
- 9** Climate control OFF


## Seat heaters (if equipped)

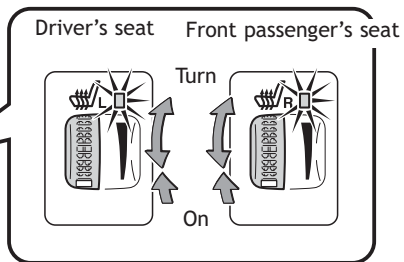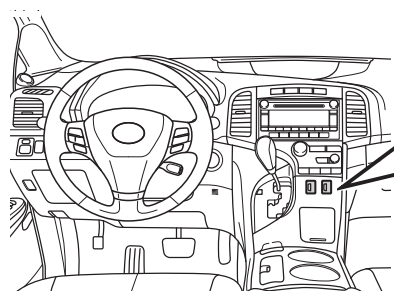  


Audio

Type 1

 Preset buttons - functions in other modes indicated above number

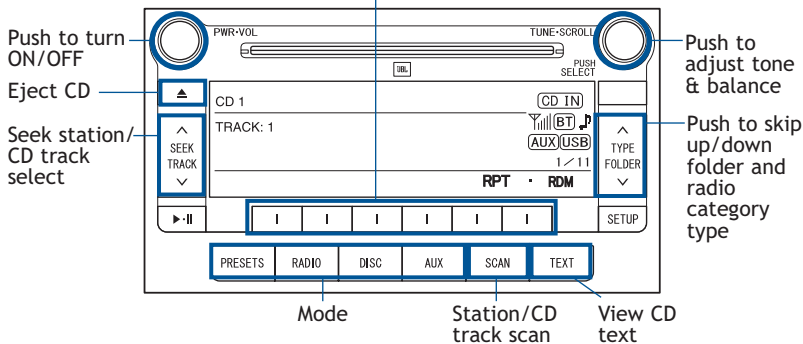

Type 2 additional function

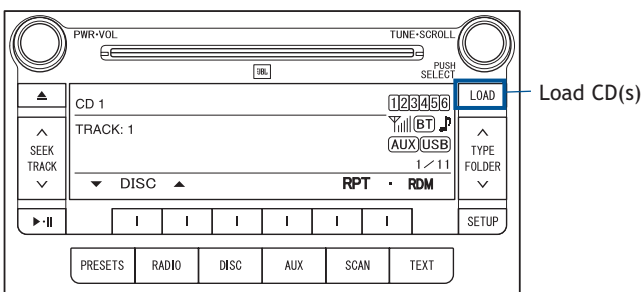 

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer (Type 2 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE," "TUNE-SCROLL" or either side of "SEEK TRACK."


To select a folder (MP3/WMA only) Push either side of "TYPE FOLDER."

RADIO

To preset stations Tune in the desired station and hold down a preset button ( [ 1 ] or from [ 1 RAND ] to [ 6 \*\* ] ) until you hear a beep.


To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

## AUX audio jack/USB adapter

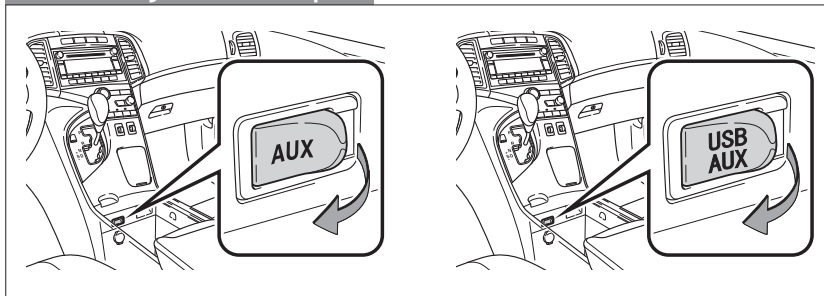 

By connecting to the AUX audio jack (or USB adapter), you can listen to music from a portable audio device (or USB memory) through the vehicle's speaker system while in AUX or USB mode.

## Steering wheel switches

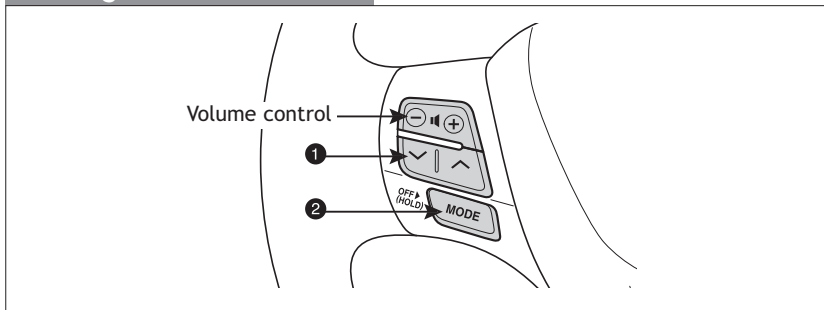 


### 1 "V A"

Use to search within the selected audio medium (radio, CD, iPod, etc.).

### 2 "MODE"

Push to turn audio ON and to select an audio mode. Push and hold to turn audio system OFF.

 
## Rear seat entertainment system (if equipped)

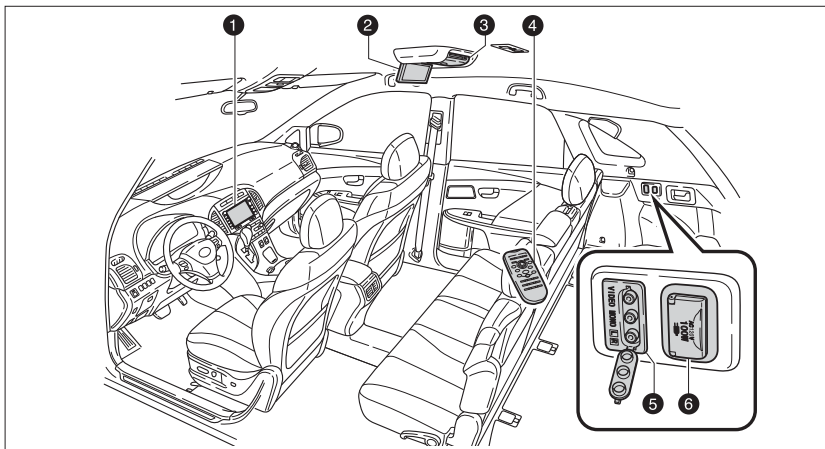


- 1 Front audio system
- 2 Display
- 3 DVD player
- 4 Remote controller
- 5 A/V input adapter
- 6 120V AC Power outlet

## Cruise control
 
### Turning system ON/OFF

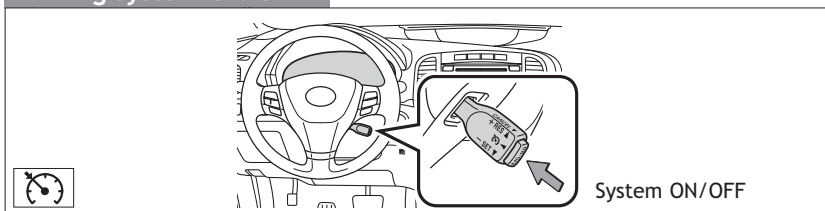

### Functions

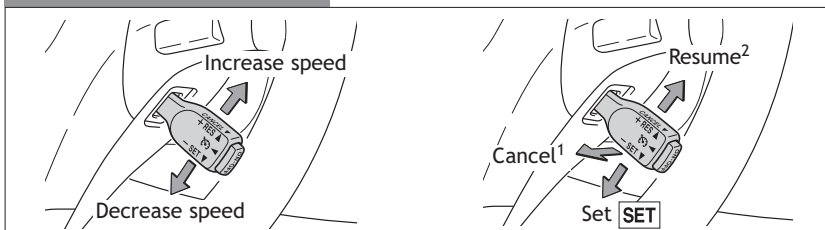 


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.


<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

## Power outlets-12V DC

 
Instrument panel

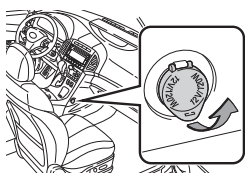

Inside center console

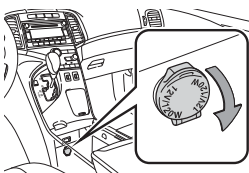 


Luggage compartment

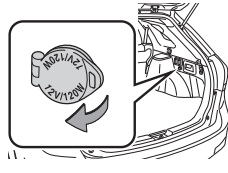 


**NOTE:** Designed for car accessories. Engine switch/“ENGINE START STOP” switch must be in the ACCESSORY or ON position to be used.

## Power outlet-120V AC (if equipped)

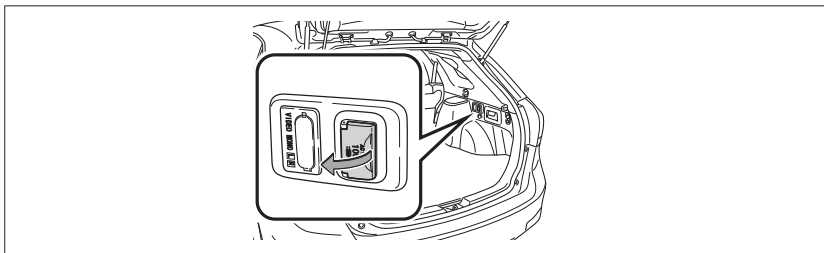 

**NOTE:** Engine switch/“ENGINE START STOP” switch must be in the “ON” position to be used.

## Garage door opener (HomeLink®)\* (if equipped)

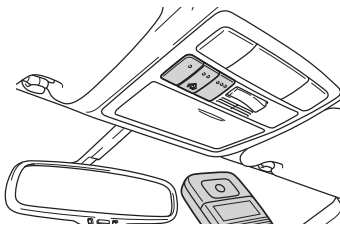 

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to “Garage door opener,” Section 3-8 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


\* HomeLink® is a registered trademark of Johnson Controls, Inc.

## Multi-information display (clock)
 
### TFT type\*

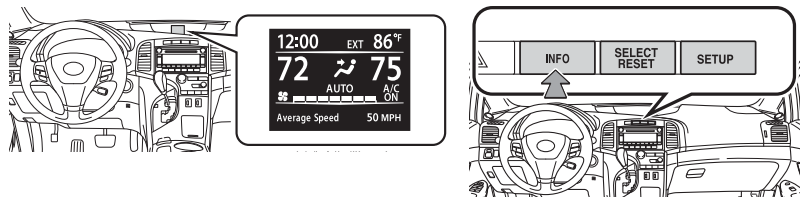

### LCD type

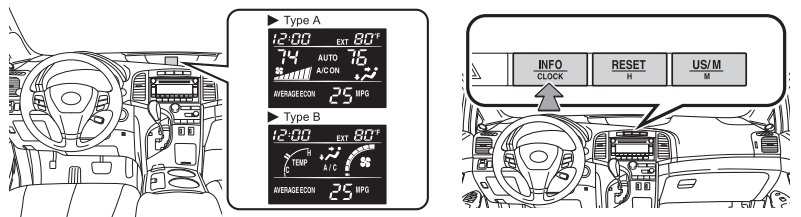 

Push "INFO" or "INFO-CLOCK" to change information in the following:

- (1) Average fuel economy (AVERAGE ECON)
- (2) Current fuel economy (CURRENT ECON)
- (3) Distance to empty (RANGE)
- (4) Average speed (AVERAGE SPEED)
- (5) Trip timer (TFT type only)

### Setting the clock

**TFT type\*** (1) Press the "SETUP" button for the "Custom Settings" screen. (2) Select "Clock" on the Display Settings screen, and press the "SELECT RESET" button. (3) Press the "INFO" button to adjust the hours and the "SETUP" button to adjust the minutes. (4) Press the "SELECT RESET" button to set the clock.

 
**LCD type** (1) Press and hold the "INFO-CLOCK" button until part of the display begins to flash. (2) Press and hold the "RESET-H" button to adjust the hours and the "US/M-M" button to adjust the minutes. (3) Press the "INFO-CLOCK" button to complete the setting.

\* On vehicles equipped with back-up camera




## Telephone controls (Bluetooth®) (if equipped)


Audio unit

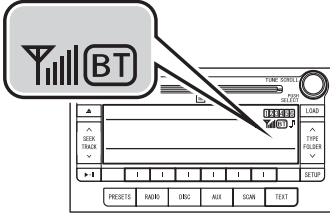

Microphone

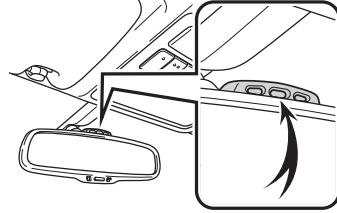 

Steering wheel telephone switches

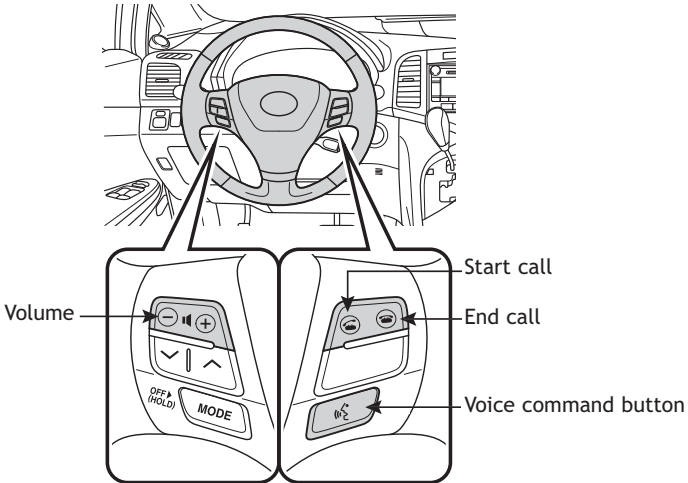 

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to “Using the hands-free phone system (for cellular phone),” Section 3-5 in the *Owner’s Manual* for more details, or go to [Toyota.com](http://Toyota.com) and enter “Bluetooth” in the keyword search.

## Customizable features

 
If your vehicle has a TFT type\* multi-information display, you will be able to customize certain electronic features. Press the “SETUP” button while stopped to access the “Custom Settings” screen.

Please see the *Owner’s Manual* for details.


\* On vehicles equipped with back-up camera

# SAFETY AND EMERGENCY FEATURES

## Door locks

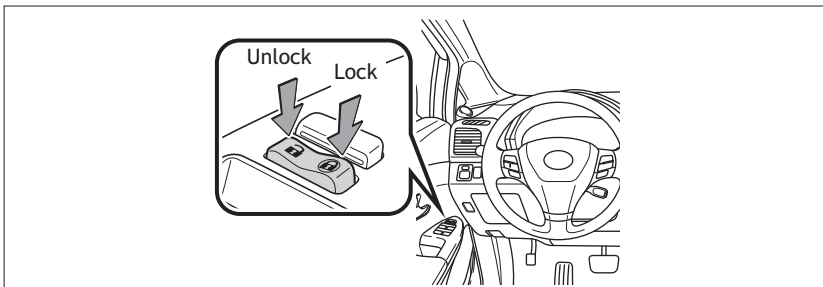


## Seat belts

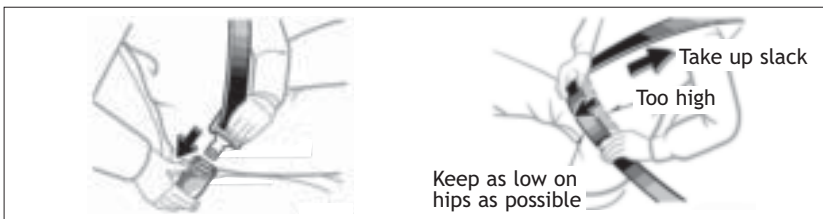 

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor

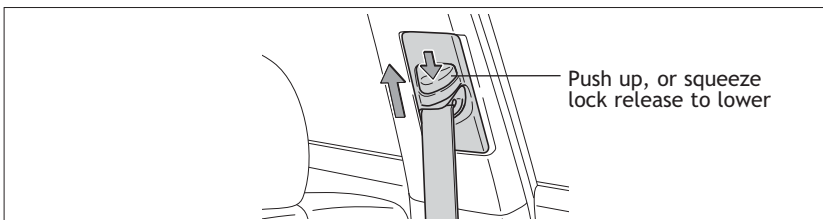 

## Tire Pressure Monitoring (warning) System

If tire pressure becomes critically low on any of the tires (excluding the spare), "⚠" indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.

Refer to the *Owner's Manual* for more details.