


# 2013 QUEST

## QUICK REFERENCE GUIDE



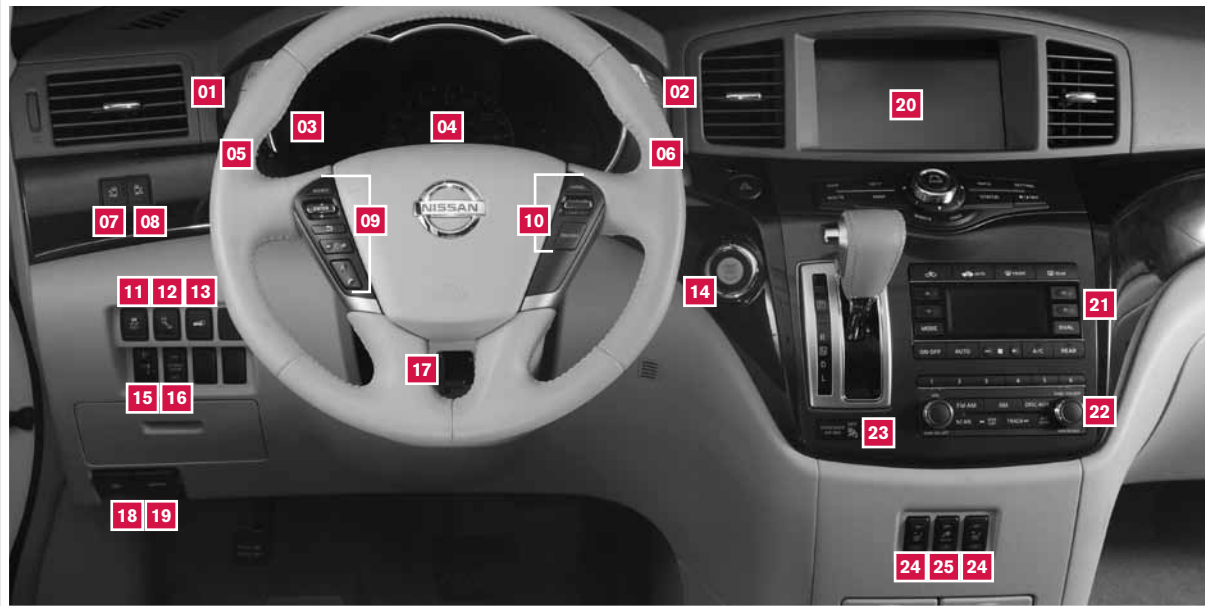

- |  |  |  |   |
|--|--|--|---|
| <b>01</b> INSTRUMENT BRIGHTNESS CONTROL*     | <b>08</b> PASSENGER'S SIDE SLIDING DOOR SWITCH                         | <b>14</b> PUSH BUTTON IGNITION SWITCH          | <b>20</b> CONTROL PANEL DISPLAY                 |
| <b>02</b> TRIP COMPUTER / RESET SWITCHES     | <b>09</b> STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH* / NAVIGATION | <b>15</b> HEADLIGHT AIMING CONTROL*            | <b>21</b> AUTOMATIC CLIMATE CONTROLS            |
| <b>03</b> LOW TIRE PRESSURE WARNING LIGHT    | <b>10</b> CRUISE CONTROL   | <b>16</b> POWER DOOR MAIN SWITCH               | <b>22</b> AUDIO SYSTEM                          |
| <b>04</b> DOT MATRIX LIQUID CRYSTAL DISPLAY* | <b>11</b> VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*                    | <b>17</b> TILT AND TELESCOPIC STEERING COLUMN* | <b>23</b> FRONT PASSENGER AIR BAG STATUS LIGHT* |
| <b>05</b> HEADLIGHT AND TURN SIGNAL CONTROL  | <b>12</b> BLIND SPOT WARNING (BSW) SWITCH                              | <b>18</b> FUEL-FILLER DOOR RELEASE             | <b>24</b> HEATED SEAT SWITCHES*                 |
| <b>06</b> WINDSHIELD WIPER / WASHER SWITCH   | <b>13</b> POWER LIFTGATE SWITCH  | <b>19</b> HOOD RELEASE*                        | <b>25</b> POWER OUTLET MAIN SWITCH*             |
| <b>07</b> DRIVER'S SIDE SLIDING DOOR SWITCH  |  |  |   |

\*See your Owner's Manual for information.

**NEW SYSTEM FEATURES**

Around View™ Monitor (if so equipped) . . . . . 2  
 Blind Spot Warning (BSW) System (if so equipped) . . . . . 3  
 Advanced Climate Control System (if so equipped) . . . . . 4

**ESSENTIAL INFORMATION**

Loose Fuel Cap . . . . . 5  
 Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert . . . . . 5

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key® System . . . . . 7  
 Power Sliding Door Release (if so equipped) . . . . . 8  
 Power Liftgate Release (if so equipped) . . . . . 9  
 Front Power Seat Adjustments (if so equipped) . . . . . 9  
 2nd Row Seat Adjustments . . . . . 10  
 Folding the 2nd Row Seats . . . . . 10  
 Enter/Exit the 3rd Row Seats . . . . . 10  
 3rd Row Seat Adjustments . . . . . 11  
 Automatic Drive Positioner (if so equipped) . . . . . 11  
 Outside Mirror Control Switch . . . . . 12  
 Starting/Stopping the Engine . . . . . 12  
 Headlight Control Switch . . . . . 13  
 Windshield Wiper/Washer Switch . . . . . 14  
 Automatic Climate Controls (if so equipped) . . . . . 15  
 FM/AM/SiriusXM™ Satellite Radio with CD/DVD Player  
 (if so equipped) . . . . . 17  
 USB/iPod® Interface (if so equipped) . . . . . 18  
 Cruise Control . . . . . 18  
 Power Outlets . . . . . 19  
 Fuel-Filler Door . . . . . 19

**SYSTEM GUIDE**

Trip Computer . . . . . 20  
 Bluetooth® Hands-free Phone System (if so equipped) . . . . . 20  
     System Operating Tips . . . . . 21  
     Bluetooth® System with Navigation (if so equipped) . . . . . 21  
     Bluetooth® System without Navigation (if so equipped) . . . . . 23  
 Navigation System (if so equipped) . . . . . 24  
 NISSAN Mobile Entertainment System (MES) (if so equipped) . . . . . 26  
 HomeLink® Universal Transceiver (if so equipped) . . . . . 26



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



To view detailed instructional videos, go to [www.nissanownersinfo.mobi/2013/quest](http://www.nissanownersinfo.mobi/2013/quest) or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at [www.nissanusa.com](http://www.nissanusa.com).

# new system features


## AROUND VIEW™ MONITOR (if so equipped)

- With the ignition switch in the **ON** position, the Around View™ Monitor is activated by pressing the **CAMERA** button **01**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position.

- The monitor displays various views of the position of the vehicle.

- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

Start from any Control Panel screen

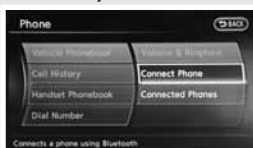

Press



Front view & bird's-eye view



Press



Front view & front-side view



Press



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

Rear view & bird's-eye view



Press



Rear view & front-side view



Press



- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.



- Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

- Predictive course lines **02** indicate the predictive course when operating the vehicle. The lines will be displayed when the steering wheel is turned.
- The course lines will move depending on how much the steering wheel is turned and will not be displayed while the steering wheel is in the neutral position.



**NOTE:**


- There are some areas where the system will not show objects.
  - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **03**.
  - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **04** will not appear in the monitor.
- The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

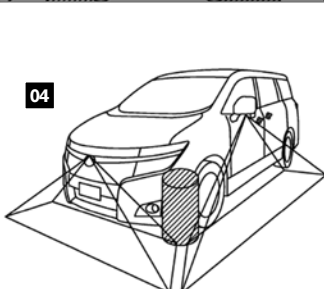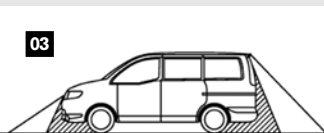

For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

## **BLIND SPOT WARNING (BSW) SYSTEM (if so equipped)**

- The control switch **01** is located on the left side of the instrument panel.
- The system automatically turns on when the engine is started and the BSW ON indicator light on the switch illuminates.
- The indicator light **02**, located in the outside mirror, will activate when the BSW system detects a vehicle in the detection zone.
- If a turn signal is activated in the direction of a detected vehicle, a chime sounds twice and the BSW indicator light will flash.
- To cancel the system, push the control switch and the BSW ON indicator light will turn off.

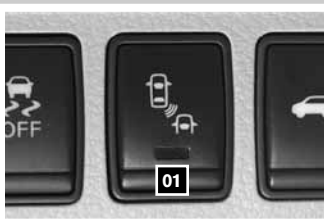

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

# new system features




## ADVANCED CLIMATE CONTROL SYSTEM (if so equipped)


- The advanced climate control system keeps the air inside the vehicle clean, using ion control and automatic air intake control with exhaust gas detecting sensor.
- When ion control is activated, this unit generates highly concentrated Plasmacluster<sup>®</sup> ions into the air blown from the vents, reducing the odor absorbed inside the vehicle.
- When the automatic air intake control is activated, the exhaust gas detection sensor can detect odors such as pulp or chemicals, and exhaust gas such as gasoline or diesel. When such odors or gases are detected, the system automatically changes from the outside air circulation mode to the recirculation mode.

For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

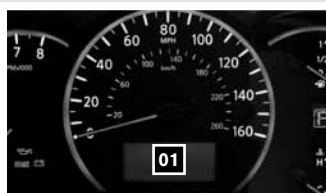

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **CHECK TIRE PRESSURE** warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.

- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals outside the vehicle to help you inflate the tires to the recommended COLD tire pressure.

- To use the Easy Fill Tire Alert system:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the **ON** position. Do not start the engine.
3. Add air to the under-inflated tire and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
5. Repeat this procedure for any additional under-inflated tires.



# essential information

- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.





 
For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.





## NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® System allows you to lock or unlock your vehicle, open your liftgate and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** or the liftgate request switch **02** or press the  button **03** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **01** or the liftgate request switch **02**; the corresponding door will unlock. Push the request switch again within 1 minute; all other doors will unlock, or
  - Press the  button **04** on the keyfob to unlock the driver's side door. Press the  button again within 1 minute; all other doors will unlock.
- To open the power liftgate (if so equipped), press the  button **05** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.

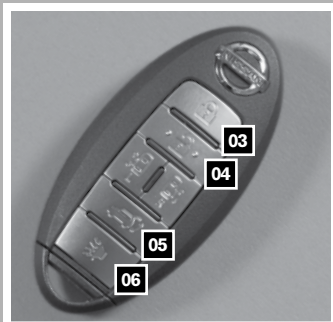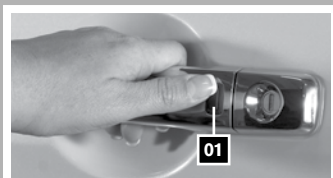

## INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (PARK)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



For more information, refer to the “Pre-driving checks and adjustments (section 3)”, the “Starting and driving (section 5)” and the “Maintenance and do-it yourself (section 8)” of your Owner’s Manual.

# first drive features

## POWER SLIDING DOOR RELEASE (if so equipped)

Use one of the following methods to open the power sliding doors:


- Press the driver's side **01** or the passenger's side **02** button on the NISSAN Intelligent Key® for approximately 1 second.



- From the driver's seat, push the driver's side **03** or passenger's side **04** sliding door switch for about 0.5 seconds. The switches are located on the driver's side instrument panel.



- From the second row seats, push the sliding door switch **05**. The switch is located on either of the second row door pillars.

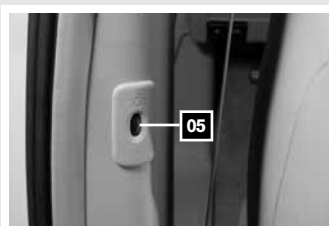


- Pull the sliding door handle (inside or outside) until you hear the chime.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## POWER LIFTGATE RELEASE (if so equipped)

Use one of the following methods to open the liftgate:

- Press the  button **01** on the NISSAN Intelligent Key® for more than 1 second.



- Once unlocked, push the liftgate opener switch **02** while carrying the Intelligent Key with you.



- From inside the vehicle, push the power liftgate switch **03** located on the instrument panel to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.



## FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.



### SEAT LIFTER (if so equipped for driver’s seat)

- To raise or lower the height of the seat, push the switch **01** up or down.
- To raise or lower the front portion of the seat, push the front or back end of the switch **01** up or down.

### LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar area, push the front or back portion of the switch **03**.


For more information, refer to the “Safety — Seats, seat belts and supplemental restraint system (section 1)” of your Owner’s Manual.

# first drive features

## 2ND ROW SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull the lever **01** up and hold it while you slide the seat forward or backward to the desired position.
- Release the lever to lock the seat in position.
- To adjust the angle of the seatback, pull the lever **02** up and lean back. To bring the seatback forward, pull the lever up and lean your body forward.
- Release the lever to lock the seatback in position.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

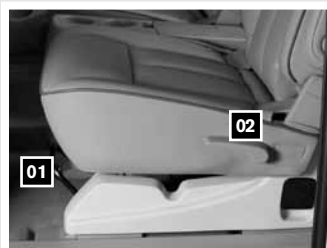

## FOLDING THE 2ND ROW SEATS

- Secure the seat belts on the seat belt hooks **01** on the side wall.
- To fold down the seatbacks, pull the lever **02** on the 2nd row seat.
- To return the seatbacks, lift up each seatback and push it to the upright position until it is latched.


For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



## ENTER/EXIT THE 3RD ROW SEATS

- The 2nd row seats can tilt and slide forward for easy entry/exit to/from the 3rd row seats.
- To enter or exit the 3rd row seat, pull the lever **01** or **02** up to tilt down the seatback and slide the seat forward.
- Return and lock the 2nd row seats by sliding the seats to the rearmost position and tilting up the seatback after use.


For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

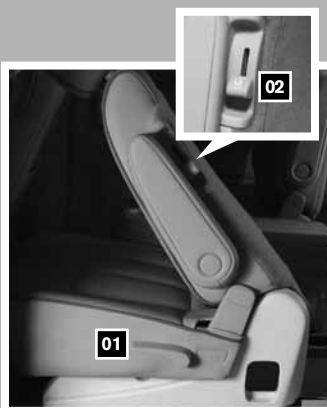

## 3RD ROW SEAT ADJUSTMENTS

- To adjust the angle of the seatback, pull the strap on the seatback **01** and lean back. Release the strap at the desired angle.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

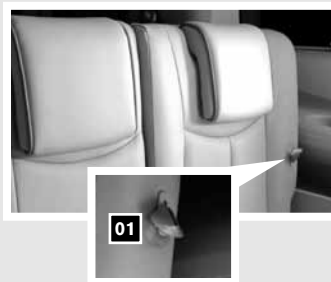

## AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver’s seat and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
  - Confirm the shift lever is in the **P (PARK)** position.
  - Place the ignition switch in the **ON** position.
  - Adjust the driver’s seat and outside mirrors to the desired positions using the adjusting switches for each feature.
  - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
  - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
  - The driver’s seat and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

# first drive features

## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.



## REVERSE TILT-DOWN FEATURE (if so equipped)

- When backing up the vehicle, the right or left outside mirror can be selected to automatically turn downward to provide better rear visibility.
  1. Push the ignition switch to the **ON** position.
  2. Move the shift lever to the **R (REVERSE)** position.
  3. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
  4. The outside mirror surfaces move downward.
- When one of the following conditions has occurred, the outside mirror surfaces will return to their original positions.
  - The shift lever is moved to any position other than **R (REVERSE)**.
  - The outside mirror control switch is set to the center “neutral” position.
  - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
  - If the ignition is pushed a second time, the vehicle will enter the **ON** mode.
- Press the ignition switch **START/STOP** button to start the engine.



**NOTE:** It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

 

## TURNING THE ENGINE OFF


- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

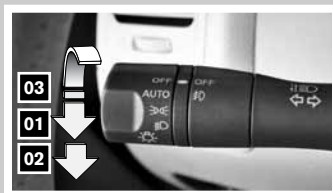
- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.




### AUTOLIGHT SYSTEM (if so equipped)

 
- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.


### HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

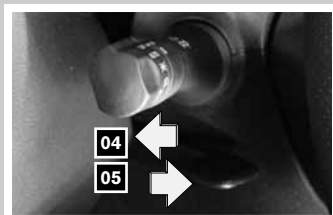

### FOG LIGHT SWITCH (if so equipped)

  NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

# 2013 Quest Delivery Checklist

## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

1. Connect the customer's phone
2. Explain voice tagging
3. Identify microphone location
4. Explain how to dial a number
5. Explain how to receive and end a call

Yes

- 
- 
- 
- 
- 
- 
- 
- 
- 



## AUDIO SYSTEM

Demonstrate

1. How to tune to the next broadcast station and skip to the next category (if so equipped) or CD track
2. How to store a radio station in a preset
3. How to scan the broadcast stations

Yes

- 
- 
- 
- 
- 




## TIRE PRESSURE MONITORING SYSTEM (TPMS)

1. Identify TPMS icon in meter cluster
2. Identify warning message location in Vehicle Information Display
3. Review TPMS reset procedure
4. Explain effects of low ambient temperatures on tire pressure
5. Explain TPMS Easy Fill Tire Alert system

Yes

- 
- 
- 
- 
- 
- 
- 
- 
- 

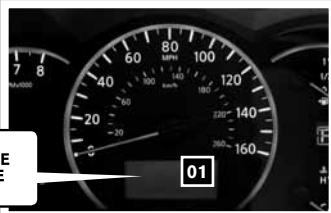

## SEAT ADJUSTMENTS

Demonstrate

1. How to slide the front seat forward or backward
2. How to recline the front seat
3. How to operate the seat lifter (if so equipped)
4. How to operate the lumbar support (if so equipped)
5. How to adjust the 2nd row seats
6. How to fold the 2nd row seats
7. How to enter/exit the 3rd row seats
8. How to adjust the 3rd row seats

Yes

- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 





# 2013 Quest Delivery Checklist

## HEATING, VENTILATION AND AIR CONDITIONING

### Demonstrate

Yes

1. **AUTO** mode and **DUAL** mode
2. Fan Speed control
3. Mode control
4. A/C function
5. Defrost and Defog operation (include recirculation button)
6. **REAR** control

- 
- 
- 
- 
- 
- 




## WINDSHIELD WIPER/WASHER SWITCH


### Demonstrate

Yes


#### FRONT WINDSHIELD WIPER AND WASHER

- 01** **MIST** (one sweep) function
- 02** Intermittent (**INT**) wiper function
- 03** Time delay adjustment ring
- 04** Low (**LO**) speed wiper function
- 05** High (**HI**) speed wiper function
- 06** Front washer  function



- 
- 
- 
- 
- 
- 

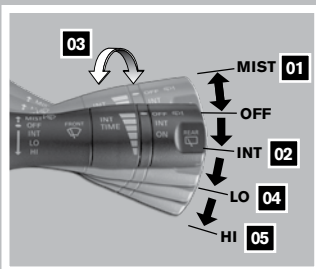

#### REAR WINDSHIELD WIPER AND WASHER (if so equipped)

- 07** Intermittent (**INT**) wiper function
- 08** **ON** wiper function
- 09** Rear washer  function

- 
- 
- 

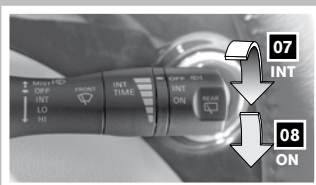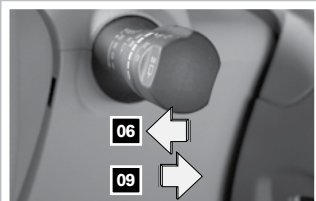

# 2013 Quest Delivery Checklist

## DVD PLAYER/ENTERTAINMENT SYSTEM (if so equipped)

### Demonstrate

- |   | Yes                      |
|---|--------------------------|
| 1. How to load and play a dvd                         | <input type="checkbox"/> |
| 2. How to control DVD operation keys                  | <input type="checkbox"/> |
| 3. How to operate the remote control (if so equipped) | <input type="checkbox"/> |
| 4. How to operate the headphones (if so equipped)     | <input type="checkbox"/> |

## NAVIGATION SYSTEM (if so equipped)

### Demonstrate

- |  | Yes                      |
|--|--------------------------|
| 1. How to operate the touch screen and/or scrolling dial | <input type="checkbox"/> |
| 2. How to add a home location                            | <input type="checkbox"/> |
| 3. How to set a destination                              | <input type="checkbox"/> |
| 4. How to search for nearby places                       | <input type="checkbox"/> |
| 5. How to turn the display off                           | <input type="checkbox"/> |



## ELECTRONIC QUICK REFERENCE GUIDE (EQRG)

- |   | Yes                      |
|---|--------------------------|
| 1. Explain that additional vehicle operation information can be viewed via the Nissan EQRG website at <a href="http://www.nissanownersinfo.mobi">www.nissanownersinfo.mobi</a>      | <input type="checkbox"/> |
| 2. Explain that EQRG information can be viewed via SmartPhone or personal computer  | <input type="checkbox"/> |
| 3. Identify where on the vehicle's Quick Reference Guide they can find the internet address (PC viewing) or Quick Response Code (SmartPhone viewing) to access the Nissan EQRG site | <input type="checkbox"/> |

\_\_\_\_\_  
Sales Consultant Signature

\_\_\_\_\_  
Date

\_\_\_\_\_  
Sales Manager Signature

\_\_\_\_\_  
Date

\_\_\_\_\_  
Customer Signature

\_\_\_\_\_  
Date


All information, specifications, photographs and illustrations are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation. For additional information, see your NISSAN dealer or contact NISSAN North America, Inc. See Owner's Manual for important warnings and details on vehicle operation and maintenance.








## WINDSHIELD WIPER/WASHER SWITCH


- Move the lever to the following positions to operate the front windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Front washer  - Pull the lever toward you to activate the front washer. The front wipers will operate several times.

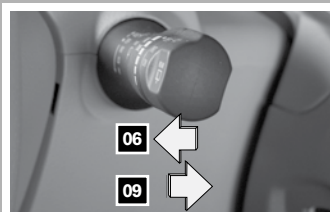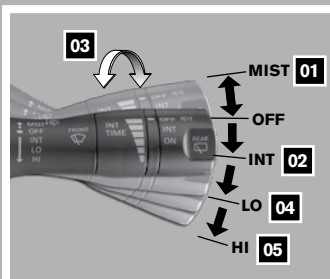

## REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Rear wiper  - Push the lever forward to activate the rear washer. The rear wiper will operate several times.

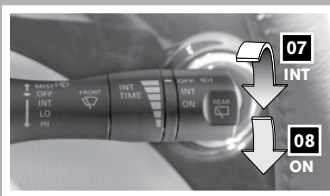

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.




## AUTOMATIC CLIMATE CONTROLS (if so equipped)

### 01 AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

### 02 FAN SPEED CONTROL BUTTON





- Press the fan speed control button  to manually adjust the fan speed down – or up + .

### 03 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

### 04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

### 05 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS



- Press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

### 06 DUAL BUTTON



- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons.

# first drive features


## 07 AIR RECIRCULATION BUTTON

- Press the air recirculation  button to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode  **FRONT**.


## 08 AUTO-RECIRCULATION BUTTON

- Press the auto-recirculation button  **AUTO** to switch to the automatic air intake control mode. The indicator light on the button will illuminate.
- In this mode, the sensor detects certain odors and gasses to automatically switch between the air recirculation mode and the outside air circulation mode.
- The auto-air recirculation mode cannot be activated when the air flow control mode is in the front defrosting mode  **FRONT**.

## 09 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster control button  **FRONT** to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Press the temperature control buttons ▲ or ▼ to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

## 10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

## 11 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

## 12 REAR CONTROL BUTTON

- To control the rear automatic air conditioning system with the front air conditioner control panel, press the **REAR** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the rear air conditioner screen.
- To adjust the front air conditioning system, press the **REAR** button again or wait 10 seconds.
- The rear control buttons will not function when **REAR** is shown on the front display.



## 13 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## FM/AM/SiriusXM™\* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

### 01 VOLUME ON-OFF CONTROL KNOB

- Press the **VOL ON-OFF** knob to turn the system on or off.
- Turn the **VOL ON-OFF** knob right or left to increase or decrease the volume.

### 02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

### 03 SEEK/CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- For SiriusXM™ satellite radio, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- To fast forward or rewind a track on a CD, press and hold the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.

### 04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM satellite radio.
- To store a station in a preset you must first select a radio band by pressing the **FM·AM** **05** or **XM** button **06**, then tune to the desired AM, FM or SiriusXM satellite station.
- Then press and hold the desired station select button (**1-6**) until the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

\*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ satellite subscription service.


For more information, refer to the **“Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual.

# first drive features

## USB/IPOD® INTERFACE (if so equipped)


- The USB input jack **01** is located in the center console.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

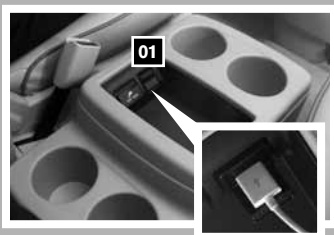

## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.

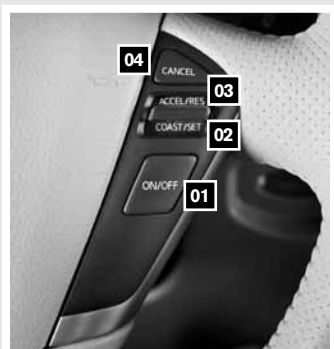

For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.





## POWER OUTLETS

- To use a power outlet, open the cap.
- Use power outlets with the engine running to avoid discharging the vehicle's battery.

### 12 VOLT OUTLETS

- The power outlets are used for powering electrical accessories such as cellular telephones.
- They are rated at 12 volt, 120W (10A) maximum.
- The 12 volt outlets are located on the instrument panel **01** and in the cargo area **02**.

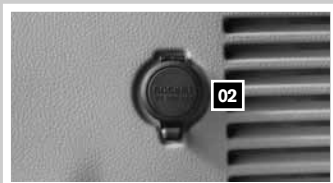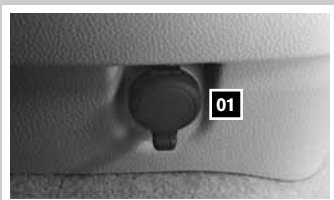

### 120 VOLT OUTLET (if so equipped)

- The 120 volt outlet **03** is rated at 120 volt, 150W (1.25A) maximum and is located on the front console.
- To turn on or off the power supply to the outlet, push the **ON** or **OFF** side of the main switch **04** located on the instrument panel. When the switch is turned to the **ON** position, the indicator light on the switch will illuminate.
- After using the power outlet, be sure to turn the main switch off.



For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.




## FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **01** located on the lower instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver's side of the vehicle.



For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

## TRIP COMPUTER



- When the  button **01** is pressed, the following modes will appear on the dot matrix liquid crystal display **02** :
- **MPG/AVG** – Displays the current and average fuel consumption.
- **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
- **TIME/miles** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
- **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- **OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
- **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
  - Press the  button **03** to cycle through the various setting modes.
  - Press the  button **01** to choose the selected menu.
- **WARNING** – If there are any.



For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

 
 

 
 
 
## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- Bluetooth Streaming Audio (available with Navigation System only) allows you to use a compatible Bluetooth phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle’s audio system allowing audio files to play through the vehicle’s speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*

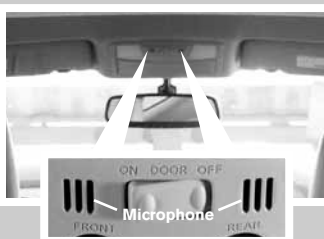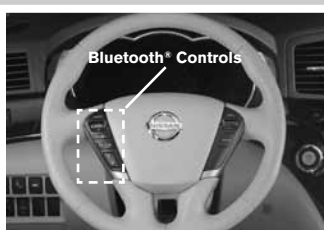

\*Some jurisdictions prohibit the use of cellular telephones while driving.

## SYSTEM OPERATING TIPS


- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back".
- To cancel a voice recognition session, say "Exit" or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches **-** or **+** on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth System features using the NISSAN Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.

## Bluetooth® System with Navigation\* (if so equipped)

### CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.



1. Press the  button on the steering wheel and select the "Connect Phone" key.



\*Some jurisdictions prohibit the use of cellular telephones while driving.


## 2. Initiate connecting from the phone.


- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
- When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)



## 3. When the connecting is complete, the screen will return to the Phone menu display.


## PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.
- To manually download entries:
  1. Press the  button and select the "Vehicle Phonebook" key.
  2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
    - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
    - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
    - "Enter Number by Keypad" to input the number and name manually.

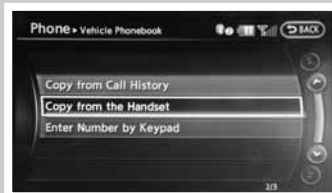



## MAKING A CALL

 
To make a call, follow this procedure:

1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.




## RECEIVING/ENDING A CALL


- To accept the call, press the  button on the steering wheel or touch the “Answer” key.
- To reject the call, touch the “Reject Call” key.
  
- To hang-up, press the  button or touch the “Hang-Up” key.

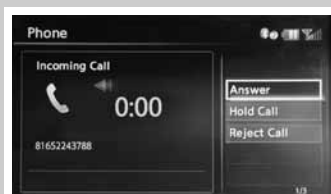

## Bluetooth® System without Navigation\* (if so equipped)

### CONNECTING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone.
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
  - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. The system asks for a name for the phone. Say “Yes”. The system acknowledges the command and registers the cellular phone.

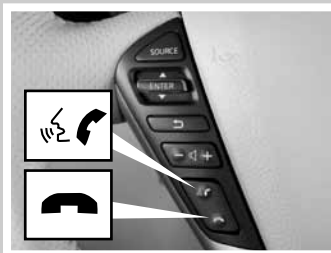


### PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.



 
\*Some jurisdictions prohibit the use of cellular telephones while driving.

# system guide

## MAKING A CALL

1. Press the  button on the steering wheel. A tone will sound.
2. Say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say "Yes". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL






- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).



## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

- 01** Touch screen display.
- 02** **DEST** – Press to enter a destination.
- 03** **INFO** – Press to display the vehicle, traffic, weather or voice recognition information.
- 04** **SETTING** – Press to access the system settings.
- 05** Multi-function controller – Turn to highlight an item on the screen, press to select the highlighted item or scroll the map.
- 06**   – Press to switch to the zoom mode to change the map scale. Use the center dial to adjust the map scale. Turn clockwise to zoom in. Turn counterclockwise to zoom out.
- 07** **ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).
- 08** **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 09** **STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 10**  /  **OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold to turn off the display. Press again to turn on the display.
- 11**  **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 12** **VOICE** – Press to hear the current guidance for a programmed route.

For more information, refer to the Navigation System Owner's Manual.

## NISSAN MOBILE ENTERTAINMENT SYSTEM (MES) (if so equipped)

- With this Entertainment System, you can play video files via a DVD or compatible USB device, providing images and sound operated through both the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks. (Your device will be controlled through its own control panel).
- Use the remote controller, provided with the system, to operate the rear display screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink® website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.









This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,  
go to **[www.nissanownersinfo.mobi/2013/quest](http://www.nissanownersinfo.mobi/2013/quest)**  
or snap this barcode with an appropriate barcode reader.

