



TACOMA  
2 0 2 6

OWNER'S MANUAL



<b>Pictorial index</b>	Search by illustration	
<b>For safety and security</b>	Make sure to read through them (Main topics: Child seat, theft deterrent system)	1
<b>Vehicle status information and indicators</b>	Reading driving-related information (Main topics: Meters, multi-information display)	2
<b>Before driving</b>	Opening and closing the doors and windows, adjustment before driving (Main topics: Keys, doors, seats)	3
<b>Driving</b>	Operations and advice which are necessary for driving (Main topics: Starting engine, refueling)	4
<b>Interior features</b>	Usage of the interior features (Main topics: Air conditioner, storage features)	5
<b>Maintenance and care</b>	Caring for your vehicle and maintenance procedures (Main topics: Interior and exterior, light bulbs)	6
<b>When trouble arises</b>	What to do in case of malfunction and emergency (Main topics: Battery discharge, flat tire)	7
<b>Vehicle specifications</b>	Vehicle specifications, customizable features (Main topics: Fuel, oil, tire inflation pressure)	8
<b>For owners</b>	Reporting safety defects for U.S. owners, seat belt and SRS airbag instructions for Canadian owners	9
<b>Index</b>	Search by symptom	
	Search alphabetically	

For your information.....	6	Multi-information display (12.3-inch display) .....	107
Reading this manual .....	13	Head-up display .....	117
How to search .....	14	Fuel consumption information .....	121
Pictorial index .....	16		
<b>1 For safety and security</b>		<b>3 Before driving</b>	
<b>1-1. For safe use</b>		<b>3-1. Key information</b>	
Before driving .....	28	Keys .....	124
For safe driving .....	29	Digital key.....	128
Seat belts .....	31	<b>3-2. Opening, closing and locking the doors and tailgate</b>	
SRS airbags .....	37	Side doors .....	130
Front passenger occupant classification system .....	45	Power running boards ...	134
Exhaust gas precautions..	49	Tailgate .....	137
<b>1-2. Child safety</b>		Smart key system.....	147
Riding with children.....	51	<b>3-3. Adjusting the seats</b>	
Child restraint systems.....	52	Front seats .....	152
<b>1-3. Emergency assistance</b>		Rear seats .....	154
Safety Connect .....	70	Head restraints .....	157
<b>1-4. Theft deterrent system</b>		<b>3-4. Adjusting the steering wheel and mirrors</b>	
Engine immobilizer system .....	75	Steering wheel.....	160
Alarm.....	76	Inside rear view mirror...	161
		Digital Rear-view Mirror.	162
		Outside rear view mirrors .....	171
<b>2 Vehicle status information and indicators</b>		<b>3-5. Opening, closing the win- dows and moon roof</b>	
<b>2-1. Instrument cluster</b>		Power windows .....	173
Warning lights and indicators .....	80	Power back window.....	176
Gauges and meters (7-inch display).....	88	Moon roof .....	177
Gauges and meters (12.3- inch display) .....	92	<b>3-6. Favorite settings</b>	
Multi-information display (7- inch display) .....	98	My Settings.....	180





AUTO LSD system.....	409	Removable speaker .....	494
Rear differential lock system .....	410	Garage door opener .....	501
Crawl Control .....	412		
Multi-terrain Select .....	415	<b>6 Maintenance and care</b>	
Clutch start cancel switch .....	418	<b>6-1. Maintenance and care</b>	
Downhill assist control system .....	420	Cleaning and protecting the vehicle exterior .....	510
Driving assist systems ..	422	Cleaning and protecting the vehicle interior .....	513
SDM (Stabilizer with Disconnection Mechanism) ....	428	<b>6-2. Maintenance</b>	
Trailer brake controller ..	429	Maintenance requirements .....	516
Trailer Backup Guide ....	432	General maintenance ....	518
<b>4-6. Driving tips</b>		Emission inspection and maintenance (I/M) programs .....	520
Off-road precautions .....	437	<b>6-3. Do-it-yourself maintenance</b>	
Winter driving tips .....	440	Do-it-yourself service precautions.....	522
		Hood.....	524
<b>5 Interior features</b>		Positioning a high lift jack .....	525
<b>5-1. Using the air conditioning system and defogger</b>		Engine compartment .....	526
Manual air conditioning system .....	444	Tires .....	534
Automatic air conditioning system.....	449	Tire inflation pressure ....	548
Heated steering wheel/seat heaters/seat ventilators	455	Wheels .....	550
<b>5-2. Using the interior lights</b>		Air conditioning filter.....	551
Interior lights list .....	458	Electronic key battery ....	553
<b>5-3. Using the storage features</b>		Checking and replacing fuses .....	555
List of storage features .	461	Light bulbs .....	558
Luggage compartment features .....	469		
<b>5-4. Using the other interior features</b>		<b>7 When trouble arises</b>	
Other interior features ...	473	<b>7-1. Essential information</b>	
		Emergency flashers.....	562

<p>If your vehicle has to be stopped in an emergency ..... 562</p> <p>If the vehicle is submerged or water on the road is rising ..... 563</p> <p><b>7-2. Steps to take in an emergency</b></p> <p>If your vehicle needs to be towed..... 565</p> <p>If you think something is wrong ..... 569</p> <p>Fuel pump shut off system ..... 570</p> <p>If a warning light turns on or a warning buzzer sounds 571</p> <p>If a warning message is displayed..... 582</p> <p>If you have a flat tire..... 589</p> <p>If the engine will not start 600</p> <p>If you lose your keys ..... 601</p> <p>If the electronic key does not operate properly ..... 602</p> <p>If the vehicle battery is discharged ..... 604</p> <p>If your vehicle overheats 609</p> <p>If the vehicle becomes stuck ..... 611</p>	<p><b>8-3. Initialization</b></p> <p>Items to initialize..... 655</p> <p><b>8-4. Free/open source software</b></p> <p>Free/open source software information..... 656</p>	<p><b>9 For owners</b></p> <p><b>9-1. For owners</b></p> <p>Reporting safety defects for U.S. owners..... 658</p> <p>Reporting safety defects for Canadian owners ..... 659</p> <p>Seat belt instructions for Canadian owners (in French) ..... 659</p> <p>SRS airbag instructions for Canadian owners (in French) ..... 661</p> <p>Camper information..... 668</p>	<p><b>1</b></p> <p><b>2</b></p> <p><b>3</b></p> <p><b>4</b></p> <p><b>5</b></p> <p><b>6</b></p> <p><b>7</b></p> <p><b>8</b></p> <p><b>9</b></p>
<p><b>8 Vehicle specifications</b></p> <p><b>8-1. Specifications</b></p> <p>Maintenance data (fuel, oil level, etc.)..... 614</p> <p>Fuel information ..... 627</p> <p>Tire information ..... 629</p> <p><b>8-2. Customization</b></p> <p>Customizable features .. 640</p>	<p><b>Index</b></p> <p>What to do if... (Troubleshooting) ..... 678</p> <p>Alphabetical Index..... 681</p>	<p><b>9</b></p>	<p><b>9</b></p>

## For your information

### Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find explanations for equipment not installed on your vehicle and the illustrations used may differ from your vehicle.

All specifications provided in this manual are current at the time of printing. Over time, your vehicle may receive updates that modify the vehicle and make material in this manual incomplete and/or inaccurate. Because of Toyota's interest in continual product improvement, Toyota reserves the right to make changes to this manual at any time without notice.

If Toyota chooses to update the manual, updated versions can be viewed by selecting your vehicle by model and year at the following URL or on your mobile device if you have access to the Toyota app.

[www.toyota.com/owners](http://www.toyota.com/owners)

### Noise from under vehicle after turning off the engine

Approximately five hours after the engine is turned off, you may hear sound coming from

under the vehicle for several minutes. This is the sound of a fuel evaporation leakage check and it does not indicate a malfunction.

### Accessories, spare parts and modification of your Toyota

A wide variety of non-genuine spare parts and accessories for Toyota vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Toyota vehicle.

This vehicle should not be modified with non-genuine Toyota products. Modification with non-genuine Toyota products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Also, remodeling like this will have an effect on advanced safety equipment such as Toyota Safety Sense 3.0 and there is a danger that it will not work properly or the danger that it

may work in situations where it should not be working.

### Cyber Attack Risk

Installing electronic devices and radios increases the risk of cyber attacks through the installed parts, which may lead to unexpected accidents and leakage of personal information. Toyota does not make any guarantees for problems caused by installing non-genuine Toyota products.

### Installation of a mobile two-way radio system

The installation of a mobile two-way radio system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense 3.0
- Anti-lock brake system
- Vehicle dynamics integrated management
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Toyota dealer for precautionary measures or special instructions regarding installation of a mobile two-way radio system.

### Vehicle data recording

This vehicle is equipped with sophisticated computers that record certain data regarding vehicle controls and operations.

#### ? Data recorded by the computers\*1

\*1: The recorded data varies according to the vehicle grade level and options with which it is equipped.

Certain data, such as the following, is recorded depending on the operation timing and status of each function.

- Basic vehicle behavior related data (engine speed, accelerator/brake pedal operation, vehicle speed, etc.)
- Operating state of the driving support systems (recorded during system operation, includes basic vehicle behavior related data)
- Driving support system sensor data
- Image data (images from the front, rear and side cameras)\*2

\*2: The vehicle has multiple cameras. For details on from which cameras images are recorded, contact your Toyota dealer.

- Location information

These computers do not record conversations, sounds, or images of the inside of the vehi-

cle.

Also, personal information which may be used to identify the owner of the vehicle (name, gender, age, etc.) is not recorded.

? **Usage of recorded data and personal information by the Toyota Safety Sense 3.0**

The operating state of each system, data from each sensor, image data (images from the front/rear cameras), and position information is recorded by the Toyota Safety Sense 3.0 in the following situations. Toyota obtains this information when the vehicle is brought to the dealership or when sent to the Toyota servers.

- In certain collisions or collision-like situations
- When driving on roads with certain traffic situations, such as congestion, poor road surfaces, poor weather, etc.
- When driving on certain roads, such as roads which were recently opened or extended
- After the engine is started, for a certain amount of time

To learn more about the vehicle data collected, used and shared by Toyota, please visit [www.toyota.com/privacyvts/](http://www.toyota.com/privacyvts/).

? **Data provision and use purpose by third parties**

Data recorded by the computers may be used for collision analysis, malfunction diagnosis, automated driving, advanced safety and map related technologies (technology, product development, product improvement, etc.) and products and services which use data (maps used for automated driving and advanced safety technologies, driving condition analysis, analysis of the driving environment, such as road infrastructure, traffic condition communication, etc. Herein referred to as “individual services”).

Also, this data may be used for customer support related to a collision, collision analysis or resolution.

In situations such as the following, Toyota may disclose the recorded data to a third party:

- When the consent of the vehicle owner (or the lessee if the vehicle is leased) has been given
- When officially requested by the police, a court of law or a government agency
- When it is to be used by Toyota in a lawsuit
- When data is to be used for research purposes after processing so that the data is not

tied to a specific vehicle or vehicle owner

In addition to the above, Toyota may disclose the data recorded by the Toyota Safety Sense 3.0 to a third party in the following situations:

- When separate consent of the vehicle owner (or the lessee if the vehicle is leased) has been given. This includes situations when the user subscribes to an individual service which is provided by a second party and uses vehicle recorded data, where the provider has obtained the user's consent for providing data to a third-party
- When providing data to a company involved in autonomous driving software, etc. for the purpose of research and development (technology, product development, product improvement, etc.) of automated driving, advanced safety and map related technologies
- When providing image data and position information to a company involved in map creation, etc. for the purpose of research and development map related technologies
- When providing image data and position information to a local government for the purpose of road maintenance,

etc.

- When providing processed image data and position information to traffic condition communication individual services
- When providing image data from near a fire, or other area that emergency services are dispatched, to the fire department of a local government which has entered a separate contract with Toyota

---

Image information recorded by the vehicle can be erased by your Toyota dealer.

The image recording function can be disabled. However, if the function is disabled, data from when systems operate will not be available.

If you wish to stop the collection of Toyota Safety Sense 3.0 data by the Toyota servers for the purpose of research and development and provision to individual services, contact your Toyota dealer.

### **Usage of data collected through Safety Connect (U.S.mainland only)**

If your Toyota has Safety Connect and if you have subscribed to those services, please refer to the Safety Connect Telematics Subscription Service Agreement for information on data collected and its usage.

- To learn more about the vehicle data collected, used and shared by Toyota, please visit

[www.toyota.com/privacyvts/](http://www.toyota.com/privacyvts/).

### **Statement on Warranty Coverage for Aftermarket and Recycled Parts (For U.S. Owners)**

The Magnuson-Moss Warranty Act, 15 U.S.C. s.2301 et seq., makes it illegal for motor vehicle manufacturers to void a motor vehicle warranty or deny warranty coverage solely because an aftermarket or recycled part has been used to repair the vehicle or someone other than the authorized service provider performed service on the vehicle. This provision does not apply to a new motor vehicle purchased solely for commercial or industrial use.

Under federal law, a manufacturer may deny warranty coverage and charge for repairs to a vehicle if it is discovered that an aftermarket or recycled part installed on the vehicle is defective or was installed incorrectly and caused damage to another part of the vehicle otherwise covered under warranty. The Federal Trade Commission requires that a manufacturer demonstrate that an aftermarket or recycled part or service performed by a person other than an authorized service provider caused damage to another part of the vehicle otherwise

covered under warranty before denying warranty coverage. Additionally, federal law allows a manufacturer to void a motor vehicle warranty or deny warranty coverage if the manufacturer provides the article or service to consumers free of charge under the warranty or the manufacturer has secured a waiver from the Federal Trade Commission.

### **Event data recorder**

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,

- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

**NOTE:** EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

- **Disclosure of the EDR data**

Toyota will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a

government agency

- For use by Toyota in a lawsuit

However, if necessary, Toyota may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

### Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Toyota dealer before you scrap your vehicle.

### Perchlorate Material

Special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

Your vehicle has components that may contain perchlorate. These components may include airbags, seat belt pretensioners, and wireless remote control batteries.







### “QR Code”

The word “QR Code” is registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

### Caution symbols attached to the high voltage components

High voltage components, such as the power control unit, may have labels attached indicating care required.

Each caution symbol indicates the following:

Symbols	Meanings
	Indicates danger
	Indicates high voltage part
	Indicates not to touch
	Indicates high temperature part

### WARNING

#### ? General precautions while driving

**Driving under the influence:** Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

**Defensive driving:** Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

**Driver distraction:** Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

#### ? General precaution regarding children's safety



Never leave children unattended in the vehicle, and never allow children to have or use the key.



Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.


**Reading this manual**



**Explains symbols used in this manual.**

**Symbols in this manual**


Symbols	Meanings
	<b>WARNING:</b> Explains something that, if not obeyed, could cause death or serious injury to people.
	<b>NOTICE:</b> Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.
1 2 3...	Indicates operating or working procedures. Follow the steps in numerical order.

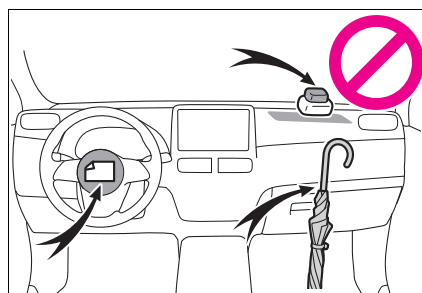Symbols	Meanings
	Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
	Indicates the outcome of an operation (e.g. a lid opens).



Symbols	Meanings
	Indicates the component or position being explained.
	Means <b>Do not</b> , <b>Do not do this</b> , or <b>Do not let this happen</b> .


**Symbols in illustrations**

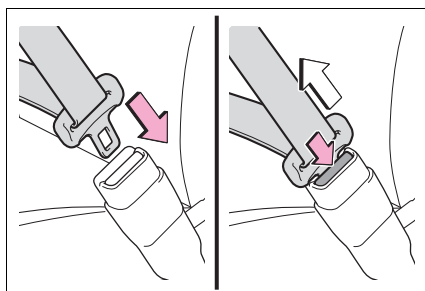

## How to search


### ? Searching by name

- Alphabetical index: →P.681

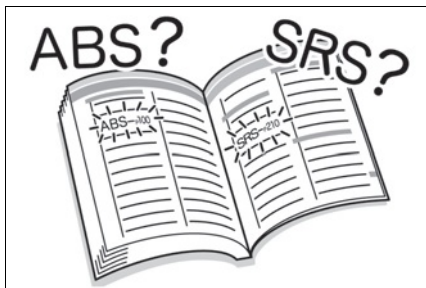

### ? Searching by installation position

- Pictorial index: →P.16

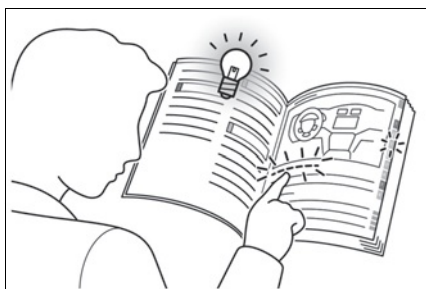


### ? Searching by symptom or sound

- What to do if... (Troubleshooting): →P.678



### ? Searching by title


- Table of contents: →P.2

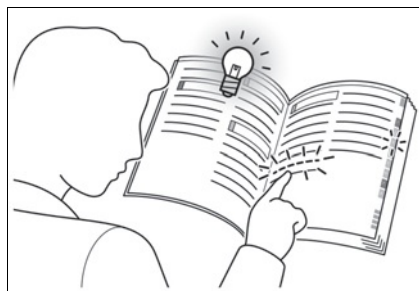



## Pictorial index

### Exterior

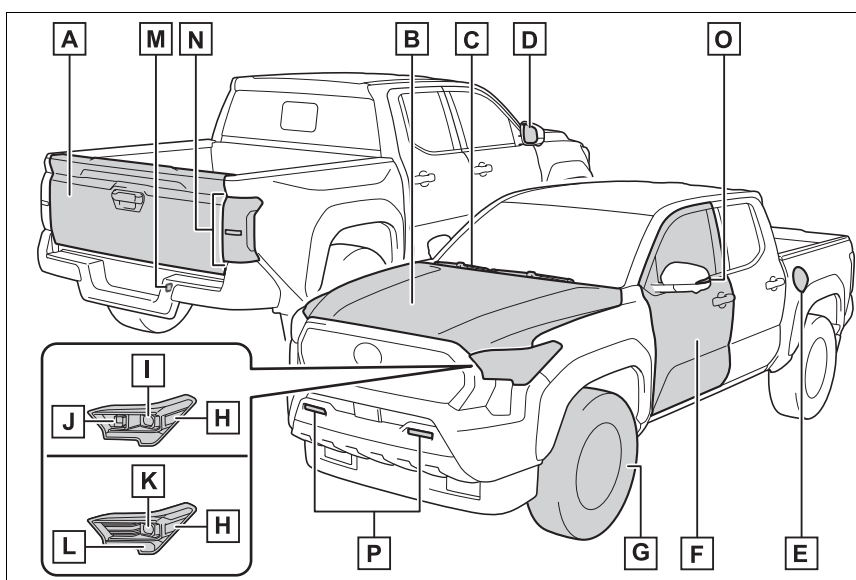

The illustration represents the Double Cab models and may differ from the body shape of other models.

- A Tailgate..... P.137**
  - Locking/unlocking ..... P.137
  - Opening/closing the tailgate..... P.137, 138
  - Removing the tailgate ..... P.143
- B Hood..... P.524**
  - Opening ..... P.524
  - Engine oil ..... P.619
  - Coping with overheating ..... P.609
- C Windshield wipers..... P.236**
  - Precautions for winter season..... P.440
  - To prevent freezing (windshield wiper de-icer)\* ..... P.447, 453
- D Outside rear view mirrors ..... P.171**
  - Adjusting the mirror angle ..... P.171
  - Folding the mirrors ..... P.172

Defogging the mirrors ..... P.445, 451

**E Fuel filler door ..... P.239**

Refueling method ..... P.239

Fuel type/fuel tank capacity ..... P.619

**F Side doors ..... P.130**

Locking/unlocking ..... P.130

Opening/closing the side windows ..... P.173

Locking/unlocking by using the mechanical key ..... P.602

Warning messages ..... P.571

**G Tires..... P.534**

Tire size/inflation pressure ..... P.534, 624

Winter tires/tire chains ..... P.440

Checking/rotation/tire pressure warning system ..... P.534

Coping with flat tires..... P.589

**Light bulbs of the exterior lights for driving**

(Replacing method: P.558, Watts: P.626)

**H Side marker lights ..... P.230**

**I Headlights/daytime running lights ..... P.230**

**J Turn signal lights ..... P.222**

Parking lights ..... P.230

**K Headlights..... P.230**

**L Turn signal lights ..... P.222**

Daytime running lights ..... P.230

Parking lights ..... P.230

**M License plate lights..... P.230**

**N Tail lights..... P.230**

Turn signal lights ..... P.222

Stop lights

Back-up lights


Changing the shift position to R ..... P.215, 220

Turn signal lights\* ..... P.222

Fog lights\* ..... P.233

\*: If equipped

## Instrument panel

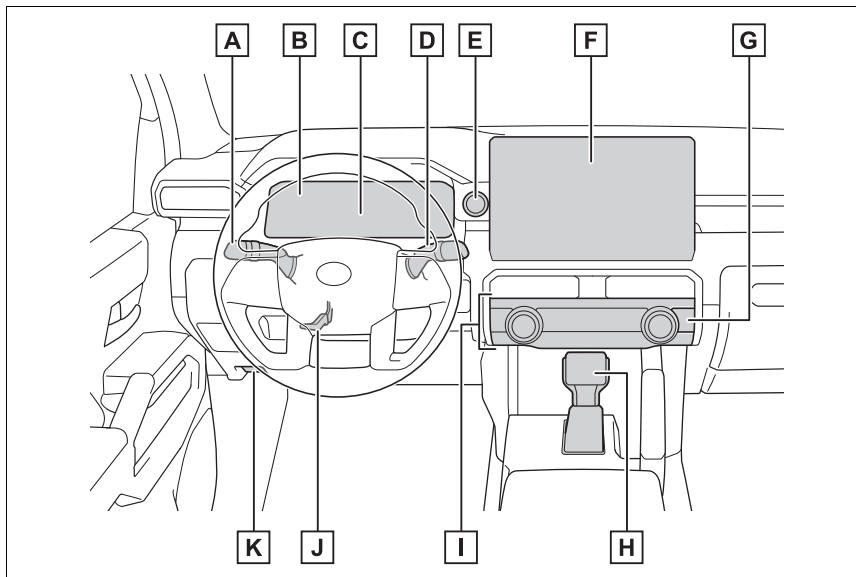

- A Turn signal lever..... P.222**
- Headlight switch ..... P.230**  
 Headlights/Parking lights/tail lights/license plate lights/  
 daytime running lights ..... P.230  
 Fog lights \*1 ..... P.233
- B Multi-information display ..... P.98, 107**  
 Display ..... P.98, 107  
 When a warning message is displayed..... P.582
- C Meters ..... P.88, 92**  
 Reading the meters/  
 adjusting the instrument panel light ..... P.88, 92  
 Warning lights/indicator lights ..... P.80  
 When a warning light turns on ..... P.571
- D Windshield wiper and washer switch..... P.236**  
 Usage..... P.236  
 Adding washer fluid..... P.533



Warning messages ..... P.582

**E Engine switch ..... P.210**

Starting the engine/changing the modes ..... P.210

Emergency stop of the engine ..... P.562

When the engine will not start ..... P.600

Warning messages ..... P.582

**F Multimedia system\*<sup>2</sup>**

**G Emergency flasher switch ..... P.562**

**H Shift lever ..... P.215, 220**

Changing the shift position ..... P.216, 220

Precautions for towing ..... P.565

When the shift lever does not move ..... P.217

**I Air conditioning system ..... P.444, 449**

Usage ..... P.444, 449

Back window defogger ..... P.445, 451

**J Tilt and telescopic steering lock release lever ..... P.160**


Adjustment ..... P.160

**K Hood lock release lever ..... P.524**

\*<sup>1</sup>: If equipped


\*<sup>2</sup>: Refer to "MULTIMEDIA OWNER'S MANUAL".

**Switches**

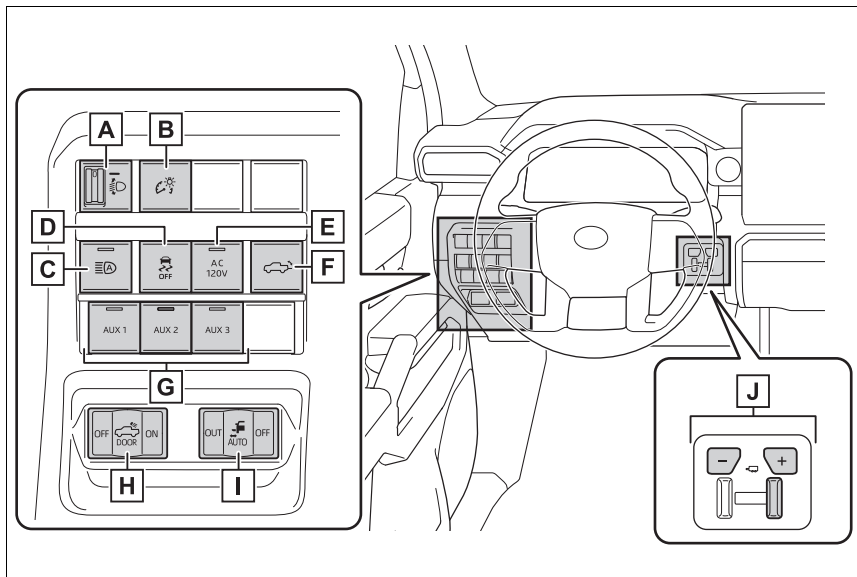

- A** Headlight leveling dial ..... P.232
- B** Instrument panel light control switch ..... P.91, 97
- C** Automatic High Beam switch ..... P.233
- D** VSC OFF switch ..... P.424
- E** AC 120V switch\* ..... P.485
- F** Power tailgate opener switch\* ..... P.138
- G** Auxiliary switches\* ..... P.491
- H** Cargo lamp main switch..... P.459
- I** Power running boards switch\* ..... P.134
- J** Trailer brake control switch\* ..... P.429

\*: If equipped

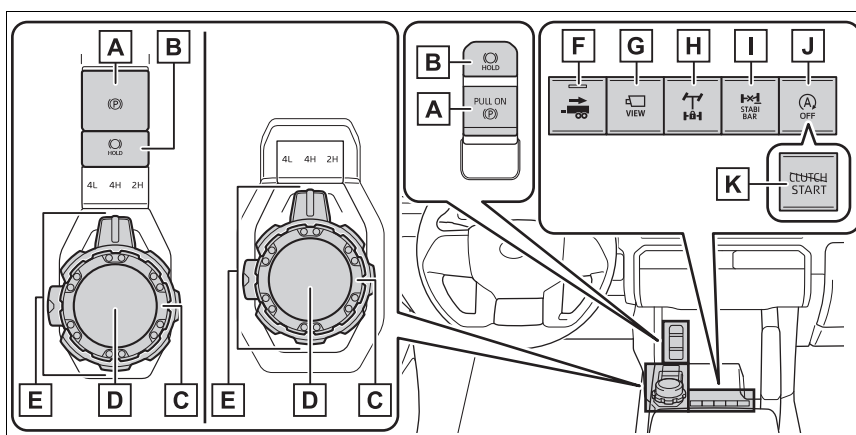


<b>A</b>	<b>Parking brake switch</b> .....	<b>P.223</b>
	Applying/releasing the parking brake .....	P.223
	Precautions for winter season .....	P.441
	Warning buzzer/messages .....	P.226, 577
<b>B</b>	<b>Brake hold switch</b> .....	<b>P.227</b>
<b>C</b>	<b>Mode select switch</b> * .....	<b>P.218, 404, 412, 415</b>
<b>D</b>	<b>Mode switch</b> *	
	“TOW HAUL” switch * .....	P.218
	“DRIVE MODE” switch * .....	P.404
	“MTS” (Multi-terrain Select) switch * .....	P.415
	“DAC/CRAWL” switch * .....	P.420
	“iMT” (Intelligent Manual Transmission) switch * .....	P.221
	“ECT PWR” switch * .....	P.219
<b>E</b>	<b>Front-wheel drive control switch</b> * .....	<b>P.406</b>
<b>F</b>	<b>Trailer Backup Guide switch</b> * .....	<b>P.432</b>
<b>G</b>	<b>Camera switch</b> * .....	<b>P.359</b>
<b>H</b>	<b>Rear differential lock switch</b> * .....	<b>P.410</b>
<b>I</b>	<b>SDM</b>	

(Stabilizer with Disconnection Mechanism) switch\* ..... P.428

**J** Stop & Start cancel switch ..... P.303

**K** “CLUTCH START” cancel switch ..... P.418

\*: If equipped

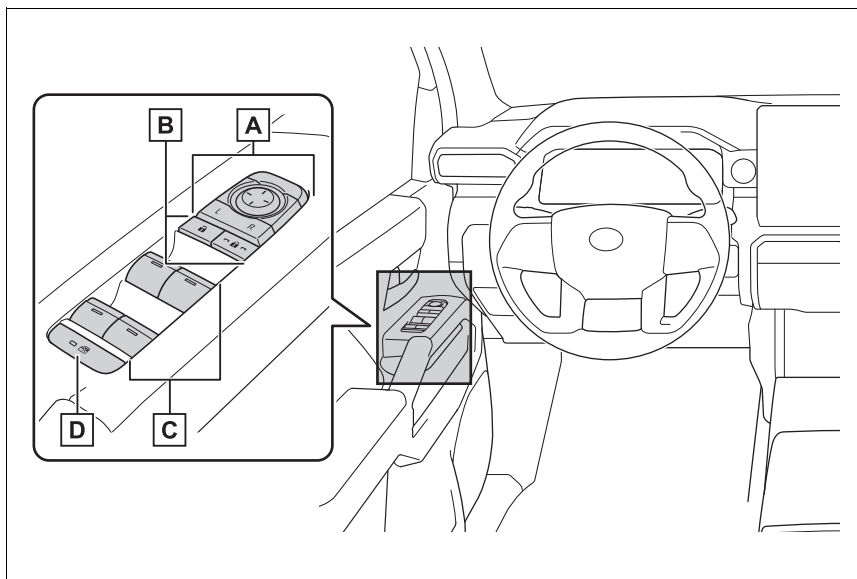


**A** Outside rear view mirror switches ..... P.171

**B** Door lock switches ..... P.133

**C** Power window switches ..... P.173


**D** Window lock switch ..... P.175

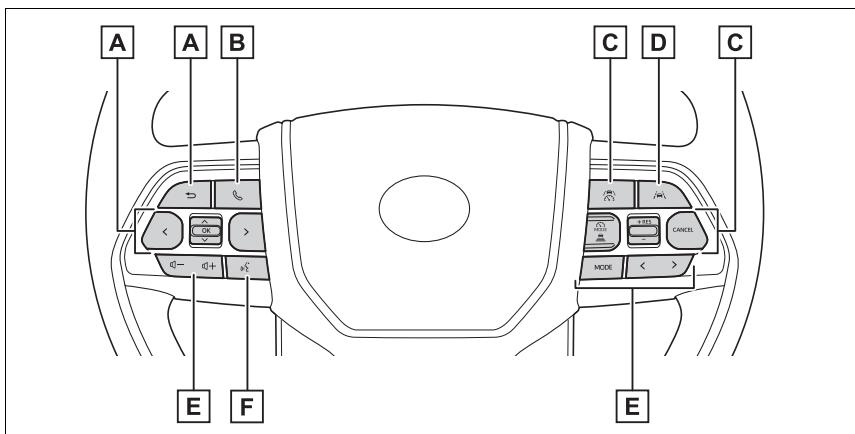

- A Meter control switches ..... P.99, 108**
- B Phone switch\***
- C Cruise control switches**
  - Dynamic radar cruise control ..... P.283
  - Cruise control ..... P.295
- D LTA (Lane Tracing Assist) switch ..... P.263**
- E Audio remote control switches\***
- F Talk switch\***


\*: Refer to "MULTIMEDIA OWNER'S MANUAL".

**Interior**

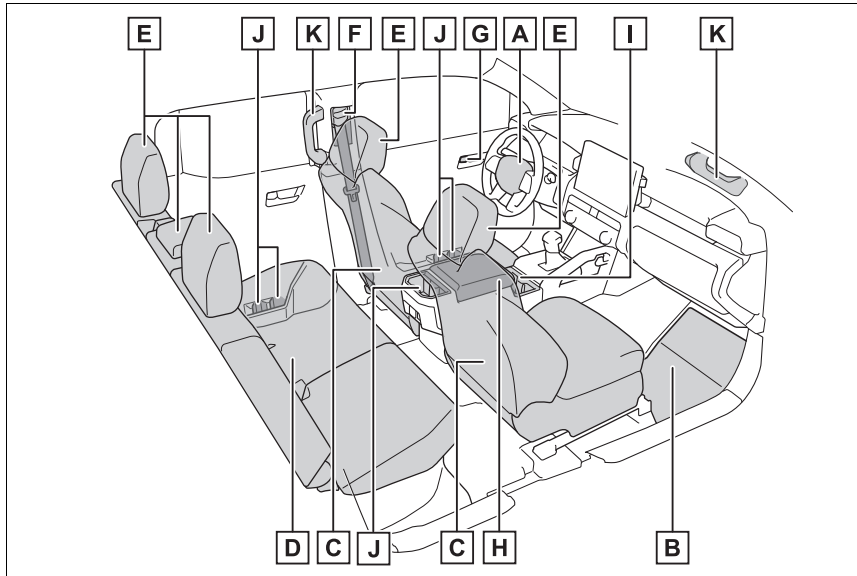

<b>A</b>	<b>SRS airbags</b> .....	<b>P.37</b>
<b>B</b>	<b>Floor mats</b> .....	<b>P.28</b>
<b>C</b>	<b>Front seats</b> .....	<b>P.152</b>
<b>D</b>	<b>Rear seats</b> * .....	<b>P.154</b>
<b>E</b>	<b>Head restraints</b> .....	<b>P.157</b>
<b>F</b>	<b>Seat belts</b> .....	<b>P.31</b>
<b>G</b>	<b>Inside lock buttons</b> .....	<b>P.133</b>
<b>H</b>	<b>Console box</b> .....	<b>P.463</b>
<b>I</b>	<b>Cup holders</b> .....	<b>P.462</b>
<b>J</b>	<b>Bottle holders</b> .....	<b>P.462</b>
<b>K</b>	<b>Assist grip</b> .....	<b>P.483</b>

\*: if equipped

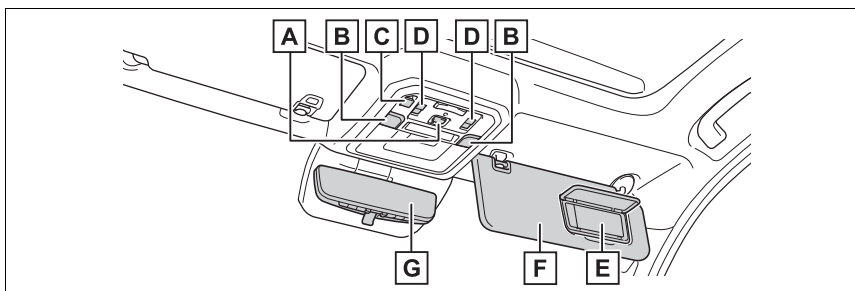

<b>A</b>	<b>“SOS” button *</b> .....	<b>P.70</b>
<b>B</b>	<b>Personal/interior lights</b> .....	<b>P.459</b>
<b>C</b>	<b>Power back window switch *</b> .....	<b>P.176</b>
<b>D</b>	<b>Moon roof switches *</b> .....	<b>P.177</b>
<b>E</b>	<b>Vanity mirrors *</b> .....	<b>P.490</b>
<b>F</b>	<b>Sun visors</b> .....	<b>P.490</b>
<b>G</b>	<b>Inside rear view mirror *</b> .....	<b>P.161</b>
	<b>Digital Rear-view Mirror *</b> .....	<b>P.162</b>

\*: If equipped

**For safety and security**

1

**1-1. For safe use**

- Before driving ..... 28
- For safe driving ..... 29
- Seat belts ..... 31
- SRS airbags ..... 37
- Front passenger occupant classification system .... 45
- Exhaust gas precautions 49

**1-2. Child safety**

- Riding with children ..... 51
- Child restraint systems... 52

**1-3. Emergency assistance**

- Safety Connect ..... 70

**1-4. Theft deterrent system**

- Engine immobilizer system ..... 75
- Alarm..... 76

1

For safety and security




### Before driving

**Observe the following before starting off in the vehicle to ensure safety of driving.**


### Installing floor mats

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

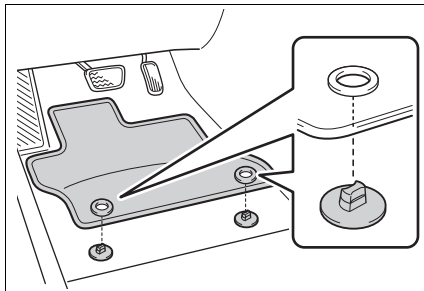

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

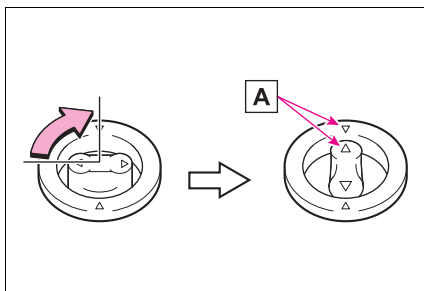

Always align the  $\triangle$  marks **A**.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.


### **⚠ WARNING**

Observe the following precautions. Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

- ? **When installing the driver's floor mat**
- ? Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- ? Only use floor mats designed for the driver's seat.
- ? Always install the floor mat securely using the retaining hooks (clips) provided.
- ? Do not use two or more floor mats on top of each other.
- ? Do not place the floor mat bottom-side up or upside-down.

**! WARNING****? Before driving**


- ? Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.

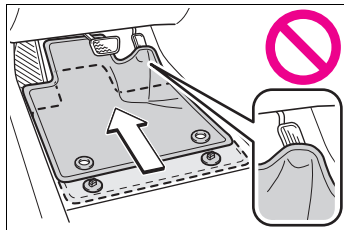

- ? With the engine stopped and the shift lever in P (automatic transmission) or N (manual transmission), fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

**For safe driving**

**For safe driving, adjust the seat and mirror to an appropriate position before driving.**

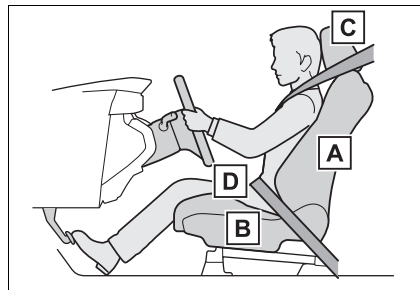**Correct driving posture**

- A** Adjust the angle of the seat-back so that you are sitting straight up and so that you do not have to lean forward to steer. (→P.152)
- B** Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P.152)
- C** Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P.157)
- D** Wear the seat belt correctly. (→P.31)

1

For safety and security

**⚠ WARNING****? For safe driving**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- ? Do not adjust the position of the driver's seat while driving. Doing so could cause the driver to lose control of the vehicle.
- ? Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- ? Do not place anything under the front seats. Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- ? Always observe the legal speed limit when driving on public roads.
- ? When driving over long distances, take regular breaks before you start to feel tired. Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

child becomes large enough to properly wear the vehicle's seat belt. (→P.52)

**Adjusting the mirrors**

Make sure that you can see rear of the vehicle clearly by adjusting the inside rear view mirror (if equipped), Digital Rear-view Mirror (if equipped) and outside rear view mirrors properly. (→P.161, 162, 171)

**Correct use of the seat belts**

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P.31)

Use a child restraint system appropriate for the child until the

## Seat belts


**Make sure that all occupants are wearing their seat belts before driving the vehicle.**

### WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident. Failure to do so may cause death or serious injury.

- ? **Wearing a seat belt**
- ? Ensure that all passengers wear a seat belt.
- ? Always wear a seat belt properly.
- ? Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- ? Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- ? To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- ? Do not wear the shoulder belt under your arm.
- ? Always wear your seat belt low and snug across your hips.

### ? Pregnant women

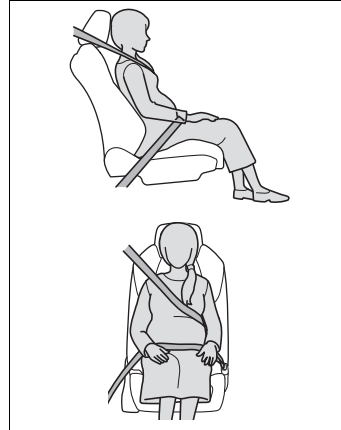

Obtain medical advice and wear the seat belt in the proper way. (→P.32)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

### ? People suffering illness

Obtain medical advice and wear the seat belt in the proper way. (→P.32)

### ? When children are in the vehicle


→P.68

### ? Seat belt damage and wear

- ? Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.

**⚠ WARNING**

- ? Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- ? Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Toyota dealer.
- ? Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- ? Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Toyota dealer. Inappropriate handling may lead to incorrect operation.

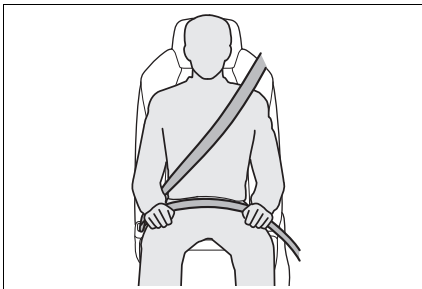**Correct use of the seat belts**

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.

- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.


**? Child seat belt usage**

The seat belts of your vehicle were principally designed for persons of adult size.

- ? Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P.52)
- ? When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P.31)

**? Seat belt extender**

If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Toyota dealer free of charge.

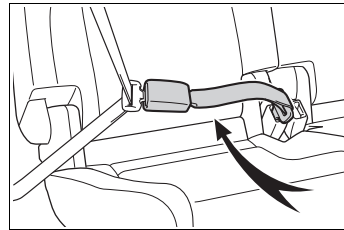**⚠ WARNING****? Using a seat belt extender**

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident. Failure to do so may cause death or serious injury.


**⚠ WARNING**

- ? Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- ? Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- ? The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.

**⚠ NOTICE****? When using a seat belt extender**

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.

This helps prevent damage to the vehicle interior and the extender itself.

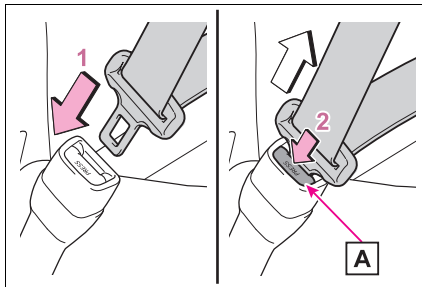**Fastening and releasing the seat belt (except for the rear center seat)**

- 1 To fasten the seat belt, push

the plate into the buckle until a click sound is heard.

- 2 To release the seat belt, press the release button **A**.

If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it.

**? Emergency locking retractor (ELR)**


The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

**? Automatic locking retractor (ALR)**

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. (→P.52)


**? After using the seat belts on the outboard rear seats**

Stow the seat belt buckle in the pockets.

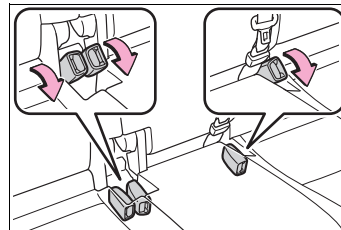


**Fastening the seat belt  
(for the rear center seat)  
[Vehicles with rear seats]**


- 1 Take out the plates.

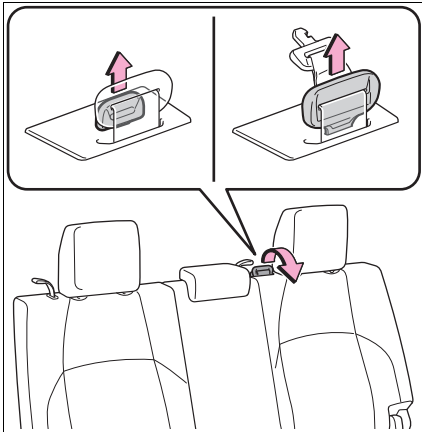

- 2 Push plate **A** into buckle **B** until a click sound is heard.

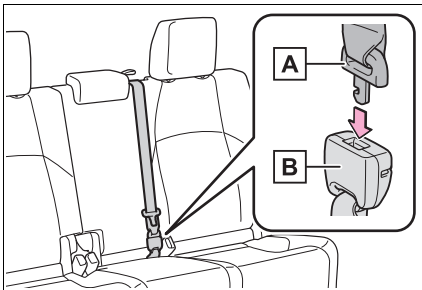


- 3 Push plate **C** into buckle **D** until a click sound is heard.

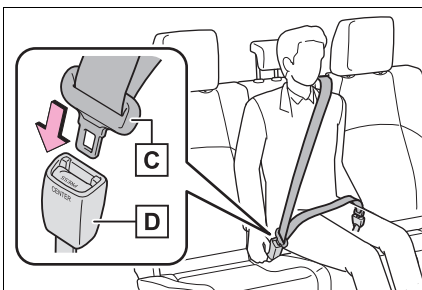

**! WARNING**


? When using the rear center seat belt

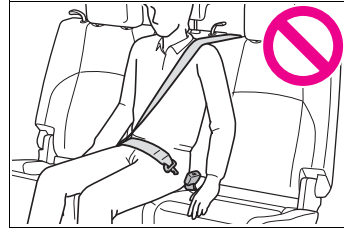

Do not use the rear center seat belt with either buckle released. Fastening only one of the buckles may result in death or serious injury in case of sudden braking or a collision.

**Releasing and stowing the seat belt (for the rear center seat) [Vehicles with rear seats]**


- 1 To release plate **C**, press the release button **E** on buckle **D**.

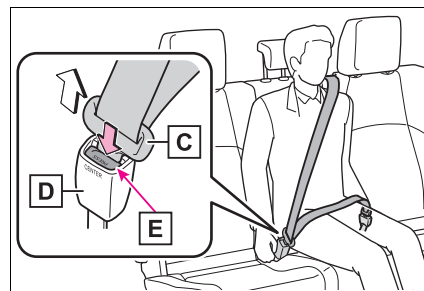

- 2 To release plate **A**, insert the mechanical key (→P.124) or plate **C** into the hole on buckle **B**.


Retract the belt slowly when releas-

ing and stowing the seat belt.

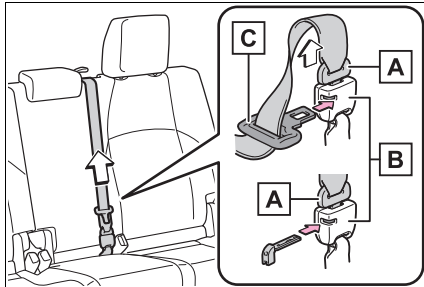


- 3 Stow the plate **C** and **A** in the holder.

In order to securely fix it, firmly insert it to the back.

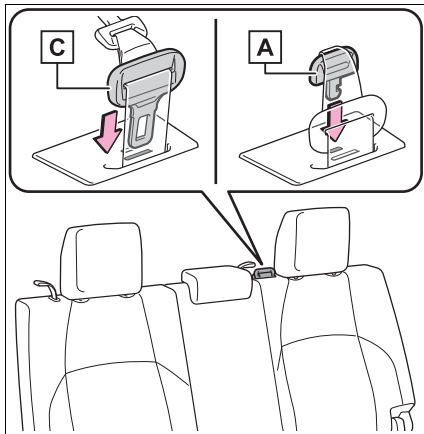

- 4 Stow the seat belt buckle in the pocket.

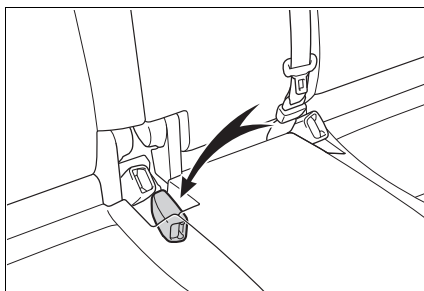


#### ? Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

#### ? Automatic locking retractor (ALR)

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. (→P.52)

### Adjusting the seat belt shoulder anchor height (front seats)

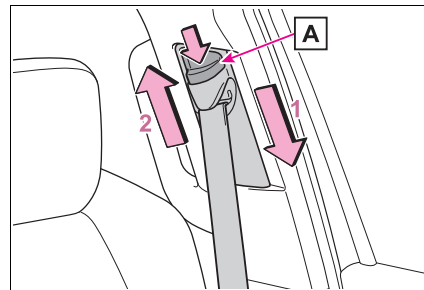

- 1 Push the seat belt shoulder anchor down while pressing the release button **A**.
- 2 Push the seat belt shoulder anchor up while pressing the release button **A**.

Move the height adjuster up and down as needed until you hear a click.



**⚠ WARNING****? Adjustable shoulder anchor**

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.

**Seat belt pretensioners**

- Vehicles without rear seats:  
When the vehicle is subjected to a severe frontal or side impact or rollover, the pretensioners retract the seat belts of the front seats to securely restrain the occupants. The pretensioners will not operate in minor frontal or side impacts, or rear impacts.
- Vehicles with rear seats:  
When the vehicle is subjected to a severe frontal or side impact or rollover, the pretensioners retract the seat belts of the front seats and rear outer seats to securely restrain the occupants. The pretensioners will not operate in minor frontal or side impacts, or rear impacts.

**? Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not

activate for the second or subsequent collisions.

**? PCS-linked control**

If the PCS (Pre-Collision System) determines that the possibility of a collision with a vehicle is high, the seat belt pretensioners will be prepared to operate.

**⚠ WARNING****? Seat belt pretensioners**

Observe the following precautions to reduce the risk of injury in the event of sudden braking or an accident.

Failure to do so may result in death or serious injury.


? Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the front passenger's seat may not operate in the event of a collision.

? If a pretensioner has operated, the SRS warning light will illuminate. In this situation, the seat belt cannot be used and must be replaced by your Toyota dealer.

## SRS airbags

The SRS airbags deploy when the vehicle is subjected to certain types of severe impact that may cause significant injury to the occupants. The airbags work together with the seat belts to help reduce the risk of death or serious injury.

### SRS airbag system

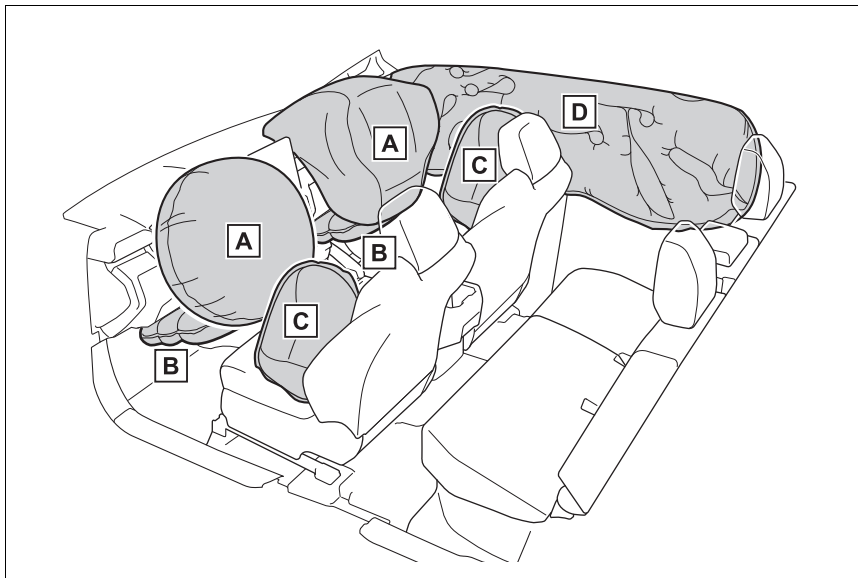

- A** SRS front airbags (SRS driver airbag/SRS front passenger airbag)  
Help reduce impact to the head and chest of the driver and front passenger
- B** SRS knee airbags  
Help reduce impact to the driver and front passenger
- C** SRS side airbags  
Help reduce impact to the chest of the occupants of the front seats
- D** SRS curtain shield airbags
  - Help reduce impact to the heads of the occupants of the front and rear outer seats
  - Can help prevent the occupants from being thrown from the vehicle in the event of a vehicle rollover

Your vehicle is equipped with ADVANCED AIRBAGS designed based on US motor vehicle safety standards (FMVSS208). The airbag sensor assembly (ECU) controls airbag deployment based on information obtained from the sensors, etc., shown in the system components diagram above. This information includes crash severity and occupant information. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

? **If the SRS airbags deploy (inflate)**

- ? Slight abrasions, burns, bruising, etc., may be sustained from SRS airbags, due to the extremely high speed of deployment (inflation) by hot gases.
- ? A loud noise and white powder will be emitted.
- ? Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the parts around the airbags may be hot for several minutes. The airbag itself may also be hot.
- ? The windshield may crack.
- ? All of the doors will be unlocked. (→P.131)
- ? The brakes and stop lights will be controlled automatically. (→P.423)
- ? The interior lights will turn on automatically. (→P.460)
- ? The emergency flashers will turn on automatically. (→P.562)
- ? Fuel supply to the engine will be stopped. (→P.570)

? **Emergency call**

- ? For Safety Connect subscribers, if any of the following situations occur, the system is designed to send an emergency call to the response center.
  - When an SRS airbag has been deployed
  - When a seat belt pretensioner has operated
  - When the vehicle received an

impact exceeding a certain level

Emergency services may be dispatched even if there is no response to calls from the agent.

? **The SRS airbags deploy in a frontal impact when**

- ? The following SRS airbags will deploy in the event of an impact that exceeds a threshold level (level of force corresponding to an approximately 12 - 18 mph [20 - 30 km/h] frontal collision with a fixed wall that does not move or deform):
  - SRS front airbags
  - SRS knee airbags
- ? The threshold level at which the SRS airbags will deploy will be higher than normal in the following situations:
  - When the vehicle collides with an object, such as a parked vehicle or sign pole, which moves or deforms on impact
  - If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck
- ? Depending on the type of collision, only the following may deploy:
  - Seat belt pretensioners
- ? The SRS airbags for the front passenger's seat will not deploy if there is no passenger in the front passenger seat. However, the SRS airbags for the front passenger's seat may deploy, even if the seat is unoccupied, if luggage is put on the seat.

? In the event of an especially severe frontal collision, the left and right SRS curtain shield airbags may also deploy.

? **The SRS airbags deploy in a side impact when**

? The following SRS airbags will deploy in the event of an impact that exceeds the set threshold level (level of force corresponding to the impact force produced by an approximately 3300 lb. [1500 kg] vehicle colliding with the passenger compartment at a perpendicular angle at an approximate speed of 12 - 18 mph [20 - 30 km/h]):

- SRS side airbags
- SRS curtain shield airbags


? If the vehicle is involved in a rollover, the following SRS airbags will deploy:

- Both left and right SRS curtain shield airbags

? **The SRS airbags deploy in an underside impact when**


? The following airbags may deploy if the underside of the vehicle collides with a hard object:

- SRS front airbags
- SRS knee airbags
- SRS side airbags
- SRS curtain shield airbags

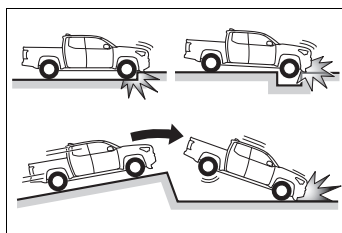

? The following airbags may deploy if the vehicle becomes significantly tilted or is strongly impacted by skidding into a curb, etc.:


- SRS curtain shield airbags

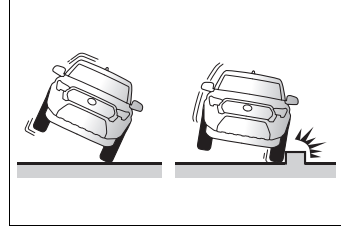

? **The SRS airbags will not deploy when**


? The following SRS airbags will not normally deploy in side or rear collisions, vehicle rollovers, or low speed frontal collisions. However, if such a collision causes sufficient sudden deceleration, the SRS airbags may deploy.

- SRS front airbags
- SRS knee airbags

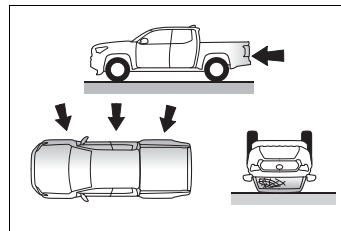


? The following SRS airbags may not deploy if the vehicle is collided with at a certain angle or in a side collision where an area of the vehicle other than the passenger compartment is collided with:

- SRS side airbags
- SRS curtain shield airbags

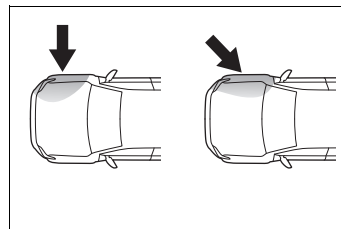


? The following SRS airbags will not normally deploy in front or rear collisions, vehicle rollovers, or low speed side collisions:

- SRS side airbags

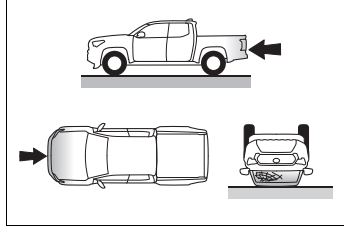


- ? The following SRS airbags will not normally deploy in rear collisions, end over end vehicle rollovers, or low speed front or side collisions:
- SRS curtain shield airbags

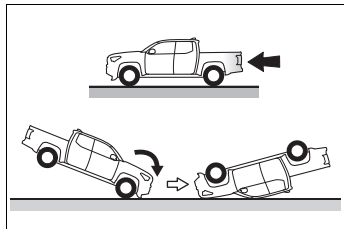

? **When to contact your Toyota dealer**

In the following situations, the vehicle will require inspection and/or repair. Contact your Toyota dealer as soon as possible.


- ? When any of the SRS airbags have been deployed
- ? When the front of the vehicle is damaged or deformed, or was involved in a collision that was not severe enough to cause any of the following SRS airbags to deploy:
  - SRS front airbags
  - SRS knee airbags

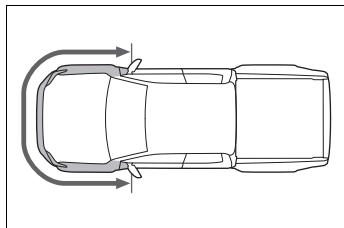

- ? When a door or its surrounding area is damaged, deformed or has had a hole made in it, or was

involved in a collision that was not severe enough to cause any of the following SRS airbags to deploy:

- SRS side airbags
- SRS curtain shield airbags

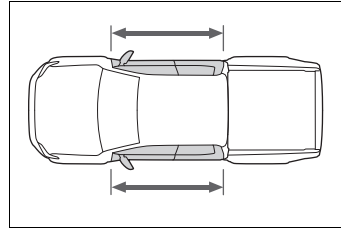

- ? When the pad section of the steering wheel, the dashboard near the front passenger SRS airbag or the lower side of the instrument panel is scratched, cracked, or otherwise damaged.
- ? When the surface of a seat with an SRS side airbag is scratched, cracked, or otherwise damaged.
- ? When the part of a front pillar, rear pillar or roof side rail garnish (padding) which covers a SRS curtain shield airbag is scratched, cracked, or otherwise damaged.

**! WARNING**

? **SRS airbag precautions**

Observe the following precautions. Failure to do so may result in death or serious injury.

- ? The driver and all passengers must wear their seat belts correctly. The SRS airbags are supplemental devices to be used with the seat belts.

**⚠ WARNING**

? The SRS driver airbag deploys with considerable force, and can cause death or serious injury, especially if the driver is very close to the airbag. The National Highway Traffic Safety Administration (NHTSA) advises:

Since the risk zone for the driver's airbag is the first 2 - 3 in. (50 - 75 mm) of inflation, placing yourself 10 in. (250 mm) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If your current driving position places you less than 10 in. (250 mm) away from the driver airbag, you can change your driving position in several ways:


- Move your seat to the rear as far as possible while still being able to reach the pedals comfortably.
- Slightly recline the seatback. Although vehicle designs vary, many drivers can achieve the 10 in. (250 mm) distance, even with the driver seat all the way forward, simply by reclining the seatback somewhat. If reclining the seatback makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.

- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck. The seat should be adjusted as recommended by the NHTSA, while still being able to control the vehicle with the pedals and steering wheel, and maintaining your view of the instrument panel controls.

? Vehicles with double cab models: If a seat belt extender has been connected to the driver's seat belt buckle but the latch plate of the driver's seat belt has not been fastened to the seat belt extender, the SRS airbag system will judge that the driver is wearing the seat belt even though the seat belt has not been fastened. In this case, the SRS front airbags for the driver may not deploy correctly in a collision, resulting in death or serious injury. Be sure to wear the seat belt correctly when using a seat belt extender.

**⚠ WARNING**


- ? Vehicles without double cab models: If a seat belt extender has been connected to a front seat belt buckle but the latch plate of the seat belt has not been fastened to the seat belt extender, the SRS airbag system will judge that the occupant is wearing the seat belt even though the seat belt has not been fastened. In this case, the SRS front airbags may not deploy correctly in a collision, resulting in death or serious injury. Be sure to wear the seat belt correctly when using a seat belt extender.

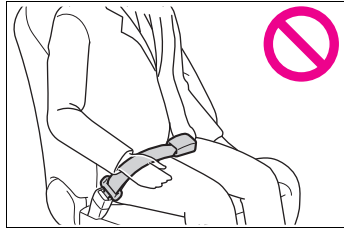


- ? The SRS front passenger airbag deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be positioned as far possible from the airbag with the seatback adjusted, so that the passenger is sat upright.

- ? Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P.52)

- ? Do not sit on the edge of the seat or lean against the dashboard.

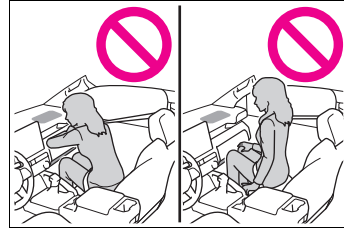

- ? Do not allow a child to stand in front of the SRS front passenger airbag or sit on the lap of a front passenger.

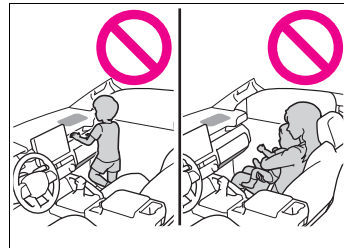


- ? Front seat occupants should never hold items on their lap.

**! WARNING**


- ? Do not lean against the door, roof side rail, or front, side, or rear pillar.




- ? Do not allow anyone to kneel on a seat toward the door or put their head or hands outside the vehicle.

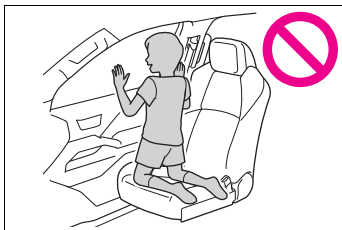

- ? Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.

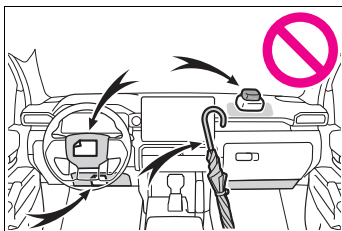

- ? Do not attach anything to areas such as the doors, windshield, side windows, front or rear pillars, roof side rails and assist grips.

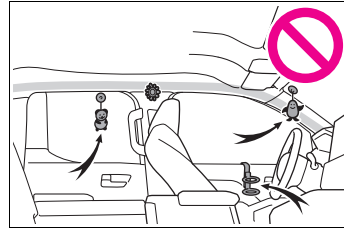

- ? Do not hang coat hangers or other hard objects on the coat hooks. These items could become projectiles if the SRS curtain shield airbags deploy, possibly leading to death or serious injury.

- ? If a vinyl cover is attached to the area where the SRS knee airbag deploys, be sure to remove it.

- ? Do not use seat accessories which cover the parts from which the SRS airbags deploy, as they may interfere with inflation of the SRS airbags. Such accessories may prevent the SRS airbags from deploying correctly, may disable the system or cause the SRS airbags to inflate unintentionally, possibly resulting in death or serious injury.

- ? Do not strike or apply significant force to the SRS airbag system components, front doors or their surrounding area. Doing so may cause the SRS airbags to malfunction.

- ? Do not touch any components of the SRS airbags immediately after the SRS airbags have deployed (inflated) as they may be hot.



**WARNING**

? If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.

? If a part where an SRS airbag is stored is damaged or cracked, have it replaced by your Toyota dealer.

? Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the SRS front airbags for the front passenger's seat may not deploy in the event of a collision.

? **Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting your Toyota dealer. The SRS airbags may malfunction or deploy unintentionally, possibly leading to death or serious injury.

? Removal, installation, disassembly or repair of the SRS airbags

? Repair, removal or modification of the following parts or their surrounding

- Steering wheel
- Instrument panel
- Dashboard
- Seats

- Seat upholstery

- Front pillars

- Side pillars

- Rear pillars

- Roof side rails

- Front door panels

- Front door trim

- Front door speakers

? Modifications to the front door panels (such as making holes in them)

? Repair or modification of the following parts or their surrounding

- Front fender

- Front bumper

- Sides of the vehicle interior

? Installation of the following parts or accessories

- Bull bars or kangaroo bars

- Snow plows

- Winches

- Roof luggage carriers

? Modifications to the vehicle's suspension

? Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players


? Modifications to your vehicle for a persons with a physical disability

## Front passenger occupant classification system

Your vehicle is equipped with a front passenger occupant classification system. This system detects the conditions of the front passenger seat and activates or deactivates the following SRS airbags.

- SRS front passenger airbag
- SRS front passenger knee airbag

### System components

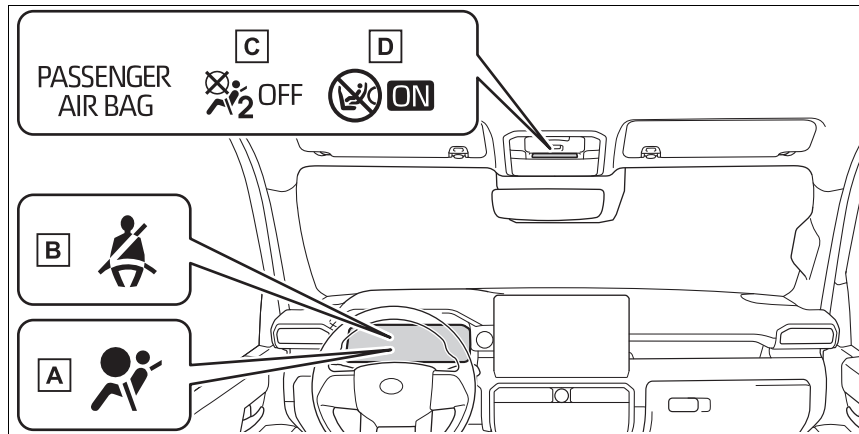

- A** SRS warning light
- B** Front passenger's seat belt reminder light
- C** "AIR BAG OFF" indicator light
- D** "AIR BAG ON" indicator light

**Front passenger occupant classification system conditions and operation**

? **Adult\*1**

Indicators/warning lights	“AIR BAG ON” and “AIR BAG OFF” indicator lights	“AIR BAG ON”
	SRS warning light	Off
	Front passenger’s seat belt reminder light	Off*2 or flashing*3
Devices	Front passenger airbag	Activated
	Front passenger knee airbag	

? **Child\*4**

Indicators/warning lights	“AIR BAG ON” and “AIR BAG OFF” indicator lights	“AIR BAG OFF” or “AIR BAG ON”*4
	SRS warning light	Off
	Front passenger’s seat belt reminder light	Off*2 or flashing*3
Devices	Front passenger airbag	Deactivated or activated*4
	Front passenger knee airbag	

? **Child restraint system with infant\*5**

Indicators/warning lights	“AIR BAG ON” and “AIR BAG OFF” indicator lights	“AIR BAG OFF”*6
	SRS warning light	Off
	Front passenger’s seat belt reminder light	Off*2 or flashing*3
Devices	Front passenger airbag	Deactivated
	Front passenger knee airbag	

? **Unoccupied**

Indicators/warning lights	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF"
	SRS warning light	Off
	Front passenger's seat belt reminder light	
Devices	Front passenger airbag	Deactivated
	Front passenger knee airbag	

? **System malfunction**

Indicators/warning lights	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF"
	SRS warning light	On
	Front passenger's seat belt reminder light	
Devices	Front passenger airbag	Deactivated
	Front passenger knee airbag	

\*1: The system judges a person of adult size as an adult. When a smaller adult sits in the front passenger seat, the system may not recognize them as an adult depending on their physique and posture.

\*2: In the event the front passenger is wearing a seat belt

\*3: In the event the front passenger does not wear a seat belt

\*4: For some children, child in seat, child in booster seat or child in convertible seat, the system may not recognize them as a child. Factors which may affect this can be the physique or posture.

\*5: Never install a rear-facing child restraint system on the front passenger seat. A forward-facing child restraint system should only be installed on the front passenger seat when it is unavoidable. (→P.52)

\*6: In case the indicator light is not illuminated, consult this manual on how to install the child restraint system properly. (→P.54)

**WARNING****? Front passenger occupant classification system precautions**

Observe the following precautions regarding the front passenger occupant classification system. Failure to do so may cause death or serious injury.

- ? Wear the seat belt properly.
- ? Make sure the front passenger's seat belt plate has not been left inserted into the buckle before someone sits in the front passenger seat.
- ? Make sure the "AIR BAG OFF" indicator light is not illuminated when using the seat belt extender for the front passenger seat. If the "AIR BAG OFF" indicator light is illuminated, disconnect the extender tongue from the seat belt buckle, and reconnect the seat belt. Reconnect the seat belt extender after making sure the "AIR BAG ON" indicator light is illuminated. If you use the seat belt extender while the "AIR BAG OFF" indicator light is illuminated, the SRS airbags for the front passenger will not activate, which could cause death or serious injury in the event of a collision.
- ? Do not apply a heavy load to the front passenger seat or equipment (e.g. seatback pocket).
- ? Do not put weight on the front passenger seat by putting your hands or feet on the front passenger seat seatback from the rear passenger seat.
- ? Do not let a rear passenger lift the front passenger seat with their feet or press on the seatback with their legs.

- ? Do not put objects under the front passenger seat.
- ? Do not recline the front passenger seatback so far that it touches a rear seat. This may cause the "AIR BAG OFF" indicator light to be illuminated, which indicates that the SRS airbags for the front passenger will not activate in the event of a severe accident. If the seatback touches the rear seat, return the seatback to a position where it does not touch the rear seat. Keep the front passenger seatback as upright as possible when the vehicle is moving. Reclining the seatback excessively may lessen the effectiveness of the seat belt system.
- ? If an adult sits in the front passenger seat, the "AIR BAG ON" indicator light is illuminated. If the "AIR BAG OFF" indicator is illuminated, ask the passenger to sit up straight, well back in the seat, feet on the floor, and with the seat belt worn correctly. If the "AIR BAG OFF" indicator still remains illuminated, either ask the passenger to move to the rear seat, or if that is not possible, move the front passenger seat fully rearward.
- ? When it is unavoidable to install a forward-facing child restraint system on the front passenger seat, install the child restraint system on the front passenger seat in the proper order. (→P.54)
- ? Do not modify or remove the front seats.

**⚠ WARNING**

- ? Do not kick the front passenger seat or subject it to severe impact. Otherwise, the SRS warning light may come on to indicate a malfunction of the front passenger occupant classification system. In this case, contact your Toyota dealer immediately.
- ? Child restraint systems installed on the rear seat should not contact the front seatbacks.
- ? Do not use a seat accessory, such as a cushion and seat cover, that covers the seat cushion surface.
- ? Do not modify or replace the upholstery of the front seat.

**Exhaust gas precautions****Harmful substance to the human body is included in exhaust gases if inhaled.****⚠ WARNING**

Exhaust gases contain harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions. Failure to do so may cause exhaust gases to enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

**? Important points while driving**

- ? Vehicles with a power back window: Keep the back window closed.
- ? If you smell exhaust gases in the vehicle even when the back window (vehicles with a power back window) is closed, open the windows and have the vehicle inspected at your Toyota dealer as soon as possible.

**? When parking**

- ? If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.
- ? Do not leave the vehicle with the engine running for a long time.  
If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.

1

For safety and security

**WARNING**

? Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

? **Exhaust pipe**

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Toyota dealer.

## Riding with children

**Observe the following precautions when children are in the vehicle.**

**Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.**

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch, etc.
- Use the rear door child-protector lock (if equipped) or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P.133, 175)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, tailgate, seats, etc.

### **WARNING**

#### ? **When children are in the vehicle**

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

1

For safety and security



## Child restraint systems

**Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.**

Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.

### Table of contents

Points to remember: P.52

Child restraint system: P.54

When using a child restraint system: P.55

Child restraint system installation method

- Using an anchor bracket (for top tether strap): P.57, 59
- Fixed with a child restraint LATCH anchor: P.62
- Fixed with a seat belt: P.64

### Points to remember

The laws of all 50 states of the U.S.A. as well as Canada now require the use of child restraint systems.

- Prioritize and observe the warnings, as well as the laws and regulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.

### WARNING

#### ? When a child is riding

Observe the following precautions.

Failure to do so may result in death or serious injury.

? For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instruction is provided in this manual.

? Vehicles without rear seats: Toyota strongly urges the use of a proper child restraint system that conforms to the size of the child.

 **WARNING**


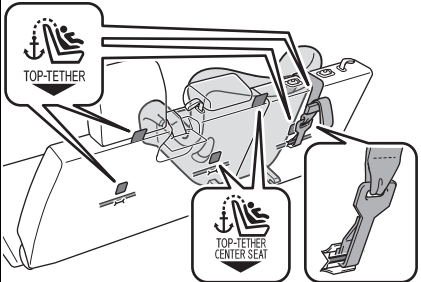
- ? Vehicles with rear seats: Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- ? Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.
- ? **Handling the child restraint system**



If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.
- ? If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- ? Make sure you have complied with all installation instructions provided with the child restraint system manufacturer and that the system is properly secured.
- ? Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- ? If it is necessary to detach the child restraint system, remove it from the vehicle.

**Child restraint system**

? **Types of child restraint system installation methods**

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

	Installation method	Page
<p>Anchor brackets (for top tether strap) attachment<sup>*1</sup></p>		<p>P.57</p>
<p>Anchor brackets (for top tether strap) attachment<sup>*2</sup></p>		<p>P.59</p>

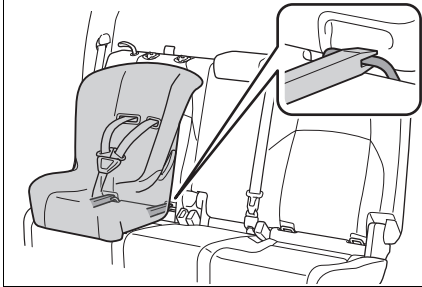	Installation method	Page
Child restraint LATCH anchors attachment* <sup>2</sup>		P.62
Seat belt attachment		P.64

\*1: Vehicles without rear seats

\*2: Vehicles with rear seats

### When using a child restraint system


#### ? When installing a child restraint system to a front passenger seat

For the safety of a child, install child restraint systems to a rear seats. When installing child restraint system to a front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system.

- Move the front seat fully rearward.
- Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

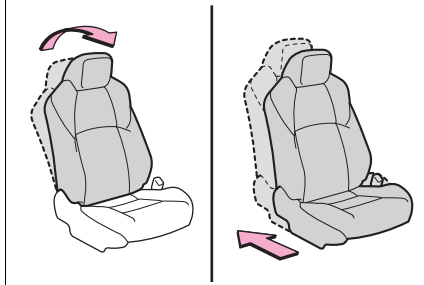

**⚠ WARNING**

**? When using a child restraint system**

Observe the following precautions.


Failure to do so may result in death or serious injury.

? Never install a rear-facing child restraint system on the front passenger seat even if the "AIR BAG OFF" indicator light is illuminated. In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.

? Vehicles without rear seats: A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. Adjust the seatback as upright as possible and always move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.


? Vehicles with rear seats: A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat.

? A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. When installing a forward-facing child restraint system on the front passenger seat, adjust the seatback angle to the most upright position, move the seat to the rearmost position, and raise the seat to the upper most position, even if the "AIR BAG OFF" indicator light is illuminated. If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. If the head restraint cannot be removed, raise it to the uppermost position.

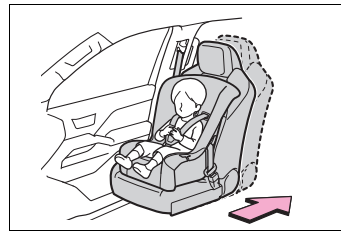


**⚠ WARNING**

- ? Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.

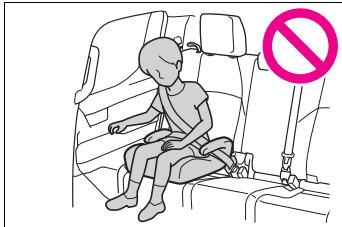

- ? When a booster seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- ? Use child restraint system suitable to the age and size of the child and install it to the rear seat.

- ? Vehicles with rear seats: If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat.

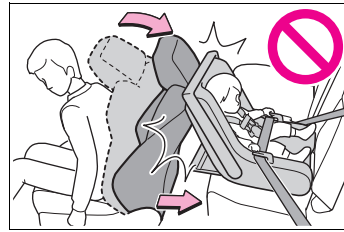


- ? Vehicles with rear seats: Adjust the front passenger seat so that it does not interfere with the child restraint system.

### Using an anchor bracket (for top tether strap) [vehicles without rear seats]

- ? **Anchor brackets (for top tether strap)**

Anchor brackets are provided for passenger seat.

Use anchor brackets when fixing the top tether strap.

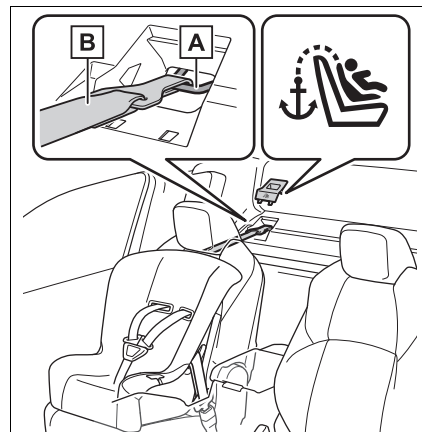


**A** Anchor brackets

**B** Top tether strap

? **Fixing the top tether strap to the anchor bracket**


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

- 1 Remove the head restraint. (→P.158)

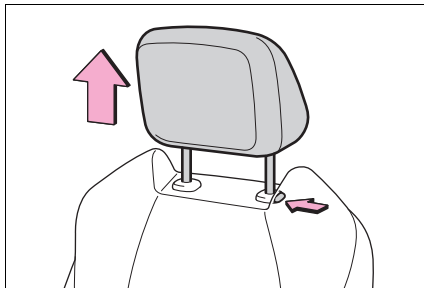

- 2 Remove the anchor bracket cover.

Store the removed cover in a safe place such as the glove box.

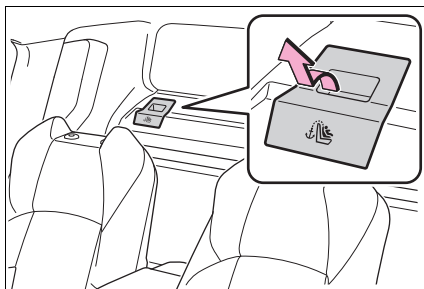


- 3 Place the child restraint system on the seat facing the front of the vehicle.
- 4 Secure the child restraint system using the seat belt.

- 5 Latch the hook onto the anchor bracket and tighten the top tether strap.

Make sure the top tether strap is securely latched.



- 6 If the head restraint does not interfere with the child restraint system installation, install the head restraint.

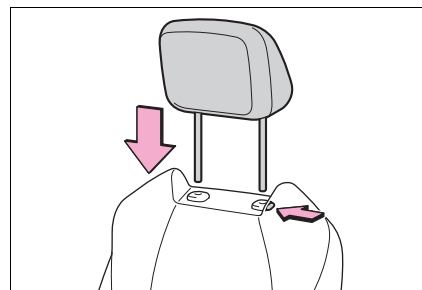

? **Laws and regulations pertaining to anchors**

The LATCH system conforms to FMVSS225 or CMVSS210.2. Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used. This vehicle is designed to conform to SAE J1819.

**⚠ WARNING****? When installing a child restraint system**



Observe the following precautions. Failure to do so may result in death or serious injury.

- ? Firmly attach the top tether strap and make sure that the belt is not twisted.
- ? Do not attach the top tether strap to anything other than the anchor bracket.
- ? Follow all installation instructions provided by the child restraint system manufacturer.
- ? When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the anchor bracket has been fixed, do not lower the head restraint.
- ? If the seat is adjusted, reconfirm the security of the child restraint system.

**Using an anchor bracket  
(for top tether strap)  
[Vehicles with rear seats]**
**? Anchor brackets (for top tether strap)**

Anchor brackets are provided for each rear seat.

Use anchor brackets when fixing the top tether strap.

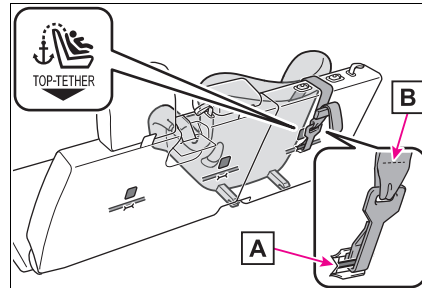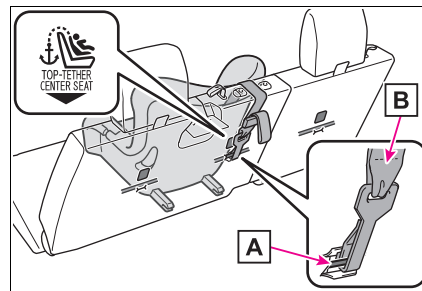
**▶ Outboard rear seats****A** Anchor brackets**B** Top tether strap**▶ Rear center seat****A** Anchor bracket**B** Top tether strap**? Fixing the top tether strap to the anchor bracket**

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.





► Outboard rear seats

- 1 Remove the head restraint. (→P.159)

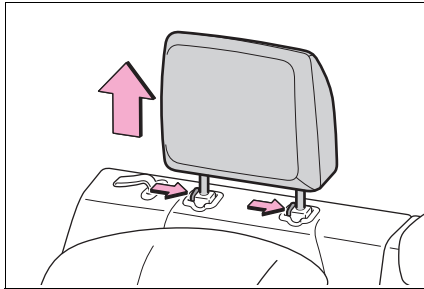

- 2 Place the child restraint system on the seat facing the front of the vehicle.
- 3 Latch the hook onto the anchor bracket.

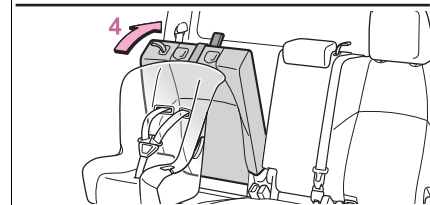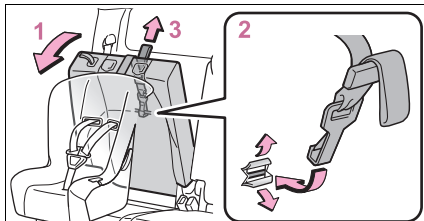


- 1 Swing the seatback forward slightly. (→P.154)
- 2 Latch the hook onto the anchor bracket.
- 3 Fix the top tether strap so that there is no slack.
- 4 Return the seatback.
- 4 Secure the child restraint system using the seat belt

(→P.65) and then tighten the top tether strap.

Make sure the top tether strap is securely latched.


- 5 If the head restraint does not interfere with the child restraint system installation, install the head restraint.

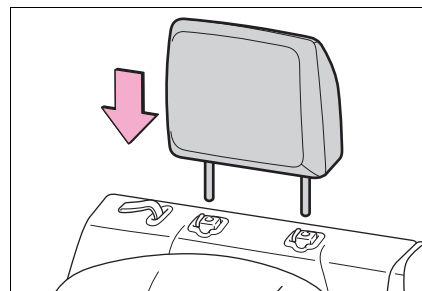

► Rear center seat


- 1 Adjust the head restraint to the utmost position.

If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. (→P.159)

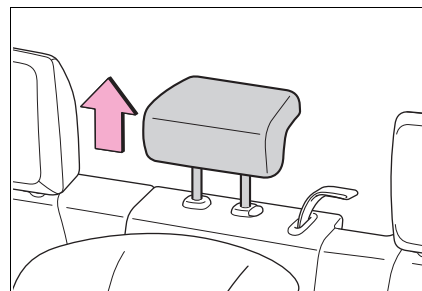

- 2 Place the child restraint system on the seat facing the front of the vehicle.

- 3 Latch the hook onto the anchor bracket.

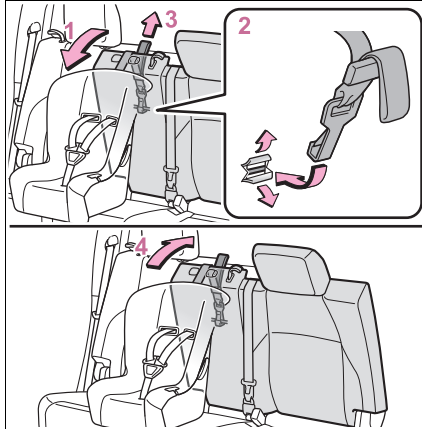


- 1 Swing the seatback forward slightly. (→P.154)
- 2 Latch the hook onto the anchor bracket.
- 3 Fix the top tether strap so that there is no slack.
- 4 Return the seatback.
- 4 Secure the child restraint system using the seat belt (→P.65) and then tighten the top tether strap.

Make sure the top tether strap is securely latched.

When installing the child restraint system with the head restraint being raised, be sure to have the top tether strap pass underneath the head restraint.

- 5 If the head restraint does not interfere with the child

restraint system installation, install the head restraint.

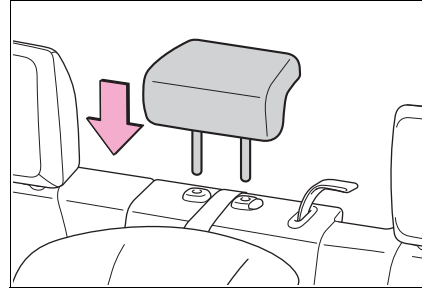

#### ? Laws and regulations pertaining to anchors

The LATCH system conforms to FMVSS225 or CMVSS210.2. Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used. This vehicle is designed to conform to SAE J1819.

#### ! WARNING

##### ? When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- ? Firmly attach the top tether strap and make sure that the belt is not twisted.
- ? Do not attach the top tether strap to anything other than the anchor bracket.
- ? Follow all installation instructions provided by the child restraint system manufacturer.
- ? Rear center seat: When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the anchor bracket has been fixed, do not lower the head restraint.


**⚠ WARNING**

? If the seat is adjusted, reconfirm the security of the child restraint system.

**Child restraint system fixed with a child restraint LATCH anchor [Vehicles with rear seats]**

? **Child restraint LATCH anchors**

LATCH anchors are provided for the outboard rear seat.

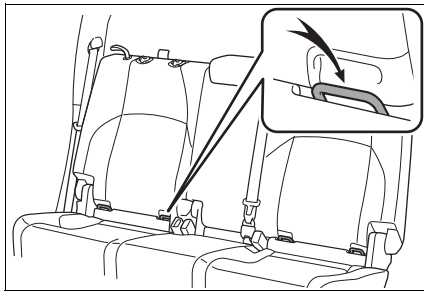


? **When installing in the rear outboard seats**

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint has a top tether strap, install the top tether strap before installing the child restraint system, and then install the child restraint system.


(→P.59)

- 1 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. (→P.159)

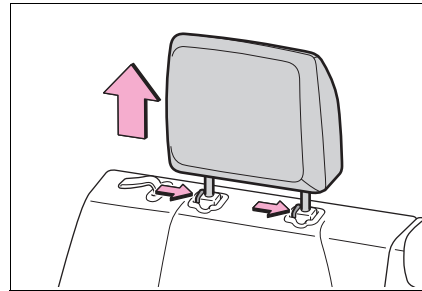


- 2 Widen the gap between the seat cushion and seatback slightly.

- ▶ With flexible lower attachments
- 3 Latch the hooks of the lower attachments onto the LATCH anchors.  
For owners in Canada:  
The symbol on a child restraint system indicates **A** the presence of a lower connector system.

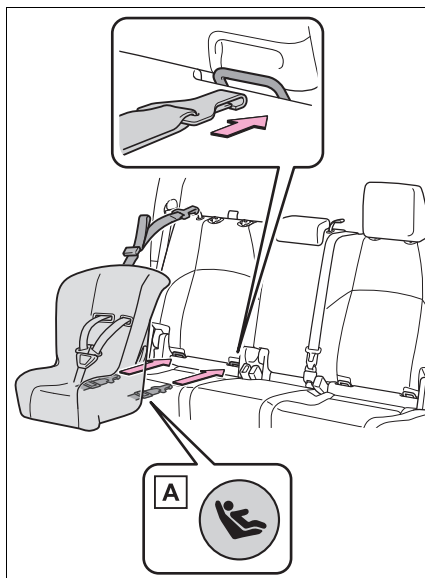

**A** Canada only

- ▶ With rigid lower attachments
- 3 Latch the buckles onto the LATCH anchors.  
For owners in Canada:  
The symbol on a child restraint system indicates **A** the presence of a lower connector system.

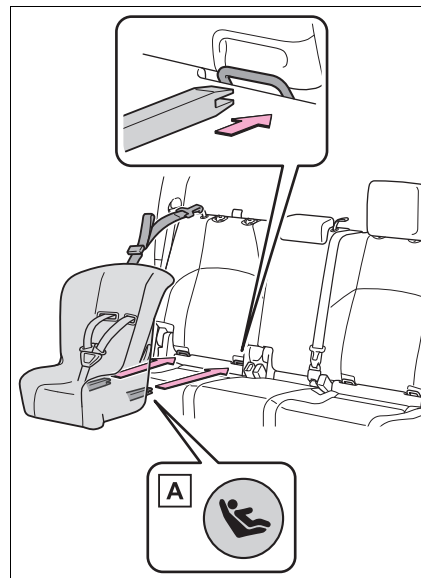

**A** Canada only

- 4 If the child restraint has a top tether strap, tighten the top tether strap. (→P.59)
- 5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.68)

? **When installing in the rear center seat (vehicles with rear seats)**

There are no LATCH anchors behind the rear center seat. However, the inboard LATCH anchors of the outboard seats, which are 19.0 in. (510 mm) apart, can be used if the child restraint system manufacturer's instructions permit use of those anchors with the anchor spacing stated.

Child restraint systems with rigid lower attachments cannot be installed in the center seat. This type of child restraint system can only be installed in the outboard seat.

? **Laws and regulations pertaining to anchors**

The LATCH system conforms to FMVSS225 or CMVSS210.2. Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used. This vehicle is designed to conform to SAE J1819.

 **WARNING**

? **When installing a child restraint system**

Observe the following precautions. Failure to do so may result in death or serious injury.

? When using the LATCH anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system.

? Follow all installation instructions provided by the child restraint system manufacturer.

? Child restraint systems cannot be installed in the rear center seat. Do not install the child restraint system in the rear center seat using the LATCH anchors.

? Never attach two child restraint system attachments to the same anchor. In a collision, one anchor may not be strong enough to hold two child restraint system attachments and may break. If the LATCH anchors are already in use, use the seat belt to install a child restraint system in the center seat.

? When securing some types of child restraint systems in rear seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

? If the seat is adjusted, reconfirm the security of the child restraint system.

**Child restraint system fixed with a seat belt**


A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt.

? **Installing child restraint system using a seat belt (child restraint lock function belt)**


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

? **Rear-facing — Infant seat/convertible seat**

- 1 Place the child restraint system on the rear seat facing the rear of the vehicle.

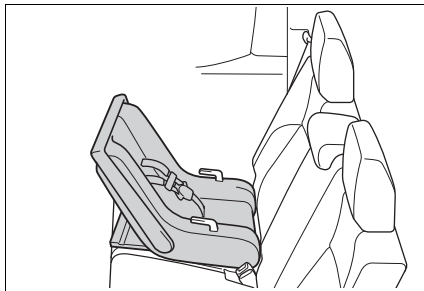


- 2 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

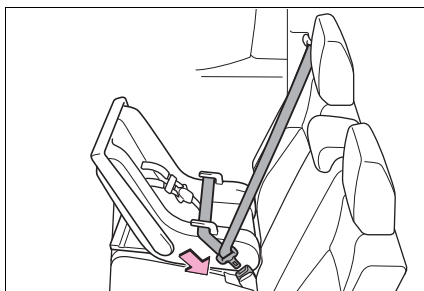


- 3 Fully extend the shoulder belt and allow it to retract to put it

in lock mode. In lock mode, the belt cannot be extended.

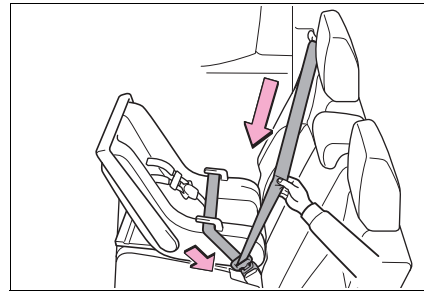

- 4 While pushing the child restraint system down into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

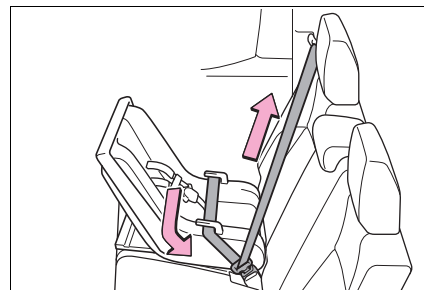

- 5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.68)

? **Forward-facing — Convertible seat**

Before installing the child restraint to the rear seat:


If the child restraint has a top tether strap, install the top tether

strap, and then install the child restraint system. (→P.59) Also, follow the child restraint manufacturer's operation manual regarding the installation.

1 Adjust the seat.

When using the front passenger seat: If installing the child restraint system to the front passenger seat is unavoidable, refer to P.55 for front passenger seat adjustment.

- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. (→P.158)

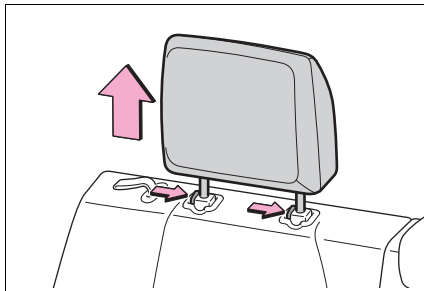


- 3 Place the child restraint system on the seat facing the front of the vehicle.




- 4 Run the seat belt through the child restraint system and insert the plate into the

buckle. Make sure that the belt is not twisted.

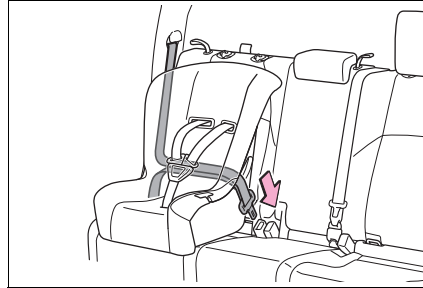


- 5 Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.

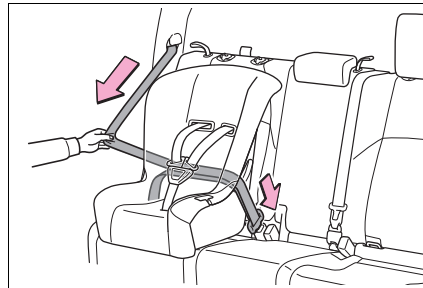

- 6 While pushing the child restraint system into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to


check that it cannot be extended.

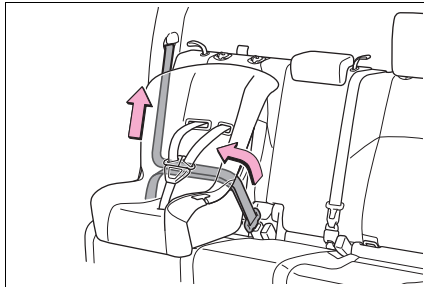

- 7 If the child restraint has a top tether strap, tighten the top tether strap. (→P.59)
- 8 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.68)


? **Booster seat**

- 1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P.55 for front passenger seat adjustment.
- 2 High back type: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. (→P.158)

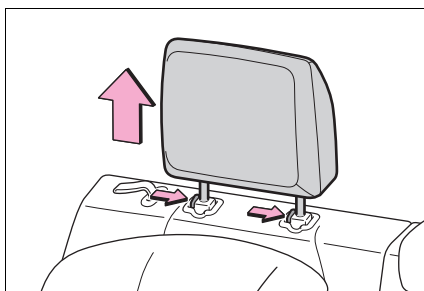


- 3 Place the child restraint system on the seat facing the front of the vehicle.

► **Booster type**

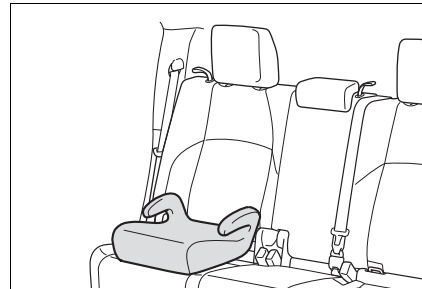



► **High back type**

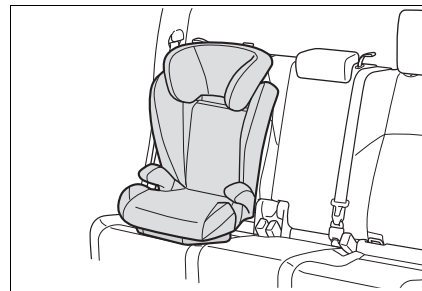



- 4 Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

Check that the shoulder belt is correctly positioned over the child's shoulder and that the lap belt is as low as possible. (→P.31)

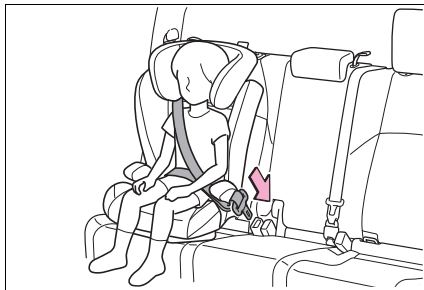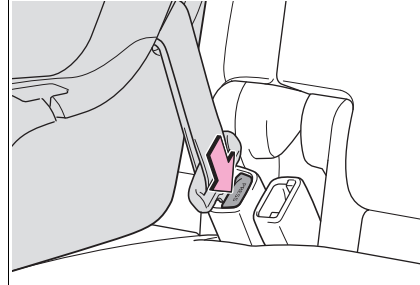

? **Removing a child restraint system installed with a seat belt**

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

**! WARNING**

? **When installing a child restraint system**

Observe the following precautions. Failure to do so may result in death or serious injury.

- ? Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- ? Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- ? Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- ? When a booster seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- ? Follow all installation instructions provided by the child restraint system manufacturer.

**WARNING**

- ? When securing some types of child restraint systems in rear seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.
- ? When installing a child restraint system in the rear center seat, adjust both seat cushions to the same position and align both seatbacks at the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.
- ? If the seat is adjusted, reconfirm the security of the child restraint system.
- ? **When installing a booster seat**  
To prevent the belt from going into ALR lock mode, do not fully extend the shoulder belt. ALR mode causes the belt to tighten only. This could cause injury or discomfort to the child. (→P.33, 35)

**? Do not use a seat belt extender**

If a seat belt extender is used when installing a child restraint system, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of sudden braking, sudden swerving or an accident.

## Safety Connect\*


\*: If equipped

**Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Toyota's designated response center, which operates 24 hours per day, 7 days per week.**

**Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.**

**By using the Safety Connect service, you are agreeing to be bound by the Telematics Subscription Service Agreement and its Terms and Conditions, as in effect and amended from time to time, a current copy of which is available at Toyota.com. All use of the Safety Connect service is subject to such then-applicable Terms and Conditions.**

## System components

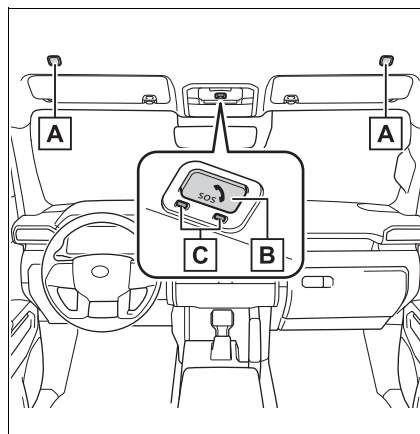

- A** Microphone
- B** "SOS" button
- C** LED light indicators

### ? Certification

→P.696

## Services

Subscribers have the following Safety Connect services available:

- Automatic Collision Notification\*

Helps drivers receive necessary response from emergency service providers. (→P.72)

\*: U.S. Patent No. 7,508,298 B2

- Stolen Vehicle Location

Helps drivers in the event of vehicle theft. (→P.72)

- Emergency Assistance Button ("SOS")

Connects drivers to response-center support. (→P.72)

- **Enhanced Roadside Assistance**

Provides drivers various on-road assistance. (→P.72)

### Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Toyota dealer, call the following or push the “SOS” button in your vehicle for further subscription details.

- **The United States**

1-800-331-4331

- **Canada**

1-888-869-6828

- **Puerto Rico**

1-877-855-8377

#### ? **Safety Connect Services Information**

? Phone calls using the vehicles Bluetooth® technology will not be possible during Safety Connect. Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

? Safety Connect is available beginning Fall 2009 on select Toyota models (in the contiguous United States only). Contact with the Safety Connect response center is dependent upon the telematics device being in operative condi-

tion, cellular connection availability, and GPS satellite signal reception, which can limit the ability to reach the response center or receive emergency service support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms is available; charges vary by subscription term selected and location.

? Automatic Collision Notification, Emergency Assistance and Stolen Vehicle Location will function in the United States, including Hawaii and Alaska, Puerto Rico and in Canada, and Enhanced Roadside Assistance will function in the United States, Puerto Rico and in Canada.

? Automatic Collision Notification, Emergency Assistance, Stolen Vehicle and Enhanced Road Assistance will not function in the United States Virgin Islands. For vehicles first sold in the USVI, no Safety Connect services will function in and outside the United States Virgin Islands.

? Safety Connect services are not subject to section 255 of the Telecommunications Act and the device is not TTY compatible.

#### ? **Languages**

The Safety Connect response center will offer support in multiple languages. The Safety Connect system will offer voice prompts in English, Spanish, and French. Please indicate your language of choice when enrolling.

#### ? **When contacting the response center**

You may be unable to contact the response center if the network is busy.

### Safety Connect LED light Indicators

When the engine switch is turned to ON, the red indicator light comes on for 2 seconds then turns off. Afterward, the green indicator light comes on, indicating that the service is active.

The following indicator light patterns indicate specific system usage conditions:

#### ? **Green**

- After "IGNITION ON", the Green and Red LED are repeatedly flashing
- Only the Green LED is illuminated when the operation is normally ready

#### ? **Red**

- After "IGNITION ON", the Green and Red LED are repeatedly flashing
- Turns off when the system is operating normally
- Illuminates when the mobile-phone battery needs to be replaced.
- Illuminates in diagnostic mode to indicate a DTC
- Illuminates in diagnostic mode to indicate a specific vehicle history (RoB).

### Safety Connect services

#### ? **Automatic Collision Notification**

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

#### ? **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-331-4331 in the United States, 1-877-855-8377 in Puerto Rico or 1-888-869-6828 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circum-

stances, be shared with third parties to locate your vehicle. Further information is available at Toyota.com.

#### ? **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

#### ? **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Toyota roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Toyota.com.

### **Safety information for Safety Connect**

Important! Read this information about exposure to radio frequency signals before using Safety Connect;

The Safety Connect system installed in your vehicle is a low-power radio transmitter and receiver. It receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by the following U.S. and international standards bodies.

- ANSI (American National Standards Institute) C95.1 [1992]
- NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
- ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, and govern-

ment health agencies and industries reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of Safety Connect complies with the FCC guidelines in addition to those standards.


## Engine immobilizer system

**The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.**

**Never leave the keys inside the vehicle when you leave the vehicle.**

**This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.**

### Operating the system

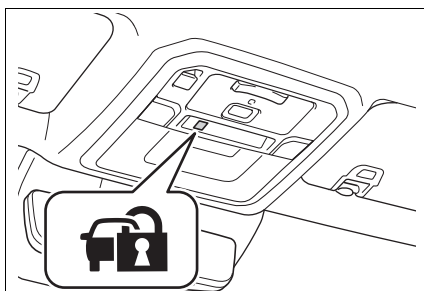

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACC or ON to indicate that the system has been canceled.

#### ? System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

#### ? Conditions that may cause the system to malfunction

- ? If the grip portion of the key is in contact with a metallic object
- ? If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

#### ? Certification

→P.697



#### NOTICE

#### ? To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.



## Alarm\*

\*: If equipped

**The alarm uses light and sound to give an alert when an intrusion is detected. The alarm is triggered in the following situations when the alarm is set:**

- A locked door or tailgate is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.

## Setting/deactivating/stopping the alarm system

### ? Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:


- Nobody is in the vehicle.
- The windows and the moon roof (if equipped) are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

### ? Setting

Close the doors and hood, and lock all the doors. The system will be set automatically after 30

seconds.

The indicator light changes from being on to flashing when the system is set.

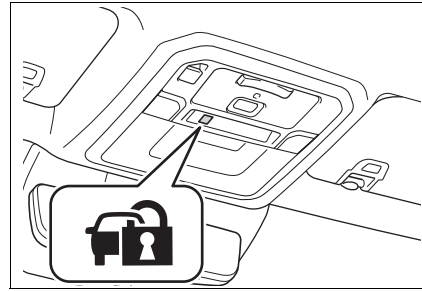

### ? Deactivating or stopping

Do one of the following to deactivate or stop the alarms:

- Unlock the doors.
- Turn the engine switch to ACC or ON, or start the engine. (The alarm will be deactivated or stopped after a few seconds.)

### ? Setting the alarm

The alarm can be set if all the doors are closed even with the hood and/or tailgate open.


### ? System maintenance

The vehicle has a maintenance-free type alarm system.

### ? Triggering of the alarm

The alarm may be triggered in the following situations: (Stopping the alarm deactivates the alarm system.)

- ? The doors are unlocked using the mechanical key.

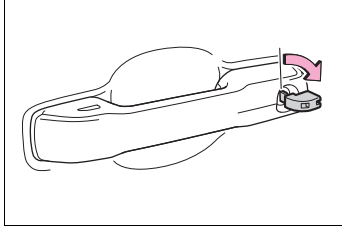


- ? A person inside the vehicle opens a door, hood or power tailgate\* or unlocks the vehicle.

\*: If equipped



- ? The battery is recharged or replaced when the vehicle is locked. (→P.606)

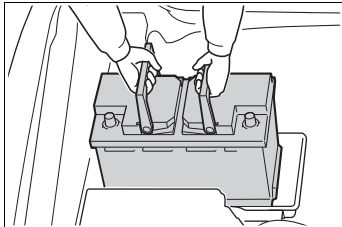

? **Alarm-operated door lock**

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- ? When a person remaining in the vehicle unlocks the door and the alarm is activated.
- ? While the alarm is activated, a person remaining in the vehicle unlocks the door.
- ? When recharging or replacing the battery.

 NOTICE

? **To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

**Pre-alarm**

If a door is unlocked with the mechanical key while the alarm is being set, the pre-alarm will sound for 10 seconds.

If either the door is locked again or the pre-alarm is stopped within those 10 seconds, an alarm will sound.

Do any of the following in order to deactivate or stop the pre-alarm:

- Close the doors, and lock all doors by smart access system or wireless remote control.
- Turn the engine switch to ACC or ON, or start the engine. (The alarm will be deactivated and stop after a few seconds.)



## Vehicle status information and indicators

### 2

#### 2-1. Instrument cluster

- Warning lights and indicators ..... 80
- Gauges and meters (7-inch display) ..... 88
- Gauges and meters (12.3-inch display) ..... 92
- Multi-information display (7-inch display) ..... 98
- Multi-information display (12.3-inch display) ..... 107
- Head-up display ..... 117
- Fuel consumption information ..... 121

### 2


### Warning lights and indicators

The warning lights and indicators on the instrument cluster, overhead console and outside rear view mirrors inform the driver of the status of the vehicle's various systems.

### Instrument cluster


For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

#### ? Vehicles with 7-inch display

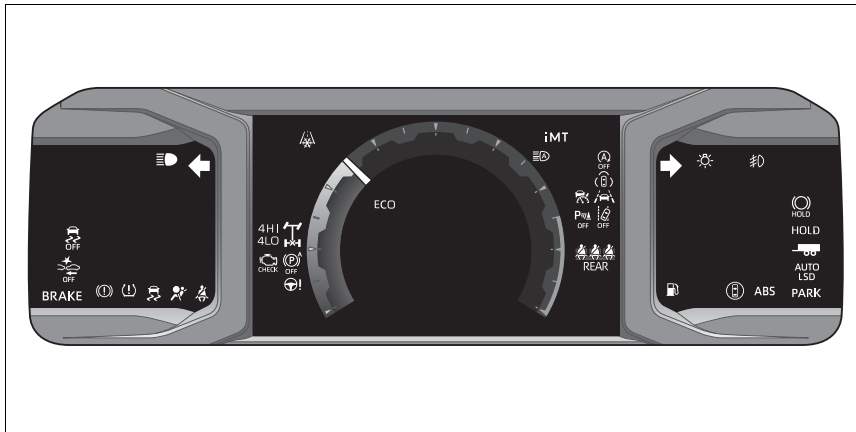


The units used on the meters and some indicators may differ depending on the target region.

### ? Vehicles with 12.3-inch display


The meter type can be changed on “ Settings” of the multi-information display. (→P.115)

#### ► Type 1

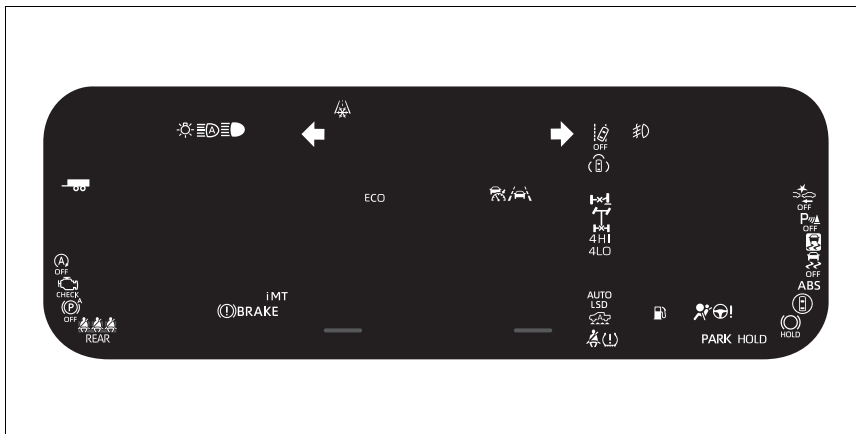

The units used on the meters and some indicators may differ depending on the target region.

#### ► Type 2

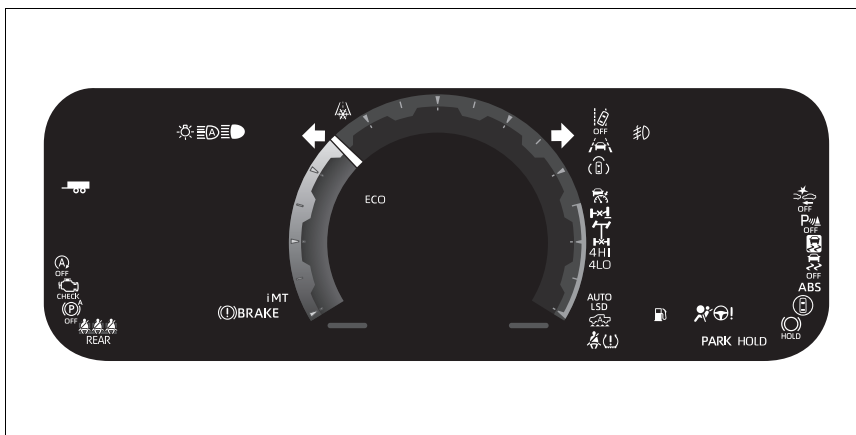


The units used on the meters and some indicators may differ depending on the target region.

2

Vehicle status information and indicators

► Type 3

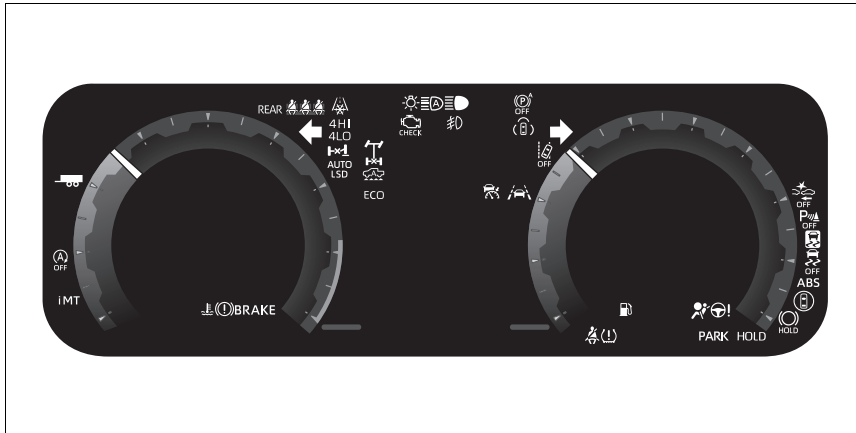

The units used on the meters and some indicators may differ depending on the target region.

**Warning lights**

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.



Brake system warning light\*<sup>1</sup> (→P.571)



Brake system warning light\*<sup>1</sup> (→P.571)



Brake system warning light\*<sup>1</sup> (→P.571)



High coolant temperature warning light\*<sup>2</sup> (→P.571)



Charging system warning light\*<sup>2</sup> (→P.572)



Low engine oil pressure warning light\*<sup>2</sup> (→P.572)



Malfunction indicator lamp\*<sup>1</sup> (→P.572)



Malfunction indicator lamp\*<sup>1</sup> (→P.572)



SRS warning light\*<sup>1</sup> (→P.572)



ABS warning light\*<sup>1</sup> (→P.573)



ABS warning light\*<sup>1</sup> (→P.573)



Electric power steering system warning light\*<sup>1</sup> (→P.573)



Electric power steering system warning light\*<sup>1</sup> (→P.573)



PCS warning light\*<sup>1</sup> (→P.573)



LTA indicator (→P.573)



LDA indicator (→P.574)



PDA indicator (if equipped) (→P.574)



Dynamic radar cruise control indicator (→P.574)



Cruise control indicator (→P.574)



Driving assist information indicator\*<sup>1</sup> (if equipped) (→P.575)



Stop & Start cancel indicator\*<sup>1</sup> (if equipped) (→P.575)



Intuitive parking assist OFF indicator\*<sup>1</sup> (if equipped) (→P.575)



Slip indicator light\*<sup>1</sup> (→P.576)














Inappropriate pedal operation warning light\*<sup>2</sup> (if equipped) (→P.576)

2

Vehicle status information and indicators



	Brake hold operated indicator* <sup>1</sup> (→P.576)
(Flashes)	
	Parking brake indicator (→P.577)
(U.S.A.)	
(Flashes)	
	Parking brake indicator (→P.577)
(Canada)	
(Flashes)	
	Rear differential lock indicator (if equipped) (→P.577)
(Flashes)	
	High speed four-wheel drive indicator (if equipped) (→P.577)
(Yellow)	
	Low speed four-wheel drive indicator (if equipped) (→P.577)
(Flashes)	
	Tire pressure warning light* <sup>1</sup> (→P.578)
	Low fuel level warning light (→P.578)
	Driver's and front passenger's seat belt reminder light (→P.578)
	Rear passengers' seat belt reminder lights (→P.579)
	Trailer brake warning light (if equipped) (→P.579)

\*<sup>1</sup>: These lights come on when the engine switch is turned to ON to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn

off. Have the vehicle inspected by your Toyota dealer.

\*<sup>2</sup>: This light illuminates on the multi-information display with a message.



























### WARNING

#### ? If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Toyota dealer immediately if this occurs.































**Indicators**

The indicators inform the driver of the operating state of the vehicle's various systems.

-  Turn signal indicator (→P.222)
-  Headlight indicator (→P.230)  
(U.S.A.)
-  Tail light indicator (→P.230)  
(Canada)
-  Headlight high beam indicator (→P.232)
-  AHB indicator (→P.233)
-  Front fog light indicator (if equipped) (→P.233)
-  PCS warning light<sup>\*1, 2</sup> (→P.252)
-  LTA indicator (→P.267)  
(Green)
-  LTA indicator (→P.267)  
(White)
-  LDA indicator (if equipped) (→P.272)  
(White)
-  LDA indicator (→P.272)  
(Green)
-  LDA OFF indicator (if equipped) (→P.272)  
(Yellow [Flashing])
-  PDA indicator (if equipped) (→P.279)  
(White)
-  PDA indicator (if equipped) (→P.279)  
(Green)
-  Dynamic radar cruise control indicator (→P.283)  
(Green)
-  Dynamic radar cruise control indicator (→P.283)  
(White)
-  Cruise control indicator (→P.295)  
(Green)
-  Cruise control indicator (→P.295)  
(White)
-  Driving assist information indicator<sup>\*1, 2</sup> (if equipped) (→P.310, 324, 329, 333)
-  Intuitive parking assist detection indicator (if equipped) (→P.317)
-  Intuitive parking assist OFF indicator<sup>\*1, 2</sup> (if equipped) (→P.317)
-  Slip indicator light<sup>\*2</sup> (→P.424)  
(Flashes)
-  VSC OFF indicator<sup>\*1, 2</sup> (→P.424)
-  Smart key system indicator<sup>\*4</sup> (→P.210)
-  Outside rear view mirror indicators<sup>\*5</sup> (if equipped) (→P.310, 324)
-  Stop & Start indicator<sup>\*1</sup> (if equipped) (→P.303)

2

Vehicle status information and indicators

	Stop & Start cancel indicator <sup>*1, 2</sup> (if equipped) (→P.304)		High speed four-wheel drive indicator (if equipped) (→P.406)
	Brake hold standby indicator <sup>*2</sup> (→P.227)		Low speed four-wheel drive indicator (if equipped) (→P.406)
	Brake hold operated indicator <sup>*2</sup> (→P.227)		iMT indicator (if equipped) (→P.221)
	Security indicator <sup>*6</sup> (→P.75, 76)		"AUTO LSD" indicator <sup>*2</sup> (if equipped) (→P.409)
	Low outside temperature indicator <sup>*7</sup> (→P.89, 95)		Rear differential lock indicator (if equipped) (→P.410)
	Parking brake indicator (→P.223)		Crawl Control indicator (if equipped) (→P.412)
	Parking brake indicator (→P.223)		AUTO mode indicator (if equipped) (→P.415)
	Auto EPB OFF indicator <sup>*1, 2</sup> (if equipped) (→P.223)		DIRT mode indicator (if equipped) (→P.415)
	"ECO" mode indicator (if equipped) (→P.404)		SAND mode indicator (if equipped) (→P.415)
	"SPORT" mode indicator (if equipped) (→P.404)		MUD mode indicator (if equipped) (→P.415)
	"SPORT S" mode indicator (if equipped) (→P.404)		DEEP SNOW mode indicator (if equipped) (→P.415)
	"SPORT S+" mode indicator (if equipped) (→P.404)		ROCK mode indicator (if equipped) (→P.415)
	"COMFORT" mode indicator (if equipped) (→P.404)		"TOW HAUL" indicator (if equipped) (→P.218)
	"CUSTOM" mode indicator (if equipped) (→P.404)		"ECT PWR" indicator (if equipped) (→P.219)
	Downhill assist control system indicator <sup>*2</sup> (if equipped) (→P.420)		SDM indicator (if equipped) (→P.428)



“AIR BAG ON/OFF”  
indicator<sup>\*1, 6</sup>  
(→P.45)



Stop lights indicator  
(→P.87)

- <sup>\*1</sup>: This light comes on when the system is turned off.
- <sup>\*2</sup>: These lights come on when the engine switch is turned to ON to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by your Toyota dealer.
- <sup>\*3</sup>: Depending on the operating condition, the color and illuminating/flashing state of the light change.
- <sup>\*4</sup>: This light illuminates on the multi-information display with a message.
- <sup>\*5</sup>: This light illuminates on the outside rear view mirrors.
- <sup>\*6</sup>: This light illuminates on the overhead console.
- <sup>\*7</sup>: When the outside temperature is approximately 37°F (3°C) or lower, the indicator will flash for approximately 10 seconds, then stay on.


#### ? Intuitive parking assist OFF indicator

Vehicles with intuitive parking assist detection indicator (→P.80,317):  
The indicators turn off when the shift position is changed to R regardless of whether the intuitive parking assist function is turned on or off.

## Gauges and meters (7-inch display)

The meters display various drive information.

## Meter display

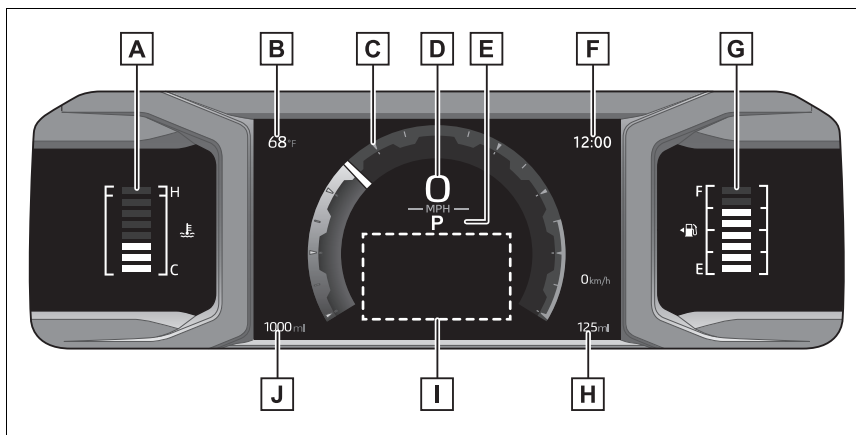


The units used on the meter and display may differ depending on the target region.

**A** Engine coolant temperature gauge

Displays the engine coolant temperature.

**B** Outside temperature (→P.89)

**C** Analog meter

The dial type of analog meter can be changed on  of the multi-information display. (→P.641)

Tachometer: Displays the engine speed in revolutions per minute.

Analog speed meter: Displays the vehicle speed.

**D** Digital speedometer

Displays the vehicle speed.

**E** Shift position and shift range indicator

Displays the selected shift position or selected shift range. (→P.215, 220)

**F** Clock (→P.91)

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "MULTIMEDIA OWNER'S MANUAL".

**G** Fuel gauge

Displays the quantity of fuel remaining in the tank.

In the following situations, the actual quantity of fuel remaining in the tank may not be displayed correctly. Refer to P.90 if the actual quantity of fuel remaining in the tank is not displayed correctly.

- A small amount of fuel is added.
- Fuel is added with the fuel gauge near or at "F".
- The vehicle is stopped on an uneven surface, such as a slope.
- The vehicle is driven on a slope or around a curve.

**H** Distance to empty

Displays driving range with remaining fuel. (→P.90)

**I** Multi-information display

Presents the driver with a variety of vehicle data. (→P.98)

Displays warning messages if a malfunction occurs. (→P.582)

**J** Odometer and distance until next engine oil change display

Odometer:

Displays the total distance the vehicle has been driven.

Distance until next engine oil change:

Displays the distance the vehicle can be driven until an oil change is necessary.

The distance until the next engine oil change will also be displayed in the following situations:

- When the engine switch is turned to ON.
- When a warning message indicating that oil maintenance should be performed soon or is required is displayed.
- Resetting: →P.528

**? The meters and display illuminate when**


The engine switch is in ON.

**? When the drive mode is changed**


Background color is changed following the selected driving mode. (→P.404)

**? If the units of measure for speedometer can be changed**

The other units of measure is also displayed as shown in the illustrations.

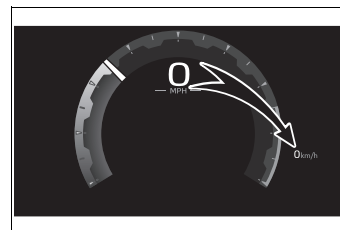**? Outside temperature display**

? Displays the outside temperature within the range of -40°F (-40°C) to 140°F (60°C).

? When the outside temperature is approximately 37°F (3°C) or lower, the indicator  will flash

for approximately 10 seconds, then stay on.

? In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 12 mph [20 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

? When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.

#### ? **Fuel gauge and driving range display**

The fuel gauge and driving range display are linked. If the fuel gauge and driving range display do not update after refueling a small amount, they can be updated by performing the following procedure:

- 1 Stop the vehicle on a level surface.

Wait until the fuel in the fuel tank stabilizes.

- 2 Turn the engine switch off.
- 3 While pressing and holding OK of the meter control switch, turn the engine switch to ON.
- 4 Continue holding OK of the meter control switch for approximately 5 seconds.

Release the button when the odometer begins blinking.

Updating will be complete when the odometer blinks for approximately 5 seconds and then returns to the normal display.

#### ? **Distance to empty**

? This distance is computed based on your average fuel consumption. As a result, the actual dis-

tance that can be driven may differ from that displayed.


? When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

? When "Refuel" is displayed, the remaining fuel amount is low and the distance that can be driven with the remaining fuel cannot be calculated. Refuel immediately.

#### ? **Liquid crystal display**

→P.98

#### ? **Customization**


The gauges and meters can be customized in  of the multi-information display. (→P.641)

#### **WARNING**

##### ? **The information display at low temperatures**

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

 NOTICE

? **To prevent damage to the engine and its components**

? Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.

? The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.609)


### Adjusting the clock

The clocks on the following can be adjusted on the multimedia system screen.

- Multi-information display
- Multimedia system screen

For details, refer to “MULTIMEDIA OWNER’S MANUAL”.

? **Clock settings screen**

If “Clock:00” is displayed when  is selected on the multi-information display, the system may be malfunctioning.

Have the vehicle inspected by your Toyota dealer.

### Instrument panel light control

The brightness of the instrument panel lights can be adjusted.


Pressing the button will adjust brightness of the instrument

panel light.

The brightness of the instrument panel lights can be adjusted by pressing the button.

Short press: 1 step change of brightness level.

Long press: continues change of brightness level until released.

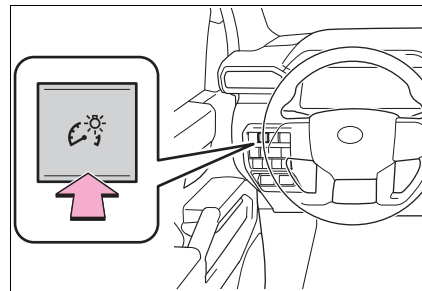

? **Instrument cluster brightness adjustment**

The instrument cluster brightness levels when the tail lights are on and off can be adjusted individually. However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument cluster brightness.

2

Vehicle status information and indicators



Gauges and meters (12.3-inch display)


The meters display various drive information.

Meter display

? Locations of gauges and meters

The meter type can be changed on “⚙ Settings” of the multi-information display. (→P.115)

▶ Type 1/Type 2

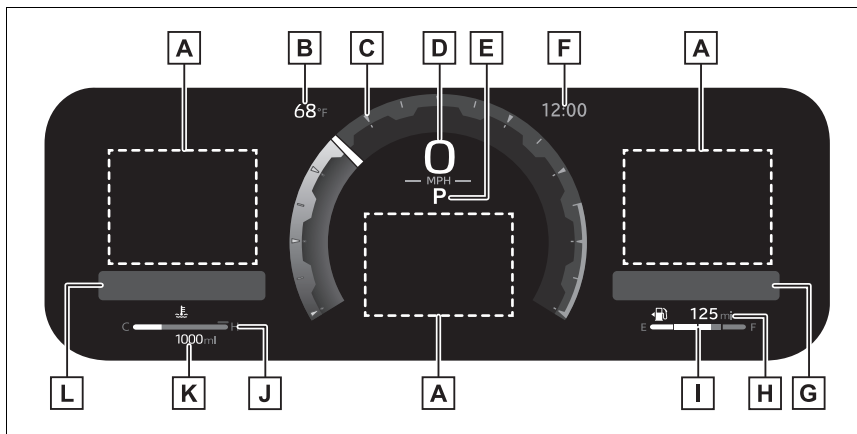

The units of measure may differ depending on the intended destination of the vehicle.

**A** Multi-information display

Presents the driver with a variety of vehicle data. (→P.107)  
 Displays warning messages if a malfunction occurs. (→P.571)

**B** Outside temperature (→P.95)

**C** Analog meter (Type 2 only)

The dial type of analog meter can be changed on “⚙ Settings” of the multi-information display. (→P.115)

Tachometer: Displays the engine speed in revolutions per minute.

Analog speedometer: Displays the vehicle speed.

**D** Digital speedometer

Displays the vehicle speed.

**E** Shift position and shift range indicator

Displays the selected shift position or selected shift range (→P.215, 220)

**F** Clock (→P.97)

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "MULTIMEDIA OWNER'S MANUAL".

**G** Widget (Audio system-linked display)

Displays the selected audio source or track on the meter. (→P.111)

While list of items for content display area (→P.109) is displayed, widget will not be displayed.

**H** Distance to empty

Displays driving range with remaining fuel. (→P.96)

**I** Fuel gauge

Displays the quantity of fuel remaining in the tank.

In the following situations, the actual quantity of fuel remaining in the tank may not be displayed correctly. Refer to P.96 if the actual quantity of fuel remaining in the tank is not displayed correctly.

- A small amount of fuel is added.
- Fuel is added with the fuel gauge near or at "F".
- The vehicle is stopped on an uneven surface, such as a slope.
- The vehicle is driven on a slope or around a curve.

**J** Engine coolant temperature gauge

Displays the engine coolant temperature.

**K** Odometer and distance until next engine oil change display

Odometer:

Displays the total distance the vehicle has been driven.

Distance until next engine oil change:

Displays the distance the vehicle can be driven until an oil change is necessary.

The distance until the next engine oil change will also be displayed in the following situations:


- When the engine switch is turned to ON.
- When a warning message indicating that oil maintenance should be performed soon or is required is displayed.
- Resetting: →P.528

**L** Widget (Fuel Economy)

Displays fuel economy information. (→P.110)

While list of items for content display area (→P.109) is displayed, widget will not be displayed.

► Type 3

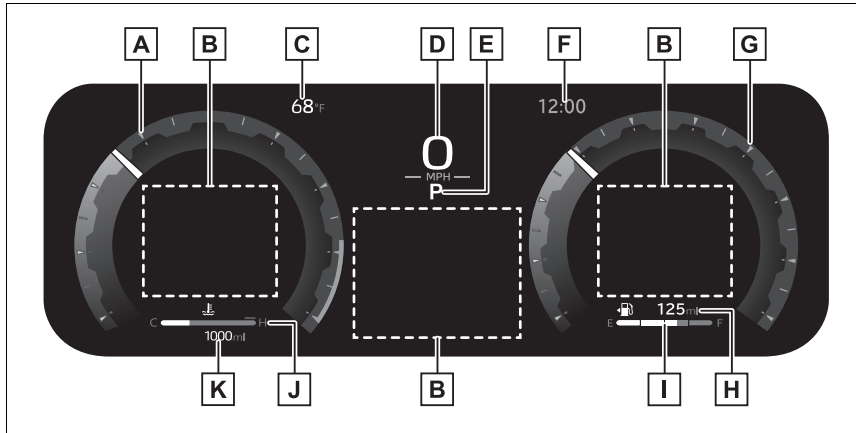

**A** Tachometer

Displays the engine speed in revolutions per minute.

**B** Multi-information display

Presents the driver with a variety of vehicle data. (→P.107)

Displays warning messages if a malfunction occurs. (→P.571)

**C** Outside temperature (→P.95)

**D** Digital speedometer

Displays the vehicle speed.

**E** Shift position and shift range indicator

Displays the selected shift position or selected shift range (→P.215, 220)

**F** Clock (→P.97)

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "MULTIMEDIA OWNER'S MANUAL".

**G** Analog speedometer

Displays the vehicle speed.

**H** Distance to empty

Displays driving range with remaining fuel. (→P.96)

**I** Fuel gauge

Displays the quantity of fuel remaining in the tank.

In the following situations, the actual quantity of fuel remaining in the tank may not be displayed correctly. Refer to P.96 if the actual quantity of fuel remaining in the tank is not displayed correctly.

- A small amount of fuel is added.

- Fuel is added with the fuel gauge near or at "F".
- The vehicle is stopped on an uneven surface, such as a slope.
- The vehicle is driven on a slope or around a curve.

#### **J** Engine coolant temperature gauge

Displays the engine coolant temperature.

#### **K** Odometer and distance until next engine oil change display

Odometer:

Displays the total distance the vehicle has been driven.

Distance until next engine oil change:

Displays the distance the vehicle can be driven until an oil change is necessary.

The distance until the next engine oil change will also be displayed in the following situations:

- When the engine switch is turned to ON.
- When a warning message indicating that oil maintenance should be performed soon or is required is displayed.
- Resetting: →P.528

#### ? **The meters and display illuminate when**


The engine switch is in ON.

#### ? **When the drive mode is changed**

Background color is changed following the selected driving mode. (→P.404)

#### ? **If the units of measure for speedometer can be changed**

The other units of measure is also displayed as shown in the illustrations.

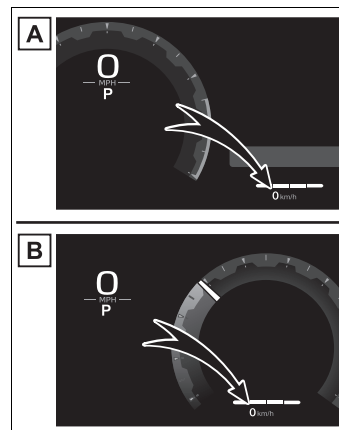


**A** Type 1/Type 2

**B** Type 3

#### ? **Outside temperature display**

? Displays the outside temperature within the range of -40°F (-40°C) to 140°F (60°C).

? When the outside temperature is approximately 37°F (3°C) or lower, the indicator  will flash for approximately 10 seconds,

then stay on.

? In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:

- When stopped, or driving at low speeds (less than 20 mph [12 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

? When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.

#### ? **Fuel gauge and driving range display**

The fuel gauge and driving range display are linked. If the fuel gauge and driving range display do not update after refueling a small amount, they can be updated by performing the following procedure:

- 1 Stop the vehicle on a level surface.

Wait until the fuel in the fuel tank stabilizes.

- 2 Turn the engine switch off.
- 3 While pressing and holding OK of the meter control switch, turn the engine switch to ON.
- 4 Continue holding OK of the meter control switch for approximately 5 seconds.

Release the button when the odometer begins blinking.

Updating will be complete when the odometer blinks for approximately 5 seconds and then returns to the normal display.

#### ? **Distance to empty**

? This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ

from that displayed.

? When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

? When "Refuel" is displayed, the remaining fuel amount is low and the distance that can be driven with the remaining fuel cannot be calculated. Refuel immediately.

#### ? **Liquid crystal display**

→P.108

#### ? **Customization**

The gauges and meters can be customized in "⚙ Settings" of the multi-information display. (→P.642)




#### **WARNING**

##### ? **The information display at low temperatures**

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

 NOTICE

? **To prevent damage to the engine and its components**

- ? Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- ? The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.609)


### Adjusting the clock

The clocks on the following can be adjusted on the multimedia system screen.

- Multi-information display
- Multimedia system screen

For details, refer to “MULTIMEDIA OWNER’S MANUAL”.

? **Clock settings screen**

If “Clock:00” is displayed when  “Settings” is selected on the multi-information display, the system may be malfunctioning. Have the vehicle inspected by any authorized repairer, or any reliable repairer.

### Adjusting the instrument panel light control

The brightness of the instrument panel lights can be adjusted.


Pressing the button will adjust brightness of the instrument

panel light.

The brightness of the instrument panel lights can be adjusted by pressing the button.

Short press: 1 step change of brightness level.

Long press: continues change of brightness level until released.

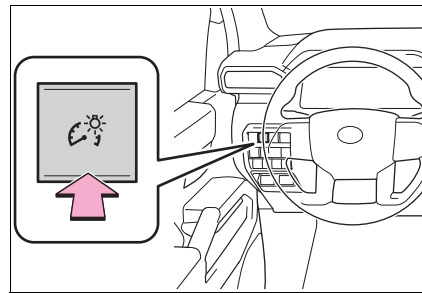

? **Instrument cluster brightness adjustment**

The instrument cluster brightness levels when the tail lights are on and off can be adjusted individually.


However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument cluster brightness.

## Multi-information display (7-inch display)

**The multi-information display is used to display fuel efficiency related information and various types of driving-related information. The multi-information display can also be used to change the display settings and other settings.**

### Display contents

#### ? Display

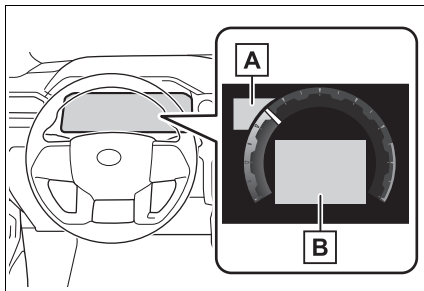

**A** RSA (Road Sign Assist) (if equipped)

Displays recognized signs while the RSA (Road Sign Assist) is operating. (→P.281)

**B** Content display area

By selecting menu icons on the multi-information display, a variety of driving-related information can be displayed. The multi-information display can also be used to change display settings and other vehicle settings.







Warning or advice pop-up displays are also displayed in certain situa-

tions.

#### ? Menu icons

Information related to each icon can be displayed by selecting the icon with the meter control switches.

Some of the information may be displayed automatically depending on the situation.

-  Driving information display (→P.99)
-  Driving support system information display (→P.100)
-  Audio system-linked display (→P.101)
-  Vehicle information display (→P.101)
-  Settings display (→P.104)
-  Warning message display (→P.582)

#### ? Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

### WARNING

#### ? Caution for use while driving

- ? When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- ? Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc., ahead of the vehicle.


**⚠ WARNING**

? The information display at low temperatures

→P.90

**Changing the meter display**

The multi-information display is operated using the meter control switches.

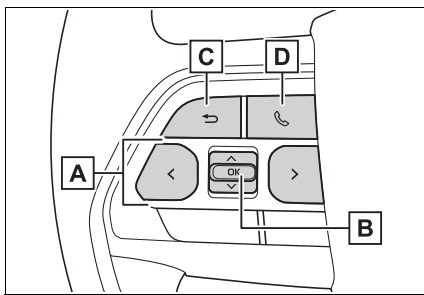

- A**  $\wedge/\vee$ : Select menu icons  
 $\langle / \rangle$ : Change displayed content, scroll up/down the screen and move the cursor up/down
- B** Press: Enter/Set  
 Press and hold: Reset/Display customizable items
- C** Return to the previous screen
- D** Call sending/receiving and history display


Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "MULTIMEDIA OWNER'S MANUAL".

**Content of driving information**? **Display items**

- Fuel economy
- Eco Driving Indicator/Distance to empty

? **Fuel economy**

Use the displayed values as a reference only.

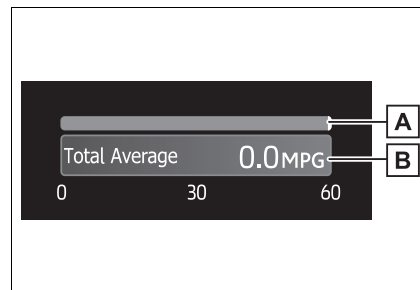

- A** Current fuel consumption  
 Displays instantaneous current fuel consumption.
- B** Average fuel economy (after reset)  
 To reset the average fuel economy display, press and hold the OK meter control switch.  
 The average fuel economy display can be changed in (→P.104)
- Average fuel economy (after start)  
 Displays the average fuel consumption since engine start.
- Average fuel economy (after refuel)

2


Vehicle status information and indicators



Displays the average fuel consumption since the vehicle was refueled.

? **Eco Driving Indicator/Distance to empty**

- Eco Driving Indicator

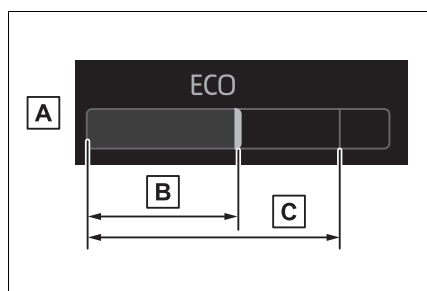

**A** Eco Driving Indicator Zone Display

Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.

**B** Eco driving ratio based on acceleration

If the acceleration exceeds the Zone of Eco driving, the right side of the Eco Driving Indicator Zone Display will illuminate.

**C** Zone of Eco driving

- Distance to empty

Displays the driving range with remaining fuel. (→P.90)

? **Distance to empty**

? This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

? When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch to OFF.

If the vehicle is refueled without turning the engine switch to OFF, the display may not be updated.

? When “Refuel” is displayed, the remaining fuel amount is low and the distance that can be driven with the remaining fuel cannot be calculated. Refuel immediately.

**Driving support system information display**

? **Driving support system information**

Select to display the operational status of the following systems:

- LDA (Lane Departure Alert) (→P.268)
- LTA (Lane Tracing Assist) (→P.263)
- Dynamic radar cruise control (→P.283)
- Cruise control (→P.295)
- PCS (Pre-Collision System) (→P.252)
- PDA (Proactive driving assist) (if equipped) (→P.274)

? **Navigation system-linked display**

Select to display the following navigation system-linked information:

- Route guidance to destination
- Compass display (heading-up display)

### Audio system-linked display

The operating conditions of the audio system can be displayed on the multi-information display.

### Vehicle information display

#### ? Trailer brake (if equipped)

Displays trailer brake control status (→P.429) and trailer type\*.

\*: To select the trailer, press and hold the OK meter control switch. (→P.99)

#### ? Trailer Mode BSM (if equipped)

Displays trailer length\* and trailer blind spot status (→P.310).

\*: To select the trailer, press and hold the OK meter control switch. (→P.99)

#### ? Drive information

2 items that are selected using the “Drive Info Items” setting (average speed, distance and total time) can be displayed vertically.

Use the displayed information as a reference only.

Following items will be displayed.

- “Average Speed”: Displays

the average vehicle speed since engine start\*

- “Distance”: Displays the distance driven since engine start\*
- “Total Time”: Displays the elapsed time since engine start\*

\*: These items are reset each time the engine stops.

#### ? Trip information

2 items that are selected using the “TRIP A Items” or “TRIP B Items” setting (average speed, distance and total time) can be displayed vertically.

Use the displayed information as a reference only.


- “Average Speed”: Displays the average vehicle speed since the display was reset\*
- “Distance”: Displays the distance driven since the display was reset\*
- “Total Time”: Displays the elapsed time since the display was reset\*

\*: To reset, display the desired item and press and hold the meter control switch.

#### ? Tire inflation pressure

Displays inflation pressure of each tire.

? **Traction monitor display (4WD models)**

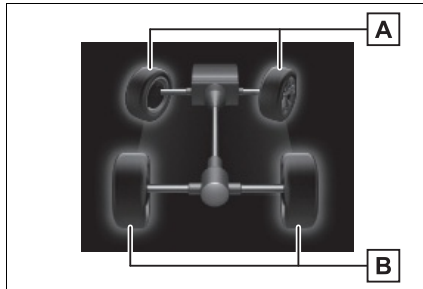


**A** Front tire direction display  
Displays the operation amount and direction of the steering wheel via changes to the front tires on the display.

**B** Wheel spin display  
When a tire is spinning, its icon on the display changes its color and blinks.

This item is displayed only when driving mode is set to sport mode. The illustration used is intended as an example, and may differ from the image that is actually displayed on the multi-information display.

? **Clinometer**

Clinometer displays the vehicle inclination to the front, rear, left and right within a range of 0° to approximately 30°.

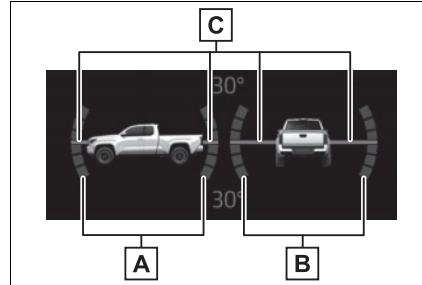

**A** Degree markers of incline to the front and rear

Indicates the vehicle inclination in degrees in the front and rear directions.


**B** Degree markers of incline to the left and right

Indicates the vehicle inclination in degrees in the left and right directions.

**C** Pointer

Indicates the degree of the vehicle inclination in comparison to a parallel line.

? **Voltmeter and Engine oil pressure gauge**

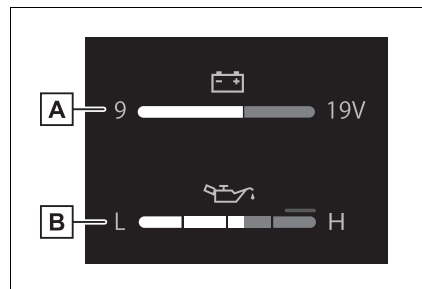


**A** Voltmeter

Displays the charge state

**B** Engine oil pressure gauge


Displays the engine oil pressure

? **Engine oil temperature gauge and Transmission oil temperature gauge**

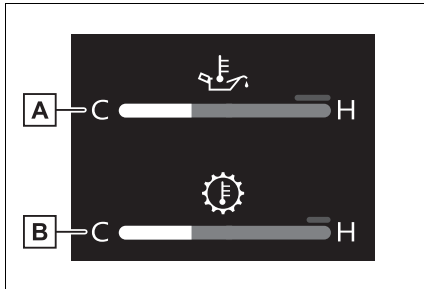

- A** Engine oil temperature gauge  
Displays the engine oil temperature
- B** Transmission oil temperature gauge (if equipped)  
Displays the transmission oil fluid temperature

? **Boost gauge**  
Displays the boost pressure.

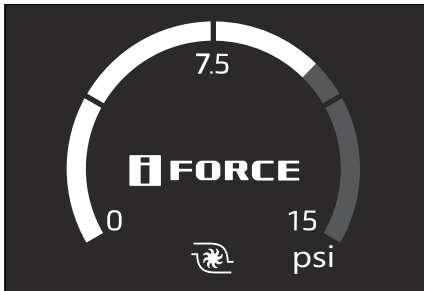

**NOTICE**  
? **Voltmeter**  
When the voltmeter indicates 19 V or higher or 9 V or lower while the engine is running, there may be a battery or charging system malfunction. Have the vehicle inspected at your Toyota dealer.


? **Engine oil pressure gauge**

When the value of the engine oil pressure gauge drops while the engine is running, stop the vehicle in a safe place immediately and check the amount of engine oil. (→P.527)

When the oil pressure drops even though the engine oil amount has not decreased, or if the oil pressure does not increase when engine oil is added, contact your Toyota dealer, as there may be a problem with the lubrication system.

**Trailer settings screen**


- Trailer settings screen

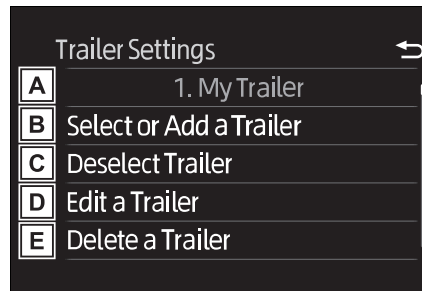

- A** Displays the name of the currently selected trailer or “No Trailer Selected” if a trailer has not yet been selected
- B** Add a new trailer or select an existing saved trailer
  - Maximum of 10 trailers can be saved.
  - Select the trailer name, length, hitch type, brake type and number of axles.
  - The parameters which can be set depend on which of the trailer systems are installed on the vehicle. (Trailer Brake Controller,

Trailer Backup Guide and Trailer Mode BSM)

- C** Deselect the currently selected trailer
  - Used when a 4-pin trailer connector has been disconnected. (4-pin trailer connector disconnection cannot be automatically detected by Trailer Brake Controller)
- D** Edit the parameters of a saved trailer (name, length, hitch type, brake type and number of axles)
  - The parameters which can be edited depend on which of the trailer systems are installed on the vehicle (Trailer Brake Controller, Trailer Backup Guide and Trailer Mode BSM)
- E** Delete a saved trailer
  - Trailer detail screen

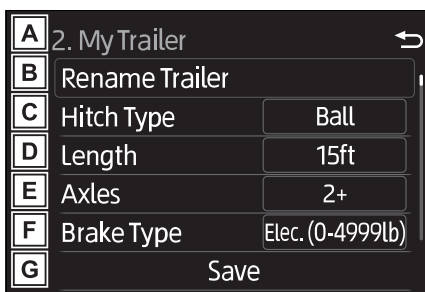

- A** Displays the name of the current trailer which is being added or edited.
- B** Change the name of the trailer.
- C** Change the hitch type of the trailer between ball hitch (conventional), gooseneck or fifth wheel. Note that goose-

neck and fifth wheel trailers are not supported for some features (Trailer Backup Guide and Trailer Mode BSM)




- D** Change the length of the trailer. If the exact length is not listed, round up the actual length of the trailer to the closest available value.  
 “Auto” length detection can also be selected.
- E** Change the number of axles.
- F** Change the brake type (electric or electric over hydraulic) and weight of the trailer, or turn trailer brakes off for that trailer.
- G** Save the trailer information

If there are any errors with the trailer values, re-select the value or delete and re-save the trailer. If the error continues, contact your Toyota dealer.

### Settings display


#### ? Meter display settings that can be changed

- Language  
 Select to change the language displayed.
- Units  
 Select to change the units of measure displayed.
- Meter Style  
 The design of the meter display can be changed.


- **Dial Type**  
Select to change dial type.
-  (Driving information display settings)
  - Fuel economy display  
Select to change the average fuel consumption display between after start/after reset/after refuel. (→P.99)
-  (Audio settings)  
Select to display/not display the audio system linked display.
-  (Vehicle information display settings)  
Select to change the displayed content of the following:
  - Drive information and Trip A/B items  
Select to set the first and second items of the drive information display to any of the following: average vehicle speed/distance/elapsed time.
- Pop-up display  
Select to enable/disable pop-up displays for each relevant system.
- Multi-information display off  
Select to turn the multi-information display off.  
To turn the multi-information display on again, press any of the meter control switches.
- Default setting  
Select to reset the meter display settings to the default setting.

? **Vehicle functions and settings that can be changed**  
→P.640

- ? **Suspension of the settings display**
- ? Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.
- ? If a warning message is displayed, operation of the settings display will be suspended.

 **WARNING**

? **Cautions during setting up the display**  
If the engine is running when changing the display settings, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 **NOTICE**

? **During setting up the display**  
To prevent battery discharge, ensure that the engine is running while setting up the display features.

**Stop & Start system information (if equipped)**

- Stop & Start system operation time (after start)/status notification  
Displays the current amount of time the engine has been stopped by the operation of the Stop & Start sys-

2  
Vehicle status information and indicators

tem.

Also shows the status of the Stop & Start system with a pop-up display. (→P.307)


- **Stop & Start system settings**

The length of time of the Stop & Start system will operate when the "A/C" switch of the air conditioning system is on can be set to 2 different levels in "⚙ Settings" of the multi-information display. (→P.307)

### Suggestion function

Displays suggestions to the driver in the following situations. To select a response to a displayed suggestion, use the meter control switches.

#### ? **Suggestion to turn on the headlights**

If the headlight switch is in other than  or AUTO, and the vehicle speed is 3 mph (5 km/h) or higher for a certain amount of time when the surroundings are dark, a suggestion message will be displayed.

#### ? **Suggestion to turn off the headlights**

If the headlights are left on for a certain amount of time after the engine switch has been turned off, a suggestion message will be displayed.

When the headlight switch is in the AUTO position: The mes-

sage asking if you wish to turn the headlights off is displayed. To turn the headlights off, select "Yes".

If the driver's door is opened after the engine switch is turned off, this suggestion message will not be displayed.

#### ? **Customization**


The suggestion function can be turned on/off. (→P.641)

**Multi-information display (12.3-inch display)**

**The multi-information display is used to display fuel efficiency related information and various types of driving-related information. The multi-information display can also be used to change the display settings and other settings.**

**Display contents**

Following information is displayed in each area on the multi-information display.

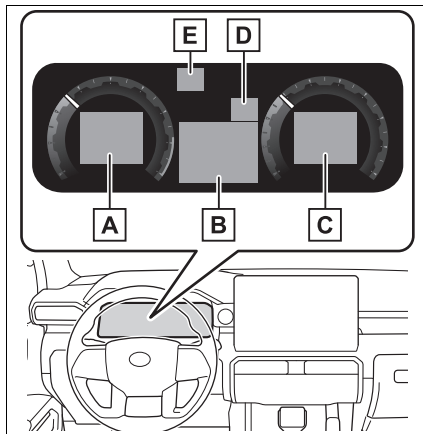

- A** Content display area (left)
- B** Content display area (center)
- C** Content display area (right)
- D** Driving support system information display area

When driving information support

system is displayed on the content display area, the system operating state will not be displayed in this area.

- E** RSA (Road Sign Assist) display area (if equipped) (→P.281)

? **Content display area (center)**

- Blank
- Driving support system information display (→P.110)
- Map display (→P.111)
- Trailer settings screen (→112)
- Settings display (→P.115)
- Warning message display

? **Content display area (left/right)**

- Blank
- Fuel Economy (→P.110)
- Eco Driving Indicator (→P.110)
- Driving support system information display (→P.110)
- Navigation system-linked display (→P.111)
- Audio system-linked display (→P.111)
- Drive information display (→P.111)
- Tire inflation pressure (→P.112)
- Traction monitor display (if equipped) (→P.112)
- Trailer brake (if equipped)



(→P.113)

- Trailer mode BSM (if equipped) (→P.113)
- Clinometer (→P.113)
- Voltmeter and Engine oil pressure gauge (→P.114)
- Engine oil temperature gauge and Transmission oil temperature gauge (→P.114)
- Boost gauge (→P.115)

? **Liquid crystal display**

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

**⚠ WARNING**

? **Caution for use while driving**

? When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.


? Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc., ahead of the vehicle.

? **The information display at low temperatures**

→P.96

**Changing the meter display**

The multi-information display is operated using the meter control switches.

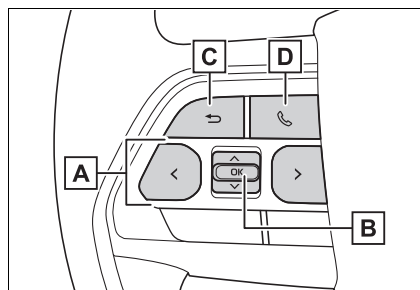

**A**  $\wedge/\vee$ : Change displayed content and scroll up/down the screen

$\langle / \rangle$ : Change the screen and move the cursor

**B** Press: Enter/Set  
Press and hold: Reset/Display customizable items/Display the cursor

**C** Return to the previous screen

**D** Call sending/receiving and history display

Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "MULTIMEDIA OWNER'S MANUAL".

**Changing the display**

The multi-information display is operated using the meter control switches.

? **Changing the meter display type setting**


The meter display type setting can be changed on "⚙ Set-

tings". (→P.115)

### ? Changing the screen

Select items from the combination of 3 screens to display on each 3 content display areas.

Press < or > of the meter control switches to scroll the screen.

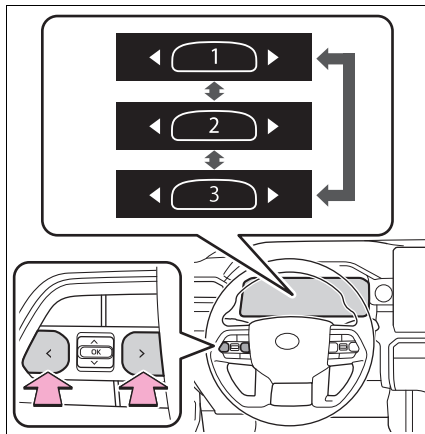

### ? Changing the display contents

Switches items displayed on each contents display area (left/center/right).

- 1 Press and hold OK to display the cursor on the content display area (center).
- 2 Press < or > to move the cursor and select the content display area.
- 3 Press ^ or v to select the display items.

### ? Items displayed in the content display area

Select items to enable/disable on the content display area (left/right).


- 1 Press and hold OK to display area (center).
- 2 Press < or > to move the cursor and select the content display area.
- 3 Contents display area (left):  
Press < to display contents list.  
Contents display area (right):  
Press > to display contents list.
- 4 Press ^ or v to select the display items.
- 5 Press OK to enable/disable items.

### ! WARNING

#### ? Caution for use while driving

For safety, avoid operating the meter control switches while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switches. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

### Fuel Economy

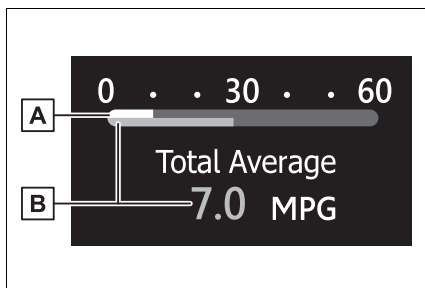

#### A Current fuel economy

Displays the instantaneous current fuel consumption.

#### B Average fuel economy

Displays the average fuel economy since the function was reset or the average fuel economy after starting or refueling.<sup>\*1, 2, 3</sup>


The average fuel economy selected by Fuel Economy on the “⚙️ Settings” screen is displayed.

<sup>\*1</sup>: Use the displayed fuel consumption as a reference only.

<sup>\*2</sup>: Average fuel economy after starting is reset each time the engine stops.

<sup>\*3</sup>: Average fuel economy since function was reset can be reset by pressing and holding OK .

### Eco Driving Indicator

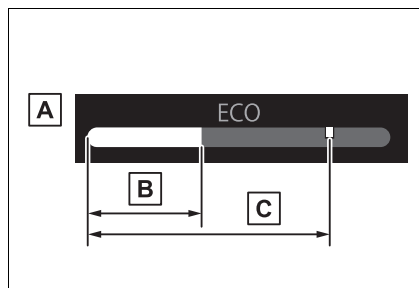

#### A Eco Driving Indicator Zone Display

Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.

#### B Eco driving ratio based on acceleration

If the acceleration exceeds the Zone of Eco driving, the right side of the Eco Driving Indicator Zone Display will illuminate.

#### C Zone of Eco driving

### Driving support system information display

Select to display the operational status of the following systems:

- LDA (Lane Departure Alert) (→P.268)
- LTA (Lane Tracing Assist) (→P.263)
- Dynamic radar cruise control (→P.283)
- Cruise control (→P.295)
- PDA (Proactive driving assist) (if equipped) (→P.274)

- PCS (Pre-Collision System) (→P.252)

### Map display

Displays the map data according to the navigation system.

Switches the displayed map size by pressing **OK**.

### Navigation system-linked display

Select to display the following navigation system-linked information:

- Route guidance to destination
- Compass display (heading-up display)

### Audio system-linked display

The operating conditions of the audio system can be displayed on the multi-information display.

### Driving information display

#### ? Drive information

2 items that are selected using the “Drive Info Items” setting (average speed, distance and total time) can be displayed vertically.

Use the displayed information as a reference only.

Following items will be displayed.

- “Average Speed”: Displays the average vehicle speed since engine start\*
- “Distance”: Displays the distance driven since engine start\*
- “Total Time”: Displays the elapsed time since engine start\*

\*: These items are reset each time the engine stops.

#### ? Trip information

2 items that are selected using the “TRIP A Items” or “TRIP B Items” setting (average speed, distance and total time) can be displayed vertically.

Use the displayed information as a reference only.


- “Average Speed”: Displays the average vehicle speed since the display was reset\*
- “Distance”: Displays the distance driven since the display was reset\*
- “Total Time”: Displays the elapsed time since the display was reset\*

\*: To reset, display the desired item and press and hold **OK**.

### Tire inflation pressure

Displays inflation pressure of each tire.

### Traction monitor display (4WD models)

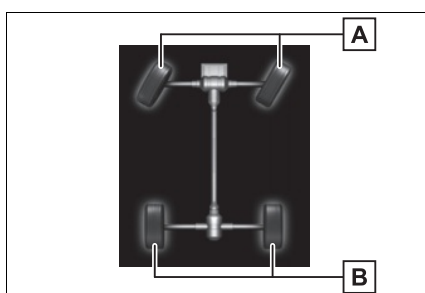

#### A Front tire direction display

Displays the operation amount and direction of the steering wheel via changes to the front tires on the display.

#### B Wheel spin display


When a tire is spinning, its icon on the display changes its color and blinks.

This item is displayed only when driving mode is set to sport mode.

The illustration used is intended as an example, and may differ from the image that is actually displayed on the multi-information display.

### Trailer settings screen

- Trailer settings screen

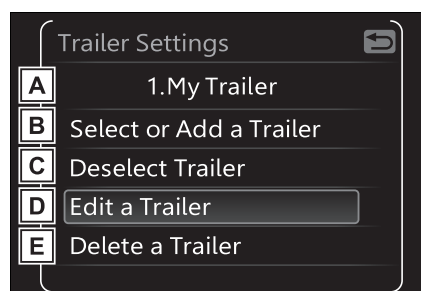

**A** Displays the name of the currently selected trailer or “No Trailer Selected” if a trailer has not yet been selected

**B** Add a new trailer or select an existing saved trailer

- Maximum of 10 trailers can be saved.
- Select the trailer name, length, hitch type, brake type and number of axles.
- The parameters which can be set depend on which of the trailer systems are installed on the vehicle. (Trailer Brake Controller, Trailer Backup Guide and Trailer Mode BSM)

**C** Deselect the currently selected trailer


- Used when a 4-pin trailer connector has been disconnected. (4-pin trailer connector disconnection cannot be automatically detected by Trailer Brake Controller)

**D** Edit the parameters of a saved trailer (name, length, hitch type, brake type and number of axles)

- The parameters which can be edited depend on which of the trailer systems are installed on the vehicle (Trailer Brake Controller, Trailer Backup Guide and Trailer Mode BSM)

**E** Delete a saved trailer

- Trailer detail screen

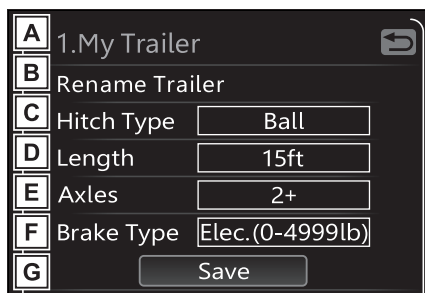

**A** Displays the name of the current trailer which is being added or edited.

**B** Change the name of the trailer.

**C** Change the hitch type of the trailer between ball hitch (conventional), gooseneck or fifth wheel. Note that gooseneck and fifth wheel trailers are not supported for some features (Trailer Backup Guide and Trailer Mode BSM)

**D** Change the length of the trailer. If the exact length is not listed, round up the actual length of the trailer to the closest available value.

“Auto” length detection can also be selected.

**E** Change the number of axles.

**F** Change the brake type (electric or electric over hydraulic) and weight of the trailer, or turn trailer brakes off for that trailer.

**G** Save the trailer information

If there are any errors with the trailer values, re-select the value or delete and re-save the trailer. If the error continues, contact your Toyota dealer.

### Trailer brake (if equipped)

Displays trailer brake control status (→P.429) and trailer type\*.

\*: To select the trailer, press and hold the OK meter control switch. (→P.108)

### Trailer mode BSM (if equipped)


Displays trailer length\* and trailer blind spot status (→P.310).

\*: To select the trailer, press and hold the OK meter control switch. (→P.108)

### Clinometer

Clinometer displays the vehicle inclination to the front, rear, left and right within a range of 0° to

approximately 30°.

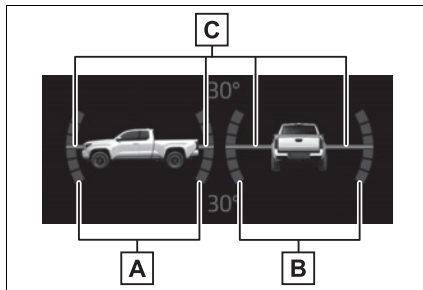

**A** Degree markers of incline to the front and rear

Indicates the vehicle inclination in degrees in the front and rear directions.


**B** Degree markers of incline to the left and right

Indicates the vehicle inclination in degrees in the left and right directions.

**C** Pointer

Indicates the degree of the vehicle inclination in comparison to a parallel line.

### Voltmeter and Engine oil pressure gauge

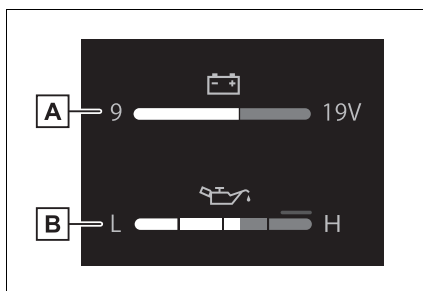

**A** Voltmeter

Displays the charge state

**B** Engine oil pressure gauge

Displays the engine oil pressure

### NOTICE

#### ? Voltmeter


When the voltmeter indicates 19 V or higher or 9 V or lower while the engine is running, there may be a battery or charging system malfunction. Have the vehicle inspected at your Toyota dealer.

#### ? Engine oil pressure gauge

When the value of the engine oil pressure gauge drops while the engine is running, stop the vehicle in a safe place immediately and check the amount of engine oil. (→P.527)

When the oil pressure drops even though the engine oil amount has not decreased, or if the oil pressure does not increase when engine oil is added, contact your Toyota dealer, as there may be a problem with the lubrication system.

### Engine oil temperature gauge and Transmission oil temperature gauge

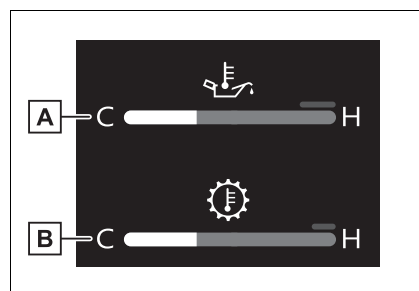

**A** Engine oil temperature gauge

Displays the engine oil temperature

**B** Transmission oil temperature gauge (if equipped)  
 Displays the transmission oil fluid temperature

**Boost gauge**

Displays the boost pressure.



**Settings display**

- ? **Meter display settings that can be changed**
  - Language  
 Select to change the language displayed.
  - Units  
 Select to change the units of measure displayed.
  - Meter Type  
 Select to change the meter type setting.
  - Meter Style  
 Select to change the meter style.
  - Dial Type  
 Select to change dial type.
  - Fuel economy display  
 Select to change the average fuel consumption display between after

start/after reset/after refuel.  
 (→P.110)

- Drive information and Trip A/B items

Select to set the first and second items of the drive information display to any of the following: average vehicle speed/distance/elapsed time.

- Pop-up display

Select to enable/disable pop-up displays for each relevant system.

- Default setting

Select to reset the meter display settings to the default setting.

- ? **Vehicle functions and settings that can be changed**

→P.640

- ? **Suspension of the settings display**

? Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.

? If a warning message is displayed, operation of the settings display will be suspended.

**! WARNING**

- ? **Cautions during setting up the display**

If the engine is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

2

Vehicle status information and indicators



**NOTICE****? During setting up the display**

To prevent battery discharge, ensure that the engine is operating while setting up the display features.

**Stop & Start system information (if equipped)**

- Stop & Start system operation time (after start)/status notification

Displays the current amount of time the engine has been stopped by the operation of the Stop & Start system.

Also shows the status of the Stop & Start system with a pop-up display. (→P.307)

- Stop & Start system settings


The length of time of the Stop & Start system will operate when the "A/C" switch of the air conditioning system is on can be set to 2 different levels in "⚙ Settings" of the multi-information display. (→P.307)

**Suggestion function**

Displays suggestions to the driver in the following situations. To select a response to a displayed suggestion, use the meter control switches.

**? Suggestion to turn on the headlights**

If the headlight switch is in other

than  or AUTO, and the vehicle speed is 3 mph (5 km/h) or higher for a certain amount of time when the surroundings are dark, a suggestion message will be displayed.

**? Suggestion to turn off the headlights**

If the headlights are left on for a certain amount of time after the engine switch has been turned off, a suggestion message will be displayed.

When the headlight switch is in the AUTO position: The message asking if you wish to turn the headlights off is displayed. To turn the headlights off, select "Yes".

If the driver's door is opened after the engine switch is turned off, this suggestion message will not be displayed.

**? Customization**


The suggestion function can be turned on/off. (→P.642)

Head-up display\*

\*: If equipped

The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield.


System components

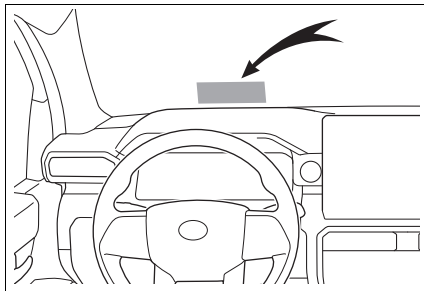

The meter display type setting of head-up display can be changed. (→P.99, 108)

The content displayed will defer according to the driving conditions and display mode of the head-up display. Depending on the situation, pop-up displays will also be displayed.


? Full

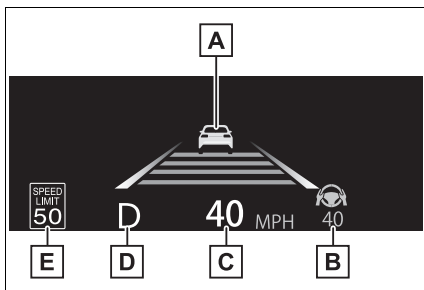

Illustrations used in this text are intended as examples, and may differ from the image that is actually displayed by the head-up display.


- A Driving support system display area/Navigation system-linked display area/Tachometer display area
- B Driving support system display area
- C Speedometer
- D Shift position/shift range
- E RSA (Road Sign Assist) display (if equipped)

? Standard

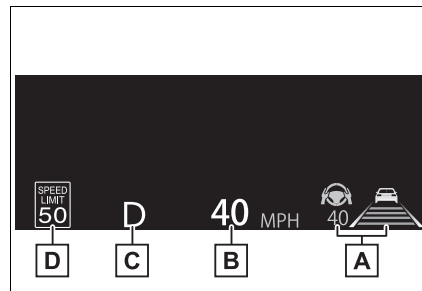

Illustrations used in this text are intended as examples, and may differ from the image that is actually displayed by the head-up display.

- A Driving support system display area
- B Speedometer
- C Shift position/shift range
- D RSA (Road Sign Assist) display (if equipped)

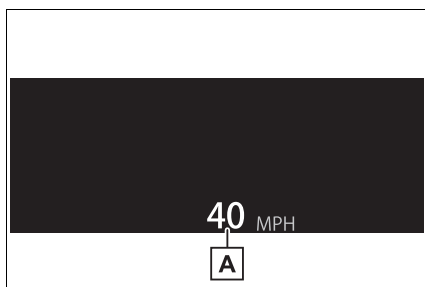? **Minimum**

A Speedometer

? **Head-up display will operate when**

The engine switch is in ON.

? **When using the head-up display**

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

? **Street name display**


Only street names which are included in the map data will be displayed.

 **WARNING**
? **When using the head-up display**

- ? Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.
- ? Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc., ahead of the vehicle.


 **NOTICE**
? **Head-up display projector**

- ? Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.

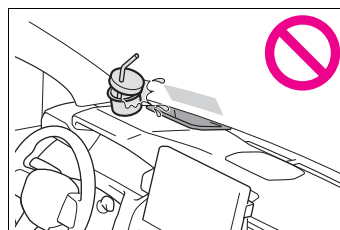

- ? Do not place anything on or put stickers onto the head-up display projector. Doing so could interrupt head-up display indications.
- ? Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector. Doing so could cause mechanical malfunctions.

**Using the head-up display**
? **Changing settings of the head-up display**

The following settings can be changed on “ Settings” of the multi-information display.

(→P.644)

- Enabling/disabling the head-up display

Select to enabling/disabling the head-up display.

- Brightness and vertical position of the head-up display

Select to adjust the brightness or

vertical position of the head-up display.

- Head-up display type

Select to change head-up display type.


- Display angle

Select to adjust the angle of the head-up display.

? **Enabling/disabling of the head-up display**

If the head-up display is disabled, it will remain disabled when the engine switch is turned off then back to ON.

? **Display brightness**

The brightness of the head-up display can be adjusted on “ Settings” of the multi-information display. Also, it is automatically adjusted according to the ambient brightness.

? **Head-up display automatic position adjustment**

If the display position is recorded into memory, the head-up display will be automatically adjusted to the desired position.

? **When the battery is disconnected**

The customize settings of the head-up display will be reset.

 **WARNING**

? **Caution for changing settings of the head-up display**

If the engine is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 **NOTICE**

? **When changing the settings of the head-up display**

To prevent battery discharge, ensure that the engine is operating while changing the settings of the head-up display.

**Driving support system status**

Displays the operational status of the following systems:

- Dynamic radar cruise control (→P.283)
- LTA (Lane Tracing Assist) (→P.263)
- LDA (Lane Departure Alert) (→P.268)

Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

### Navigation system-linked display area

Displays the following items which are linked to the navigation system:

- Street name
- Route guidance to destination
- Compass (heading-up display)

### Pop-up display

Pop-up displays for the following systems will be displayed when necessary:

#### ? Driving support systems

Displays a warning/suggestion/advice message or the operating state of a relevant system.

- PCS (Pre-Collision System) (→P.252)
- LTA (Lane Tracing Assist) (→P.263)
- LDA (Lane Departure Alert) (→P.268)
- Dynamic radar cruise control (→P.283)

Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

#### ? Warning message

Some warning messages are displayed when necessary,

according to certain conditions.

Details of content displayed on the head-up display may differ from that displayed on the multi-information display.

#### ? Audio system operation status

Displayed when an audio remote control switch on the steering wheel is operated.

#### ? Hands-free system status

Displayed when the hands-free system is operated.

#### ? When a pop-up display is displayed

When a pop-up display is displayed, a current display may no longer be displayed. In this case, the display will return after the pop-up display disappears.

### Tachometer display area

Displays the engine speed in revolutions per minute.

#### ? Head-up display is displayed when

The engine switch is in ON.

- ? Tachometer is displayed when all of the following conditions are met:
- Driving support system information (→P.119) is not displayed.
  - When Sport mode is selected.
  - Full mode (→P.117) is selected as head-up display type.

Fuel consumption information

Fuel consumption information can be displayed on the multimedia system.

Consumption


? Current fuel consumption screen

- 1 Select  on the main menu.



- 2 Select "Trip information".

If a screen other than "Current" is displayed, select "Current".

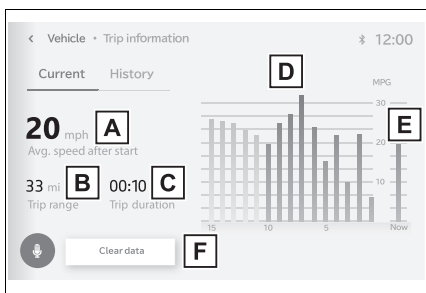

- A** Average vehicle speed since the engine was started.
- B** Trip range
- C** Elapsed time since the


engine was started.

- D** Fuel consumption in the past 15 minutes
- E** Current fuel consumption
- F** Resetting the consumption data

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

? History fuel consumption screen

- 1 Select  on the main menu.

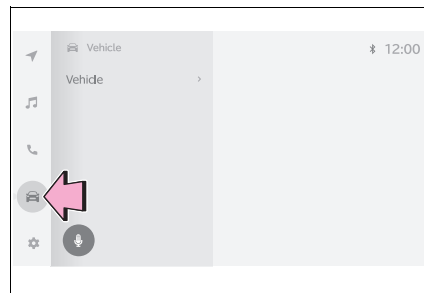


2

Vehicle status information and indicators

## 2 Select "Trip information".

If a screen other than "History" is displayed, select "History".

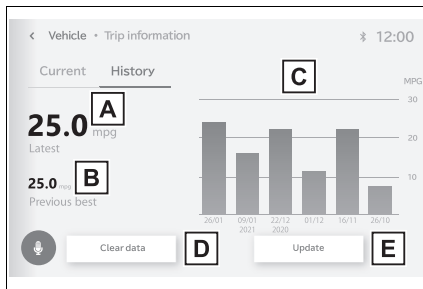

- A** Latest fuel consumption
- B** Best recorded fuel consumption
- C** Previous fuel consumption record
- D** Resetting the history data
- E** Updating the latest fuel consumption data

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

#### ? Updating the history data

Update the average fuel consumption by selecting "Update" to measure the current fuel consumption again.

#### ? Resetting the data

The fuel consumption data can be deleted by selecting "Clear data".

#### ? Trip range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

As a result, the actual distance that can be driven may differ from that displayed.

**3-1. Key information**

Keys ..... 124

Digital key ..... 128

**3-2. Opening, closing and locking the doors and tailgate**

Side doors ..... 130

Power running boards. 134

Tailgate ..... 137

Smart key system ..... 147

**3-3. Adjusting the seats**

Front seats ..... 152

Rear seats ..... 154

Head restraints ..... 157

**3-4. Adjusting the steering wheel and mirrors**

Steering wheel ..... 160

Inside rear view mirror 161

Digital Rear-view Mirror 162

Outside rear view mirrors  
..... 171**3-5. Opening, closing the windows and moon roof**

Power windows ..... 173

Power back window .... 176

Moon roof ..... 177

**3-6. Favorite settings**


My Settings ..... 180



Keys

The keys

The following keys are provided with the vehicle.

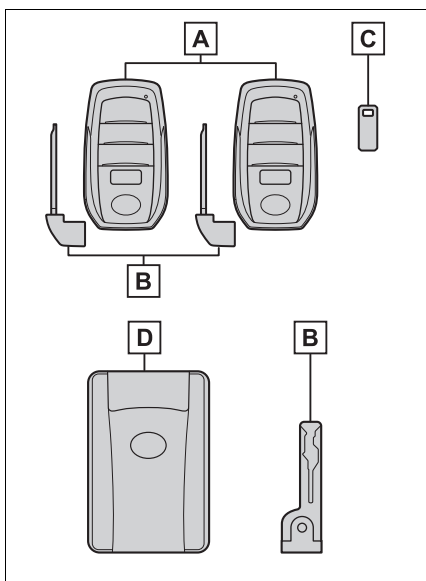


- A** Electronic keys
  - Operating the smart key system (→P.147)
  - Operating the wireless remote control function (→P.126)
- B** Mechanical keys
- C** Key number plate
- D** Card key (electronic key) (if equipped)
  - Operating the smart key system (→P.147)


- ? **Card key (if equipped)**
  - ? The card key is not waterproof.
  - ? The mechanical key that is stored inside the card key should be

used only if a problem arises, such as when the card key does not operate properly.

- ? If it is difficult to take out the mechanical key, push down the release button using a pen tip, etc. If it is still difficult to pull it out, use a coin, etc.
- ? To store the mechanical key in the card key, insert it while pressing the release button.

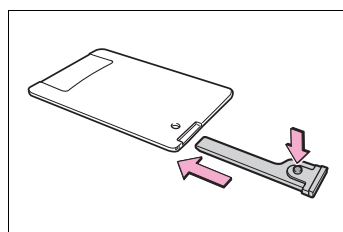

- ? If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Toyota emblem.

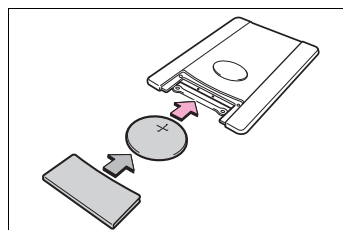

- ? **When riding in an aircraft**

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag, etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.
- ? **Electronic key battery depletion**
  - ? The standard battery life is 1 to 2 years. (The card key battery life is

about a year and a half.)

- ? If the battery becomes low, an alarm will sound in the cabin and a message will be shown on the multi-information display when the engine is stopped.
- ? To reduce key battery depletion when the electronic key is to not be used for long periods of time, set the electronic key to the battery-saving mode. (→P.148)
- ? As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary.
  - The smart key system or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.
- ? To avoid serious deterioration, do not leave the electronic key within 3 ft. (1 m) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Recharging cellular phones or cordless phones
  - Table lamps
  - Induction cookers

? **If a message regarding the state of the electronic key or engine switch mode, etc. is shown**

To prevent trapping the electronic key inside the vehicle, leaving the vehicle carrying the electronic key on your person without turning the engine switch to OFF or other passengers from unintentionally taking the key out of the vehicle, etc., a message that prompts the user to confirm the state of the electronic

key or engine switch mode may be shown on the multi-information display. In those cases, follow the instructions on the display immediately.

? **Replacing the battery**

→P.553

? **Confirmation of the number of registered keys**

The number of keys already registered to the vehicle can be confirmed. Ask your Toyota dealer for details.


? **If “A New Key has been Registered Contact Your Dealer for Details” is shown on the multi-information display**

This message will be displayed each time the driver’s door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered. If this message is displayed but you have not had a new electronic key registered, ask your Toyota dealer to check if an unknown electronic key (other than those in your possession) has been registered.

 NOTICE

? **To prevent key damage**

- ? Do not drop the keys, subject them to strong shocks, or bend them.
- ? Do not expose the keys to high temperatures for a long period of time.
- ? Do not get the keys wet or wash them in an ultrasonic washer, etc.
- ? Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- ? Do not disassemble the keys.


 NOTICE

- ? Do not attach a sticker or anything else to the surface of the electronic key.
- ? Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.
- ? **Carrying the electronic key on your person**  
Carry the electronic key 3.9 in. (10 cm) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 3.9 in. (10 cm) of the electronic key may interfere with the key, causing the key to not function properly.
- ? **In case of a smart key system malfunction or other key-related problems**  
→P.602
- ? **When an electronic key is lost**  
→P.601
- ? **Handling the card key (if equipped)**
- ? Do not apply excess force when inserting the mechanical key into the card key. Doing so may damage the card key.
- ? If the battery or card key terminals get wet, the battery may corrode and the card key may stop working. If the key is dropped into water, or if drinking water, etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have your Toyota dealer replace the battery.

- ? Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
  - ? If the battery cover is frequently removed, the battery cover may become loose.
  - ? When installing the battery, make sure to check the direction of the battery.
- Installing the battery in the wrong direction may cause the battery to deplete rapidly.
- ? The surface of the card key may be damaged, or its coating may peel off in the following situations:
    - The card key is carried together with hard objects, such as coins and keys.
    - The card key is scraped with a sharp object, such as the tip of a mechanical pencil.
    - The surface of the card key is wiped with thinner or benzene.

### Wireless remote control

The electronic keys are equipped with the following wireless remote control:

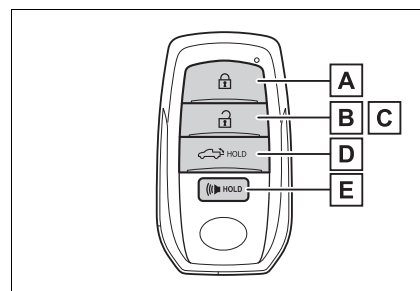

**A** Locks the doors and the tail-

gate (→P.130)

- B** Unlocks the doors and the tailgate (→P.130)
- C** Opens the windows\*<sup>1</sup> and the moon roof\*<sup>1, 2</sup> (→P.130)
- D** Opens/closes the power tailgate\*<sup>2</sup>. (→P.137)
- E** Sounds the alarm


\*<sup>1</sup>: This setting must be customized at your Toyota dealer.

\*<sup>2</sup>: If equipped

? **Theft deterrent panic mode**

When **HOLD** is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the electronic key.

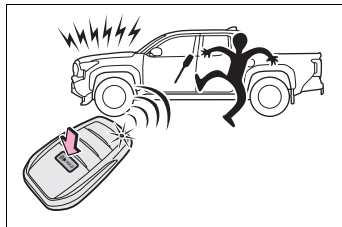

**Using the mechanical key**

Electronic key: To take out the mechanical key, slide the release lever **A** and take the key out.


Card key\* : To take out the mechanical key, push the release button and take the key

out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P.602)

\* : If equipped

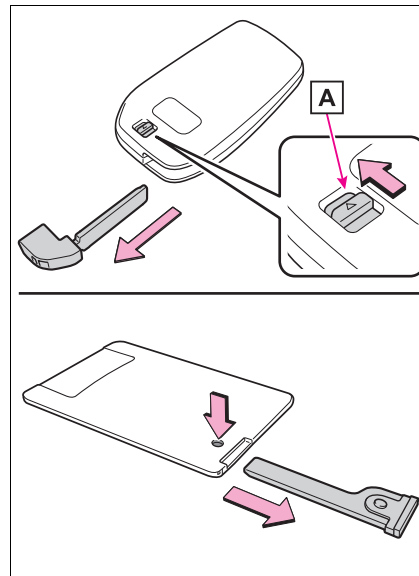

? **If you lose your mechanical keys**

→P.601

? **If a wrong key is used**

The key cylinder rotates freely, isolated from the internal mechanism.

**Digital key\***

\*: If equipped

**A smartphone can be used instead of the electronic key of the vehicle by installing the dedicated Digital Key App on a smartphone. Also, Digital Key can be shared with your family or friends using the Digital Key App.**

**Digital key usage conditions**

In order to use the Digital Key, you need to install the Toyota App. Register the Vehicle to the customer's Toyota App profile, and subscribe to Remote Services, and enroll in Digital Key.

**Digital key precautions**

- A Digital Key can be used when the smartphone and server can communicate. The Digital Key may become unusable if the smartphone is not connected to the Internet. Be sure to carry the electronic key of the vehicle if traveling to a location with unreliable communications.
- If the smartphone battery is depleted, the smartphone cannot be used as Digital Key. If the battery level is low, be sure to charge the smartphone prior to going out.
- The Digital Key system is related to the Smart key system. If the Smart key system has been deactivated in the vehicle customization setting, the Digital Key will also be disabled.
- The Digital Key cannot be used to lock or unlock the doors by touching or gripping a door handle. (Doors can be locked or unlocked using the Digital Key App.)
- Depending on the radio wave environment, the Digital Key may not be able to be used. (→P.149)
- When transferring vehicle ownership, make sure to delete the Digital Keys.
- If the vehicle is not operated for 14 days or more, the Digital Key will not connect automatically. Therefore, it may take some time before the system operates after a door handle is touched.
- A part of the services may be stopped for a certain period of time due to server maintenance. However, registered Digital Keys can be used during the maintenance.
- A smartphone with the Digital Key App enabled will be able to lock and unlock the doors, start the engine and perform

any other operations as same as the electronic key of the vehicle. Be especially careful not to lose the smartphone or allow it to be stolen.

If the smartphone is lost or stolen, contact your Toyota dealer immediately.


- When taking your vehicle to a Toyota dealer for an inspection or repairs, make sure to bring an electronic key.
- With the Digital Key alone, no vehicle lights will illuminate when approached to the vehicle.

Side doors

Unlocking and locking the doors from the outside

? Smart key system (entry function)

Carry the electronic key to enable this function.

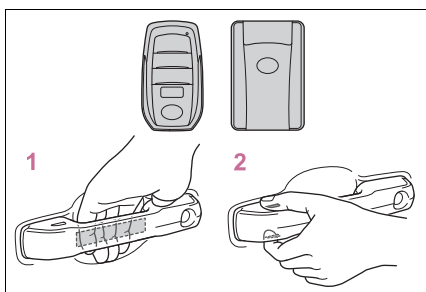

- 1 Grip the driver's door handle to unlock the door. Holding the driver's door handle for approximately 2 seconds unlocks all the doors. Grip front passenger door handle to unlock all the doors. \*1, 2

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.


- 2 Touch the lock sensor (indentation on the upper part or lower part of the handle) to lock all the doors.

Check that the door is securely locked.

\*1: Vehicles with front passenger door entry function

\*2: The door unlock settings can be changed.

? Wireless remote control

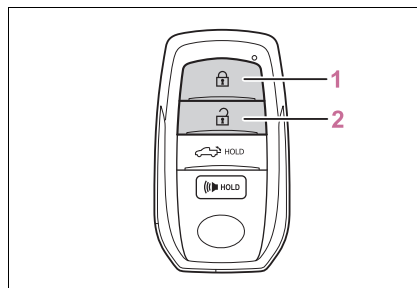

- 1 Locks all the doors and the tailgate

Check that the doors and the tailgate are securely locked.

- 2 Unlocks all the doors and the tailgate

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other door and the tailgate.





Press and hold to open the windows\*1 and the moon roof\*1, 2

\*1: This setting must be customized at your Toyota dealer.

\*2: If equipped




? Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the engine switch off.
- 2 When the indicator light on the key surface is not on, press and hold ,  (if equipped) or  HOLD for approximately 5 seconds while pressing and holding .

The setting changes each time an operation is performed, as shown below. (When changing the setting


continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

Multi-information display/Beep	Unlocking function
 <p>*1 *2 Exterior. Beeps 3 times</p>	<p>Holding the driver's door handle unlocks only the driver's door.</p>
 <p>*1 *2 Exterior. Beeps twice</p>	<p>Holding the front passenger door handle<sup>*3</sup> unlocks all the doors and tailgate.</p>
 <p>*1 *2 Exterior. Beeps twice</p>	<p>Holding driver's door handle or front passenger door handle<sup>*3</sup> unlocks all the doors and tailgate.</p>

\*1: Vehicles with 7-inch display

\*2: Vehicles with 12.3-inch display

\*3: Vehicles with front passenger door entry function

Vehicles with an alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 60 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In a case that the alarm is triggered, immediately stop the alarm. (→P.76)

? **Impact detection door lock release system**

In the event that the vehicle is sub-

ject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

? **Operation signals**

A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)


A buzzer sounds to indicate that the windows are operating.

? **Security feature**

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

? **When the doors cannot be locked by the lock sensor on the upper part of the door handle**

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

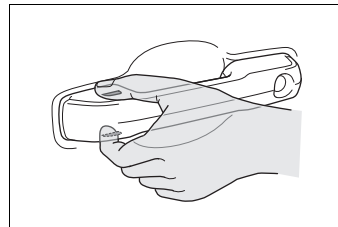

? **Open door warning buzzer**

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

? **Setting the alarm \***

Locking the doors will set the alarm system. (→P.76)

\* : If equipped



? **Conditions affecting the operation of the smart key system or wireless remote control**

→P.149

? **If the smart key system or the wireless remote control does not operate properly**

Use the mechanical key to lock and unlock the doors. (→P.602)

Replace the key battery with a new one if it is depleted. (→P.553)

? **If the battery is discharged**

The doors cannot be locked and unlocked using the smart key system or wireless remote control. Lock or unlock the doors using the mechanical key. (→P.602)

? **Rear seat reminder function (if equipped)**

? In order to remind you not to forget luggage, etc., in the rear seat, when the engine switch is turned to OFF after any of the following conditions are met, a buzzer will sound and a message will be displayed on the multi-information display for approximately 6 seconds.

- The engine is started within 10 minutes after opening and closing a rear door.
- A rear door has been opened and closed after the engine was started.

However, if a rear door is opened and then closed within approximately 2 seconds, the rear seat reminder function may not operate.

? The rear seat reminder function determines that luggage, etc., has been placed in a rear seat based on opening and closing of a rear door. Therefore, depending on the situation, the rear seat reminder function may not operate and you may still forget luggage, etc., in the rear seat, or it may operate unnecessarily.

? The rear seat reminder function

can be enabled/disabled. (→P.640)

? **Customization**

Some functions can be customized. (→P.640)



**WARNING**

? **To prevent an accident**

Observe the following precautions while driving the vehicle.

Failure to do so may result in a door opening and an occupant falling out of the vehicle, resulting in death or serious injury.

? Ensure that all doors are properly closed and locked.

? Do not pull the inside handle of the doors while driving.

Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.


? Set the rear door child-protector locks when children are seated in the rear seats.

? **When opening or closing a door**

Check the surroundings of the vehicle such as whether the vehicle is on an incline, whether there is enough space for a door to open and whether a strong wind is blowing. When opening or closing the door, hold the door handle tightly to prepare for any unpredictable movement.


### Unlocking and locking the doors from the inside

#### ? Door lock switches (to lock/unlock)

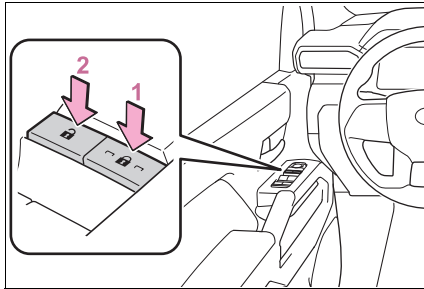

- 1 Locks all the doors and the tailgate
- 2 Unlocks all the doors and the tailgate

#### ? Inside lock buttons

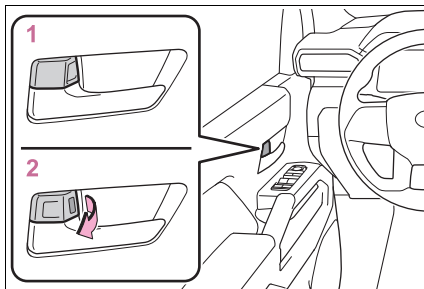

- 1 Locks the door
- 2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

#### ? Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- 2 Close the door.

The door cannot be locked if the engine switch is in ACC or ON, or

the electronic key is left inside the vehicle. However, the key may not be detected correctly and the door may be locked.


#### ? Open door warning buzzer

If a door or hood (vehicles with alarm) is not fully closed, a buzzer will sound when the vehicle speed reaches 3 mph (5 km/h).

The open door(s), hood (vehicles with alarm) or tailgate is indicated on the multi-information display.

### Rear door child-protector lock (Double Cab models only)

The door cannot be opened from inside the vehicle when the lock is set.

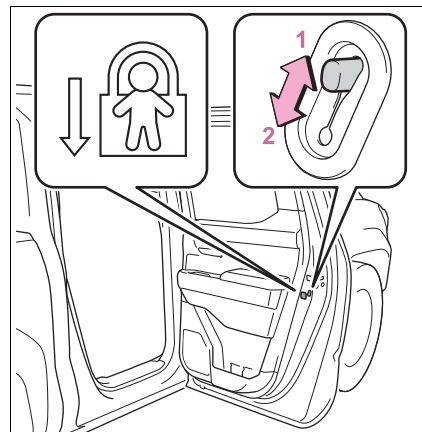

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

3

Before driving

### Automatic door locking and unlocking systems

The following functions can be set or canceled:

For instructions on customizing, refer to P.640.

Function	Operation
Speed linked door locking function	All doors are automatically locked when vehicle speed is approximately 12 mph (20 km/h) or higher.
Shift position linked door locking function (Automatic transmission model only)	All doors are automatically locked when the shift position is shifted to a position other than P.
Shift position linked door unlocking function (Automatic transmission model only)	All doors are automatically unlocked when the shift position is shifted to P.
Driver's door linked door unlocking function	All doors are automatically unlocked when driver's door is opened within approximately 45 seconds after turning the engine switch off.

### Power running boards\*

\*: If equipped

**The power running boards deploy when opening a door or by using the switch inside the vehicle.**

**The power running boards stow by closing a door, operating the switch inside the vehicle, or by driving 3 mph (5 km/h) or higher.**

#### WARNING

#### ? Cautions regarding the power running boards

Observe the following precautions. Failure to do so may cause serious injury.

? Check to make sure that all passengers and people in the vehicle's surrounding area do not have a hand on the boards or any part of their body in a position where it could be caught between the boards and the vehicle when the power running boards is being operated.

? Confirm that the boards have completely deployed or stowed before getting in or out of the vehicle. If someone gets in or out of the vehicle during the power running boards operation, the boards may stop deploying or stowing.

? Take care when pressing the power steps switch. The boards will deploy or stow and may hit other people or objects.

**⚠ WARNING**

? Always check that the power steps switch is turned off when cleaning the boards, before jacking up or placing any object under the vehicle, or if boards are not operating correctly.

? Do not allow children to operate the power running boards. Operating the power running boards so that the boards contacts someone can cause serious injury, and in some instances, even death.


**? Jam protection function**

Observe the following precautions.

Failure to do so may cause serious injury.

Do not place any body part between the boards and vehicle.

The jam protection function may not work depending on the shape of the object that is caught.

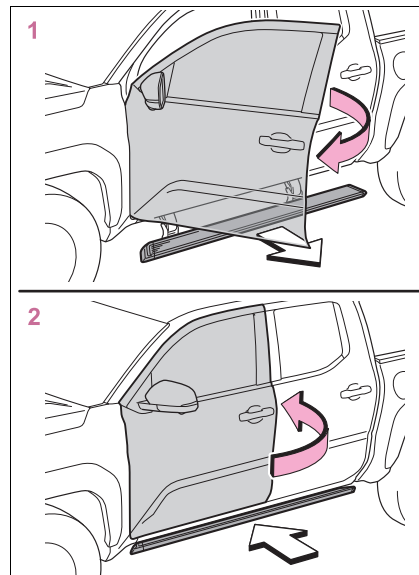**Side door linked operation**

- 1 Opening a door: The appropriate board deploys.
- 2 Closing a door: The appropriate board stows.

**3**

Before driving

**? Jam protection function**

If a board contacts an obstacle when deploying, it will stow. If an obstacle gets caught between a board and the vehicle when stowing, the board will deploy.

If an obstacle is detected 3 times in a row during power running board operation, the board will stop at the position it contacts the obstacle. When the side door on the same side as the board is opened and closed, or switch is operated once the obstacle is cleared, the board will attempt to stow or deploy again.

**? Automatic stowing function from vehicle moving**

The boards will be automatically stowed, under the following condi-

tion:

? Vehicle speed is approximately 3 mph (5 km/h) or higher

The boards will not automatically deploy again when vehicle speed returns to less than 3 mph (5 km/h).

? **If “Power Steps Unable to Deploy See Owner’s Manual” is displayed on the multi-Information display**

The board may not be completely deployed.

Close and open the door once more or use the switch inside the vehicle (→P.136) and completely deploy the board.

? **If “Power Steps Unable to Retract See Owner’s Manual” is displayed on the multi-Information display**

The boards may not be completely stowed.

Check that nothing is caught between the boards and the vehicle.

? **If “Power Steps System Malfunction Visit Your Dealer” is displayed on the multi-Information display**

The system may be malfunctioning. Have the vehicle inspected by Toyota dealer.

? **When snow or mud is attached to the boards or the boards are frozen**

The power running boards may not operate correctly. Before stepping on a board, check that it is completely deployed. If the power running boards are not operating correctly, turn the power steps switch off and refrain from use.

? **After recharging/reconnecting the battery**


If the power running boards have not completely deployed or stowed, the boards may not move in the intended direction the first time they are operated. However, from the

second time onwards, the boards will resume normal operation.

? **When getting in and out of the vehicle**

Take care because clothes and shoes may become dirty due to contact with the lower part of the vehicle body.

### Deploying and stowing the power running boards from inside

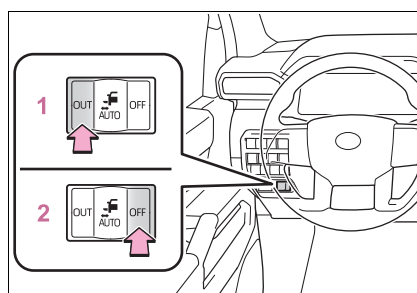

1 Deploys the running boards on both sides.

2 Stows the running boards on both sides.

Putting the switch in the neutral position sets the power running boards to AUTO mode. AUTO mode allows the deploying/stowing of the boards to be linked to opening/closing of the side doors.

Both power running boards are deployed when “OUT” position is selected. Operation only if steps are not already deployed.

Both power running boards are stowed when “OFF” position is selected. Operation only if steps are not already stowed.

**Tailgate**

The tailgate can be locked/unlocked and opened/closed by the following procedures.


**⚠ WARNING**

- ? **Caution while driving**  
Observe the following precautions. Failure to do so may result in death or serious personal injury.
- ? Do not drive with the tailgate open.
- ? Do not allow anyone to get on the rear step bumper.

**Locking/unlocking the tailgate**

? **Smart key system (vehicles with power tailgate)**

Carry the electronic key to enable this function.

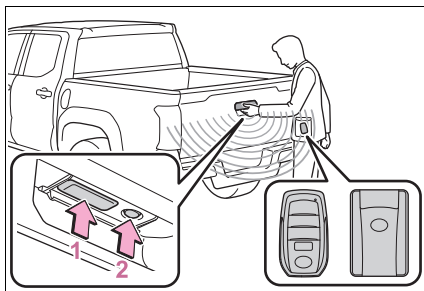

- 1 Opens/closes the tailgate  
The tailgate cannot be unlocked for 3 seconds after the tailgate is locked.
- 2 Locks the tailgate and all the doors


Check that the tailgate is securely locked.

? **Using the wireless remote control (if equipped)**

→P.126

**Opening/closing the tailgate (vehicles without power tailgate)**

? **Opening the tailgate**

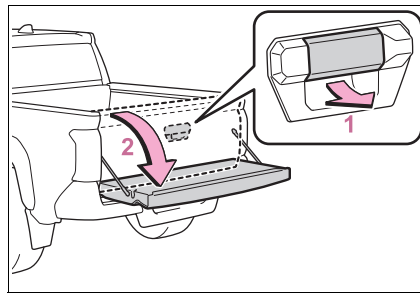

Unlock the tailgate before operating.

- 1 Pull the handle
- 2 Open the tailgate

Tailgate will open slowly due to the damper\*.


The support cables will hold the tailgate horizontal.

\*: If equipped

? **Closing the tailgate**

Lift and close the tailgate.

After closing the tailgate, try pulling it toward you to make sure it is securely locked.

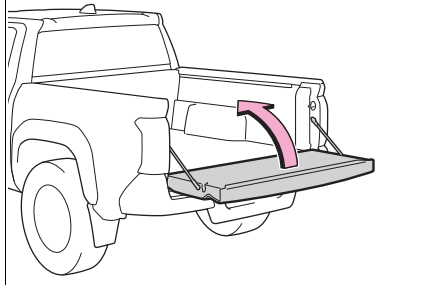

**NOTICE**  
 ? **After closing the tailgate**  
 Try pulling it toward you to make sure it is securely locked.

? **Changing the setting of tailgate opening alert**

When the tailgate is left open, a warning message is displayed on the multi-information display.

Settings can be changed on (vehicles with 7-inch display) or " Settings" (vehicles with 12.3-inch display) screen of the multi-information display. Select the " Alert" and change the settings. (→P.646)

The changed tailgate settings are not reset by turning the engine switch to OFF. In order to restore the original settings, they need to be changed back on the setting screen of the multi-information display.


**Opening/closing the tailgate (vehicles with power tailgate)**

? **Using the wireless remote control**

Press and hold the switch.  
 The power tailgate automatically

opens/closes.

Pressing the switch while the power tailgate is opening/closing reverses the operation, after two presses of the switch the function is stopped.

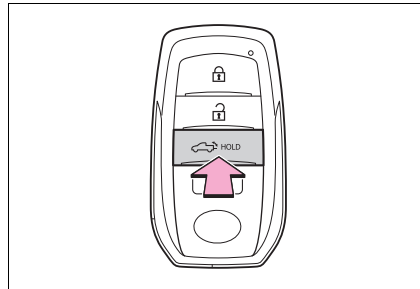


? **Opening/closing the tailgate from the inside**

Press and hold the switch.

The power tailgate automatically opens/closes.

Unlock the tailgate before operating.

Pressing the switch while the power tailgate is opening/closing reverses the operation, after twice press of the switch the function is stopped.

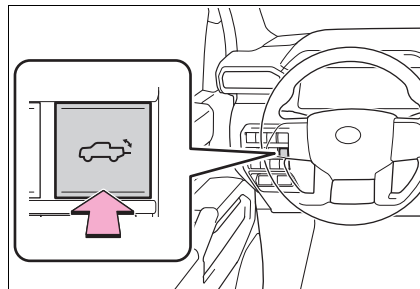

? **Opening the tailgate**

When the tailgate is unlocked:  
 Press the tailgate opener switch.

When the tailgate is locked: While carrying the electronic key on your




person, press the tailgate opener switch.

The power tailgate automatically opens.


Pressing the switch while the power tailgate is opening/closing reverses the operation. After two additional reverse operations, the switch function is stopped. To reactivate switch, manually close tailgate.

The support cables will hold the tailgate horizontal.

- ▶ Tailgate opener switch on tail lamps

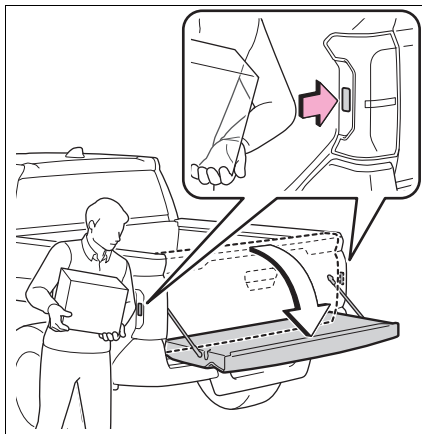

- ▶ Tailgate opener switch on tailgate handle

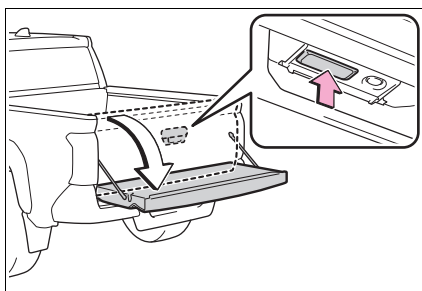


? **Closing the tailgate**

- ▶ Using the tailgate opener switch on tail lamps

Press the switch.

The power tailgate automatically closes.


Pressing the switch while the power tailgate is opening/closing reverses operation, after two presses of the switch the function is stopped.

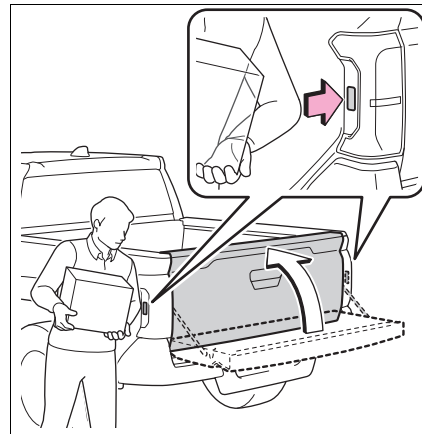

- ▶ Close assist

Lift the tailgate from the full-open position to at least 0.8 in. (2 cm) using hands or knee.

The tailgate closing assist will be activated, and the power tailgate will fully close automatically.

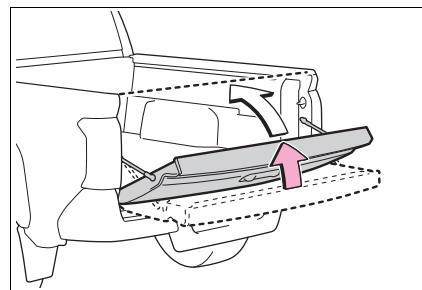



3


Before driving



### ? **Changing the setting of tailgate opening alert**

When the tailgate is left open, a warning message is displayed on the multi-information display.

Settings can be changed on  (vehicles with 7-inch display) or " Settings" (vehicles with 12.3-inch display) screen of the multi-information display.

Select the " Alert" and change the settings. (→P.640)

### ? **Tailgate closer**

In the event that the tailgate is left partially latched, the tailgate closer will automatically close it to the fully closed position.

Whatever the state of the engine switch, the tailgate closer operates.

### ? **Battery saving function**

When the engine switch is off and the tailgate is open for more than 8 hours, the close assist may not be activated.

If you unlock the doors, or open a door with the electronic key on your person, (→P.147) any of these things will wake the system and close assist will activate.

### ? **Power tailgate operating conditions**

The power tailgate can automatically open and close under the following conditions:

? When the power tailgate system is enabled. (→P.142)

? When the tailgate is unlocked.

However, if the tailgate opener switch on the tailgate handle or the tail lamps is pressed while carrying the electronic key on your person, the power tailgate will be operated even if the tailgate is locked.

(→P.138)

? Vehicle speed is below approximately 2 mph (3 km/h).

### ? **Operation of the power tailgate**

? The emergency flashers twice flash to indicate that the tailgate is opening/closing.

? While carrying the electronic key on your person, the tailgate can be operated when the other doors locked.

? When the power tailgate system is disabled, the power tailgate does not operate but it can be opened and closed by hand by pressing the tailgate open switch on the tailgate handle or the tail lamps.

? When the power tailgate automatically opens, if an abnormality due to people or objects is detected, operation will stop.

? Cargo pushing on, or leaning on the tailgate may cause it to open quickly. Lift or reposition cargo to prevent this risk prior to operating power tailgate.

Also, if customer pushes down on the tailgate with more than 99 lbf (441 N, 45 kgf) force, the clutch in the spindle will slip and the tailgate will open more quickly than normal.

### ? **Jam protection function**

The motor has detection function to detect jam, there are also sensors on each side of the tailgate. If something obstructs the power tailgate while it is closing, the tailgate will automatically stop.

After jam protection function operate, power tailgate system is disabled. The power tailgate system is enabled when the tailgate is fully closed. (→P.588)

### ? **Initializing the power tailgate**

If the tailgate is reattached or the battery is reinstalled, it must be initialized by manually closing the tailgate fully.

**? Manual mode**

The power tailgate changes to manual mode under the following conditions:


- Jam protection function operates.
- The power tailgate system is turned off on the multi-information display.
- When the power tailgate system has an internal failure.
- When the tailgate has been removed and re-attached (and the wire harness connectors re-attached) but the tailgate has not been fully closed yet.
- When the battery has been disconnected and re-attached while the tailgate is open but the tailgate has not been fully closed yet.

**? Customization**

Some functions can be customized. (Customizable features: →P.640)

**! WARNING****? Tailgate closer**

- ? In the event that the tailgate is left partially latched, the tailgate closer will automatically close it to the fully closed position. It takes several seconds before the tailgate closer begins to operate. Be careful not get fingers or anything else caught in the path of the power tailgate or tailgate hinges, as this may cause bone fractures or other serious injuries.

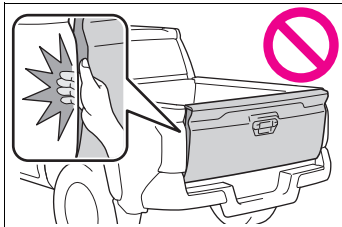

- ? Use caution when using the tailgate closer as it still operates when the power tailgate system is canceled.

**? Power tailgate**

Observe the following precautions when operating the power tailgate.

Failure to do so may cause death or serious injury.

- ? Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- ? If anyone is in the vicinity, make sure they are safely away from the tailgate so they will not be contacted by the tailgate or by cargo during opening and let them know that the tailgate is about to open or close.
- ? If the power tailgate system is turned off while the tailgate is operating automatically, the automatic operation is stopped. The tailgate then has to be operated manually. Take extra care when on upward inclines, as the tailgate may open unexpectedly.
- ? If the operating conditions of the power tailgate are no longer met, a buzzer may sound and the tailgate may stop opening or closing. The tailgate then has to be operated manually. Take extra care when on upward inclines, as the tailgate may open abruptly.
- ? Do not apply a large load to the edge of the tailgate during the operation of the tailgate opening. Take extra care as the tailgate may open abruptly.

**⚠ WARNING**

- ? In the following situations, the power tailgate may detect an abnormality and automatic operation may be stopped. In this case, the tailgate has to be operated manually. Take extra care when on upward inclines, as the tailgate may open abruptly.
- When the tailgate contacts an obstacle
- When the battery voltage suddenly drops, such as when the engine switch is turned to ON or the engine is started during automatic operation

**? Jam protection function**

Observe the following precautions. Failure to do so may cause death or serious injury.

- ? Never use any part of your body to intentionally activate the jam protection function.
- ? The jam protection function may not work if something gets caught just before the tailgate fully closes. Be careful to not get fingers or anything else caught.
- ? The jam protection function may not work depending on the shape of the object that is caught. Be careful to not get fingers or anything else caught.


**⚠ NOTICE**

**? To prevent tailgate closer malfunction**

Do not apply excessive force to the tailgate while the tailgate closer is operating. Applying excessive force may cause the tailgate closer to malfunction.

**? To prevent damage to the power tailgate**

- ? Make sure that there is no ice between the tailgate and frame that would prevent movement of the tailgate. Operating the power tailgate when excessive load is present on the tailgate may cause a malfunction.
- ? Take care not to damage the sensors (installed on the right and left edges of the power tailgate) with a knife or other sharp object. If the sensor is disconnected, the power tailgate will not close automatically.

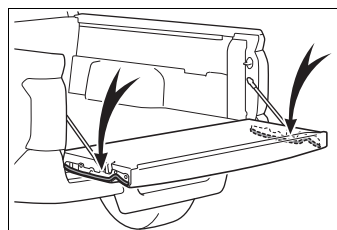

**Changing settings of the power tailgate system (vehicles with power tailgate)**

The settings of the power tailgate system can be changed by displaying the (vehicles with 7-inch display) or “ Settings” (vehicles with 12.3-inch display) - screen from the setting screen of the multi-information display.

The changed power tailgate settings are not reset by turning the engine switch to OFF. In order to restore the original settings, they

need to be changed back on the setting screen of the multi-information display.


### Removing the tailgate

#### ? Before removing the tailgate

Turn the tailgate opening alert and power tailgate system (if equipped) off before removing the tailgate. (→P.138, 142)

Use the connector covers\* when removing the tailgate to prevent the wire harness connectors from being contaminated.

\*: Contact a Toyota dealer to inquire about connector covers.

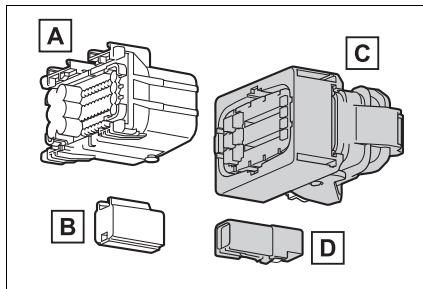


- A** Connector cover (Type A)
- B** Connector cover (Type B)
- C** Connector cover (Type C)
- D** Connector cover (Type D)


Store the connector covers in the glove box in a plastic bag when not using.

1 Open the tailgate.


▶ Vehicles without power tailgate

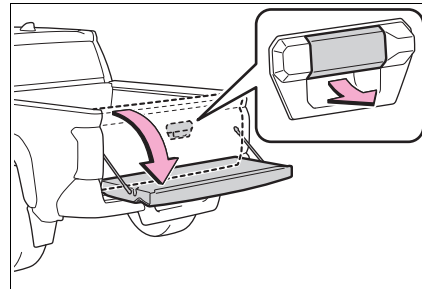

▶ Vehicles with power tailgate

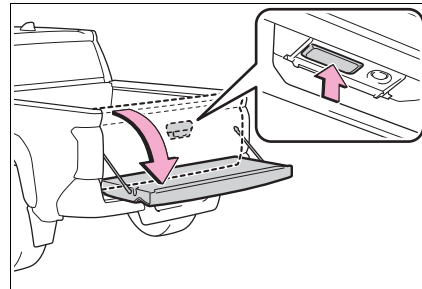


2 Push the tab **A** and move the connector lever **B**.

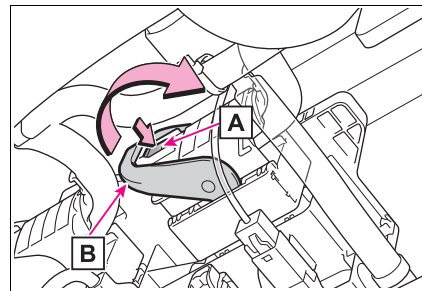

3


Before driving

- 3 Disconnect the wire harness connectors.

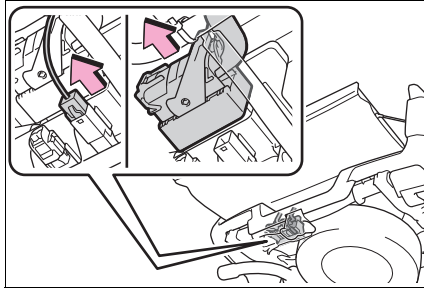

- 4 Install the connector cover (Type C and D) to the wire harness connector of the vehicle body frame.


The shape of each connector differs. Install connector cover to the corresponding connector.

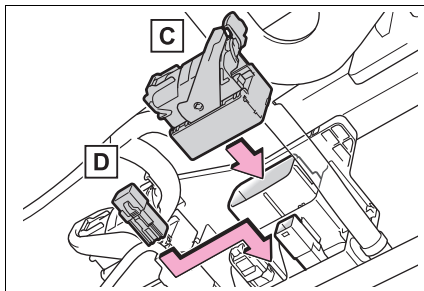


- C** Connector cover (Type C)  
**D** Connector cover (Type D)

- 5 Pull out the plastic wire protector located in the vehicle

bed by pressing the tabs and pulling the protector.

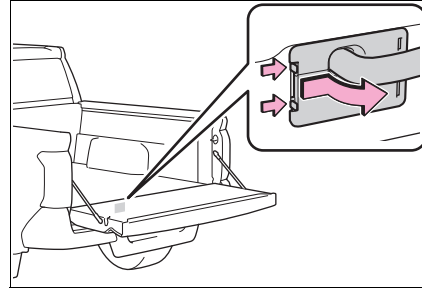


- 6 Pull out the wire harness from the vehicle bed.

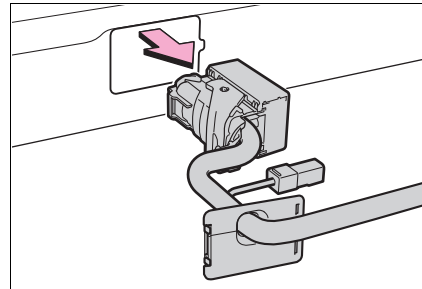

- 7 Install the connector cover (Type A and B) to the wire harness connector of the tailgate.

The shape of each connector differs. Install connector cover to the corresponding connector.

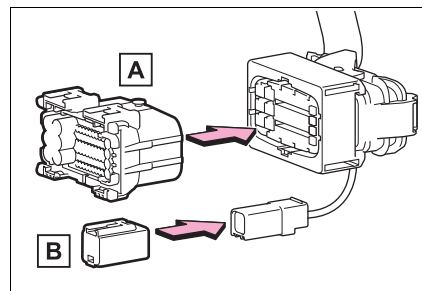


- A** Connector cover (Type A)  
**B** Connector cover (Type B)

? **Removing the tailgate**

1 Open the tailgate to the angle where the brackets on the support cables from the lugs on both sides can be released.

Lift the support cable bracket up and slide it off.


To unhook the support cable bracket, keep pulling up the clip on the bracket and unhook the bracket.

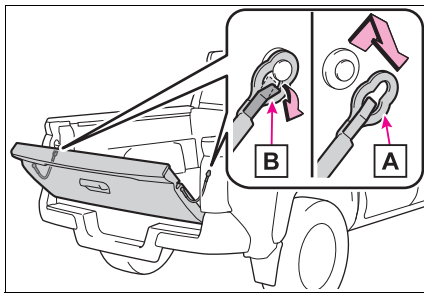


**A** Support cable bracket

**B** Clip


2 Tilt the tailgate to about 45° from vertical and pull out the right side of the tailgate to unhook the right side.

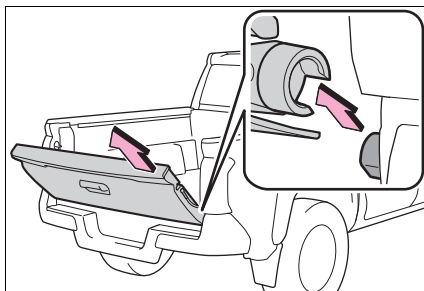

3 Tilt the tailgate up to 15°.

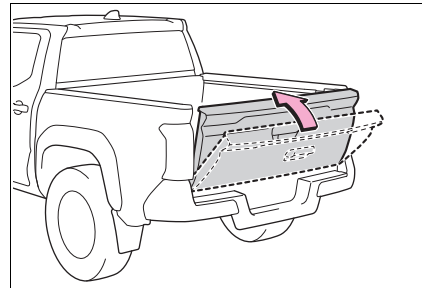

4 Slide the tailgate a little to the right to unhook the left side.

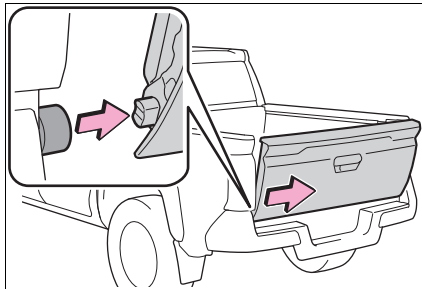

To attach the tailgate, follow the removal procedure in reverse order.

**! WARNING**

? **Before removing the tailgate**

Disconnect the wire harness between the tailgate and the vehicle.

Failure to do so may result in serious personal injury or damage to the vehicle components.


**! NOTICE**

? **To prevent damage to the tailgate wire harness**

Do not pull out all of the tailgate wire harness before opening the tailgate.

3

Before driving

 **NOTICE**

? **To prevent damage to the camera lens**  
Store the removed tailgate with the back-up camera lens facing upward.


? **To prevent damage to the tailgate and rear step bumper**  
Avoid possible contact between tailgate and rear bumper during tailgate removal and reinstall.

 **NOTICE**


? **To prevent damage to the rear step bumper**  
Do not allow more than one person to get on the rear step bumper at a time.

**Bed step**

For easier step-up loading.

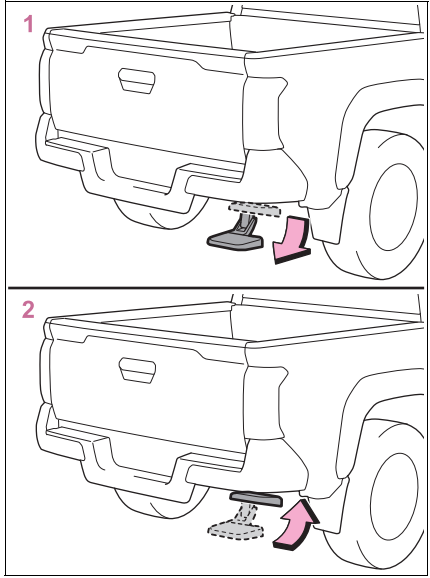


- 1 Deploy
- 2 Stow

? **After removing the tailgate**  
While the tailgate is removed, an open tailgate icon is displayed each time the engine switch is turned ON.  
This icon is removed by pressing  on meter control switches or customize (→P.138, 142).

? **Initializing the power tailgate (vehicles with power tailgate)**  
→P.140

**Rear step bumper**

For rear end protection and easier step-up loading.  
To use the rear step bumper, step on the shaded area in the illustration.

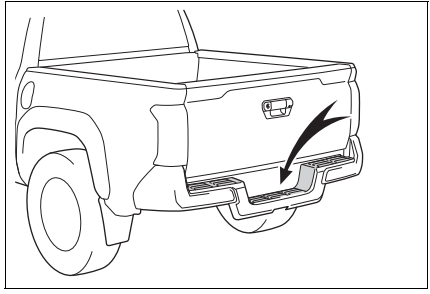




Smart key system

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. The driver should always carry the electronic key.


- Locks and unlocks the doors (→P.130)
- Locks and unlocks the tailgate (→P.137)
- Starts the engine (→P.210)

? Antenna location

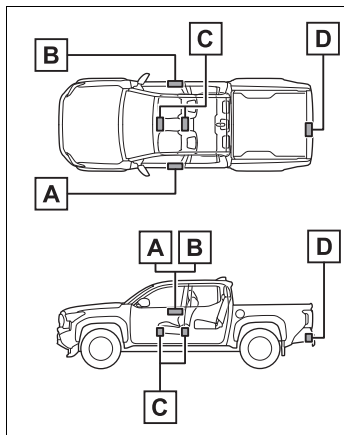

- A** Antenna outside the cabin (Driver side)
- B** Antenna outside the cabin (Passenger side) (If equipped)
- C** Antennas inside the cabin
- D** Antenna inside rear bumper (Vehicles with power tailgate)

? Effective range (areas within which the electronic key is detected)

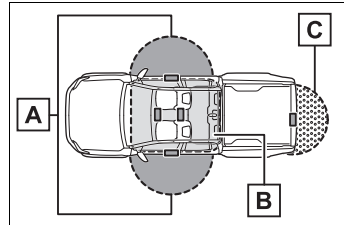

- A** When locking or unlocking the doors

The system can be operated when the electronic key is within about 2.3 ft. (0.7 m) of the driver side door handle and front passenger side door handle (if equipped). (Only the doors detecting the key can be operated.)

- B** When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

- C** When opening/closing the power tailgate (if equipped)

The system can be operated when the electronic key is within about 2.3 ft. (0.7 m) of the tailgate handle.

? If an alarm sounds or a warning message is displayed

An alarm sounds and warning message displays shown on the multi-information display are used to protect against unexpected accidents or theft of the vehicle resulting from erroneous operation. When a warning message is displayed, take appropriate measures based on the displayed message.

When only an alarm sounds, circumstances and correction proce-



dures are as follows.

? When an exterior alarm sounds once for 5 seconds

Situation	Correction procedure
An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

? When an interior alarm sounds continuously

Situation	Correction procedure
The engine switch was turned to ACC while the driver's door was open (The driver's door was opened when the engine switch was in ACC).	Turn the engine switch off and close the driver's door.

? **If "Key Detected in Vehicle" is shown on the multi-information display**

An attempt was made to lock the doors using the smart key system while the electronic key was still inside the vehicle. Retrieve the electronic key from the vehicle and lock the doors again.

? **Battery-saving function**

The battery-saving function will be activated in order to prevent the electronic key battery and the battery from being discharged while the vehicle is not in operation for a long time.

? In the following situations, the smart key system may take some time to unlock the doors. Also, the interior lights may not turn on when the doors are unlocked.


- The electronic key has been left in an area of approximately 11.5 ft.


(3.5 m) of the outside of the vehicle for 40 seconds or longer.

- The smart key system has not been used for 5 days or longer.
- ? If the smart key system has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door. In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to unlock the doors.


? **Turning an electronic key to battery-saving mode**

? When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press  twice while pressing and

holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart key system cannot be used. To cancel the function, press any of the electronic key buttons.

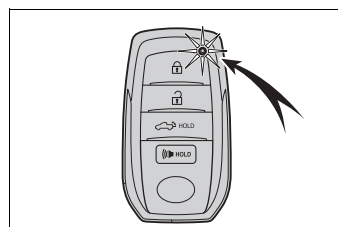

? Electronic keys that will not be used for long periods of time can be set to the battery-saving mode in advance.

? **When electronic key function stops**

If the position of the electronic key has not changed for a certain amount of time such as when the electronic key is left somewhere, the function of the electronic key stops to reduce depletion of the battery.

In this case, function can automatically be restored by moving the position of the key such as by lifting it up.

? **Conditions affecting operation**

The smart key system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart key system, wireless remote control and engine immobilizer system from operating properly.

- ? When the electronic key battery is depleted
- ? Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- ? When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- ? When other wireless keys (that emit radio waves) are being used nearby
- ? When carrying the electronic key together with the following devices that emit radio waves
  - Portable radio, cellular phone, cordless phone or other wireless communication devices
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- ? If window tint with a metallic content or metallic objects are attached to the rear window

? When the electronic key is placed near a battery charger or electronic devices

? When the vehicle is parked in a pay parking spot where radio waves are emitted.

If the doors cannot be locked/unlocked using the smart key system, lock/unlock the doors by performing any of the following:

- ? Bring the electronic key close to either front door handle and operate the entry function.
- ? Operate the wireless remote control.

If the doors cannot be locked/unlocked using the above methods, use the mechanical key. (→P.602)

If the engine cannot be started using the smart key system, refer to P.603.

? **Note for the entry function**

- ? Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
  - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
  - The electronic key is near the ground or in a high place, or too close to the center of the rear bumper.
  - The electronic key is on the instrument panel, or floor, or in the door pockets or glove box when the engine is started or engine switch modes are changed.
- ? Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna out-

side the cabin and the doors will become lockable from the outside, possibly trapping the electronic key inside the vehicle.

- ? As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- ? Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
- ? The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash, when the electronic key is within the effective range. (The doors will automatically be locked after approximately 60 seconds if the doors are not opened and closed.)
- ? If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- ? Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- ? When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- ? If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In this case, follow the following correction procedures to wash the vehicle:
  - Place the electronic key in a location 6 ft. (2 m) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart key system. (→P.148)
- ? If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- ? The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again.
- ? A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- ? If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.
- ? **When the vehicle is not driven for extended periods**
- ? To prevent theft of the vehicle, do not leave the electronic key within 6 ft. (2 m) of the vehicle.
- ? The smart key system can be deactivated in advance.
- ? Setting the electronic key to battery-saving mode helps to reduce key battery depletion. (→P.148)
- ? **To operate the system properly**
- ? Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected cor-

rectly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

? **If the smart key system does not operate properly**

? Locking and unlocking the doors and tailgate: →P.602

? Starting the engine: →P.603

? **Customization**

Some functions can be customized. (→P.640)

? **If the smart key system has been deactivated in a customized setting**

? Locking and unlocking the doors and opening the tailgate:  
Use the wireless remote control or mechanical key. (→P.130, 137, 602)

? Starting the engine and changing engine switch modes: →P.603

? Stopping the engine: →P.212

? Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.  
Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Toyota dealer for details on disabling the entry function.



**WARNING**

? **Caution regarding interference with electronic devices**


? People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should keep away from the smart key system antennas. (→P.147)  
The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Toyota dealer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.

### Front seats

The seats can be adjusted (longitudinally, vertically, etc.). Adjust the seat to ensure the correct driving posture.


### Adjustment procedure

► Manual seat (if equipped)

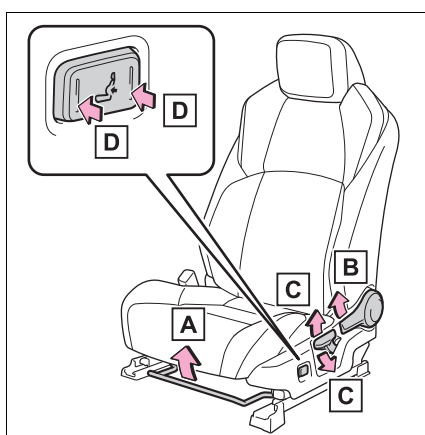

- A** Seat position adjustment lever
- B** Seatback angle adjustment lever
- C** Vertical height adjustment lever
- D** Seat lumbar support adjustment switch (driver's seat only)

► Power seat (if equipped)

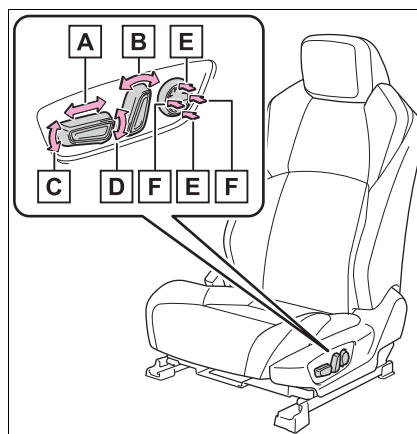

- A** Seat position adjustment switch
- B** Seatback angle adjustment switch
- C** Seat cushion (front) angle adjustment switch
- D** Vertical height adjustment switch
- E** Lumbar support height adjustment switch
- F** Lumbar support adjustment switch

? **When adjusting the seat**

- ? Make sure that any surrounding passengers or objects are not contact the seat.
- ? Take care when adjusting the seat so that the head restraint does not touch the ceiling.

**⚠ WARNING**

? **When adjusting the seat position**

- ? Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- ? Do not put your hands under the seat or near the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism.

- ? Make sure to leave enough space around the feet so they do not get stuck.

? **Seat adjustment**


- ? To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary. If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident. Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

- ? **Manual seat only:** After adjusting the seat, make sure that the seat is locked in position.

**Folding down and returning the front seatback**


? **Folding down the front seatback**

- 1 Pull the seatback lock release strap and fold the seatback down.

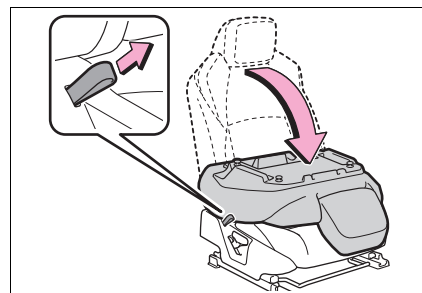

? **Returning the front seatback**

- 1 Pull the seatback lock release strap and raise the front seatback until it locks.

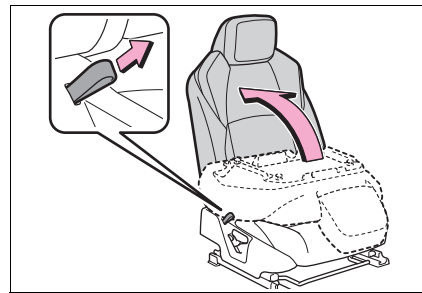

Check that the seat belts are not twisted or caught in the seatback.

**⚠ WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

3

Before driving

**⚠ WARNING**

- ? **When folding the front seat-back down**
- ? Do not fold the seatbacks down while driving.
- ? Stop the vehicle on level ground, set the parking brake and shift the shift lever to P (automatic transmission) or N (manual transmission).
- ? Do not allow anyone to sit on a folded seatback while driving.
- ? Be careful not to get your hand caught when folding the front seatback.
- ? **After returning the front seat-back to the upright position**
- ? Make sure that the seatback is securely locked in position by lightly pushing it back and forth.
- ? Check that the seat belts are not twisted or caught in the seatback.


**Rear seats\***

\*: If equipped

**The seatbacks of the rear seats can be folded down. The bottom cushion can be raised.**


**Folding down and returning the rear seatbacks**

- ? **Folding down the rear seatbacks**
- 1 Move the front seats forward. (→P.152)
- 2 Stow the rear seat belt buckles and the rear center seat belt. (→P.33, 34)
- 3 Use the seat belt hangers to prevent the belts from being tangled.

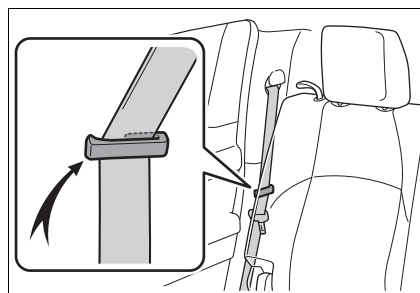

- 4 Lower the head restraint on the rear center seat to the lowest position and fold the head restraints on the rear outboard seats. (→P.158)
- 5 Pull the seatback lock release strap and fold the seatback down.


Each seatback may be folded separately.

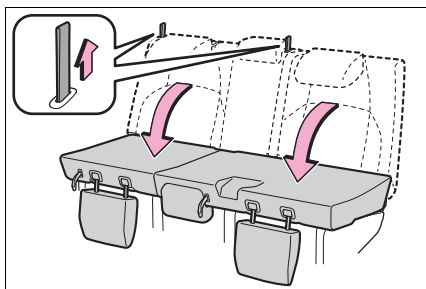

? **Returning the rear seatbacks**

- 1 Raise the rear seatback until it locks.

Check that the seat belts are not twisted or caught in the seatback.

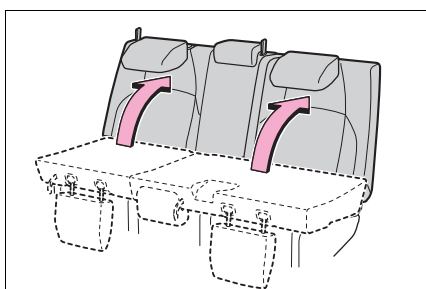

- 2 Returning the head restraints on the rear outboard seats to the original position. (→P.158)


**! WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

- ? **When folding the rear seatbacks down**
- ? Do not fold the seatbacks down while driving.

- ? Stop the vehicle on level ground, set the parking brake and shift the shift lever to P (automatic transmission) or N (manual transmission).
- ? Do not allow anyone to sit on a folded seatback while driving.
- ? Do not allow anyone to sit on the rear center seat if the rear right seat is folded down, as the seat belt buckle for the rear center seat belt is then concealed under the folded seat and cannot be used.
- ? Be careful not to get your hand caught when folding the rear seatbacks.
- ? Adjust the position of the front seats before folding down the rear seatbacks so that the front seats do not interfere with the rear seatbacks when folding down the rear seatbacks.

- ? **After returning the rear seatback to the upright position**
- ? Make sure that the seatback is securely locked in position by lightly pushing it back and forth. If the seatback is not securely locked, the red marking will be visible on the seatback lock release strap. Make sure that the red mark is not visible.

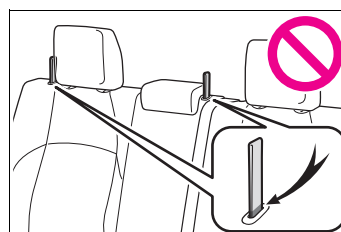


- ? Check that the seat belts are not twisted or caught in the seatback.




**Raising and returning the bottom cushions**

? **Raising the bottom cushions**

- 1 Move the front seats forward. (→P.152)
- 2 Stow the rear seat belt buckles.

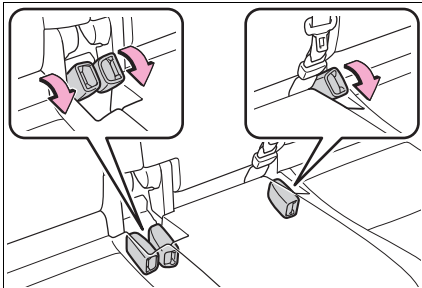


- 3 Use the seat belt hangers to prevent the belts from being tangled.

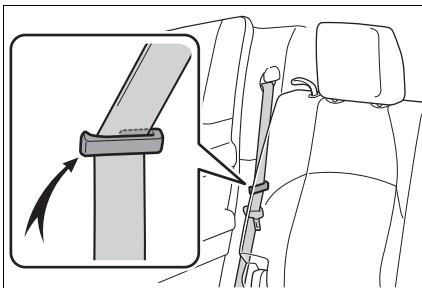

- 4 Lift the seat cushion and secure the strap button **A** to the seat back.

Each bottom cushion may be

raised separately.

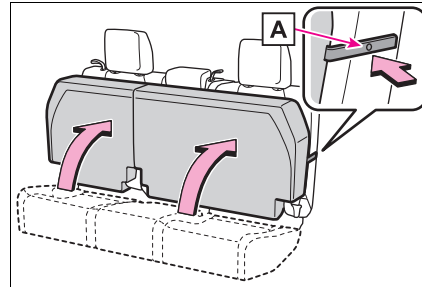


? **Returning the bottom cushions**

Release the strap button **A** from the seat back and use the other hand to carefully lower the bottom cushion.

Stow the strap in the bottom cushion.

Check that the seat belts are not twisted or caught in the seatback.

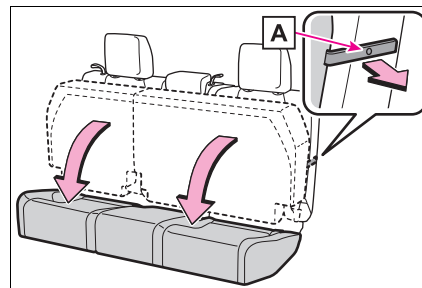

**WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

? **When raising the bottom cushion**

? Do not raise the bottom cushion while driving.

**! WARNING**

- ? Stop the vehicle on level ground, set the parking brake and shift the shift lever to P (automatic transmission) or N (manual transmission).
- ? Do not allow anyone to sit on the storage box while driving.
- ? Do not allow anyone to sit on the rear center seat if the rear right seat is raised, as the seat belt buckle for the rear center seat belt is then concealed on the bottom cushion and cannot be used.
- ? Adjust the position of the front seats before raising the bottom cushions so that the front seats do not interfere with the bottom cushion when raising the bottom cushion.
- ? **When returning the bottom cushions**
- ? Be careful not to get your hands or feet pinched in the seat.
- ? Check that the seat belts are not twisted or caught in the bottom cushions.
- ? Do not drive with the cushion raised up.

**Head restraints**

**Head restraints are provided for all seats.**

**! WARNING**


- ? **Head restraint precautions**  
Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.
- ? Use the head restraints designed for each respective seat.
- ? Adjust the head restraints to the correct position at all times.
- ? After adjusting the head restraints, push down on them and make sure they are locked in position.
- ? Do not drive with the head restraints removed.

3

Before driving

**Adjusting a head restraint**


? **Front seats**

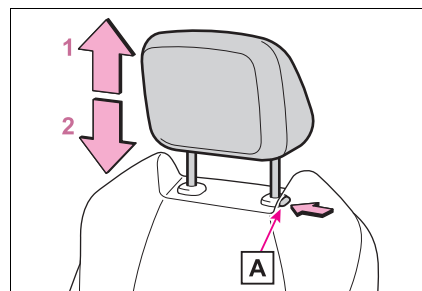

- 1 Up  
Pull the head restraints up.
- 2 Down  
Push the head restraint down while pressing the lock release button **A**.

? **Rear seats (If equipped)**

► Center

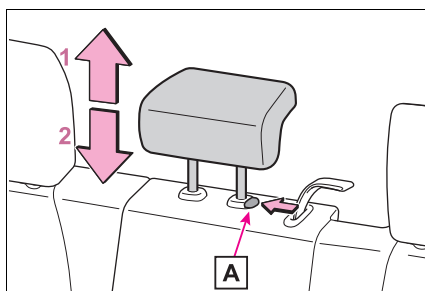


1 Up

Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button **A**.

► Outer

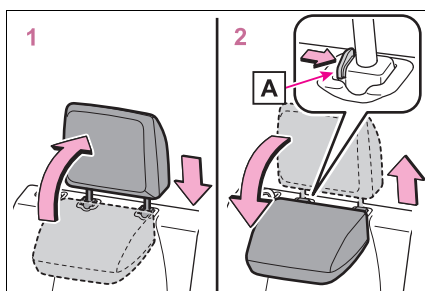


1 To use

Lift up the head restraint back to the neutral position and then push the head restraint down.

2 To fold

Lift up the head restraint while pressing the lock release button **A**, and fold it forward.

? **Adjusting the height of the head restraints (front seat)**

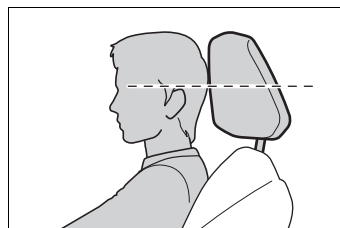

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

? **Adjusting the rear center seat head restraint (If equipped)**


Always raise the head restraint one level from the stowed position when using.

**Removing the head restraints**

? **Front seats**

Pull the head restraint up while pressing the lock release button **A**.

If the head restraint touches the ceiling, making the removal difficult, change the seat height or angle. (→P.152)

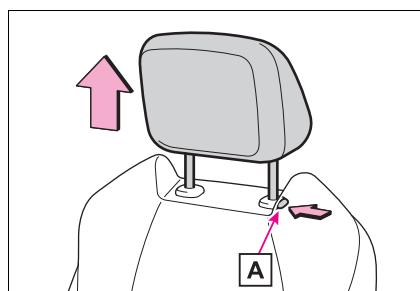


? **Rear seats (If equipped)**

► Center

Pull the head restraint up while pressing the lock release button


**A**.

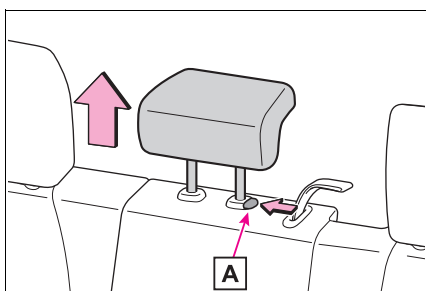

► Outer

Pull the head restraint up while pressing both lock release buttons

**A**.

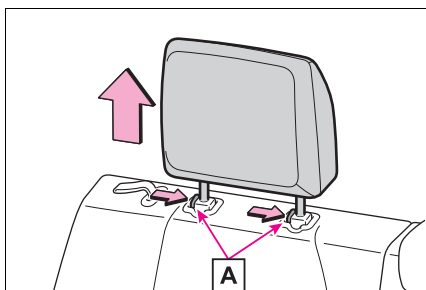


**Installing the head restraints**

? **Front seats**

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button **A** when lowering the head restraint.

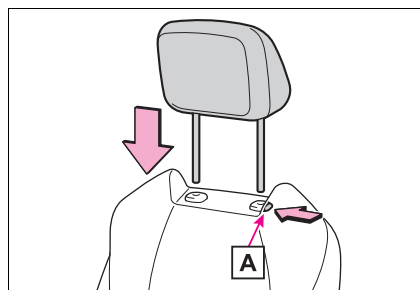


? **Rear seats (If equipped)**

► Center


Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button **A** when lowering the head restraint.

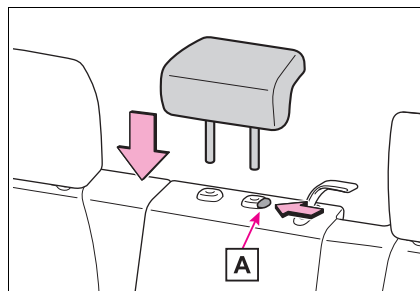

► Outer

Align the head restraint with the installation holes and push it down to the lock position.

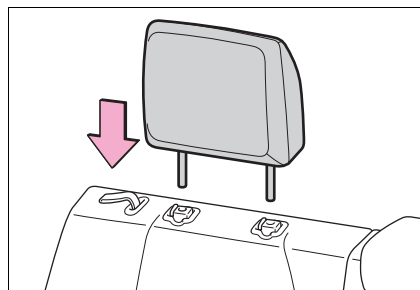


3  
Before driving

### Steering wheel


#### Adjustment procedure

- 1 Hold the steering wheel and push the lever down.

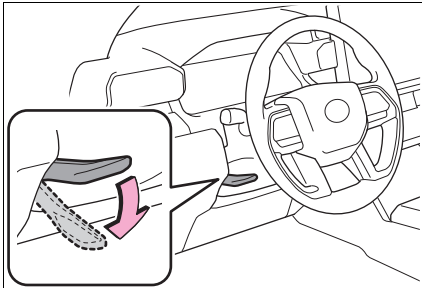

- 2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

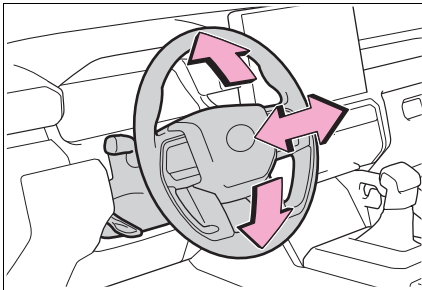

#### ? After adjusting the steering wheel

Make sure that the steering wheel is securely locked.

The horn may not sound if the steering wheel is not securely locked.

#### ! WARNING


##### ? Caution while driving


Do not adjust the steering wheel while driving. Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

##### ? After adjusting the steering wheel

Make sure that the steering wheel is securely locked. Otherwise, the steering wheel may move suddenly, possibly causing an accident, resulting in death or serious injury.

#### Sounding the horn

Press on or close to the  mark.

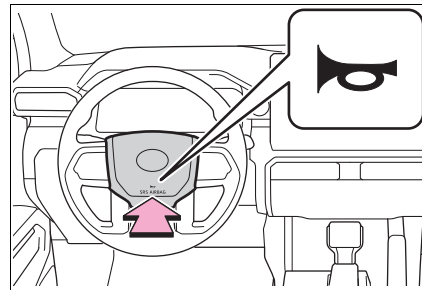

**Inside rear view mirror\***


\*: If equipped

**The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.**

**Adjusting the height of rear view mirror**

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

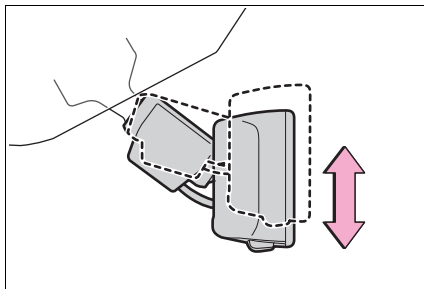

**! WARNING**


**? Caution while driving**

Do not adjust the position of the mirror while driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

**Anti-glare function**

- ▶ Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

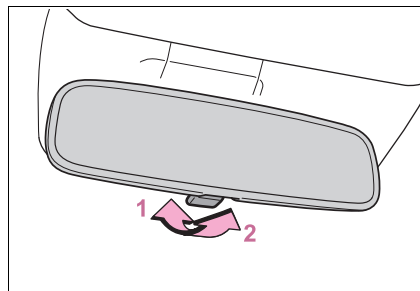


- 1 Normal position
- 2 Anti-glare position

- ▶ Auto anti-glare inside rear view mirror

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

**? To prevent sensor error (vehicles with an auto anti-glare inside rear view mirror)**

To ensure that the sensors operate properly, do not touch or cover them.

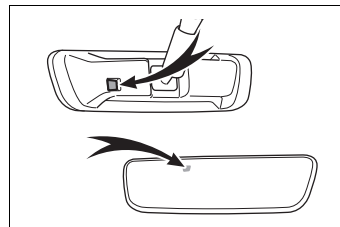

3

Before driving

## Digital Rear-view Mirror\*

\*: If equipped

**The Digital Rear-view Mirror is a system that uses the camera on the rear of the vehicle and displays its image on the display of the Digital Rear-view Mirror.**

**The Digital Rear-view Mirror can be changed between optical mirror mode and digital mirror mode by operating the lever.**

**The Digital Rear-view Mirror allows the driver to see the rear view despite obstructions, such as the head restraints or luggage, ensuring rear visibility. Also, the rear seats are not displayed and privacy of the passengers is enhanced.**

### WARNING

Observe the following precautions.

Failure to do so may result in death or serious injury.

#### ? Before using the Digital Rear-view Mirror


? Make sure to adjust the mirror before driving. (→P.164)

- Change to optical mirror mode and adjust the position of the Digital Rear-view Mirror so that the area behind your vehicle can be viewed properly.

- Change to digital mirror mode and adjust the display settings.

? As the range of the image displayed by the Digital Rear-view Mirror is different from that of the optical mirror, make sure to check this difference before driving.

## System components

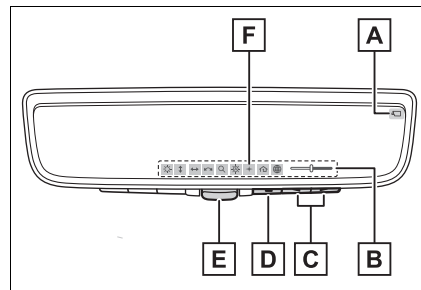

### A Camera indicator

Indicates that the camera is operating normally.

### B Icon display area

Displays icons, adjusting gauge, etc. (→P.164)

### C Select/adjust button

Press to change the setting of the item you want to adjust.

### D Menu button

Press to display the icon display area and select the item you want to adjust.

### E Lever


Operate to change between digital mirror mode and optical mirror mode.

### F Digital anti-glare mode indicator

In digital mirror mode, this indicates that the anti-glare function is on. (→P.164)

### Changing modes

Operate the lever to change between digital mirror mode and optical mirror mode.

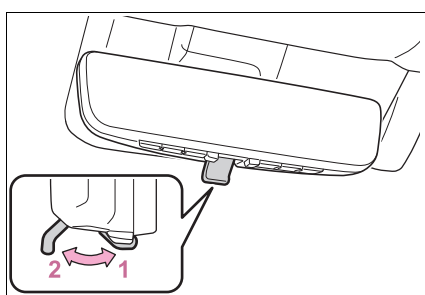

#### 1 Digital mirror mode

Displays an image of the area behind the vehicle.

 will illuminate in this mode.

#### 2 Optical mirror mode

Turns off the display of the Digital Rear-view Mirror allows it to be used as an optical mirror.

#### ? Digital mirror mode operating condition

The engine switch is turned to ON. When the engine switch is changed from ON to OFF or ACC, the image will disappear after several seconds.

#### ? When using the Digital Rear-view Mirror in digital mirror mode

? If it is difficult to see the displayed image due to light reflected off the Digital Rear-view Mirror, the camera being dirty, or if lights of a vehicle behind your vehicle or the displayed image are bothering you, change to optical mirror

mode.

- ? If the display is difficult to see due to reflected light, close the sunshade for the moon roof (if equipped).
- ? Any of the following conditions may occur when driving in the dark, such as at night. None of them indicates that a malfunction has occurred.
  - Colors of objects in the displayed image may differ from their actual color.
  - Depending on the height of the lights of the vehicle behind, the area around the vehicle may appear white and blurry.
  - Automatic image adjustment for brighter surrounding image may cause flickering.

If it is difficult to see the displayed image or flickering bothers you, change to optical mirror mode.

? The Digital Rear-view Mirror may become hot while it is in digital mirror mode. This is not a malfunction.


? Depending on your physical condition or age, it may take longer than usual to focus on the displayed image. In this case, change to optical mirror mode.

? Do not let passengers stare at the displayed image when the vehicle is being driven, as doing so may cause motion sickness.

#### ? When the system malfunctions

If the symbol shown in the illustration is displayed when using the Digital Rear-view Mirror in digital mirror mode, the system may be malfunctioning. The symbol will disappear in a few seconds. Operate the lever, change to optical mirror mode and have the vehicle inspected by your Toyota dealer.



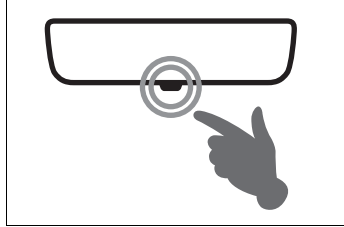


**Adjusting the mirror**

? **Adjusting the mirror height**

The height of the rear view mirror can be adjusted to suit your driving posture.

Change to optical mirror mode, adjusting the height of the rear view mirror by moving it up and down.

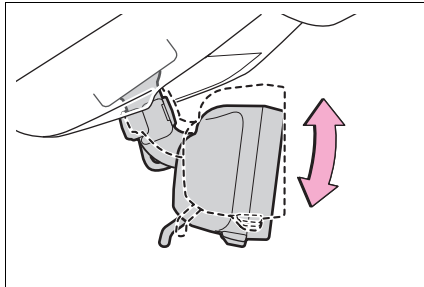


? **Display settings (digital mirror mode)**



Settings of the display in the digital mirror mode, on/off operation of the automatic anti-glare function, etc. can be changed.

- 1 Press the menu button.

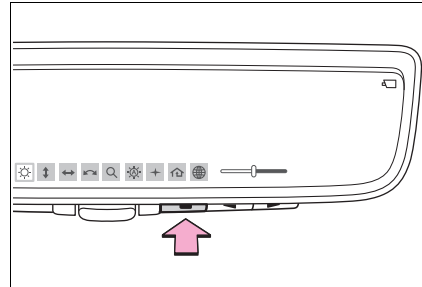




The icons will be displayed.



- 2 Press the menu button repeatedly and select the item you want to adjust.

- 3 Press  or  to change the setting.

The icons will disappear if a button is not operated for approximately 5 seconds or more.

Icons	Settings
	Select to adjust the brightness of the display.
	Select to adjust the area displayed up/down.
	Select to adjust the area displayed to the left/right.
	Select to adjust the angle of the displayed image.
	Select to zoom in/out the displayed image.

Icons	Settings
	Select to enable/disable the automatic anti-glare function.* Responding to the brightness of the headlights of vehicles behind, the reflected light is automatically adjusted. The automatic anti-glare function is enabled each time the engine switch is changed to ON.
	Select to display HomeLink® Training Tutorial to assist customers to train their Garage Door Opener System. (→P.501)
	The digital anti-glare mode can be turned on and off. When enabled, the brightness of the display is reduced at night to reduce headlight glare from vehicles to the rear.
	Select to change the language of the HomeLink® Training Tutorial.

\*: This is a function for the optical mirror mode, however, the setting can also be changed while using the digital mirror mode.

? **Enabling/disabling the automatic anti-glare function (optical mirror mode)**

The automatic anti-glare function in the optical mirror mode can be enabled/disabled. The setting can be changed in both

the digital mirror mode and the optical mirror mode.

▶ When using the digital mirror mode

→P.164


▶ When using the optical mirror mode

1 Press the menu button.

The icons will be displayed.

2 Press the menu button repeatedly and select

The setting display will be displayed.

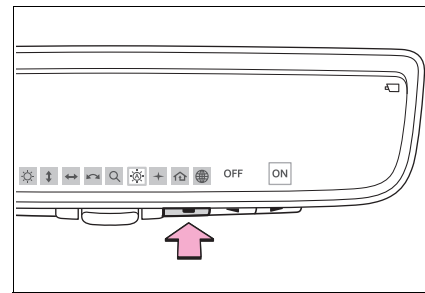

3 Press or to enable ("ON")/disable ("OFF") the automatic anti-glare function.

The icons will disappear if a button is not operated for approximately 5 seconds or more.

? **Adjusting the display (digital mirror mode)**

? If the displayed image is adjusted, it may appear distorted. This is not a malfunction.

? If the brightness of the Digital Rear-view Mirror is set too high, it may cause eye strain. Adjust the Digital Rear-view Mirror to an appropriate brightness. If your


3

Before driving

- eyes become tired, change to optical mirror mode.
- ? The brightness of the Digital Rear-view Mirror will change automatically according to the brightness of the area in front of your vehicle.
  - ? The digital anti-glare mode operates only in locations where the surroundings are dark. Depending on the surrounding illumination environment, the image may not darken and it may not be possible to reduce headlight glare from vehicles to the rear.

? **To prevent the light sensors from malfunctioning**

To prevent the light sensors from malfunctioning, do not touch or cover them.

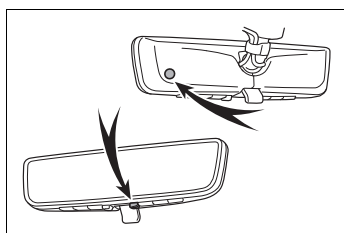

**⚠ WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

? **While driving**

- ? Do not adjust the position of the Digital Rear-view Mirror or adjust the display settings while driving. Stop the vehicle and operate the Digital Rear-view Mirror control switches. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

- ? Always pay attention to the vehicle's surroundings.

The size of the vehicles and other objects may look different when in digital mirror mode and optical mirror mode.

When backing up, make sure to directly check the safety of the area around your vehicle, especially behind the vehicle.

Additionally, if a vehicle approaches from the rear in the dark, such as at night, the surrounding area may appear dim.

? **To prevent causes of fire**

If the driver continues using the Digital Rear-view Mirror while smoke or odor comes from the mirror, it may result in fire. Stop using the system immediately and contact your Toyota dealer.

**Cleaning the Digital Rear-view Mirror**

? **Cleaning the mirror surface**

If the mirror surface is dirty, the image on the display may be difficult to see.


Clean the mirror surface gently using a soft dry cloth.

? **Cleaning the camera**

If the camera lens is dirty or covered with foreign matter, such as water droplets, snow, mud, etc., the displayed image may not be clear. In this case, rinse the camera lens with a large quantity of water and then wipe it clean with a soft cloth dampened with water.

? **The camera**


The camera for the Digital Rear-view Mirror is located as shown.

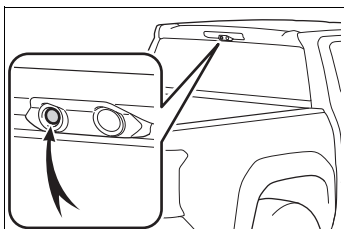

 **NOTICE**

- ? **To prevent the camera from malfunctioning**
- ? Observe the following precautions, otherwise the Digital Rear-view Mirror may not operate properly.
  - Do not strike or hit the camera or subject it to a strong impact, as the camera installation position and angle may be changed.
  - Do not remove, disassemble or modify the camera.
  - When washing the camera, rinse it with a large quantity of water and then wipe it clean with a soft cloth dampened with water. Do not strongly rub the camera lens, as it may be scratched and will not be able to transmit a clear image.
  - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera cover. If this happens, wipe it off as soon as possible.
  - Do not apply hot water to the camera in cold weather, as the sudden change of temperature may cause the camera to not operate properly.

- When using a high pressure washer to wash the vehicle, do not directly spray the camera and its surrounding area, as doing so may cause the camera to not operate properly.
- ? Do not subject the camera to a strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.
- ? Do not block the vent holes of the mirror. Otherwise, the mirror may be hot, leading to a malfunction or a fire.

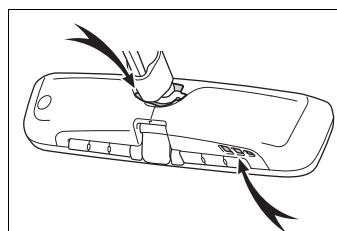



**If you notice any symptoms**

If you notice any of the following symptoms, refer to the following table for the likely cause and the solution.




If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The image is difficult to see.	The mirror surface is dirty.	Clean the mirror surface gently, using a soft dry cloth.
	Sunlight or headlights are shining directly into the Digital Rear-view Mirror.	Change to optical mirror mode. (If the light is coming through the moon roof [if equipped], close the sunshade.)
	<ul style="list-style-type: none"> <li>• The vehicle is in a dark area.</li> <li>• The vehicle is near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present.</li> <li>• The temperature around the camera is extremely high/low.</li> <li>• The ambient temperature is extremely low.</li> <li>• It is raining or humid.</li> <li>• Sunlight or headlights are shining directly into the camera lens.</li> <li>• The vehicle is under fluorescent lights, sodium lights, mercury lights, etc.</li> <li>• Water vapor from the tailpipe is obstructing the camera.</li> </ul>	Change to optical mirror mode. (Change back to digital mirror mode when the conditions have improved.)

Symptom	Likely cause	Solution
The image is difficult to see.	Foreign matters (such as water droplets, snow, mud, etc.) is on the camera lens.	<ul style="list-style-type: none"> <li>• Change to optical mirror mode.</li> <li>• Rinse the camera with a large quantity of water, wipe it clean with a soft cloth dampened with water, and then change back to digital mirror mode.</li> </ul>
The image is out of alignment.	The camera or its surrounding area has received a strong impact.	Change to optical mirror mode and have the vehicle inspected by your Toyota dealer.
The display is dim and  is displayed.	The system may be malfunctioning.	Change to optical mirror mode and have the vehicle inspected by your Toyota dealer.
 goes off.		

3

Before driving

Symptom	Likely cause	Solution
 is displayed.	The Digital Rear-view Mirror is extremely hot. (The display will gradually become more dim. If the temperature continues to increase, the Digital Rear-view Mirror will turn off.)	Reducing the cabin temperature is recommended to reduce the temperature of the mirror. (  will disappear when the mirror becomes cool.) If  does not disappear even though the mirror is cool, have the vehicle inspected by your Toyota dealer.
The lever cannot be operated properly.	The lever may be malfunctioning.	Change to optical mirror mode and have the vehicle inspected by your Toyota dealer. (To change to optical mirror mode, press and hold the menu button for approximately 10 seconds.)

Outside rear view mirrors

The rear view mirror's position can be adjusted to change the rear view.

? **When using the outside rear view mirrors in a cold weather**

When it is cold and the outside rear view mirrors are frozen, it may not be possible to fold/extend them or adjust the mirror surface. Remove the ice, snow, etc. covering the outside rear view mirrors.

**! WARNING**

? **Important points while driving**

Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.


? Do not adjust the mirrors while driving.

? Do not drive with the mirrors folded.

? Both the driver and passenger side mirrors must be unfolded and properly adjusted before driving.

**Adjustment procedure**


- 1 To select a mirror to adjust, press the switch.

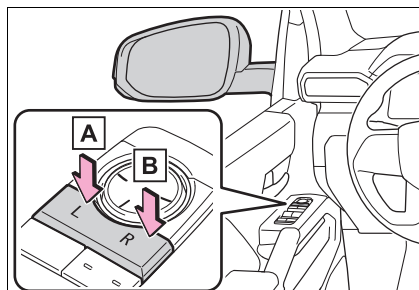

A Left

B Right

- 2 To adjust the mirror, press the switch.

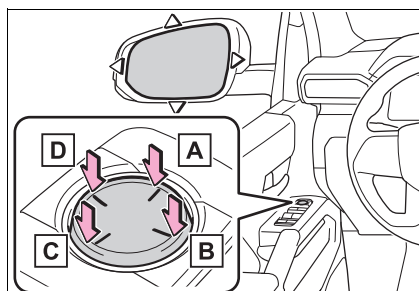

A Up

B Right

C Down

D Left

? **Mirror angle can be adjusted when**

The engine switch is in ACC or ON.

? **Defogging the mirrors**

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the mirror defoggers to defog the mirrors. (→P.445, 451)

3

Before driving




**⚠ WARNING**

**? When the mirror defoggers are operating**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

**Folding and unfolding the mirrors**

Push the mirror back in the direction of the vehicle's rear.

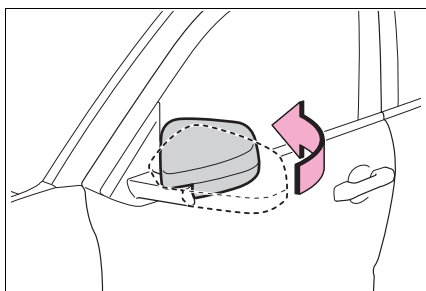


Power windows

Opening and closing the power windows

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

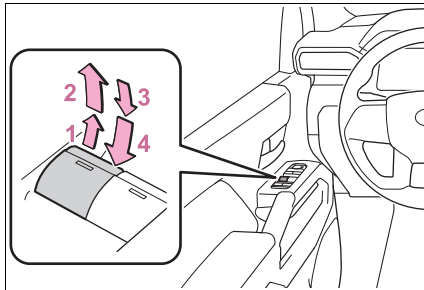

- 1 Closing
- 2 One-touch closing\*
- 3 Opening
- 4 One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

? The power windows can be operated when

The engine switch is in ON

? Operating the power windows after turning the engine off

The power windows can be operated for approximately 43 seconds even after the engine switch is turned to ACC or turned off. They cannot, however, be operated once either front door is opened.

? Jam protection function

If an object becomes jammed between the window and the win-

dow frame while the window is closing, window movement is stopped and the window is opened slightly.

? Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

? When the side window cannot be opened or closed

When the jam protection function or catch protection function operates unusually and the side window cannot be opened or closed, perform the following operations with the power window switch of that door.

? Stop the vehicle. With the engine switch in ON, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the side window can be opened and closed.

? If the side window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.

- 1 Turn the engine switch to ON.
- 2 Pull and hold the power window switch in the one-touch closing direction and completely close the side window.
- 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
- 4 Press and hold the power window switch in the one-touch opening direction. After the side window is completely opened, continue holding the switch for an additional 1 second or more.
- 5 Release the power window switch for a moment, resume

3

Before driving

pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.

- 6 Pull and hold the power window switch in the one-touch closing direction again. After the side window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.

If the window reverses and cannot be fully closed or opened, have the vehicle inspected by your Toyota dealer.

#### ? **Door lock linked window operation**

- ? The power windows can be opened and closed using the mechanical key.\* (→P.602)
- ? The power windows can be opened using the wireless remote control.\* (→P.130)
- ? Vehicles with an alarm: The alarm may be triggered if the alarm is set and the power window is closed using the door lock linked power window operation function. (→P.76)

\*: These settings must be customized at your Toyota dealer.

#### ? **Power windows open warning buzzer**

A buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the power windows open.

#### ? **Customization**

Some functions can be customized. (→P.640)


### **! WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

#### ? **Closing the windows**

- ? The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P.175)
- ? Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.

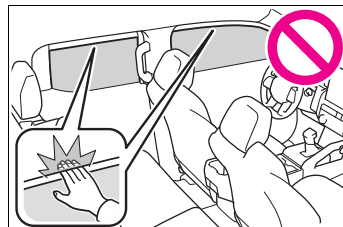


- ? When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window. Also do not let a child operate window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.

**⚠ WARNING**

- ? When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.
- ? **Jam protection function**
- ? Never use any part of your body to intentionally activate the jam protection function.
- ? The jam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of your body jammed in the window.
- ? **Catch protection function**
- ? Never use any part of your body or clothing to intentionally activate the catch protection function.
- ? The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

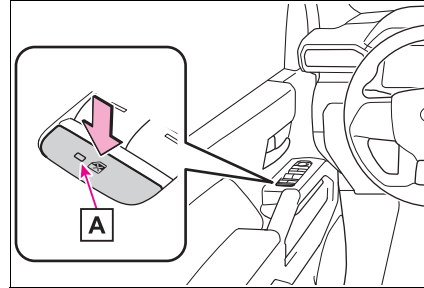

? **The power windows can be operated when**

The engine switch is in ON.

? **When the battery is disconnected**

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the battery.

**Preventing accidental operation (window lock switch)**

This function can be used to prevent children from accidentally opening or closing a passenger window.

Press the switch.

The indicator **A** will come on and the passenger windows will be locked.

3

Before driving

**Power back window\***


\*: If equipped

**! WARNING**

? **Caution while driving**

Keep the back window closed. This not only keeps personal belongings from being thrown out, but also prevents exhaust gases from entering the vehicle.

**Opening and closing the power back windows**

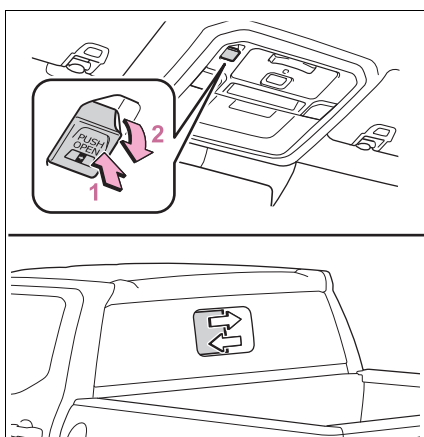

- 1 Opening
- 2 Closing

? **The power back window can be operated when**

The engine switch is in ON.

? **Operating the power back windows after turning the engine off**

The power back windows can be operated for approximately 43 seconds after the engine switch is turned to ACC or off. They cannot, however, be operated once either front door is opened.

? **Power back window open warning buzzer**

A buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the power back window open.

**! WARNING**

? **Closing the back window**

Observe the following precautions.

Failure to do so may result in death or serious injury.

? The driver is responsible for all the power back window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power back window. It is possible for children and other passengers to have body parts caught in the power back window.

? Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.

? When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.


**Moon roof\***

\*: If equipped

**Use the overhead switches to open and close the moon roof and tilt it up and down.**

**Operating the moon roof**


? **Opening and closing**

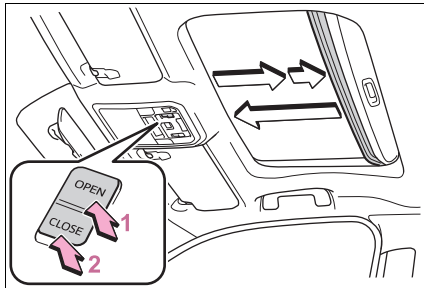

**1 Opens the moon roof\***  
The moon roof tilts up and then opens.  
The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open the moon roof.

**2 Closes the moon roof\***  
\*: Lightly press either side of the moon roof switch to stop the moon roof partway.

? **Tilting up and down**

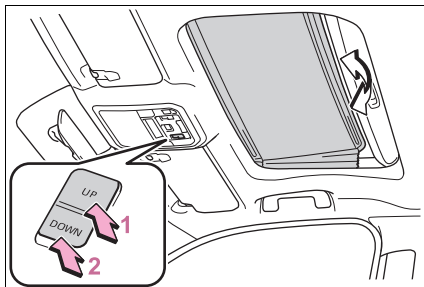

**1 Tilts the moon roof up\***  
**2 Tilts the moon roof down\***  
\*: Lightly press either side of the moon roof switch to stop the moon roof partway.

? **The moon roof can be operated when**

The engine switch is in ON.

? **Operating the moon roof after turning the engine off**

The moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACC or OFF. It cannot, however, be operated once either front door is opened.

? **Jam protection function**

If an object is detected between the moon roof glass and the rest of the vehicle while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

? **Sunshade**

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

? **Door lock linked moon roof operation**

? The moon roof can be opened and closed using the mechanical key.\* (→P.602)  
? The moon roof can be opened using the wireless remote control.\* (→P.126)  
? Vehicles with an alarm: The alarm may be triggered if the alarm is set and the moon roof is closed using the door lock linked moon roof operation function. (→P.76)

\*: These settings must be customized at your Toyota dealer.

3  
Before driving

? **When the moon roof does not close normally**

Perform the following procedure:

? If the moon roof closes but then re-opens slightly

- 1 Stop the vehicle.
- 2 Press and hold the "CLOSE" switch.\*1

The moon roof will close, reopen and pause for approximately 10 seconds.\*2 Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

- 3 Check to make sure that the moon roof is completely closed and then release the switch.

? If the moon roof tilts down but then tilts back up

- 1 Stop the vehicle.
- 2 Press and hold the "UP" switch\*1 until the moon roof moves into the tilt up position and stops.
- 3 Release the "UP" switch once and then press and hold the "UP" switch again.\*1

The moon roof will pause for approximately 10 seconds in the tilt up position.\*2 Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.

- 4 Check to make sure that the moon roof is completely closed and then release the switch.

\*1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

\*2: If the switch is released after the above mentioned 10 seconds pause, automatic operation will be disabled. In that case, press and hold the "CLOSE" or "UP" switch, and the moon roof will tilt up and pause for approximately 1

second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Toyota dealer.

? **Moon roof open reminder function**

The buzzer sounds and a message is shown on the multi-information display when the engine switch is turned to OFF and the driver's door is opened with the moon roof open.

? **Customization**

Some functions can be customized. (→P.640)

 **WARNING**

Observe the following precautions. Failure to do so may cause death or serious injury.

? **Opening the moon roof**

? Do not allow any passengers to put their hands or head outside the vehicle while it is moving.


? Do not sit on top of the moon roof.

 **WARNING**

? **Opening and closing the moon roof**

? The driver is responsible for moon roof opening and closing operations. In order to prevent accidental operation, especially by a child, do not let a child operate the moon roof. It is possible for children and other passengers to have body parts caught in the moon roof.

? Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.

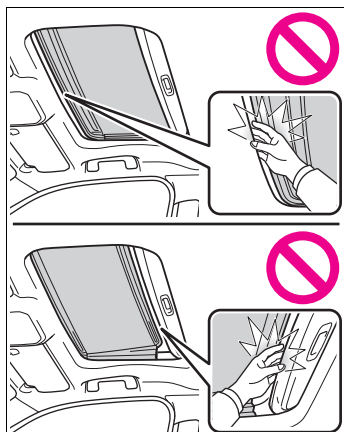

? When using the wireless remote control or mechanical key and operating the moon roof, operate the moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the moon roof. Also, do not let a child operate moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the moon roof.

? When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

? **Jam protection function**

? Never use any part of your body to intentionally activate the jam protection function.

? The jam protection function may not work if something gets caught just before the moon roof is fully closed. Also, the jam protection function is not designed to operate while the switch is being pressed. Take care so that your fingers, etc. do not get caught.



## My Settings

**By recognizing an individual through a device, such as an electronic key and vehicle settings recorded for that driver can be recalled when the vehicle is entered. By assigning an authentication device to a driver in advance, the driver can enter the vehicle with their preferred settings. Settings for up to 3 drivers can be recorded by My Settings. For details on how to assign/delete electronic keys, set driver names, perform initialization, change drivers manually, or delete a driver, refer to the “MULTI-MEDIA OWNER’S MANUAL”.**

## Types of assigned authentication devices

An individual can be identified using the following authentication devices.

- Electronic key

An individual is identified when the smart key system detects their electronic key.

- Bluetooth® devices

An individual can be detected if the same Bluetooth® device that was used as a hands-free phone the

last time the vehicle was entered is connected to the audio system.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

## Recalled functions

When an individual is identified from an authentication device, settings for the following functions are recalled.

- Meter display and multimedia information\*

When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.

- Vehicle settings that can be set using the multimedia display\*

When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.

- Safe driving support function\*

When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.

\*: Some settings are excluded.

- 4-1. Before driving**
- Driving the vehicle..... 183
  - Cargo and luggage ..... 192
  - Vehicle load limits ..... 195
  - Trailer towing..... 196
  - Dinghy towing ..... 209
- 4-2. Driving procedures**
- Engine (ignition) switch 210
  - Automatic transmission 215
  - Manual transmission ... 220
  - Turn signal lever..... 222
  - Parking brake ..... 223
  - Brake Hold ..... 227
- 4-3. Operating the lights and wipers**
- Headlight switch..... 230
  - Fog light switch ..... 233
  - AHB (Automatic High Beam)..... 233
  - Windshield wipers and washer..... 236
- 4-4. Refueling**
- Opening the fuel tank cap ..... 239
- 4-5. Using the driving support systems**
- Toyota Safety Sense 3.0 software update..... 241
  - Toyota Safety Sense 3.0 ..... 243
  - PCS (Pre-Collision System) ..... 252
  - LTA (Lane Tracing Assist) ..... 263
  - LDA (Lane Departure Alert) ..... 268
  - PDA (Proactive driving assist) ..... 274
  - RSA (Road Sign Assist) ..... 281
  - Dynamic radar cruise control ..... 283
  - Cruise control ..... 295
  - Emergency Driving Stop System ..... 299
  - TDA (Trailer Driving Assist) ..... 302
  - Stop & Start system .... 303
  - BSM (Blind Spot Monitor) ..... 310
  - Intuitive parking assist. 317
  - RCTA (Rear Cross Traffic Alert)..... 324
  - RCD (Rear Camera Detection) ..... 329
  - PKSB (Parking Support Brake)..... 333

---

Parking Support Brake function (static objects front and rear of the vehicle) .....	338
Parking Support Brake function (moving vehicles rear of the vehicle).....	341
Parking Support Brake function (pedestrians rear of the vehicle).....	342
Toyota parking assist monitor .....	344
Panoramic view monitor .....	357
Multi-terrain Monitor ....	393
Driving mode select switch .....	404
Four-wheel drive system .....	406
AUTO LSD system.....	409
Rear differential lock system .....	410
Crawl Control .....	412
Multi-terrain Select .....	415
Clutch start cancel switch .....	418
Downhill assist control system .....	420
Driving assist systems	422
SDM (Stabilizer with Disconnection Mechanism) ..	428
Trailer brake controller	429
Trailer Backup Guide ..	432
<b>4-6. Driving tips</b>	
Off-road precautions....	437
Winter driving tips.....	440

## Driving the vehicle

**The following procedures should be observed to ensure safe driving:**

### Driving procedure

#### ? Starting the engine

→P.210

#### ? Driving

##### ▶ Automatic transmission

- 1 With the brake pedal depressed, shift the shift lever to D.
- 2 Release the parking brake. (→P.223)

If the parking brake is in automatic mode, the parking brake will be released automatically. (→P.224)

- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

##### ▶ Manual transmission

- 1 With the clutch pedal fully depressed, shift the shift lever to 1. (→P.220)
- 2 Release the parking brake. (→P.223)

If the parking brake is in automatic mode, the parking brake will be released automatically.

- 3 Gradually release the clutch pedal. At the same time, gently depress the accelerator pedal to accelerate the vehicle.

#### ? Stopping

##### ▶ Automatic transmission

- 1 With the shift lever in D, depress the brake pedal.

Vehicles with a Stop & Start system: If the Stop & Start system is enabled, depressing the brake pedal will stop the engine. (→P.303)

- 2 If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P.215)

##### ▶ Manual transmission

- 1 While depressing the clutch pedal, depress the brake pedal.
- 2 If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift lever to N. (→P.220)

#### ? Parking the vehicle

##### ▶ Automatic transmission

- 1 With the shift lever in D, depress the brake pedal to stop the vehicle completely.
- 2 Set the parking brake (→P.223), and shift the shift lever to P. (→P.215)

Make sure the parking brake indicator light is on.

Do not press the shift lever button after shifting the shift position to P.

- 3 Turn the engine switch to OFF to stop the engine.

- 4 Lock the door, making sure that you have the electronic key on your person.

If parking on a hill, block the wheels as needed.

► Manual transmission

- 1 While depressing the clutch pedal, depress the brake pedal.

- 2 Set the parking brake. (→P.223)

If the parking brake is in automatic mode, turning off the engine switch will automatically set the parking brake. (→P.223)

Make sure the parking brake indicator light is on.

- 3 shift the shift lever to N. (→P.220)

If parking on a hill, shift the shift lever to 1 or R and block the wheels as needed.

- 4 Press the engine switch to stop the engine.

- 5 Slowly release the brake pedal.

- 6 Lock the door, making sure that you have the electronic key on your person.

? **Starting off on a steep uphill**

► Automatic transmission

- 1 With the brake pedal depressed, shift the shift lever to D.

The hill-start assist control will be activated.

- 2 Pull the parking brake switch and parking brake is set manually. (→P.223)

- 3 Release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

- 4 Press the parking brake switch and parking brake is released manually. (→P.223)

Parking brake automatic release function. (→P.225)

► Manual transmission

- 1 With the parking brake firmly set and the clutch pedal fully depressed, shift the shift lever to 1.

- 2 Lightly depress the accelerator pedal at the same time as gradually releasing the clutch pedal.

- 3 Release the parking brake.

? **When starting off on an uphill**

The hill-start assist control will activate. (→P.423)

? **Driving in the rain**

? Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.

? Drive carefully when it starts to rain, because the road surface will be especially slippery.

? Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

? **Engine speed while driving (vehicles with an automatic transmission)**

In the following conditions, the engine speed may become high while driving.

This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- ? The vehicle is judged to be driving uphill or downhill
- ? When the accelerator pedal is released
- ? When the brake pedal is depressed while "TOW HAUL" mode is selected (if equipped)

? **Restraining the engine output (Brake Override System)**

- ? When the accelerator and brake pedals are depressed at the same time, the engine output may be restrained.
- ? A warning message is displayed on the multi-information display while the system is operating. (→P.576)

? **Breaking in your new Toyota**

To extend the life of the vehicle, observing the following precautions is recommended:

- ? For the first 200 miles (300 km):  
Avoid sudden stops.
- ? For the first 500 miles (800 km):  
Do not tow a trailer.
- ? For the first 1000 miles (1600 km):
  - Do not drive at extremely high speeds.
  - Avoid sudden acceleration.
  - Do not drive continuously in low gears.
  - Do not drive at a constant speed for extended periods.

? **Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P.619)

? **Idling time before engine stop**

To prevent damage to the turbocharger, allow the engine to idle immediately after high-speed driving or hill climbing.

Driving condition	Idling time
Normal city driving	Not necessary
High-speed driving (Constant speed of approx. 50 mph [80 km/h])	Not necessary
Steep hill driving or continuous driving at 62 mph (100 km/h) or more (race track driving, etc.)	Approximately 1 minute

 **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

? **When starting the vehicle (vehicles with an automatic transmission)**

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

? **When driving the vehicle**

? Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.

**⚠ WARNING**

- Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
  - When backing up, you may twist your body around, leading to difficulty in operating the pedals. Make sure to operate the pedals properly.
  - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
  - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- ? Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- ? During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so. However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way:  
→P.562
- ? Use engine braking (downshift) to maintain a safe speed when driving down a steep hill. Using the brakes continuously may cause the brakes to overheat and lose effectiveness.  
(→P.215)
- ? Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving. Doing so may result in a loss of vehicle control.
- ? Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.
- ? Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 85 mph (140 km/h) unless your vehicle has high-speed capability tires. Driving over 85 mph (140 km/h) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.
- ? **When driving on slippery road surfaces**
- ? Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- ? Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.

**⚠ WARNING**

? After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

? **When shifting the shift lever**

? Do not let the vehicle roll backward while a forward driving position is selected, or roll forward while the shift lever is in R. Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.

? Vehicles with an Automatic transmission: Do not shift the shift lever to P while the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control.

? Do not shift the shift lever to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.

? Do not shift the shift lever to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.

? Moving the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.

? Vehicles with an Automatic transmission: Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to any positions other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

? **If you hear a squealing or scraping noise (brake pad wear indicators)**

Have the brake pads checked and replaced by your Toyota dealer, or any reliable repairer as soon as possible.

Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

? **When the vehicle is stopped**

? Do not race the engine. If the vehicle is in any gear other than P (vehicles with an automatic transmission) or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

? In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.

? If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.



**⚠ WARNING**

? Avoid revving or racing the engine.  
Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

? **When the vehicle is parked**

? Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.  
Doing so may result in the following:

- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.

? Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.

? Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.

? Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.

? Vehicles with an automatic transmission: Always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle.  
Do not leave the vehicle unattended while the engine is running.  
If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.

? Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off.  
Doing so may cause burns.

? Vehicles with an automatic transmission with 4WD models: If the shift lever is moved before the "4HI" or "4LO" indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear drivetrains from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.) Therefore, the vehicle is free to roll even if the automatic transmission is in P. You or someone else could be seriously injured. You must complete the shifting of the transfer mode. (→P.406)

**⚠ WARNING**

? **When taking a nap in the vehicle**  
 Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

? **When braking**

? When the brakes are wet, drive more cautiously.  
 Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

? If the brake booster device does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.  
 In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.

? Do not pump the brake pedal if the engine stalls.  
 Each push on the brake pedal uses up the reserve for the power-assisted brakes.

? The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

? **If the vehicle becomes stuck**  
 Do not spin the wheels excessively when a driven wheel is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

**⚠ NOTICE**

? **When driving the vehicle (vehicles with an automatic transmission)**

? Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.

? Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

? **When driving the vehicle (vehicles with a manual transmission)**

? Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.

? Do not shift gears unless the clutch pedal is fully depressed. After shifting, do not release the clutch abruptly. Doing so may damage the clutch, transmission and gears.

**NOTICE**

- ? Observe the following precautions.  
Failure to do so may cause excessive premature wear or damage to the clutch, eventually making it difficult to accelerate and start off from a stop. Have the vehicle inspected by your Toyota dealer.
- ? Do not rest your foot on the clutch pedal while driving. Doing so may cause clutch trouble.
- ? Do not use any gear other than the first gear when starting off and moving forward. Doing so may damage the clutch.
- ? Do not use the clutch to hold the vehicle when stopping on an uphill grade. Doing so may damage the clutch.
- ? Do not shift the shift lever to R when the vehicle is still moving. Doing so may damage the clutch, transmission and gears.
- ? **When parking the vehicle (vehicles with an automatic transmission)**  
Always set the parking brake and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.
- ? **Avoiding damage to vehicle parts**
- ? Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.  
Doing so may damage the power steering.

? When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

? Make sure to idle the engine immediately after high-load driving. Stop the engine only after the turbocharger has cooled down. Failure to do so may cause damage to the turbocharger

? **If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

? It may be difficult to control your vehicle.

? The vehicle will make abnormal sounds or vibrations.

? The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P.589)

? **When encountering flooded roads or waterlogged roads**

Do not drive on a road that has flooded after heavy rain, etc. Doing so may cause the following serious damage to the vehicle:

? Engine stalling

? Short in electrical components

? Engine damage caused by water immersion

? Rubber or mechanical part damage or poor lubrication due to grease being washed away, or grease becoming contaminated with mud or dirt

**NOTICE**

In the event that you drive on a flooded road and the vehicle becomes flooded or stuck in mud or sand, be sure to have your Toyota dealer check the following:

- ? Brake function
- ? Changes in quantity and quality of oil and fluid used for the engine, transmission, transfer (4WD models), differential, etc.
- ? Lubricant condition for the propeller shaft, clutch fork, bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

### **Sudden start restraint control (Drive-Start Control [DSC]) (vehicles with an automatic transmission)**

When the following unusual operation is performed with the accelerator pedal depressed, the engine output may be restrained.

- When the shift lever is shifted to R\*.
- When the shift lever is shifted from P or R to forward drive shift position such as D\*.

When the system operates, a message appears on the multi-information display. Read the message and follow the instruction.

\*: Depending on the situation, the shift position may not be changed.

### ? **Drive-Start Control (DSC)**

When the TRAC is turned off (→P.424), sudden start restraint control also does not operate. If your vehicle have trouble escaping from the mud or fresh snow due to sudden start restraint operation, deactivate TRAC (→P.424) so that the vehicle may become able to escape from the mud or fresh snow.

Also, sudden start restraint control will not operate in the following conditions:

- ? When the AUTO LSD mode is selected (if equipped)
- ? When the front-wheel drive control switch is in "4H" or "4L" position. (4WD models only)
- ? When Multi-terrain Select is selected. (if equipped)


### Cargo and luggage

**Take notice of the following information about storage precautions, cargo capacity and load:**

### Deck rails

To use the deck rails, you must install genuine Toyota accessories or their equivalent for the deck rails.

Follow the manufacturer's instructions and precautions when installing a genuine Toyota accessory or equivalent.

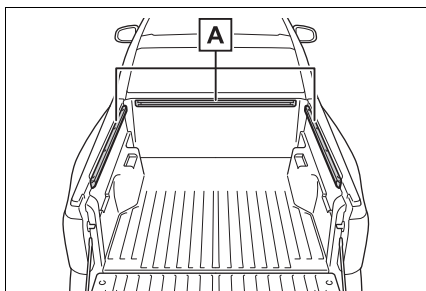

**A** Side rails

#### **⚠ WARNING**

**? When you secure cargo with the deck rails**

Be sure to follow the instructions below in order to avoid the cargo coming loose.

- ? Do not install accessories (tie-down cleats, storage boxes, etc.) at more than the following number of locations per deck rail.

- Side rail:  
Short deck—ax. 3 locations  
Long deck—ax. 4 locations
- ? Spread out tie-down/support locations evenly along the length of the rails.
- ? Do not exceed a total tensile load of 440 lb. (200 kg) per deck rail.
- ? To prevent luggage or cargo from sliding forward during braking, make sure the deck rail accessories such as storage box are securely attached on the deck rails.

### Capacity and distribution

Cargo capacity depends on the total weight of the occupants.

$$(\text{Cargo capacity}) = (\text{Total load capacity}) - (\text{Total weight of occupants})$$

Steps for Determining Correct Load Limit —


- (1) Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle's placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo

and luggage load capacity.  
 For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400 – 750 (5 × 150) = 650 lbs.)

(5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.

(6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle. (→P.195)

**Calculation formula for your vehicle**

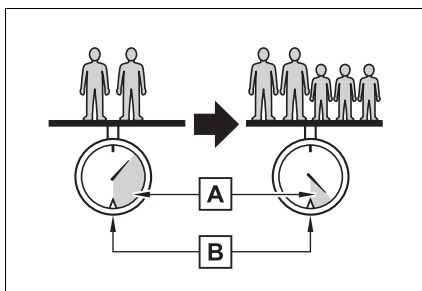

- A** Cargo capacity
- B** Total load capacity (vehicle capacity weight) (→P.617)

When 2 people with the combined weight of A lb. (kg) are riding in your vehicle, which has a total load capacity (vehicle capacity weight) of B lb. (kg), the available amount of cargo and luggage load capacity will be C lb. (kg) as follows:

$$B^{*2} \text{ lb. (kg)} - A^{*1} \text{ lb. (kg)} = C^{*3} \text{ lb. (kg)}$$

- \*1: A =Weight of people
- \*2: B =Total load capacity
- \*3: C =Available cargo and luggage load

In this condition, if 3 more passengers with the combined weight of D lb. (kg) get on, the available cargo and luggage load will be reduced E lb. (kg) as follows:

$$C \text{ lb. (kg)} - D^{*4} \text{ lb. (kg)} = E^{*5} \text{ lb. (kg)}$$

- \*4: D =Additional weight of people
- \*5: E =Available cargo and luggage load

As shown in the example above, if the number of occupants increases, the cargo and luggage load will be reduced by an amount that equals the increased weight due to the additional occupants. In other words, if an increase in the number of occupants causes an excess of the total load capacity (combined weight of occupants plus cargo and luggage load), you must reduce the cargo and luggage on your vehicle.

 **WARNING****? Things that must not be carried in the luggage compartment**

The following things may cause a fire if loaded in the luggage compartment:

- ? Receptacles containing gasoline
- ? Aerosol cans

**? Storage precautions**

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- ? Do not stack anything behind the front seats higher than the seatbacks.
- ? Do not place cargo or luggage in or on the following locations.
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the instrument panel
  - On the dashboard
  - On the auxiliary box or tray that has no lid
- ? Secure all items in the occupant compartment.

? Never allow anyone to ride in the rear deck. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

**? Capacity and distribution**

- ? Do not exceed the maximum axle weight rating or the total vehicle weight rating.
- ? Even if the total load of occupant's weight and the cargo load is less than the total load capacity, do not apply the load unevenly. Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

## Vehicle load limits

**Vehicle load limits include total load capacity, seating capacity, TWR (Trailer Weight Rating) and cargo capacity.**

- Total load capacity (vehicle capacity weight): →P.617

Total load capacity means the combined weight of occupants, cargo and luggage.

- Seating capacity: →P.618

Seating capacity means the maximum number of occupants whose estimated average weight is 150 lb. (68 kg) per person.

Even if the number of occupants are within the seating capacity, do not exceed the total load capacity.

- TWR (Trailer Weight Rating): →P.200

TWR means the maximum gross trailer weight (trailer weight plus its cargo weight) that your vehicle is able to tow.

- Cargo capacity

Cargo capacity may increase or decrease depending on the weight and the number of occupants.

### ? Total load capacity and seating capacity

These details are also described on the tire and loading information label. (→P.624)

### WARNING

#### ? Overloading the vehicle

Do not overload the vehicle. It may not only cause damage to the tires, but also degrade steering and braking ability, resulting in an accident.



## Trailer towing

**Your vehicle is designed primarily as a passenger-and-load-carrying vehicle. Towing a trailer can have an adverse impact on handling, performance, braking, durability, and fuel consumption. For your safety and the safety of others, you must not overload your vehicle or trailer. You must also ensure that you are using appropriate towing equipment, that the towing equipment has been installed correctly and used properly, and that you employ the requisite driving habits.**

**Vehicle-trailer stability and braking performance are affected by trailer stability, brake performance and setting, trailer brakes, the hitch and hitch systems.**

**To tow a trailer safely, use extreme care and drive the vehicle in accordance with your trailer's characteristics and operating conditions.**

**Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.**

Contact your Toyota dealer for further information about additional requirements such as a towing kit, etc.

### ? **Trailer brake controller (if equipped)**

→P.429

### ? **Before towing**

Check that the following conditions are met:

- ? Ensure that your vehicle's tires are properly inflated. (→P.624)
- ? Trailer tires are inflated according to the trailer manufacturer's recommendation.
- ? All trailer lights work as required by law.
- ? All lights work each time you connect them.
- ? The trailer ball is set at the proper height for the coupler on the trailer.
- ? The trailer is level when it is hitched. Do not drive if the trailer is not level, and check for improper tongue weight, overloading, worn suspension, or other possible causes.
- ? The trailer cargo is securely loaded.
- ? The rear view mirrors conform to all applicable federal, state/provincial or local regulations. If they do not, install rear view mirrors appropriate for towing purposes.

**⚠ WARNING****? Trailer towing precautions**

To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions. Failure to do so could cause an accident resulting in death or serious injury. Vehicle stability and braking performance are affected by trailer stability, brake setting and performance, and the hitch. Your vehicle will handle differently when towing a trailer.

**? To avoid accident or injury**

- ? Do not exceed the TWR, unbraked TWR, GCWR, GVWR or GAWR.
- ? If the gross trailer weight is over 2000 lb. (900 kg), a sway control device with sufficient capacity is required.
- ? If the gross trailer weight is over 5000 lb. (2200 kg), a weight distributing hitch with sufficient capacity is required.
- ? Adjust the tongue weight within the appropriate range. Place heavier loads as close to the trailer axle as possible.
- ? Do not exceed 65 mph (104 km/h), the posted towing speed limit or the speed limit for your trailer as set forth in your trailer owner's manual, whichever is lowest. Slow down sufficiently before making a turn, in cross winds, on wet or slippery surface, etc., to help avoid an accident. If you experience a vehicle-trailer instability from reducing a certain speed, slow down and make sure you keep your vehicle speed under the speed of which you experience the instability.

? Do not make jerky, abrupt or sharp turns.

? Do not apply the brakes suddenly as you may skid, resulting in jackknifing and loss of vehicle control. This is especially true on wet or slippery surfaces.

? Do not exceed the trailer hitch assembly weight, gross vehicle weight, gross axle weight and trailer tongue weight capacities.

? Certain Toyota Safety Sense 3.0 functions will be affected or be unavailable: →P.243, 302

? Slow down and downshift before descending steep or long downhill grades. Do not make sudden downshifts while descending steep or long downhill grades.

? Vehicle-trailer instability is more likely on steep long downhills. Before descending steep or long downhill grades, slow down and downshift. Do not make sudden downshifts when descending steep or long downhill grades. Avoid holding the brake pedal down too long or applying the brakes too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.

? Do not tow a trailer when the temporary spare tire is installed on your vehicle.

**? When towing a trailer**

Toyota recommends trailers with brakes that conform to any applicable federal and state/provincial regulations.


**⚠ WARNING**

- ? If the gross trailer weight exceeds unbraked TWR, trailer brakes are required. Toyota recommends trailers with brakes that conform to all applicable federal and state/provincial regulations.
- ? Never tap into your vehicle's hydraulic system, as this will lower the vehicle's braking effectiveness.
- ? Never tow a trailer without using a safety chain securely attached to both the trailer and the vehicle. If damage occurs to the coupling unit or hitch ball, there is danger of the trailer wandering into another lane.

**Towing related terms**


? **GCWR (Gross Combination Weight Rating)**

The maximum allowable gross combination weight. The gross combination weight is the sum of the total vehicle weight (including the occupants, cargo and any optional equipment installed on the vehicle) and the weight of the trailer being towed (including the cargo in the trailer).

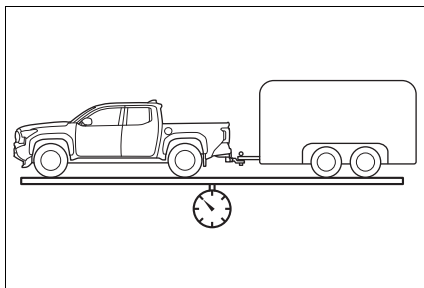


? **GVWR (Gross Vehicle Weight Rating)**

The maximum allowable gross vehicle weight. The gross vehicle weight is the total weight of the vehicle. When towing a trailer, it is the sum of the vehicle weight (including the occupants, cargo and any optional equipment installed on the vehicle) and the tongue weight.

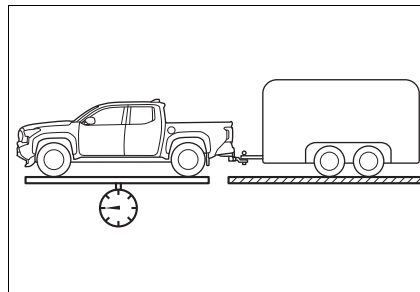

? **GAWR (Gross Axle Weight Rating)**

The maximum allowable gross axle weight. The gross axle weight is the load placed on each axle (front and rear).

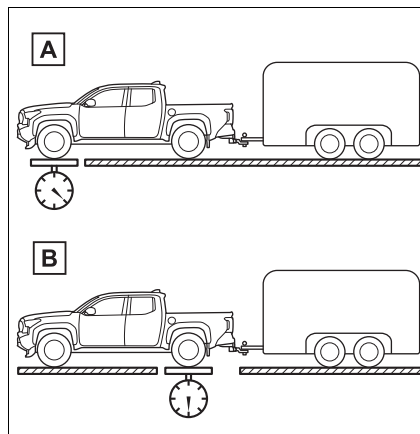

**A** Front GAWR

**B** Rear GAWR


? **TWR (Trailer Weight Rating)**

The maximum allowable gross trailer weight. The gross trailer weight is the sum of the trailer weight and the weight of the cargo in the trailer.

TWR is calculated assuming base vehicle with one driver, one front passenger, towing package (if available), hitch and hitch systems (if required).

Additional optional equipment, passengers and cargo in the vehicle will reduce the trailer weight rating so as not to exceed GCWR, GVWR and GAWR.


If the gross trailer weight exceeds 3000 lb. (1360 kg), it is recommended to use a trailer with 2 or more axles.

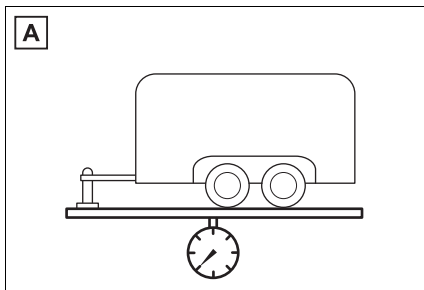

**A** With brakes

? **Unbraked TWR (Unbraked Trailer Weight Rating)**


The trailer weight rating for towing a trailer without a trailer service brake system.

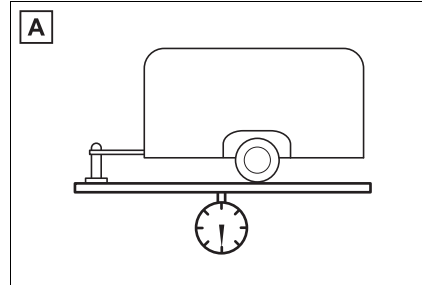

**A** Without brakes

? **Tongue Weight**

The load placed on the trailer hitch ball. (→P.202)

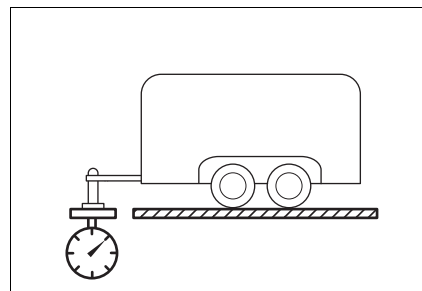

**Weight limits**

- The gross trailer weight must never exceed the TWR described in the table. (→P.200)
- The gross combination weight must never exceed the GCWR described in the table. (→P.200)
- The gross vehicle weight must never exceed the GVWR indicated on the Certification Label. (→P.618)
- The gross axle weight on each axle must never exceed the GAWR indicated on the

- Certification Label. (→P.618)
- If the gross trailer weight is over the unbraked TWR, trailer service brakes are required.
  - If the gross trailer weight is over 2000 lb. (900 kg), a sway control device with sufficient capacity is required.
  - If the gross trailer weight is over 5000 lb. (2200 kg), a weight distributing hitch with sufficient capacity is required.

### GCWR, TWR, Unbraked TWR

Confirm that the gross trailer weight, gross combination weight, gross vehicle weight, gross axle weight and tongue weight are all within the limits.

#### ? GCWR\* and TWR\*

##### ► Double Cab models

Model code *	Bed type	Grade	GCWR	TWR
TZNA40L-PRZSZA	Short	SR5	11105 lb. (5035 kg)	6400 lb. (2900 kg)
		TRD Sport	11165 lb. (5065 kg)	
	Long	SR5	11200 lb. (5080 kg)	
		Except SR5	11255 lb. (5105 kg)	
TZNA41L-PRZ-STA	Short	SR	8210 lb. (3725 kg)	3500 lb. (1585 kg)

Model code *	Bed type	Grade	GCWR	TWR
TZNA45L-PRFSZA	Short	SR	11345 lb. (5145 kg)	6400 lb. (2900 kg)
		TRD Sport	11470 lb. (5200 kg)	
		TRD Off-Road	11515 lb. (5220 kg)	
TZNA45L-PRZSZA	Short	SR5	11345 lb. (5145 kg)	6300 lb. (2855 kg)
		TRD Sport	11410 lb. (5175 kg)	
		TRD Off-Road	11385 lb. (5165 kg)	
		Limited	11455 lb. (5195 kg)	
	Long	SR5	11435 lb. (5185 kg)	6400 lb. (2900 kg)
		TRD Sport	11495 lb. (5215 kg)	
TRD Off-Road		11550 lb. (5240 kg)		
TZNA46L-PRZSTA	Short	SR	8435 lb. (3825 kg)	3500 lb. (1585 kg)

\* : The model code is indicated on the Certification Label. (→P.618)

► Xtra Cab models

Model code*	Bed type	Grade	GCWR	TWR
TZNA40L-CRZSA	Long	SR5	11115 lb. (5040 kg)	6500 lb. (2950 kg)
		TRD Pre-Runner	11155 lb. (5060 kg)	
SR		8105 lb. (3675 kg)	3500 lb. (1585 kg)	
SR5		11335 lb. (5140 kg)	6500 lb. (2950 kg)	
SR		8335 lb. (3780 kg)	3500 lb. (1585 kg)	
TZNA41L-CRZSTA				
TZNA45L-CRZSA				
TZNA46L-CRZSTA				

\*: The model code is indicated on the Certification Label. (→P.618)

? **Unbraked TWR\***


1000 lb. (453 kg)

\*: These models meet the tow-vehicle trailering requirement of SAE International per SAE J2807.

**Trailer Tongue Weight and Trailer Kingpin Weight**

- A recommended tongue weight or kingpin weight varies in accordance with the types of trailers or towing as described below.
- To ensure the recommended values shown below, the trailer must be loaded by referring to the following instructions.
- Conventional Towing  
The gross trailer weight should be distributed so that the tongue weight is 9% to 11%. (Tongue Weight/Gross trailer weight x

100 = 9% to 11%)

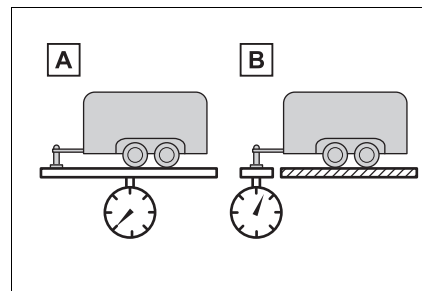

**A** Gross trailer weight

**B** Tongue Weight

If using a weight distributing hitch when towing, return the front axle to the same weight as before the trailer connection.

If front axle weight cannot be measured directly, measure the front

fender height above the front axle before connection. Adjust weight distributing hitch torque until front fender is returned to the same height as before connection.

Do not reduce front fender height below original measurement.

The gross trailer weight, gross axle weight and tongue weight can be measured with platform scales found at a highway weighing station, building supply company, trucking company, junk yard, etc.

### Hitch

Trailer hitch assemblies have different weight capacities. Toyota recommends the use of Toyota hitch/bracket for your vehicle. For details, contact your Toyota dealer.

- If you wish to install a trailer hitch, contact your Toyota dealer.
- Use only a hitch that conforms to the gross trailer weight requirement of your vehicle.
- Follow the directions supplied by the hitch manufacturer.
- Lubricate the hitch ball and kingpin with a light coating of grease.
- Remove the hitch ball whenever you are not towing a trailer. Remove the trailer hitch if you do not need it. After removing the hitch, seal

any mounting holes in the vehicle body to prevent entry of any substances into the vehicle.

#### WARNING

##### ? Hitch

Trailer hitch assemblies have different weight capacities established by the hitch manufacturer. Even though the vehicle may be physically capable of towing a higher weight, the operator must determine the maximum weight rating of the particular hitch assembly and never exceed the maximum weight rating specified for the trailer-hitch. Exceeding the maximum weight rating set by the trailer-hitch manufacturer can cause an accident resulting in death or serious personal injuries.

#### NOTICE


##### ? When installing a trailer hitch

Use only the position recommended by your Toyota dealer. Do not install the trailer hitch on the bumper; this may cause body damage.



### Selecting trailer ball

Use the correct trailer ball for your application.

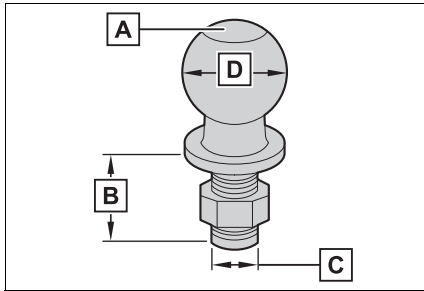

**A** Trailer ball load rating

Matches or exceeds the gross trailer weight rating of the trailer.

**B** Shank length

Protrudes beyond the bottom of the lock washer and nut at least 2 threads.

**C** Shank diameter


Matches the ball mount hole diameter size.

**D** Ball diameter

Matches the size of the trailer coupler. Most couplers are stamped with the required trailer ball size.

Trailer class	Typical trailer ball size
IV	2 5/16 in.
II and III	2 in.
I	1 7/8 in.

### Positions for towing hitch receiver

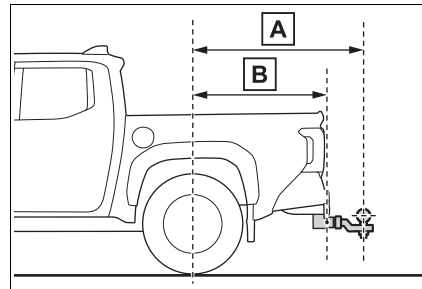


**A** Weight carrying ball position: 50.2 in. (1276 mm)

**B** Hitch receiver pin hole position: 43.8 in. (1113 mm)

? **Matching trailer ball height to trailer coupler height**

No matter which class of tow hitch applies, for a more safer trailer hookup, the trailer ball setup must be the proper height for the coupler on the trailer.

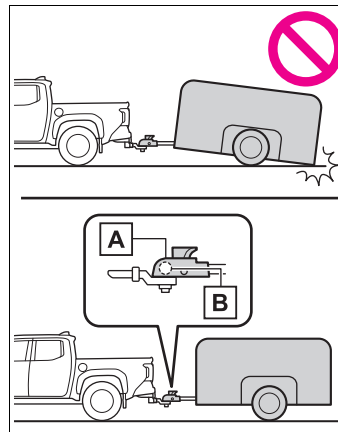

**A** Coupler


**B** Trailer ball

### Connecting trailer lights

Use the wire harness located in the rear end of the vehicle.

The tow lighting system is designed for 64 watts/5 amps of electrical current per side (right and left) for the trailer brake/turn light functions.

Please contact your Toyota dealer with any questions or concerns.

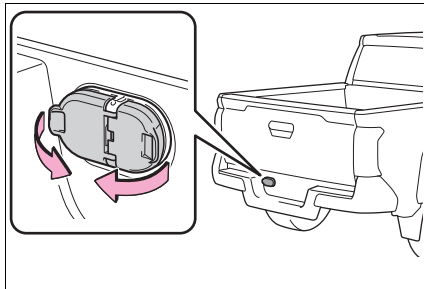

#### ? Auto current cut-off function

In case of over current, the auto cut-off function stops the power flowing to the trailer lights to prevent damage to the vehicle's electrical system.

This function is activated when the rated current of any of the following trailer light circuit components is exceeded:

- ? Stop/turn signal light (right): maximum 5 A
- ? Stop/turn signal light (left): maximum 5 A

#### ? When the auto current cut function is activated

If a trailer light does not come on due to the activation of the auto current cut function, the light system will need to be reset.

Follow the reset procedure shown

below.

- ? If a tail light does not come on, turn off the headlight switch.
- ? If the right-side stop/turn signal light does not come on, put the turn signal in the off position or remove foot from the brake pedal.
- ? If the left-side stop/turn signal light does not come on, put the turn signal in the off position or remove foot from the brake pedal.

If the emergency flashers do not operate, press the emergency flasher switch to turn them off.

After the light system is reset, operate the light switches again to see if the lights operate normally.

If the lights do not operate normally, have the vehicle inspected by your Toyota dealer.

#### ? Trailer lights operation check function








Use the meter control switches to start the function. (→P.99, 108)

##### ► Vehicles with 7-inch display

- 1 Press or of the meter control switch to select .
- 2 Press or to select "Vehicle Settings" and then press and hold OK.
- 3 Press / to select "Trailer Light Check" and then press OK.
- 4 Press OK to start the trailer light check.

##### ► Vehicles with 12.3-inch display

- 1 Press and hold OK to display the cursor on the content display area (center) of the multi-information display. (→P.108)

- 2 Press  or  of the meter control switches to select " Settings" and then press OK .
- 3 Press  or  to select "Vehicle Settings" and then press and hold OK .
- 4 Press  or  to select "Trailer Light Check" and then press OK .
- 5 Press OK to start the trailer light check.

The light check operates in the cycle of Brake lights → Left turn lights → Right turn lights.

? **The trailer light check is operational when**

The trailer light check operates when all of the following conditions are met:

- ? The vehicle is stopped.
- ? The shift lever is shifted to P (automatic transmission) or N.



**NOTICE**

? **Do not directly splice trailer lights**

Do not directly splice trailer lights. Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

**Trailer towing tips**

Your vehicle will handle differently when towing a trailer. To help avoid an accident, death or serious injury, keep the following in mind when towing:

- Speed limits for towing a

trailer vary by state or province. Do not exceed the posted towing speed limit.

- Toyota recommends that the vehicle-trailer speed limit is 65 mph (104 km/h) on a flat, straight, dry road. Do not exceed this limit, the posted towing speed limit or the speed limit for your trailer as set forth in your trailer owner's manual, whichever is lowest. Instability of the towing vehicle-trailer combination (trailer sway) increases as speed increases. Exceeding speed limits may cause loss of control.
- Before starting out, check the trailer lights, tires and the vehicle-trailer connections. Recheck after driving a short distance.
- Practice turning, stopping and reversing with the trailer attached in an area away from traffic until you become accustomed to the feel of the vehicle-trailer combination.
- Reversing with a trailer attached is difficult and requires practice. Grip the bottom of the steering wheel and move your hand to the left to move the trailer to the left. Move your hand to the right to move the trailer to the right. (This is generally opposite to reversing without a

trailer attached.) Avoid sharp or prolonged turning. Have someone guide you when reversing to reduce the risk of an accident.

- As stopping distance is increased when towing a trailer, vehicle-to-vehicle distance should be increased. For each 10 mph (16 km/h) of speed, allow at least one vehicle and trailer length.
- Avoid sudden braking as you may skid, resulting in the trailer jackknifing and a loss of vehicle control. This is especially true on wet or slippery surfaces.
- Avoid jerky starts or sudden acceleration.
- Avoid jerky steering and sharp turns, and slow down before making a turn.
- Note that when making a turn, the trailer wheels will be closer than the vehicle wheels to the inside of the turn. Compensate by making a wider than normal turning radius.
- Slow down before making a turn, in crosswinds, on wet or slippery surfaces, etc. Increasing vehicle speed can destabilize the trailer.
- Take care when passing other vehicles. Passing requires considerable distance. After passing a vehicle, do not forget the length of your trailer, and be sure you have plenty of room before changing lanes.
- Vehicles with an automatic transmission: To maintain engine braking efficiency and charging system performance when using engine braking, do not use the transmission in D. If in the S mode, the transmission shift range position must be in 5 or lower.
- Vehicles with a manual transmission: To maintain engine braking efficiency and charging system performance when using engine braking, do not use the sixth gear.
- Instability happens more frequently when descending steep or long downhill grades. Before descending, slow down and downshift. Do not make sudden downshifts while descending steep or long downhill grades.
- Avoid holding the brake pedal down too long or applying the brakes too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.
- Due to the added load of the trailer, your vehicle's engine may overheat on hot days (at temperatures over 85°F [30°C]) when driving up a long

or steep grade. If the engine coolant temperature gauge indicates overheating, immediately turn off the air conditioning (if in use), pull your vehicle off the road and stop in a safe spot. (→P.609)

- Always place wheel blocks under both the vehicle's and the trailer's wheels when parking. Apply the parking brake firmly, and put the transmission in P (automatic transmission) or in 1 or R (manual transmission). Avoid parking on a slope, but if unavoidable, do so only after performing the following:

- 1 Apply the brakes and keep them applied.
- 2 Have someone place wheel blocks under both the vehicle's and trailer's wheels.
- 3 When the wheel blocks are in place, release the brakes slowly until the blocks absorb the load.
- 4 Apply the parking brake firmly.
- 5 Shift into P (automatic transmission) or in 1 or R (manual transmission) and turn off the engine.

- When restarting after parking on a slope:

- 1 With the transmission in P (automatic transmission) or the clutch pedal (manual

transmission) depressed, start the engine. On vehicles with an automatic transmission, be sure to keep the brake pedal pressed.

- 2 Shift into a forward gear. If reversing, shift into R.
- 3 If the parking brake is in manual mode, release the parking brake. (→P.223)
- 4 Release the parking brake (and also the brake pedal on vehicles with an automatic transmission), and slowly pull or back away from the wheel blocks. Stop and apply the brakes.
- 5 Have someone retrieve the blocks.

---

#### ? **Break-in schedule**

If your vehicle is new or equipped with any new power train components (such as an engine, transmission, transfer (4WD models), rear differential or wheel bearing), Toyota recommends that you do not tow a trailer until the vehicle has been driven for over 500 miles (800 km).

After the vehicle has been driven for over 500 miles (800 km), you can start towing. However, for the next 500 miles (800 km), drive the vehicle at a speed of less than 50 mph (80 km/h) when towing a trailer, and avoid full throttle acceleration.

#### ? **Maintenance**

? If you tow a trailer, your vehicle will require more frequent maintenance due to the additional load. (See "Owner's Warranty Information Booklet" or "Scheduled Maintenance Guide" / "Owner's Manual Supplement".)

? Retighten the fixing bolts of the towing ball and bracket after approximately 600 miles (1000 km) of trailer towing.

? **If trailer sway occurs**

One or more factors (crosswinds, passing vehicles, rough roads, etc.) can adversely affect handling of your vehicle and trailer, causing instability.

? If trailer swaying occurs:

- Firmly grip the steering wheel. Steer straight ahead. Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed. Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize. (if enabled, Trailer Sway Control can also help to stabilize the vehicle and trailer.)


? After the trailer swaying has stopped:


- Stop in a safe place. Get all occupants out of the vehicle.
- Check the tires of the vehicle and the trailer.
- Check the load in the trailer. Make sure the load has not shifted. Make sure the tongue weight is appropriate, if possible.
- Check the load in the vehicle. Make sure the vehicle is not overloaded after occupants get in.

If you cannot find any problems, the speed at which trailer swaying occurred is beyond the limit of your particular vehicle-trailer combination. Drive at a lower speed to prevent instability. Remember that swaying of the towing vehicle-trailer increases as speed increases.

## Dinghy towing

**Your vehicle is not designed to be dinghy towed (with 4 wheels on the ground) behind a motor home.**

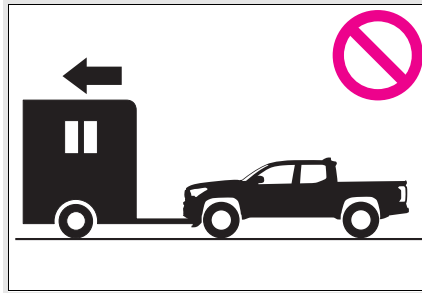

 **NOTICE**

? **To avoid serious damage to your vehicle**

Do not tow your vehicle with the four wheels on the ground.

4


Driving

## Engine (ignition) switch

**Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.**

### Starting the engine

- 1 Pull the parking brake switch to check that the parking brake is set. (→P.223)  
The parking brake indicator will come on.
- 2 Check that the shift lever is in P (automatic transmission) or N (manual transmission).
- 3 Firmly depress the brake pedal (automatic transmission) or clutch pedal (manual transmission).

 and a message will be displayed on the multi-information display. If it is not displayed, the engine cannot be started.

- 4 Press the engine switch shortly and firmly.


When operating the engine switch, one short, firm press is enough. It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal (automatic transmission) or clutch pedal (manual transmission)

until the engine is completely started.

The engine can be started from any engine switch mode.

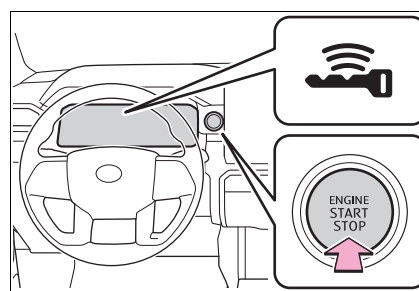

#### ? Engine switch illumination

According to the situation, the engine switch illumination operates as follows.

- ? When driver's door or front passenger's door is opened, the engine switch illumination illuminates.
- ? When the engine switch is in OFF and depressing the brake pedal with carrying the electronic key on your person, the engine switch illumination blinks.
- ? When the engine switch is in ACC or ON, the engine switch illumination illuminates.
- ? When the engine switch mode is changed from ACC or ON to OFF, the engine switch illumination illuminates for a certain amount of time. Afterwards, the engine switch illumination turns off.

#### ? If the engine does not start

- ? The engine immobilizer system may not have been deactivated. (→P.75)  
Contact your Toyota dealer.
- ? If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.

#### ? If the battery is discharged

The engine cannot be started using

the smart key system. Refer to P.604 to restart the engine.

? **Electronic key battery depletion**

→P.124

? **Conditions affecting operation**

→P.149

? **Notes for the entry function**

→P.149

? **If “Smart Key System Malfunction See Owner’s Manual” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.


? **When “Check Fuel Cap” is displayed on the multi-information display**

→P.240

? **Steering lock function (vehicles with a manual transmission)**

? After turning the engine switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.

? When the steering lock cannot be released, “Push ENGINE Switch while Turning Steering Wheel in Either Direction” will be displayed on the multi-information display. Press the engine switch shortly and firmly while turning the steering wheel left and right.

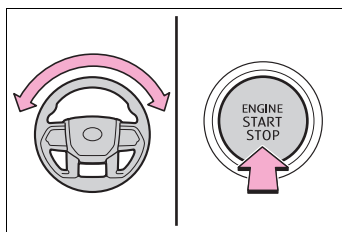

? To prevent the steering lock motor from overheating, operation of the

motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from operating the engine switch. After about 10 seconds, the steering lock motor will resume functioning.

? **Electronic key battery**

→P.553

? **Operation of the engine switch**

? If the switch is not pressed shortly and firmly, the engine switch mode may not change or the engine may not start.

? If attempting to restart the engine immediately after turning the engine switch to OFF, the engine may not start in some cases. After turning the engine switch to OFF, please wait a few seconds before restarting the engine.

? **Customization**

If the smart key system has been deactivated in a customized setting, refer to P.602.

**! WARNING**

? **When starting the engine**

Always start the engine while sitting in the driver’s seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

? **Caution while driving (vehicles with a manual transmission)**

If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.



**NOTICE****? When starting the engine**

- ? Do not race a cold engine.
- ? If the engine becomes difficult to start or stalls frequently, have your vehicle checked by your Toyota dealer immediately.

**? Symptoms indicating a malfunction with the engine switch**

If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Toyota dealer immediately.

**Stopping the engine**

- 1 Stop the vehicle completely.
- 2 If the parking brake is in manual mode, set the parking brake. (→P.223)

Check the parking brake indicator is illuminated.

- 3 Shift the shift lever to P (automatic transmission) or N (manual transmission).

Do not press the shift release button after shifting the shift position to P. (vehicles with an automatic transmission)

- 4 Press the engine switch shortly and firmly.

The engine will stop, and the meter display will be extinguished.

- 5 Release the brake pedal and check that “ACCESSORY” or “IGNITION ON” is not shown on the multi-information display.

**? Automatic engine shut off feature (except for New Caledonia)**

- ? The vehicle is equipped with a feature that automatically shuts off the engine when the shift lever is in P with the engine running for an extended period.
- ? The engine will automatically shut off after approximately 1 hour if it has been left running while the shift lever is in P.
- ? The timer for the automatic engine shut off feature will reset if the brake pedal is depressed or if the shift lever is in a position other than P.
- ? After the vehicle is parked, if the door is locked with the door lock switch (→P.133) from the inside or the mechanical key from the outside, the automatic engine shut off feature will be disabled. The timer for the automatic engine shut off feature will be re-enabled if the driver's door is opened.

**WARNING****? Stopping the engine in an emergency**

- ? If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P.562)

However, do not touch the engine switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

**⚠ WARNING**

? If the engine switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.

? Vehicles with an automatic transmission: To restart the engine after performing an emergency shutdown, shift the shift lever to N and then press the engine switch.

Vehicles with a manual transmission: To restart the engine after performing an emergency shutdown, depress the clutch pedal and then press the engine switch.

? **When parking (except for New Caledonia)**

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases to enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.


? If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.

? Do not leave the vehicle with the engine running for a long time. If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.

? Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

**Changing engine switch modes**

Modes can be changed by pressing the engine switch with the brake pedal (automatic transmission) or clutch pedal (manual transmission) released. (The mode changes each time the switch is pressed.)

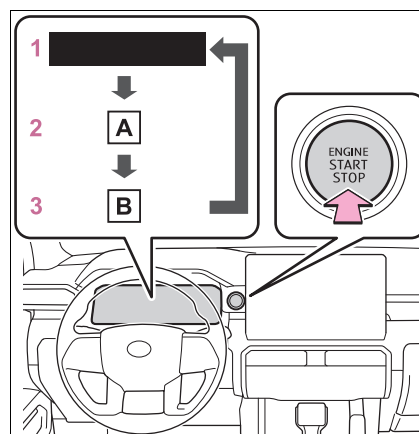

**A** "ACCESSORY"

**B** "IGNITION ON"

**1 OFF<sup>\*1</sup>**

The emergency flashers can be used.

The multi-information display will not be displayed.

**2 ACC<sup>\*2</sup>**

Some electrical components such as the audio system can be used.

"ACCESSORY" will be displayed on the meter.

**3 ON**

All electrical components can be used.

"IGNITION ON" will be displayed on

the meter.

\*1: Vehicles with an automatic transmission: If the shift lever is in a position other than P or the shift release button is pressed when turning off the engine, the engine switch will be remained to ON, not to OFF.

\*2: ACC mode can be enabled/disabled on the customize menu. (→P.640)

#### ? When ACC customization is in off

With the engine switch turned off, the multimedia system can still be used for a certain time until the battery saving function starts operating.

#### ? Auto power off function

Automatic transmission: If the vehicle is left in ACC for more than 20 minutes or ON (with engine is not running) for more than 20 minutes with the shift lever is in P or the shift release button is not pressed, the engine switch will automatically turn to OFF. However, this function cannot entirely prevent the battery discharge. Do not leave the vehicle with the engine switch in ACC or ON for long periods of time when the engine is not running.

Manual transmission: If the vehicle is left in ACC for more than 20 minutes or ON (the engine is not running) for more than 20 minutes, the engine switch will automatically turn off. However, this function cannot entirely prevent battery discharge.

Do not leave the vehicle with the engine switch in ACC or ON for long periods

#### NOTICE

##### ? To prevent battery discharge

? Do not leave the engine switch in ACC or ON for long periods of time without the engine on.

? If “ACCESSORY” or “IGNITION ON” is displayed on the meter, the engine switch is not off. Exit the vehicle after turning the engine switch off.


#### When stopping the engine with the shift lever in a position other than P (Vehicles with an automatic transmission)

If the engine is stopped when the shift lever is in a position other than P or the shift release button is pressed, the engine switch will not be turned to OFF. Perform the following procedure to turn the switch to OFF:

- 1 Check that the parking brake is set.
- 2 Shift the shift lever to P.

Do not press the shift release button after shifting the shift position to P.

- 3 Check that “IGNITION ON” is displayed on the multi-information display and press the engine switch shortly and firmly.
- 4 Check that “ACCESSORY” or “IGNITION ON” on the multi-information display is off.

 **NOTICE**

**? To prevent battery discharge**  
 Do not stop the engine with the shift lever in a position other than P or the shift release button pressed. If the engine is stopped with the shift lever in a position other than P or the shift release button pressed, the engine switch will not be turned OFF and remained to ON. If the vehicle is left in ON, battery discharge may occur.

**Automatic transmission\***

\*: if equipped

**Select the shift position depending on your purpose and situation.**

**Shift position purpose and functions**

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving* <sup>1</sup>
S	S mode driving* <sup>2</sup> (→P.218)

\*<sup>1</sup>: Shifting to the D position allows the system to select a gear suitable for the driving conditions. Setting the shift lever to the D position is recommended for normal driving.

\*<sup>2</sup>: Selecting shift ranges using S mode restricts the upper limit of the possible gear ranges, controls engine braking force, and prevents unnecessary upshifting.

**? Driving on a downhill**

On declines, there may be case where the vehicle shifts down automatically to obtain engine braking. As a result of the downshifting, the

engine speed may increase.

? **To protect the automatic transmission**

? If the tires spin continually when the vehicle becomes stuck in mud, dirt or snow, or if the accelerator pedal is depressed and released repeatedly while driving, the automatic transmission temperature may become too high and the automatic transmission may be damaged.

To avoid damaging the automatic transmission, the system may temporarily lock the gear. If the automatic transmission temperature falls, the gear locking is canceled and the automatic transmission is returned to the normal operation.

? If the automatic transmission fluid temperature is high, "Transmission Oil Temp. High Stop in a Safe Place and See Owner's Manual" will be displayed on the multi-information display. Immediately stop the vehicle in a safe place, shift the shift lever to P and wait until the warning message go off. If the warning message go off, you may start the vehicle again. If the warning message do not go off, contact your Toyota dealer.

? **When driving with the dynamic radar cruise control activated**

Even when switching the driving mode to sport mode with the intent of enabling engine braking, engine braking will not occur because dynamic radar cruise control will not be canceled. (→P.404)

? While driving in S mode, downshifting to 6, 5, 4, or 3 is possible based on vehicle speed. (→P.218)

? **Restraining sudden start (Drive-Start Control)**

→P.191

? **AI-SHIFT**

The AI-SHIFT automatically selects the suitable gear according to driver


operation and driving conditions. AI-SHIFT automatically operates when the shift lever is in D or S.

**WARNING**

? **When driving on slippery road surfaces**

Do not accelerate or shift gears suddenly. Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

**Shifting the shift lever**

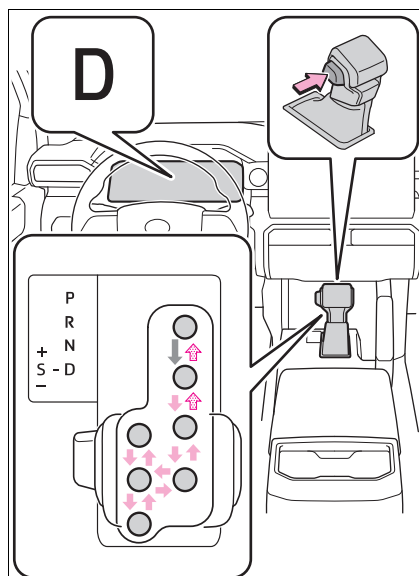

← While the engine switch is in ON and the brake pedal depressed\*, shift the shift lever while pushing the shift release button on the shift knob.

← Shift the shift lever while pushing the shift release button on the shift knob.

← Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

\*: For the vehicle to be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.

### ? Shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the engine switch is in ON, the brake pedal is depressed and the shift release button is pushed.

### ? If the shift lever cannot be shifted from P


First, check whether the brake pedal is being depressed.

If the shift lever cannot be shifted even though the brake pedal is depressed and the shift release button is pushed, there may be a problem with the shift lock system. Have the vehicle inspected by your Toyota dealer immediately.


The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

Releasing the shift lock:

- 1 Set the parking brake.
- 2 Turn the engine switch off.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool. To prevent damage to the cover, cover the tip of the screwdriver with a rag.

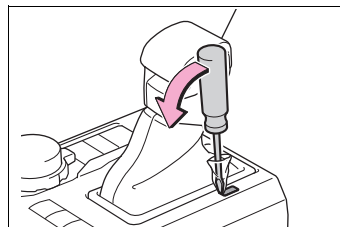

- 5 Press and hold the shift lock override button and then push the button on the shift knob. The shift lever can be shifted while both buttons are pressed.

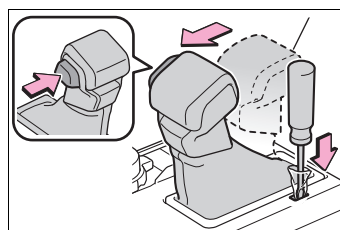

### ! WARNING

#### ? To prevent an accident when releasing the shift lock

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal.

If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.


### Selecting the driving mode

#### ? Drive mode

→P.404

### Changing shift ranges in S mode

When the shift lever is in the S position, the shift lever can be operated as follows:

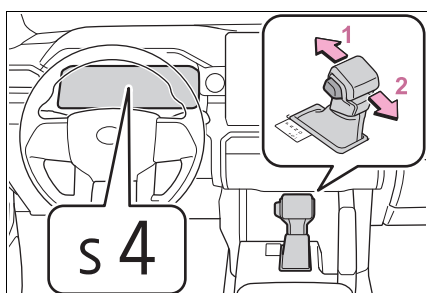

- 1 Upshifting
- 2 Downshifting

The selected shift range, from S1 to S8 will be displayed on the multi-information display.

The initial shift range in S mode is set automatically to 3, 4, 5 or 6 according to vehicle speed.

However, the initial shift range may be set to 4 if AI-SHIFT has operated while the shift lever was in the D position. (→P.216)

#### ? S mode

- ? You can choose from 8 levels of accelerating force and engine braking force.
- ? A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.
- ? To prevent the engine from over-revving, upshifting may automatically occur.
- ? To protect the automatic transmission, a function is adopted that automatically selects a higher shift

range when the fluid temperature is high.

- ? When the shift range is 7 or lower, holding the shift lever toward “+” sets the shift range to 8.
- ? **Downshifting restriction warning buzzer**


To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

- ? **If the S indicator does not come on even after shifting the shift lever to S**

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by your Toyota dealer immediately.

### “TOW HAUL” switch (if equipped)

Use “TOW HAUL” mode when pulling a trailer or hauling a heavy load. Activating “TOW HAUL” mode is changes engine, transmission, and steering to be more suitable when pulling a trailer.

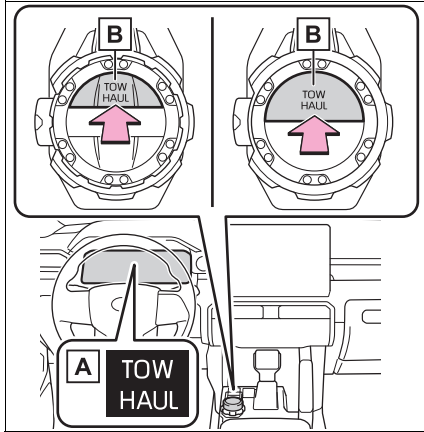

**A** "TOW HAUL" indicator

**B** "TOW HAUL" switch

Press the "TOW HAUL" switch

The "TOW HAUL" indicator will come on.

Press the switch once more to cancel the mode.

? **Automatic deactivation of "TOW HAUL" mode**

"TOW HAUL" mode is deactivated the following conditions:

- ? When the front-wheel drive control switch is in "4L"
- ? When driving mode select or Multi-terrain Select (if equipped) is selected


**Selecting power mode (if equipped)**

Use when high levels of response and feeling are desirable, such as when driving in mountainous regions.

Press the "ECT PWR" switch to select power mode.

The "ECT PWR" indicator comes on.

Press the switch again to cancel power mode.

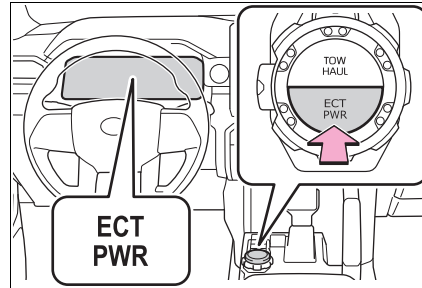




**Manual transmission\***

\*: If equipped

**Operating instructions**

? **Shifting the shift lever**

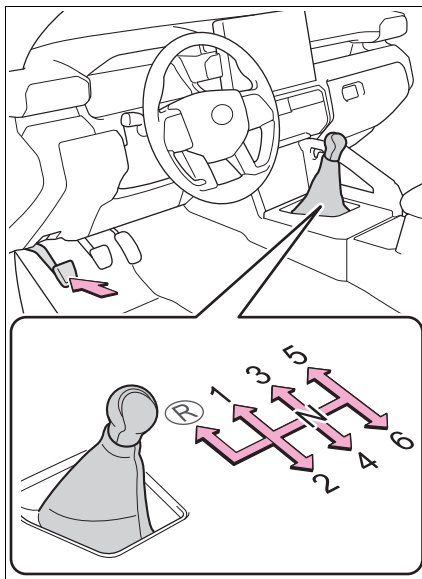

- 1 Depress the clutch pedal firmly.
- 2 Shift the shift lever to the desired gear.

Make sure to only shift gears sequentially.

- 3 Gradually release the clutch pedal.

If it is difficult to shift in R, shift the lever to N, release the clutch pedal momentarily, and then try again.

? **Maximum allowable speeds**

Observe the following maximum allowable speeds in each gear when maximum acceleration is necessary.

Shift position	Transfer position	Maximum speed mph (km/h)
1	"2H" and "4H"	22 (37)
	"4L"	8 (14)
2	"2H" and "4H"	45 (73)
	"4L"	17 (28)
3	"2H" and "4H"	76 (123)
	"4L"	29 (48)
4	"2H" and "4H"	105 (170)
	"4L"	42 (69)
5	"2H" and "4H"	105 (170)
	"4L"	55 (89)
6	"2H" and "4H"	105 (170)
	"4L"	67 (108)

? **Reverse warning buzzer**

A buzzer will sound to inform the driver if the shift lever is shifted to the R position.

**NOTICE**

? **To prevent damage to the vehicle**

When shifting gears, observe the following precautions. Failure to do so may cause damage to the engine, manual transmission, and/or clutch.

- ? Do not shift the shift lever to the desired gear without depressing the clutch pedal.
- ? Shift the shift lever to R only when the vehicle is stationary.


**NOTICE**

- ? Do not rest your hand on or hold the shift lever any time other than when shifting.
- ? In order not to cause the engine to overrev, make sure to only shift gears sequentially.
- ? Do not release the clutch pedal suddenly.

**iMT (Intelligent Manual Transmission)**

The iMT optimally controls the engine speed to suit the driver's operation of the clutch pedal and shift lever, helping the driver to shift gears more smoothly. Additionally, when the clutch pedal is operated, the iMT helps reduce shift shock, allowing for lighter shift operations when driving on a winding road or incline.

Press the "iMT" switch.

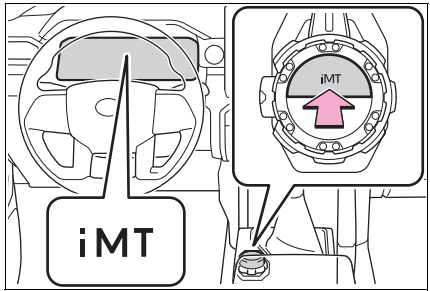

The iMT indicator will illuminate in green. Press the switch again to cancel iMT.

? **The iMT may not operate when**

In the following situations, iMT may not operate. However, this does not indicate a malfunction.

- ? The clutch pedal is not fully depressed
- ? The clutch pedal is not fully released, such as if a foot is resting on the clutch pedal\*
- ? Shift operation is performed after the vehicle has been coasting with the shift lever in N
- ? The shift lever is not operated for a long time after the clutch pedal is depressed

\*: After the shift lever is moved, unless your foot is completely removed from the clutch pedal, the iMT may not operate and the engine speed may not be controlled optimally for the next gear change. To enable the iMT, release the clutch pedal completely and then depress it again before operating the shift lever.

? **If the warning message for iMT is shown on the multi-information display**

The iMT may be temporarily unavailable or malfunctioning. Have the vehicle inspected at your Toyota dealer.


**WARNING**

? **Limitations of the iMT**

iMT is not a system that prevents shift lever operation error or engine overrevving. Depending on the situation, iMT may not operate normally and the shift position may not be changed smoothly. Overly relying on iMT may cause an unexpected accident.

Turn signal lever

Operating instructions

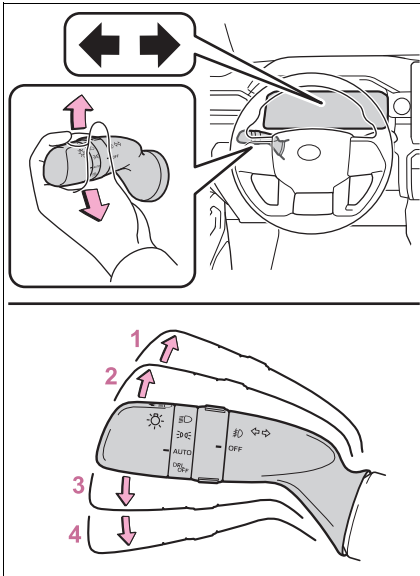

- 1 Right turn
- 2 Lane change to the right  
(move the lever partway and release it)  
The right hand signals will flash 3 times.
- 3 Lane change to the left  
(move the lever partway and release it)  
The left hand signals will flash 3 times.
- 4 Left turn

? **Turn signals can be operated when**

The engine switch is in ON.

? **If the indicator flashes faster than usual**

- ▶ Bulb type front turn signal

Check that the front turn signal light bulb has not burned out.

- ▶ LED type turn signal

Have the vehicle inspected by your Toyota dealer.

? **If the turn signals stop flashing before a lane change has been performed**

Operate the lever again.

**Parking brake**


The parking brake can be set or released automatically or manually. In automatic mode, the parking brake can be set or released automatically according to shift lever operation. Also, even in automatic mode, the parking brake can be set or released manually.

**Operating instructions**

? **Using the manual mode**


The parking brake can be set and released manually.

- ▶ Vehicles with an Automatic transmission

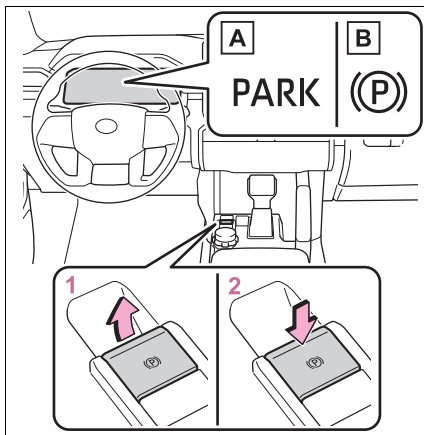

- A U.S.A.
- B Canada

- ▶ Vehicles with a Manual transmission

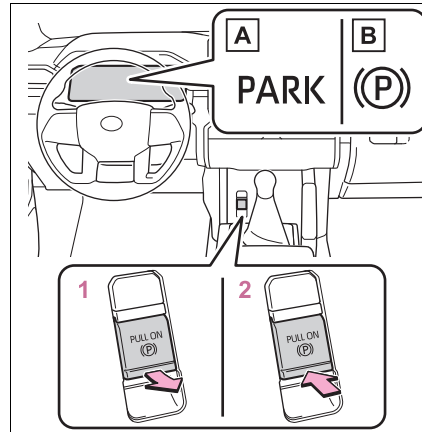

- A U.S.A.
- B Canada

- 1 Pull the switch to set the parking brake.

The parking brake indicator light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

- 2 Push the switch to release the parking brake.
- Operate the parking brake switch while depressing the brake pedal or the accelerator pedal. When using this function, slowly depress the accelerator pedal.
- Parking brake automatic release function (→P.225)


Make sure that the parking brake indicator light turn off.

If the parking brake indicator light flashes, operate the switch again. (→P.577)

? **Turning the automatic mode on**

- ▶ Vehicles with an Automatic transmission


While the vehicle is stopped, pull and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

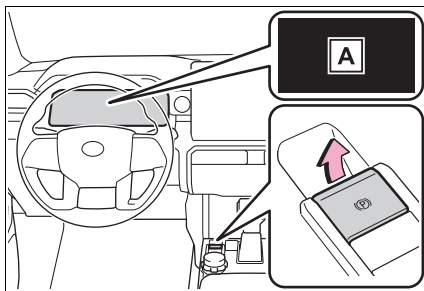

**A** “EPB Shift Interlock Function Activated”

- ▶ Vehicles with a Manual transmission

While the vehicle is stopped, pull and hold the parking brake switch until a buzzer sounds and auto EPB OFF indicator **A** turns off.

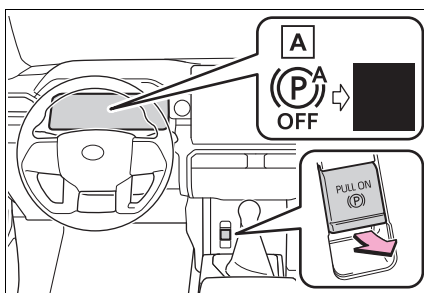

When the automatic mode is turned on, the parking brake operates as follows.

- ▶ Vehicles with an Automatic transmission

- When the shift lever is shifted from P, the parking brake will be released, and the parking brake indicator light will turn off.
- When the shift lever is shifted to P, the parking brake will be set, and the parking brake indicator light will turn on.

Operate the shift lever with the vehicle stopped and the brake pedal depressed.

The auto function may not operate if the shift lever is moved extremely quickly or the brake pedal is not firmly depressed. In this situation, apply the parking brake manually.

- ▶ Vehicles with a manual transmission

When the engine is off, the parking brake will be set, and the parking brake indicator and parking brake light turn on.


- When the engine is off, the parking brake will be set, and the parking brake indicator light and the parking brake switch indicator turn on.

? **Turning the automatic mode off**

- ▶ Vehicles with an Automatic transmission

While the vehicle is stopped and depressing the brake pedal, press


and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

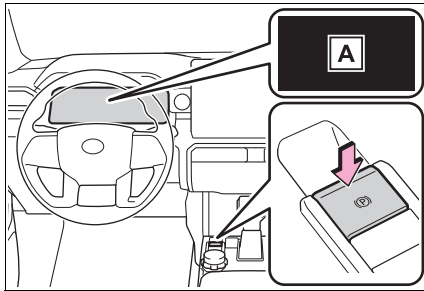

**A** “EPB Shift Interlock Function Deactivated”

► Vehicles with a Manual transmission

While the vehicle is stopped and depressing the brake pedal, press and hold the parking brake switch until a buzzer sounds and auto EPB OFF indicator **A** comes on.

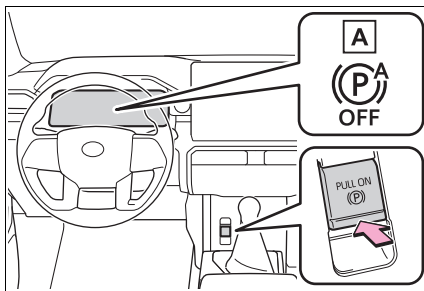

? **Parking brake operation**

- ? When the engine switch is not in ON, the parking brake cannot be released using the parking brake switch.
- ? When the engine switch is not in ON, automatic mode (automatic brake setting and releasing) is not available.

? **Parking brake automatic release function**

The parking brake will be released automatically when the accelerator pedal is slowly depressed under the following conditions:

- ? The driver’s door is closed
- ? The driver is wearing the seat belt
- ? The shift lever is in a forward or reverse position.
- ? The malfunction indicator lamp or brake system warning light is not illuminated

When depressing the accelerator pedal, depress it slowly.

If the automatic release function does not operate, release the parking brake manually.

Vehicles with an automatic transmission:

When the shift lever is shifted from P, the parking brake will be released automatically.

? **Parking brake automatic lock function**

The parking brake will be set automatically under the following conditions:

- ? The driver does not operate the brake pedal
- ? The driver’s door is not closed
- ? The driver is not wearing the seat belt
- ? The shift lever position is not in P or N
- ? The malfunction indicator lamp or brake system warning light is not illuminated

? **If “Parking Brake Temporarily Unavailable” is displayed on the multi-information display**

If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will

return after about 1 minute.

? **If “Parking Brake Unavailable” is displayed on the multi-information display**

Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

? **Parking brake operation sound**

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

? **Parking brake indicator light**

? Depending on the engine switch mode, the parking brake indicator light will turn on and stay on as described below:

ON: Comes on until the parking brake is released.

Not in ON: Stays on for approximately 15 seconds.

? When the engine switch is turned to OFF with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

? **When the parking brake switch malfunctions**

Automatic mode (automatic brake setting and releasing) will be turned on automatically.

? **Parking the vehicle**

→P.183

? **Parking brake engaged warning buzzer**

A buzzer will sound if the vehicle is driven with the parking brake engaged. “Parking Brake ON” is displayed on the multi-information display (with the vehicle reaching a speed of 3 mph [5 km/h]).

? **If the brake system warning light comes on**

→P.571

? **Usage in winter time**

→P.441

 **WARNING**

? **When parking the vehicle**

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally by a child and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

? **Parking brake switch**

Do not set any objects near the parking brake switch. Objects may interfere with the switch and may lead the parking brake to unexpectedly operate.

 **NOTICE**

? **When parking the vehicle**

Before you leave the vehicle, shift the shift lever to P, set the parking brake and make sure that the vehicle does not move.

? **When the system malfunctions**

Stop the vehicle in a safe place and check the warning messages.

? **When the parking brake cannot be released due to a malfunction**

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear. Have the vehicle inspected by your Toyota dealer immediately if this occurs.

### Brake Hold

- ▶ Vehicles with an Automatic transmission

**The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.**

- ▶ Vehicles with a manual transmission

**The brake hold system keeps the brake applied when the shift lever is not in R with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in forward to allow smooth start off.**


### Enabling the system

Turns the brake hold system on


The brake hold standby indicator (green) **A** comes on. While the system is holding the brake, the brake hold operated indica-

tor (yellow) **B** comes on.

- ▶ Vehicles with an Automatic transmission

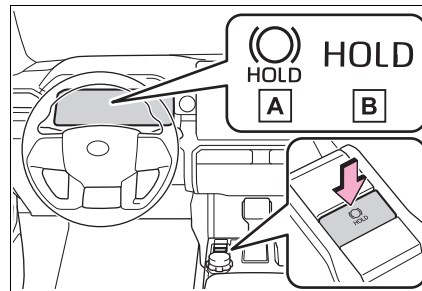

- ▶ Vehicles with a Manual transmission

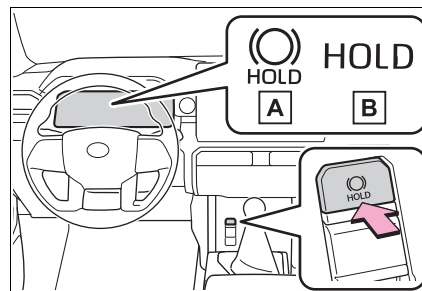

### ? Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- ? The driver's door is not closed.
- ? The driver is not wearing the seat belt.
- ? The parking brake is engaged.

If any of the conditions above are detected when the brake hold system is enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automati-



cally.

? **Brake hold function**

- ? If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- ? To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- ? The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. A warning buzzer will sound and the multi-information display will inform the driver of this situation. If a warning message is shown on the multi-information display, read the message and follow the instructions.

? **When the parking brake is set automatically while the system is holding the brakes**

Perform any of the following operations to release the parking brake:

- ? Depress the accelerator pedal. (The parking brake is not released if the seat belt is not fastened, door is open, and/or the shift lever is in P or N.)
- ? Operate the parking brake switch with the brake pedal depressed.

Make sure that the parking brake indicator light goes off. (→P.223)

? **When an inspection at your Toyota dealer is necessary**

When the brake hold standby indicator (green) does not illuminate even when the brake hold switch is pressed with the brake hold system operating conditions met, the system may be malfunctioning. Have the vehicle inspected at your Toyota

dealer.

? **If “Brake Hold Malfunction Press Brake to Deactivate Visit Your Dealer” or “Brake Hold Malfunction Visit Your Dealer” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

? **Warning messages and buzzers**

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

? **When another control activates with the brake hold system**

A message is displayed on the multi-information display in any of the following cases.

- ? “Brake Hold Unavailable, See the Owner’s Manual”
  - When the brake hold switch is pressed while the downhill assist control system is activated.
  - When the brake hold switch is pressed while the front-wheel drive control switch is turned to “4L” mode.
- ? “Brake Hold Unavailable, Press Brake to Deactive.”
  - When the “DAC/CRAWL” switch is operated while the brake hold system is activated.
  - When the four-wheel drive control switch is turned to “4L” mode while the brake hold system is activated.

The brake hold system and downhill assist control system or transfer “4L” mode cannot be activated at the same time.

Please press the brake hold switch with the brake pedal depressed to turn off the brake hold system.

? **If the brake hold operated indicator flashes**

→P.576



**WARNING**

? **When the vehicle is on a steep incline**

Take care when using the brake hold system on a steep incline, exercise caution. The brake hold function may not hold brakes in such situations.

Also, the system may not activate depending on the angle of the slope.

? **When stopped on a slippery road**

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.



**NOTICE**


? **When parking the vehicle**


The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the engine switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the engine switch, depress the brake pedal, shift the shift lever to P (vehicles with an automatic transmission) or N (vehicles with a manual transmission), and set the parking brake.

### Headlight switch

The headlights can be operated manually or automatically.



### Operating instructions

Operating the  switch turns on the lights as follows:

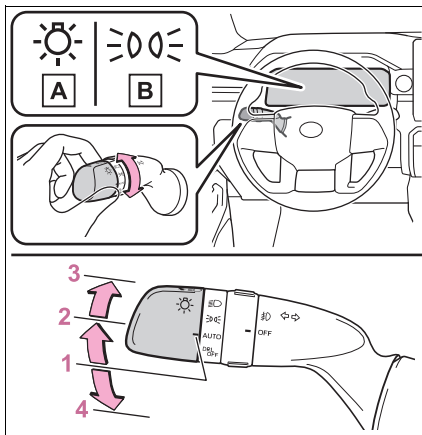


**A** U.S.A.

**B** Canada

- 1  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights (→P.230) turn on.
- 2  The headlights and all

lights listed above (except daytime running lights) turn on.


- 4  (if equipped) The daytime running lights turn off.

? **AUTO mode can be used when** The engine switch is in ON.

? **Daytime running light system**

? Vehicles with bulb type front turn signal lights: The daytime running lights illuminate using the same lights as the low beam headlights and illuminate dimmer than the low beam headlights.  
 Vehicles with LED type front turn signal lights: The daytime running lights illuminate using the same lights as the parking lights and illuminate brighter than the parking lights.

? To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically when all of the following conditions are met. (The daytime running lights are not designed for use at night.)

- The engine is running
- The parking brake is released
- The headlight switch is in the  or AUTO\* position


\*: When the surroundings are bright

? The daytime running lights remain on after they illuminate, even if the parking brake is set again.

? For the U.S.A.: Daytime running lights can be turned off by operating the switch.


? Compared to turning on the headlights, the daytime running light system offers greater durability and consumes less electricity, so it can help improve fuel economy.

? **Headlight control sensor**

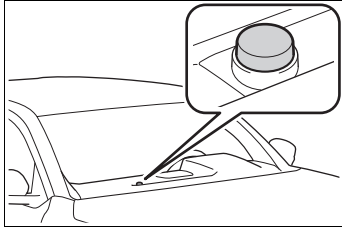



The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield. Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

? **Automatic light off system**

? When the headlights are on: The headlights and tail lights turn off 30 seconds after the driver's door is opened and closed if the engine switch is turned to off. (The lights turn off immediately if  on the key is pressed after all the doors are closed.)

? When only the tail lights are on: The tail lights turn off automatically if the engine switch is turned to OFF and the driver's door is opened.

To turn the lights on again, turn the engine switch to ON, or turn the light switch off once and then back to  or .

? **Light reminder buzzer**

A buzzer sounds when the engine switch is turned to OFF and the driver's door is opened while the lights are turned on.

? **When unlock the doors (welcome lamp) (If equipped)**

When the doors are unlocked using the entry function or wireless remote control, the front parking lights and tail lights turn on automatically.

When the light switch is in the AUTO position and the surrounding area is dark, this function will operate.

? **Windshield wiper linked headlight illumination**

When driving during daytime with the headlight switch turned to AUTO, if the windshield wipers are used, the headlights will turn on automatically after several seconds to help enhance the visibility of your vehicle.

? **Battery-saving function**

In order to prevent the battery of the vehicle from discharging, if the headlights and/or tail lights are on when the engine switch is turned to OFF the battery saving function will operate and automatically turn off all the lights after approximately 20 minutes. When the engine switch is turned to ON, the battery-saving function will be disabled.


When any of the following are performed, the battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the battery-saving function has been reactivated:

? When the headlight switch is operated


? When a door is opened or closed

? **Customization**

Some functions can be customized. (→P.640)

	<b>NOTICE</b>
<p>? <b>To prevent battery discharge</b></p> <p>Do not leave the lights on longer than necessary when the engine is not running.</p>	

**Turning on the high beam headlights**

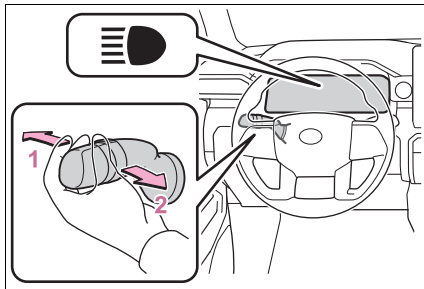

1 With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.


2 Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

**Manual headlight leveling dial**

The vehicle is equipped with manual leveling of the headlamps. The aim of the headlamps can be adjusted by adjusting the dial settings based on your vehicle loading condition.

It is recommended that the headlamps remain adjusted as close to “0” position so not to interfere with other road users.

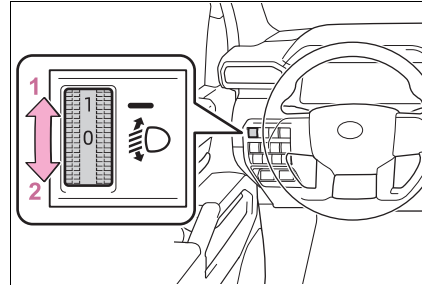

- 1 Raises the level of the headlights
- 2 Lowers the level of the headlights

? **Guide to dial settings**

Loading condition		Control switch position
Passengers	Payload	
Driver Only	None	0
Full Occupancy	None	0.5
Full Occupancy	Maximum Load*	1.5
Driver Only	Maximum Load*	2.5


\*: Maximum load means weight capacity of rear axle or overall vehicle has been reached.



**Fog light switch\***

\*: If equipped

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.

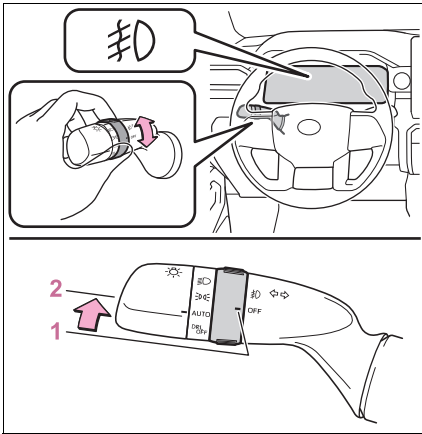**Operating instructions**



- 1 OFF \*1 or  \*2 Turns the front fog lights off
- 2  Turns the front fog lights on

\*1: U.S.A.

\*2: Canada

**? Fog lights can be used when**

The parking lights are on or the headlights are on in low beam.

**AHB (Automatic High Beam)**

The Automatic High Beam uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically changes the head lights between the high beams and low beams.

**! WARNING**

**? For safe use**


Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.


**? To prevent unintentional operation of the Automatic High Beam System**

? When it is necessary to disable the system: →P.243


**Using the Automatic High Beam System**

- 1 Press the Automatic High Beam switch.

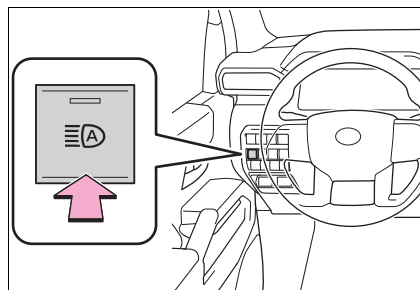

- 2 Turn the headlight switch to the AUTO or  position.

When the headlight switch lever is in the low beam position, the AHB system will be enabled and the AHB indicator will illuminate.

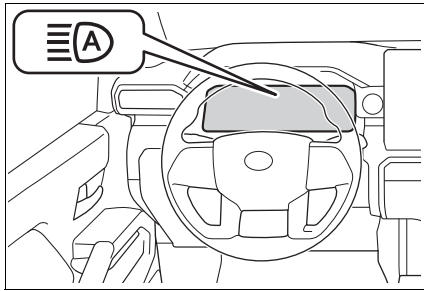

? **Automatic operating conditions of the high beams**

- ? When all of the following conditions are met, the high beams will illuminate automatically:
- The vehicle speed is approximately 21 mph (34 km/h) or more. (except for New Caledonia)
  - The vehicle speed is approximately 19 mph (30 km/h) or more (for New Caledonia)
  - The area ahead of the vehicle is dark.
  - There are no vehicles ahead with lights on.
  - There are few streetlights or other lights on the road ahead.
- ? If any of the following conditions are met, the headlights will change to the low beams:
- Vehicle speed drops below approximately 17 mph (27 km/h). (except for New Caledonia)
  - Vehicle speed drops below approximately 16 mph (25 km/h). (for New Caledonia)
  - The area ahead of the vehicle is not dark.
  - There is a vehicle ahead with lights on.
  - There are many streetlights or other lights on the road ahead.

? **Front camera detection**


- ? In the following situations, the high beams may not be automatically changed to the low beams:
- When a vehicle cuts in front of your vehicle
  - When another vehicle crosses in front of the vehicle
  - When vehicles ahead are repeatedly detected and then hidden due to repeated curves, road dividers or roadside trees
  - When a vehicle ahead approaches from a far lane
  - When a vehicle ahead is far away
  - When a vehicle ahead has no lights
  - When the lights of a vehicle ahead are dim
  - When a vehicle ahead is reflecting strong light, such as own headlights
  - Situations in which the sensors may not operate properly: →P.247
- ? The headlights may change to the low beams if a vehicle ahead that is using fog lights without its headlights turned on is detected.
- ? House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beams to change to the low beams, or the low beams to remain on.
- ? The following may change the timing at which the headlights change to the low beams:
- The brightness of lights of vehicles ahead
  - The movement and direction of vehicles ahead
  - The distance between the vehicle and a vehicle ahead
  - When a vehicle ahead only has lights illuminated on one side
  - When a vehicle ahead is a two-wheeled vehicle
  - The condition of the road (gradient, curve, condition of the road surface, etc.)
  - The number of passengers and amount of luggage

- ? The headlights may change between the high beams and low beams unexpectedly.
- ? Bicycles and other small vehicles may not be detected.
- ? In the following situations, the system may not be able to correctly detect the brightness of the surroundings. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually change between the high beams and low beams.
  - When there are lights similar to headlights or tail lights in the surrounding area
  - When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
  - When the headlights are repeatedly changing between the high beams and low beams.
  - When use of the high beams is inappropriate or when the high beams may be flashing or dazzling pedestrians or other drivers.
  - When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa
  - When it is necessary to disable the system: →P.243
  - Situations in which the sensors may not operate properly: →P.247

? **Temporarily reducing front camera sensitivity**

The sensitivity of the front camera can be temporarily reduced.

- 1 Turn the engine switch off with the following conditions met.

- ? The headlight switch is in the  or **AUTO** position.

- ? The headlight switch lever is in the low beam position.
  - ? The Automatic High Beam switch is on.
- 2 Turn the engine switch to ON.
  - 3 Within 60 seconds after performing step 2, push the headlight switch lever to the high beam position then pull it to the original position quickly 10 times, then leave the lever in its original position.
  - 4 If the sensitivity is changed, the Automatic High Beam indicator will blink 3 times.


**Turning the high beams on/off manually**

? **Changing to the high beams**

Push the lever forward.

The AHB indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to enable the Automatic High Beam system again.

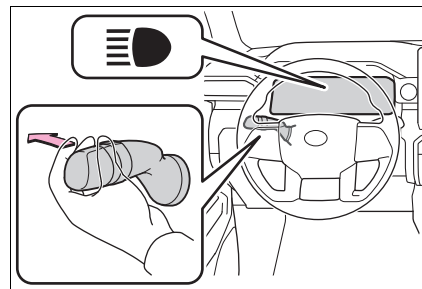


? **Changing to the low beams**

Press the Automatic High Beam switch.

The AHB indicator will turn off. Press the switch to enable the Automatic High Beam system again.



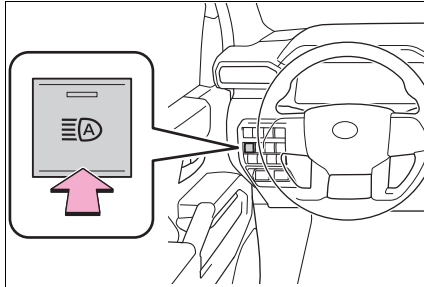


**Temporarily changing to the low beams**

It is recommended to switch to the low beams when use of the high beams is inappropriate or when the high beams may cause problems or distress to other drivers or pedestrians nearby.

Pull the lever rearward and then return it to its original position.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. After this, the Automatic High Beam system will operate.

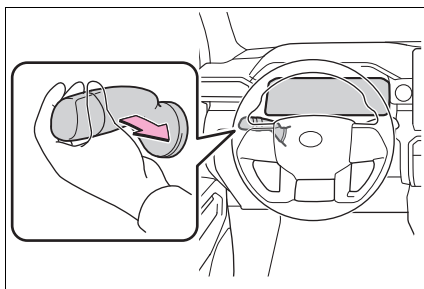

**Windshield wipers and washer**

**Operating the lever can switch between automatic operation and manual operation, or can use the washer.**

**NOTICE**


**? When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

**Operating the wiper lever**

Operate the lever operates the wipers or washer as follows:

When intermittent windshield wiper operation is selected, the wiper interval can be also adjusted.

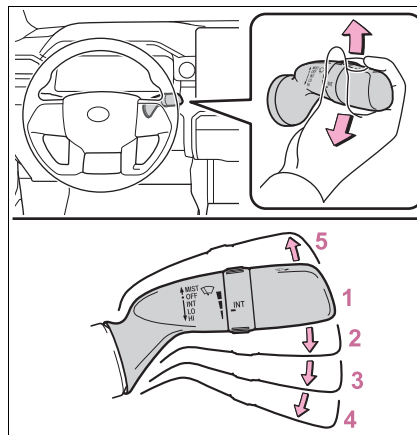


1 OFF \*1 or ○ \*2  
Off

2 INT \*1 or \*2


Intermittent operation


- 3 LO \*1 or ▼ \*2  
Low speed wiper operation
- 4 HI \*1 or ▼ \*2  
High speed wiper operation
- 5 MIST \*1 or ▲ \*2  
Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.

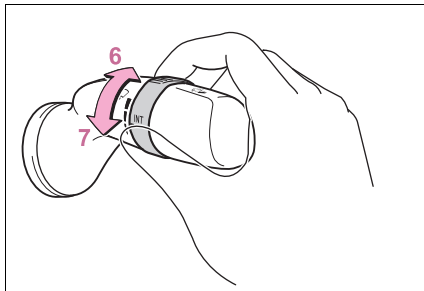

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

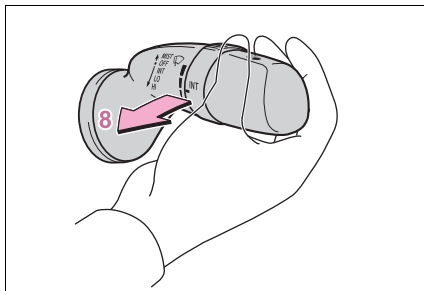

- 8  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

\*1: U.S.A.

\*2: Canada

? **The windshield wiper and washer can be operated when**

The engine switch is in ON.

? **If no windshield washer fluid sprays**

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

? **Using the voice control system**

The following operations can be performed using the voice control system:

- ? Operating the windshield wipers only once
- ? Operating the windshield cleaning washer (it can be performed only when the vehicle is stopped)

For details regarding the voice control system, refer to "MULTIMEDIA OWNER'S MANUAL".

 **WARNING**

? **Caution regarding the use of washer fluid**

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

 **NOTICE**

? **When there is no washer fluid spray from the nozzle**

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.



**NOTICE**

**? When a nozzle becomes blocked**

In this case, contact your Toyota dealer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

**? To prevent battery discharge**

Do not leave the wipers on longer than necessary when the engine is off.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

? Fuel types

→P.619

? Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

 **WARNING**

? **When refueling the vehicle**

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- ? After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.

- ? Always hold the grips on the fuel tank cap and turn it slowly to remove it.

A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.

- ? Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.

- ? Do not inhale vaporized fuel. Fuel contains substances that are harmful if inhaled.


- ? Do not smoke while refueling the vehicle. Doing so may cause the fuel to ignite and cause a fire.

- ? Do not return to the vehicle or touch any person or object that is statically charged. This may cause static electricity to build up, resulting in a possible ignition hazard.

? **When refueling**


Observe the following precautions to prevent fuel overflowing from the fuel tank:

- ? Securely insert the fuel nozzle into the fuel filler neck.
- ? Stop filling the tank after the fuel nozzle automatically clicks off.
- ? Do not top off the fuel tank.


 **NOTICE**  
**? Refueling**  
 Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

**Opening the fuel tank cap**

- 1 Open the fuel filler door.

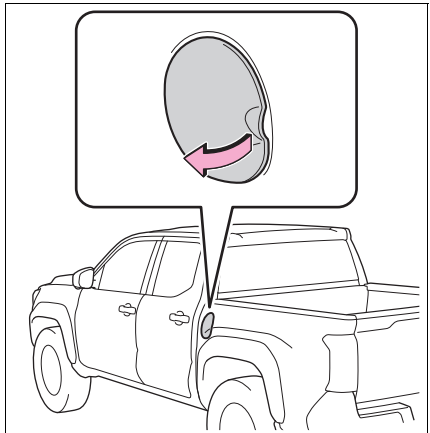


- 2 Turn the fuel tank cap slowly to open it and put it into the holder on the fuel filler door.

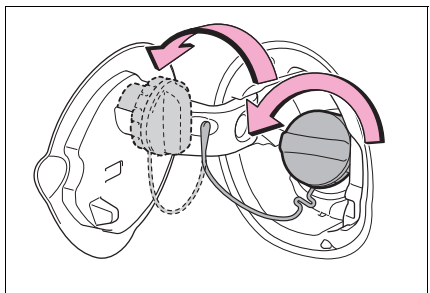

**Closing the fuel tank cap**

After refueling, turn the fuel tank

cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

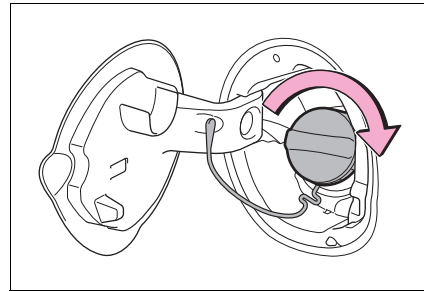

**? When "Check Fuel Cap" is displayed on the multi-information display**

The fuel tank cap may be unfastened or loose. Turn the engine switch to OFF, check the cap and tighten it securely. If the message remains, wait a few seconds and then turn the engine switch to OFF once again.

 **WARNING**

**? When replacing the fuel tank cap**

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

**Toyota Safety Sense 3.0 software update\***

\*: If equipped

**It is necessary to enter a connected services contract, provided by Toyota, to use these functions. For details, contact your Toyota dealer.**

**⚠ WARNING**

? **For safe use**

When the Toyota Safety Sense 3.0 software is updated, the operating methods of functions may change. Using this system without knowing the correct operating methods may lead to an accident resulting in death or serious injury.

? Make sure to read the Digital Owner's Manual which corresponds to the software version of the system, available at the Owner's Manual website, before using this system.

**Content of the Toyota Safety Sense 3.0 Owner's Manual**

This Owner's Manual contains information for Ver. 3. For the latest information about the controls, use, warnings/precautions,

? **Selecting your vehicle's Toyota Safety Sense 3.0 version**

- 1 Access the following URL using a computer or smartphone:

etc. of each function of Toyota Safety Sense 3.0, refer to the Digital Owner's Manual at the Owner's Manual website.

Before using this system, be sure to read the Owner's Manual which corresponds to the software version of the system.

? **Precautions for use**




- ? Be aware that some functions may temporarily be disabled if a legal or safety related issue occurs.
- ? If a connected services contract has not been entered or has expired, software updates will not be able to be performed wirelessly.

**Checking your vehicle's Toyota Safety Sense 3.0 version**

To access the appropriate Owner's Manual, it is necessary to check the software version of the system and then visit the Owner's Manual website.

? **Checking the version using Toyota App**

The software version of the system can be checked using Toyota App.

Country	Language	URL	QR code
U.S.A.	English	<a href="https://www.toyota.com/owners/resources/warranty-owners-manuals/manual?om=om04051u.tacoma.2026.2511.cv.vh">https://www.toyota.com/owners/resources/warranty-owners-manuals/manual?om=om04051u.tacoma.2026.2511.cv.vh</a>	
Canada	English	<a href="https://www.toyota.ca/toyota/owners/manual?om=om04051u.tacoma.2026.2511.cv.vh">https://www.toyota.ca/toyota/owners/manual?om=om04051u.tacoma.2026.2511.cv.vh</a>	
	French	<a href="https://www.toyota.ca/toyota/owners/manual?om=om04051d.tacoma.2026.2511.cv.vh">https://www.toyota.ca/toyota/owners/manual?om=om04051d.tacoma.2026.2511.cv.vh</a>	

- 2 Select the file which includes the previously checked system version.

### Updating the software

If a software update is available, a notification will be displayed by Toyota App. Follow the instructions displayed on the screen.

#### ? Software update precautions

- ? After a software update has been performed, it will not be possible to revert to a previous version.
- ? Depending on the communication environment and the content of an update, a software update may take several hours. Although an update will be suspended when the engine switch is turned off, it will resume when the engine switch is changed back to ON.
- ? If the software update fails, the system will start with the previous version.
- ? Toyota Safety Sense 3.0 can still be used while a software update is

being performed.

#### ? What can be checked using the Toyota App

The following items can be checked or performed.

- ? Software version, update details, precautions, use methods, etc.
- ? Software update

**Toyota Safety Sense 3.0**

**The Toyota Safety Sense 3.0 consists of the driving assist systems and contributes to a safe and comfortable driving experience:**

**⚠ WARNING**

**? Toyota Safety Sense 3.0**

The Toyota Safety Sense 3.0 operates under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants in a collision and assist the driver under normal driving conditions. As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely.

**? For safe use**

? Do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely. This system may not operate in all situations and provided assistance is limited. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.

? Do not attempt to test the operation of the system, as it may not operate properly, possibly leading to an accident.

? If attention is necessary while performing driving operations or a system malfunction occurs, a warning message or warning buzzer will be operated. If a warning message is displayed on the display, follow the instructions displayed.

? Depending on external noise, the volume of the audio system, etc. it may be difficult to hear the warning buzzer. Also, depending on the road conditions, it may be difficult to recognize the operation of the system.

**? When it is necessary to disable the system**

In the following situations, make sure to disable the system.

Failure to do so may lead to the system not operating properly, possibly leading to an accident resulting in death or serious injury.

? When the vehicle is tilted due to being overloaded or having a flat tire

? When driving at extremely high speeds

? When towing another vehicle with the TDA (Trailer Driving Assist) (→P.302) deactivated.

? When the vehicle is being transported by a truck, ship, train, etc.

? When the vehicle is raised on a lift and the tires are allowed to rotate freely

? When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer

? When the vehicle is driven in a sporty manner or off-road



**⚠ WARNING**

- ? When using an automatic car wash
- ? When a sensor is misaligned or deformed due to a strong impact being applied to the sensor or the area around the sensor
- ? When accessories which obstruct a sensor or light are temporarily installed to the vehicle
- ? When a compact spare tire or tire chains are installed to the vehicle or an emergency tire puncture repair kit has been used
- ? When the tires are excessively worn or the inflation pressure of the tires is low
- ? When non-genuine Toyota suspension and/or tires other than the manufacturer specified size are installed. (→P.251)
- ? When the vehicle cannot be driven stably, due to a collision, malfunction, etc.
- ? Vehicles with TDA (Trailer Driving Assist): When the vehicle is being driven on a slippery surface such as an icy road or a very wet road.

**Driving assist systems**

- ? **AHB (Automatic High Beam)**  
→P.233
- ? **PCS (Pre-Collision System)**  
→P.252
- ? **LTA (Lane Tracing Assist)**  
→P.263

? **LDA (Lane Departure Alert)**

→P.268

? **PDA (Proactive Driving Assist) (if equipped)**

→P.274

? **RSA (Road Sign Assist) (if equipped)**

→P.281

? **Dynamic radar cruise control**

→P.283

? **Cruise control**

→P.295

? **Emergency Driving Stop System (if equipped)**


→P.299

**Sensors used by Toyota Safety Sense 3.0**

Various sensors are used to obtain the necessary information for system operation.


? **Sensors which detect the surrounding conditions**

## ▶ Front

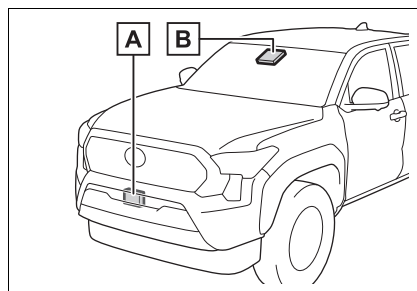

A Front radar sensor

- B** Front camera
- ▶ Rear (if equipped)

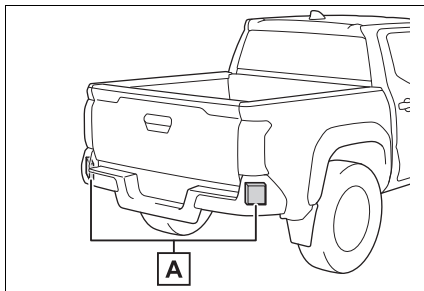

**A** Rear side radar sensors

**⚠ WARNING**


**? To prevent malfunction of the radar sensors**

Observe the following precautions. Failure to do so may lead to a radar sensor not operating properly, possibly leading to an accident resulting in death or serious injury.

**? Keep the radar sensors and radar sensor covers clean at all times.**

Clean the front of a radar sensor or the front or back of a radar sensor cover if it is dirty or covered with water droplets, snow, etc.

When cleaning the radar sensor and radar sensor cover, use a soft cloth to remove dirt so as to not damage them.

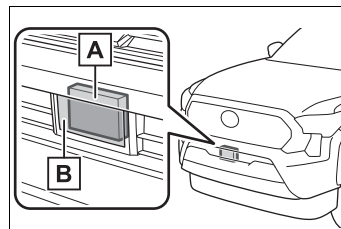

**A** Radar sensor

**B** Radar sensor cover

**? Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a radar sensor or radar sensor cover and their surrounding area.**

**? Do not subject a radar sensor or its surrounding area to impact.**

If a radar sensor, the front grille, or front bumper has been subjected to a impact, have the vehicle inspected by your Toyota dealer.

**? Do not disassemble the radar sensors.**

**? Do not modify or paint the radar sensors or radar sensor cover, or replace them with anything other than Toyota genuine parts.**

**⚠ WARNING**

? In the following situations, recalibration of the radar sensors will be necessary. For details, contact your Toyota dealer.

- When a radar sensor is removed and installed, or replaced
- When the front bumper or the front grille has been replaced


? **To prevent malfunction of the front camera**

Observe the following precautions.

Failure to do so may lead to the front camera not operating properly, possibly leading to an accident resulting in death or serious injury.

- ? Always keep the windshield clean.
- If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
- Even if a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
- If the inner side of the windshield where the front camera is installed is dirty, contact your Toyota dealer

? Do not attach stickers (including transparent stickers) or other items to the area of the windshield in front of the front camera (shaded area in the illustration).

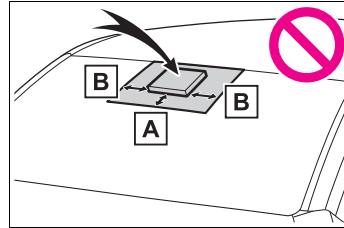

**A** Approximately 1.6 in. (4 cm)

**B** Approximately 1.6 in. (4 cm)

? If the part of the windshield in front of the front camera is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation, or ice.

? If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.

? Do not attach window tint to the windshield.

? Replace the windshield if it is damaged or cracked.

If the windshield has been replaced, recalibration of the front camera will be necessary. For details, contact your Toyota dealer.

? Do not allow liquids to contact the front camera.

? Do not allow bright lights to shine into the front camera.

**⚠ WARNING**

- ? Do not damage the lens of the front camera or allow it to become dirty.  
When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Do not touch the lens of the front camera. If the lens of the front camera is dirty or damaged, contact your Toyota dealer.
- ? Do not subject the front camera to a strong impact.
- ? Do not change the position or orientation of the front camera or remove it.
- ? Do not disassemble the front camera.
- ? Do not modify any parts around the front camera, such as the inside rear view mirror or ceiling.
- ? Do not attach accessories which may obstruct the front camera to the hood, front grille, or front bumper. For details, contact your Toyota dealer.
- ? If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- ? Do not modify or change the headlights and other lights.


? **Front camera installation area on the windshield**

If the system determines that the windshield may be fogged up, it will automatically operate the heater to defog the part of the windshield around the front camera. When cleaning, etc., be careful not to touch the area around the front camera until the windshield has cooled sufficiently, as touching it may cause burns.


? **Situations in which the sensors and the systems may not operate properly**

- ? When the height or inclination of the vehicle has been changed due to modifications (→P.251)
- ? When the windshield is dirty, fogged up, cracked or damaged
- ? When the ambient temperature is high or low
- ? When mud, water, snow, dead insects, foreign matter, etc., is attached to the front of the sensor
- ? When in inclement weather such as heavy rain, fog, snow, or a sandstorm
- ? When water, snow, dust, etc., is thrown up in front of the vehicle, or when driving through mist or smoke
- ? When the headlights are not illuminated while driving in the dark, such as at night or when in a tunnel
- ? When the lens of a headlight is dirty and illumination is weak
- ? When the headlights are misaligned
- ? When a headlight is malfunctioning
- ? When the headlights of another vehicle, sunlight, or reflected light shines directly into the front camera

- ? When the brightness of the surrounding area changes suddenly
- ? When driving near a TV tower, broadcasting station, electric power plant, radar equipped vehicles, etc., or other location where strong radio waves or electrical noise may be present
- ? When a wiper blade is blocking the front camera
- ? When in a location or near objects which strongly reflect radio waves, such as the following:
  - Tunnels
  - Truss bridges
  - Gravel roads
  - Rutted, snow-covered roads
  - Walls
  - Large trucks
  - Manhole covers
  - Guardrail
  - Metal plates
- ? When near a step or protrusion
- ? When a detectable vehicle is narrow, such as a small mobility vehicle
- ? When a detectable vehicle has a small front or rear end, such as an unloaded truck
- ? When a detectable vehicle has a low front or rear end, such as a low bed trailer

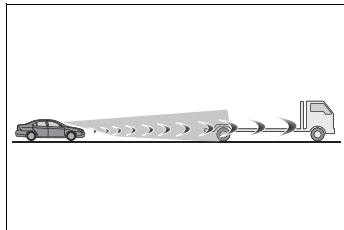

- ? When a detectable vehicle has extremely high ground clearance

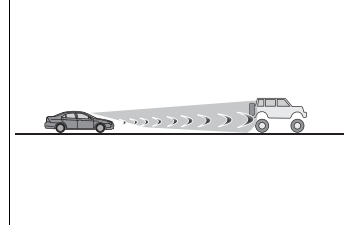

- ? When a detectable vehicle is carrying a load which protrudes from its cargo area
- ? When a detectable vehicle has little exposed metal, such as a vehicle which is partially covered with cloth, etc.
- ? When a detectable vehicle is irregularly shaped, such as a tractor, sidecar, etc.
- ? When the distance between the vehicle and a detectable vehicle has become extremely short
- ? When a detectable vehicle is at an angle
- ? When snow, mud, etc. is attached to a detectable vehicle
- ? When driving on the following kinds of roads:
  - Roads with sharp curves or winding roads
  - Roads with changes in grade, such as sudden inclines or declines
  - Roads which is sloped to the left or right
  - Roads with deep ruts
  - Roads which are rough and unmaintained
  - Roads which frequently undulate or are bumpy
- ? When the steering wheel is being operated frequently or suddenly
- ? When the vehicle is not in a constant position within a lane
- ? When parts related to this system, the brakes, etc. are cold or extremely hot, wet, etc.
- ? When the wheels are misaligned
- ? When driving on slick road sur-

faces, such as when it is covered with ice, snow, gravel, etc.

- ? When the course of the vehicle differs from the shape of a curve
- ? When the vehicle speed is excessively high when entering a curve
- ? When entering/exiting a parking lot, garage, car elevator, etc.
- ? When driving in a parking lot
- ? When driving through an area where there are obstructions which may contact your vehicle, such as tall grass, tree branches, a curtain, etc.

? When driving in strong wind

? **Situations in which the lane may not be detected**

- ? When the lane is extremely wide or narrow
- ? Immediately after changing lanes or passing through an intersection
- ? When driving in a temporary lane or lane regulated by construction
- ? When there are structures, patterns, shadows which are similar to lane lines in the surrounding
- ? When there are multiple white lines for a lane line
- ? When the lane lines are not clear or driving on a wet road surface
- ? When a lane line is on a curb
- ? When driving on a bright, reflective road surface, such as concrete

? **Situations in which some or all of the functions of the system cannot operate**

- ? When a malfunction is detected in this system or a related system, such as the brakes, steering, etc.
- ? When the VSC, TRAC, or other safety related system is operating
- ? When the VSC, TRAC, or other safety related system is off

? **Changes in brake operation sound and pedal response**

- ? When the brakes have been operated, brake operation sounds may be heard and the brake pedal response may change, but this does not indicate a malfunction.
- ? When the system is operating, the brake pedal may feel stiffer than expected or sink. In either situation the brake pedal can be depressed further. Further depress the brake pedal as necessary.

? **When using the SDM (Stabilizer with Disconnection Mechanism) (if equipped)**

When the SDM (Stabilizer with Disconnection Mechanism) (→P.428) is operating, each function is limited as follows:

? System functions

Function	Status
PCS (Pre-Collision System) (→P.252)	O
LTA (Lane Tracing Assist) (→P.263)	—
LDA (Lane Departure Alert) (→P.268)	*1
PDA (Proactive driving assist) *3 (→P.274)	*2
Dynamic radar cruise control (→P.283)	O
Emergency Driving Stop System *3 (→P.299)	—

Definition of symbols:  
 O= Available,  
 —= Not available

\*1: Alert is available only

\*2: Partially unavailable

\*3: If equipped

? **PDA (Proactive driving assist) functions when SDM (Stabilizer with Disconnection Mechanism) is operating (if equipped)**

When SDM (Stabilizer with Disconnection Mechanism) is operating, the following functions of PDA (Proactive driving assist) are restricted.

? OAA (Obstacle Anticipation Assist) functions

Brake assist is operating, but steering assist is not operating.

? SA (Steering Assist) function

Steering Assist is not operating.

? **When lift up**

When using a lift kit up to 4 in. (101 mm), including tire height.

Toyota recommends the use of a Toyota genuine lift kit as a non-genuine lift kits may degrade system performance.

Details are in the following table.

Suspension variation	Tire variation	Description
Toyota normal suspension	*1	The system will operate normally if the settings comply with Toyota specifications. To verify the settings, visit a Toyota authorized service/repair facility.
Toyota genuine 2.5 inch lift up kit (if equipped)		
Toyota genuine 2.5 inch lift up kit (if equipped)	*2	The system may not operate properly. Please see a Toyota authorized service/repair facility to verify and change the settings.
Toyota normal suspension	*3	This system is not designed to accommodate the configuration. Toyota highly recommends that modifications within this category not be done.
Toyota genuine 2.5 inch lift up kit (if equipped)	*4	
Non-genuine lift up kit (if equipped)	Any	Failure to observe this recommendation may cause the system to not operate properly which may lead to an accident. Modifications within this category require an authorized Toyota service/repair facility to disable the Toyota Safety Sense 3.0 functions. However, this may also lead to the possibility of an accident.

\*1: Manufacturer specified tire sizes

\*2: Tire sizes up to 3 inches plus the tire size specified by the manufacturer

\*3: Any size other than the manufacturer specified tire sizes

\*4: Tire sizes exceeding the range specified in \*2

? **Certification**

→P.704



### PCS (Pre-Collision System)

**The pre-collision system uses sensors to detect objects (→P.252) in the path of the vehicle. When the system determines that the possibility of a frontal collision with a detectable object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.**

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P.262)

### WARNING

#### ? For safe use

? Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. Never use the pre-collision system in place of normal braking operations. This system cannot help avoid or reduce the impact of a collision in every situation. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.

? Although the pre-collision system is designed to help avoid or help reduce the impact of a collision, its effectiveness may change according to various conditions. Therefore, it may not always be able to achieve the same level of performance. Read the following items carefully. Do not overly rely on this system and always drive carefully.

- For safe use: →P.243

#### ? When to disable the pre-collision system

When it is necessary to disable the system: →P.243

? When towing another vehicle  
→P.302

? When lift up  
→P.251

### Detectable objects

The system can detect the following as detectable objects. (Detectable objects differ depending on the function.)

- Vehicles
- Bicycles \*
- Pedestrians
- Motorcycles \*
- Walls (except for manual transmission)


\*: Detected as a detectable object only when being ridden.

**System functions**

? **Pre-collision warning**

When the system determines that the possibility of a collision is high, a buzzer will sound and an icon and warning message will be displayed on the multi-information display to urge the driver to take evasive action.


If the detectable object is a vehicle, there may be cases where moderate braking will be performed with the warning.

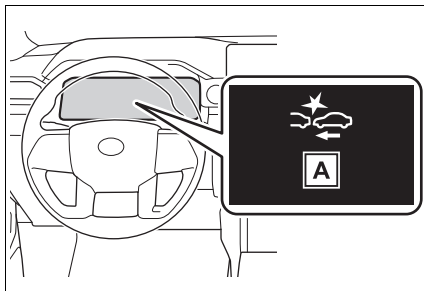

**A** "Pre-Collision System"

If the system determines that the accelerator pedal is strongly depressed, the following icon and message will be displayed

on the multi-information display.

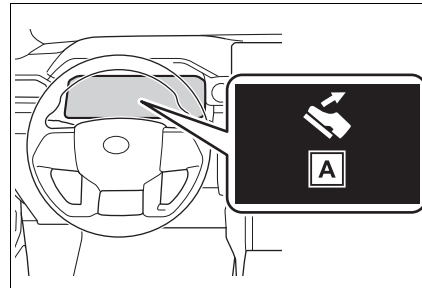

**A** "Accelerator Pedal is Pressed"

? **Pre-collision brake assist**

If the system determines that the possibility of a collision is high and the brake operation by the driver is insufficient, the braking power will be increased.

? **Pre-collision brake control**

If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

? **Emergency steering assist**


If the system determines that the following conditions are met, assistance will be provided to help enhance vehicle stability and prevent lane departure. During assistance, in addition to the pre-collision warning, the following icon will be displayed on the multi-information display.

- The possibility of a collision is high
- There is sufficient space

within the lane to perform evasive steering maneuvers

- The driver is operating the steering wheel

During assistance, the pre-collision warning will operate and a message will be displayed to warn the driver.

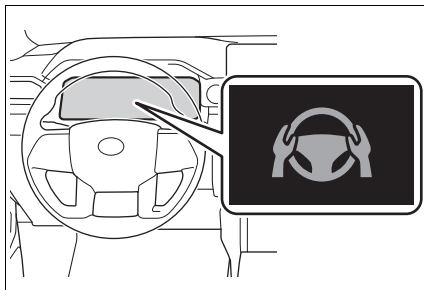


? **Intersection collision avoidance support (left/right turn)**


In situations such as the following, if the system determines that the possibility of a collision is high, the pre-collision warning and pre-collision braking will operate.

Depending on the intersection, assistance may not operate correctly.

- When turning left/right at an intersection and crossing the path of an oncoming vehicle/motorcycle

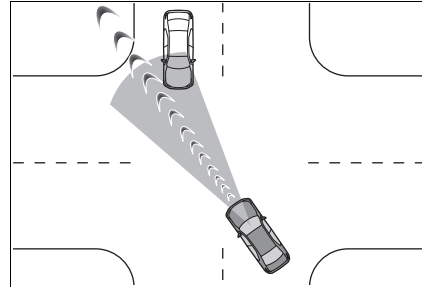


- When turning left/right and a pedestrian or bicycle is detected

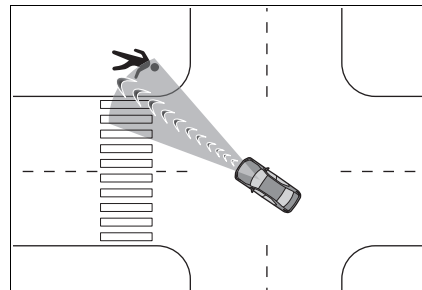

? **Intersection collision avoidance support (crossing vehicles)**


At an intersection, etc., if the system determines that the possibility of a collision with an approaching vehicle or motorcycle is high, the pre-collision warning and pre-collision braking will operate.

Depending on the intersection, assistance may not operate correctly.

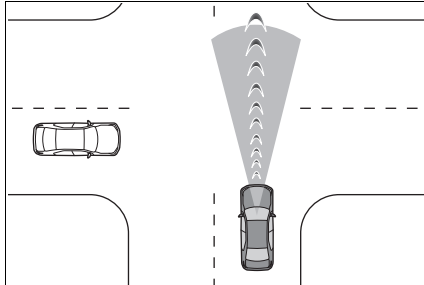

? **Acceleration Suppression at Low Speed (except for manual transmission)**

When driving at a low speed, if the accelerator pedal is strongly depressed and the system determines that there is a possibility of a collision, engine output will be restrained or the brakes will be applied weakly to restrict acceleration. During operation, a buzzer will sound and a warning indicator and message will be displayed on the multi-information display.

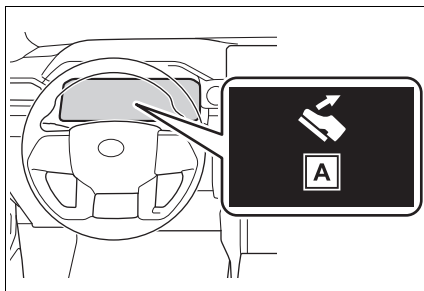

**A** "Accelerator Pedal is Pressed"

? **Suspension control (vehicles with Adaptive Variable Suspension system)**

When the system determines that the possibility of a collision

is high, the Adaptive Variable Suspension system (→P.423) controls the damping force of the shock absorbers to help maintain an appropriate vehicle posture.

**! WARNING**

? **Pre-collision braking**

- ? When the pre-collision braking function is operating, a large amount of braking force will be applied.
- ? The pre-collision braking function is not designed to hold the vehicle stopped. If the vehicle is stopped by pre-collision brake control, the driver should operate the brakes immediately as necessary.
- ? The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- ? If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision brake control.

**⚠ WARNING****? Acceleration Suppression at Low Speed (except for manual transmission)**

If the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the Acceleration Suppression at Low Speed function from operating or possibly causing its operation to be canceled.

**? Emergency steering assist**

? The emergency steering assist will be canceled when the system determines that lane departure prevention control has completed.

? Depending on operations performed by the driver, emergency steering assist may not operate or operation may be canceled.

- If the accelerator pedal is depressed strongly, the steering wheel is turned heavily, the brake pedal is depressed, or the turn signal lever is operated, the system may determine that the driver is taking evasive action and the emergency steering assist may not operate.
- While the emergency steering assist is operating, if the accelerator pedal is depressed strongly, the steering wheel is turned heavily, or the brake pedal is depressed, the system may determine that the driver is taking evasive action and emergency steering assist operation may be canceled.

- While the emergency steering assist is operating, if the steering wheel is held or turned in the opposite direction of system operation, emergency steering assist operation will be canceled.

? **Operating conditions of each function of the pre-collision system**

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.

However, the system will not operate in the following situations:

- ? When the vehicle has not been driven a certain amount after a terminal of the battery has been disconnected and reconnected
- ? When the shift lever is in R

The following are the operational speeds and cancelation conditions of each function:

? Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 3 to 110 mph (5 to 180 km/h)	Approximately 3 to 110 mph (5 to 180 km/h)
Oncoming vehicles	Approximately 20 to 110 mph (30 to 180 km/h)	Approximately 50 to 130 mph (80 to 220 km/h)
Bicycles	Approximately 3 to 50 mph (5 to 80 km/h)	Approximately 3 to 50 mph (5 to 80 km/h)
Pedestrians	Approximately 3 to 50 mph (5 to 80 km/h)	Approximately 3 to 50 mph (5 to 80 km/h)
Preceding motorcycles, stopped motorcycles	Approximately 3 to 110 mph (5 to 180 km/h)	Approximately 3 to 50 mph (5 to 80 km/h)
Oncoming motorcycles	Approximately 20 to 110 mph (30 to 180 km/h)	Approximately 20 to 110 mph (30 to 180 km/h)

While the pre-collision warning is operating, if the steering wheel is operated heavily or suddenly, the pre-collision warning may be canceled.

? Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 20 to 110 mph (30 to 180 km/h)	Approximately 7 to 110 mph (10 to 180 km/h)
Bicycles	Approximately 20 to 50 mph (30 to 80 km/h)	Approximately 20 to 50 mph (30 to 80 km/h)
Pedestrians	Approximately 20 to 50 mph (30 to 80 km/h)	Approximately 20 to 50 mph (30 to 80 km/h)
Preceding motorcycles, stopped motorcycles	Approximately 20 to 110 mph (30 to 180 km/h)	Approximately 7 to 50 mph (10 to 80 km/h)

? Pre-collision braking

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 3 to 110 mph (5 to 180 km/h)	Approximately 3 to 110 mph (5 to 180 km/h)
Oncoming vehicles	Approximately 20 to 110 mph (30 to 180 km/h)	Approximately 50 to 130 mph (80 to 220 km/h)
Bicycles	Approximately 3 to 50 mph (5 to 80 km/h)	Approximately 3 to 50 mph (5 to 80 km/h)
Pedestrians	Approximately 3 to 50 mph (5 to 80 km/h)	Approximately 3 to 50 mph (5 to 80 km/h)
Preceding motorcycles, stopped motorcycles	Approximately 3 to 110 mph (5 to 180 km/h)	Approximately 3 to 50 mph (5 to 80 km/h)
Oncoming motorcycles	Approximately 20 to 110 mph (30 to 180 km/h)	Approximately 20 to 110 mph (30 to 180 km/h)

If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- The accelerator pedal is strongly depressed
- The steering wheel is operated heavily or suddenly

? Emergency steering assist

The emergency steering assist will not operate when the turn signal lights are flashing.

The emergency steering assist will not operate when the VSC OFF indicator is illuminated.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles, bicycles, pedestrians, motorcycles	Approximately 25 to 50 mph (40 to 80 km/h)	Approximately 25 to 50 mph (40 to 80 km/h)

While the emergency steering assist is operating, if any of the following are performed, emergency steering assist operation may be canceled:

- The accelerator pedal is strongly depressed
- The steering wheel is operated heavily or suddenly
- The brake pedal is depressed

? Intersection collision avoidance support (left/right turn)

The intersection collision avoidance support (for left/right turning vehicles) will not operate when the turn signal lights are not flashing.

Detectable objects	Vehicle speed	Oncoming vehicle speed	Relative speed between your vehicle and object
Oncoming vehicles	Approximately 3 to 25 mph (5 to 40 km/h)	Approximately 3 to 45 mph (5 to 75 km/h)	Approximately 7 to 70 mph (10 to 115 km/h)
Pedestrians	Approximately 3 to 20 mph (5 to 30 km/h)	-	Approximately 3 to 25 mph (5 to 40 km/h)
Bicycles	Approximately 3 to 20 mph (5 to 30 km/h)	-	Approximately 3 to 30 mph (5 to 50 km/h)
Oncoming motorcycles	Approximately 3 to 25 mph (5 to 40 km/h)	Approximately 3 to 45 mph (5 to 75 km/h)	Approximately 7 to 70 mph (10 to 115 km/h)

? Intersection collision avoidance support (crossing vehicles)

Detectable objects	Vehicle speed	Crossing vehicle speed	Relative speed between your vehicle and object
Vehicles, Motorcycles (side)	Approximately 3 to 38 mph (5 to 60 km/h)	<ul style="list-style-type: none"> <li>•Your vehicle speed or less</li> <li>•Approximately 25 mph or less (40 km/h or less)</li> </ul>	Approximately 3 to 38 mph (5 to 60 km/h)

? Acceleration Suppression at Low Speed (except for manual transmission)

The Acceleration Suppression at Low Speed function will not operate when the turn signal lights are flashing.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles, Pedestrians, Bicycles, Wall	Approximately 0 to 9 mph (0 to 15 km/h)	Approximately 0 to 9 mph (0 to 15 km/h)

While the Acceleration Suppression at Low Speed function is operating, if



any of the following are performed, the low speed sudden acceleration suppression function operation will be canceled:


- The accelerator pedal is released
- The steering wheel is operated heavily or suddenly

? **Detection of detectable objects**

Objects are detected based on their size, shape, and movement.

Depending on the ambient brightness, movement, posture and direction of a detectable object, it may not be detected and the system may not operate properly.


The system detects shapes, such as the following, as detectable objects.

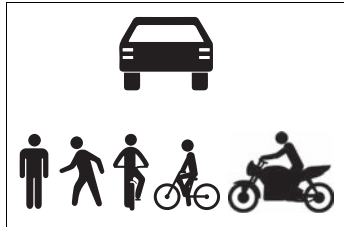


? **Situations in which the system may operate even though the possibility of a collision is not high**

? In certain situations, such as the following, the system may determine that the possibility of a collision is high and operate:


- When passing a detectable object
- When changing lanes while overtaking a detectable object
- When suddenly approaching a detectable object
- When approaching a detectable object or other object on the roadside, such as guardrails, utility poles, trees, walls, etc.
- When there is a detectable object or other object by the roadside of a curve

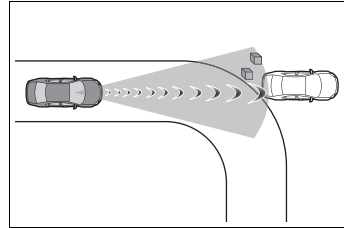


- When there are patterns or a painting ahead of the vehicle that may be mistaken for a detectable object
- When passing a detectable object that is changing lanes or turning left/right

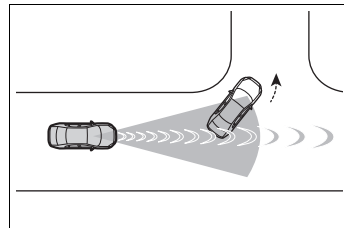


- When passing a detectable object which is stopped to make a left/right turn

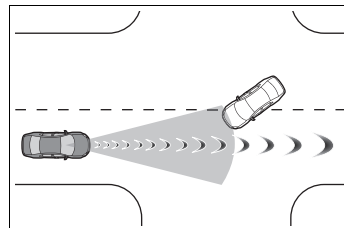


- When a detectable object stops immediately before entering the path of the vehicle
- When passing through a location with a structure above the road (traffic sign, billboard, etc.)

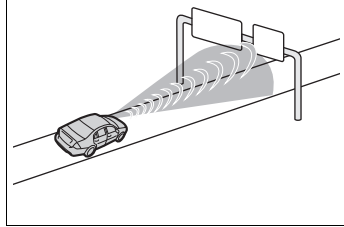

- When approaching an electric toll gate barrier, parking lot barrier, or other barrier that opens and closes
- When turning left/right and an oncoming vehicle, oncoming motorcycle, pedestrian or bicycle crosses in front of the vehicle
- When attempting to turn left/right in front of an oncoming vehicle, oncoming motorcycle, pedestrian or bicycle
- When turning left/right and an oncoming vehicle, oncoming motorcycle, pedestrian or bicycle stops or changes course immediately before entering the path of the vehicle
- When turning left/right and an oncoming vehicle/motorcycle turns left/right in front of the vehicle

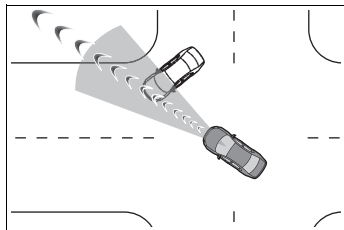

- When the steering wheel is operated toward the path of an oncoming vehicle
- When there is an object moving above or under the road

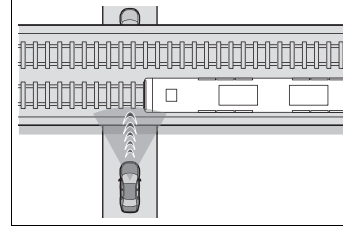


#### ? Situations in which the system may not operate properly


- ? In certain situations, such as the following, a detectable object may not be detected by the front sensors, and the system may not operate properly:
  - When a detectable object is approaching your vehicle
  - When your vehicle or a detectable object is wandering
  - When a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
  - When suddenly approaching a detectable object
  - When the detectable object is near a wall, fence, guardrail, man-hole cover, steel plate on the road surface, or another vehicle
  - When there is a structure above a detectable object
  - When part of a detectable object is hidden by another object (large luggage, umbrella, guardrail, etc.)
  - When multiple detectable objects are overlapping
  - When a bright light, such as the sun, is reflecting off of a detectable object
  - When a detectable object is white and looks extremely bright
  - When the color or brightness of a detectable object causes it to blend in with its surroundings
  - When a detectable object cuts in front of or suddenly emerges in front of your vehicle
  - When approaching a vehicle which is diagonal
  - If a bicycle is a child sized bicycle, is carrying a large load, is carrying an extra passenger, is carrying a

forward leaning rider, or has an unusual shape (bicycles equipped with a child seat, tandem bicycles, etc.)

- If a pedestrian or bicycle is shorter than approximately 3.2 ft. (1 m) or taller than approximately 6.5 ft. (2 m).
- When the silhouette of a pedestrian or bicycle is unclear (such as when they are wearing a raincoat, long skirt, etc.)
- When a pedestrian is bending forward or squatting
- When a pedestrian or bicycle is moving at high speed
- When a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When a detectable object blends in with the surrounding area, such as when it is dim (at dawn or dusk) or dark (at night or in a tunnel)
- When the vehicle has not been driven for a certain amount of time after the engine was started
- While turning left/right or a few seconds after turning left/right
- While driving around a curve and a few seconds after driving around a curve
- When turning left/right and an oncoming vehicle/motorcycle is driving in a lane 3 or more lanes from the vehicle
- When turning left/right and the direction of the vehicle differs greatly from the direction traffic flows in the oncoming lane

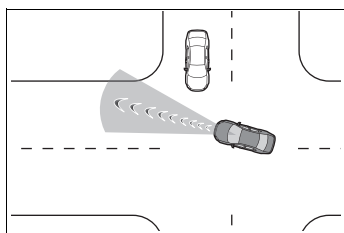

- When turning left/right, a pedestrian or bicycle behind the vehicle comes in front of it as if it overtakes the vehicle

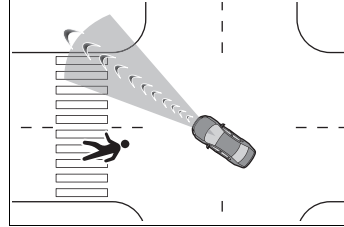



- When at an intersection, the approaching crossing vehicle is long in overall length, such as a large truck, towing trailer, etc.
- ? In addition to the preceding, in certain situations, such as the following, the emergency steering assist may not operate properly:
  - When a detectable object is too close to the vehicle
  - When there is insufficient space to perform evasive steering maneuvers or an obstruction exists in the evasion direction
  - When there is an oncoming vehicle
- ? Vehicles with an automatic transmission: In addition to the preceding, in certain situations, such as the following, walls may not be detected as a target object and the Acceleration Suppression at Low Speed function may not operate properly:
  - When scenery behind the wall is visible, such as a glass door, grid fence, etc.
  - When the wall is slanted or low
  - When the wall is narrow, such as a pole, etc.
  - When the wall is made of plants, such as a hedge, etc.
  - When the road, etc. is reflected on the wall
  - When the vehicle is approaching the wall at an angle

### Changing the pre-collision setting

- The pre-collision system can be enabled/disabled through

a customize setting. (→P.640)

The system is enabled each time the engine switch is turned to ON.

- When the system is disabled, the PCS warning light will illuminate and a message will be displayed on the multi-information display.
- The pre-collision setting can be changed on the customize settings. (→P.640)
- When the pre-collision warning timing is changed, the emergency steering assist timing will also be changed. When “ (Later)” is selected, the emergency steering assist will not operate in most cases.
- When the dynamic radar cruise control is operating, the pre-collision warning will operate at the “ (Earlier)” timing, regardless of the user setting.

## LTA (Lane Tracing Assist)

### LTA functions

- When driving on a road with clear lane lines with the dynamic radar cruise control operating, lane lines and preceding and surrounding vehicles are detected using the front camera and radar sensor, and the steering wheel is operated to maintain the vehicle's lane position.



Use the this function only on highways and expressways.

If the dynamic radar cruise control is not operating, the function will not operate.

In situations where the lane lines are difficult to see or are not visible, such as when in a traffic jam, support will be provided using the path of preceding and surrounding vehicles.

If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, the driver will be alerted and this function will be temporarily canceled.

If the steering wheel is firmly gripped, the function will begin operating again.

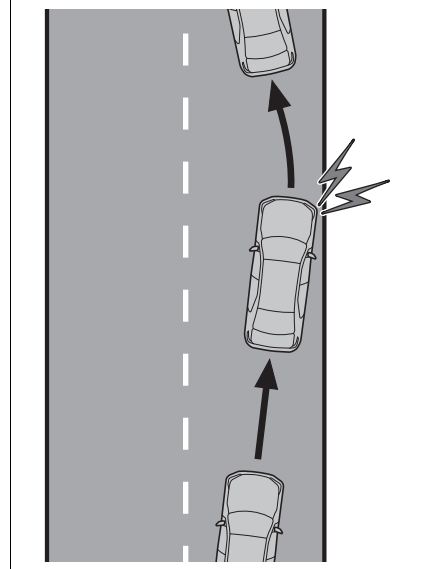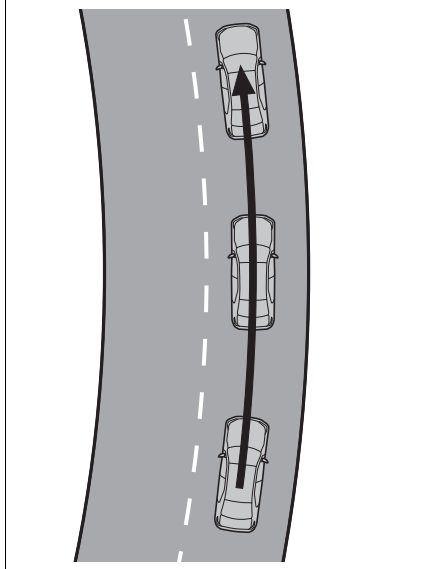

- When the function is operating, if the vehicle is likely to depart from its lane, the driver will be alerted via a display and buzzer.

When the buzzer sounds, check the area around the vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.

**⚠ WARNING**

- ? **Before using the LTA system**
- ? Do not overly rely on the LTA system. The LTA system is not a system which provides automated assistance in driving and it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.
- ? Failure to perform appropriate driving operations and pay careful attention may lead to an accident.
- ? When not using the LTA system, turn it off using the LTA switch.

? **Operating conditions of function**


This function is operable when all of

the following conditions are met:

- ? The LTA system detects lane lines or the path of preceding or surrounding vehicles.
- ? The dynamic radar cruise control is operating.
- ? The lane width is approximately 10 to 13 ft. (3 to 4 m).
- ? The turn signal lever is not being operated.
- ? The vehicle is not being driven around a sharp curve.
- ? The vehicle is not accelerating or decelerating more than a certain amount.
- ? The steering wheel is not being turned with a large force.
- ? The hands off steering wheel warning (→P.265) is not operating.
- ? The vehicle is being driven in the center of a lane.
- ? Vehicles with TDA (Trailer Driving Assist): TDA (Trailer Driving Assist) is not operating (→P.302)
- ? **Temporary cancelation of functions**
- ? When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. (→P.264)
- ? If the operating conditions of a function are no longer met while the function is operating, a buzzer may sound to indicate that the function has been temporarily canceled.
- ? The steering assist operation of the function can be overridden by the steering wheel operation of the driver.
- ? **Lane departure warning function when the LTA is operating**
- ? Even if the LDA warning method is

changed to vibration of the steering wheel, if the vehicle deviates from the lane while the LTA is operating, the warning buzzer will sound to alert the driver.

- ? If steering wheel operation equivalent to that necessary for a lane change is detected, the system will determine the vehicle is not deviating from the lane and the warning will not operate.
- ? **Hands off steering wheel warning operation**
- ? When the system determines the driver is not holding the steering wheel, a message urging the driver to grip the steering wheel and the icon shown in the illustration will be displayed on the multi-information display to warn the driver. If the system detects that the steering wheel is held, the warning will be canceled. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.

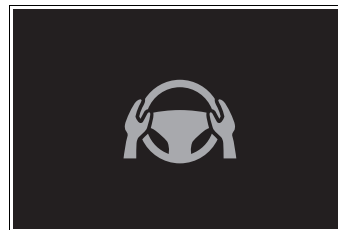


- ? If no operations are detected for a certain amount of time, the warning will operate, and the function will be temporarily canceled. This warning may also operate if the driver only operates steering wheel a small amount continuously.
- ? **Situations in which the hands off steering wheel warning may not operate properly**
- ? Depending on the condition of the vehicle, handle control condition and road surface, the warning function may not operate.

### Enabling/disabling the system

The LTA will change between ON/OFF each time the LTA switch is pressed.

When the LTA is ON, the LTA indicator will illuminate.

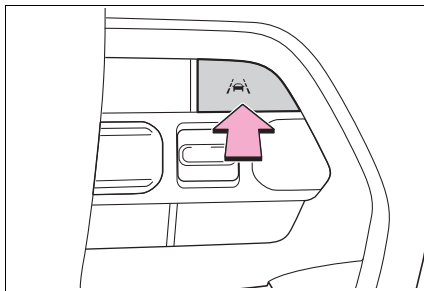


#### **! WARNING**

##### ? Situations in which the functions may not operate properly

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.

? When a preceding or surrounding vehicle changes lanes (Your vehicle may follow the preceding or surrounding vehicle and also change lanes)

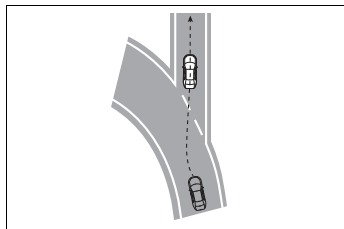

? When a preceding or surrounding vehicle is swaying (Your vehicle may sway accordingly and depart from the lane)

? When a preceding or surrounding vehicle departs from a lane (Your vehicle may follow the preceding or surrounding vehicle and also depart from the lane)

? When a preceding or surrounding vehicle is being driven extremely close to the left/right lane line (Your vehicle may follow the preceding or surrounding vehicle accordingly and depart from the lane)

? When there are moving objects or structures in the surrounding area (Depending on the position of the moving object or structure relative to your vehicle, your vehicle may sway)

? When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles










? Situations in which the sensors may not operate properly: →P.247

? Situations in which the lane may not be detected: →P.249

? When it is necessary to disable the system: →P.243

**Operation display of steering wheel operation support**

The operating state of the LTA system is indicated.

Indicator	Lane display	Steering icon	Situation
 White	 Gray/White	 Gray	LTA is on standby
 Green	 Green	 Green	LTA is operating
 Yellow Flashing	 Yellow Flashing	 Green	The vehicle is departing the lane toward the side which the lane display is flashing



## LDA (Lane Departure Alert)

### Basic functions

The LDA system warns the driver if the vehicle may deviate from the current lane or course\*, and also can slightly operate the steering wheel to help avoid deviation from the lane or course\*.

The front camera is used to detect lane lines or a course\*.

\*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

#### ? Lane departure alert function


When the system determines that the vehicle might depart from its lane or course\*, a warning is displayed on a display, and either a warning buzzer will sound or the steering wheel will vibrate to alert the driver.

Check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane or course\*.

Vehicles with BSM: If the system determines that the vehicle may collide with a vehicle in an adjacent lane, the lane departure alert will operate even if the turn signals are operating.

\*: Boundary between the asphalt and grass, soil, etc., or structures,

such as a curb, guardrail, etc.

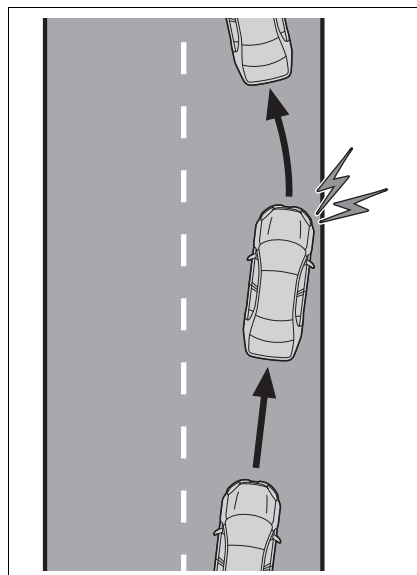


#### ? Lane departure prevention function

If the system determines that the vehicle is likely to depart from its lane or course\*, it provides assistance through steering wheel operations to help avoid deviation from the lane or course.

If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, a warning message may be displayed and a warning buzzer may sound to alert the driver.


Vehicles with BSM: If the system determines that the vehicle may collide with a vehicle in an adjacent lane, the lane departure prevention function will operate even if the turn signals are operating.

\*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

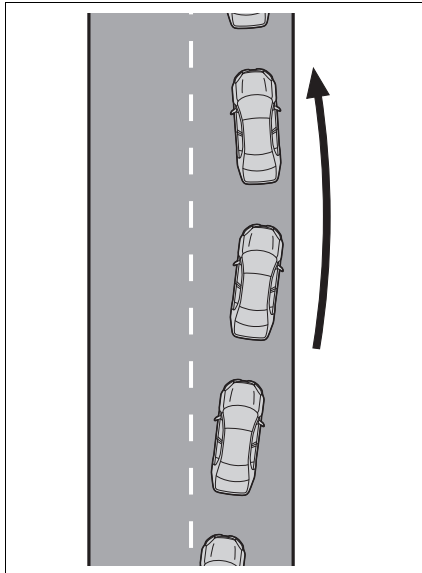

? **Break suggestion function**

If the vehicle is swaying, a message will be displayed and a buzzer will sound to urge the driver to take a break.

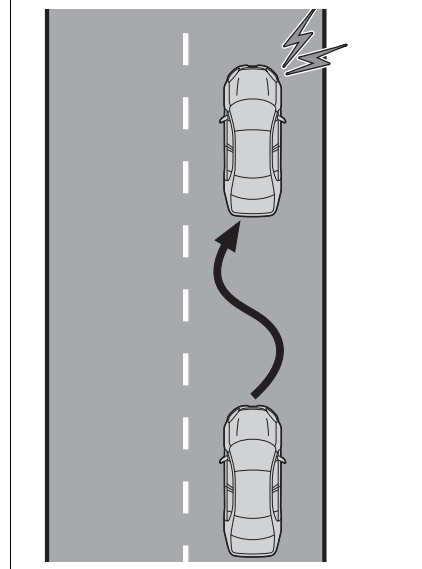

**! WARNING**

? **Before using the LDA system**

- ? Do not overly rely on the LDA system. The LDA system is not a system which provides automated assistance in driving. However, as it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.
- ? Failure to perform appropriate driving operations and pay careful attention may lead to an accident.

? **Operating conditions of each function**

- ? Lane departure alert/prevention function

This function is operable when all of the following conditions are met:

- The vehicle speed is approximately 30 mph (50 km/h) or more. Operation may be possible when the vehicle speed is approximately 25 mph (40 km/h) or more if vehicles, motorcycles, bicycles, or pedestrians are detected near the lane.
- The system recognizes a lane or course\*. (When recognized on only one side, the system will operate only for the recognized side.)
- The lane width is approximately 9.8 ft. (3 m) or more.
- The turn signal lever is not being operated. (Vehicles with BSM: Except when a vehicle is detected in the direction that the turn signal lever is operated.)
- The vehicle is not being driven around a sharp curve.
- The vehicle is not accelerating or decelerating more than a certain amount.
- The steering wheel is not being turned sufficiently to perform a lane change.
- The VSC or TRAC system is not turned off

\*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

#### ? **Temporary cancellation of functions**

When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. (→P.269)

#### ? **Operation of the lane departure alert function/lane departure prevention function**

? Depending on the vehicle speed, road conditions, lane departure

angle, etc., operation of the lane departure prevention function may not be felt or the function may not operate.

- ? Depending on the conditions, the warning buzzer may operate even if vibration is selected through a customize setting.
- ? If a course\* is not clear or straight, the lane departure alert function or lane departure prevention function may not operate.
- ? The lane departure alert function or lane departure prevention function may not operate if the system judges that the vehicle is intentionally being steered to avoid a pedestrian or parked vehicle.
- ? Vehicles with BSM: It may not be possible for the system to judge if there is danger of a collision with a vehicle in an adjacent lane.
- ? The steering assist operation of the lane departure prevention function can be overridden by the steering wheel operation of the driver.
- \*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

#### ? **When towing another vehicle**


→P.302

#### ? **When lift up**

→P.251

#### ? **Hands off steering wheel warning operation**

In the following situations, a message urging the driver to operate the steering wheel and an icon will be displayed and a buzzer will sound to warn the driver. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.

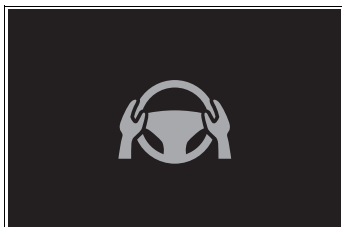

? When the system determines that the driver is not securely holding the steering wheel, or the steering wheel is not being operated when the steering assist operation of the lane departure prevention function is operating

Except for Puerto Rico, A.Samoa and New Caledonia: The length of time that the warning buzzer operates will become longer as the frequency of the steering assist operating increases. If the system judges that the steering wheel has been operated, the warning buzzer will stop.


For Puerto Rico, A.Samoa and New Caledonia: The length of time that the warning buzzer operates will become longer as the frequency of the steering assist operating increases. Even if the system judges that the steering wheel has been operated, the warning buzzer will sound for a certain amount of time.

? **Break suggestion function**

This function is operable when all of the following conditions are met:

- ? The vehicle speed is approximately 32 mph (50 km/h) or more.
- ? The lane width is approximately 9.8 ft. (3 m) or more.

Depending on the condition of the vehicle and road surface, the break suggestion function may not operate.

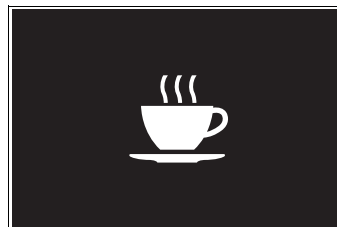

**Changing LDA settings**

- The LDA system can be enabled/disabled through a customize setting. (→P.640)
- The settings of the LDA can be changed on the customize settings. (→P.640)

**WARNING**

? **Situations in which the system may not operate properly**

In the following situations, the system may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.

- ? When the boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc. is not clear or straight
- ? When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles
- ? Situations in which the lane may not be detected: →P.249
- ? Situations in which the sensors may not operate properly: →P.247

**⚠ WARNING**













? Situations in which some or all of the functions of the system cannot operate: →P.249

? When it is necessary to disable the system: →P.243












**Displays and system operation**

The operating state of the lane departure alert function and steering assist operation of the lane departure prevention function are indicated.

► Except for Puerto Rico, A.Samoa and New Caledonia

Indicator	Lane display	Steering icon	Situation
Not illuminated	Not illuminated	Not illuminated	System disabled
 White	 Gray	Not illuminated	Lane lines are not detected by the system
 White	 White	Not illuminated	Lane lines are detected by the system
 Yellow Flashing	 Yellow Flashing	Not illuminated	Lane departure alert function is operating for the side which the lane display is flashing
 Green	 Green	 Green	Lane departure prevention function is operating for the side which the lane display is illuminated
 Yellow Flashing	 Yellow Flashing	 Green	Lane departure alert function/lane departure prevention function is operating for the side which the lane display is flashing

► For Puerto Rico, A.Samoa and New Caledonia

Indicator	Lane display	Steering icon	Situation
 Yellow illuminated	Not illuminated	Not illuminated	System disabled
Not illuminated	 Gray	Not illuminated	Lane lines are not detected by the system
Not illuminated	 White	Not illuminated	Lane lines are detected by the system
 Yellow Flashing	 Yellow Flashing	Not illuminated	Lane departure alert function is operating for the side which the lane display is flashing
 Green	 Green	 Green	Lane departure prevention function is operating for the side which the lane display is illuminated
 Yellow Flashing	 Yellow Flashing	 Green	Lane departure alert function/lane departure prevention function is operating for the side which the lane display is flashing

**PDA (Proactive driving assist)\***

\*: If equipped

**When a detectable object (→P.275) is detected, the proactive driving assist operates the brakes and steering wheel to help prevent the vehicle from approaching too close to the object.**

**⚠ WARNING****? For safe use**

Driving safely is solely the responsibility of the driver.

? The proactive driving assist is designed to provide some assistance for regular braking and steering operations, as well as helping to prevent the vehicle from approaching too close to a detectable object. However, the scope of this assistance is limited.

The driver should perform brake and steering operations as necessary. Read the following items carefully. Do not overly rely on the proactive driving assist and always drive carefully. (→P.277)

? The proactive driving assist is not a system which reduces the amount of attention necessary for safe driving. Even if the system is operating correctly, the surrounding conditions as recognized by the driver and detected by the system may differ. It is necessary for the driver to pay attention, assess risks, and ensure safety. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.

? Proactive driving assist is not a system which allows for inattentive driving and is not a system which assists in poor visibility conditions. The driver is solely responsible for paying attention to their surroundings and driving safely.

**? When turning proactive driving assist off**

? Situations in which the sensors may not operate properly:  
→P.247

? When it is necessary to disable the system: →P.243

? **When towing another vehicle**  
→P.302

? **When lift up**  
→P.251

**System operating conditions and detectable objects**

According to the driving conditions, the operation and detectable objects of the proactive driving assist will change as follows.

Function	Conditions	Operation	Detectable objects
Obstacle Anticipation Assist (OAA)	A detectable object is detected crossing the road	Assistance with some brake operations is provided in order to reduce the possibility of a collision.	<ul style="list-style-type: none"> <li>• Pedestrians</li> <li>• Bicyclists</li> </ul>
	A detectable object is detected on the side of the road	Assistance with some brake and steering wheel operations are provided according to the surrounding conditions to help prevent the vehicle from approaching too close to a detected object.	<ul style="list-style-type: none"> <li>• Pedestrians</li> <li>• Bicyclists</li> <li>• Parked vehicles</li> </ul>
		Assistance with steering wheel operations is provided within a range that the vehicle will not deviate from its current lane.	



Function	Conditions	Operation	Detectable objects
Deceleration Assist (DA)	A preceding vehicle or an adjacent vehicle cutting in front of the vehicle is detected	The vehicle is gently decelerated so that the vehicle-to-vehicle distance will not be excessively short.	<ul style="list-style-type: none"> <li>• Preceding vehicles</li> <li>• Motorcycles</li> </ul>
	A curve is detected ahead of the vehicle	The vehicle is gently decelerated if the vehicle speed is determined to be too high for the curve ahead.	None
Steering Assist (SA)	Lane is detected	The system anticipates the driver's operation and supports the operation of the steering wheel.	None

- ? **Vehicle speeds at which the system can operate**
- ? Detectable object crossing the road assistance  
Approximately 20 to 35 mph (30 to 60 km/h)
- ? Detectable object on the side of the road assistance  
Approximately 20 to 35 mph (30 to 60 km/h)
- ? Preceding vehicle deceleration assistance  
Approximately 15 mph (20 km/h) or more
- ? Curve deceleration assistance  
Approximately 15 mph (20 km/h) or more
- ? Steering assist within a lane

- Approximately 5 to 80 mph (10 to 140 km/h)
- ? **System operation will be canceled when**
  - ? In the following situations, system operation will be canceled:
    - When the dynamic radar cruise control or cruise control is operating
    - When the PCS is off
    - Situations in which some or all of the functions of the system cannot operate: →P.249
    - When the P, R or N shift position is selected
    - The driver's seat belt is unfastened
  - ? In the following situations, the brake operation assist will be canceled:
    - Approximately 9 mph (15 km/h) or less
    - When a certain vehicle speed has

been reached, as judged by the system, according to the surrounding conditions

- ? In the following situations, system operation may be canceled:
  - When the brake control or output restriction control of a driving support system operates (For example: PCS, drive-start control)
  - When the system determines that a detected object has moved away from the vehicle
  - Vehicles with SDM (Stabilizer with Disconnection Mechanism): When SDM (Stabilizer with Disconnection Mechanism) is operating: →P.250
  - When lane lines can no longer be detected
  - When the brake pedal has been depressed
  - When the accelerator pedal has been depressed
  - When the steering wheel has been operated with more than a certain amount of force
  - When the turn signal lever is operated to the left/right turn position

**! WARNING**

- ? **Situations in which the system may not operate properly**
- ? Situations in which the lane may not be detected: →P.249
- ? When a detectable object stops immediately before entering the path of the vehicle
- ? When passing extremely close to a detectable object behind a guardrail, fence, etc.
- ? When changing lanes while overtaking a detectable object
- ? When passing a detectable object that is changing lanes or turning left/right

- ? When there are objects (guardrails, power poles, trees, walls, fences, poles, traffic cones, mailboxes, etc.) in the surrounding area
- ? When there are patterns or a painting ahead of the vehicle that may be mistaken for a detectable object
- ? When passing through a place with a low structure above the road (tunnel with a low ceiling, traffic sign, signboard, etc.)
- ? When driving on snowy, icy, or rutted roads
- ? When a detectable object is approaching your vehicle
- ? When your vehicle or a detectable object is wandering
- ? When the movement of a detectable object changes (change in direction, sudden acceleration or deceleration, etc.)
- ? When suddenly approaching a detectable object
- ? When a preceding vehicle or motorcycle is not directly in front of your vehicle
- ? When there is a structure above a detectable object
- ? When part of a detectable object is hidden by another object (large luggage, umbrella, guardrail, etc.)
- ? When multiple detectable objects are overlapping
- ? When a bright light, such as the sun or headlights of another vehicle, is reflecting off of the detectable object
- ? When the detectable object is white and looks extremely bright

**⚠ WARNING**

- ? When the color or brightness of the detectable object causes it to blend in with its surroundings
- ? When a detectable object cuts in front of or emerges from beside a vehicle
- ? When approaching a vehicle ahead which is perpendicular or at an angle to the vehicle, or is facing the vehicle
- ? If a parked vehicle is perpendicular or at an angle to the vehicle
- ? When a bicycle is a child sized bicycle, is carrying a large load, is carrying an extra passenger, or has an unusual shape (bicycles equipped with a child seat, tandem bicycles, etc.)
- ? When a pedestrian or bicyclist is shorter than approximately 3.2 ft. (1 m) or taller than approximately 6.5 ft. (2 m)
- ? When the silhouette of a pedestrian or bicyclist is unclear (such as when they are wearing a raincoat, long skirt, etc.)
- ? When a pedestrian or bicyclist is bending forward or squatting
- ? When a pedestrian or bicyclist is moving at high speed
- ? When a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- ? When a detectable object blends in with the surrounding area, such as when it is dim (at dawn or dusk) or dark (at night, in a tunnel, etc.)
- ? When the lane width is 13.1 ft. (4 m) or more
- ? When the lane width is 8.2 ft. (2.5 m) or less

- ? When the vehicle has not been driven for a certain amount of time after the engine was started
- ? While turning left or right or a few seconds after turning left or right
- ? While changing lanes or a few seconds after changing lanes
- ? When entering a curve, driving around a curve and a few seconds after driving around a curve








**Changing proactive driving assist settings**

- The proactive driving assist can be enabled/disabled through a customize setting. (→P.640)
- The following settings of the proactive driving assist can be changed through customize settings. (→P.640)

**System operation display**

Depending on the situation, the following indicators or icons will be displayed.

Some icons cannot be displayed unless the display is changed to the driving safety support function information screen.

Icon	Meaning
	<ul style="list-style-type: none"> <li>• White: Monitoring for detectable objects</li> <li>• Green: Detectable object crossing the road or detectable object on the side of the road assistance operating</li> </ul>
	<p>A pedestrian has been detected as crossing the road or on the side of the road and brake or steering assistance is operating</p>
	<p>A vehicle has been detected on the side of the road and brake or steering operation assistance is being performed</p>
	<ul style="list-style-type: none"> <li>• Steering operation assistance is being performed to prevent the vehicle from approaching too close to a detectable object on the side of the road</li> <li>• When the steering assist is operating</li> </ul>
	<p>Preceding vehicle deceleration assistance is being performed</p>
	<p>Warning to maintain appropriate vehicle-to-vehicle distance</p>
	<p>Curve deceleration assistance is being performed</p>

**? Hands off steering wheel warning operation**

In the following situations, a message urging the driver to grip the steering wheel and the icon shown in the illustration will be displayed on the display to warn the driver. If the system detects that the steering wheel is held, the warning will be canceled. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.



- ? When assistance to a detectable object crossing the road or assistance to a detectable object on the side of the road is performed and the system determines the driver is not holding the steering wheel

If no operations are detected for a certain amount of time, a buzzer will sound, the warning will operate.

This warning may also operate if the driver only operates steering wheel a small amount continuously.

**? Warning operation after preceding vehicle deceleration assistance has ended**

After preceding vehicle deceleration assistance has ended, if the driver does not operate the brake pedal or accelerator pedal and the vehicle approaches the preceding vehicle, the display will flash and a buzzer will sound to urge the driver to decelerate. If the system determines that the driver is operating the brake pedal or accelerator pedal, the warning will be canceled.

**RSA (Road Sign Assist)\***

\*: If equipped

**The RSA system detects specific road signs using the front camera and/or navigation system (if equipped) (when speed limit information is available) and warns the driver via displays and buzzers.**

**⚠ WARNING**

? **For safe use**

? Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving.

? Do not rely solely upon the RSA. The RSA assists the driver by providing road sign information, but it is not a replacement for the driver's own vision and awareness. Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving.

? **Situations in which the RSA should not be used**

When it is necessary to disable the system: →P.243

? **Situations in which the system may not operate properly**

Situations in which the sensors may not operate properly: →P.247

**Display Function**

- When the front camera

detects a sign or information of a sign is available from the navigation system (if equipped), the sign will be displayed on the display.

- Multiple signs can be displayed.

Depending on the specifications of the vehicle, the number of displayed signs may be limited.

? **Operating conditions of sign display**

Signs will be displayed when the following conditions are met:

- ? The system has detected a sign

In the following situations, a displayed sign may stop being displayed:

- ? When a new sign has not been detected for a certain distance
- ? When the system determines that the road being driven on has changed, such as after a left or right turn

? **Situations in which the display function may not operate properly**

In the following situations, the RSA system may not operate properly and may not detect signs or may display the incorrect sign. However, this does not indicate a malfunction.

- ? When a sign is dirty, faded, tilted or bent
- ? When the contrast of an electronic sign is low
- ? When all or part of a sign is hidden by a tree, utility pole, etc.
- ? When a sign is detected by the front camera for a short amount of time
- ? When the driving state (turning, changing lanes, etc.) is judged incorrectly

- ? When a sign is immediately after a freeway junction or in an adjacent lane just before merging
- ? When stickers are attached to the rear of a preceding vehicle
- ? When a sign similar to a system compatible sign is detected as a system compatible sign
- ? When a speed limit sign for a frontage road is within detection range of the front camera
- ? When driving around a round-about
- ? When a sign intended for trucks, etc. is detected
- ? When a sign has a supplemental sign (end point, day of week, time of day, etc.)
- ? When there is a sign within a traffic restricted area, such as a road-works area
- ? Vehicles with navigation system: When the navigation system map data is out of date
- ? Vehicles with navigation system: When the navigation system cannot be used

In this case, the speed limit signs displayed on the multi-information display and navigation system display may differ.

### Notification function

In the following situations, the RSA system will output a warning to notify the driver.

- If the vehicle speed exceeds the speed warning threshold of the speed limit sign displayed on the display, the sign display will be emphasized and a buzzer will sound.
- When the RSA system

detects a do not enter sign and determines that the vehicle has entered a no-entry area, the do not enter sign displayed on the display will flash and a buzzer will sound.

### ? Operating conditions of the notification functions

- ? Excess speed notification function

This function will operate when the following condition is met:

- A speed limit road sign is recognized by the system.

- ? No entry notification function




This function will operate when all of the following conditions are met:






- More than one no entry road signs are recognized by the system simultaneously.
- The vehicle is passing between no entry road signs recognized by the system.

### Types of road signs supported

- The following types of road signs can be displayed.

However, non-standard or recently introduced traffic signs may not be displayed.

	Speed limit
	
	Do Not Enter

	No U-turn
	No Turn On Red
	Stop
	Yield
	Warning

**Changing RSA settings**

The following settings of the RSA can be changed through customize settings. (→P.640)

**Dynamic radar cruise control**

**This dynamic radar cruise control detects the presence of vehicles ahead, determines the current vehicle-to-vehicle distance, and operates to maintain a suitable distance from the vehicle ahead. The desired vehicle-to-vehicle distance can be set by operating the vehicle-to-vehicle distance switch.**

**Use the dynamic radar cruise control only on highways and expressways.**

**⚠ WARNING**

**? For safe use**

? Driving safely is solely the responsibility of the driver. Do not overly rely on this system, and pay careful attention to the surrounding conditions in order to ensure safe driving.

? The dynamic radar cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided. Read the following items carefully. Do not overly rely on this system and always drive carefully.

Conditions under which the system may not operate correctly:  
→P.291



**⚠ WARNING**

? Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.

? Even if the system is operating correctly, the condition of a preceding vehicle as recognized by the driver and detected by the system may differ. Therefore, it is necessary for the driver to pay attention, assess risks, and ensure safety. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.

**? Precautions for the driving assist systems**

Observe the following precautions, as there are limitations to the assistance provided by the system. Over-reliance on this system may lead to an accident resulting in death or serious injury.

? Details of support provided for the driver's vision

The dynamic radar cruise control is only intended to help the driver in determining the distance between the driver's own vehicle and a designated preceding vehicle. It is not a system which allows for careless or inattentive driving, and is not a system which assists in poor visibility conditions.

The driver must pay attention to their surroundings, even when the vehicle stops.

? Details of support provided for the driver's judgement

The dynamic radar cruise control determines whether the distance between the driver's own vehicle and a designated preceding vehicle is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger.

? Details of support provided for the driver's operation


The dynamic radar cruise control does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure safety.

**WARNING****? Situations in which the dynamic radar cruise control should not be used**

Do not use the dynamic radar cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.

- ? Roads where there are pedestrians, cyclists, etc.
- ? When driving on a highway or expressway entrance or exit
- ? When the approach warning sounds frequently
- ? Situations in which the sensors may not operate properly:  
→P.247
- ? When it is necessary to disable the system: →P.243
- ? **When towing another vehicle**  
→P.302
- ? **When lift up**  
→P.251

### Basic functions

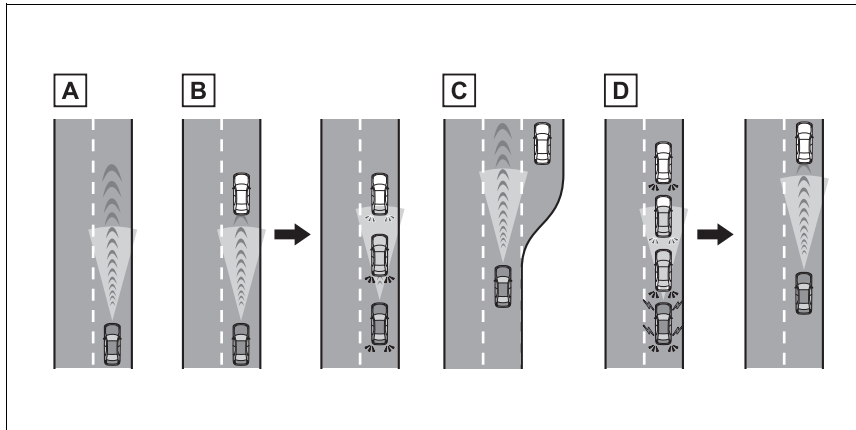

#### A Constant speed cruising:

When there are no vehicles ahead

The vehicle drives at the speed set by the driver.

If the set vehicle speed is exceeded while driving down a hill, the set vehicle speed display will blink and a buzzer will sound.

#### B Deceleration and follow-up cruising

When a preceding vehicle driving slower than the set vehicle speed is detected

When a vehicle is detected driving ahead of your vehicle, the vehicle automatically decelerates and if a greater reduction in vehicle speed is necessary, the brakes are applied (the stop lights will come on at this time). The vehicle is controlled to maintain the vehicle-to-vehicle distance set by the driver, in accordance with changes in the speed of the preceding vehicle. If vehicle deceleration is not sufficient and the vehicle approaches the vehicle ahead, the approach warning will sound.

#### C Acceleration

When there are no longer any preceding vehicles driving slower than the set vehicle speed

The vehicle accelerates until the set vehicle speed is reached and then resumes constant speed cruising.


#### D Starting off (vehicles with brake-hold):

If a preceding vehicle stops, the vehicle will also stop (controlled stop). After the preceding vehicle starts off, pressing the "RES" switch or depressing the accelerator pedal will resume follow-up cruising (start off operation). If a start off operation is not per-

formed, the controlled stop will continue.


### System components

#### ? Meter display

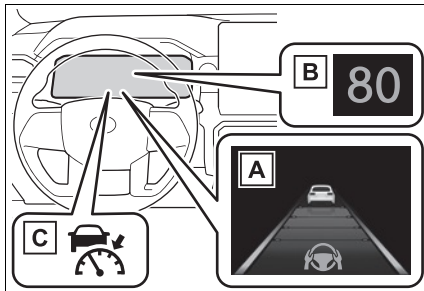

- A** Multi-information display
- B** Set vehicle speed
- C** Indicators

#### ? Switches

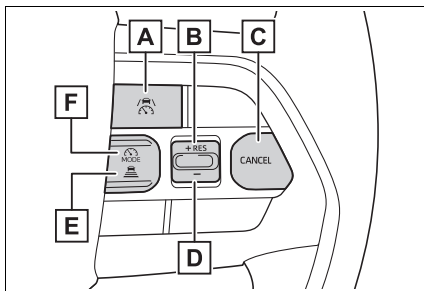


- A** Driving assist switch
- B** "+" switch/"RES" switch
- C** Cancel switch
- D** "-" switch
- E** Vehicle-to-vehicle distance switch
- F** Driving assist mode select switch

### Using the dynamic radar cruise control

#### ? Setting the vehicle speed

- 1 Press the driving assist mode select switch to select Adaptive Cruise Mode.


The dynamic radar cruise control indicator will illuminate.

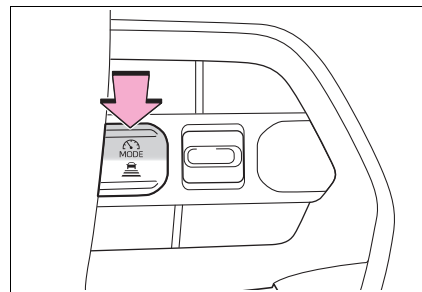

- 2 Using the accelerator pedal, accelerate or decelerate to the desired vehicle speed (approximately 20 mph [30 km/h] or more), and press the driving assist switch to set the set vehicle speed.

The set vehicle speed will be displayed on the multi-information display.


The vehicle speed at the moment the switch is released will be the set vehicle speed.

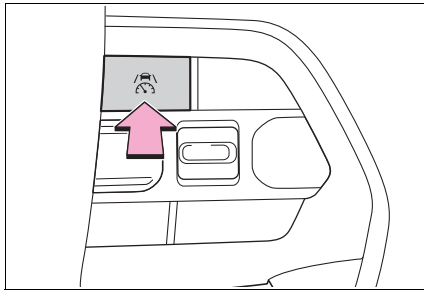

? **Adjusting the set vehicle speed**

- Adjusting the set vehicle speed using the switches

To change the set vehicle speed, press the “+” switch or “-” switch until the desired speed is displayed.

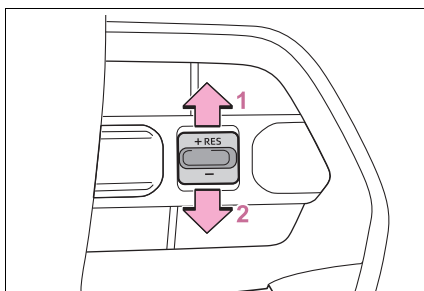

- 1 Increase set vehicle speed
- 2 Decrease set vehicle speed

Short press adjustment: Press the switch

Long press adjustment: Press and hold the switch until the desired set vehicle speed is reached.

The set vehicle speed will increase or decrease as follows:

- ▶ Except for Canada and New Caledonia

Short press adjustment: Increases or decreases by 1 mph (1.6 km/h) each time the switch is pressed

Long press adjustment: Increases or decreases in 1 mph (1.6 km/h) increments continuously while the switch is pressed and held

- ▶ For Canada and New Caledonia

Short press adjustment: By 1 km/h (0.6 mph) or 1 mph (1.6 km/h) each time the switch is pressed

Long press adjustment: Increases or decreases in 5 km/h (3.1 mph) or 5 mph (8 km/h) increments continuously while the switch is pressed and held

The set vehicle speed adjustment increment can be changed through a customize setting. (for New Caledonia)


- Increasing the set vehicle speed using the accelerator pedal

- 1 Depress the accelerator pedal to accelerate the vehicle to the desired vehicle speed.
- 2 Press the “+” switch.

? **Canceling/resuming control**

- 1 Press the cancel switch or driving assist switch to cancel control.

Control will also be canceled if the brake pedal is depressed. (Vehicles with brake-hold: If the vehicle has been stopped by system control, depressing the brake pedal will not cancel control.)

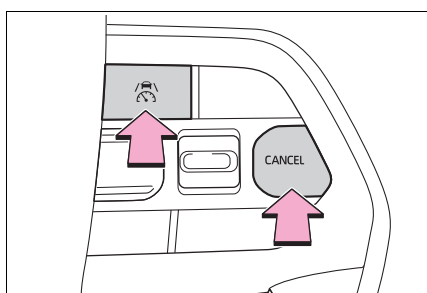


- 2 Press the "RES" switch to resume control.

? **Changing the vehicle-to-vehicle distance**

Each time the switch is pressed, the vehicle-to-vehicle distance setting will change as follows:

If a preceding vehicle is detected, the preceding vehicle mark **A** will be displayed.

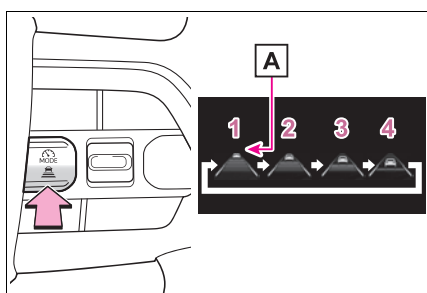

► Except for New Caledonia

Illustration Number	Vehicle-to-vehicle distance	Approximate Distance (Vehicle Speed: 60 mph [100 km/h])
1	Extra long	Approximately 200 ft. (60 m)
2	Long	Approximately 145 ft. (45 m)
3	Medium	Approximately 100 ft. (30 m)
4	Short	Approximately 85 ft. (25 m)

► For New Caledonia

Illustration Number	Vehicle-to-vehicle distance	Approximate Distance (Vehicle Speed: 60 mph [100 km/h])
1	Extra long	Approximately 230 ft. (70 m)
2	Long	Approximately 200 ft. (60 m)
3	Medium	Approximately 145 ft. (45 m)
4	Short	Approximately 100 ft. (30 m)

The actual vehicle-to-vehicle distance varies in accordance with the vehicle speed. Also, when the vehicle is stopped by system control, it will be stopped at a certain distance from the preceding vehicle, depending on the situation, regardless of the setting.

? **Operating conditions**

- ? The D shift position is selected. (vehicles with an automatic trans-

mission)

- ? The shift position is in 2nd gear or higher. (vehicles with a manual transmission)
- ? The desired set speed can be set when the vehicle speed is approximately 20 mph (30 km/h) or more.
  - If the vehicle speed is set while driving at below approximately 20 mph (30 km/h), the set vehicle speed will be approximately 20 mph (30 km/h). (full speed range function)
  - If the vehicle speed is set while driving at a speed that exceeds the system's upper limit, the set vehicle speed will be the system's upper limit.

? **Accelerating after setting the vehicle speed**

As with normal driving, acceleration can be performed by depressing the accelerator pedal. After accelerating, the vehicle will return to the set vehicle speed. However, while in vehicle-to-vehicle distance control mode, the vehicle speed may decrease to below the set vehicle speed in order to maintain the distance from the preceding vehicle.

? **Shift position selection (vehicles with a manual transmission)**

Select an appropriate shift position according to the vehicle speed. If the engine speed becomes excessively high or low, control may be canceled automatically.

? **When the vehicle is stopped by system control during follow-up cruising (vehicles with brake-hold)**

- ? When the "RES" switch is pressed while the vehicle is stopped by system control, if the preceding vehicle starts off within approximately 3 seconds, follow-up cruising will resume.
- ? If the preceding vehicle starts off within approximately 3 seconds of

the vehicle being stopped by system control, follow-up cruising will resume.

? **Automatic cancelation of vehicle-to-vehicle distance control mode**

In the following situations, vehicle-to-vehicle distance control mode will be canceled automatically:

- ? When the vehicle speed drops below approximately 20 mph (30 km/h) (except full speed range function)
- ? When the brake control or output restriction control of a driving support system operates (For example: Pre-Collision System, drive-start control)
- ? Vehicles with a manual transmission: When the shift lever is in N or the clutch pedal is depressed for more than a certain amount of time
- ? When the parking brake has been operated
- ? When the driver's seat belt is unfastened while driving
- ? When the Pre-Collision System is disabled
- ? When the vehicle is stopped by system control on a steep incline (vehicles with brake-hold)
- ? When any of the following are detected while the vehicle is stopped by system control (vehicles with brake-hold):
  - The driver's seat belt is unfastened
  - The driver's door is opened
  - Approximately 3 minutes have elapsed since the vehicle was stopped

The parking brake may be activated automatically.

- ? Situations in which some or all of the functions of the system cannot operate: →P.249

? **Dynamic radar cruise control system warning messages and buzzers**

For safe use: →P.243

? **Preceding vehicles that the sensor may not detect correctly**

In the following situations, depending on the conditions, if the system cannot provide sufficient deceleration or acceleration is necessary, operate the brake pedal or accelerator pedal.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P.291) may not operate.

- ? When a vehicle cuts in front of your vehicle or changes lanes away from your vehicle extremely slowly or quickly
- ? When changing lanes
- ? When a preceding vehicle is driving at a low speed
- ? When a vehicle is stopped in the same lane as the vehicle
- ? When a motorcycle is traveling in the same lane as the vehicle

? **Conditions under which the system may not operate correctly**

In the following situations, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect a vehicle, the system may not operate properly.

- ? When a preceding vehicle brakes suddenly
- ? When changing lanes at low speeds, such as in a traffic jam (vehicles with brake-hold)

**Approach warning**

In situations where the vehicle approaches a preceding vehicle

and the system cannot provide sufficient deceleration, such as if a vehicle cuts in front of the vehicle, a warning display will flash and a buzzer will sound to alert the driver. Depress the brake pedal to ensure appropriate vehicle-to-vehicle distance.

? **Warnings may not occur when**

In the following situations, the warning may not operate even though the vehicle-to-vehicle distance is short.

- When the preceding vehicle is traveling at the same speed or faster than your vehicle
- When the preceding vehicle is traveling at an extremely low speed
- Immediately after the vehicle speed has been set
- When the accelerator pedal is depressed

**Curve speed reduction function**

When a curve is detected, the vehicle speed will begin being reduced. When the curve ends, the vehicle speed reduction will end.

Depending on the situation, the vehicle speed will then return to the set vehicle speed.

In situations where vehicle-to-vehicle distance control needs to oper-



ate, such as when a preceding vehicle cuts in front of your vehicle, the curve speed reduction function will be canceled.



? **Situations in which the curve speed reduction function may not operate**

In situations such as the following, the curve speed reduction function may not operate:

- ? When the vehicle is being driven around a gentle curve
- ? When the accelerator pedal is being depressed
- ? When the vehicle is being driven around an extremely short curve

**Support for lane change**

If your vehicle is being driven at approximately 50 mph (80 km/h) or more and a lane change to the passing lane is performed, when the turn signal lever is operated and the lane is changed, the vehicle will accelerate up to the set speed to assist in overtaking.

The system's recognition of which lane is the passing lane may be based solely on the location of the steering wheel in the vehicle (left-hand drive/right-hand drive). If the

vehicle is driven in a location where the passing lane is on the opposite side of that where the vehicle was originally sold, the vehicle may accelerate when the turn signal lever is operated away from the passing lane. (e.g. The vehicle was manufactured for a right-hand traffic location, but is being driven in a left-hand traffic location. The vehicle may accelerate when the turn signal lever is operated to the right.)








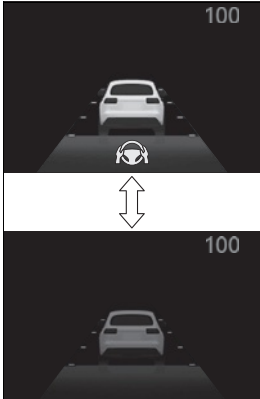
If your vehicle is being driven at approximately 50 mph (80 km/h) or more and the lane is changed to that with a vehicle traveling slower than your vehicle, when the turn signal lever is operated the vehicle will gradually decelerate to assist in changing lanes.

**Changing Dynamic radar cruise control settings**


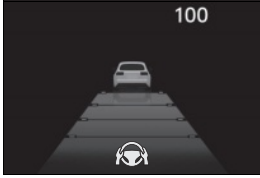

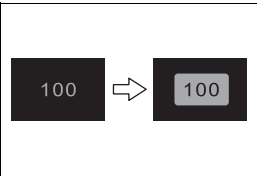

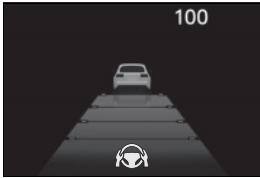
The settings of Dynamic radar cruise control can be changed through customize settings. (→P.640)

**Display and system operation state**

The operating state of Dynamic radar cruise control is indicated.

Indicator	Multi-information display	Situation
 White		Vehicle-to-vehicle distance setting: Gray  Dynamic radar cruise control being OFF
 Green		Vehicle-to-vehicle distance setting: Blue  Set vehicle speed: Green  Constant speed cruising
 Green		Vehicle-to-vehicle distance setting: Blue  Set vehicle speed: Green  Preceding vehicle: White  Follow-up cruising
 Green		Vehicle-to-vehicle distance setting: Orange flashing  Set vehicle speed: Green  Preceding vehicle: Orange flashing  Approach warning

4  
Driving

Indicator	Multi-information display	Situation
 <p>Green</p>	 <p>Vehicle-to-vehicle distance setting: Gray Set vehicle speed: White Preceding vehicle: Gray</p>	<p>Accelerating with the accelerator pedal</p>
 <p>Green</p>	 <p>Set vehicle speed: Green in reverse display</p>	<p>Set vehicle speed being exceeded</p>
 <p>Green</p>	 <p>Vehicle-to-vehicle distance setting: Gray Set vehicle speed: White Preceding vehicle: Gray</p>	<p>Vehicle in controlled stop (vehicles with brake-hold)</p>

Cruise control

**The vehicle can be driven at a set speed even if the accelerator pedal is not depressed.**

**Use the cruise control only on highways and expressways.**

**⚠ WARNING**

? **For safe use**

? Driving safely is solely the responsibility of the driver. Therefore, do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely.

? Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.

? **Situations in which cruise control should not be used**

Do not use the cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.

- ? On roads with sharp bends
- ? On winding roads
- ? On slippery roads, such as those covered with rain, ice or snow

? On steep downhills, or where there are sudden changes between sharp up and down gradients  
Vehicle speed may exceed the set speed when driving down a steep hill.


? When it is necessary to disable the system: →P.243

? **When towing another vehicle**  
→P.302

? **When lift up**  
→P.251

**System components**


? **Meter display**

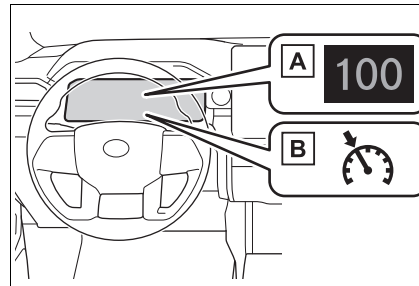

**A** Set vehicle speed

**B** Cruise control indicator

? **Switches**

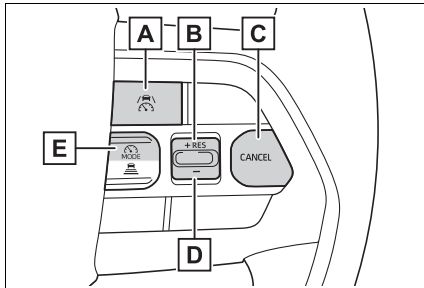


- A** Driving assist switch
- B** "+" switch/"RES" switch
- C** Cancel switch
- D** "-" switch
- E** Driving assist mode select switch

**Using the cruise control**

? **Setting the vehicle speed**

- 1 Press the driving assist mode select switch to select Cruise Control Mode.


The cruise control indicator will illuminate.

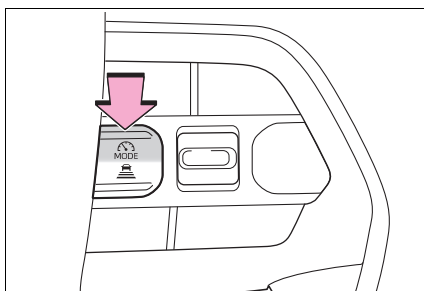

- 2 Using the accelerator pedal, accelerate to the desired vehicle speed (approximately 20 mph [30 km/h] or

more), and press the driving assist switch to set the set vehicle speed.


The vehicle speed at the moment the switch is released will be the set vehicle speed.

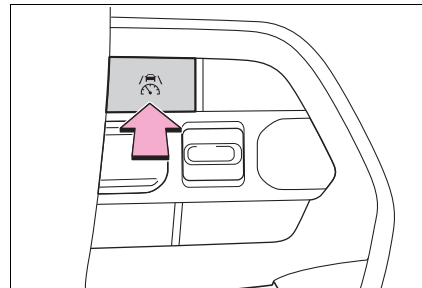

? **Adjusting the set vehicle speed**

- Adjusting the set vehicle speed using the switches

To change the set vehicle speed, press the "+" or "-" switch until the desired speed is displayed.

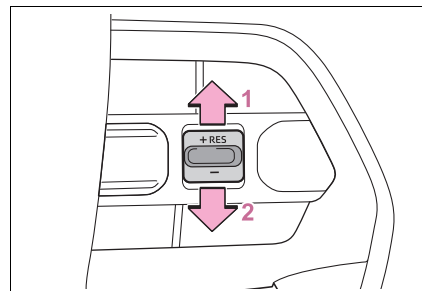

- 1 Increase set vehicle speed
- 2 Decrease set vehicle speed

The set vehicle speed will increase or decrease as follows:

Fine adjustment: By 1 mph (1.6 km/h) or 1 km/h (0.6 mph) each time the switch is pressed

Large adjustment: Increases con-

tinuously while the switch is pressed and held


- Increasing the set vehicle speed using the accelerator pedal

- 1 Depress the accelerator pedal to accelerate the vehicle to the desired vehicle speed.
- 2 Press the “+” switch.

? **Canceling/resuming control**

- 1 Press the cancel switch or driving assist switch to cancel control.

Control will also be canceled if the brake pedal is depressed.

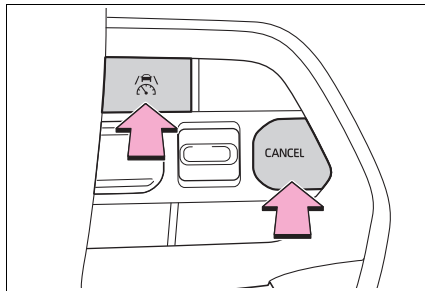

- 2 Press the “RES” switch to resume control.

? **Automatic cancelation of the cruise control**

In the following situations, the cruise control will be canceled automatically:




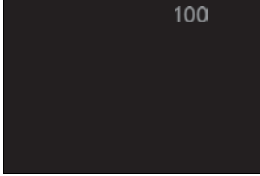

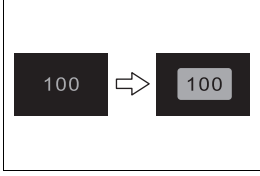
- ? When the vehicle speed drops approximately 10 mph (16 km/h) or more below the set vehicle speed
- ? When the vehicle speed drops below approximately 20 mph (30 km/h)
- ? When the brake control or output restriction control of a driving support system operates (For example: PCS, drive-start control)

port system operates (For example: PCS, drive-start control)

- ? Vehicles with manual transmission: When the shift lever is in N or the clutch pedal is depressed for more than a certain amount of time
- ? When the parking brake has been operated
- ? When the driver’s seat belt is unfastened
- ? Situations in which some or all of the functions of the system cannot operate: →P.249

### Display and system operation state

The operating state of cruise control is indicated.

Indicator	Multi-information display		Situation
 White		Blank	Cruise control being OFF
 Green		Set vehicle speed: Green	Constant speed cruising
 Green		Set vehicle speed: Green in reverse display	Set vehicle speed being exceeded

**Emergency Driving Stop System\***

\*: If equipped

**The emergency driving stop system is a system which automatically decelerates and stops the vehicle within its lane if the driver becomes unable to continue driving the vehicle, such as if they have suffered a medical emergency, etc.**

**During LTA (Lane Tracing Assist) control, if the system does not detect driving operations, such as if the driver is not holding the steering wheel, and determines the driver is not responsive, the vehicle will be decelerated and stopped within its current lane to help avoid a collision or reduce the impact of a collision.**

**⚠ WARNING**

**? For safe use**

- ? Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. The emergency driving stop system is designed to provide support in an emergency where it is difficult for the driver to continue driving, such as if they have had a medical emergency. It is not designed to support driving while drowsy or in poor physical health, or inattentive driving.
- ? Although the emergency driving stop system is designed to decelerate the vehicle within its lane to help avoid or help reduce the impact of a collision if the system determines that it is difficult for the driver to continue driving, its effectiveness may change according to various conditions. Therefore, it may not always be able to achieve the same level of performance. Also, if the operating conditions are not met, this function will not operate.
- ? After the emergency driving stop system operates, if driving becomes possible again, immediately begin driving again or, if necessary, park the vehicle on the shoulder of the road and set a warning reflector and flare to warn other drivers of your stopped vehicle.
- ? After this system operates, passengers should attend to the driver as necessary and take appropriate hazard prevention measures, such as moving to a place where safety can be ensured, such as the shoulder of the road or behind a guard-rail.



**⚠ WARNING**

? This system detects the condition of the driver through the operation of the steering wheel. This system may operate if the driver is aware but intentionally and continuously does not operate the vehicle. Also, the system may not operate if it cannot determine that the driver is not responsive, such as if they are leaning on the steering wheel.

? **When towing another vehicle**  
→P.302

? **When lift up**  
→P.251

**Summary of the system**

Operation of this system is separated into 4 control states. Through control state “warning phase 1” and “warning phase 2”, the system determines if the driver is aware and responsive while outputting a warning and controlling the vehicle speed. If the system determines the driver is not responsive, it will operate in control state “deceleration stop phase” and “stop hold phase” and decelerate and stop the vehicle. It will then operate continuously in “stop hold phase”.

**? Operating conditions**

This system operates when all of the following conditions are met:

- ? When the LTA is on
- ? When the vehicle speed is approximately 30 mph (50 km/h)

or more

**? Operation cancelation conditions**

In the following situations, system operation will be canceled:

- ? When LTA control has been canceled (the LTA switch has been pressed, etc.)
- ? When the dynamic radar cruise control has been canceled
- ? When driver operations are detected (the steering wheel is held, the brake pedal, accelerator pedal, parking brake, hazard light switch, or turn signal lever is operated)
- ? When the driving assist switch is pressed while in the stop and hold phase
- ? When the engine switch has been turned from ON to OFF
- ? Situations in which some or all of the functions of the system cannot operate: →P.249
- ? **LTA control when operation is canceled**

When emergency driving stop system operation is canceled, LTA control may also be canceled.

**Warning phase 1**

If driving operations are not detected after the hands off steering wheel warning operates, a buzzer will sound intermittently and a message will be displayed to warn the driver, and the system will judge if the driver is responsive or not. If driving operations, such as holding the steering wheel, are not performed within a certain amount of time, the system will enter warning phase 2.

### Warning phase 2

After entering warning phase 2, a buzzer will sound in short intervals and a message will be displayed to warn the driver, and the vehicle will slowly decelerate. If driving operations, such as holding the steering wheel, are not performed within a certain amount of time, the system will determine that the driver is not responsive and enter the deceleration stop phase.

When the vehicle is decelerating, the brake lights may illuminate, depending on the road conditions, etc.

### Deceleration stop phase

After entering the deceleration stop phase, a buzzer will sound continuously and a message will be displayed to warn the driver, and the vehicle will slowly decelerate and stop. After the vehicle stops, the system will enter the stop and hold phase.

### Stop hold phase

After the vehicle is stopped, the parking brake will be applied automatically. After entering the stop and hold phase, the buzzer will continue sounding continuously and the emergency flashers (hazard lights) will flash to warn other drivers of the emer-

gency.

### ? Restricted functions after the operation is canceled

After shifting to the deceleration stop phase, the following functions will not be available until the engine is re-started even though the emergency driving stop system is canceled:

? LTA

### TDA (Trailer Driving Assist)\*

\*: If equipped

**TDA (Trailer Driving Assist) is a system that adjusts certain driver assist settings to support towing functionality. It is recommended to use a genuine Toyota Trailer Brake Controller (TBC) (→P.429) (if equipped) when towing.**

**Towing without a genuine Toyota Trailer Brake Controller (TBC) (if equipped) increases the risk of vehicle/trailer instability.**

### System functions

When the TDA (Trailer Driving Assist) is operating, each function is limited as follows:

Function	Status
AHB (Automatic High Beam) (→P.233)	O
PCS (Pre-Collision System) (→P.252)	*1
LTA (Lane Tracing Assist) (→P.263)	—
LDA (Lane Departure Alert) (→P.268)	O

Function	Status
PDA (Proactive driving assist)* <sup>2</sup> (→P.274)	—
RSA (Road Sign Assist)* <sup>2</sup> (→P.281)	O
Dynamic radar cruise control (→P.283)	O
Emergency Driving Stop System* <sup>2</sup> (→P.299)	—
Intuitive parking assist* <sup>2</sup> (→P.317)	*1
PKSB (Parking Support Brake)* <sup>2</sup> (→P.333)	—
Parking Support Brake function (static objects)* <sup>2</sup> (→P.338)	—
RCD (Rear Camera Detection)* <sup>2</sup> (→P.329)	—
RCTA (Rear Cross Traffic Alert)* <sup>2</sup> (→P.324)	—

Definition of symbols: O = Available, — = Not available

\*1: Partially unavailable

\*2: If equipped

### ? Operating conditions

Operates when any of the following conditions are met:

? When towing a trailer connected to a genuine Toyota Trailer Brake Controller (TBC) (→P.429) (if equipped)

? When BSM (Blind Spot Monitor) (→P.310) (if equipped) detects a connected trailer

A message is displayed on the multi-information display when a trailer is detected.

Enable the function according to the instructions on the multi-information display.

? **PCS (Pre-Collision System) function**

The following functions are disabled when a trailer is detected.

- Moderate braking for pre-collision warning
- Acceleration suppression at low speed (vehicles with an automatic transmission)
- Emergency steering assist
- Intersection collision avoidance support (left/right turn)

? **When towing a trailer**

? This system has limitations. Do not overly rely on the system. It is the driver's responsibility to always be aware of the surroundings and drive safely.

? Please check P.196 on how to tow a trailer properly.

**⚠ WARNING**

? **For safe use**

If the vehicle is being driven on a slippery surface such as an icy road or a very wet road, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury.

**Stop & Start system\***

\*: If equipped


**The Stop & Start system stops and starts the engine according to brake pedal or shift lever operation when the vehicle is stopped, such as at a stoplight, intersection, etc., in order to improve fuel economy and reduce noise pollution caused by the engine idling.**

**Stop & Start system operation**

? **Stopping the engine**

While driving with the D shift position selected, depress the brake pedal and stop the vehicle. The engine will stop automatically.

When the engine stops, the Stop & Start indicator will illuminate.

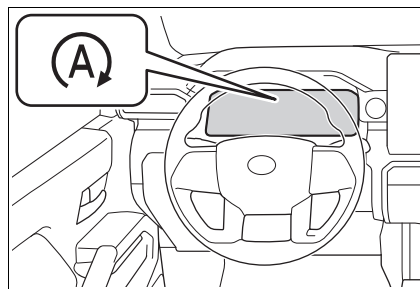

? **Restarting the engine**

Release the brake pedal. The engine will start automatically.

When the engine starts, the Stop & Start indicator will turn off.

? **When the brake hold system is operating**

- When the engine is stopped by the Stop & Start system, if the brake pedal is released the engine will remain stopped. However, when a vehicle stops forward or a person walks the front and so on, the engine may be restarted.
- If the accelerator pedal is depressed while the engine is stopped by the Stop & Start system, the engine will restart.
- While the engine is stopped by the Stop & Start system, if the engine is restarted, the brake hold system will continue to apply the brakes, unless the operation conditions of the brake hold system are no longer met. (→P.227)

? **When the dynamic radar cruise control is operating**

- When the vehicle is stopped by the dynamic radar cruise control, the engine will stop automatically even though the brake pedal is not depressed.
- When the preceding vehicle starts off, the engine will restart automatically.
- If the engine is restarted by the Stop & Start system while the vehicle is stopped by the dynamic radar cruise control,


the vehicle will remain stopped.

### Disabling the Stop & Start system

Press the Stop & Start cancel switch to disable the Stop & Start system.

The Stop & Start cancel indicator will illuminate.

Pressing the switch again will enable the Stop & Start system and the Stop & Start cancel indicator will turn off.

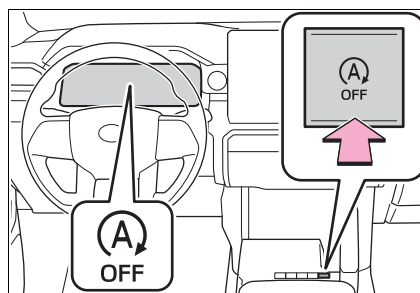

? **Automatic enabling of the Stop & Start system**

If the Stop & Start system is disabled using the Stop & Start cancel switch, it will be automatically re-enabled once the engine switch is turned off and then the engine is started.

### Hill-start assist control

When the engine is stopped by the Stop & Start system when the vehicle is on an incline, when the brake pedal is released, brake force is temporarily maintained to prevent the vehicle from rolling backwards

before the engine is restarted and drive force is generated. When drive force is generated, the maintained brake force is automatically canceled.

- This function operates on flat surfaces as well as steep inclines.
- Sound may be generated from the brake system, but this does not indicate a malfunction.
- Brake pedal response may change and vibration may occur, but this does not indicate a malfunction.

#### ? Points for use

- ? If the engine switch is pressed when the engine is stopped by the Stop & Start system, the engine will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure. (→P.210)
  - ? When the engine is being restarted by the Stop & Start system, the power outlets may be temporarily unusable, but this does not indicate a malfunction.
  - ? Installation and removal of electrical components and wireless devices may affect the Stop & Start system. Contact your Toyota dealer for details.
  - ? When stopping the vehicle for a longer period of time, turn the engine switch off to stop the engine completely.
  - ? When the engine is restarted by the Stop & Start system, the steering wheel may temporarily feel heavy.
- #### ? Operating conditions
- ? The Stop & Start system is operational when all of the following conditions are met:
    - The vehicle has been driven a certain amount of time.
    - The brake pedal is being depressed firmly. (Except when the vehicle is stopped by the dynamic radar cruise control when in vehicle-to-vehicle distance control mode)
    - The D shift position is selected.
    - The driver's seat belt is fastened.
    - The driver's door is closed.
    - The selected driving mode is not "4H" or "4L" mode. (4WD models only)
    - The Multi-terrain Select is not operated (if equipped)
    - The selected driving mode is not rear differential lock mode.
    - The windshield defogger is off.
    - The accelerator pedal is not being depressed.
    - The engine is adequately warmed up.
    - The hood is closed. (→P.306)
    - "TOW HAUL" mode is not operated (if equipped)
  - ? In the following situations the engine may not be stopped by the Stop & Start system. This is not a malfunction of the Stop & Start system.
    - When the air conditioning system is being used.
    - When the battery is undergoing a periodic recharge.
    - When the battery is not sufficiently charged, such as if the vehicle has been parked for a long time and the battery charge has decreased, the electric load is large, the battery fluid temperature is excessively low or the battery has deteriorated.
    - When the brake booster vacuum is low.
    - When the elapsed time since the engine was restarted is short.
    - When the vehicle is stopped frequently, such as when in a traffic

- jam.
- When the engine coolant temperature or transmission fluid temperature is extremely low or high.
  - When the vehicle is stopped on a steep incline.
  - When the vehicle is being driven in a high altitude area.
  - When the battery fluid temperature is extremely low or high.
  - For a while after the battery terminals have been disconnected and reconnected.
- ? When the engine is stopped by the Stop & Start system, the engine will be restarted automatically if any of the following conditions are met:  
(To enable the engine to be stopped by the Stop & Start system again, drive the vehicle.)
- The air conditioning system is being used. (vehicles without a manual air conditioning system)
  - The windshield defogger is turned on. (vehicles without a manual air conditioning system)
  - The shift lever is shifted from D.
  - The driver's seat belt is unfastened.
  - The driver's door is opened.
  - The selected driving mode is "4H" or "4L" mode. (4WD models only)
  - The Multi-terrain Select is operated (if equipped)
  - "TOW HAUL" mode is operated (if equipped)
  - The driving mode is changed to rear differential lock mode.
  - The Stop & Start cancel switch is pressed.
  - The accelerator pedal is depressed.
  - The vehicle starts to roll on an incline.
- ? When the engine is stopped by the Stop & Start system, the engine may restart automatically in the following situations: (To enable the engine to be stopped by the Stop & Start system again, drive the vehicle.)
- When the brake pedal is pumped or strongly depressed.
  - When the air conditioning system is being used.
  - When a switch of the air conditioning system is operated (windshield defogger switch, etc.).
  - If the battery charge becomes low.
- ? **When the hood is opened**
- ? If the hood is opened while the engine is stopped by the Stop & Start system, the engine will stall and will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure. (→P.210)
- ? If the hood is closed after the engine is started with the hood open, the Stop & Start system will not operate. Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine.
- ? **Air conditioning system operation while the engine is stopped by the Stop & Start system**
- Vehicles with an automatic air conditioning system: When the air conditioning is in automatic mode and the engine is stopped by the Stop & Start system, the fan may operate at a low speed in order to prevent the temperature in the cabin from increasing or decreasing or may be stopped.
- To prioritize air conditioning system performance when the vehicle is stopped, disable the Stop & Start system by pressing the Stop & Start cancel switch.
- ? If the windshield is fogged up  
Turn the windshield defogger on.  
(→P.451)
- If the windshield fogs up frequently, press the Stop & Start cancel switch to disable the Stop & Start system.
- ? If an odor is emitted from the air conditioning system
- Vehicles with a manual air condi-


tioning system

If the idling stop time setting is set to "Extended" change it to "Standard". If an odor is emitted when the idling stop time setting is set to "Standard", press the Stop & Start cancel switch to deactivate the Stop & Start system.

- Vehicles with an automatic air conditioning system

Press the Stop & Start cancel switch to deactivate the Stop & Start system.


? **Changing the idling stop time with the air conditioning system on**

The length of time the Stop & Start system will operate when the air conditioning system is on can be changed in  of the multi-information display (→P.651). (The length of time the Stop & Start system will operate when the air conditioning system is off cannot be changed.)

? **Displaying the Stop & Start system status**


→P.304

? **Multi-information display messages**

If the following situations, ,


and a message may be displayed on the multi-information display.

- ? When the engine cannot be stopped by the Stop & Start system

 "Press Brake More to Activate"


- The brake pedal is not sufficiently depressed.

→ If the brake pedal is depressed sufficiently, the system will operate.

 "Non-Dedicated Battery"

- A battery not designed for use with a Stop & Start system may have been installed.

→ Have the vehicle inspected by your Toyota dealer.

 "Battery Charging"

- The battery charge may be low.

→ Stopping of the engine is temporarily prohibited to prioritize charging of the battery. After the engine runs for a certain amount of time, the system will be enabled.

- A refresh charge may be occurring

→ After a refresh charge for up to an hour completes, the system can be operated.

- If displayed continuously for a long time (more than an hour)

→ The battery may be deteriorated. Contact your Toyota dealer for details.


 "Stop & Start Unavailable"

- The Stop & Start system is temporarily disabled.

→ Allow the engine to run for some time.


- The engine may have been started with the hood open.

→ Close the hood, turn the engine switch off, wait for 30 seconds or more and then start the engine.

 "In Preparation"

- The vehicle is being driven in a high altitude area.
- The brake booster vacuum is low.

→ When the brake booster vacuum reaches a predetermined level, the system will be enabled.

 "For Climate Control"

- The air conditioning system is being used when the ambient temperature is high or low.


→ If the difference between the set



temperature and cabin temperature becomes small, the system will be enabled.

- The windshield defogger is on.

? When the engine automatically restarts while stopped by the Stop & Start system


 "In Preparation"

- The brake pedal has been depressed further or pumped.

→ The system will be enabled after the engine runs and the brake booster vacuum reaches a predetermined level.

 "For Climate Control"

- The air conditioning system has been used.
- The windshield defogger has been turned on.

 "Battery Charging"

- The battery charge may be low.

→ The system will be enabled after the engine runs to sufficiently charge the battery.

? **When the buzzer sounds**

If the driver's door is opened when the engine is stopped by the Stop & Start system and the shift lever is in D, a buzzer will sound and the Stop & Start system indicator will flash. To stop the buzzer, close the driver's door.

? **The Stop & Start system protection function**

? When the volume of the audio system is excessively high, sound output from the audio system may suddenly be cut off in order to reduce battery consumption. To prevent the audio system from being cut off, keep the volume of audio system at a moderate level. If the audio system has been cut off, turn the engine switch off, wait for 3 seconds or more and then turn it to ACC or ON to re-enable the audio system.

? The audio system may not be activated if the battery terminals are disconnected and then reconnected. If this occurs, turn the engine switch off and then repeat the following operation twice to activate the audio system normally.

- Turn the engine switch to ON and then to off.

? **Replacing the battery**


→ P.607

? **If the Stop & Start cancel indicator flashes continuously**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

? **If "Stop & Start System Malfunction Visit Your Dealer" is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

 **WARNING**

? **When the Stop & Start system is operating**


Make sure to disable the Stop & Start system while the vehicle is in a poorly ventilated area. If not disabled, the engine may be automatically restarted unexpectedly, causing exhaust gases to collect and enter the vehicle, possibly resulting in death or a serious health hazard.

? Do not leave the vehicle while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on). An accident may occur due to the automatic engine start function.

? Depress the brake pedal and apply the parking brake when necessary while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on).

? Even though the driver's door is closed, the open door warning light is illuminated or the interior light is illuminated when the interior light switch is in the door position.

? Even though the driver's door is open, the open door warning light does not illuminate or the interior light does not illuminate when the interior light switch is in the door position.

 **NOTICE**

? **To ensure the system operates correctly**

If any of the following situations occur, the Stop & Start system may not operate correctly. Have your vehicle inspected by your Toyota dealer.

? While the driver's seat belt is fastened, the driver's and front passenger's seat belt reminder light flashes.

? Even though the driver's seat belt is not fastened, the driver's and front passenger's seat belt reminder light does not illuminate.

**BSM (Blind Spot Monitor)\***

\*: If equipped

**The Blind Spot Monitor is a system that uses rear side radar sensors installed on the inner side of the rear bumper on the left and right side to assist the driver for lane changing decision.**

**⚠ WARNING**


? **Cautions regarding the use of the system**

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the Blind Spot Monitor. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

**System components**

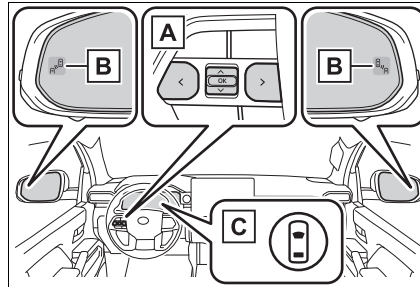

**A** Meter control switches

Turning the Blind Spot Monitor on/off.

**B** Outside rear view mirror indicators

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

**C** Driving assist information indicator

Illuminates when the Blind Spot Monitor is turned off. At this time, a message will be displayed on the multi-information display.

? **Outside rear view mirror indicator visibility**

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

? **Customization**

Some functions can be customized. (→P.651)

? **Certification**

→P.705


**! WARNING**

? **To ensure the system can operate properly**

Blind Spot Monitor sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can operate correctly.

? Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P.315) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by your Toyota dealer.

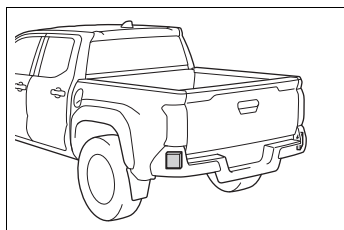

? Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc., to a sensor or its surrounding area on the rear bumper.

? Do not subject a sensor or its surrounding area on the rear bumper to a strong impact. If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly. In the following situations, have your vehicle inspected by your Toyota dealer.

- A sensor or its surrounding area is subject to a strong impact.
- If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.

? Do not disassemble the sensor.

? Do not modify the sensor or surrounding area on the rear bumper.

? If a sensor or the rear bumper needs to be removed/installed or replaced, contact your Toyota dealer.

? Do not paint the rear bumper any color other than an official Toyota color.

**Changing settings of the Blind Spot Monitor**

? **Setting the Blind Spot Monitor**

The Blind Spot Monitor can be enabled/disabled through a customize setting. (→P.651)

When the Blind Spot Monitor is off, the driving assist information indicator (→P.85) will illuminate and a message will be displayed on the multi-information display.

Each time the engine switch is

turned to ON, the Blind Spot Monitor is enabled.

? **Setting the trailer type**

Select “Trailer Settings” on the multi-information display and add a trailer according to the display. (→P.103, 112)

? **Auto Trailer Detection (ATD)**

Auto Trailer Detection (ATD) detects if a trailer is attached by using the Trailer Brake Controller (TBC) (if equipped) or the Blind Spot Monitor (BSM) sensors.

- ? Trailers that use TBC (if equipped) can be detected by using the 7-pin trailer brake connectors.
- ? Other types of trailers can be detected using the BSM sensors.
- ? When a trailer is detected via BSM or TBC (if equipped) then RCTA, PKSB (if equipped), RCD (if equipped) and Intuitive parking assist (if equipped) functions will be disabled.
- ? As soon as the trailer is detected via 7-pin trailer brake connector (if equipped) or in the case of detection via BSM the customer has confirmed a trailers is detected by pressing “YES” to meter pop-up then the detection area will be extended to a maximum length of approximately 50 ft. (15m) from the rear bumper of the truck.
- ? For trailer auto detection without engagement of 7-pin connector, the vehicle should be moving forward at speed of above 6 mph (10 km/h) for at least 10 seconds.
- ? ATD function is triggered at every engine switch on/off cycle, the vehicle is stopped and the shift lever is in P or N, or the parking brake is set for more than 90 seconds.
- ? Trailer detection via BSM sensors

may be delayed if the vehicle is in a crowded environment such as busy parking lot, area surrounded with trees (camping ground) or in an environment with objects in the immediate environment that prevent sensors from sufficiently detecting the trailer.

? **Trailer Length Detection (TLD)**

- ? Once a trailer is detected and if the trailer length in the meter is selected as “Auto”, the TLD function will estimate the trailer length using the Blind Spot Monitor sensors.

In order to estimate the trailer length with TLD function and detection area, make at least two 90 degree turns.

If the trailer length is entered manually via multi-information display input, the detection area is also adjusted to exceed the length of the trailer.

? **Trailer Merge Warning (TMW)**


- ? When towing a trailer, the blind spot system uses input from ATD and TLD to modify the detection zone to match the trailer. TMW will alert via the indicators of the outside mirror when a vehicle in an adjacent lane enters the modified detection zone.
- ? Depending on some combinations of trailer types, trailer dimensions, and bumper types TMW performance may be degraded.

**Blind Spot Monitor operation**

? **Vehicles that can be detected by the Blind Spot Monitor**


The Blind Spot Monitor uses rear side radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators on the outside rear view mirrors.

- When not towing a trailer

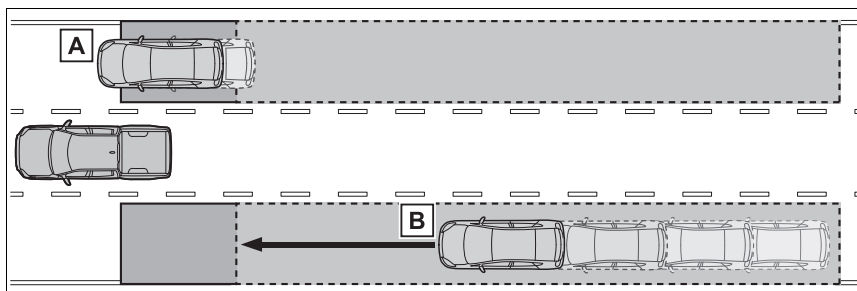

- A** Vehicles approaching in adjacent lanes that may not be visible using the outside rear view mirrors (the blind spots)
- B** Vehicles that are approaching rapidly in adjacent lanes that are not visible using the outside rear view mirrors (the blind spots)

- When towing a trailer

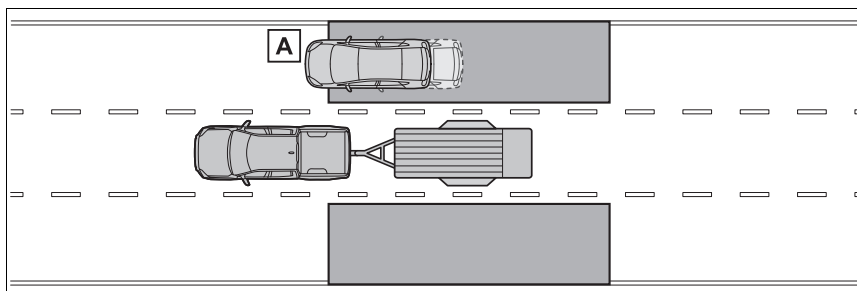


- A** Vehicles approaching in adjacent lanes that may not be visible using the outside rear view mirrors (the blind spots)

? **The Blind Spot Monitor detection areas**

The areas that vehicles can be detected in are outlined below.


- When not towing a trailer

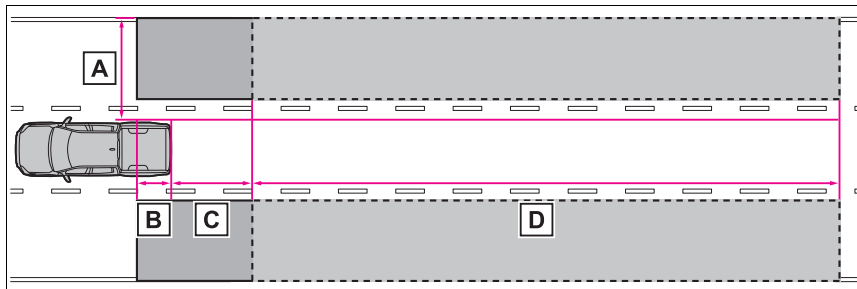

The range of each detection area is:

- A** Approximately 1.6 ft. (0.5 m) to 11.5 ft. (3.5 m) from either side of the vehicle<sup>\*1</sup>
- B** Approximately 3.3 ft. (1 m) forward of the rear bumper
- C** Approximately 9.8 ft. (3 m) from the rear bumper
- D** Approximately 9.8 ft. (3 m) to 197 ft. (60 m) from the rear bumper<sup>\*2</sup>

- When towing a trailer

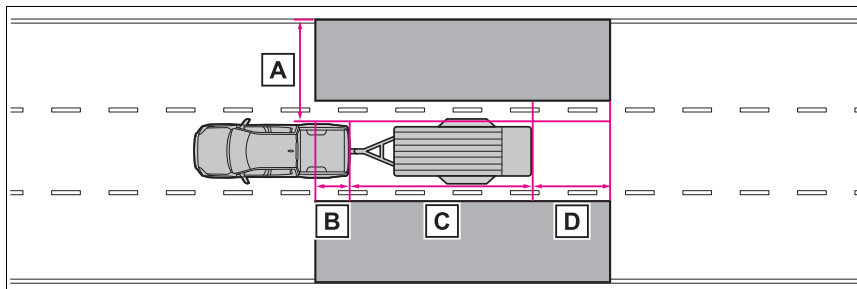

The range of each detection area is:

- A** Approximately 1.6 ft. (0.5 m) to 11.5 ft. (3.5 m) from either side of the vehicle<sup>\*1</sup>
- B** Approximately 3.3 ft. (1 m) forward of the rear bumper
- C** Trailer overall length<sup>\*3</sup>
- D** Approximately 9.8 ft. (3 m) from the rear end of trailer<sup>\*3</sup>

- \*1: The area between the side of the vehicle and 1.6 ft. (0.5 m) from the side of the vehicle cannot be detected.
- \*2: The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash.
- \*3: The system is designed to support utility and boat trailers up to 8.5 ft. (2.59 m) wide, most enclosed type trailer types up to 8 ft. (2.46 m) wide, and trailers no longer than 39 ft. (12.0 m). For wider trailers and/or trailers with shorter tongues lengths the indicator warning in the outer mirror may be delayed.

? **The Blind Spot Monitor linked function**

The LDA (Lane Departure Alert) has a function that uses information of detected vehicles driving in an adjacent lane. For details about the function and its operating conditions, P.268.

? **The Blind Spot Monitor is operational when**

The Blind Spot Monitor is operational when all of the following conditions are met:

- ? The engine switch is in ON.
- ? The Blind Spot Monitor is on.
- ? The shift position is in a position other than R.
- ? The vehicle speed is greater than approximately 6 mph (10 km/h).

? **The Blind Spot Monitor will detect a vehicle when**

The Blind Spot Monitor will detect a vehicle present in the detection area in the following situations:

- ? A vehicle in an adjacent lane overtakes your vehicle.
- ? You overtake a vehicle in an adjacent lane slowly.
- ? Another vehicle enters the detection area when it changes lanes.

? **Conditions under which the system will not detect a vehicle**

The Blind Spot Monitor is not designed to detect the following types of vehicles and/or objects:

- ? Small motorcycles, bicycles,

pedestrians, etc.\*

- ? Vehicles traveling in the opposite direction
- ? Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- ? Following vehicles that are in the same lane\*
- ? Vehicles traveling 2 lanes away from your vehicle\*
- ? Vehicles which are being overtaken rapidly by your vehicle\*

\*: Depending on the conditions, detection of a vehicle and/or object may occur.

? **Conditions under which the system may not function correctly**

- ? The Blind Spot Monitor may not detect vehicles correctly in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the rear bumper
  - When driving on a road surface that is wet with standing water



- during bad weather, such as heavy rain, snow, or fog
- When multiple vehicles are approaching with only a small gap between each vehicle
  - When the distance between your vehicle and a following vehicle is short
  - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
  - When the difference in speed between your vehicle and another vehicle is changing
  - When a vehicle enters a detection area traveling at about the same speed as your vehicle
  - As your vehicle starts from a stop, a vehicle remains in the detection area
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
  - When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
  - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
  - Immediately after the Blind Spot Monitor is turned on
- ? Instances of the Blind Spot Monitor unnecessarily detecting a vehicle and/or object may increase in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When the tires are slipping or spinning
  - When the distance between your vehicle and a following vehicle is short
  - When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
  - When turning at an intersection with a trailer is being towed and an adjacent vehicle continues traveling straight


**Intuitive parking assist\***

\*: If equipped

**The intuitive parking assist function detects the approximate distance from the vehicle and an object such as a wall using ultrasonic sensors and informs the driver with the multimedia display distance display and buzzer.**

**System components**

? **Type of sensors**

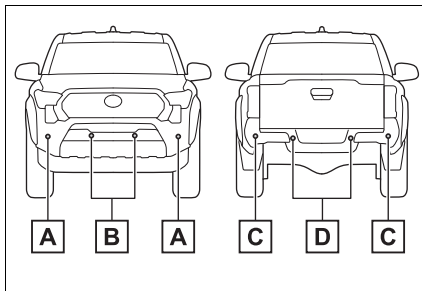

- A** Front corner sensors
- B** Front center sensors
- C** Rear corner sensors
- D** Rear center sensors


? **Display**

When the sensors detect an object, such as a wall, a graphic is shown on the multimedia display depending on the position and distance to the object.

The illustration is an example for

explanation and may differ depending on the specifications.

- Multimedia display

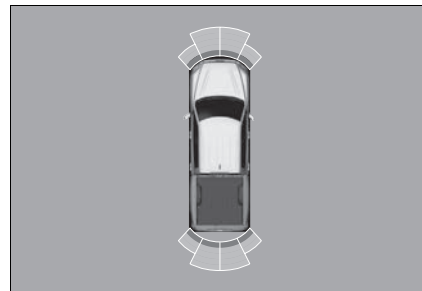

? **Intuitive parking assist detection indicator\***

When the sensors detect an object, intuitive parking assist detection indicator illuminates.

\*: If equipped

? **How to check the presence of intuitive parking assist detection indicator**

On vehicles with the intuitive parking assist detection indicator, the intuitive parking assist OFF indicator (→P.317) will turn off when the shift position is changed to R while the intuitive parking assist is disabled.

**Turning the intuitive parking assist function ON/OFF**

The intuitive parking assist function can be enabled/disabled through a customize setting. (→P.652)

When the intuitive parking assist function is disabled, the intuitive parking assist OFF indicator (→P.85) illuminates on the multi-

information display.

If the system switches to OFF (disabled) and the intuitive parking assist is stopped, the intuitive parking assist will not be re-enabled until ON (enabled) is selected again from the customize setting (→P.652).

(It remains off even if the engine switch is turned to ON again after the engine switch has been turned off.)

Vehicles with intuitive parking assist detection indicator: The system will automatically turn on (enabled) and the intuitive parking assist OFF indicator will turn off if the shift position is changed to R.

When the shift position is R, the intuitive parking assist cannot be turned on or off. The setting of intuitive parking assist itself will not change.

#### ? **When towing a trailer**

- ? When Auto Trailer Detection (ATD) (→P.312) is activated, rear sensor turns off.
- ? When the shift position is in R, the intuitive parking assist OFF indicator (→P.85) turns on and a message is displayed in the multi-information display.
- ? If a camera malfunction occurs while the trailer is connected, there may be cases where the notification message that indicates intuitive parking assist, RCD (if equipped), or PKSB (if equipped) is OFF may not be displayed.

#### **WARNING**

##### ? **Cautions regarding the use of the system**

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

##### ? **To ensure the system can operate properly**

Make sure to observe the following precautions. The system may not operate properly and may lead to an unexpected accident. When these precautions cannot be observed, turn the system off.

- ? Do not damage the sensors, and always keep them clean.
- ? Do not attach a sticker or install a component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna near a radar sensor.
- ? Do not subject the surrounding area of the sensor to a strong impact. If subjected to an impact, have the vehicle inspected by your Toyota dealer. If the front or rear bumper needs to be removed/installed or replaced, contact your Toyota dealer.
- ? Do not modify, disassemble or paint the sensors.
- ? Do not attach a license plate cover.
- ? Keep your tires properly inflated.
- ? Do not install a suspension other than a genuine suspension.

**⚠ WARNING**

? **Notes when washing the vehicle**

? When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction.

? When using steam to clean the vehicle, do not direct steam too close to the sensors, as doing so may cause a sensor to malfunction.

- ? **The system can be operated when**
- ? The engine switch is in ON.
  - ? The intuitive parking assist is on.
  - ? The vehicle speed is less than about 6 mph (10 km/h).
  - ? Front corner sensors:
    - The shift position is in a position other than P. (vehicles with automatic transmission)
    - The parking brake is released. (vehicles with manual transmission)
  - ? Front center sensors:
    - The shift position is in a position other than P or R. (vehicles with automatic transmission)
    - The parking brake is released, and the shift position is in a position other than R. (vehicles with manual transmission)
  - ? Rear corner and rear center sensors:
    - The shift position is in R.
- Vehicles with the intuitive parking assist detection indicator: Even when the intuitive parking assist is turned off (disabled), if the shift position is changed to R, the system will automatically turn on (enabled) and the intuitive parking assist OFF indicator will turn off.

- The setting of the intuitive parking assist itself will not change.
- ? **Sensor detection information**
- ? The sensor's detection areas are limited to the areas around the vehicle's front and rear bumpers.
  - ? Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an object.
  - ? Objects may not be detected if they are too close to the sensor.
  - ? There will be a short delay between object detection and display.

Even at low speeds, there is a possibility that the object will come within the sensor's detection areas before the display is shown and the warning beep sounds.

- ? It might be difficult to hear the buzzer due to the volume of the audio system or air flow noise of the air conditioning system.
- ? It may be difficult to hear the sound of this system due to the buzzers of other systems.
- ? If the meter malfunctions, the buzzer may not sound.

? **Objects which the system may not be properly detected**

The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:

- ? Wires, fences, ropes, etc.
- ? Cotton, snow and other materials that absorb sound waves
- ? Sharply-angled objects
- ? Low objects
- ? Tall objects with upper sections projecting outwards in the direction of your vehicle


People may not be detected if they are wearing certain types of cloth-

ing.

? **Situations in which the system may not operate properly**

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- ? There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- ? A sensor is frozen. (Thawing the area will resolve this problem.) In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.
- ? When a sensor or the area around a sensor is extremely hot or cold.

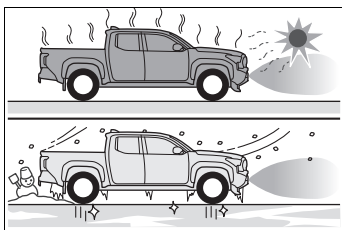

- ? On an extremely bumpy road, on an incline, on gravel, or on grass.
- ? When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- ? A sensor is coated with a sheet of spray or heavy rain.
- ? If objects draw too close to the sensor.
- ? When a pedestrian is wearing clothing that does not reflect ultrasonic waves (ex. skirts with gathers or frills).
- ? When objects that are not perpendicular to the ground, not perpendicular to the vehicle traveling


direction, uneven, or waving are in the detection range.

- ? When strong winds are blowing
- ? When driving in inclement weather such as fog, snow or a sandstorm
- ? When an object that cannot be detected is between the vehicle and a detected object
- ? If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle
- ? If the orientation of a sensor has been changed due to a collision or other impact
- ? When equipment such as a towing eyelet, transport hook, bumper protector, bumper trim, bicycle carrier or snow-removal device (snow plow) is installed near the sensor
- ? If the front of the vehicle is raised or lowered due to the carried load
- ? If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- ? When tire chains, compact spare tire or an emergency tire puncture repair kit are used
- ? When towing with the vehicle
- ? When the tailgate is opened


? **Situations in which the system may operate even if there is no possibility of a collision**

In some situations, such as the following, the system may operate even though there is no possibility of a collision.


- ? When driving on a narrow road

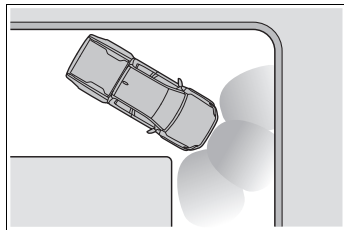

- ? When driving toward a banner, flag, low-hanging branch or boom barrier (such as those used at rail-road crossings, toll gates and parking lots)
- ? When there is a rut or hole in the surface of the road
- ? When driving on a metal cover (grating), such as those used for drainage ditches
- ? When driving up or down a steep slope
- ? If a sensor is hit by a large amount of water, such as when driving on a flooded road
- ? There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- ? A sensor is coated with a sheet of spray or heavy rain
- ? When driving in inclement weather such as fog, snow or a sandstorm
- ? When strong winds are blowing

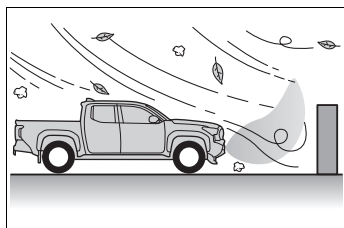


- ? When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- ? If the front of the vehicle is raised or lowered due to the carried load
- ? If the orientation of a sensor has been changed due to a collision or other impact
- ? The vehicle is approaching a tall or curved curb
- ? Driving close to columns (H-shaped steel beams, etc.) in multi-story parking garages, construction sites, etc.
- ? If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- ? On an extremely bumpy road, on an incline, on gravel, or on grass

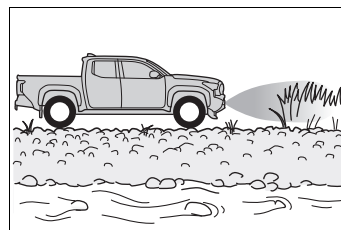

- ? When tire chains, compact spare tire or an emergency tire puncture repair kit are used
- ? When towing with the vehicle
- ? When the tailgate is opened.
- ? **When towing a trailer**  
Rear sensors turn off when the trailer connection is detected. When reversing, the rear sensors turn off, but the front corner sensors operate.
- ? **Certification**  
→P.706

**Sensor detection display, object distance**

? **Detection range of the sensors**

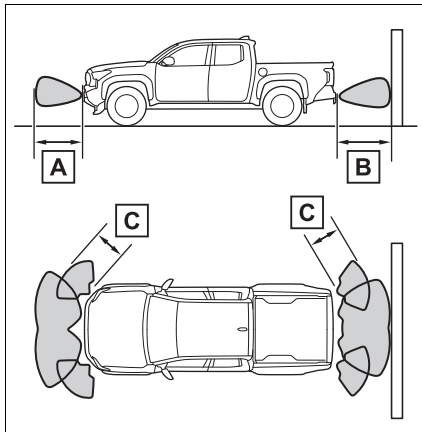

- A Approximately 3.3 ft. (100 cm)
- B Approximately 4.9 ft. (150 cm)
- C Approximately 2.0 ft. (60 cm)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect objects that are extremely close to the vehicle. The range of the sensors may change depending on the shape of the object, etc.

? **The distance and buzzer**

Approximate distance to obstacle	Buzzer
Front center sensor: Approximately 3.3 ft. (100 cm) to 2.0 ft. (60 cm)* Rear center sensor: Approximately 4.9 ft. (150 cm) to 2.0 ft. (60 cm)*	Slow
Approximately 2.0 ft. (60 cm) to 1.5 ft. (45 cm)*	Medium
Approximately 1.5 ft. (45 cm) to 1.0 ft. (30 cm)*	Fast
Approximately less than 1.0 ft. (30 cm)	Continuous

\*: Automatic buzzer mute function is enabled. (→P.323)

### Intuitive parking assist buzzer

A buzzer sounds when the sensors are operating.

- The buzzer beeps faster as the vehicle approaches a static object. When the vehicle comes within the approximately 1.0 ft. (30 cm) of the object, the buzzer will sound continuously.
- When 2 or more sensors simultaneously detect a static object, the buzzer sounds for the nearest object.
- After an intermittent buzzer begins sounding, if the distance between the vehicle and the detected static object does not become shorter, the buzzer will be muted automatically. (automatic buzzer mute function)

- changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the engine switch is turned off.

#### ? Adjusting the buzzer volume

The buzzer volume of the intuitive parking assist, RCTA and RCD (if equipped) can all be changed at once from the customize settings. (→P.652)

#### ? Muting a buzzer

When the temporary mute switch is displayed on the multimedia display, this switch can be pressed to temporarily mute the buzzer.

Select the switch to mute a buzzer of the intuitive parking assist, RCTA and RCD (if equipped) all together.

? Mute will be automatically canceled in the following situations:

- When the shift position is



**RCTA (Rear Cross Traffic Alert)\***

\*: If equipped

The RCTA function uses the BSM rear side radar sensors installed behind the rear bumper. This function is intended to assist the driver in checking areas that are not easily visible when backing up.

**WARNING**


? **Cautions regarding the use of the system**

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely. (→P.310)

? **To ensure the system can operate properly**

→P.311

**System components**

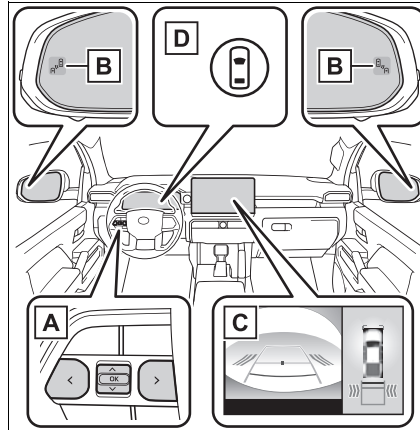

**A** Meter control switches

Operate the meter control switches to enable/disable the RCTA function on the multi-information display.

**B** Outside rear view mirror indicators

If a vehicle is detected as approaching from the left or right behind the vehicle, both outside rear view mirror indicators (→P.85) will blink and a buzzer will sound.

**C** Multimedia display

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P.325) for the detected side will be displayed on the multimedia display. This illustration shows an example of a vehicle approaching from both sides of the vehicle.

**D** Driving assist information indicator

Illuminates when the RCTA is turned off. At this time, a message

will be displayed on the multi-information display.

**Turning the RCTA function on/off**

The RCTA can be enabled/disabled through a customize setting. (→P.652)

When the RCTA function is off, the driving assist information indicator (→P.85) will illuminate and a message will be displayed on the multi-information display. Each time the engine switch is turned to ON, the RCTA function is enabled.

? **When towing a trailer**

When Auto Trailer Detection (ATD) (→P.312) is activated, the function automatically turns off.

? **Outside rear view mirror indicator visibility**

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

? **Hearing the RCTA buzzer**

The RCTA buzzer may be difficult to hear over loud noises, such as high audio volume.

? **Radar sensors**


→P.311

**RCTA function**

? **Operation of the RCTA function**

The RCTA function uses radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence

of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

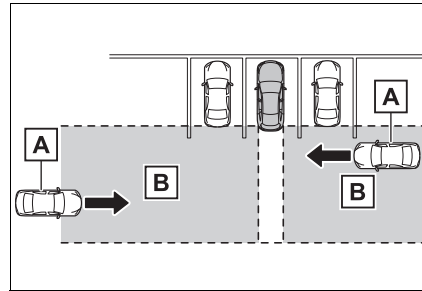


- A** Approaching vehicles
- B** Detection areas of approaching vehicles

? **RCTA icon display**


When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the multimedia display.

This illustration shows an example of a vehicle approaching from both sides of the vehicle.

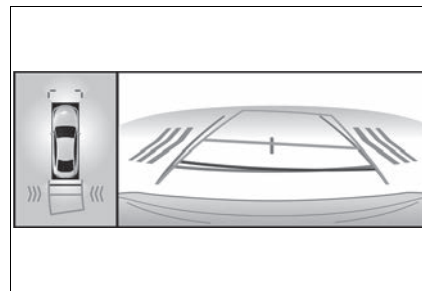

? **RCTA function detection areas**

The areas that vehicles can be detected in are outlined below.

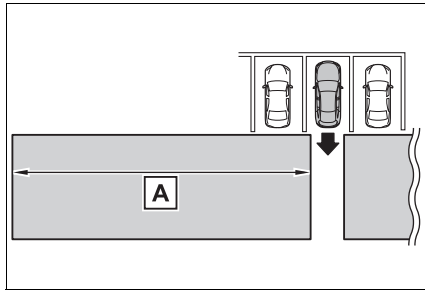

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

Approaching vehicle speed	A Approximate alert distance
34 mph (56 km/h) (fast)	98 ft. (30 m)
5 mph (8 km/h) (slow)	13 ft. (4 m)

? **The RCTA function is operational when**

The RCTA function operates when all of the following conditions are met:

- ? The engine switch is in ON.
- ? The RCTA function is on.
- ? The shift position is in R.
- ? The vehicle speed is less than approximately 9 mph (15 km/h).
- ? The approaching vehicle speed is between approximately 5 mph (8 km/h) and 34 mph (56 km/h).
- ? The 7-pin connector for Trailer

Brake controller is not engaged (if equipped) or when trailer is not detected using the Blind Spot Monitor (BSM) sensors.

? **Adjusting the buzzer volume**

The buzzer volume of the RCTA, Intuitive parking assist (if equipped), and RCD (if equipped) can be adjusted all together through a customize setting. (→P.652)

? **Muting a buzzer temporarily**

When an object is detected, the temporary mute switch is displayed on the multimedia display.

Select the switch to mute the buzzer of the Intuitive parking assist (if equipped), RCTA, and RCD (if equipped) all together.


Mute will be canceled automatically in the following situations:

- ? When the shift lever is changed.
- ? When the vehicle speed exceeds a certain speed.
- ? When there is a malfunction in a sensor or the system is temporarily unavailable.
- ? When the operating function is disabled manually.
- ? When the engine switch is turned off.

? **Conditions under which the system will not detect a vehicle**

The RCTA function is not designed to detect the following types of vehicles and/or objects:

- ? Vehicles approaching from directly behind
- ? Vehicles backing up in a parking space next to your vehicle
- ? Vehicles that the sensors cannot detect due to obstructions

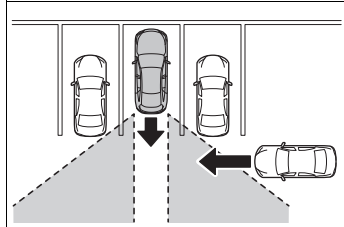

- ? Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- ? Small motorcycles, bicycles, pedestrians, etc.\*
- ? Vehicles moving away from your vehicle
- ? Vehicles approaching from the parking spaces next to your vehicle\*
- ? The distance between the sensor and approaching vehicle gets too close

\*: Depending on the conditions, detection of a vehicle and/or object may occur.


? **Situations in which the system may not operate properly**

The RCTA function may not detect vehicles correctly in the following situations:


- ? When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- ? When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the position above the rear bumper
- ? When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
- ? When multiple vehicles are approaching with only a small gap between each vehicle
- ? When a vehicle is approaching at high speed
- ? When equipment that may

obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow

? When backing up on a slope with a sharp change in grade

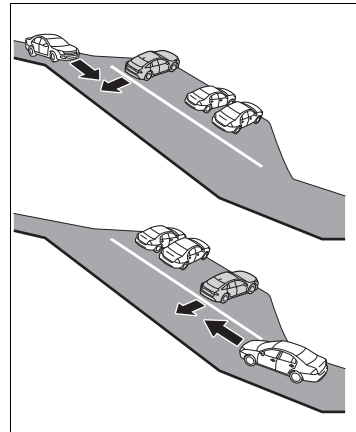


- ? When backing out of a sharp angle parking spot

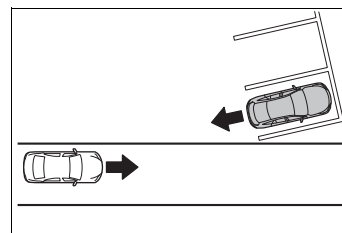


- ? Immediately after the RCTA function is turned on
- ? When the sensors cannot detect a vehicle due to obstructions
- ? Immediately after the engine is started with the RCTA function on
- ? When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- ? When a sensor or the area around a sensor is extremely hot or cold
- ? If the suspension has been modified or tires of a size other than specified are installed
- ? If the front of the vehicle is raised

or lowered due to the carried load

? When turning while backing up

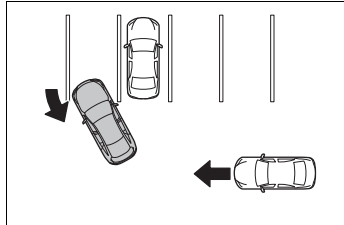


? When a vehicle turns into the detection area

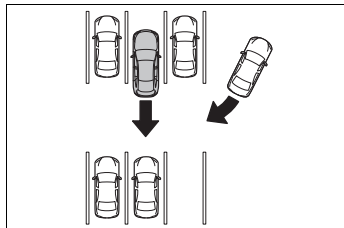


? **Situations in which the system may operate even if there is no possibility of a collision**

Instances of the RCTA function unnecessarily detecting a vehicle and/or object may increase in the following situations:

? When the parking space faces a street and vehicles are being driven on the street

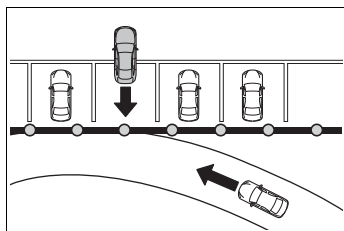


? When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

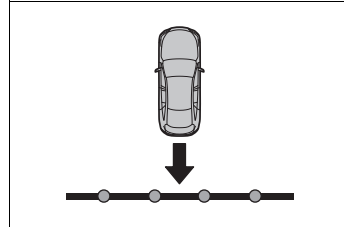


? When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow

? When a vehicle passes by the side of your vehicle

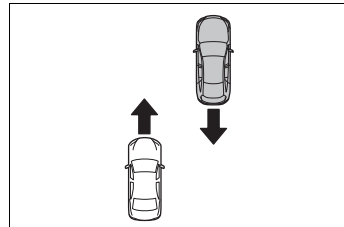

? When a detected vehicle turns while approaching the vehicle

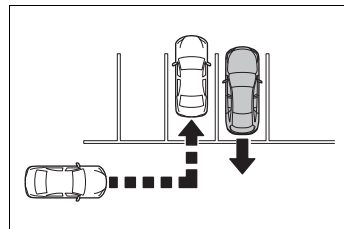

? When there are spinning objects near your vehicle such as the fan of an air conditioning unit

? When water is splashed or sprayed toward the rear bumper, such as from a sprinkler

? Moving objects (flags, exhaust fumes, large rain droplets or snowflakes, rain water on the road surface, etc.)

? When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short

? Gratings and gutters

- ? When a sensor or the area around a sensor is extremely hot or cold
- ? If the suspension has been modified or tires of a size other than specified are installed
- ? If the front of the vehicle is raised or lowered due to the carried load

### RCD (Rear Camera Detection)\*

\*: If equipped

**When the vehicle is backing up, the rear camera detection function can detect pedestrians in the detection area behind the vehicle. If a pedestrian is detected, a buzzer will sound and an icon will be displayed on the multimedia display to inform the driver of the pedestrian.**



#### WARNING

##### ? Cautions regarding the use of the system

The recognition and control capabilities for this system are limited.

The driver should always drive safely by always being responsible without over relying on the system and have a understanding of the surrounding situations.

##### ? To ensure the system can operate properly

Observe the following, otherwise there is the danger that could lead to an accident.

? Always clean the camera without damaging it.


? Do not install market parts (such as illuminated license plate, fog lamps, etc.) in the camera vicinity.

**⚠ WARNING**


- ? Do not subject the camera vicinity to strong impacts. If the vicinity is subjected to a strong impact, have the vehicle inspected by your Toyota dealer.
- ? Do not disassemble, remodel or paint the camera.
- ? Do not attach accessories or stickers to the camera.
- ? Do not install market protection parts (bumper trim, etc.) to the rear bumper.
- ? Maintain suitable tire air pressure.
- ? Make sure the tailgate is completely closed.
- ? **When to disable the RCD function**  
In the following situations, disable the system. The RCD function may not operate properly, possibly leading to an accident.
- ? The contents mentioned above are not observed.
- ? Suspensions other than the genuine parts are installed.

**System component**

Location of the rear camera

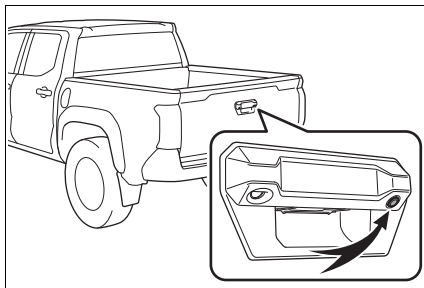

**RCD display**

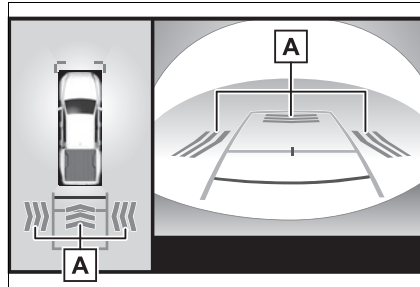

**A Pedestrian detection icon**

Displayed automatically when a pedestrian is detected behind the vehicle.

**Turning the RCD function on/off**

The RCD function can be enabled/disabled through a customize setting. (→P.652)


When the RCD function is disabled, the driving assist information indicator (→P.85) illuminates, and a message is displayed on the multi-information display.

Each time the engine switch is turned off then changed to ON, the RCD function will be enabled automatically.

**When a pedestrian is detected**

If a pedestrian is in the area behind the vehicle or if the rear camera detected that a pedestrian is approaching the vehicle from behind, the system urges caution from the driver by

sounding the buzzer and displaying the detection of a pedestrian on the multimedia display as follows:

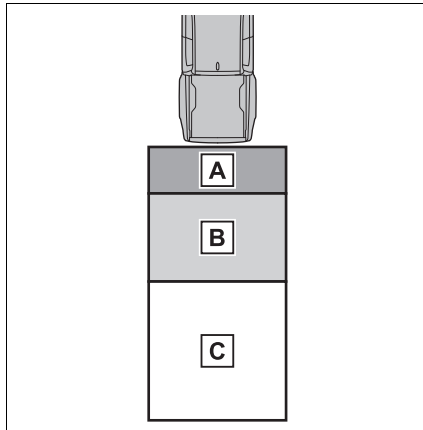

**A** If a pedestrian is detected in

area **A**

Buzzer: Sounds repeatedly  
Pedestrian detection icon:  
Blinks

**B** If a pedestrian is detected in

area **B**

Buzzer (When the vehicle is stationary): Sounds 3 times  
Buzzer (When the vehicle is backing up, when a pedestrian approaches the rear of the vehicle): Sounds repeatedly

Pedestrian detection icon:  
Blinks

**C** If the system determines that your vehicle may collide with

a pedestrian in area **C**

Buzzer: Sounds repeatedly  
Pedestrian detection icon:

### Blinks

#### ? **When towing a trailer**

- ? When Auto Trailer Detection (ATD) (→P.312) is activated, the function turns off.
- ? When the shift position is in R, the intuitive parking assist OFF indicator (→P.85) turns on and a message is displayed in the multi-information display.

If a camera malfunction occurs while the trailer is connected, there may be cases where the notification message that indicate intuitive parking assist, RCD, or PKSB is OFF may not be displayed.

#### ? **The rear camera detection function is operational when**

- ? The engine switch is in ON.
- ? RCD function is on.
- ? The shift position is in R.

#### ? **Setting the buzzer volume**

The buzzer volume of the intuitive parking assist, RCTA, and RCD can all be changed at once from the customize settings. (→P.652)

#### ? **Muting a buzzer temporarily**

When an object is detected, the temporary mute switch is displayed on the multimedia display system. Select the switch to mute a buzzer of the intuitive parking assist, RCTA, and RCD all together.

Mute will be automatically canceled in the following situations:

- ? When the shift position is changed.
- ? When the vehicle speed exceeds a certain speed.
- ? When there is a malfunction in a sensor or the system is temporarily unavailable.
- ? When the operating function is disabled manually.



- ? When the engine switch is turned off.
- ? **Situations in which the system may not operate properly**
- ? Some pedestrians, such as the following, may not be detected by the rear camera detection function, preventing the function from operating properly:
  - Pedestrians who are bending forward or squatting
  - Pedestrians who are lying down
  - Pedestrians who are running
  - Pedestrians who suddenly appear from the shadow of the vehicle or a building
  - Pedestrians who are riding moving objects such as a bicycle or skateboard
  - Pedestrians wearing oversized clothing such as a rain coat, long skirt, etc., making their silhouette obscure
  - Pedestrians whose body is partially hidden by an object, such as a cart or umbrella
  - Pedestrians which are obscured by darkness, such as at night
- ? In some situations, such as the following, pedestrians may not be detected by the rear camera detection function, preventing the function from operating properly:
  - When backing up in inclement weather (rain, snow, fog, etc.)
  - The lens is dirty (by dirt or snow-melting agent, etc.) or scratched
  - When a very bright light, such as the sun, or the headlights of another vehicle, shines directly into the rear camera
  - When backing up in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a garage or underground parking lot
  - When backing up in a dim environment such as during dusk or in an underground parking lot
  - When the camera position and direction are deviated
  - When a towing hook is attached
  - When water droplets are flowing on the camera lens
- When the vehicle height is extremely changed (nose up, nose down, etc.)
- When tire chains or an emergency tire puncture repair kit are used
- When the suspension has been lowered or tires that have a different size than the genuine tires are installed
- When an aftermarket part (backlit license plate, fog light, etc.) is installed near the rear camera
- If a bumper protector, such as an additional trim strip, is installed to the rear bumper
- When towing with the vehicle
- ? **Situations in which the system may operate unexpectedly**
- ? Even though there are no pedestrians in the detection area, some objects, such as the following, may be detected, possibly causing the rear camera detection function to operate.
  - Three dimensional objects, such as a pole, traffic cone, fence, or parked vehicle
  - Moving objects, such as a car or motorcycle
  - Objects moving toward your vehicle when backing up, such as flags or puddles (or airborne matter, such as smoke, steam, rain, or snow)
  - Cobblestone or gravel roads, tram rails, road repairs, white lines, pedestrian crossings or fallen leaves on the road
  - Metal covers (gratings), such as those used for drainage ditches
  - Objects reflected in a puddle or on a wet road surface
  - Shadows on the road
- ? In some situations, such as the following, the rear camera detection function may operate even though there are no pedestrians in the detection area.
  - When backing up toward the roadside or a bump on the road
  - When backing up toward an incline/decline

- When the vehicle height is extremely changed (nose up, nose down, etc.)
  - When an aftermarket part (backlit license plate, fog light, etc.) is installed near the rear camera
  - If a bumper protector, such as an additional trim strip, is installed to the rear bumper
  - If the orientation of the rear camera has been changed due to a collision or other impact, or removal and installation
  - If a towing eyelet is installed to the rear of the vehicle
  - When water is flowing over the rear camera lens
  - The lens is dirty (by dirt or snow-melting agent, etc.)
  - If there is a flashing light in the detection area, such as the emergency flashers of another vehicle
  - When tire chains or an emergency tire puncture repair kit are used
  - When towing with the vehicle
- ? Situations in which the rear camera detection function may be difficult to notice
- The buzzer may be difficult to hear if the surrounding area is noisy or the audio system volume is high.
  - If the temperature in the cabin is extremely high or low, the multimedia display may not operate correctly.

### PKSB (Parking Support Brake)\*

\*: If equipped

**The PKSB (Parking Support Brake) is a system that issues warnings and automatically performs braking to help reduce collision damage with operation targets that were detected when traveling at a low speed such as when parking.**

### PKSB (Parking Support Brake) system

The system has detected the following as operation targets. (The operation targets vary depending on the function.)

- Parking Support Brake function (static objects front and rear of the vehicle): →P.338
- Parking Support Brake function (moving vehicles rear of the vehicle): →P.341
- Parking Support Brake function (pedestrians rear of the vehicle) (if equipped): →P.342

**WARNING****? Cautions regarding the use of the system**

Do not overly rely on the system, as doing so may lead to an accident.

Always drive while checking the safety of the surroundings of the vehicle.

Depending on the vehicle and road conditions, weather, etc., the system may not operate.

The detection capabilities of sensors and radars are limited. Always drive while checking the safety of the surroundings of the vehicle.

? The driver is solely responsible for safe driving. Always drive carefully, taking care to observe your surroundings. The Parking Support Brake system is designed to provide support to lessen the severity of collisions. However, it may not operate in some situations.

? The Parking Support Brake system is not designed to stop the vehicle completely. Additionally, even if the system has stopped the vehicle, it is necessary to depress the brake pedal immediately as brake control will be canceled after approximately 2 seconds.

? It is extremely dangerous to check the system operations by intentionally driving the vehicle into the direction of a wall, etc. Never attempt such actions.

**? When to disable the Parking Support Brake**

In the following situations, disable the Parking Support Brake as the system may operate even though there is no possibility of a collision.

? When inspecting the vehicle using a chassis roller, chassis dynamo or free roller

? When loading the vehicle onto a boat, truck or other transport vessel

? If the suspension has been modified or tires of a size other than specified are installed

? If the front of the vehicle is raised or lowered due to the carried load

? When equipment such as a towing hook, transport hook, bumper protector, bumper trim, bicycle carrier or snow-removal device (snow plow) is installed near the sensor

? When using automatic car washing devices

? If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning

? When the vehicle is driven in a sporty manner or off-road

? When the tires are not properly inflated

? When the tires are very worn

? When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.

? When towing with the vehicle

**? Precautions for the suspension**

Do not modify the suspension of the vehicle. If the height or tilt of the vehicle is changed, the sensors may not be able to detect detectable objects and the system may not operate correctly, possibly leading to an accident.

**Enabling/Disabling the Parking Support Brake**

The Parking Support Brake function can be enabled/disabled through a customize setting. (→P.652)

When the PKSB (Parking Support Brake) is disabled, the driving assist information indicator (→P.85) illuminates, and a message is displayed on the multi-information display.

If the PKSB (Parking Support Brake) is switched to OFF (disabled), the system will not be re-enabled until ON (enabled) is selected again from the customize setting (→P.652).

(It remains off even if the engine switch is turned to ON again after the engine switch has been turned off.)

**? When the four-wheel drive control switch is in “4L” (4WD models)**

The Parking Support Brake function automatically turns off.

**? When towing a trailer**

? When Auto Trailer Detection (ATD) (→P.312) is activated, the function turns off.

? When the shift position is in R, the intuitive parking assist OFF indicator (→P.85) turns on and a message is displayed in the multi-information display.

? If a camera malfunction occurs while the trailer is connected, there may be cases where the notification message that indicates Intuitive Parking Assist,

RCD (if equipped), or PKSB is OFF may not be displayed.

? When Trailer brake controller (TBC) detects 7-pin trailer brake connectors (if equipped), or when other types of trailers are detected by the Blind Spot Monitor sensor and approved by the driver, the PKSB (Parking Support Brake) turns off in the rear only.

**Display and buzzer for engine output restriction control and brake control**

If the engine output restriction control or brake control operates, a buzzer will sound and a message that indicates limited acceleration or prompts the driver to brake will be displayed on the multimedia display and multi-information display, to alert the driver.

Depending on the situation, output restriction control operates to either limit acceleration or restrict output as much as possible.

- Engine output restriction control is operating (acceleration restriction)

Acceleration greater than a certain amount is restricted by the system.

Multimedia display: No warning displayed

Message example on the multi-information display: “Object Detected Acceleration Reduced”

Driving assist information indicator: Not illuminated

Buzzer: Does not sound

- Engine output restriction control is operating (output restricted as much as possible)

The system has determined that stronger-than-normal brake operation is necessary.

Message example on the multimedia display (vehicles with panoramic view monitor and multi-terrain monitor): "BRAKE!"

Message example on the multi-information display: "BRAKE!"

Driving assist information indicator: Not illuminated

Buzzer: Short beep

- Brake control is operating

The system determined that emergency braking is necessary.

Message example on the multimedia display (vehicles with panoramic view monitor and multi-terrain monitor): "BRAKE!"

Message example on the multi-information display: "BRAKE!"

Driving assist information indicator: Not illuminated

Buzzer: Short beep

- Vehicle stopped by system operation

The vehicle has been stopped by brake control operation.

Message example on the multimedia display (vehicles with panoramic view monitor and

multi-terrain monitor): "Switch to Brake"

Message example on the multi-information display: "Accelerator Pedal is Pressed Press Brake Pedal", "Press Brake Pedal"

Driving assist information indicator: Illuminated


Buzzer: Sounds repeatedly

### System overview

If the Parking Support Brake determines that a collision with a detected object or pedestrian (if equipped) is possible, the engine output will be restricted to restrain any increase in the vehicle speed. (engine output restriction control: See figure 2 below.)


Additionally, if the accelerator pedal continues to be depressed, the brakes will be applied automatically to reduce the vehicle speed. (Brake control: See figure 3.)

- Figure 1: When the PKSB (Parking Support Brake) is not operating

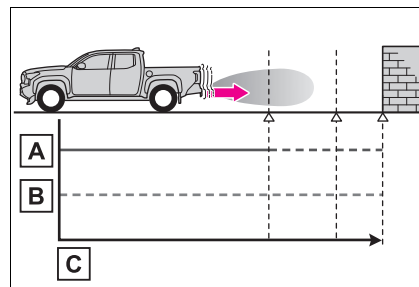


- A** Engine output
- B** Braking force
- C** Time

● Figure 2: When engine output restriction control operates

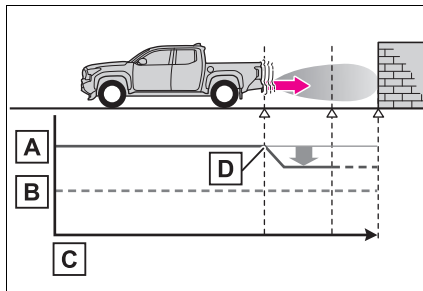

- A** Engine output
- B** Braking force
- C** Time
- D** Engine output restriction control begins operating (System determines that possibility of collision with detected object is high)

● Figure 3: When engine output restriction control and brake control operates

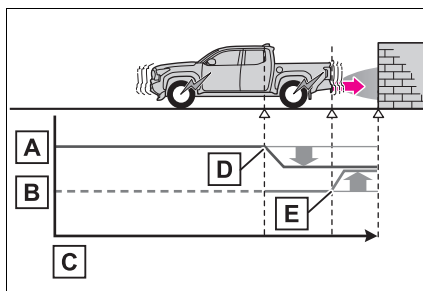

- A** Engine output

- B** Braking force
- C** Time
- D** Engine output restriction control begins operating (System determines that possibility of collision with detected object is high)
- E** Brake control begins operating (System determines that possibility of collision with detected object is extremely high)

? **If the Parking Support Brake has operated**

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the driving assist information indicator will illuminate. In addition, even when the PKSB (Parking Support Brake) operates, the brake control is canceled after approximately 2 seconds to start off. Furthermore, the brake control also can be canceled by depressing the brake pedal. Depressing the accelerator pedal again after that allows the vehicle to start off.

? **Re-enabling the Parking Support Brake**

To re-enable the Parking Support Brake when it is disabled due to operation of the PKSB (Parking Support Brake), either enable the system again (→P.335), or turn the engine switch off and then back to ON.

Additionally, if any of the following conditions are met, the system will be re-enabled automatically and the driving assist information indicator will turn off (→P.85):

- ? The P shift position is selected
- ? Drive with no operation targets in

the traveling direction of the vehicle

? Change the traveling direction of the vehicle

? **Buzzer**

Regardless of whether the intuitive parking assist is enabled or not (→P.317), if the PKSB (Parking Support Brake) system is enabled (→P.335), the buzzer will sound to notify the driver of the approximate distance to the object when the brake control and the engine output restriction control are operated.

**Parking Support Brake function (static objects front and rear of the vehicle)\***


\*: If equipped

**If the sensors detect a static object, such as a wall, in the traveling direction of the vehicle and the system determines that a collision may occur due to the vehicle suddenly moving forward due to an accidental accelerator pedal operation, the vehicle moving the unintended direction due to the wrong shift position being selected, or while parking or traveling at low speeds, the system will operate to lessen the impact with the detected static object and reduce the resulting damage.**


**Examples of function operation (static objects front and rear of the vehicle)**

This function will operate in situations such as the following if an object is detected in the traveling direction of the vehicle.


? When traveling at a low speed and the brake pedal is not depressed, or is depressed late

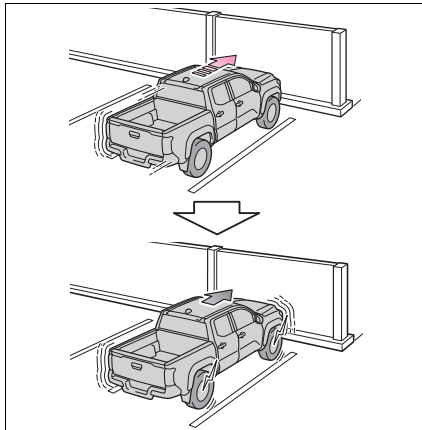

? When the vehicle moves forward due to the incorrect shift position being selected

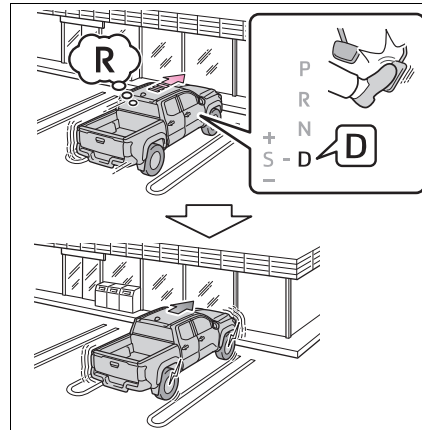

? When the accelerator pedal is depressed excessively

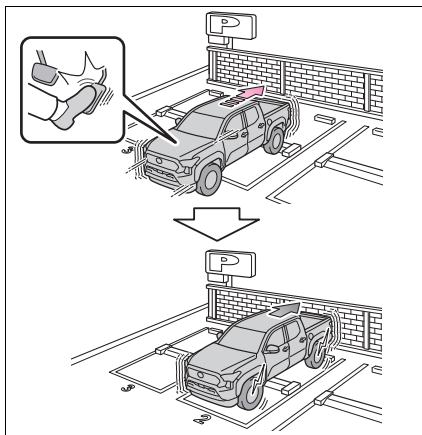

### Types of sensors

→P.317

#### ! WARNING

? To ensure the system can operate properly

→P.318

? If the Parking Support Brake function operates unnecessarily, such as at a railroad crossing

→P.337

? Notes when washing the vehicle

→P.319

? The Parking Support Brake function (static objects front and rear of the vehicle) will operate when

The function will operate when the driving assist information indicator is not illuminated (→P.80) and all of the following conditions are met:



- ? Engine output restriction control
- The Parking Support Brake is enabled.
  - The vehicle speed is approximately 9 mph (15 km/h) or less.
  - There is a static object in the traveling direction of the vehicle and approximately 6 to 13 ft. (2 to 4 m) away.
  - The Parking Support Brake determines that a stronger-than-normal brake operation is necessary to avoid a collision.

- ? Brake control
- Engine output restriction control is operating.
  - The Parking Support Brake determines that an immediate brake operation is necessary to avoid a collision.

? **The Parking Support Brake function (static objects front and rear of the vehicle) will stop operating when**

The function will stop operating if any of the following conditions are met:

- ? Engine output restriction control
- The Parking Support Brake is disabled.
  - The system determines that the collision has become avoidable with normal brake operation.
  - The static object is no longer approximately 6 to 13 ft. (2 to 4 m) away from the vehicle or in the traveling direction of the vehicle.

- ? Brake control
- The Parking Support Brake is disabled.
  - Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
  - The brake pedal is depressed after the vehicle is stopped by brake control.
  - The static object is no longer approximately 6 to 13 ft. (2 to 4 m) away from the vehicle or in the traveling direction of the vehicle.

? **Detection range of the Parking Support Brake function (static objects front and rear of the vehicle)**

The detection range of the Parking Support Brake function (static objects front and rear of the vehicle) differs from the detection range of the intuitive parking assist (→P.322). Therefore, even if the intuitive parking assist detects an object and provides a warning, the Parking Support Brake function (static objects front and rear of the vehicle) may not start operating.

? **Situations in which the system may not operate properly**

→P.320

? **Situations in which the system may operate even if there is no possibility of a collision**

→P.321

**Parking Support Brake function (moving vehicles rear of the vehicle)\***


\*: If equipped

**If a rear radar sensor detects a vehicle approaching from the right or left at the rear of the vehicle and the system determines that the possibility of a collision is high, this function will perform brake control to reduce the likelihood of an impact with the approaching vehicle.**

**Examples of the function operation**

This function will operate in situations such as the following if a vehicle is detected in the traveling direction of the vehicle.

- ? **When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late**

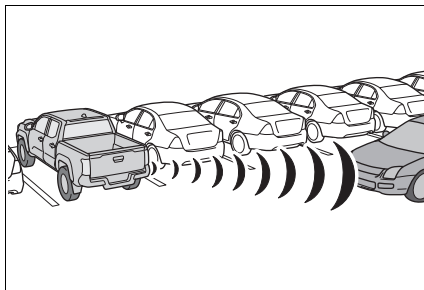

**Types of sensors**

→P.311

**! WARNING**  
 ? **To ensure the system can operate properly**  
 →P.311

- ? **The Parking Support Brake function (moving vehicles rear of the vehicle) will operate when**

The function will operate when the driving assist information indicator is not illuminated (→P.80) and all of the following conditions are met:

- ? Engine output restriction control
  - The Parking Support Brake is enabled.
  - The vehicle speed is approximately 9 mph (15 km/h) or less.
  - Vehicles are approaching from the right or left at the rear of the vehicle at a traveling speed of approximately 5 mph (8 km/h) or more.
  - The shift position is in R.
  - The Parking Support Brake determines that a stronger than normal brake operation is necessary to avoid a collision with an approaching vehicle.

- ? Brake control
  - Engine output restriction control is operating.
  - The Parking Support Brake determines that an emergency brake operation was necessary to avoid a collision with a vehicle approaching from the rear.

- ? **The Parking Support Brake function (moving vehicles rear of the vehicle) will stop operating when**

The function will stop operating if any of the following conditions are met:

- ? Engine output restriction control

- The Parking Support Brake is disabled.
  - The collision becomes avoidable with normal brake operation.
  - A vehicle is no longer approaching from the right or left at the rear of the vehicle.
- ? Brake control
- The Parking Support Brake is disabled.
  - Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
  - The brake pedal is depressed after the vehicle is stopped by brake control.
- ? **Situations in which the system may not operate properly**  
→P.327
- ? **Situations in which the system may operate even if there is no possibility of a collision**  
→P.328


### Parking Support Brake function (pedestrians rear of the vehicle)\*

\*: If equipped

**If the rear camera sensor detects a pedestrian behind the vehicle while backing up and the system determines that the possibility of colliding with the detected pedestrian is high, a buzzer will sound. If the system determines that the possibility of colliding with the detected pedestrian is extremely high, the brakes will be applied automatically to help reduce the impact of the collision.**


### Examples of system operation

The system operates when an approaching pedestrian is detected behind the vehicle while backing up, and when the brake pedal is not depressed or is depressed late.

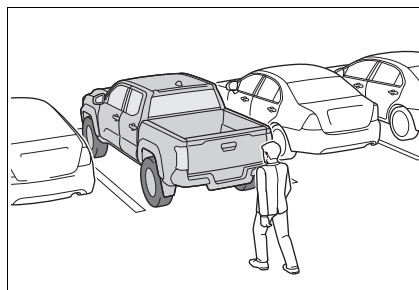

**Screen display of pedestrians rear of the vehicle**

Displays a message to prompt the driver to brake when a pedestrian is detected in the detection area behind the vehicle.

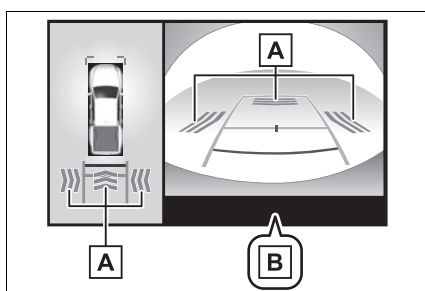

**A** Pedestrian detection icon

**B** Example: "BRAKE!"

**! WARNING**

? **If the Parking Support Brake function (pedestrians rear of the vehicle) operates unnecessarily**

Depress the brake pedal immediately after the Parking Support Brake function (pedestrians rear of the vehicle) operates. (Operation of the function is canceled by depressing the brake pedal.)

? **Correct use of the Parking Support Brake function (pedestrians rear of the vehicle)**

→P.329

? **The Parking Support Brake function (pedestrians rear of the vehicle) will operate when**

The function will operate when the driving assist information indicator is not illuminated (→P.80) and all of

the following conditions are met:

- ? Engine output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is 9 mph (15 km/h) or less.
- The shift position is in R.
- When a pedestrian is to the rear of the vehicle
- The PKSB (Parking Support Brake) determines that a stronger-than-normal-brake operation is necessary to avoid a collision.

- ? Brake control
- Engine output restriction control is operating.
- The Parking Support Brake determines that an emergency brake operation is necessary to avoid a collision with a pedestrian.

? **The Parking Support Brake function (pedestrians rear of the vehicle) will stop operating when**

The function will stop operating if any of the following conditions are met:

- ? Engine output restriction control
- The Parking Support Brake is disabled.
- The collision becomes avoidable with normal brake operation.
- The pedestrian is no longer detected behind your vehicle.

- ? Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control.

? **Re-enabling the Parking Support Brake function (pedestrians rear of the vehicle)**

→P.337

? **Detection area of the Parking Support Brake function (pedestrians rear of the vehicle)**

The detection area of the Parking Support Brake function (pedestrians rear of the vehicle) differs from the detection area of the RCD function (→P.330). Therefore, even if the RCD function detects a pedestrian and provides an alert, the Parking Support Brake function (pedestrians rear of the vehicle) may not start operating.

? **Situations in which the system may not operate properly**

→P.332

? **Situations in which the system may operate unexpectedly**

→P.332

**Toyota parking assist monitor\***

\*: If equipped

**The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.**

**When the display is changed to the wide rear view mode, a wider lateral view behind the vehicle will be displayed.**

The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

**Driving precautions**

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the parking assist monitor.

**⚠ WARNING**

- ? Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state. Use caution, just as you would when backing up any vehicle.
- ? Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- ? If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehicle.
- ? The instructions given are only guidelines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc., when parking. It is necessary to be fully aware of this before using the parking assist system.
- ? When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- ? Do not use the parking assist monitor in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency tires
  - When the tailgate is not closed completely
  - On roads that are not flat or straight, such as curves or slopes
  - If the suspension has been modified or tires of a size other than specified are installed

- ? In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- ? If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- ? The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.351)


**Screen display**

The parking assist monitor screen will be displayed if the shift lever is shifted to R while the engine switch is in ON.

Each time the display mode switching button is selected, the mode will change as follows:

Rear view: Displays the rear view of the vehicle.

Wide rear view: Displays a near 180° image from the rear view camera.

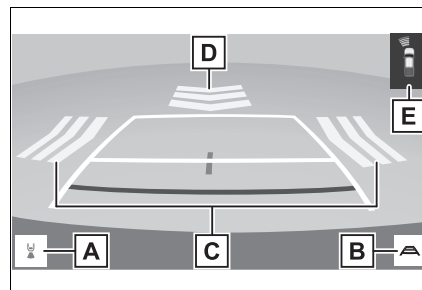

**A** Display mode switching button

Each time the button is selected, the rear view mode and the wide rear view mode are switched.

**B** Guide line switching button

Select to switch the guide line mode. (→P.346)

- Each time the button is selected, the display mode changes in the following order:

Estimated course line display mode  
→ Parking assist guide line display mode  
→ Distance guide line display mode  
→ Center guide line display mode.

**C** Rear Cross Traffic Alert\*

When a sensor detects a vehicle approaching from the rear, the direction of the vehicle approaching from the rear is displayed and the buzzer sounds.

**D** Rear Camera Detection\*

When a sensor detects a vehicle approaching from the rear, the direction of the vehicle approaching from the rear is displayed and the buzzer sounds.

**E** Intuitive parking assist\*

When a sensor detects a stationary object, the direction of and the approximate distance to the a stationary object are displayed and the buzzer sounds.

\*: If equipped

For details about the Rear Cross Traffic Alert function (→P.324) and intuitive parking assist. (→P.317)

**! WARNING**


As the Rear Cross Traffic Alert display is displayed over the camera view, it may be difficult to see the Rear Cross Traffic Alert display depending on the color and brightness of the surrounding area.

**Canceling Toyota parking assist monitor**

The parking assist monitor is canceled when the shift lever is shifted into any position other than R.


**Using the system**

Use any of the following modes.

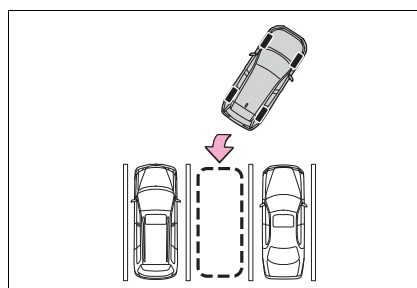

- ▶ Estimated course line display mode (→P.347)


Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

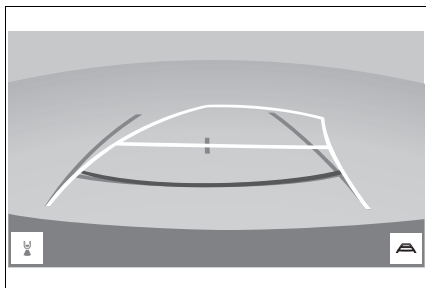

- ▶ Parking assist guide line display mode (→P.348)

The steering wheel return points (parking assist guide lines) are displayed.


This mode is recommended for those who are comfortable with parking the vehicle without the aid of the estimated course lines.

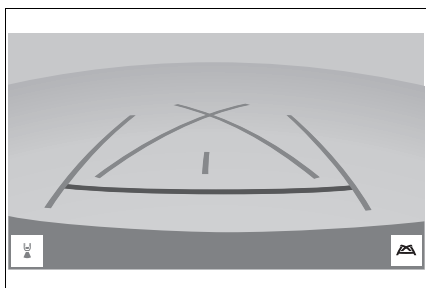

- ▶ Distance guide line display mode (→P.349)


Distance guide lines only are displayed.

This mode is recommended for those who are comfortable with parking the vehicle without the aid of the guide lines.

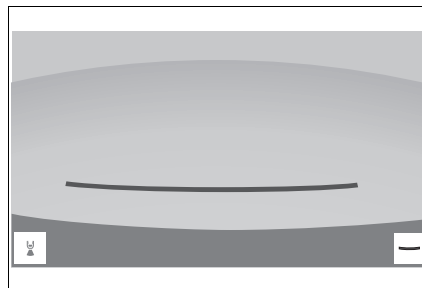


- ▶ Center guide line display mode (→P.349)

Estimated course lines and vehicle center line are displayed which move in accordance with the operation of the steering wheel.

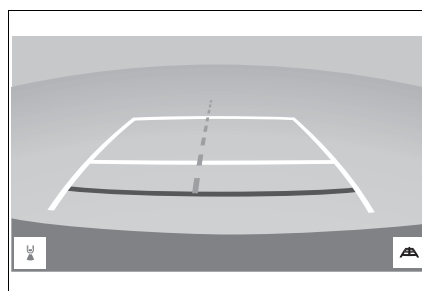

### Estimated course line display mode

#### Screen description

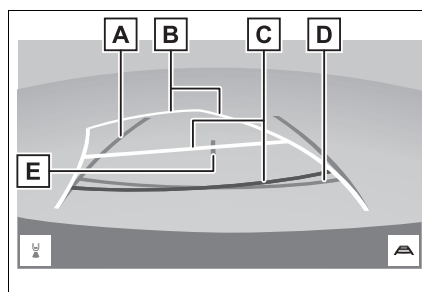

- A** Vehicle width guide line



Displays a guide path when the vehicle is being backed straight up.

**B** Estimated course lines

Show an estimated course when the steering wheel is turned.

**C** Distance guide lines

Show distance behind the vehicle when the steering wheel is turned.

- The guide lines move in conjunction with the estimated course lines.
- The guide lines display points approximately 1.5 ft. (0.5 m) (red) and approximately 3 ft. (1 m) (yellow) from the center of the edge of the bumper.

**D** Distance guide line

Shows distance behind the vehicle.

- Displays a point approximately 1.5 ft. (0.5 m) (blue) from the edge of the bumper.

**E** Vehicle center guide line


Indicates the estimated vehicle center on the ground.

**! WARNING**

If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Toyota dealer.

**Parking assist guide line display mode**

**Screen description**

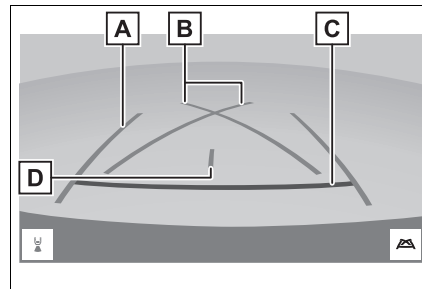

**A** Vehicle width guide line

Displays a guide path when the vehicle is being backed straight up.

- The displayed width is wider than the actual vehicle width.

**B** Parking assist guide lines

Show the path of the smallest turn possible behind the vehicle.

**C** Distance guide line

Shows distance behind the vehicle.


- Displays points approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.

**D** Vehicle center guide line

Indicates the estimated vehicle center on the ground.

**Distance guide line display mode**


**Screen description**

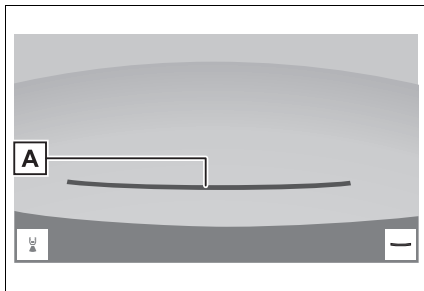

- A** Distance guide line  
Shows distance behind the vehicle.
- Displays points approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.

**Center guide line display mode**

**Screen description**

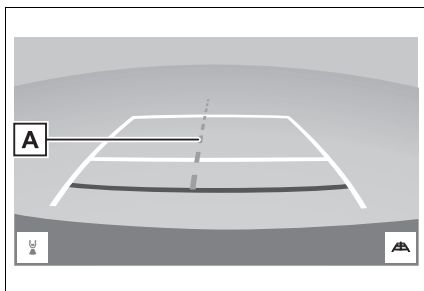


- A** Center guide line  
Indicates the estimated vehicle center.

**Toyota parking assist monitor precautions**

**Area displayed on screen**


The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.

► Rear view

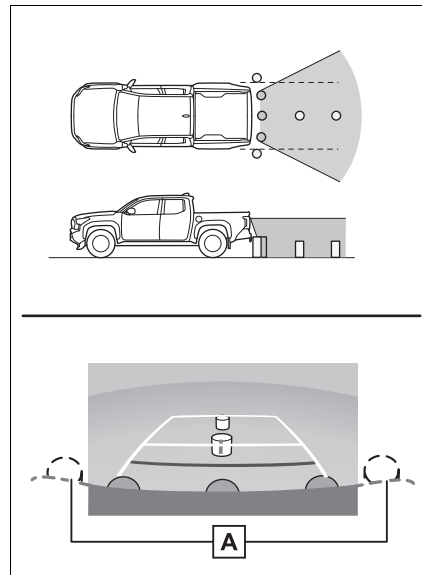

- A** Corners of bumper

- The area around both corners of the bumper will not be displayed.
- ▶ Wide rear view

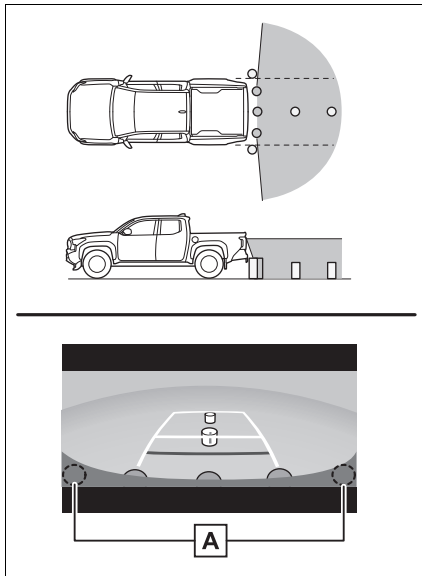


**A** Corners of bumper

- The area around both corners of the bumper will not be displayed.

- ? The image adjustment procedure for the parking assist monitor screen is the same as the procedure for adjusting the screen display. (Refer to the "MULTIMEDIA OWNER'S MANUAL".)
- ? The area displayed on the screen may vary according to vehicle orientation conditions.
- ? Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- ? The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- ? Items which are located higher than the camera may not be displayed on the monitor.

**The camera**

The camera for the parking assist monitor is located as shown in the illustration.

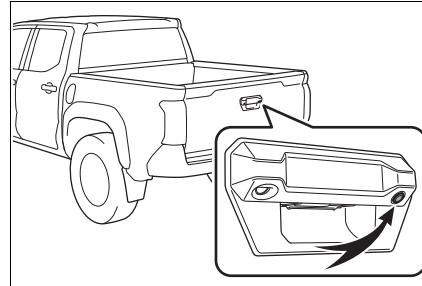

? **Using the camera**

If dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

**NOTICE**

- ? The parking assist monitor may not operate properly in the following cases.
  - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
  - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.

**NOTICE**

- When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
- Do not allow organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- ? Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

of the parking space may not be equal, even when they appear to be so. Be sure to check visually.


- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

**Differences between the screen and the actual road**

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines

? **When the ground behind the vehicle slopes up sharply**


The distance guidelines are projected on a horizontal surface, distances on an upward sloping surface appear farther from the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

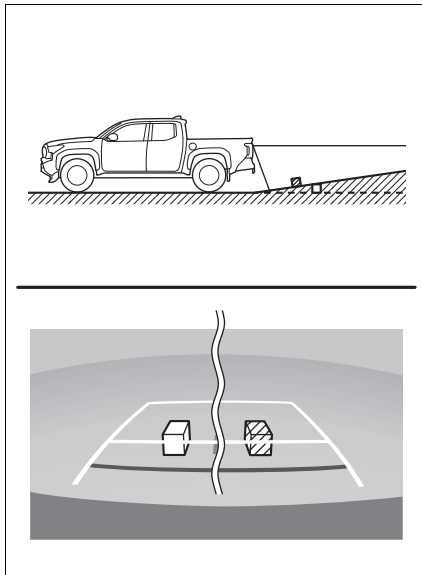

? **When the ground behind the vehicle slopes down sharply**


The distance guidelines are projected on a horizontal surface, distances on a downward sloping surface appear closer to the vehicle than the actual distance.

Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

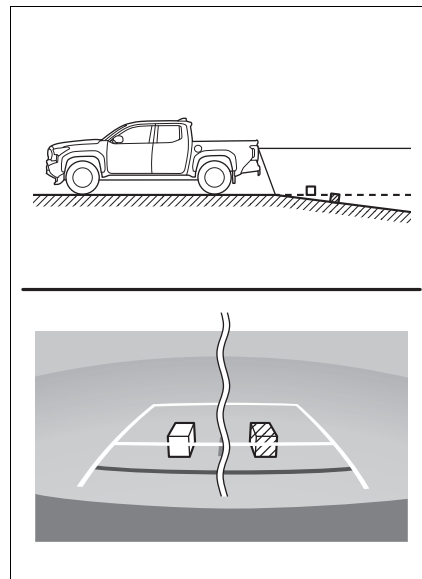

? **When any part of the vehicle sags**

When the vehicle posture tilts due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

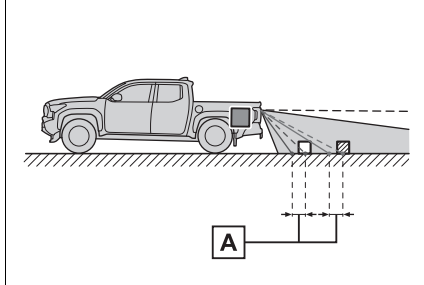

**A** A margin of error


**When approaching three-dimensional objects**

The estimated course lines target flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

**Estimated course lines**

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the

truck.

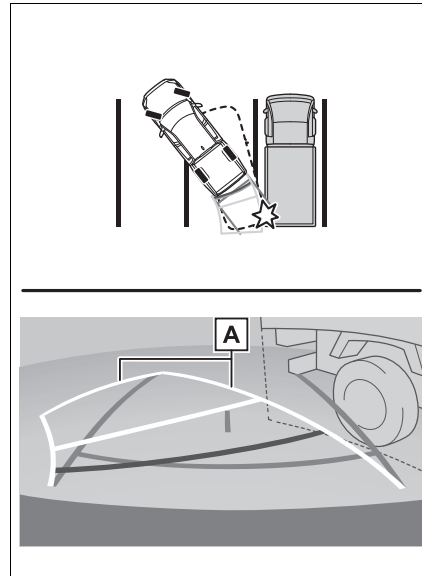


**A** Estimated course lines

### Distance guide lines

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point **B**.

However, in reality if you back up to point **A**, you will hit the truck. On the screen, it appears that **A** is closest and **C** is farthest away. However, in reality, the distance to **A** and **C** is the same, and **B** is farther than **A** and **C**.

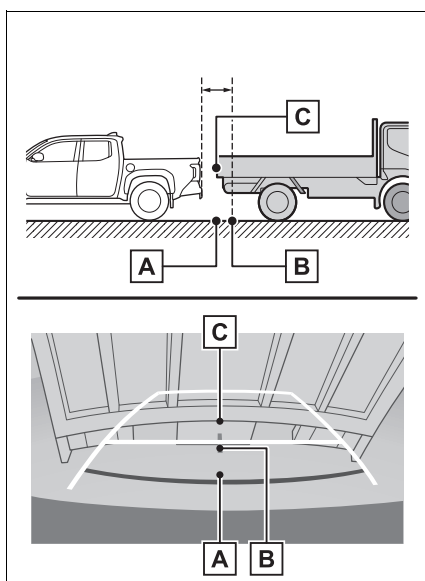

### Things you should know


#### If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> <li>• The vehicle is in a dark area</li> <li>• The temperature around the lens is either high or low</li> <li>• The outside temperature is low</li> <li>• There are water droplets on the camera</li> <li>• It is raining or humid</li> <li>• Foreign matter (mud, etc.) is adhering to the camera</li> <li>• Sunlight or headlights are shining directly into the camera</li> <li>• The vehicle is under fluorescent lights, sodium lights, mercury lights, etc.</li> </ul>	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the parking assist monitor is the same as the procedure for adjusting the screen display. (Refer to the "MULTIMEDIA OWNER'S MANUAL".)</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera.	Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Toyota dealer.



Symptom	Likely cause	Solution
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Toyota dealer.
	<ul style="list-style-type: none"> <li>• The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li> <li>• The vehicle is used on an incline.</li> </ul>	<p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings.</p>
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Toyota dealer.
Guide lines are not displayed	The tailgate is open.	<p>Close the tailgate.</p> <p>If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.</p>
 is displayed	<ul style="list-style-type: none"> <li>• Battery has been reinstalled.</li> <li>• The steering wheel has been moved while the battery was being reinstalled.</li> <li>• Battery power is low.</li> <li>• The steering sensor has been reinstalled.</li> <li>• There is a malfunction in the signals being output by the steering sensor.</li> </ul>	<p>Stop the vehicle, and turn the steering wheel as far as it will go to the left and right.</p> <p>If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.</p>

**Panoramic view monitor\***

\*: If equipped

**Panoramic view monitor assists the driver in viewing the surroundings, when operating at low speeds, by combining the front, side and rear cameras and displaying a complete vehicle overhead image on the screen.**

**When you press the camera switch or shift the shift lever to R while the engine switch is in ON, the panoramic view monitor operates.**

**The monitor displays various views of the position and surroundings of the vehicle.**

The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

**Driving precautions**

The panoramic view monitor is a supplemental device intended to assist the driver when checking around the vehicle. When using, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle or possibly cause an accident.

Pay attention to the following precautions when using the panoramic view monitor.

**! WARNING**

- ? Never depend on the panoramic view monitor entirely. The image and the position of the guide lines displayed on the screen may differ from the actual state. Use caution just as you would when driving any other vehicle.
- ? Always make sure to check all around the vehicle with your own eyes when driving.
- ? Never drive while looking only at the screen as the image on the screen is different from actual conditions. If you are driving while looking only at the screen, you may hit a person or an object, resulting in an accident. When driving, be sure to check the vehicle's surroundings with your own eyes and the vehicle's mirrors.
- ? Depending on the circumstances of the vehicle (number of passengers, amount of luggage, etc.), the position of the guide lines displayed on the screen may change. Be sure to check visually around the vehicle before proceeding.
- ? Do not use the panoramic view monitor system in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency tires
  - When the front doors or the tailgate is not closed completely

**⚠ WARNING**

- On roads that are not flat or straight, such as curves or slopes
  - If the suspension has been modified or tires of a size other than specified are installed
- ? In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- ? If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- ? The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.385)
- ? When an aftermarket part is installed in the display area of the screen.

**⚠ NOTICE**

- ? In panoramic view/moving view/see-through view, the system combines images taken from the front, back, left and right side cameras into a single image. There are limits to the range and content that can be displayed. Familiarize yourself with the characteristics of the panoramic view monitor system before using it.

? Image clarity may decline at the four corners of the panoramic view/moving view/see-through view. However, this is not a malfunction, as these are the regions along the border of each camera image where the images are combined.


? Depending on lighting conditions near each cameras, the panoramic view may show different colors for each camera area.

? The panoramic view/moving view/see-through view display does not extend higher than the installation position and image capture range of each camera.

? There are blind spots around the vehicle. Accordingly, there are regions not displayed in panoramic view.

? Three-dimensional objects displayed in wide front view, rear view or side view may not be displayed in panoramic view/moving view/see-through view.


? People and other three-dimensional obstacles may appear differently when displayed on the panoramic view monitor. (These differences include, among others, cases in which displayed objects appear to have fallen over, disappear near image processing areas, appear from image processing areas, or when the actual distance to an object differs from the displayed position.)

 NOTICE

- ? When the tailgate, which is equipped with the back camera, or front doors, which are equipped with door mirrors that have built-in side cameras, are open, images will not be displayed properly on the panoramic view monitor.
- ? When the outer mirrors are not positioned in normal position, images will not be displayed properly on the panoramic view monitor.
- ? The vehicle icon displayed in panoramic view/moving view/see-through view is a computer generated image. Accordingly, properties such as the color, shape and size will differ from the actual vehicle. For this reason, nearby three-dimensional objects may appear to be touching the vehicle, and actual distances to three-dimensional objects may differ from those displayed.

**Camera switch**

The camera switch is located as shown in the illustration.

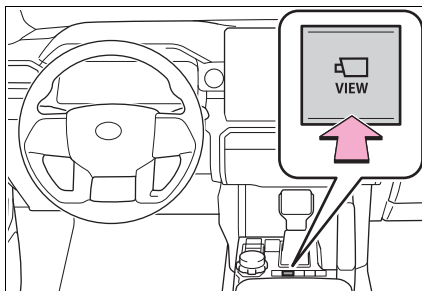


### Menu button

The screens which are displayed from the following buttons can be selected. Also, the display can be changed to various screens from button combinations.

The button display changes due to the situation of the vehicle, such as the screen and speed being displayed, shift position, vehicle equipment, etc.

The menu button is displayed when the shift lever is in D, N, R (automatic transmission) or with parking brake disengaged (manual transmission).

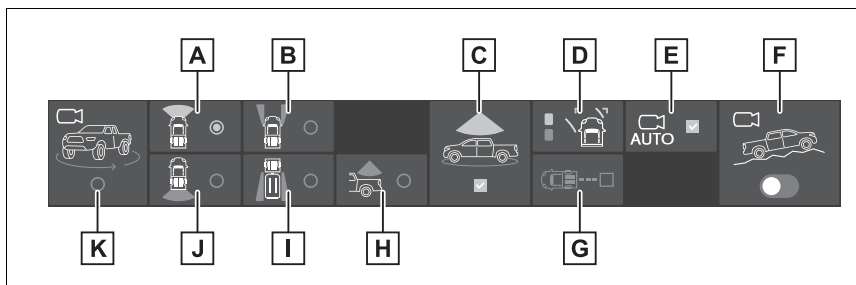


- A** Front view button
- B** Front split view button
- C** Panoramic view on/off button
- D** Guide line select button (→P.367,372)
- E** Auto mode on/off button (→P.368)
- F** Multi-terrain Monitor on/off button (→P.393)
- G** Center guide line on/off button (→P.372)
- H** Bed view button (→P.378)
- I** Rear split view button
- J** Rear view button
- K** 3D view button

**Display**

**Checking around the vehicle**


When the shift lever is in P (automatic transmission) or not R and with the parking brake engaged (manual transmission).


- ▶ Moving view

Press .




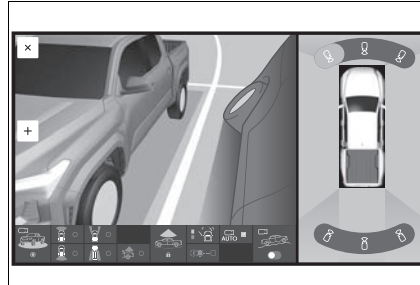
- ▶ See-through view

Press .

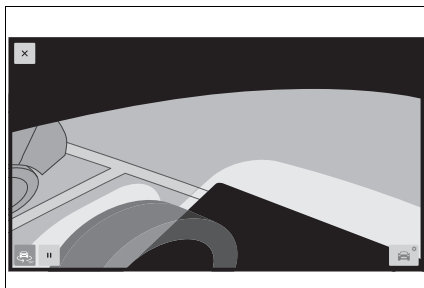

- ▶ 3D view


Press  **VIEW**.



**Checking the front and around the vehicle**



When the shift lever is in a position other than P (automatic transmission) or with the parking brake disengaged (manual transmission).

- ▶ Panoramic view & front view
- Select the front view button and then turn ON the panoramic view button.

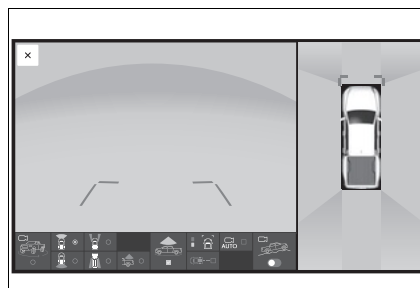

► Wide front view

Select the front view button and then turn OFF the panoramic view button.

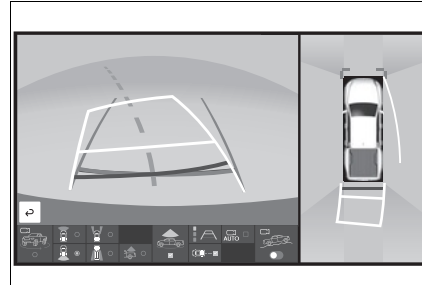
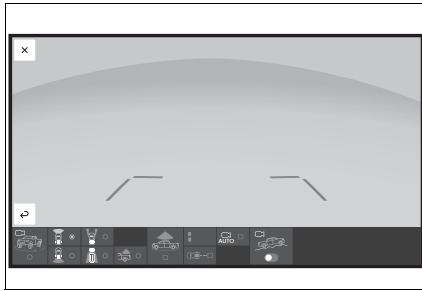


► Wide rear view

Select the rear view button and then turn OFF the panoramic view button.

► Front split view

Select the front split view button.

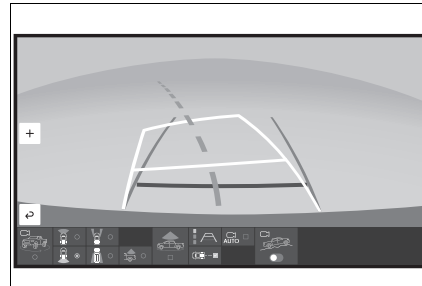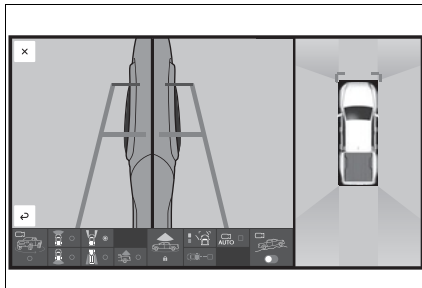

► Rear split view


Select the rear split view button.

**Checking the rear and around the vehicle**

When the shift lever is in a position other than P (automatic transmission) or with the parking brake disengaged (manual transmission).


► Panoramic view & rear view

Select the rear view button and then turn ON the panoramic view button.

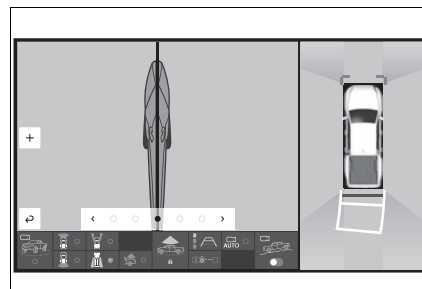


**Checking the bed**

Select the bed view button.

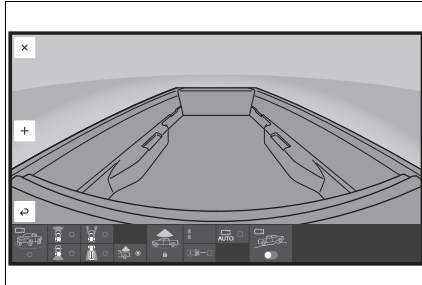

### Checking around the vehicle

The moving view screen and the see-through view screen provide support when checking the areas around the vehicle while parking. These screens display an image of the vicinity of the vehicle combined from the 4 cameras. The screen will display a 360° view around the vehicle from either inside the vehicle or from a birds-eye view at an angle.


To display the moving view/see-through view screen, press  when the shift lever is in P (automatic transmission) or not R with the parking brake engaged (manual transmission) and the intuitive parking assist is enabled.

### Screen display

#### ▶ Moving view



#### ▶ See-through view

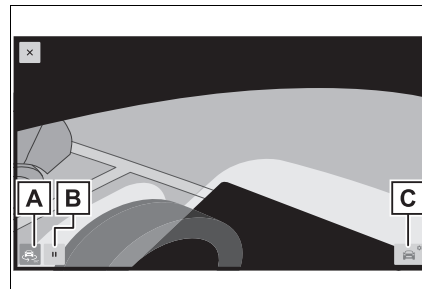


**A** Display mode switching button

Select to change the display mode between the moving view and the see-through view.

**B** Rotation pause switch

Select to pause the rotation of the screen.

To resume rotation, select .

**C** Body color setting switch

Select to display the body color setting screen and change the color of the vehicle displayed on the panoramic view monitor. (→P.379)


#### ▶ 3D view


The 3D view provides support when checking the areas in



around the vehicle perimeter in confined areas.

The display position of the 3D view can be changed by pressing the six different camera angle switches.



To display the 3D view, select the 3D view button (→P.360) after pressing  except in the P range.

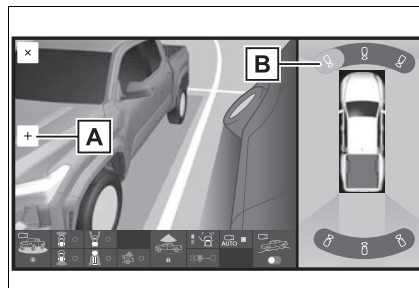

**A** Zoom button


**B** Camera angle SW

The display position of the 3D view can be changed

Pressing  on the screen or  again changes the screen back to the previously displayed screen, such as the navigation screen.

### Checking the front and around the vehicle

The panoramic view & front view/wide front view/front split view screen provides support when checking the areas in front of the vehicle and around the vehicle when taking-off at T-intersections or other intersections during poor visibility.


To display the screen, press  when the shift lever is in D, N (automatic transmission) or with the parking brake disengaged (manual transmission) with the vehicle moving approximately 10 mph (16 km/h) or less.

This screen will be displayed if the intuitive parking assist detects an object in front of your vehicle (intuitive parking assist linked display).

### Screen display

Each time the display mode switching button is selected, the mode will change as follows:

► Panoramic view & front view

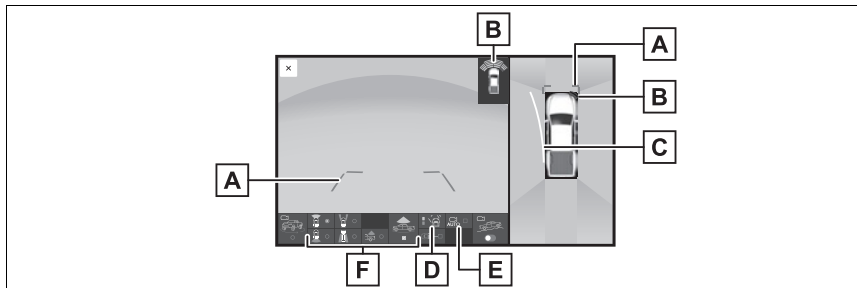

**A** Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 3 ft. (1 m) from the edge of the bumper.

**B** Intuitive parking assist

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

**C** Estimated course lines

Shows an estimated course when the steering wheel is turned.

- This line will be displayed when the steering wheel is turned by 90° or more from the center (straight-line) position.

**D** Guide line switching button

Select to change the guide line mode between the distance guide line mode and the estimated course line mode. (→P.367)


**E** Automatic display button

Select to turn automatic display mode on/off. (→P.368)

**F** Display mode switching buttons

The display can be changed to various screens from button combinations.

► Wide front view

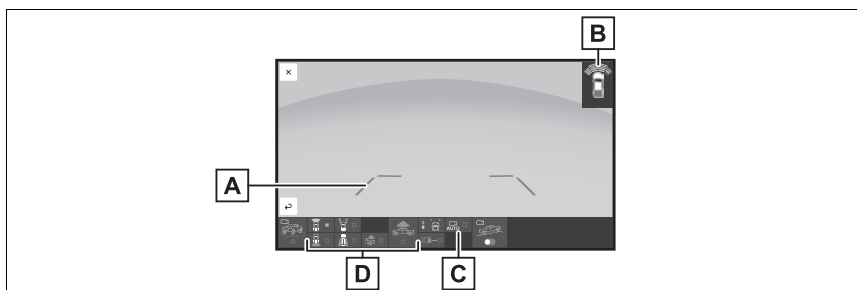

**A** Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 3 ft. (1 m) from the edge of the bumper.

**B** Intuitive parking assist

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.


**C** Automatic display button

Select to turn automatic display mode on/off. (→P.368)

**D** Display mode switching buttons

The display can be changed to various screens from button combinations.

► Front split view

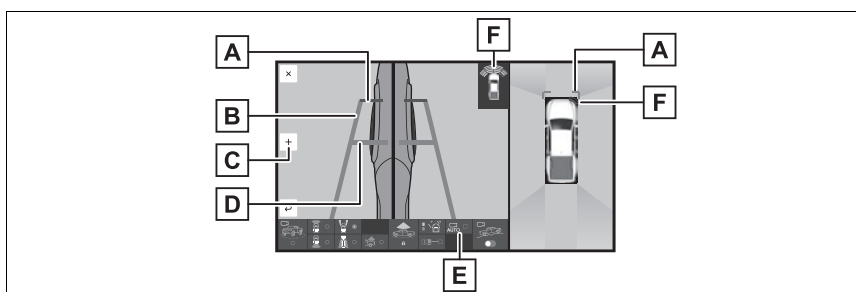

**A** Distance guide lines

Shows distance in front of the vehicle.

- Split view: Display points approximately 1.5 ft. (0.5 m) from the edge of the bumper.
- Panoramic view: Display points approximately 3 ft. (1 m) from the edge of the bumper.

**B** Vehicle width guide lines

Shows guide lines of the vehicle's width including the outside rear view mirrors.

**C** Zoom button

The front split view, which is currently displayed, can be magnified.

**D** Front tire guide lines


Shows guide lines of where the front tire touches the ground.

**E** Automatic display button

Select to turn automatic display mode on/off. (→P.368)

**F** Intuitive parking assist

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

- ? Pressing **x** on the screen or  changes the screen to the previously displayed screen, such as the navigation screen.
- ? For details about the intuitive parking assist (→P.317).
- ? The display position of the intuitive parking assist and the position of obstacles displayed in the camera image do not match.


**! WARNING**

- ? When a sensor indicator on the intuitive parking assist display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.
- ? As the intuitive parking assist display is displayed over the camera view, it may be difficult to see the intuitive parking assist display depending on the color and brightness of the surrounding area.

**Switching the guide line mode (panoramic view & front view mode)**


Each time the guide line switching button is selected, the mode will change as follows:

- ▶ Distance guide line

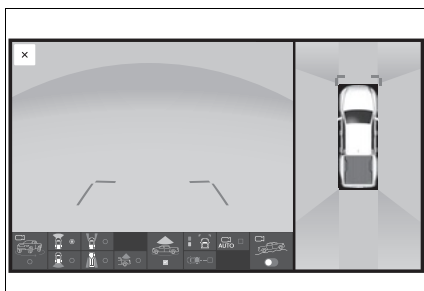

- Only the distance guide lines are displayed.

- ▶ Estimated course line

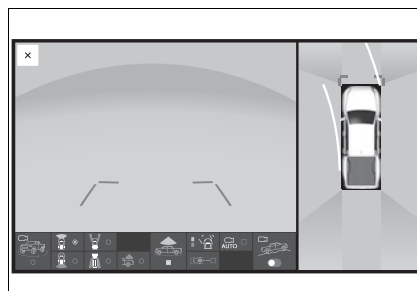


- Estimated course lines will be added to the distance guide lines.


**Using the vehicle width guide line (front split view mode)**

The front split view screen displays images from the cameras installed on each outside rear view mirror. This screen is designed to support the driver in safe driving in situations such as when driving on a narrow road,

by allowing them to check the areas around the sides of the vehicle.

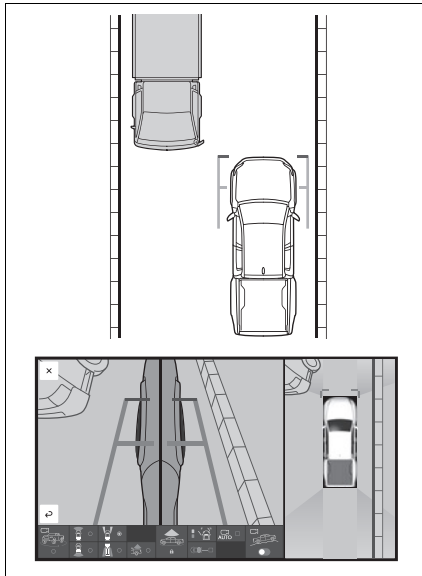


- Check the positions and distance between the vehicle width guide line and a target object such as the obstacle or curb of the road.

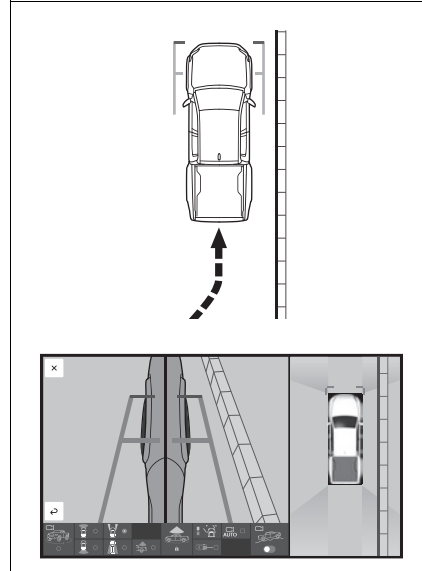

- Pull over to the curb as shown in the illustration above, taking care not to let the vehicle width guide line overlap the target object.
- Ensure that the vehicle width guide line is parallel to the target object.

#### Automatic display mode

In addition to screen switching by operating , automatic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed.

Each time the "AUTO" button is selected, automatic display mode is enabled/disabled.

In automatic display mode, the monitor will automatically dis-

play images in the following situations:

- When the shift lever is shifted to D, N (automatic transmission) or with the parking brake

disengaged (manual transmission).

- When vehicle speed is reduced to approximately 10 mph (16 km/h) or less.

### Checking the rear and around the vehicle


The panoramic view & rear view/wide rear view/rear split view screen provide support when checking the areas of behind the vehicle and around the vehicle while backing up, for example while parking.

The screens will be displayed when the shift lever is in R.

#### Screen display

Each time the display mode switching button is selected, the mode will change as follows:

- ▶ Panoramic view & rear view

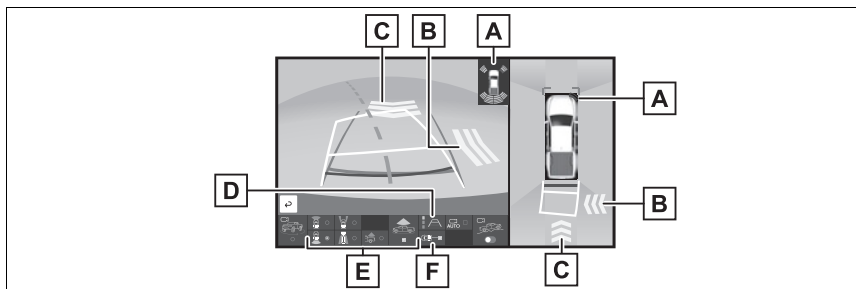

**A** Intuitive parking assist

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

**B** Rear Cross Traffic Alert

When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.

**C** RCD (Rear Camera Detection)

When the rear camera detects a pedestrian to the rear.

**D** Guide line switching button

Select to switch the guide line mode. (→P.372)


**E** Display mode switching buttons

The display can be changed to various screens from button combinations.

**F** Center guide line on/off button

Select to on/off the center guide line. (→P.372)

► Wide rear view

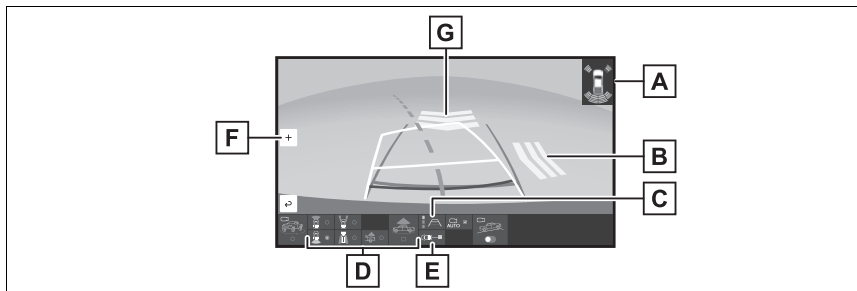

**A** Intuitive parking assist

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

**B** Rear Cross Traffic Alert

When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.

**C** Guide line switching button

Select to switch the guide line mode. (→P.372)

**D** Display mode switching buttons

The display can be changed to various screens from button combinations.

**E** Center guide line on/off button

Select to on/off the center guide line. (→P.372)


**F** Zoom button

Each time press the button, the mode will change between the wide rear view mode, narrow rear view mode and hitch view mode. (→P.375)

**G** RCD (Rear Camera Detection)

When the rear camera detects a pedestrian to the rear.

► Rear split view

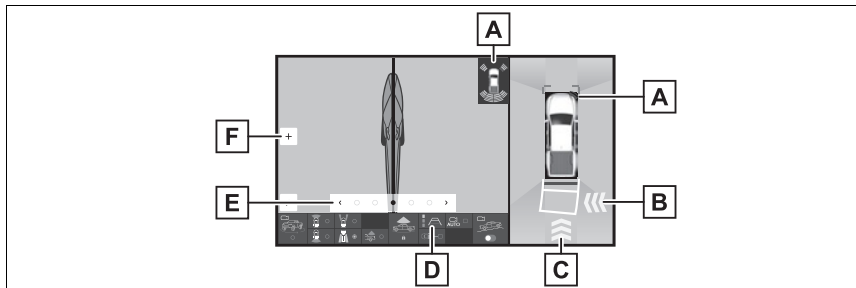

**A** Intuitive parking assist

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

**B** Rear Cross Traffic Alert

When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.

**C** RCD (Rear Camera Detection)

When the rear camera detects a pedestrian to the rear.

**D** Guide line switching button

Select to switch the guide line mode. (→P.372)

**E** Camera angle adjustment (→P.376)

**F** Zoom button (→P.376)

- ? The monitor is canceled when the shift lever is shifted into any position other than R.
- ? For details about the intuitive parking assist (→P.317), Rear Cross Traffic Alert function (→P.324) and rear camera detection (→P.329)
- ? The display position of the intuitive parking assist and the position of obstacles displayed in the camera image do not match.

**! WARNING**

- ? When a sensor indicator on the intuitive parking assist display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.
- ? As the intuitive parking assist display and Rear Cross Traffic Alert display are displayed over the camera view, it may be difficult to see the intuitive parking assist display and Rear Cross Traffic Alert display depending on the color and brightness of the surrounding area.




### Guide lines displayed on the screen

Each time the guide line switching button is selected, the mode will change as follows:

► Estimated course line

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

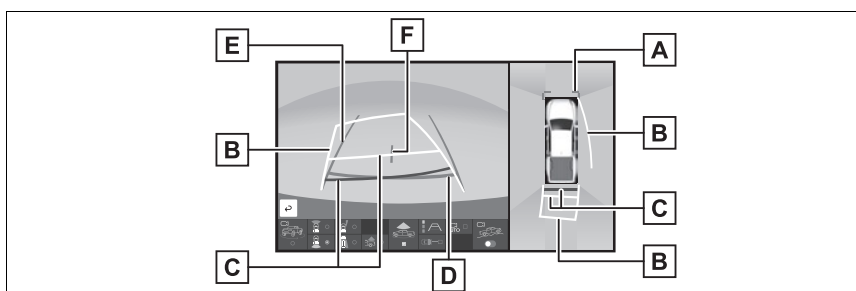

**A** Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 3 ft. (1 m) from the edge of the bumper.

**B** Estimated course lines

Shows an estimated course when the steering wheel is turned.

**C** Distance guide lines

Shows the distance behind the vehicle when the steering wheel is turned.

- The guide lines move in conjunction with the estimated course lines.
- The guide lines display points approximately 1.5 ft. (0.5 m) (red) and approximately 3 ft. (1 m) (yellow) from the center of the edge of the bumper.

**D** Distance guide line

Shows the distance behind the vehicle.

- Displays a point approximately 1.5 ft. (0.5 m) (blue) from the edge of the bumper.

**E** Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.


**F** Vehicle center guide line

Indicates the estimated vehicle center on the ground.

► Parking assist guide line

The steering wheel return points (parking assist guide lines) are displayed.

This mode is recommended for those who are comfortable with parking the vehicle without the aid of the estimated course lines.

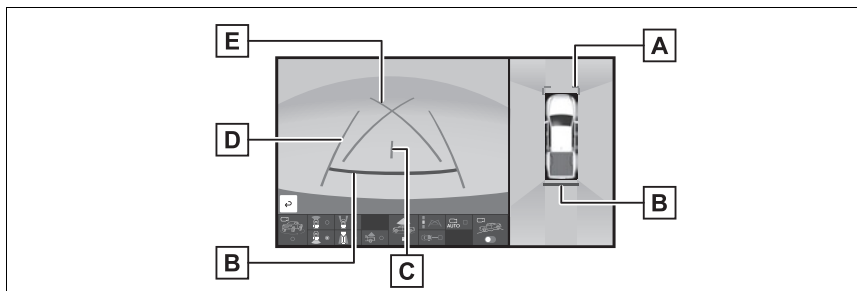

**A** Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 3 ft. (1 m) from the edge of the bumper.

**B** Distance guide line

Shows the distance behind the vehicle.

- Displays a point approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.

**C** Vehicle center guide line

Indicates the estimated vehicle center on the ground.

**D** Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.


**E** Parking assist guide lines

Shows the path of the smallest turn possible behind the vehicle.

► Distance guide line

Only distance guide line is displayed.

This mode is recommended for those who are comfortable with parking the vehicle without the aid of the guide lines.

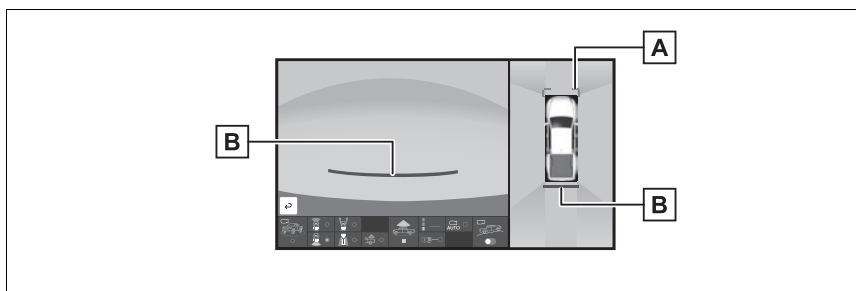

**A** Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 3 ft. (1 m) from the edge of the bumper.

**B** Distance guide line


Shows the distance behind the vehicle.

- Displays a point approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.

► Center guide line

When the display is turned ON, the center guide line simultaneously displays the each of the guide lines for the estimated course line, parking assist guide line or distance guide line.

Vehicle center line is displayed which move in accordance with the operation of the steering wheel.

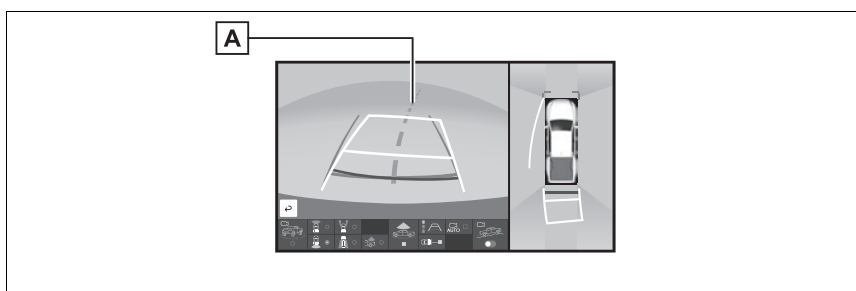

**A** Vehicle center guide line

Indicates the estimated vehicle center on the ground.


The display position of the intuitive parking assist and the position of obstacles displayed in the camera image do not match.

**⚠ WARNING**


- ? Depending on the circumstances of the vehicle (number of passengers, amount of luggage, etc.), the position of the guide lines displayed on the screen may change. Be sure to check visually around the vehicle before proceeding.
- ? If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Toyota dealer.
- ? Do not use the system if the display is incorrect due to an uneven (hilly) road or a non-straight (curvy) road.

**Changing the rear view mode**

Each time press the zoom button, the mode will change as follows:

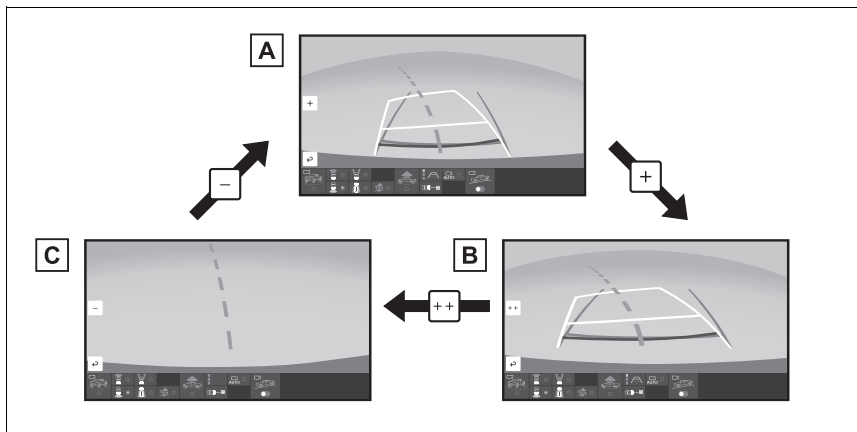


- A** Wide rear view
- B** Narrow rear view
- C** Hitch zoom view

- ? The hitch zoom view can be displayed for a certain time when  is pressed while the driving at speeds of 10 mph (16 km/h) or more.
- ? The hitch zoom view and bed zoom view (→P.378) can be switched when the switch is pressed while the displaying the screen.

### Using the rear split view

If towing a trailer, magnify the difficult to see section of the vehicle rear or change the screen display and use when checking.

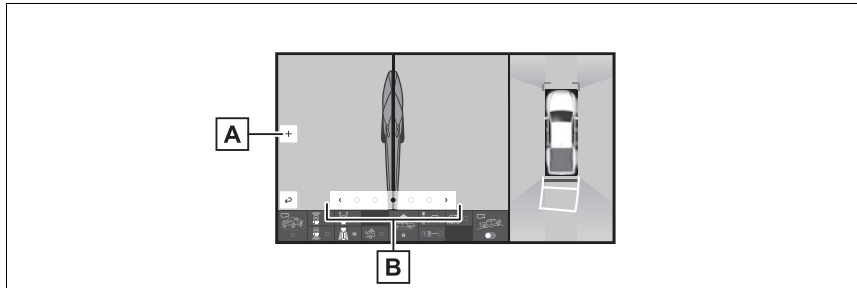

**A** Zoom button

The rear split view, which is currently displayed, can be magnified.

**B** Camera angle adjustment button

The direction of the camera can be changed from left to right in 5 stages.


### Parking

lines are within the parking space, and back up slowly.

### Using the estimated course line

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.


- 1 Shift the shift lever to R.
- 2 Turn the steering wheel so that the estimated course

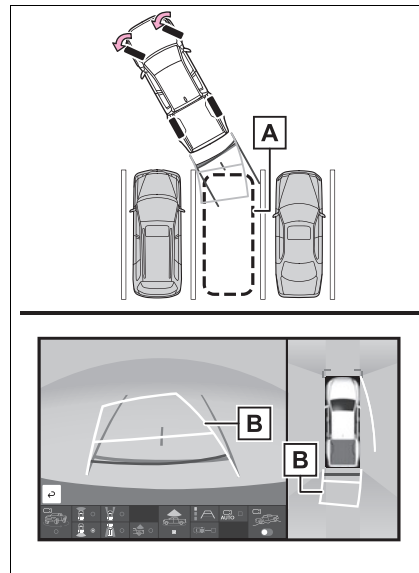

**A** Parking space

**B** Estimated course lines

- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right dividing lines of the parking space.

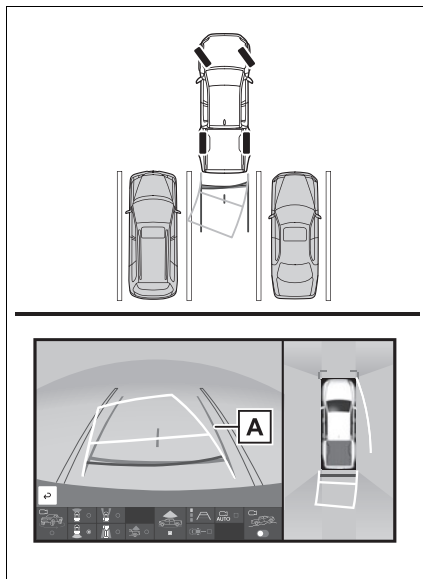

**A** Vehicle width guide line


- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

**Using parking assist guide line**

When parking in a space which

is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to R.
- 2 Back up until the parking assist guide line meets the edge of the dividing line of the parking space.

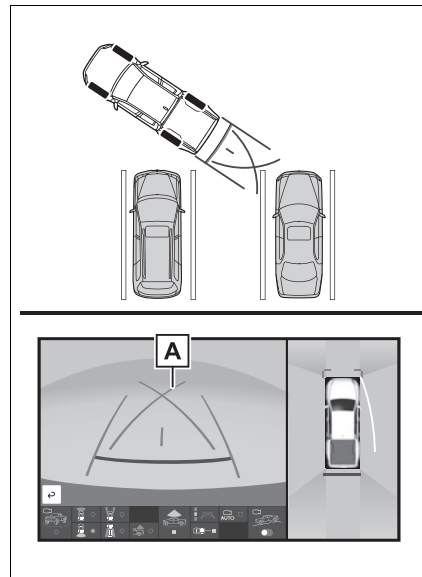


**A** Parking assist guide line

- 3 Turn the steering wheel all the way to the left, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

### Checking the bed


Use to check the state of the load in the carrier bed.

### Screen display

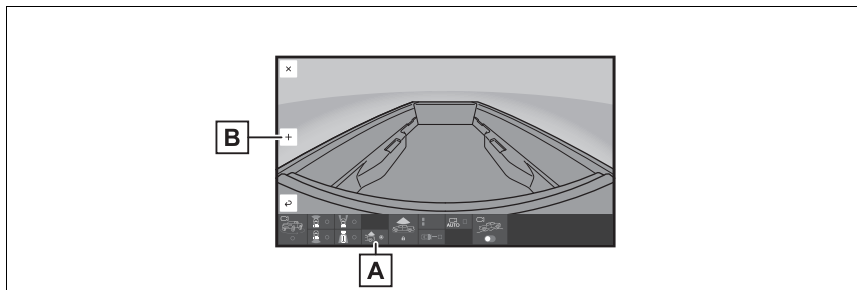

**A** Bed view button


**B** Zoom button

- ? The bed zoom view can be displayed for a certain time when  is pressed while the driving at speeds of 9 mph (16 km/h) or more.
- ? The bed zoom view and hitch zoom view (→P.375) can be switched when the switch is pressed while the displaying the screen.

### Magnifying function

If displayed objects are too small to see clearly when the panoramic view is displayed, the area around any of the 4 corners of the vehicle can be magnified.

- 2 Select the area on the panoramic view display you wish to magnify.

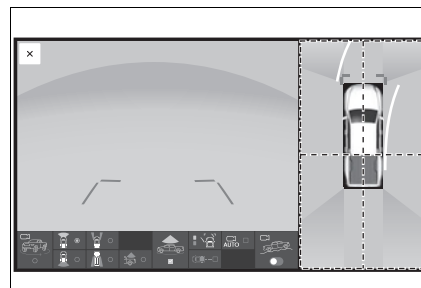

### Magnifying the display

- 1 Turn the intuitive parking assist on.

- Touching one of the 4 areas within the dotted lines will magnify that area. (Dotted lines are not displayed on the actual display.)

- To return to the normal view, touch the panoramic view display again.

- ? The magnifying function is enabled when all of the following conditions are met:
- The panoramic view & front view or the panoramic view & rear view is displayed.
  - The vehicle speed is below approximately 10 mph (16 km/h).
  - The intuitive parking assist is available.
- ? In the following situations, the magnified display will be canceled automatically:
- The vehicle speed is approximately 10 mph (16 km/h) or higher.
  - The intuitive parking assist is unavailable.
- ? When the display is magnified, the guide lines will not be displayed.


- 3 Select the desired color.



### Customizing the panoramic view monitor

The color of the vehicle displayed on the panoramic view monitor can be changed.

### Changing the body color displayed in the panoramic view monitor

- 1 Display the moving view/see-through view screen. (→P.363)
- 2 Select .



**Panoramic view monitor precautions**


**Area displayed on screen**

**Area of image of panoramic view**


The panoramic view monitor displays an image of the surrounding view of the vehicle.

Since the panoramic view processes and displays images based on flat road surfaces, it cannot depict the position of three-dimension objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. Even if there is room between the bumpers of the vehicles and it seems not likely to collide in the image, in reality, the both vehicles are on a collision course.

Check the safety of the surroundings directly.

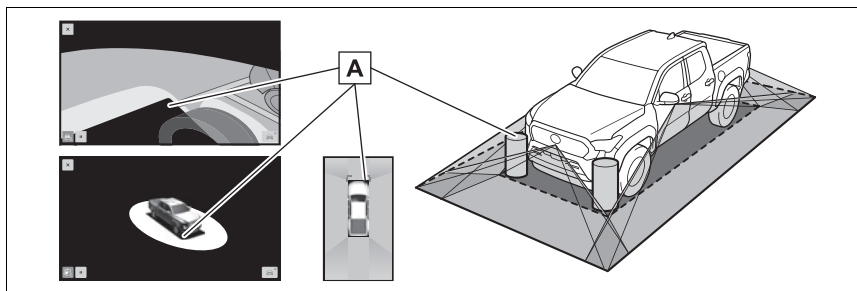


**A** Objects located in the shaded areas will not be displayed on the screen.

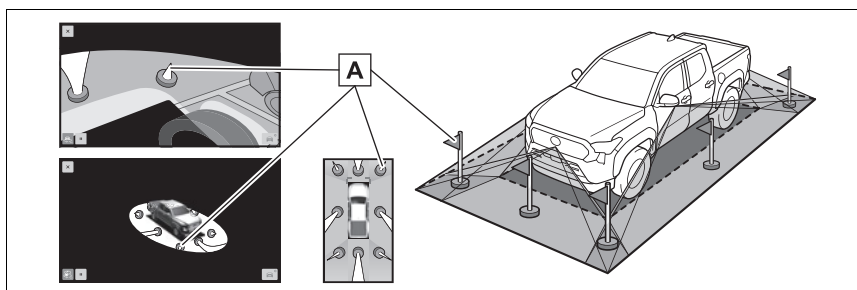

**A** Parts of objects which extend above a certain height cannot be displayed on the screen.

? As the images obtained from four cameras are processed and displayed

- on the standard of a flat road surface; the panoramic view/moving view/see through view may be displayed as follows.
- Objects may look collapsed; thinner or bigger than usual.
  - An object with a higher position than the road surface may look farther away than it actually is or may not appear at all.
  - Tall objects may appear protruding from the non-displayed areas of the image.
- ? Variations in the brightness of the image may appear for every camera.
- ? The displayed image may be shifted by inclination of the vehicle body, change in vehicle height, etc., depending on the number of passengers, amount of luggage, fuel quantity, etc.
- ? If the front doors or tailgate are not completely closed; neither the image nor the guide lines are displayed.
- ? The position relations of the vehicle icon and the road surface or obstacle may differ from the actual positions.
- ? The black areas of the vicinity of the vehicle icon are areas that are not captured by the camera.
- ? Images like the following are combined, thus some areas may be difficult to view.

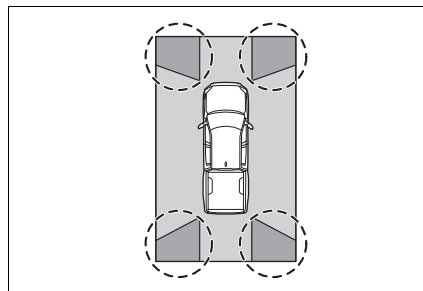


 **WARNING**


When a sensor indicator on the intuitive parking assist display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.

**Area of the image captured by the camera**


► Panoramic view & front view

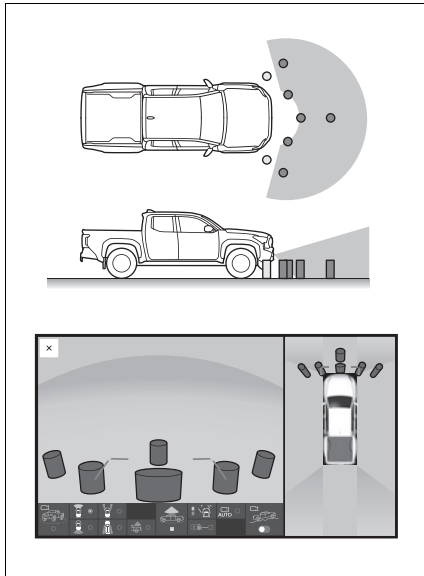

► Front split view

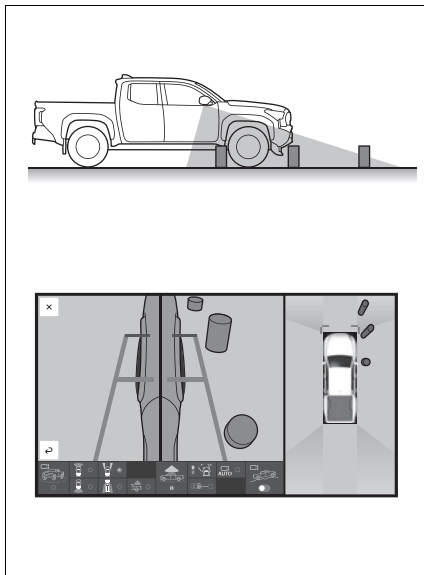


► Panoramic view & rear view

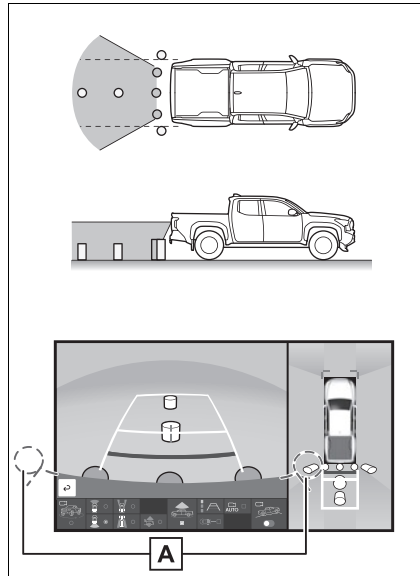

**A** The area around both corners of the bumper will not be displayed.


► Wide rear view

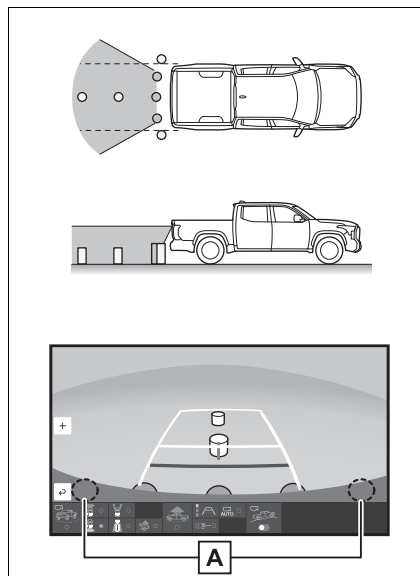

**A** The area around both cor-

ners of the bumper will not be displayed.


► Rear split view

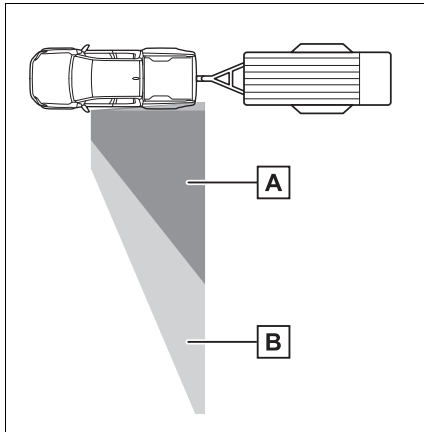


The area able to be seen changes depending on the camera angle adjustments.

- A** When the camera angle is in the middle (Left: 50%/Right: 50%)
- B** When the camera angle is at the MAX on the left side (Left: 100%)

► Hitch zoom view

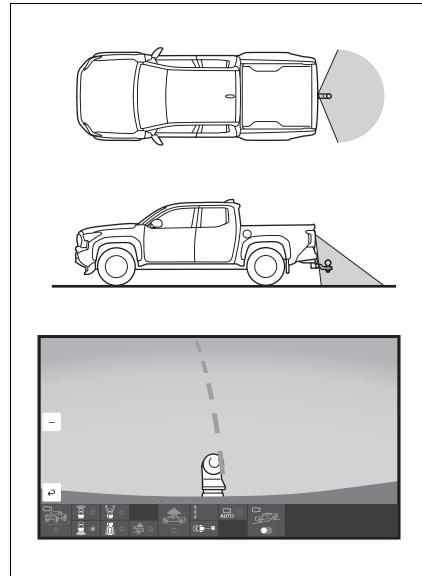


► Bed view

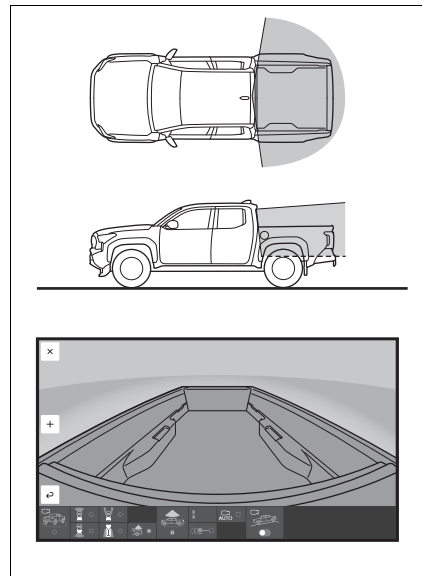


? The area covered by the camera is limited. Objects which are close to either corner of the bumper or under the bumper cannot be seen on the screen.

- ? The area displayed on the screen may vary depending on vehicle orientation or road conditions.
- ? The camera uses a special lens. The distance in the image displayed on the screen will differ from the actual distance.
- ? In the rear split view, there is a blind spot due to the size (length and height) of the trailer.
- ? In the hitch zoom view, if a backlit license plate is equipped it may be reflected in the screen.
- ? In the bed zoom view, the section near the cabin is a blind spot.

► Rear camera

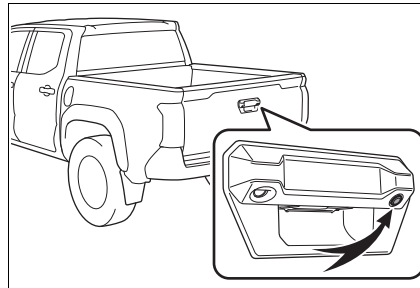


► Bed camera

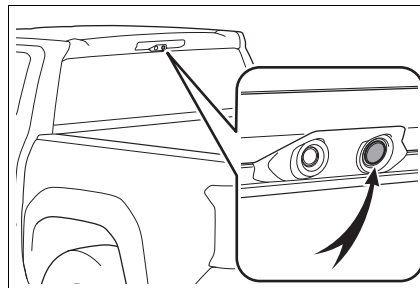


**The camera**

The cameras for the panoramic view monitor are located as shown in the illustrations.

► Front camera

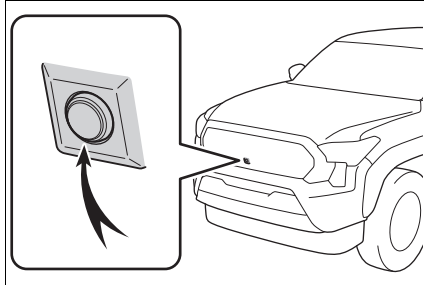

► Side cameras

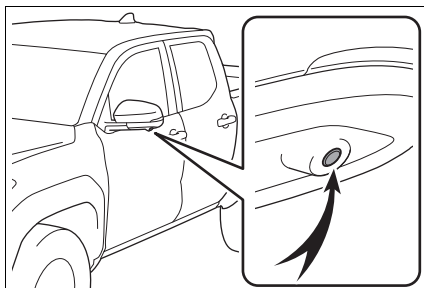


**Using the camera**

If dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

**NOTICE**

- ? The panoramic view monitor may not operate properly in the following cases.
  - If the camera is hit, the position and mounting angle of the camera may change.

 **NOTICE**

- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
- Do not allow an organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.

? Do not expose the camera to strong impacts as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

to check visually.


- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

**Difference between the screen and the actual road**

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure

**When the ground behind the vehicle slopes up sharply**


The distance guidelines are projected on a horizontal surface, distances on an upward sloping surface appear farther from the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

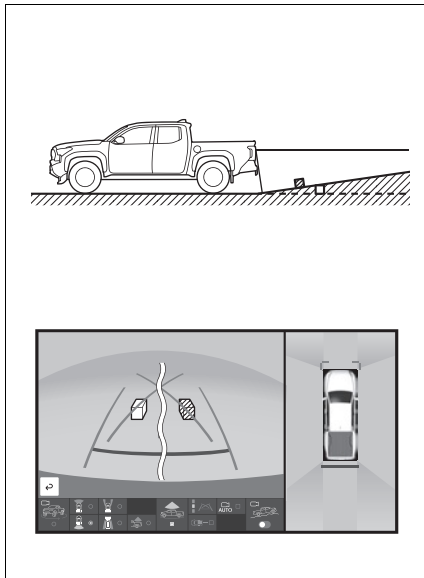

**When the ground behind the vehicle slopes down sharply**


The distance guidelines are projected on a horizontal surface, distances on a downward sloping surface appear closer to the vehicle than the actual distance.

Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

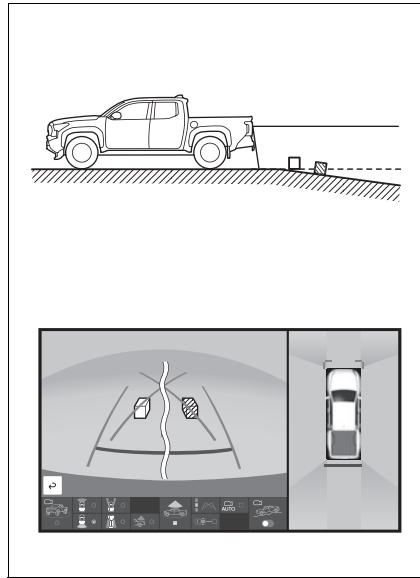

**When any part of the vehicle sags**

When the vehicle posture tilts due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

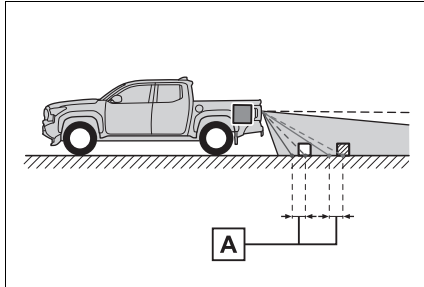


**A** A margin of error

**Distortion of three-dimensional objects on the screen**

When there are three-dimensional objects (such as vehicle bumpers, etc.) nearby in positions higher than the surface of the road, take extra care when using the following.

**Panoramic view display (including magnified display)**

Since the panoramic view processes and displays images based on flat road surfaces, it cannot depict the position of three-dimension objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. For example, even though it appears that there is space between the bumpers of the two vehicles in the illustration below and they are not likely to collide, in reality, a collision is about to occur.

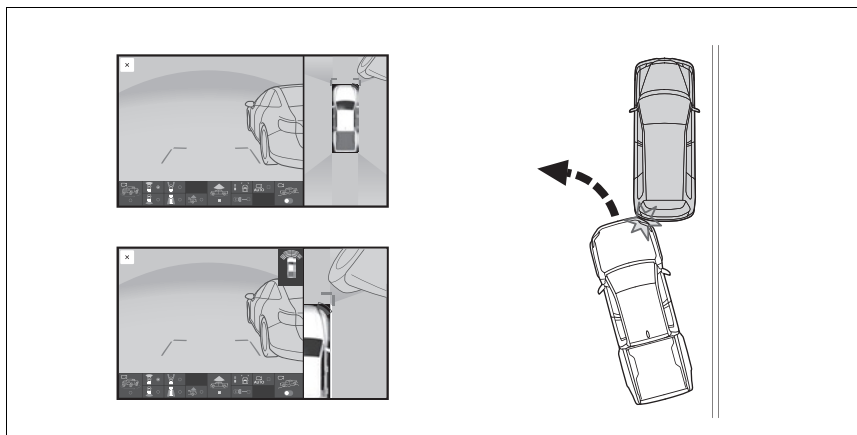



**⚠ WARNING**

When a sensor indicator on the intuitive parking assist display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.

**When approaching three-dimensional objects**


The estimated course lines target flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

**⚠ WARNING**

When a sensor indicator on the intuitive parking assist display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.


**Estimated course lines**

Since the estimated course line is displayed for a flat road surface, it cannot depict the position of three-dimensional objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. Even if the bumpers of the vehicle is on the outside of the estimated course line in the image, in reality, the vehicles are on a collision course.

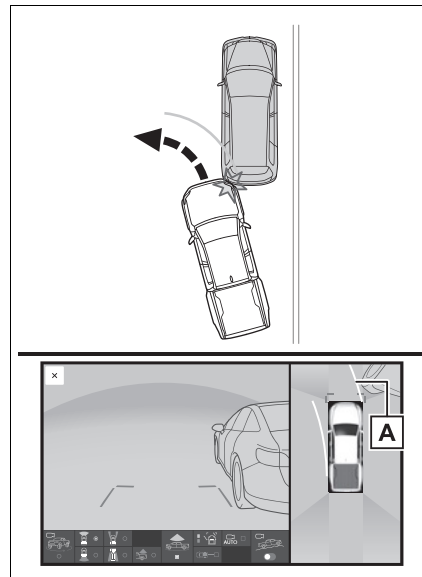


**A** Estimated course line  
 Three-dimensional objects  
 (such as the overhang of a wall)

or loading platform of a truck) in high positions may not be projected on the screen. Check the safety of the surroundings directly.

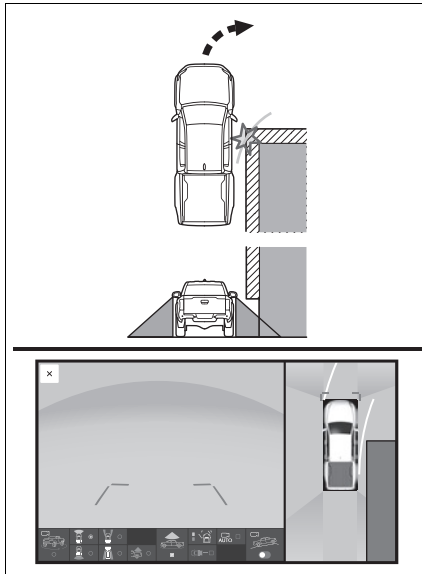


The pillar that is diagonal to the parking spot may be displayed perpendicular on the screen. Even if it seems like there will not be a collision, the pillar is diagonal, so there may be collision with the upper part of the pillar.


Check the safety of the surroundings directly.

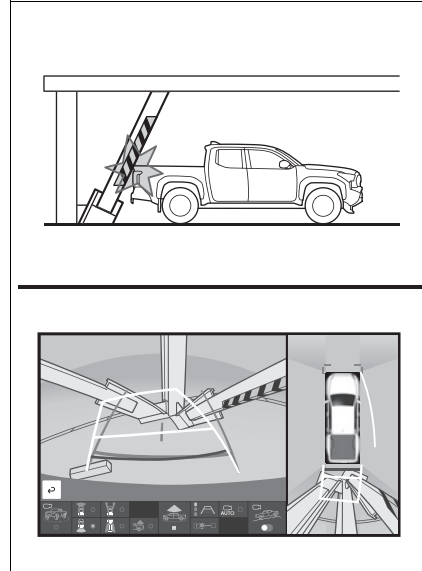

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

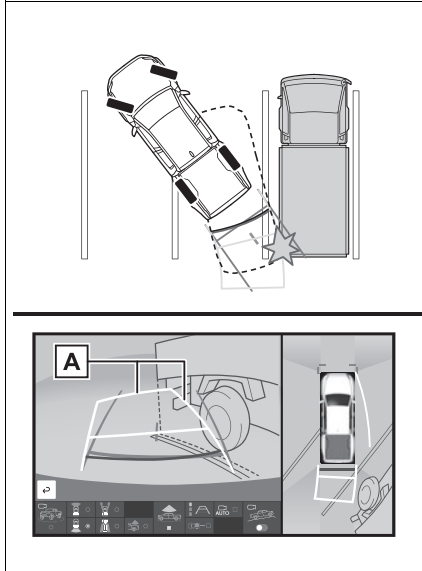

**A** Estimated course lines

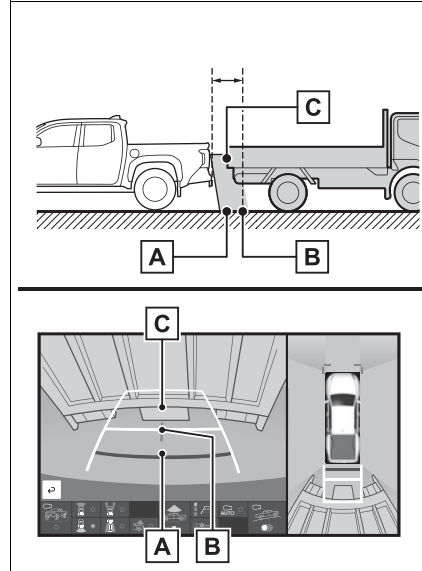

**Distance guide lines**

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point **B**. However, in reality if you back up to point **A**, you will hit the truck. On the screen, it appears that **A** is closest and **C** is farthest away. However, in reality, the distance to **A** and **C** is the same, and **B** is farther than **A** and **C**.


### Things you should know

#### If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> <li>• The vehicle is in a dark area</li> <li>• The temperature around the lens is either high or low</li> <li>• The outside temperature is low</li> <li>• There are water droplets on the camera</li> <li>• It is raining or humid</li> <li>• Foreign matter (mud, etc.) is adhering to the camera</li> <li>• Sunlight or headlights are shining directly into the camera</li> <li>• The vehicle is under fluorescent lights, sodium lights, mercury lights, etc.</li> </ul>	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the panoramic view monitor system is the same as the procedure for adjusting the screen display. (Refer to the "MULTIMEDIA OWNER'S MANUAL".)</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera.	Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Toyota dealer.
	<ul style="list-style-type: none"> <li>• The vehicle is tilted. (There is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li> <li>• The vehicle is used on an incline.</li> </ul>	If this happens due to these causes, it does not indicate a malfunction. Back up while visually checking the vehicle's surroundings.
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Toyota dealer.
Guide lines are not displayed	The tailgate is open.	Close the tailgate. If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.
 is displayed	<ul style="list-style-type: none"> <li>• Battery has been reinstalled.</li> <li>• The steering wheel has been moved while the battery was being reinstalled.</li> <li>• Battery power is low.</li> <li>• The steering sensor has been reinstalled.</li> <li>• There is a malfunction in the signals being output by the steering sensor.</li> </ul>	Have the vehicle inspected by your Toyota dealer.
The panoramic view display cannot be magnified	The intuitive parking assist may be malfunctioning or dirty.	Follow the correction procedures for malfunctions of the intuitive parking assist. (→P.317)
The see-through view/moving view cannot be displayed		

**Multi-terrain Monitor\***

\*: If equipped

**The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.**

**⚠ WARNING**

Observe the following precautions to avoid an accident that could result in death or serious injuries.


- ? **When using the Multi-terrain Monitor system**
- ? Never rely solely on the Multi-terrain Monitor. As with unequipped vehicles, drive carefully while directly confirming the safety of your surroundings and the area to the rear of the vehicle. Take particular care to avoid parked cars and other obstacles.
- ? Due to the characteristics of the camera lens, the actual position and distance of people and other obstacles will differ from those shown on the Multi-terrain Monitor screen. Directly confirm the safety of your surroundings before driving. When the outer mirrors are not positioned in normal position, images will not be displayed properly on the panoramic view monitor.


? Do not drive while only looking at the screen. When driving, make sure to directly confirm the safety of your surroundings, such as by visually checking the area and using the vehicle's mirrors.

? In low temperatures, the screen may darken or the images may become faint. Images of moving objects in particular may distort or disappear from the screen. Therefore, make sure to drive carefully while directly visually confirming the safety of your surroundings.

**Camera switch**


The camera switch is located as shown in the illustration.

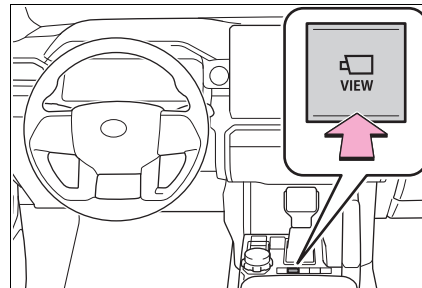

The Multi-terrain Monitor is displayed by operating  when vehicle speed is approximately 10 mph (16 km/h) or less. If the vehicle speed exceeds approximately 10 mph (16 km/h), the Multi-terrain Monitor display is canceled.

### Menu button

The screens that are displayed can be selected by the following buttons.

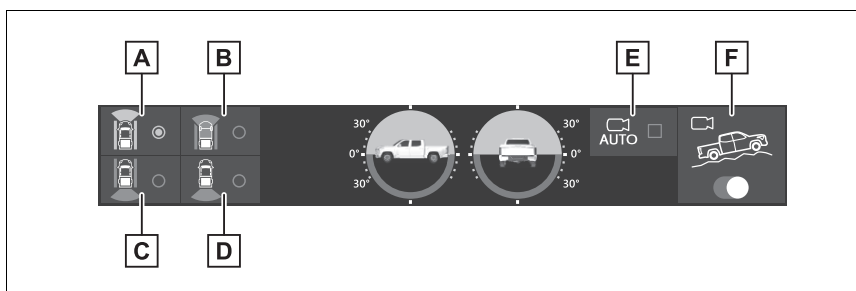

- A** Front view & dual side view
- B** Under vehicle terrain view & dual side view
- C** Rear view & dual side view
- D** Wide rear view
- E** Auto mode on/off button (→P.396)
- F** Multi-terrain Monitor on/off button

Panoramic View Monitor is displayed when the Multi-terrain Monitor is turned OFF. (→P.357)

### When the front-wheel drive control switch is in “4L”, or “4H” and Multi-terrain select is ON


The Multi-terrain Monitor displays a screen suitable for off-road.

- The driver can drive while confirming the following guidelines with a front view
  - Distance with the obstacle in the front
  - Estimated course line
- The driver can drive while

confirming the obstacle in the flank of tire neighborhood and the vehicle with a side screen

### Checking the area to the front and sides of the vehicle

- ▶ Front view & dual side view  
Select the front view & dual side view button.

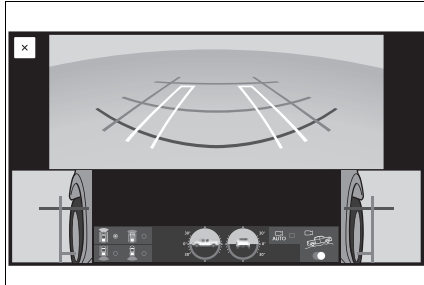


When the front view and side view screens are touched, each of the display sizes can be changed.


**Checking the condition of the road surface under the vehicle**

- ▶ Under vehicle terrain view & dual side view

Select the under vehicle terrain view & dual side view button.

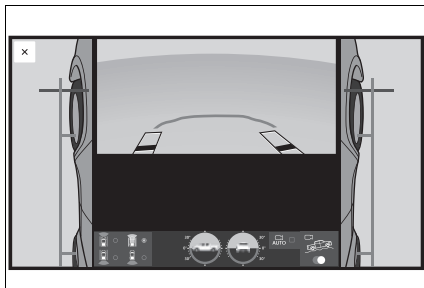

- ▶ Under vehicle terrain view & dual side view (front magnified)

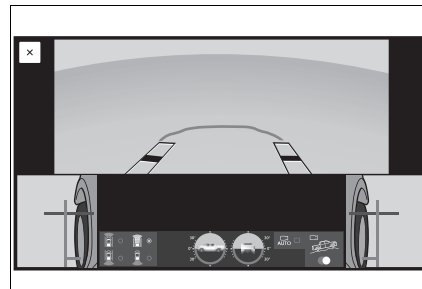


When the under vehicle terrain view and side view screens are touched, each of the display sizes can be changed.

**Checking the area to the rear of the vehicle**

- ▶ Rear view & dual side view

Select the rear view & dual side view button.

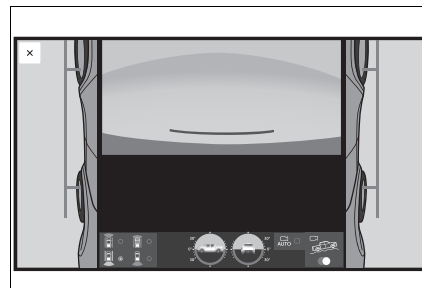



► Wide rear view

Select the wide rear view button.




The rear view & dual side view and the wide rear displays can be switched by touching the screen.



**When the front-wheel drive control switch is in “2H”, or “4H” and Multi-terrain select is OFF**

The panoramic view monitor is displayed. (→P.357)

**Automatic display mode**

When automatic display mode is turned on, the Multi-terrain Monitor screen is displayed in the following conditions, even if  has not been operated.

- When the shift lever is shifted to D, N (automatic transmission) or with the parking brake disengaged (manual transmission).
- When vehicle speed is reduced to approximately 10 mph (16 km/h) or less.

- ? The automatic display mode switches between on and off each time  is selected. When automatic display mode is on, an indicator illuminates on the icon.
- ? Even when automatic display mode is on, the display can still be switched by pressing .

**Screen display and functions**


The front-wheel drive control switch in the case of “4L”, or “4H” and Multi-terrain select is ON, the Multi-terrain Monitor can display a screen suitable for off-road.

**Front view & dual side view**

Front view & dual side view can be used to check the area around the front of the vehicle.

- In addition to an image of the front of the vehicle, guide lines are displayed in a composite view to provide reference for when deciding a direction to move forward in.
- If the steering wheel is turned 270° or more, guide lines and other

features to support turning are automatically displayed.

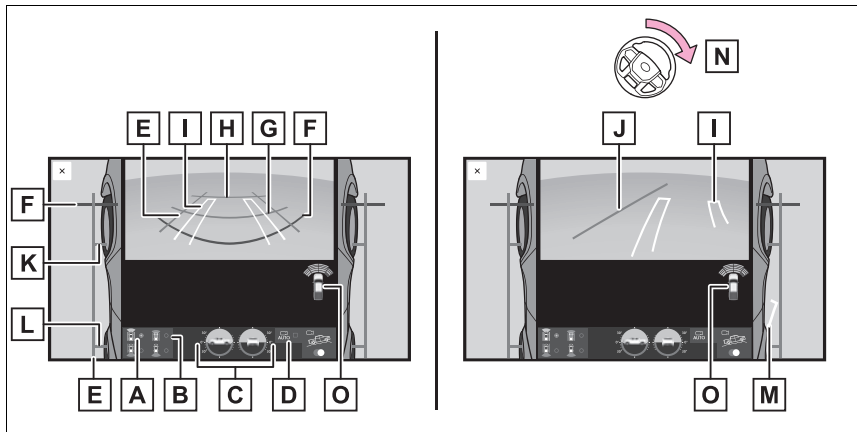

- A** Front view & dual side view button
- B** Under vehicle terrain view & dual side view button (→P.399)
- C** Clinometer  
Displays the vehicle's estimated degree of incline. (→P.398)
- D** Automatic display button  
Select to turn automatic display mode on/off. (→P.396)
- E** Vehicle width lines (blue)  
Shows guide lines of the vehicle's width including the outside rear view mirrors.
- F** 1.5 ft. (0.5 m) distance guide line (red)  
Show distance in front of the vehicle.  
• Display points approximately 1.5 ft. (0.5 m) from the edge of the bumper.
- G** 3 ft. (1 m) distance guide line (blue)
- H** 6 ft. (2 m) distance guide line (blue)
- I** Front tire course line (yellow)  
Shows the estimated course of the front tires according to steering wheel position.
- J** Forward movement guide line (blue)  
Shows the estimated tire course of the tightest possible turn.
- K** Front tire contact line (blue)  
Shows guide lines of where the front tire touches the ground.

**L** Rear tire contact line (blue)

Shows guide lines of where the rear tire touches the ground.

**M** Rear tire course line (yellow)

Shows the estimated course of the rear tires.

**N** When the steering wheel is turned by 270° or more

**O** Intuitive parking assist/slip display


When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds or indicates a tire slippage. (→P.399)

? The screen can be displayed when the shift lever is in a position other than P (automatic transmission) or with the parking brake disengaged (manual transmission).

? When the intuitive parking assist detects an obstacle or another vehicle, a warning message pops up in the clinometer/slip display area.

**Clinometer**

Clinometer displays the vehicle inclination to the front, rear, left and right within a range of 0° to approximately 30°.

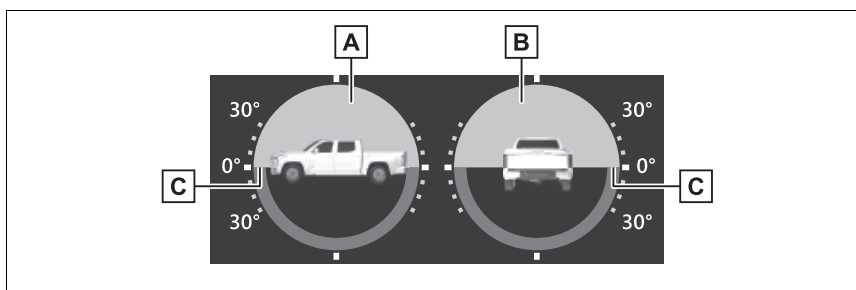

**A** Degree markers of incline to the front and rear

Indicates the vehicle inclination in degrees in the front and rear directions.

**B** Degree markers of incline to the left and right

Indicates the vehicle inclination in degrees in the left and right directions.

**C** Pointer


Indicates the degree of the vehicle inclination in comparison to a parallel line.

? The display indicates the incline of the vehicle in degrees shown by the movement of the pointer and the rotation of the vehicle image.

- ? The color of the degree markers of incline to the front, rear, left and right changes according to the current incline of the vehicle.
- ? After the engine switch is in ON, the degree of incline is not displayed until such information is determined.
- ? The degree of incline showed on the clinometer is only an approximate indication, and may differ from the degree of incline measured using other equipment.

**Slip display**

When tire slippage is detected, the Intuitive parking assist display area is automatically switched to the slip display.

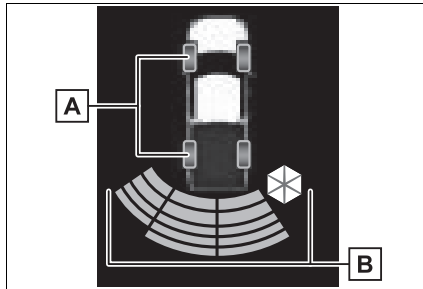

**A** Tire display

Indicates the position of freely spinning tires in yellow if the tire spins. (During Crawl Control is operating, all of the tires are indicated in yellow.)


**B** Pop-up display of the intuitive parking assist

Displayed if an obstacle is detected while the intuitive parking assist is turned on.

4  
Driving

**Under vehicle terrain view & dual side view**

Lines indicating current vehicle and tire position are displayed in a composite view on an image taken approximately 32 ft. (10 m) behind the current vehicle position and assists the driver to check conditions underneath the vehicle or determine the position of the front tires.

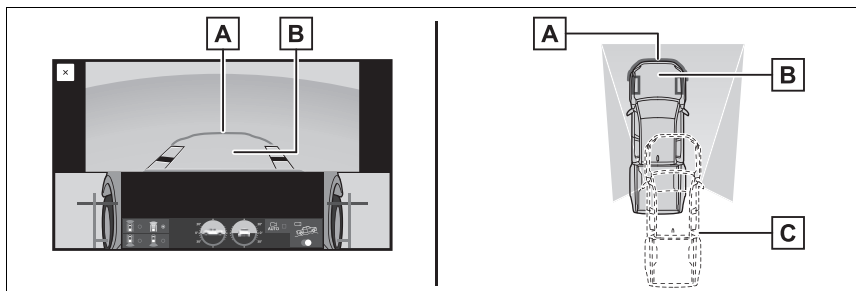


**A** Current vehicle position


- B** Image displayed in the under vehicle terrain view (image taken approximately 32 ft. (10 m) behind the current vehicle position)
- C** Vehicle position at the time the image was taken (approximately 32 ft. (10 m) behind the current vehicle position)

### Displaying the under vehicle terrain view

- Under vehicle terrain view & dual side view

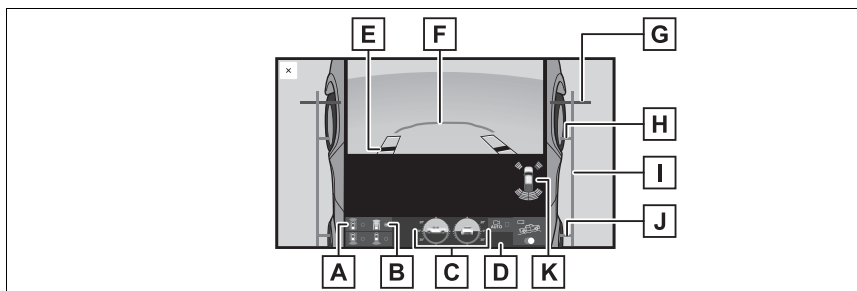

- Under vehicle terrain view & dual side view (front magnified)

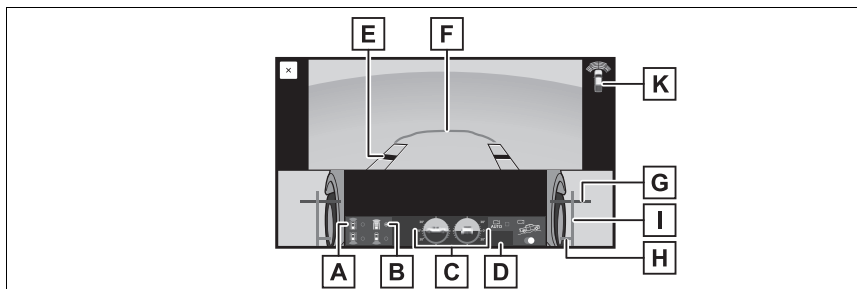

- A** Front view & dual side view button (→P.396)
- B** Under vehicle terrain view & dual side view button
- C** Clinometer  
Displays the vehicle's estimated degree of incline. (→P.398)
- D** Automatic display button  
Select to turn automatic display mode on/off. (→P.396)
- E** Tire position indicator lines (black or white)  
Indicates the estimated position of the front tires.
- F** Vehicle position indicator lines (blue)  
Indicates the estimated position of the vehicle.

**G** 1.5 ft. (0.5 m) distance guide line (red or black)

Show distance in front of the vehicle.

- Display points approximately 1.5 ft. (0.5 m) from the edge of the bumper.

**H** Front tire contact line (blue)

Shows guide lines of where the front tire touches the ground.

**I** Vehicle width lines (blue)

Shows guide lines of the vehicle's width including the outside rear view mirrors.

**J** Rear tire contact line (blue)

Shows guide lines of where the rear tire touches the ground.

**K** Intuitive parking assist/slip icon

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds or indicates a tire slippage. (→P.399)

- ? The screen can be displayed when the shift lever is in a position other than P (automatic transmission) or with the parking brake disengaged (manual transmission).
- ? While the under vehicle terrain view is displayed, if the vehicle speed reaches or exceeds approximately 10 mph (16 km/h), the screen automatically returns to the front view display.
- ? In the following situations, the system may not operate normally, or it may not be possible to switch to the under vehicle terrain view.
  - The road is covered with snow
  - It is nighttime and the road has no illumination
  - Dirt or foreign matter is adhering to the camera lens
  - There is water in front of the vehicle (a river, puddle, sea water, etc.)

**! WARNING**

- ? The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.
- ? The image displayed is one that was previously taken at a point approximately 32 ft. (10 m) behind the current vehicle position. In cases such as when objects move after the image is taken, the image displayed on the screen may differ from the actual state.


**Rear view & dual side view/wide rear view**

The rear view & dual side view/wide rear view screen provide sup-


port when checking the areas of behind the vehicle and around the vehicle while backing up, for example while parking.

The screens will be displayed when the shift lever is in R.

► Rear view & dual side view

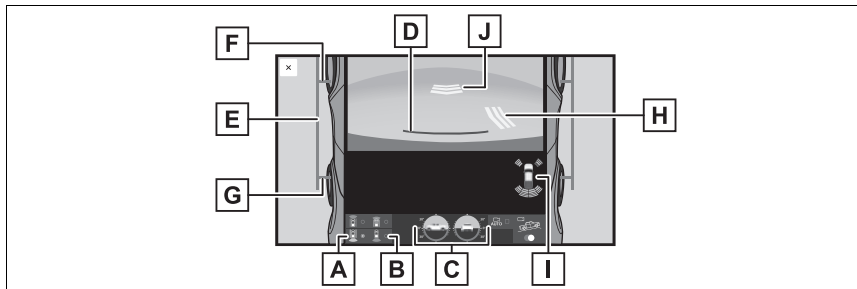

► Wide rear view

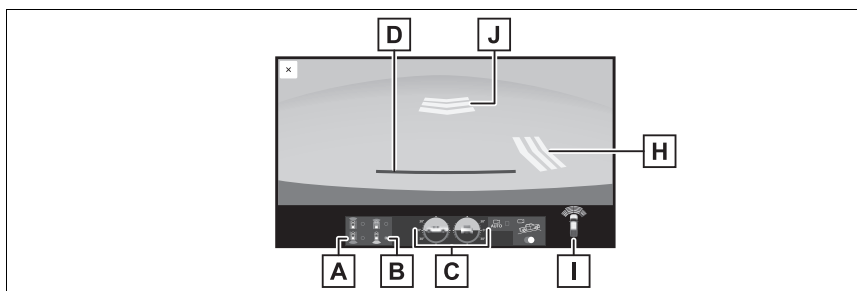

**A** Rear view & dual side view

**B** Wide rear view button

**C** Clinometer

Displays the vehicle's estimated degree of incline. (→P.398)

**D** 1.5 ft. (0.5 m) distance guide line (red)

Show distance in rear of the vehicle.

- Display points approximately 1.5 ft. (0.5 m) from the edge of the bumper.

**E** Vehicle width guide lines (blue)

Displays a guide path when the vehicle is being backed straight up.

**F** Front tire contact line (blue)

Shows guide lines of where the front tire touches the ground.

**G** Rear tire contact line (blue)

Shows guide lines of where the rear tire touches the ground.

**H** Rear Cross Traffic Alert

When a sensor detects a vehicle approaching from the rear, the direction of the vehicle approaching from the rear is displayed and the buzzer sounds.

**I** Intuitive parking assist/slip display

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds or indicates a tire slippage. (→P.399)

**J** Rear Camera Detection

When a sensor detects a vehicle approaching from the rear, the direction of the vehicle approaching from the rear is displayed and the buzzer sounds.

- ? The screen can be displayed when the shift lever is in a position other than P (automatic transmission) or with the parking brake disengaged (manual transmission).
- ? For details about the Rear Cross Traffic Alert function and Rear Camera Detection. (→P.324, 329)
- ? If the tailgate is not closed, guide lines will not be displayed. If the guide lines do not display even when the tailgate is closed, have the vehicle inspected at your Toyota dealer.

**! WARNING**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

**Multi-terrain Monitor precautions**

→P.380

**Things you should know**

→P.391




### Driving mode select switch\*

\*: If equipped

The driving modes can be selected to suit driving condition.


### System components

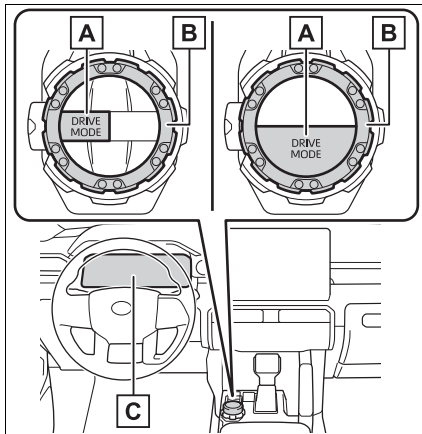


- A** "DRIVE MODE" switch
- B** Mode select switch
- C** Multi-information display  
(→P.98, 107)

### Selecting the driving mode

- 1 Press the "DRIVE MODE" switch.

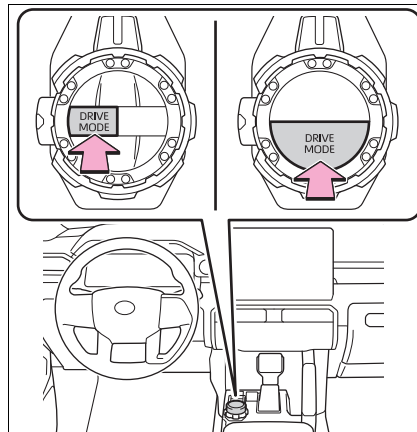

- 2 Select the driving modes on the multi-information display while turning the mode select switch left and right.

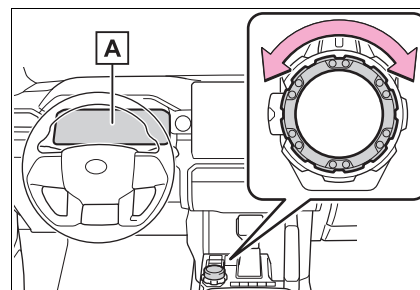

- A** Multi-information display
  - ▶ Vehicles without Adaptive Variable Suspension system
  - "NORMAL" mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- “ECO” mode  
Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling). The “ECO” indicator comes on.
- “SPORT” mode  
Assists acceleration response by controlling the transmission, engine and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads. The “SPORT” indicator comes on.
- ▶ Vehicles with Adaptive Variable Suspension system
- “NORMAL” mode  
Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.
- “COMFORT” mode  
By controlling the suspension, riding comfort is further enhanced. Suitable for city driving. The “COMFORT” indicator comes on.
- “ECO” mode  
Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling). The “ECO” indicator comes on.
- “SPORT S” mode  
Assists acceleration response by controlling the transmission, engine and steering. Suitable for when precise handling is desirable, for

example when driving on mountain roads. The “SPORT S” indicator comes on.

- “SPORT S+” mode  
Helps to ensure the controllability and stability of the vehicle by integrally controlling the steering wheel and suspensions as well as the transmission and engine, making it suitable for sporty driving. The “SPORT S+” indicator comes on.
- “CUSTOM” mode  
Allows you to drive with the power train, chassis and air conditioning system functions set to your preferred settings. Custom mode settings can only be changed on the drive mode customization display of multimedia system. The “CUSTOM” indicator comes on.

? **The driving mode select switch can be operated when**

The front-wheel drive control switch is in “2H” and “4H”.

? **Operation of the air conditioning system in Eco mode**

Eco mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, perform the following operations:

- ? Adjust the fan speed (→P.444, 450)
- ? Turn off Eco drive mode (→P.404)
- ? **Automatic deactivation of driving modes:**

Driving mode is deactivated or the driving mode will be changed to normal mode in the following conditions:

- ? After turning the engine switch off and then turning it to on

- ? When the front-wheel drive control switch is in "4L" (4WD models only)
- ? When the Multi-terrain Select is turned on (if equipped)
- ? When the Downhill assist control system is turned on (if equipped)
- ? When the "TOW HAUL" mode is turned on (if equipped)

? **Customization**


The Custom mode can be changed. (Customizable features: →P.653)

**Four-wheel drive system\***

\*: If equipped

**Use the front-wheel drive control switch to select the following transfer modes:**

**Front-wheel drive control switch**

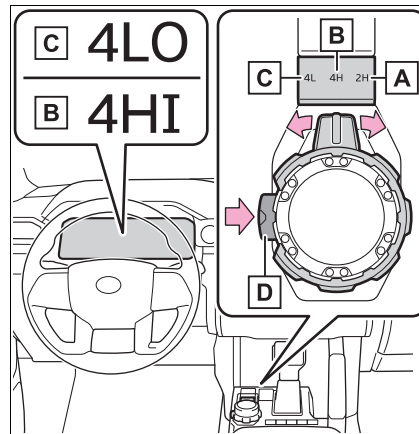

**A** "2H" (high speed position, two-wheel drive)

Use this for normal driving on dry hard-surfaced roads. This position gives greater economy, quietest ride and least wear.

Hold down **D** and turn the dial to select.

**B** "4H" (high speed position, four-wheel drive)

Use this for driving only on tracks that permit the tires slide, like off-road, icy or snow-covered roads. This position provides greater traction than two-wheel drive.

The "4HI" indicator will come on.  
Hold down **[D]** and turn the dial to select.

**[C]** "4L" (low speed position, four-wheel drive)

Use this for maximum power and traction. Use "4L" for climbing or descending steep hills, off-road driving, and hard pulling in sand, mud or deep snow.

The "4LO" indicator will come on.

Hold down **[D]** and turn the dial to select.

### Shifting between "2H" and "4H"

? **Shifting from "2H" to "4H"**

- 1 Reduce vehicle speed to less than 62 mph (100 km/h).
- 2 Push and turn the front-wheel drive control switch to "4H".

The "4HI" indicator will come on.

? **Shifting from "4H" to "2H"**

- 1 Reduce vehicle speed to less than 62 mph (100 km/h).
- 2 Push and turn the front-wheel drive control switch to "2H".

The "4HI" indicator will go off.

### Shifting between "4H" and "4L"

? **Shifting from "4H" to "4L"**

- ▶ Vehicles with an Automatic transmission
  - 1 Stop the vehicle completely and continue to depress the brake pedal.
  - 2 Shift the shift lever to N.
  - 3 Push and turn the front-wheel drive control switch to "4L".

The "4LO" indicator will come on and the "4HI" indicator go off.

- ▶ Vehicles with a Manual transmission

- 1 Stop the vehicle completely and continue to depress the brake pedal.
- 2 Depress and hold the clutch pedal.
- 3 Push and turn the front-wheel drive control switch to "4L".

The "4LO" indicator will come on and the "4HI" indicator go off.

? **Shifting from "4L" to "4H"**

- ▶ Vehicles with an Automatic transmission
  - 1 Stop the vehicle completely and continue to depress the brake pedal.
  - 2 Shift the shift lever to N.
  - 3 Push and turn the front-wheel drive control switch to "4H".

The "4LO" indicator will go off and the "4HI" indicator come on.

▶ Vehicles with a Manual transmission

- 1 Stop the vehicle completely and continue to depress the brake pedal.
- 2 Depress and hold the clutch pedal.
- 3 Push and turn the front-wheel drive control switch to “4H”.

The “4LO” indicator will go off and the “4HI” indicator come on.

? **When the front-wheel drive control switch is shifted to “4L”**

VSC is automatically turned off.

? **If the “4HI” indicator flashes**

The transfer mode may not successfully change. Drive straight ahead while accelerating or decelerating, or drive in reverse.

? **If the “4HI” indicator is ON and the “4LO” indicator continues to flash**

Shift the shift lever to D or R (Vehicles with an Automatic transmission) or 1st gear or Reverse (Vehicles with a Manual transmission) and drive the vehicle slowly, then stop.

? **If the “4HI” indicator continues to flash and the “4LO” indicator is ON**

Shift the shift lever to D or R (Vehicles with an Automatic transmission) or 1st gear or Reverse (Vehicles with a Manual transmission) and drive the vehicle slowly, then stop.

? **If the “4HI” indicator is ON and the “4LO” indicator continues to flash and a buzzer sounds**

The shift lever is not in N (Vehicles with an Automatic transmission) or the clutch pedal is not held in the depressed position (Vehicles with a

Manual transmission) and/or the vehicle is moving. Stop the vehicle completely, shift the shift lever to N and make sure that the indicator stops flashing.

? **If the “4HI” indicator continues to flash and the “4LO” indicator is ON and a buzzer sounds**

The shift lever is not in N and/or the vehicle is moving. Stop the vehicle completely, shift the shift lever to N (Vehicles with an Automatic transmission) or the clutch pedal is not held in the depressed position (Vehicles with a Manual transmission) and make sure that the indicator stops flashing

? **If the “4HI” and “4LO” indicator flashes rapidly**

There may be a malfunction in the four-wheel drive system. Have the vehicle inspected by your Toyota dealer immediately.

? **Shift between 4H and 4L at low temperature**

Immediately after starting the engine in a low-temperature environment, the shift between 4H and 4L may be prohibited because the transmission fluid is cold. At that time, a warning message will be displayed in the multi-information display, so follow the message and operate the front-wheel drive control switch again after warming up.

? **Four-wheel drive usage frequency**

You should drive in four-wheel drive for at least 10 miles (16 km) each month. This will assure that the front drive components are lubricated.

**⚠ WARNING**

? **Shifting the front-wheel drive control switch from “2H” to “4H” while driving**

Never operate the front-wheel drive control switch if the wheels are slipping. Stop the slipping or spinning before shifting.

? **When the vehicle is parked (Vehicles with an Automatic transmission)**

If the shift lever is moved before the “4HI” or “4LO” indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.) Therefore, the vehicle is free to roll even if the automatic transmission is in P. You or someone else could be seriously injured. You must complete the shifting of the transfer mode before placing transmission in P.

**AUTO LSD system\***

\*: If equipped

**The AUTO LSD system aids traction by using the traction control system to control engine performance and braking when one of the drive wheels begins to spin. The system should be used only when one of the drive wheels spinning occurs in a ditch or rough surface.**

**System operation**


The system can be used only on 2WD models. The system is activated when driving at a speed under 62 mph (100 km/h). The AUTO LSD system will be activated with the following two procedures.

To turn the AUTO LSD system on, quickly press and release



The “AUTO LSD” indicator light will come on.

Press again to turn the system off.

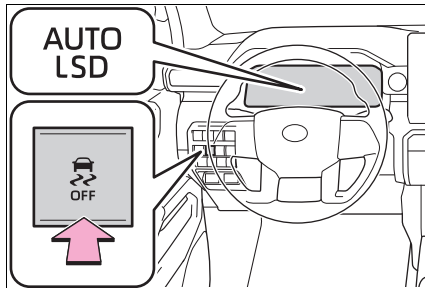

? **If the brake system overheats**  
 The system will cease operation and a buzzer will alert the driver. At this time, the “Traction Control Turned OFF” displayed in the multi-information display. Stop the vehicle in a safe place. (There is no problem with continuing normal driving.) The system will be automatically restored after a short time.

**! WARNING**

? **To avoid an accident**

- ? Do not use the AUTO LSD system in conditions other than when one of the drive wheels spinning occurs in a ditch or rough surface.
- ? Do not drive with the AUTO LSD system continuously turned on.

Failure to do so, a much greater steering effort and more careful cornering control will be required.

**! NOTICE**

? **Activating while driving**  
 Do not activate the AUTO LSD system if the wheel is slipping. Stop the slipping or spinning before activating.

**Rear differential lock system\***

\*: If equipped


**Use the rear differential lock system only when wheel spinning occurs in a ditch or on a slippery or ragged surface. This system is effective in case one of the rear wheels is spinning.**

**Rear differential lock switch**

Press the switch to turn the system on/off.

At this time, the rear differential lock indicator and indicator in the differential lock/unlock display will blink. Wait a few seconds for the system to complete operation. After the rear differential is locked, the indicators will stop blinking and remain on.

To unlock the rear differential, push the switch again.

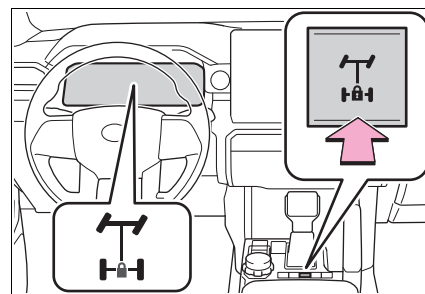

- ? **Operating tips**
- ? Be sure to stop the wheels before locking the differential.
  - ? Unlock the differential as soon as

the vehicle moves out.

? **Unlocking the rear differential**

If the rear differential lock indicator still flashes even after unlocking the rear differential, check the safety of the surrounding area and slightly turn the steering wheel in either direction while the vehicle is in motion.

? **Automatic unlocking feature**

The rear differential lock is also unlocked in any of the following situations:

- ? When the front-wheel drive control switch is turned to "2H" or "4H"
- ? When the engine switch is turned off

? **After unlocking the rear differential**

Check that the indicators go off.

? **The rear differential lock indicator and indicator in the differential lock/unlock display**

- ? The indicators blink while locking/unlocking the rear differential.
- ? If the indicators continue to blink when you operate the rear differential lock switch, stop the vehicle completely and operate the switch again.

If the indicators continue to blink even if doing so, have the vehicle inspected by your Toyota dealer as soon as possible. There may be a trouble in the four-wheel drive system.

? **Locking the rear differential**

The following systems do not operate when the rear differential is locked.

- ABS
- Brake assist system
- VSC
- Downhill assist control system (if equipped)
- TRAC

 **WARNING**

? **When using the rear differential lock system**

Failure to observe the following precautions may result in an accident.

- ? Do not lock the rear differential in the conditions other than above.
- ? Do not lock the rear differential until the wheels have stopped spinning.
- ? Do not drive over 5 mph (8 km/h) when the differential is locked.
- ? Do not keep driving with the rear differential lock state



## Crawl Control\*

\*: If equipped

**Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Minimizes loss of traction or vehicle slip when driving on slippery road surfaces, allowing for stable driving.**

### WARNING

#### ? When using Crawl Control function


Do not rely solely on the Crawl Control function. This function does not extend the vehicle's performance limitations. Always thoroughly check the road conditions, and drive safely.

#### ? These conditions may cause the system not to operate properly

When driving on the following surfaces, the system may not be able to maintain a fixed low speed, which may result in an accident:

- ? Extremely steep inclines.
- ? Extremely uneven surfaces.
- ? Snow-covered roads, or other slippery surfaces.

## System components

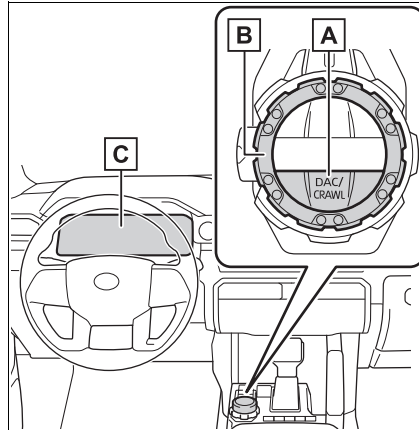

**A** "DAC/CRAWL" switch


**B** Mode select switch

**C** Multi-information display

## Turning Crawl Control on


- 1 Press the "DAC/CRAWL" switch.

The Crawl Control indicator on the multi-information display will come on, and the slip indicator will flash.

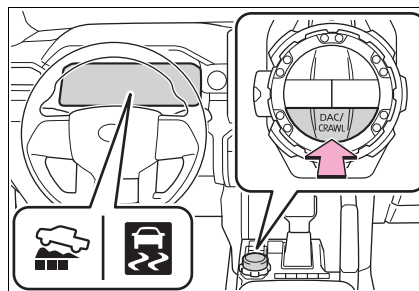

- 2 Turn the mode select switch left or right to select a mode

on the multi-information display.

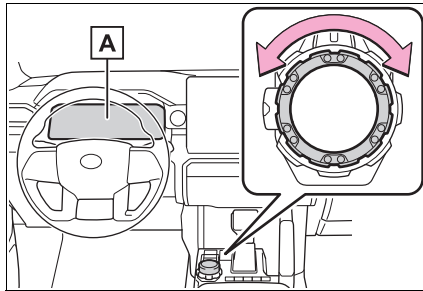

**A** Multi-information display

### Selectable modes

A mode which matches the road conditions can be selected from among the following 5 modes.

“LO”

Suitable for driving on rocky roads or decline

“LO-Mid”

Suitable for driving on rocky roads, decline or bumpy incline

“Mid”

Suitable for driving on bumpy inclines

“Mid-HI”

Suitable for driving on bumpy inclines, debris roads, snow-covered roads, muddy roads, gravel roads and grass roads

“HI”

Suitable for driving on bumpy inclines, debris roads, snow-covered roads, muddy roads, gravel roads and grass roads

### Turning Crawl Control off

- ▶ When the “DAC/CRAWL” switch indicator illuminates

Press the “DAC/CRAWL” switch again.

- ▶ When the “DAC/CRAWL” switch indicator does not illuminate

Press the “DAC/CRAWL” switch to turn the indicator on. Press the “DAC/CRAWL” switch again with the indicator turned on.

If Crawl Control is turned off, the Crawl Control indicator and the slip indicator will go off and a message, stating that Crawl Control has been turned off will be displayed on the multi-information display for several seconds.

When turning off Crawl Control while driving, drive extremely carefully.

#### ? Operating tips

Crawl Control can be used with Multi-terrain Select (if equipped) ON or OFF. (→P.415)

#### ? Operation conditions of the Crawl Control

- ? The engine is running.
- ? The shift lever is in any gear other than P or N.
- ? The front-wheel drive control switch is in “4L”.
- ? The driver’s door is closed.

#### ? Automatic system cancelation of Crawl Control

In the following situations, the

buzzer will sound intermittently and the Crawl Control will be canceled automatically. In this event, the Crawl Control indicator will flash and then go off, and a message stating that Crawl Control has been turned off will be displayed on the multi-information display for several seconds.

? When the shift lever is moved to P or N.

? When the front-wheel drive control switch is in "4H".

? When the driver's door is opened.

? **Function limitations of Crawl Control**

? On vehicles with rear differential lock system, in the following situations, brake control can be used to drive downhill at a constant speed. However, engine control is not available when driving uphill at a constant speed.

- When the vehicle speed exceeds approximately 6 mph (10 km/h).

? In the following situation, engine control and brake control will stop temporarily. In this event, the Crawl Control indicator will flash.

- With the rear differential is locked: when the vehicle speed exceeds approximately 6 mph (10 km/h).
- With the rear differential is unlocked: when the vehicle speed exceeds approximately 15 mph (25 km/h).

? **When the Crawl Control system is operated continuously**

? If Crawl Control is used continuously for a long time, the brake system overheats. In this case, a buzzer will sound, a message stating a malfunction will be displayed on the multi-information display, and the Crawl Control indicator will flash and then go off. In this event, as Crawl Control will be temporarily inoperable, stop the vehicle immediately in a safe place, and allow the brake system to cool down sufficiently until the

message goes off. (In the meantime, normal driving is possible.)

? If Crawl Control is used continuously for a long time, the automatic transmission overheats. In this case, a buzzer will sound, the system will be temporarily canceled, and a message stating a malfunction may be displayed on the multi-information display. In this event, stop the vehicle in a safe place until the message goes off.

? **Sounds and vibrations caused by the Crawl Control system**

? A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in Crawl Control system.

? Either of the following conditions may occur when the Crawl Control system is operating. None of these are indicators that a malfunction has occurred.

- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard after the vehicle comes to a stop.

? **When there is a malfunction in the system**

Warning lights and/or warning messages will turn on. (→P.571, 582)

**Multi-terrain Select\***

\*: If equipped

**Multi-terrain Select is a system that improves drivability in off-road situations.**

Select a mode that most closely matches the type of terrain on which you are driving from several modes.

Brake control, steering feel and drive force control can be optimized in accordance with the selected mode.

**⚠ WARNING**

**? When using the Multi-terrain Select**

Observe the following precautions to avoid an accident that could result in death or serious injuries:


- ? Check that the selected mode indicators are illuminated before driving. Multi-terrain Select will not operate when the indicators are off.
- ? The road conditions listed (→P.415) are for reference only. There is a chance that the function may not be the most appropriate in terms of road conditions such as pitch, slipperiness, undulation, etc. Thoroughly check the road conditions before driving.
- ? Multi-terrain Select is not intended to expand the limits of the vehicle. Check the road conditions thoroughly beforehand, and drive safely and carefully.

**⚠ NOTICE**

**? Precaution for use**

The Multi-terrain Select is intended for use during off-road driving. Do not use the system at any other time.

**System components**

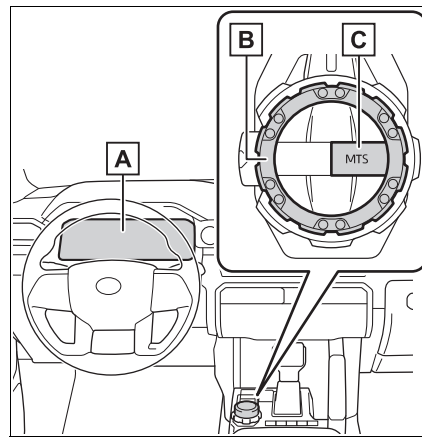

**A** Multi-information display


Selected mode is displayed.

**B** Mode select switch

**C** "MTS" switch


**Switching modes**

- 1 Press the "MTS" switch.

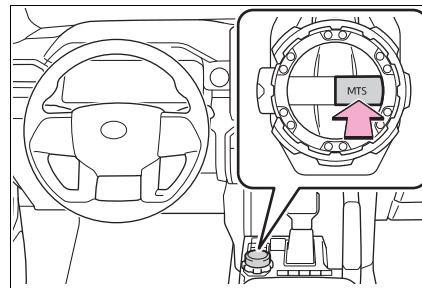



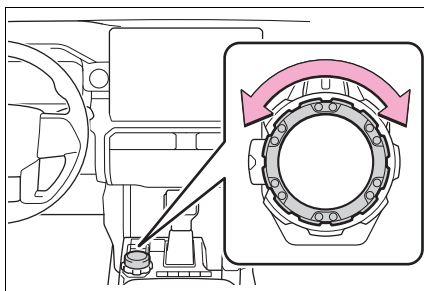

- 2 Select the Multi-terrain Select modes on the multi-information display while turning the mode select switch left and right.

Depending on the positions of the front-wheel drive control switch, a mode can be selected from among the following modes.








- ▶ Front-wheel drive control switch is in "4L"

Mode	Road Conditions
 "AUTO"	Suitable for the road conditions
 "SAND"	Suitable for sandy roads and other slippery conditions
 "MUD"	Suitable for muddy roads and other slippery conditions
 "ROCK"	Suitable for rocky terrain

If the brake control has activated, the slip indicator light will flash.

- ▶ Front-wheel drive control switch is in "4H"

Mode	Road Conditions
 "AUTO"	Suitable for the road conditions
 "DIRT"	Suitable for bumpy road conditions, such as dirt roads
 "SAND"	Suitable for sandy roads and other slippery conditions
 "MUD"	Suitable for muddy roads and other slippery conditions
 "DEEP SNOW"	Suitable for deep snow roads

If the brake control has activated, the slip indicator light will flash.

When the vehicle is in "SAND", "MUD" or "DEEP SNOW" mode, VSC is automatically turned off. (VSC OFF indicator light come on.)

? **Multi-terrain Select**

Multi-terrain Select controls the vehicle so that it can maximize the drive force and improve drivability on rough roads. As a result, fuel efficiency may diminish when compared to driving in normal mode.

? **Automatic system cancelation**

In the following situations, Multi-terrain Select will be canceled automatically.

- ? When the engine switch is turned

off

- ? When the front-wheel drive control switch is in "2H"
- ? When "TOW HAUL" mode is selected while the front-wheel drive control switch is in "4H"
- ? When drive mode select is selected while the front-wheel drive control switch is in "4H"

? **Turning off Multi-terrain Select**

Performing the following turns Multi-terrain Select off, and then the display on the multi-information display will disappear.

- ▶ When the "MTS" switch indicator is illuminated

Press the "MTS" switch while the system is in operation.

- ▶ When the "MTS" switch indicator is not illuminated

Press the "MTS" switch to turn the indicator on.

Press the "MTS" switch again with the Multi-terrain Select indicator illuminated.

? **When the vehicle is stuck**

Switching the transfer and differential For the operation of the following functions, refer to the following pages. (If equipped)

- ? Four-wheel drive system (→P.406)
- ? Rear differential lock (→P.410)

? **Driving in Multi-terrain Select**

The following types of situations may occur, but they are not malfunctions.

- ? Vibrations may be felt throughout the vehicle or steering wheel.
- ? Operating noise may be heard from the engine compartment.

? **When an inspection at your Toyota dealer is necessary**

In the following situations, the sys-

tem may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

- ? When the slip indicator light illuminates.
- ? When the indicator for each mode does not illuminate on the multi-information display even though Multi-terrain Select is selected.

### Clutch start cancel switch\*


\*: If equipped

**The switch allows the vehicle to be driven out of difficult situations by cranking the engine with the clutch engaged.**

#### Clutch start cancel switch

Never use the switch for normal engine starting. Be sure to follow the starting procedure. (→P.210)

Press the “CLUTCH START” cancel switch to cancel the clutch start system when the engine switch is turned to the “ON”.

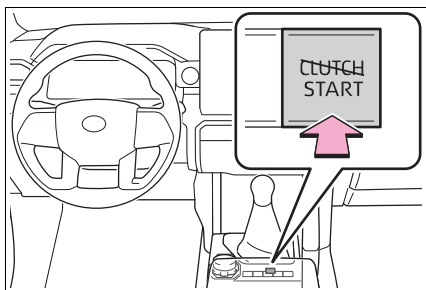

The indicator comes on when the clutch start system is canceled.

The clutch start cancel switch is automatically turned off when the engine switch is turned off.

#### ? Clutch start system

The system is designed to keep the starter motor from operating if the clutch pedal is not depressed all the way down.

#### Canceling the system

The switch allows the vehicle to be driven out of difficult off-road situations by cranking the engine in gear with the clutch engaged.

- Conditions to turn the clutch start cancel switch ON:
  - Vehicle must be in “IGNITION ON”
  - The clutch start cancel switch and brake pedal must be pressed simultaneously for 1.5 seconds
  - Clutch start cancel switch indicator & multi-information display graphics will appear when clutch start cancel is on
  - Hill-start assist control brake function is disabled when clutch start cancel is on
- To start engine cranking in clutch start cancel mode:
  - Vehicle must be stationary with brake pedal pressed
  - Parking brake & brake hold must be turned off
  - Simultaneously press the engine switch and brake pedal for 1.5 seconds to begin engine cranking
  - When cranking starts release the brake pedal
  - Continue to press engine switch until engine completely starts

- The clutch start cancel switch will turn off by any of the following:
  - When 1 minute has passed after the clutch start cancel switch was pressed
  - When the clutch start cancel switch is pressed again after activation
  - When the vehicle is turned off by the engine switch

? **Operating tips**

- ? Do not press the switch for normal engine ignition conditions. When the switch is pressed, be sure to check the surroundings as the vehicle will start moving immediately once the engine cranks.
- ? When the Clutch Start Cancel Switch is turned ON, a message and required operation may be displayed in the Multi-Information Display.
- ? **“Caution: Clutch Start Cancel enabled temporarily. Engine can start in gear. HOLD Engine Switch and Brake Pedal to start engine.” or “Caution: Clutch Start Cancel enabled temporarily. Engine can start in gear. Hill-start assist control is disabled.”**

These two messages will cycle when it is OK for the clutch start cancel system to start engine cranking.

Press engine switch and brake pedal simultaneously for 1.5 seconds to start engine cranking.

- ? **“Caution: Clutch Start Cancel enabled temporarily. Vehicle must be stationary to start engine.”**

Press brake pedal to stop vehicle from moving.

- ? **“Caution: Clutch Start Cancel enabled temporarily. Starter cooldown. For normal start, turn off Clutch Start Cancel Switch.”**

Maximum continuous cranking or multiple starting attempts; wait for the starter cooldown period to expire. Turn off clutch start cancel switch for immediate normal start.

- ? **“Caution: Clutch Start Cancel enabled temporarily. Turn off Parking Brake and Brake Hold to start engine.”**

Turn off parking brake and brake hold functions.

- ? **“Caution: Clutch Start Cancel not available. For normal start, turn off Clutch Start Cancel Switch.”**

Turn off clutch start cancel switch for normal start.



### Downhill assist control system\*

\*: If equipped


**The downhill assist control system helps to prevent excessive speed on steep downhill slopes. The system will operate when the vehicle is traveling under 18 mph (30 km/h) and transfer mode is in “4H”.**

#### WARNING

#### ? When using downhill assist control system

Do not rely overmuch on the downhill assist control system. This function does not extend the vehicle’s performance limitations. Always thoroughly check the road conditions, and drive safely.

### System components

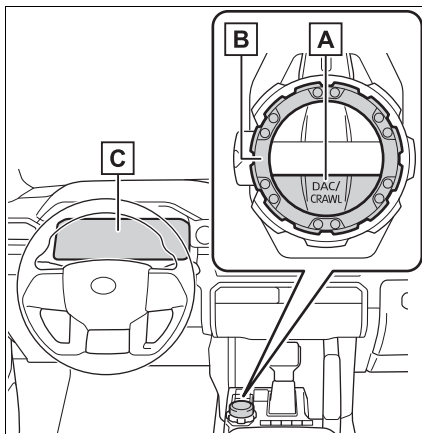

**A** “DAC/CRAWL” switch

**B** Mode select switch


**C** Multi-information display

### System operation

Press the “DAC/CRAWL” switch.


The downhill assist control system indicator will come on and the system will operate.

When the system is in operation, the slip indicator will flash, and the stop lights/high mounted stop lights will be lit. A sound may also occur during the operation. This does not indicate a malfunction.

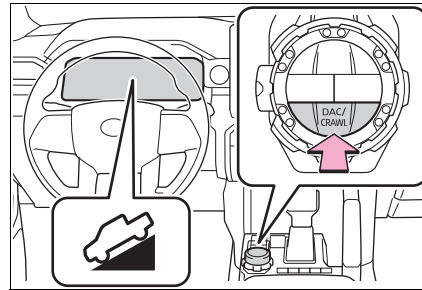

### Setting the speed of the downhill assist control system

Turn the mode select switch to set the desired speed (approx. 3 mph [4 km/h] to 18 mph [30 km/h]). The set speed is displayed on the multi-information display.

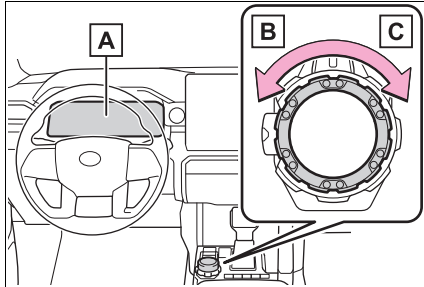

- A** Multi-information display
- B** Decreases the speed
- C** Increases the speed

### Turning off the system

- ▶ When the “DAC/CRAWL” switch indicator illuminates

Press the “DAC/CRAWL” switch again.

- ▶ When the “DAC/CRAWL” switch indicator does not illuminate

Press the “DAC/CRAWL” switch to turn the indicator on.

Press the “DAC/CRAWL” switch again with the indicator turned on.

The downhill assist control system indicator will flash as the system gradually ceases operation, and will turn off when the system is fully off.

Press the “DAC/CRAWL” switch while the downhill assist control system indicator is flashing to start the system again.

### ? Operating tips

- ? Downhill assist control system can be used with “TOW HAUL” mode

and drive mode select, or Multi-terrain Select ON or OFF.

- ? Vehicles with an Automatic transmission: The system will operate when the shift lever is in a position other than P, however to make effective use of the system it is recommended to select a lower shift range.

Vehicles with a manual transmission: The system will operate when the shift lever is in a position other than N, however to make effective use of the system it is recommended to select a lower shift range.

### ? If the downhill assist control system indicator flashes

- ? In the following situations, the indicator flashes and the system will not operate:

- The front-wheel drive control switch is changed to a position other than “4H”.
- The shift lever is in P. (Vehicles with an Automatic transmission)
- The clutch pedal is depressed. (vehicles with a manual transmission)
- The vehicle speed exceeds approximately 18 mph (30 km/h).
- The brake system overheats.

- ? In the following situations, the indicator flashes to alert the driver, but the system will operate:

- The shift lever is in N.
- The “DAC/CRAWL” switch is pressed while the “DAC/CRAWL” switch indicator illuminates.

The system will gradually cease operation. The indicator will flash during operation, and then go off when the system is fully off.

### ? When the downhill assist control system is operated continuously

This may cause the brake actuator to overheat. In this case, the downhill assist control system will stop operating, a buzzer will sound and the downhill assist control system

indicator will start flashing, and the “Traction Control Turned OFF” indicator light will come on. Refrain from using the system until the downhill assist control system indicator stays on and “Traction Control Turned OFF” indicator light turns off. (The vehicle can be driven normally during this time.)

? **Sounds and vibrations caused by the downhill assist control system**

? A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in downhill assist control system.

? Either of the following conditions may occur when the downhill assist control system is operating. None of these are indicators that a malfunction has occurred.

- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard after the vehicle comes to a stop.

? **System malfunction**

In the following cases, have your vehicle checked by your Toyota dealer.

? The downhill assist control system indicator does not come on when the “DAC/CRAWL” switch is pressed.

? The slip indicator light comes on.

 **WARNING**

? **The system may not operate on the following surfaces, which may lead to an accident causing death or serious injury**

- ? Slippery surfaces such as wet or muddy roads
- ? Icy surface
- ? Unpaved roads

**Driving assist systems**

**To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.**

**Summary of the driving assist systems**

? **ABS (Anti-lock Brake System)**

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface, or in off-road conditions (such as rough roads, sand and mud)

Vehicles with Multi-terrain Select system: The ABS operates in synchronization with the Multi-terrain Select

? **Brake assist**

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

? **VSC (Vehicle Stability Control)**

Helps the driver to control skid-

ding when swerving suddenly or turning on slippery road surfaces.

? **Enhanced VSC (Enhanced Vehicle Stability Control)**

Provides cooperative control of the ABS, TRAC, VSC and EPS.

Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

? **Trailer Sway Control**

Helps the driver to control trailer sway by selectively applying brake pressure for individual wheels and reducing driving torque when trailer sway is detected.

? **TRAC (Traction Control)**

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

? **Hill-start assist control**

Helps to reduce the backward movement of the vehicle when starting on an uphill

? **AVS (Adaptive Variable Suspension System) (if equipped)**

The damping force of the shock absorbers are independently controlled for the 4 wheels according to factors including the road surface conditions and driving operation, contributing

toward enhancing smooth driving comfort and superior stability, and helping to maintain vehicle posture.

In addition, the damping force can be changed by selecting the drive mode with the driving mode select (→P.404), and driving comfort can be ensured during off-road driving by setting the front-wheel drive control switch to “4L”. (→P.407)

? **EPS (Electric Power Steering)**


Employs an electric motor to reduce the amount of effort needed to turn the steering wheel.

? **The Secondary Collision Brake**


When the SRS airbag sensor detects a collision and the system operates, the brakes and brake lights are automatically controlled to reduce the vehicle speed and help reduce the possibility of further damage due to a secondary collision.


? **When the TRAC/VSC/ABS/Trailer Sway Control systems are operating**

The slip indicator light will flash while the TRAC/VSC/ABS/Trailer Sway Control systems are operating.

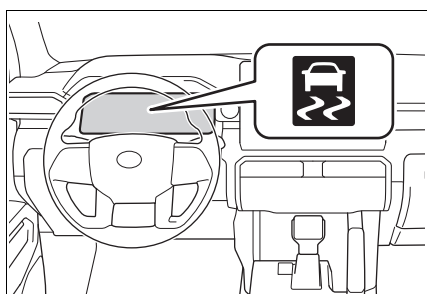


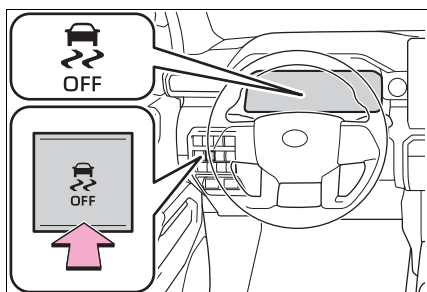
? **Disabling the TRAC system**

If the vehicle gets stuck in mud, dirt or snow, the TRAC system may reduce power from the engine to the wheels. Pressing  to turn the system off may make it easier for you to rock the vehicle in order to free it.


To turn the TRAC system off, quickly press and release .

“Traction Control Turned OFF” is displayed in the multi-information display.


Press  again to turn the system back on.




? **Turning off the TRAC/VSC/Trailer Sway Control systems**

To turn the TRAC, VSC and Trailer Sway Control systems off, press and hold  for more than 3 seconds while the vehicle is stopped.

The “Traction Control Turned OFF” is displayed in the multi-information display and the VSC OFF indicator light will come on.\*

Press  again to turn the system back on.

\*: On vehicles with emergency steering assist, emergency steering assist will also be disabled. The PCS warning light will come on. (→P.257)

? **When the message is displayed on the multi-information display showing that TRAC has been disabled even if  has not been pressed**

? TRAC is temporary deactivated. If the information continues to show, contact your Toyota dealer.

? When using Multi-terrain Select, the “VSC OFF” indicator will turn on depending on the mode, even if the VSC OFF switch has not been pressed.

? **Operating conditions of hill-start assist control**

When the following five conditions are met, the hill-start assist control will operate:

? Vehicles with an automatic transmission: The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline)

? Vehicles with a manual transmission: The shift lever is in a position other than N or R when starting off

forward on an upward incline, or the shift lever is in R when starting off backward on an upward incline.

- ? The vehicle is stopped
- ? The accelerator pedal is not depressed
- ? The parking brake is not engaged
- ? The engine switch is turned to ON
- ? **Automatic system cancelation of hill-start assist control**

The hill-start assist control will turn off in any of the following situations:

- ? Vehicles with an automatic transmission: The shift lever is shifted to P or N
- ? Vehicles with a manual transmission: The shift lever is shifted to R when starting off forward on an upward incline, or the shift lever is shifted to other than N or R when starting off backward on an upward incline.
- ? The accelerator pedal is depressed
- ? The parking brake is engaged
- ? A maximum of 2 seconds have elapsed after the brake pedal is released
- ? The engine switch is turned to OFF

- ? **Sounds and vibrations caused by the ABS, brake assist, VSC, Trailer Sway Control, TRAC and hill-start assist control systems**

- ? A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- ? Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.

- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard also after the vehicle comes to a stop.

- ? **Automatic reactivation of TRAC, Trailer Sway Control and VSC systems**

After turning the TRAC, Trailer Sway Control and VSC systems off, the systems will be automatically re-enabled in the following situations:

- ? When the engine switch is turned off
- ? If only the TRAC system is turned off, the TRAC will turn on when vehicle speed increases  
If both the TRAC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

- ? **Reduced effectiveness of the EPS system**

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The EPS system should return to normal within 10 minutes.

- ? **Secondary Collision Brake operating conditions**


The system operates when the SRS airbag sensor detects a collision while the vehicle is in motion. However, the system does not operate when the components are damaged.

- ? **Secondary Collision Brake automatic cancelation**

The system is automatically canceled in any of the following situations.

- ? The vehicle speed drops to approximately 0 mph (0 km/h).
- ? A certain amount of time elapses

during operation  
 ? The accelerator pedal is depressed a large amount

 **WARNING**

- ? **The ABS does not operate effectively when**
- ? The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- ? The vehicle hydroplanes while driving at high speed on wet or slick roads.
- ? **Stopping distance when the ABS is operating may exceed that of normal conditions**
- The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:
- ? When driving on dirt, gravel or snow-covered roads
- ? When driving with tire chains
- ? When driving over bumps in the road
- ? When driving over roads with potholes or uneven surfaces
- ? **TRAC/VSC may not operate effectively when**
- Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRAC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

- ? **Hill-start assist control does not operate effectively when**
- ? Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- ? Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.
- ? **When the TRAC/VSC/Trailer Sway Control is activated**
- The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.
- ? **When the TRAC/VSC/Trailer Sway Control systems are turned off**
- Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRAC/VSC/Trailer Sway Control systems off unless necessary.
- Trailer Sway Control is part of the VSC system and will not operate if VSC is turned off or experiences a malfunction.

**⚠ WARNING**

**? Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRAC, Trailer Sway Control and VSC systems will not function correctly if different tires are installed on the vehicle. Contact your Toyota dealer for further information when replacing tires or wheels.

**? Handling of tires and the suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

**? Trailer Sway Control precaution**

The Trailer Sway Control system is not able to reduce trailer sway in all situations. Depending on many factors such as the conditions of the vehicle, trailer, road surface and driving environment, the Trailer Sway Control system may not be effective. Refer to your trailer owner's manual for information on how to tow your trailer properly.

**? If trailer sway occurs**

Observe the following precautions. Failing to do so may cause death or serious injury.

**? Firmly grip the steering wheel. Steer straight ahead. Do not try to control trailer sway by turning the steering wheel.**

**? Begin releasing the accelerator pedal immediately but very gradually to reduce speed. Do not increase speed. Do not apply vehicle brakes.**

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize. (→P.196)

**? Secondary Collision Brake**

Do not rely solely upon the Secondary Collision Brake. This system is designed to help reduce the possibility of further damage due to a secondary collision, however, that effect changes according to various conditions. Overly relying on the system may result in death or serious injury.



### SDM (Stabilizer with Disconnection Mechanism)\*

\*: If equipped

**SDM (Stabilizer with Disconnection Mechanism) is a system that switches conditions of the front stabilizer to maintain vehicle stability and drivability on paved road and off-road situations.**

### How SDM (Stabilizer with Disconnection Mechanism) works

Depending on the switch operation or vehicle speed, the stabilizer is locked/unlocked, which results in the following effects.

#### ? **During driving on paved roads**

The stabilizer is locked and the movement of the suspensions is restrained, resulting in stable driving.

#### ? **During off-road driving**

- The stabilizer is unlocked and it becomes easier that the suspensions extend and retract, leading to improvement of drivability on rough roads
- The vibration of the vehicle body is reduced, which helps enhance riding comfort.


### Turning the system on/off

Press the SDM switch.

The stabilizer is unlocked and the SDM indicator will come on.

Press the switch again to lock the stabilizer (the SDM indicator will turn off).

While the stabilizer is being locked or unlocked, the SDM indicator flashes.

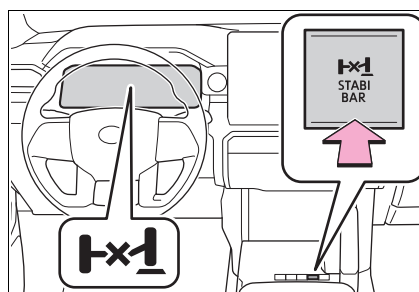

#### ? **Operation conditions by the switch**

The engine switch is in ON and the vehicle speed is approximately 18 mph (30 km/h) or less.

#### ? **Automatic control by vehicle speed**

The stabilizer will be locked again when the vehicle speed exceeds approximately 18 mph (30 km/h).

#### ? **Operation sounds**

When the stabilizer is being locked or unlocked, an operating sound may be heard from the underside of the vehicle. However, it does not indicate a malfunction.

#### ? **When the state of the SDM indicator differs from the stabilizer status**

On an uneven surface, the stabilizer status may not be switched and may differ from the state of the SDM indicator. The stabilizer status will be

switched after the vehicle is driven and the suspensions extend or retract.

? **When the outside temperature is extremely low**

Do not use the system when the outside temperature is below -22°F (-30°C), as the system may not operate properly.

? **After the engine switch is turned to OFF**

The stabilizer status is hold even when the engine switch is turned to OFF. To switch the status, turn the engine switch to ON again and press the SDM switch.

? **When the stabilizer is unlocked**

When the stabilizer is unlocked, some of the Toyota Safety Sense 3.0 are not operate. (→P.249)

## Trailer brake controller\*

\*: If equipped

**The trailer brakes can be controlled by the Trailer brake controller via the 7-pin connector. By selecting the type of brakes that are being used on the trailer (electric or electric-over-hydraulic) and setting the “gain” for the controller, the manual brake slider is used to slow just the trailer. The vehicle brake pedal will also slow down as well as stop the trailer when applied, also via the same connector. “Gain” values, manual brake outputs, trailer brake types, and the trailer connection status are displayed in the multi-information display.**

**This vehicle comes equipped with a Toyota Genuine Trailer Brake Controller. Use of a third-party trailer brake controller along with the Toyota Genuine Trailer Brake Controller may have unexpected effects on the system. Toyota does not recommend the use of a third-party brake controller with this vehicle.**


**⚠ WARNING****? When driving on slippery road surfaces**

When stopping with ABS activated, output to the trailer might be reduced in order to reduce the likelihood of trailer wheels to lock. The trailer is not equipped with ABS. Drive safely on slippery road surfaces.

trailer brake type is selected in the multi-information display.

**C Manual brake slider**

Adjusting this slider position will engage the trailer's brakes only. If the manual brake slider is used while the vehicle brake is applied, the greater of the two outputs will be sent to the trailer brakes.

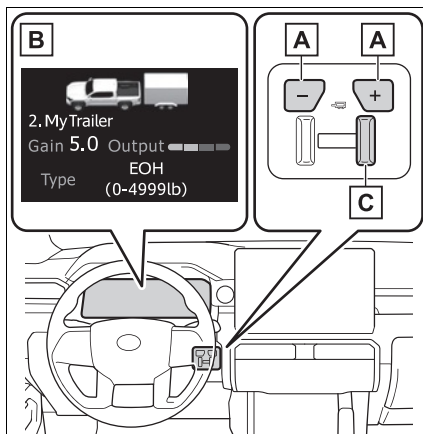**System operation****A "GAIN" (+/-) selection button**

Pressing the "GAIN" (+/-) buttons will adjust the amount of power that can be outputted to the trailer brakes. The "gain" can be adjusted from 0 (no trailer braking) to 10 (maximum output) in 0.5 increments. Each press of the button will increase or decrease the "gain" setting by one step. The "gain" value will appear in the multi-information display.

**B Trailer brake type**

Trailer brake type can be selected by using the multi-information. The combination meter will show which

**Changing settings of the trailer brake type**

Select "Trailer Settings" on the multi-information display and add a trailer according to the display. (→P.103, 112)


Changing trailer brake type or trailer ID will cause the current "gain" setting to reset to zero. Make sure to set the "gain" as described in the following section.

**Setting the "Gain"**

"Gain" setting on trailer brake controller should be set for a specific towing condition. "Gain" setting should be adjusted each time the vehicle load, trailer load, road conditions, or weather changes. Setting the "gain" value to 0 will disable the trailer brake controller output.

- 1 Make sure the trailer brakes are in good working condition and functioning normally. See trailer dealer if necessary.

- 2 Hook up the trailer and make proper electrical connections.
- 3 Select the correct type of trailer brakes that are equipped on the trailer by using the multi-information display.
- 4 Drive vehicle with trailer attached on a level road surface similar to towing condition and in traffic-free environment. Driving speed should be approximately 20 - 25 mph [35 - 40 km/h].
- 5 Using the "GAIN" (+/-) selection buttons, set a starting "gain" of 5.0.

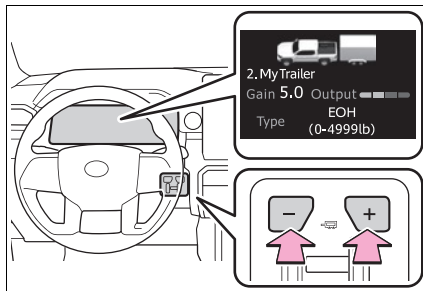

- 6 While driving 20 - 25 mph [35 - 40 km/h], fully apply the manual brake slider.
- 7 Adjust the "gain" setting, using the "GAIN" (+/-) selection buttons, to either increase or decrease to just below the point of trailer wheel lock-up.
- 8 For confirmation, repeat steps 6 and 7 until desired "gain" setting is reached (just

below point of trailer wheel lock-up).

? **When setting the "gain"**

Wheel lock-up occurs when the trailer wheel squeals or tire smoke occurs. Trailer wheels may not lock-up while driving heavily loaded trailer. During this case, adjust the Trailer "gain" to the highest allowable setting for the towing condition.

? **When disconnecting and reconnecting battery terminals**

The "gain" setting data will be reset.


? **Trailer Sway Control Function**

Helps suppress trailer sway at an early stage by using the trailer brake control system to operate the trailer brakes.

? **If the Trailer brake warning light comes on**

Indicates a malfunction in the Trailer brake control system or Trailer connector circuit.

Have the vehicle inspected by your Toyota dealer immediately.

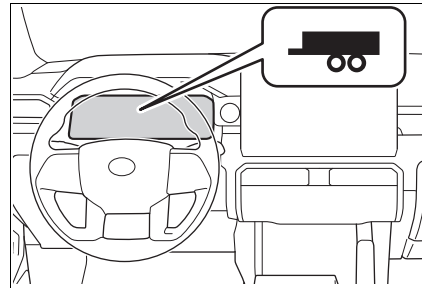

**⚠ WARNING****? Trailer brake type setting**

It is the responsibility of the driver to make sure the trailer brakes are functioning normally and adjusted appropriately. Failure to check and maintain trailer brakes may result in loss of vehicle control, crash, or serious injury. Trailer brake control system will work with most electric and electric-overhydraulic trailer braking systems up to 3 axles (24A output to trailer brakes). Please be sure to test compatibility with the system at low speeds and in a safe area. If a warning message appears in the multi-information display (→P.582), have the vehicle inspected by your Toyota dealer immediately. Some electric-over-hydraulic trailer brakes will take some minimum output to activate. Trailer brake control system will not work with trailer hydraulic surge brakes.

**Trailer Backup Guide\***

\*: If equipped

**Trailer Backup Guide is a system to assist when backing up a trailer by providing either (1) steering control to assist backing up straight (Straight Path Assist) or (2) guidance for manual steering backup (Guidance mode).**


**Trailer Backup Guide uses the rear camera to detect the trailer and a trailer hitch light, which allows the driver to use the system at night time.**

**The system calculates the trailer angle by image processing from the rear camera and calculates trailer length and hitch length during the trailer setup (calibration) maneuver.**

**Procedure**

- 1 Select "Trailer Settings" on the multi-information display and add a trailer according to the display. (→P.103, 112)

- 2 Press the switch to turn the system ON.

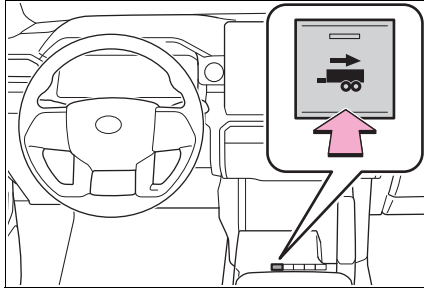


- 3 Continue or reselect the trailer in the message displayed on the multi-information display.

When the selected trailer is being used for the first time, setup (calibration) is necessary (→P.433).

Once calibration is completed, it is retained for future use and the system will automatically detect the trailer.

The driver needs to change the trailer selection when using a different trailer. The system does not automatically recognize the trailer from the saved trailers list.

- 4 Once trailer is detected, shift the shift lever to R to activate Guidance mode.
- 5 Touch the switch at the bottom right on multimedia to activate Straight Path Assist.

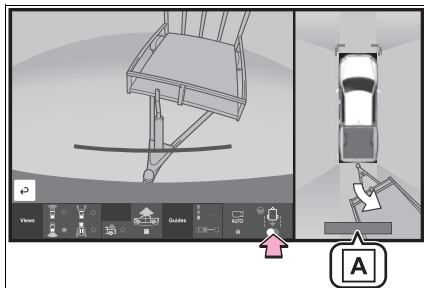

**A** “Trailer Direction”

When using Straight Path Assist, the driver can override the system using the steering wheel to adjust the trailer direction. Upon release of the steering wheel, Straight Path Assist re-activates with a revised straight back target direction.

? **When adding the trailer**

Select “Trailer Settings” on the multi-information display and add a trailer according to the display. (→P.103, 112)


Trailer Settings are not available while Trailer Backup Guide system is active.

The system is designed to support trailers with single or multi-axles using a ball hitch. The system does not support fifth wheel or gooseneck trailers.

**Setup (Calibration)**

Bring the vehicle and trailer to a large open space like an empty parking lot. Activate Trailer Backup Guide system and follow the instructions displayed on the multi-information display/multimedia.

For best calibration results, do not exceed 5 mph (8 km/h).

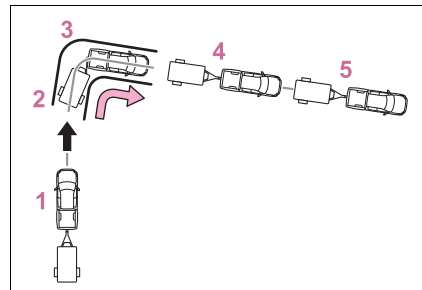


- 1 Drive straight forward slowly

(5 mph [8 km/h] or less) while holding the steering wheel straight.

- 2 Stop vehicle with trailer straight and confirm blue line is aligned with trailer center in Camera view.
- 3 Drive forward slowly making a left or right turn that changes vehicle direction 90 degrees or more.
- 4 After completing the turn, continue straight forward slowly to align trailer.
- 5 Stop vehicle to complete calibration.

? **When calibrating the system**

- ? Please check whether the blue line appropriately aligns with the center of the trailer in the camera view, such as in the following diagram, with regards to procedure 2.

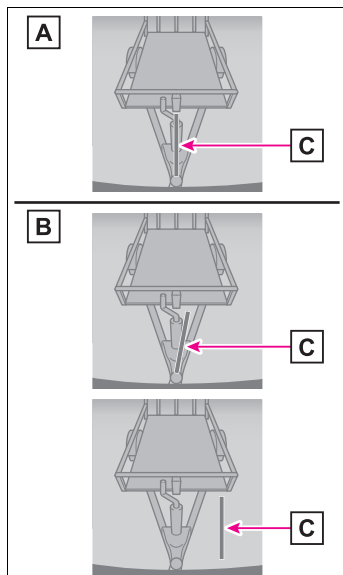


**A** State where the blue line aligns with the center of the trailer. (Select “Yes” in the multi-information display)

**B** State where the blue line does not align with the center of the trailer. (Select “No” in the multi-information display)

**C** Blue line

- ? The system is designed to support most trailers 6.6 ft. (2 m) to 26.2 ft. (8 m) in length (length is defined from the coupler center point for the ball to the wheel axle [single axle] or center of the wheel axles [2 or more axles]) with ball mount lengths between 4.5 in. (114.3 mm) and 18.5 in. (469.9 mm). Do not attempt to use trailers or ball mounts that have a length outside of this range as the system performance degrades and could cause improper system function.

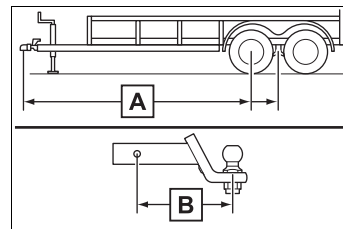

**A** Trailer length

**B** Ball mount length

- ? For best calibration results, calibrate in daytime on a smooth and level road.
- ? It may be necessary at times to recalibrate the trailer to improve performance.
- ? The system is designed to be used with the same trailer connection every time. If the ball mount position is changed or reconfigured or items are added to the

trailer tongue after calibration, re-calibration may be required.

### Using Guidance mode

Guidance mode provides a “Trailer Direction” arrow that indicates the direction the trailer will swing, based on calculations from the steering wheel angle information. Guidance mode provides a “BRAKE Extreme Trailer Angle” (jackknife) warning with warning buzzer to alert the driver that the trailer angle is near the jackknife condition.

### Using Straight Path Assist

Touch the switch at the bottom right on multimedia to activate Straight Path Assist. Straight Path Assist controls steering to back up the trailer in a straight-line. The system can be overridden by using steering wheel to adjust trailer direction.


The driver is always responsible for paying attention to the vehicle’s surroundings and driving safely. This system does not control braking. Driver needs to control vehicle speed, control braking, and stop the vehicle to avoid any collision.

For best results, reverse slowly when using Straight Path Assist.

### Canceling the system

- Trailer Backup Guide system is canceled when the trailer cannot be detected (e.g. dirty camera lens, insufficient lighting condition, obstruction of the trailer in the rear camera view, incorrectly selected trailer, etc.)
  - Guidance mode is canceled when any of the following occurs:
    - Press the Trailer Backup Guide switch\*
    - Press the Camera switch\*
    - Vehicle speed is greater than approximately 4.7 mph (7.6 km/h)
    - VSC or ABS is operated\*
    - Tailgate is opened\*
    - Trailer tracking is lost
    - Shift the shift lever out of R
    - There is a system malfunction\*
- \*: Includes Trailer Backup Guide system cancel
- Straight Path Assist is canceled when any of the following occurs:
    - Any of the events, above, that cancel Guidance mode occur
    - Press the Straight Path Assist switch on the multimedia screen
    - The system temperature preservation function operates (to prevent power steering equipment from overheating)

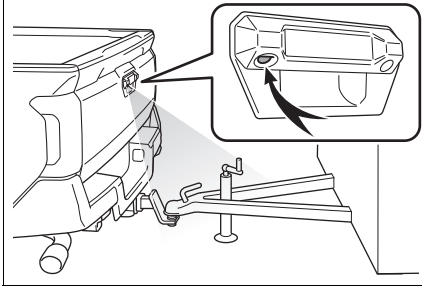

**Trailer hitch light**

This light's usage for Trailer Backup Guide is controlled by the Trailer Backup Guide system and the driver does not need to activate the light separately.

For other usage: →P.459

**⚠ WARNING**

? **Cautions regarding the use of the system**

In order for this system to perform as designed, the vehicle must be driven safely and the driver must control the speed to keep it within operating parameters and to avoid a collision.

As there is a limit to the degree of control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely. This system does not control braking (or steering when in Guidance mode). Driver needs to control vehicle speed, control braking, (and steering when in Guidance mode,) and stop the vehicle to avoid any collision. Failure to follow this warning could result in property damage, serious injury or death.

? **When using the Trailer Backup Guide**

For proper system performance, observe the following precautions. Failure to do so may lead to an accident resulting in property damage, serious injury, or death.

- ? Keep the tailgate fully latched.
- ? Keep the rear camera clean at all times.
- ? Do not change the installation position or direction of the rear camera or remove it.
- ? Do not modify the trailer hitch light. (→P.436)
- ? Make sure nothing can obstruct the rear camera view of the trailer.

The system is designed to operate in various weather and lighting conditions and on different ground surfaces (asphalt, grass, gravel, etc.), however performance can still be affected by various environmental factors (e.g. shadow passing over the trailer or diminished contrast between trailer and the ground leading to trailer detection being lost, etc.) so always drive carefully, remain alert and aware of your surroundings, and do not overly rely on the system.

### Off-road precautions

**This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity to make it capable of performing in a wide variety of off-road applications.**

### Off-road vehicle features

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, Utility vehicles have a significantly higher rollover rate than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause the vehicle to rollover.

### WARNING

#### ? Off-road vehicle precautions

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- ? In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should always fasten their seat belts.
- ? Avoid sharp turns or abrupt maneuvers, if at all possible. Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- ? Avoid loading any items on the roof that will raise the vehicle's center of gravity.
- ? Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- ? Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

### Off-road driving

When driving your vehicle off-road, please observe the following precautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles:

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.

- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

? **Additional information for off-road driving**

- ▶ For owners in U.S. mainland, Hawaii and Puerto Rico:

To obtain additional information pertaining to driving your vehicle off-road, consult the following organizations.

- State and Local Parks and Recreation Departments
- State Motor Vehicle Bureau
- Recreational Vehicle Clubs
- U.S. Forest Service and Bureau of Land Management

 **WARNING**

? **Off-road driving precautions**

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

? Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.

? Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.

? Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.

? After driving through tall grass, mud, rock, sand, rivers, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped on the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.

? In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should fasten their seat belts whenever the vehicle is moving.

? When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.

**NOTICE****? To prevent water damage**

Take all necessary safety measures to ensure that water damage to the engine or other components does not occur.

- ? Water entering the engine air intake will cause severe engine damage.
- ? Water entering the automatic transmission will cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage.
- ? Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the differentials, transmission and transfer case, reducing the gear oil's lubricating qualities.

**? When you drive through water**

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the riverbed for firmness. Press the Stop & Start cancel switch to disable the Stop & Start system (vehicles with Stop & Start system). Drive slowly and avoid deep water.

**? Inspection after off-road driving**

- ? Sand and mud that has accumulated around brake discs may affect braking efficiency and may damage brake system components.
- ? Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water. For scheduled maintenance information, refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".

Winter driving tips

**Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.**

Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
- Engine oil
- Engine coolant
- Washer fluid
- Have a service technician inspect the condition of the battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the rear tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

 **WARNING**

? **Driving with snow tires**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- ? Use tires of the specified size.
- ? Maintain the recommended level of air pressure.

? Do not drive in excess of 75 mph (120 km/h), regardless of the type of snow tires being used.

? Use snow tires on all, not just some wheels.

? 4WD models: Do not mix tires of different makes, models, tread patterns or treadwear.

? **Driving with tire chains**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

? Do not drive in excess of the speed limit specified for the tire chains being used, or 30 mph (50 km/h), whichever is lower.

? Avoid driving on bumpy road surfaces or over potholes.

? Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

? Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.

? Do not use LTA (Lane Tracing Assist) system.

 **NOTICE**

? **Repairing or replacing snow tires**

Request repairs or replacement of snow tires from Toyota dealers or legitimate tire retailers. This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

**Before driving the vehicle**

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, outside rear view mirrors, windows, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

**When driving the vehicle**

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

**When parking the vehicle**

- Park the vehicle and move

the shift lever to P (automatic transmission) or 1 or R (manual transmission) without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.

Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

- Vehicles with an automatic transmission: If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P\*.


\*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by your Toyota dealer immediately.

**WARNING****? When parking the vehicle**

When parking the vehicle without applying the parking brake, make sure to chock the wheels. If you do not chock the wheels, the vehicle may move unexpectedly, possibly resulting in an accident.

### Selecting tire chains

Use the correct tire chain size when mounting the tire chains. Chain size is regulated for each tire size.

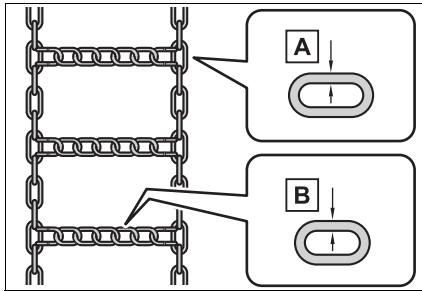

**A** Side chain (0.2 in. [5 mm] in diameter)

**B** Cross chain (0.25 in. [6.3 mm] in diameter)

### Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

#### ? Tire chain installation

Observe the following precautions when installing and removing chains:

- ? Install and remove tire chains in a safe location.
- ? Install tire chains on the rear tires. Do not install tire chains on the front tires.
- ? Install tire chains on the rear tires as tightly as possible. Retighten chains after driving 1/4—1/2 mile

(0.5—1.0 km).

- ? Install tire chains following the instructions provided with the tire chains.

#### ! NOTICE

#### ? Fitting tire chains

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

**Interior features****5****5-1. Using the air conditioning system and defogger**

Manual air conditioning system ..... 444

Automatic air conditioning system..... 449

Heated steering wheel/seat heaters/seat ventilators ..... 455

**5-2. Using the interior lights**

Interior lights list ..... 458

**5-3. Using the storage features**

List of storage features 461

Luggage compartment features ..... 469

**5-4. Using the other interior features**

Other interior features . 473

Removable speaker .... 494


Garage door opener.... 501



Manual air conditioning system\*

\*: If equipped

Air conditioning controls

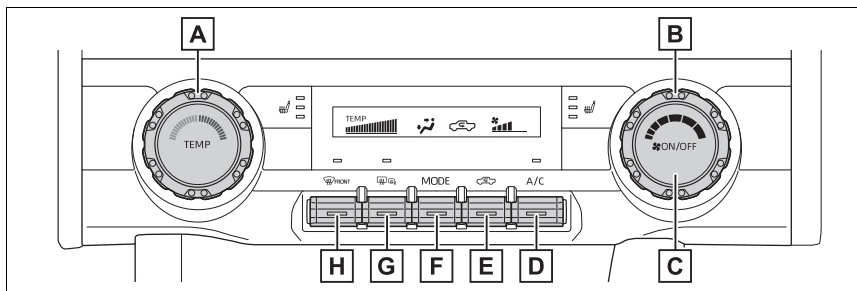

- A** Temperature control dial
- B** Fan speed control dial
- C** "ON/OFF" switch
- D** "A/C" switch
- E** Outside/recirculated air mode switch
- F** Airflow mode control switch
- G** Rear window defogger and outside rear view mirror defoggers switch (if equipped)
- H** Windshield defogger switch

? **Adjusting the temperature setting**

To adjust the temperature setting, turn the temperature control dial clockwise (warm) or counterclockwise (cool).

If "A/C" switch is not pressed, the system will blow ambient temperature air or heated air.

? **Fan speed setting**

To adjust the fan speed, turn the fan speed control dial clockwise


(increase) or counterclockwise (decrease).

Press the "ON/OFF" switch to turn the fan off.

? **Change the airflow mode**

Operate the air flow mode control switch.

The airflow mode changes as follows each time the switch is operate.

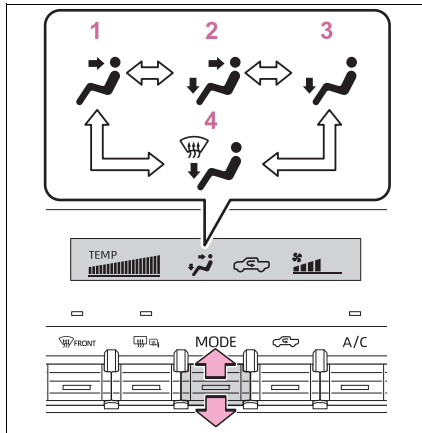

- 1 Upper body
  - 2 Upper body and feet
  - 3 Feet
  - 4 Feet and the windshield defogger operates
- ? **Switching between outside air and recirculated air modes**

Press the outside/recirculated air mode switch.

The mode switches between outside air mode (the indicator is off) and recirculated air mode (the indicator is on) each time the switch is pressed.

- ? **Set cooling and dehumidification function**

Press the "A/C" switch.

When the function is on, the indicator illuminates on the "A/C" switch.

- ? **Defogging the windshield**

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger

switch.

Set the outside/recirculated air mode switch to outside air mode if the recirculated air mode is used.

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

- ? **Defogging the rear window and outside rear view mirrors (if equipped)**

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after 15 minutes. (Depending on the surrounding environment and outside temperature, the defogger may continue to operate after 15 minutes have elapsed.)

When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

? **When the outside temperature exceeds 75°F (24°C) and the air conditioning system is on**

? In order to reduce the air conditioning power consumption, the air conditioning system may switch to recirculated air mode automatically.

This may also reduce fuel consumption.

? Recirculated air mode is selected as a default mode when the engine switch is turned to ON. It is possible to switch to outside air mode at any time by pressing the outside/recirculated air mode switch.

? **Fogging up of the windows**

? The windows will easily fog up when the humidity in the vehicle is high. Turning "A/C" switch is on will dehumidify the air from the outlets and defog the windshield effectively.

? If you turn "A/C" switch is off, the windows may fog up more easily.

? The windows may fog up if the recirculated air mode is used.

? **When driving on dusty roads**

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

? **Outside/recirculated air mode**

? Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.

? During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.

? **When the outside temperature falls to nearly 32°F (0°C)**

The dehumidification function may not operate even when "A/C" switch is pressed.

? **Ventilation and air conditioning odors**

? To let fresh air in, set the air conditioning system to the outside air mode.

? During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.

? To reduce potential odors from occurring:


It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.

? **Air conditioning filter**






→P.551

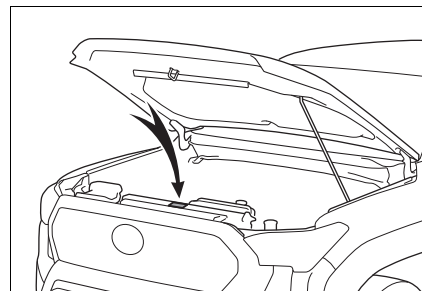? **Air conditioning system refrigerant**

? A label regarding the refrigerant of the air conditioning system is attached to the hood at the location shown in the following illustration.



? The meaning of each symbol on the label are as follows:

	Caution
	Air conditioning system
	Air conditioning system lubricant type
	Requires registered technician to service air conditioning system
	Flammable refrigerant

**⚠ WARNING**

**? To prevent the windshield from fogging up**  
 Do not use the windshield defogger switch during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

**? When the outside rear view mirror defoggers are operating**  
 Do not touch the outside rear view mirror surfaces, as they can become very hot and burn you.

**⚠ NOTICE**

**? To prevent battery discharge**  
 Do not leave the air conditioning system on longer than necessary when the engine is off.

**Windshield wiper de-icer (if equipped)**

This feature is used to prevent ice from building up on the windshield and wiper blades.

Press the rear window and outside rear view mirror defoggers switch.

The windshield wiper de-icer will automatically turn off after 15 minutes.

Turning the rear window and outside rear view mirror defoggers on will turn the windshield wiper deicer on.

When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.


**⚠ WARNING**

**? To prevent burns**  
 Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper deicer is on.

**Air outlet layout and operations**

**? Location of air outlets**


The air outlets and air volume changes according to the selected air flow mode.

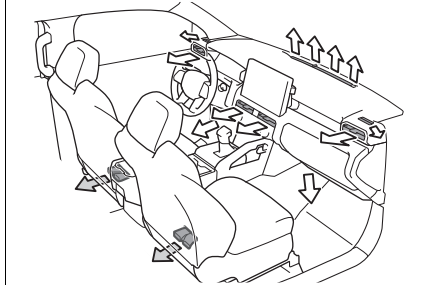

←: If equipped


? **Adjusting the air flow direction**

Direct air flow to the left or right, up or down.

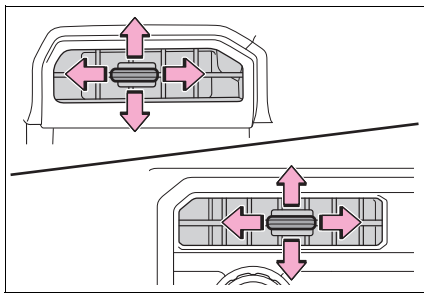


? **Opening/closing the air outlets**

► Front side

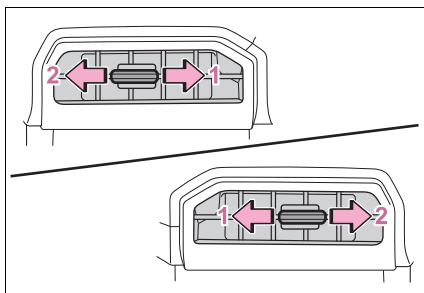

- 1 Open the vent
- 2 Close the vent

► Front center

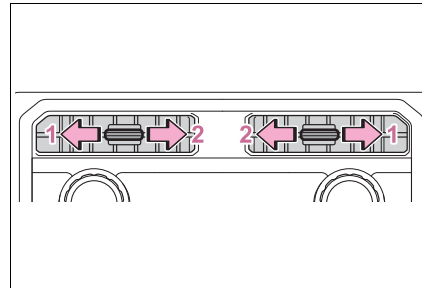


- 1 Open the vent
- 2 Close the vent

**! WARNING**

? **To not interrupt the windshield defogger from operating**

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

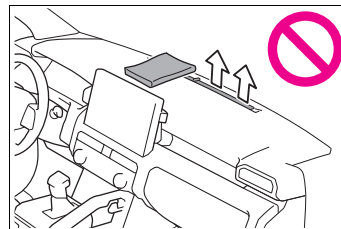


## Automatic air conditioning system\*

\*: If equipped


**Air outlets and fan speed are automatically adjusted according to the temperature setting.**

## Air conditioning controls

► Vehicles with the DUAL mode

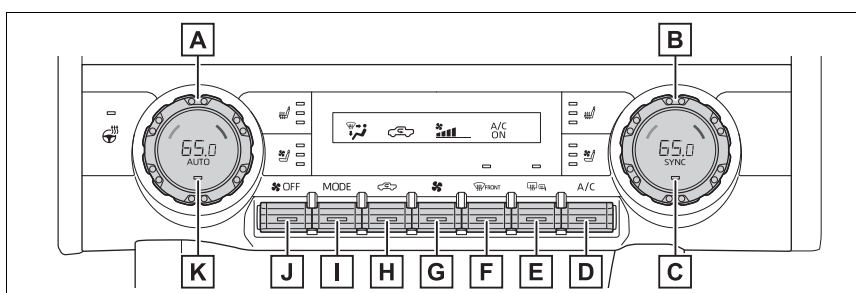

► Vehicles without the DUAL mode

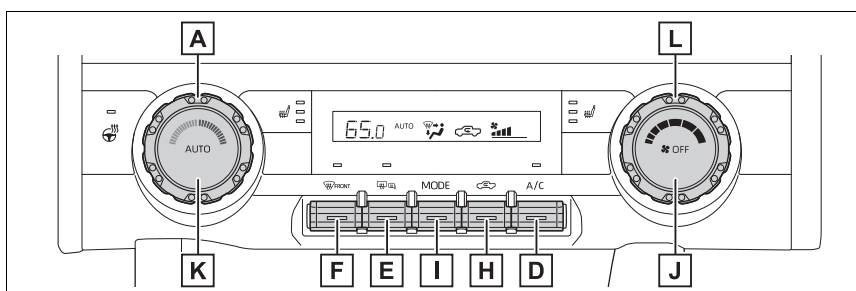

- A** Left-hand side temperature control dial
- B** Right-hand side temperature control dial
- C** "SYNC" switch (if equipped)
- D** "A/C" switch
- E** Rear window defogger and outside rear view mirror defoggers switch (if equipped)
- F** Windshield defogger switch
- G** Fan speed control switch

- H** Outside/recirculated air mode switch
- I** Air flow mode control switch
- J** “OFF” switch
- K** “AUTO” switch
- L** Fan speed control dial

? **Adjusting the temperature setting**

To adjust the temperature setting, turn the temperature control dial clockwise (warm) or counterclockwise (cool).

If the “A/C” switch is not pressed, the system will blow ambient temperature air or heated air.

? **Setting the fan speed**

- ▶ Vehicles with the DUAL mode

Operate the fan speed control switch upwards to increase the fan speed and downwards to decrease the fan speed.

Press the “OFF” switch to turn the fan off.

- ▶ Vehicles without the DUAL mode

To adjust the fan speed, turn the fan speed control dial clockwise (increase) or counterclockwise (decrease).


Press the “OFF” switch to turn the fan off.

? **Change the airflow mode**

Operate the air flow mode control switch

The airflow mode changes as follows each time the switch is oper-

ate.

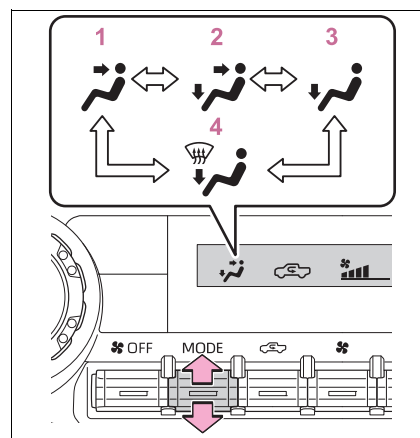

- 1 Air flows to the upper body.
- 2 Air flows to the upper body and feet.
- 3 Air flows to the feet.
- 4 Air flows to the feet and the windshield defogger operates.

? **Switching between outside air and recirculated air modes**

Press the outside/recirculated air mode switch.

The mode switches between outside air mode (the indicator is off) and recirculated air mode (the indicator is on) each time the switch is pressed.

? **Set cooling and dehumidification function**

Press the "A/C" switch.

Vehicles with the DUAL mode:  
When the function is on, "A/C ON" indicator will illuminate. When the function is off, "A/C OFF" indicator will illuminate.

Vehicles without the DUAL mode:  
When the function is on, the indicator on the "A/C" switch illuminates.

? **Defogging the windshield**

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger switch.

Press the outside/recirculated air mode switch if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

? **Defogging the rear window and outside rear view mirrors (if equipped)**

Defoggers are used to defog the rear window and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after 15 minutes. (Depending on the surrounding environment and outside temperature, the defogger may continue to operate after 15 minutes have elapsed.)

When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

? **When the outside temperature exceeds 75°F (24°C) and the air conditioning system is on**

? In order to reduce the air conditioning power consumption, the air conditioning system may switch to recirculated air mode automatically. This may also reduce fuel consumption.

? Recirculated air mode is selected as a default mode when the engine switch is turned on.

It is possible to switch to outside air mode at any time by pressing the outside/recirculated air mode switch.

? **Fogging up of the windows**

? The windows will easily fog up when the humidity in the vehicle is high. Turning the cooling and dehumidification function on will dehumidify the air from the outlets and defog the windshield effectively.

? If you turn the cooling and dehumidification function off, the windows may fog up more easily.

? The windows may fog up if the recirculated air mode is used.



? **When driving on dusty roads**

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

? **Outside/recirculated air mode**

? Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.

? Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

? **When the outside temperature falls to nearly 32°F (0°C)**

The dehumidification function may not operate even when "A/C" switch is pressed.

? **Ventilation and air conditioning odors**

? To let fresh air in, set the air conditioning system to the outside air mode.

? During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.

? In order to suppress odors that occur when the air conditioning system starts, the air flow mode may change to blow air to the feet or air may stop blowing for a short period of time immediately after the air conditioning system is started in automatic mode.

? When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur


when starting the vehicle.

? **Air conditioning filter**






→P.551

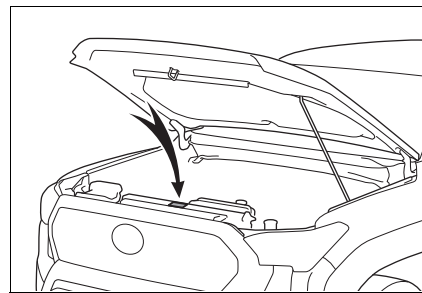? **Air conditioning system refrigerant**

? A label regarding the refrigerant of the air conditioning system is attached to the hood at the location shown in the following illustration.



? The meaning of each symbol on the label are as follows:

	Caution
	Air conditioning system
	Air conditioning system lubricant type
	Requires registered technician to service air conditioning system
	Flammable refrigerant

? **Customization**

Some functions can be customized. (Customizable features: →P.653)

**⚠ WARNING****? To prevent the windshield from fogging up**

Do not use the windshield defogger switch during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

**? When the outside rear view mirror defoggers are operating**

Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.

**⚠ NOTICE****? To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is off.

**? When repairing/replacing parts of the air conditioning system**

Have repair/replacement performed by your Toyota dealer. When a part of the air conditioning system, such as the evaporator, is to be replaced, it must be replaced with a new one.

**Using automatic mode**

- 1 Press the "AUTO" switch.
- 2 Adjust the temperature setting.
- 3 To stop the operation, press the "OFF" switch.

If the fan speed setting or air flow modes are operated, the

automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

**? Using automatic mode**

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the automatic mode switch is pressed.

**Adjusting the temperature for driver and front passenger seats simultaneously ("SYNC" mode) (if equipped)**

To turn on the "SYNC" mode, operate the "SYNC" switch.

The driver's side temperature control dial can be used to adjust the temperature for the driver's and front passenger's side. To enter individual mode, operate the front passenger's side temperature control dial or press the "SYNC" switch again.

When the "SYNC" mode is on, the "SYNC" indicator is illuminate.

**Windshield wiper de-icer (if equipped)**

This feature is used to prevent ice from building up on the windshield and wiper blades.

Press the rear window and outside rear view mirror defoggers switch.

The windshield wiper de-icer will automatically turn off after 15 minutes.

Turning the rear window and outside rear view mirror defoggers on will turn the windshield wiper de-icer on.

When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

**⚠ WARNING**


**? To prevent burns**

Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper deicer is on.

**Air outlet layout and operations**

**? Location of air outlets**


The air outlets and air volume change according to the selected air flow mode.

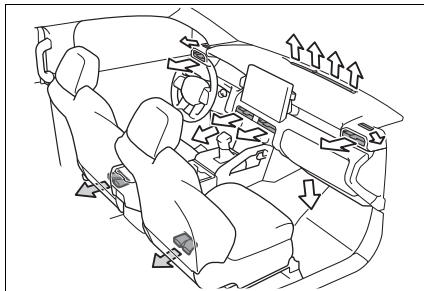

←: If equipped


**? Adjusting the air flow direction**

Direct air flow to the left or right, up or down.

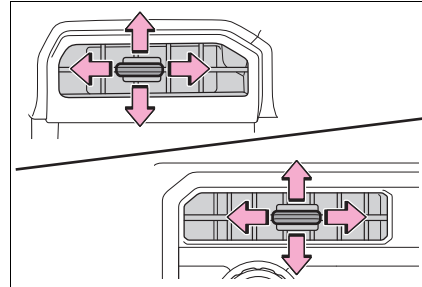


**? Opening/closing the air outlets**

► Front side

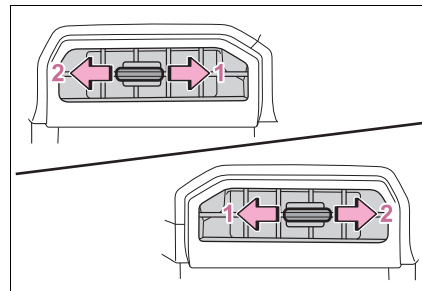

- 1 Open the vent
- 2 Close the vent


► Front center

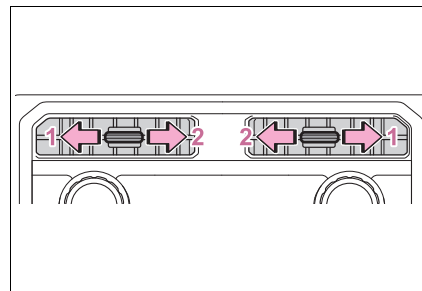

- 1 Open the vent
- 2 Close the vent

**! WARNING****? To not interrupt the windshield defogger from operating**

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

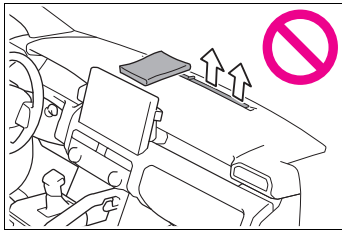**Heated steering wheel<sup>\*</sup>/seat heaters<sup>\*</sup>/seat ventilators<sup>\*</sup>**

<sup>\*</sup>: If equipped

- Heated steering wheel

Warms up the grip of the steering wheel

- Front seat heaters

Warm up the seat upholstery


- Front seat ventilators

Maintain good ventilation by pulling air through the seat upholstery

**! WARNING****? To prevent minor burn injuries**

Care should be taken if anyone in the following categories comes in contact with the steering wheel or seats when the heater is on:

- ? Babies, small children, the elderly, the sick and the physically challenged
- ? Persons with sensitive skin
- ? Persons who are fatigued
- ? Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

 **NOTICE**

**? To prevent damage to the seat heaters and seat ventilators**

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

**? To prevent battery discharge**


Do not use the functions when the engine is off.

**Operating instructions**


**? Heated steering wheel**

Turns heated steering wheel on/off.

When the heated steering wheel is on, the indicator illuminates on the heated steering wheel switch.

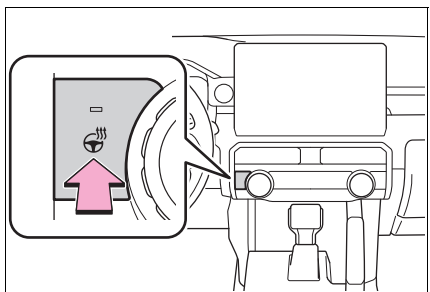

**? Front seat heaters/seat ventilators**

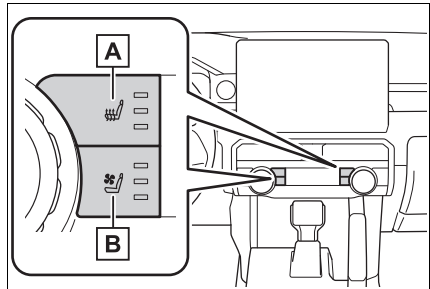

**A Adjust the front seat heater temperature level**

Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

The level indicator (red) light up during operation.

**B Adjust the front seat ventilator fan speed level**

Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

The level indicator (blue) light up during operation.

**? The heated steering wheel, seat heaters and seat ventilators can be used when**

The engine switch is in ON.

 **WARNING**


? **To prevent overheating and minor burn injuries**

Observe the following precautions when using the seat heaters.

- ? Do not cover the seat with a blanket or cushion when using the seat heater.
- ? Do not use seat heater more than necessary.


## Interior lights list

### Location of the interior lights

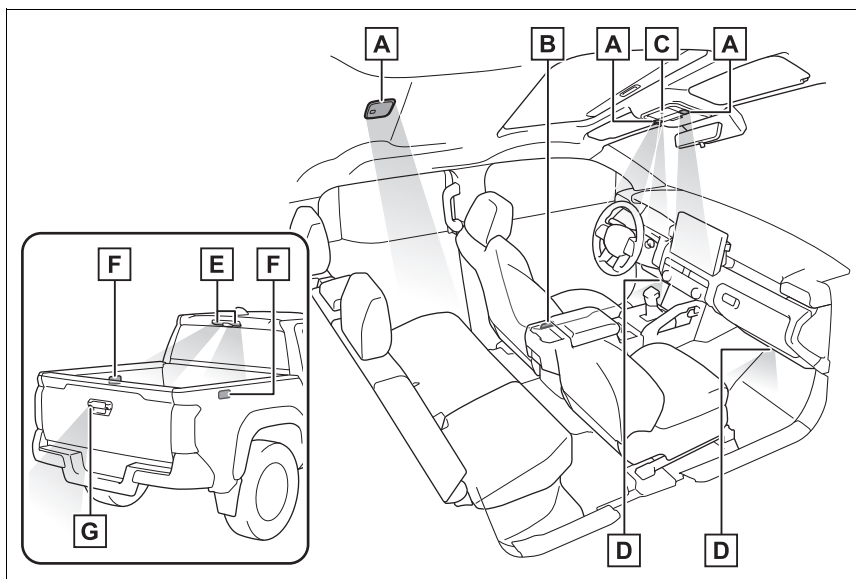

- A** Personal/interior lights (→P.459)
- B** Door courtesy lights (if equipped)
- C** Shift lever light
- D** Footwell lights (if equipped)
- E** Cargo lamp (→P.459)
- F** Bed lamp (→P.459)
- G** Trailer hitch light (if equipped) (→P.436, 459)

**Personal/interior lights main switch**

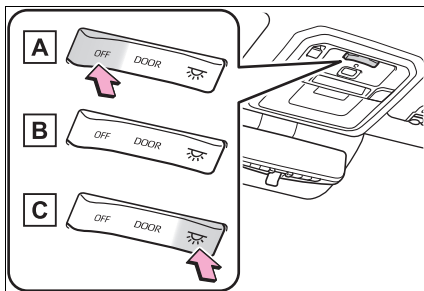

**A "OFF"**

The personal/interior lights can be individually turned on or off.

**B "DOOR"**

The personal/interior lights come on when a door is opened. They turn off when the doors are closed.


**C ON**

The personal/interior lights cannot be individually turned off.


**Operating the personal/interior lights**

? **Front personal/interior lights**

Turns the lights on/off

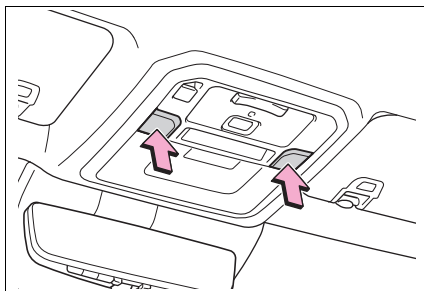

? **Rear interior lights**

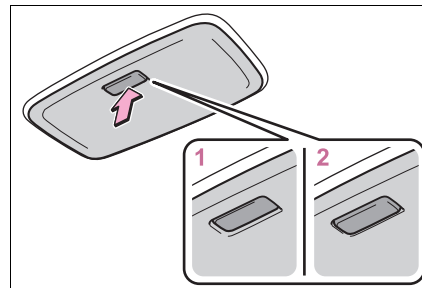


1 Turns the light on

2 Turns the door-linked function on (door position)

The lights turn on/off according to the opening/closing of the doors.

The rear interior light turn on/off together the front interior light.

**Cargo lamp main switch**

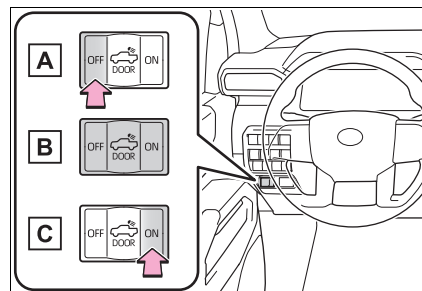

**A "OFF"**

Turns the lights off

**B "DOOR"**

Automatic transmission vehicles: While the shift lever is in P or R, the cargo lamp, bed lamp and trailer hitch (if equipped) light turn on when the door or tailgate are opened and off when the door and tailgate are closed.

While the shift lever is in D or N, the cargo lamp and bed lamp turn on



when the door is opened and off when the door is closed.

Manual transmission vehicles:

While the shift lever is in N with the parking brake on or R, the cargo lamp, bed lamp and trailer hitch light (if equipped) turn on when the door or tailgate are opened and off when the door and tailgate are closed.

While the shift lever is in N with the parking brake off or shift lever is in 1,2,3,4,5,6, the cargo lamp and bed lamp turn on when the door is opened and off when the door is closed.

#### **C** "ON"

The cargo lamp, bed lamp, trailer hitch light turns on while the shift lever is in P or R (automatic transmission), N or R (manual transmission). Only cargo lamp and bed lamp turns on while shift lever in D (automatic transmission), 1 (manual transmission).

#### ? **Illuminated entry system**

The lights automatically turn on/off according to the engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.

#### ? **To prevent the battery from being discharged**

If the following lights remain on when the door is not fully closed and the main switch is in the "DOOR" position, the lights will go off automatically after 20 minutes:

- ? Personal/interior lights
- ? Cargo lamp
- ? Bed lamp
- ? Trailer hitch light (if equipped)

#### ? **Automatic illumination of the interior lights**

If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the interior lights will turn on automatically. The interior lights will turn off automatically after approximately 20 minutes.

The interior lights can be turned off manually. However, in order to help prevent further collisions, it is recommended that they be left on until safety can be ensured. (The interior lights may not turn on automatically depending on the force of the impact and conditions of the collision.)

#### ? **Customization**

Some functions can be customized. (→P.640)

#### NOTICE

##### ? **To prevent battery discharge**


Do not leave the lights on longer than necessary when the engine is off.

##### ? **Removing light lenses**

Never remove the lens for the personal/interior lights. Otherwise, the lights will be damaged. If a lens needs to be removed, contact your Toyota dealer.

List of storage features

Location of the storage features

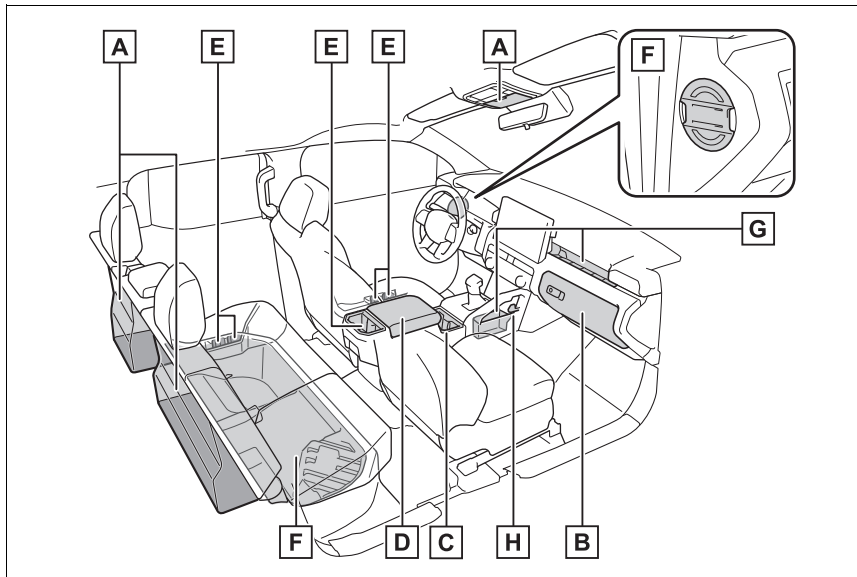

The illustration represents the Double Cab models and may differ from the shape of other models.

- A** Auxiliary boxes (if equipped)
- B** Glove box
- C** Cup holders
- D** Console box
- E** Bottle holders
- F** Storage box (if equipped)
- G** Open tray (if equipped)
- H** Storage hook

**! WARNING**


? **Items that should not be left in the storage spaces**

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- ? Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- ? Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

**Glove box**

Pull the lever to open.

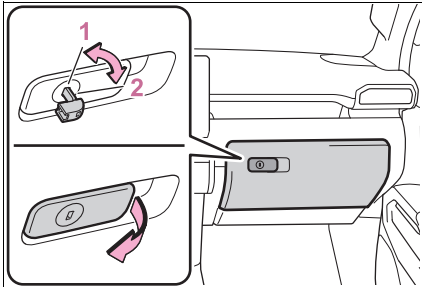

- 1 Unlock with the mechanical key
- 2 Lock with the mechanical key


**! WARNING**

? **Caution while driving**

Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.

**Cup holders**

► Front

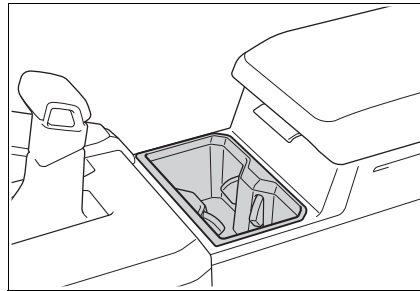


**! WARNING**

? **Items unsuitable for the cup holder**


Do not place anything other than cups or beverage cans in the cup holders. Inappropriate items must not be stored in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

**Bottle holders**


► Front

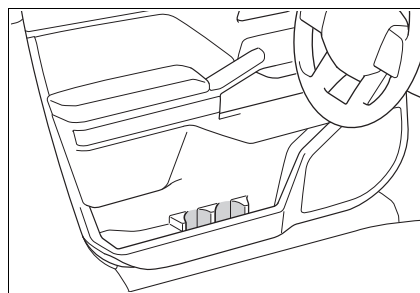

► Rear (if equipped)

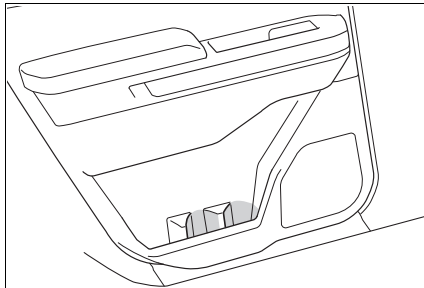

► Rear of console box

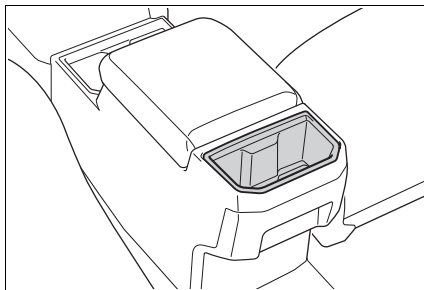

? **Bottle holders**

- ? When storing a bottle, close the cap.
- ? The bottle may not be stored depending on its size or shape.

**! WARNING**

? **Items unsuitable for the bottle holders**

Do not place anything other than a bottle in the bottle holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.


**! NOTICE**

? **Items that should not be stowed in the bottle holders**

Put the cap on before stowing a bottle. Do not place open bottles in the bottle holders, or glasses and paper cups containing liquid. The contents may spill and glasses may break.

**Console box**

Lift the lid while pulling up the lever.

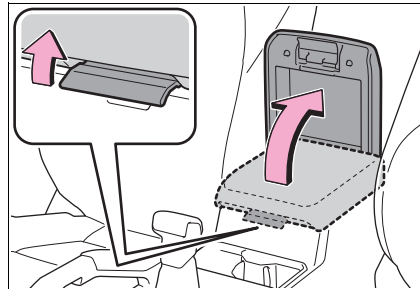


**! WARNING**

? **Caution while driving**

Keep the console box closed. Injuries may result in the event of an accident or sudden braking.


**Console vault (if equipped)**

The console vault can be locked with the key or security code.

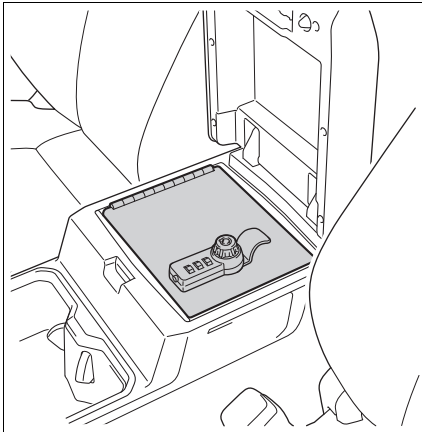


? **How to change the security code**

- 1 Check that it is in the lock position and match the security code to the unlock number. (default setting is 0-0-0)

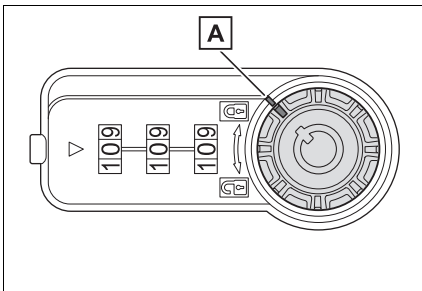


**A** Lock position

- 2 Enter the new desired security code while pressing the reset button.

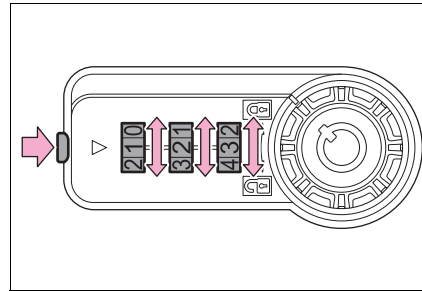


- 3 Release reset button.

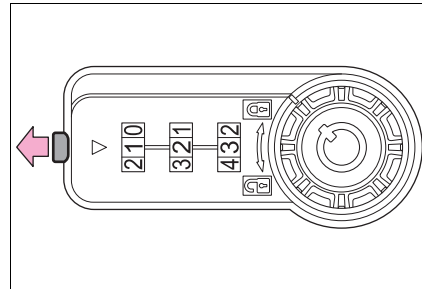

? **Use the key to open**

The key can be used to open the console vault without entering the security code.

- 1 Insert the key and then set to the unlock position.

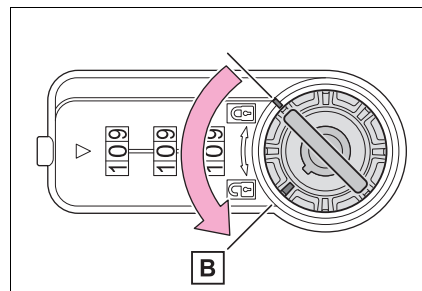


**B** Unlock position


- 2 Open the console vault.

? **Match the security code and open**

- 1 Match the security code that was set.

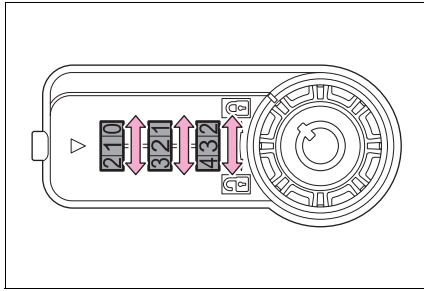

- 2 Set to the unlock position.

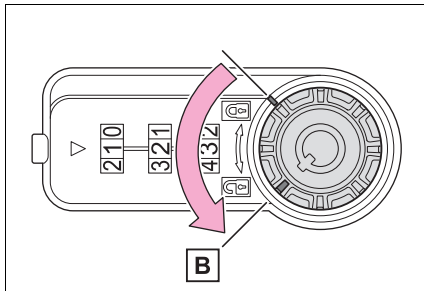

**B** Unlock position

- 3 Open the console vault.

? **When the security code is forgotten**

If the security code is forgotten, recover the security code with the following steps.

- 1 Insert the key and set to the unlock position.
- 2 Turn each dial until it stops.
- 3 The security code is the number on which the dials stopped.

**! WARNING**

? **Caution while driving**

Keep the console vault closed. Injuries may result in the event of an accident or sudden braking.

? **When opening and closing the console vault**

Take care to prevent your fingers etc. from being caught.

**! NOTICE**

? **Opening and closing**


Do not force the console vault open when it is locked. Failure to do so may break the key and console vault.

**Auxiliary boxes (if equipped)**

► Type A


Push in and release the auxiliary box.

This box is useful for temporarily storing the small items.

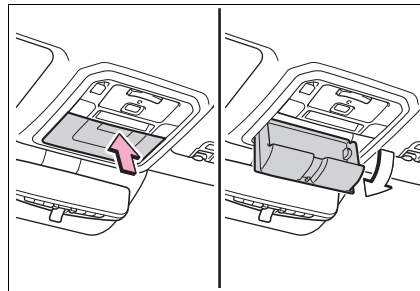

► Type B

Folding down the rear seat-backs. (→P.154)

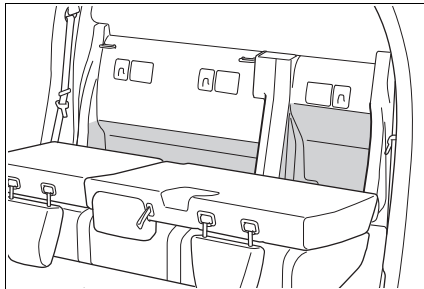

**⚠ WARNING**

? **Caution while driving**


Do not leave the auxiliary box open while driving. Items may fall out and cause death or serious injury in case of an accident or sudden stop.

? **Items unsuitable for storing (type A)**

Do not store items heavier than 0.4 lb. (0.2 kg). Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.

**Storage box (if equipped)**

► Type A

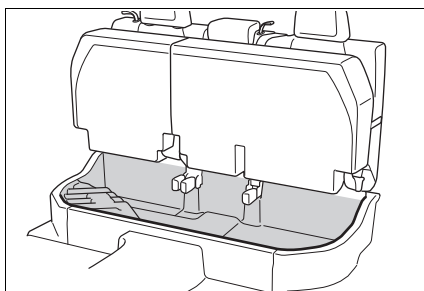

? **Open the storage box**

Raising the bottom cushions.


(→P.156)

? **Close the storage box**

Returning the bottom cushions. (→P.156)

► Type B

Pull up the lever to open.

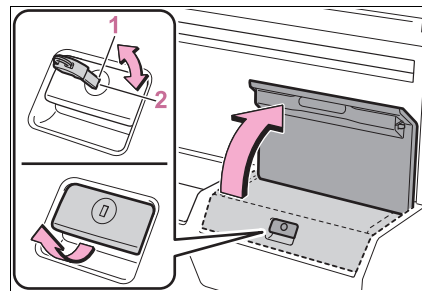


1 Unlock with the mechanical key

2 Lock with the mechanical key


► Type C

Pull up handle to open the box.

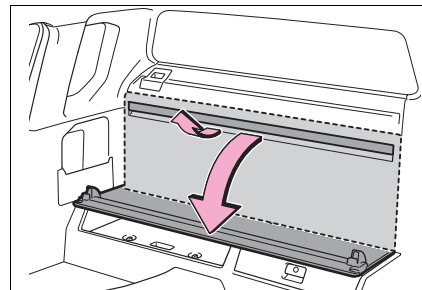


► Type D

- 1 Turn the knob counterclockwise.

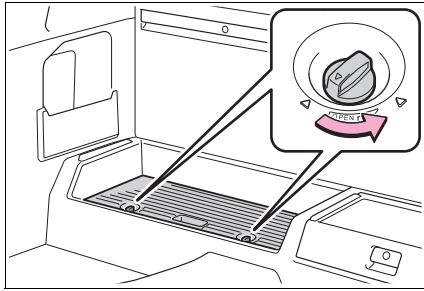


- 2 Open the lid.

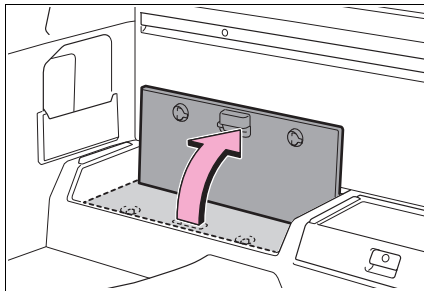

► Type E

Pull out the panel as shown in the figure below.

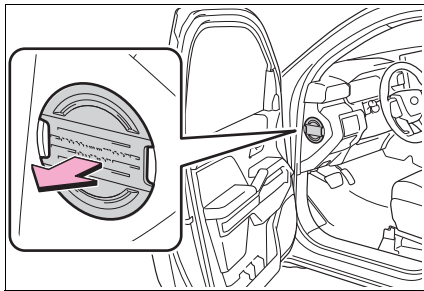


**! WARNING**

? **Caution while driving**

- ? Keep the storage box closed. Injuries may result in the event of an accident or sudden braking.

- ? Securely fasten items in the storage box. Otherwise, items may fly out due to sudden stops and may cause an accident which could lead to death or serious injury. Do not leave the storage box open while driving.


- ? Do not force or pry the upper box lid open or force it down. Doing so may damage the damper strings.

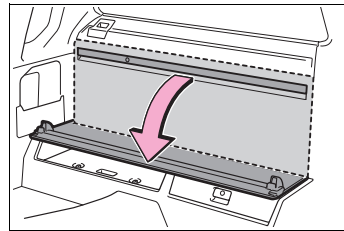

? **Items unsuitable for storing (type E)**

- ? Do not store items heavier than 0.6 lb. (0.3 kg). Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.


- ? There is an arrow on backside of cover to show correct, upward orientation for re-installation.

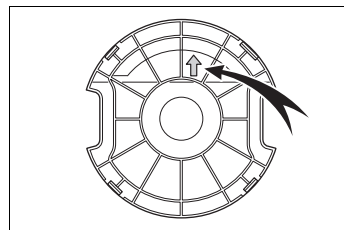




**Open tray (if equipped)**


▶ Type A

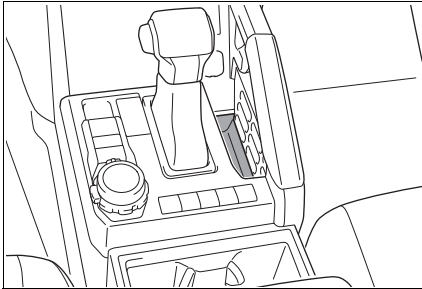


▶ Type B

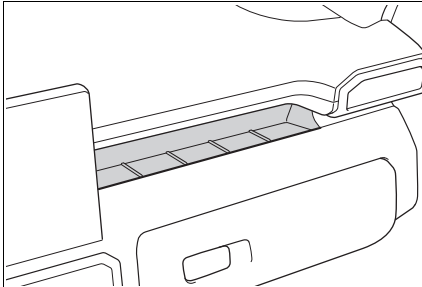

▶ Type C

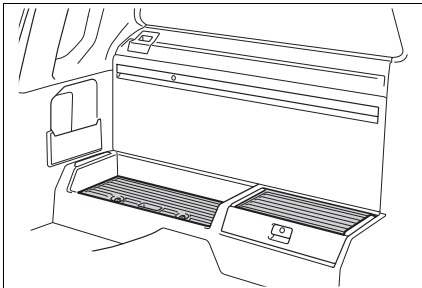

▶ Type D

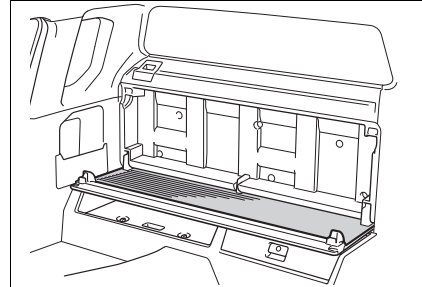

**! WARNING**


? **Items unsuitable for the open tray**

Observe the following precautions when putting items in the open tray.

Failure to do so may cause items to be thrown out of the tray in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.

- ? Do not store items in the tray that can easily shift or roll out.
- ? Do not stack items in the tray higher than the tray's edge.
- ? Do not put items in the tray that may protrude over the tray's edge.
- ? Do not store items on the lower tray.
- ? Items on tray may be damaged when upper tray is opened.

**Storage hook**

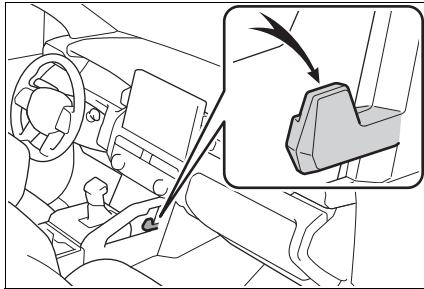

**⚠ WARNING**


**? To prevent damage to the storage hook**

Do not hang any object heavier than 6.6 lb. (3 kg) on the storage hook.

**Luggage compartment features**

**Bed hooks**


Bed hooks are provided for securing loose items.

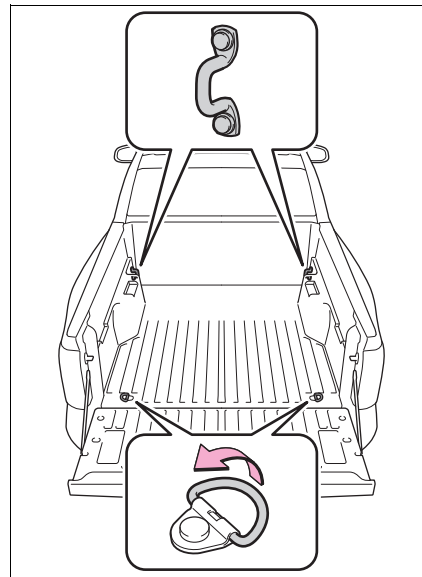

**Deck**

**? Tie-down cleats**


The deck rail system enables you to insert and move tie-down cleats to their best location along deck rails to secure a load.

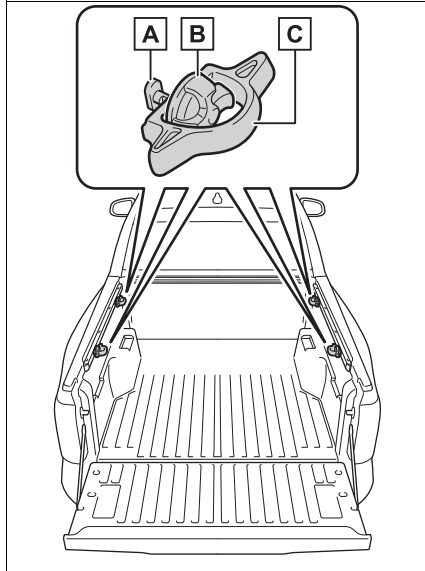

- A** Locking plate
- B** Thumb wheel
- C** Tie-down cleat


● Installing the tie-down cleat

- 1 Loosen the thumb wheel in a counterclockwise motion, and depress the wheel so that the locking plate maintains 0.5 in. (12.7 mm) gap.

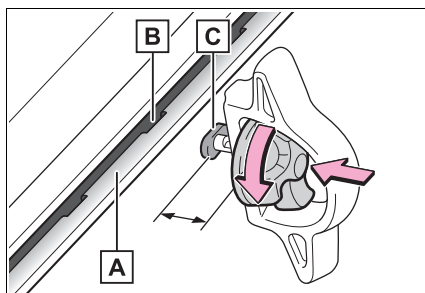


- A** Deck rail
- B** Detent
- C** Locking plate

- 2 Insert the locking plate into the deck rail, rotate the tie-down cleat 90°, and release the thumb wheel.

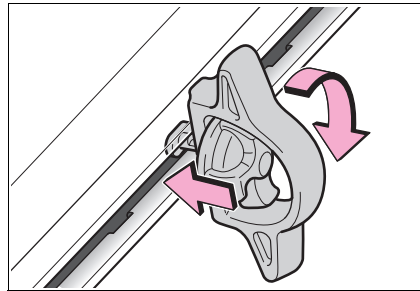


- 3 Slide the cleat to the closest detent in the rail system. You will feel that the locking plate snaps into a detent.


When using a tonneau cover, confirm the cleat position will not interfere with its proper closing and latching.

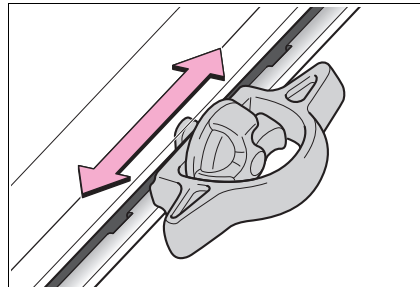

- 4 Tighten the thumb wheel in a clockwise motion until the clutch mechanism ratchets.

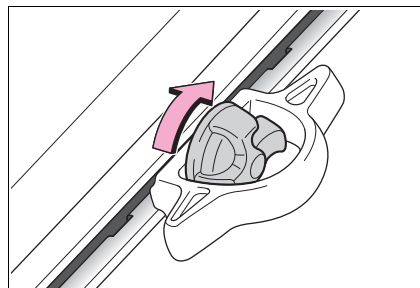

- 5 Check the tie-down cleat to confirm that it is locked into a detent and securely mounted to the deck rail system.

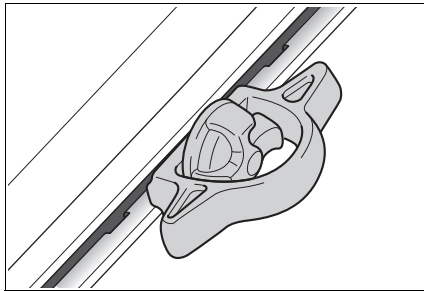

**⚠ WARNING**


- ? **Tie-down cleat precautions**
- ? Properly install and tighten the tie-down cleats into the deck rail system. Failure to properly install and tighten the tie-down cleats can cause cargo to become unsecured. Unsecured cargo can cause injury when the vehicle is in motion.
- ? Applying loads at an angle to the bed cleat greater than 45 degrees from horizontal or loads greater than 220 lb. (100 kg) may cause damage to the bed, bed rail system, bed cleat as well as the cargo. This can cause cargo to become unsecured. Unsecured cargo can cause injury when the vehicle is in motion.

- ? Properly secure all cargo to prevent shifting or sliding during driving. Failure to properly secure cargo can cause injury when the vehicle is in motion.
- ? When using a tonneau cover, confirm the cleat position will not interfere with its proper closing and latching. Failure to confirm proper closing and latching can lead to tonneau cover coming off while driving and cause injury.

**Deck divider**

- ? **Bed divider with molle panel**

Allows the moveable panel to be placed against cargo loads in the bed to prevent unwanted movement while operating the vehicle.

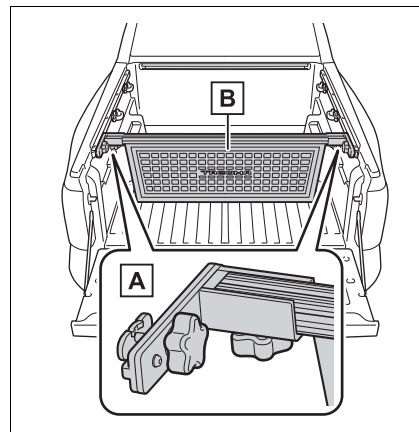

**A** Thumb wheel


**B** Molle panel

- Installing the Bed divider with molle panel

5


Interior features

- 1 Loosen the thumb wheel in a counterclockwise motion, and depress the wheel so that the locking plate maintains 0.5 in. (12.7 mm) gap.

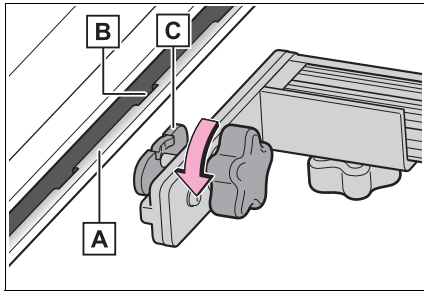


- A** Deck rail
- B** Detent
- C** Locking plate


- 2 Insert the locking plate into the deck rail, and release the thumb wheel.

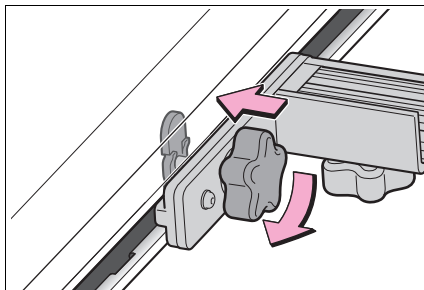


- 3 Slide the thumb wheel to the closest detent in the rail system.

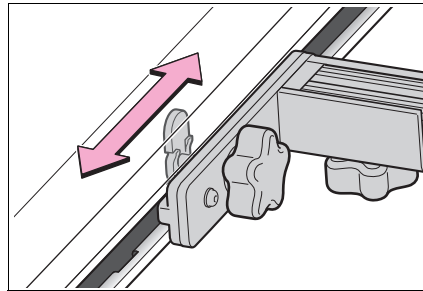

- 4 Tighten the thumb wheel in a clockwise motion until the clutch mechanism ratchets.

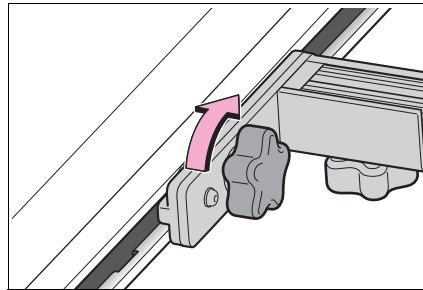

- 5 Check the securely mounted to the deck rail system.

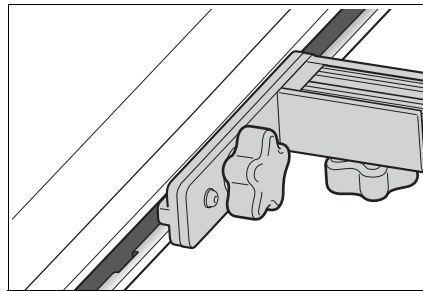

**⚠ WARNING****? Bed divider with molle panel precautions**

Properly secure cargo to prevent it from moving while driving. Otherwise the cargo may move while the vehicle is in motion, which could lead to death or serious injury.

**Other interior features****USB Type-C charging ports**

The USB Type-C charging ports are used to supply electricity at to external devices.


Use the appropriate terminal for each charging port type.

The USB Type-C charging ports are for charging only. They are not designed for data transfer or other purposes.

Depending on the external device, it may not charge properly. Refer to the manual included with the device before using a USB Type-C charging port.


**? Using the USB Type-C charging ports****► On the instrument panel**

These USB Type-C charging ports are capable of high power output. An output up to 45 W max on a single port or 52.5 W combined (shared) is possible. The USB Type-C charging ports operate at multiple voltage and multiple wattage levels.

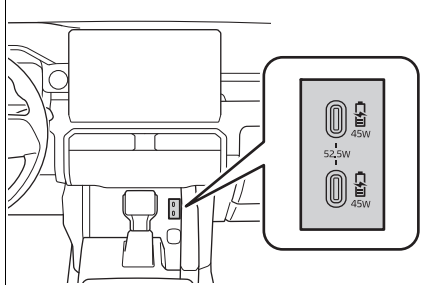

- ▶ Rear of console box (if equipped)


The USB Type-C charging ports are used to supply 3.0 A of electricity at 5 V to external devices.

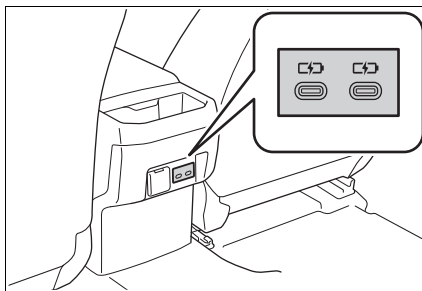

- ▶ Bed (if equipped)

Open the lid.

The USB Type-C charging ports can be used to supply 3.6 A of electricity at 5 V; 3.0 A of electricity at 9 V; or 2.25 A of electricity at 12 V to external devices.

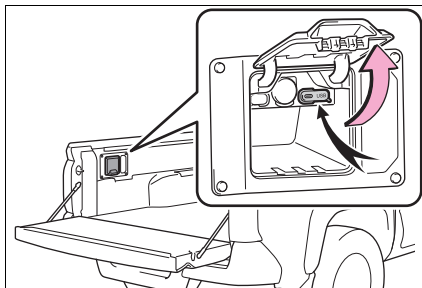

? **The USB Type-C charging ports can be used when**

The engine switch is in ACC or ON, or the multimedia system is on.

Bed port: The engine switch must be ON.

? **Situations in which the USB Type-C charging ports may not operate correctly**

- ? Rear of console box: If a device which consumes more than 3.0 A at 5 V is connected
- ? If a device designed to communicate with a personal computer, such as a USB memory device, is connected
- ? If the connected external device is turned off (depending on device)
- ? If the temperature inside the vehicle is high, such as after the vehicle has been parked in the sun

? **About connected external devices**

Depending on the connected external device, charging may occasionally be suspended and then start again. This is not a malfunction.

 **NOTICE**

? **To prevent damage to the USB Type-C charging ports**

- ? Do not insert foreign objects into the ports.
- ? Do not spill water or other liquids into the ports.
- ? Do not apply excessive force to or impact the USB Type-C charging ports.
- ? Do not disassemble or modify the USB Type-C charging ports.

**⚠ NOTICE**

- ? **To prevent damage to external devices**
- ? Do not leave external devices in the vehicle. The temperature inside the vehicle may become high, resulting in damage to an external device.
- ? Do not push down on or apply unnecessary force to an external device or the cable of an external device while it is connected.
- ? **To prevent battery discharge**

Do not use the USB Type-C charging ports for a long period of time with the engine stopped.

**Wireless charger (if equipped)**

A portable device can be charged by just placing Qi standard wireless charge compatible portable devices according to the Wireless Power Consortium, such as smartphones and mobile batteries, etc., on the charge area.

The compatible portable devices can be found on the following Wireless Power Consortium website.  
<https://www.wirelesspowerconsortium.com/>

This function cannot be used with portable devices that are larger than the charging tray. Also, depending on the portable device, it may not operate as normal. Please read the opera-

tion manual for portable devices to be used.


? **The “Qi” logo**

The “Qi” logo is a trademark of the Wireless Power Consortium.



? **Name for all parts**


- ▶ Vehicles with an automatic transmission

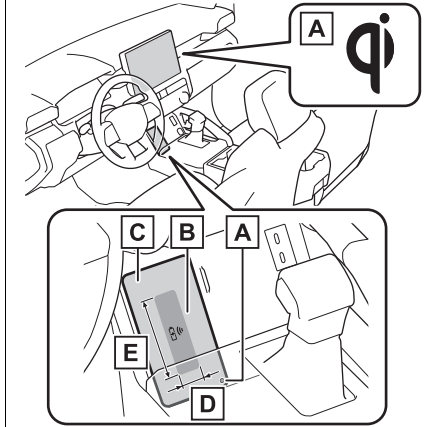

- A** Operation indicator light
- B** Charging area\*
- C** Charging tray
- D** Approximately 1.0 in. (2.5 cm)
- E** Approximately 3.9 in. (10 cm)



- ▶ Vehicles with a manual transmission

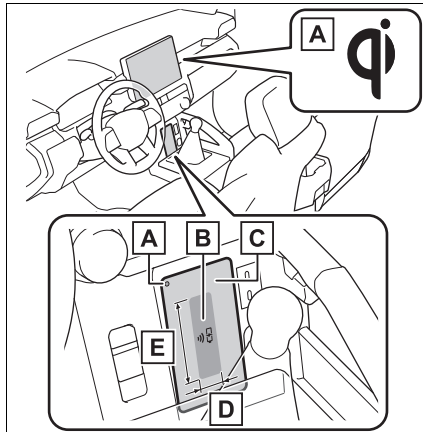

- A** Operation indicator light
- B** Charging area \*
- C** Charging tray
- D** Approximately 1.0 in. (2.5 cm)
- E** Approximately 3.9 in. (10 cm)

\*: Portable devices and wireless chargers contain charging coils. The charging coil in the wireless charger can be moved through the charging area to the location of the charging coil in the mobile device. Charging is possible as long as the center of the coil of the mobile device is within the charging area. If 2 or more portable devices are placed on the charging tray, their charging coils may not be properly detected and they may not be charged.

- ? **Using the wireless charger**  
Place the portable device on the

charging tray.


Place the charging side of the portable device down with the center of the device in the center of the charge area.

When charging, the operation indicator light (orange) comes on.


If charging is not occurring, refer to P.482.

When charging is complete, the operation indicator light (green) comes on.

- ▶ Vehicles with an automatic transmission

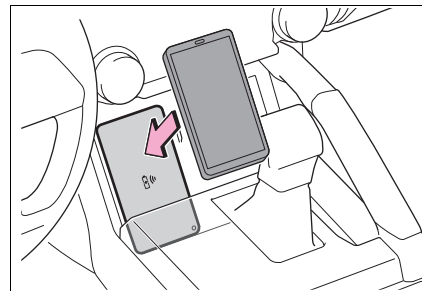

- ▶ Vehicles with a manual transmission

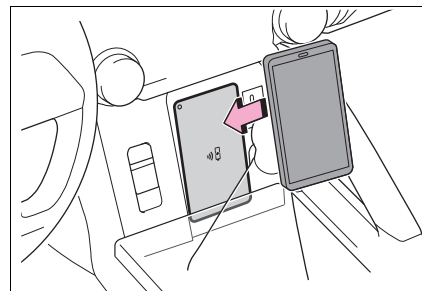

? **Recharging function**

- When charging is complete and after a fixed time in the charge suspension state, charging restarts.
- When a portable device is

moved significantly in the charge area, the charging coil is disconnected and charging is stopped momentarily. However, if there is a charging coil in the charge area, the charging coil inside the wireless charger will move toward it and then charging restarts.

? **Rapid charging function**

- The following portable devices support rapid charging.
  - Portable devices compliant with WPC Ver1.3.2 and compatible with rapid charging
  - iPhone's with an iOS version that supports 7.5 W charging (iPhone 8 and later models)
  - Portable devices compatible with Galaxy original rapid charging standard.
- When a portable device that supports rapid charging is charged, charging automatically switches to the rapid charging function.

? **Lighting conditions of operation indicator light**

Operation indicator light		Conditions
Charging tray side	Multimedia system screen side	
Turning off	Disappear	When the Multimedia power supply is off or engine switch is off
Green (comes on)	Gray	On Standby (charging possible state) <sup>*1</sup>
		When charging is complete <sup>*2</sup>
Orange (comes on)	Blue	Charging

\*1: Charging power will not be output during standby. A metallic object will not be heated, if it is placed on the charging tray in this state.

\*2: Depending on the portable device, there are cases where the operation indicator light will continue being lit up orange even after the charging is complete.

? **The wireless charger is not working properly**

The following are situations in which the wireless charger does not work properly and how to deal with the possible causes.

Operation indicator light	Multimedia system screen	Suspected causes/Handling method
Orange (Flashing repeatedly once every second)	Gray	<b>Vehicle to wireless charger communication failure</b> → <b>If the engine switch is turned on, off and then restart the engine</b>  If the engine switch is in ACC, start the engine. (→P.210)
Green (Flashing repeatedly once every second)	Disappear	<b>Wireless charger and multimedia system communication failure</b> → <b>If the engine switch is turned on, off and then restart the engine</b>  If the engine switch is in ACC, start the engine. (→P.210)

Operation indicator light	Multimedia system screen	Suspected causes/Handling method
Green (comes on)	Blue	<p><b>The smart key system is detecting the key</b>                      → Please wait until the key detection is complete.</p>
Green (comes on)	Gray	<p><b>Foreign substance detection:</b>                      A metallic foreign substance is in the charge area, and so the abnormal heating prevention function of the metallic foreign object operated                      → Remove the foreign substance from the charge area.</p>
		<p><b>Portable device misaligned/distanced from charging surface:</b>                      The charging coil in the portable device moved outside of the charging area, or lens convex is large, or case is thick so the abnormal heating prevention function operated                      → Remove the portable device from the wireless charger, after 5 seconds, then place the portable device so that it is near the center of the wireless charger.                      Also, if a case or cover is installed to the portable device, remove it.</p>

Operation indicator light	Multimedia system screen	Suspected causes/Handling method
Green (comes on)	Gray	<p><b>Battery protection function of portable device:</b>  <b>Before full charging, battery protection function of portable device operated</b>                      → <b>Confirm the setting of portable device.</b></p> <p><b>Continued detection of an electronic key:</b>  <b>When a Multimedia function is used through vehicle customization, the electronic key is continually detected without being confirmed.</b>                      → <b>In this case, turn the engine switch ACC or ON to confirm the key.</b></p>
Orange (Repeatedly flashes 4 times continuously)	Gray	<p><b>Safety shutdown resulting when the temperature within the wireless charger exceeded the set value</b>                      → <b>Stop charging, remove the portable device from the charging tray, wait for the temperature to drop, and then start charging again.</b></p>

? **The wireless charger can be operated when**

The engine switch is in ACC or ON, or the multimedia system is on.

? **Portable devices that can be charged**

? Portable devices compatible with the Qi wireless charging standard can be charged by the wireless charger. However, compatibility is not guaranteed for mobile devices supporting Qi Ver. 1.0 and 1.3.2 or later.

? The wireless charger is designed

to supply low power electricity (5 W or less) to a cellular phone, smartphone, or other portable device.

- ? However, portable devices, such as the following, can be charged with more than 5 W.
- Charging at 7.5 W or less is supported by iPhone's that support 7.5 W charging.
  - Charging at 10 W or less is supported by Galaxy device that support 10 W charging of original standard.
  - Charging at 15 W or less is supported by portable devices compliant with EPP output as defined by

WPC standard Ver1.3.2.

? **Using the smart key system**

During charging, when the smart key system searches for an electronic key, charging may be temporarily suspended. When the electronic key is detected, charging will automatically start again.

? **When covers and accessories are attached to portable devices**

Do not charge in situations where cover and accessories not able to handle Qi are attached to the portable device. Depending on the type of cover (including for certain genuine manufacturer parts) and accessory, it may not be possible to charge.

When charging is not performed even with the portable device placed on the charge area, remove the cover and accessories.

? **Important points of the wireless charger**

? If the electronic key cannot be detected within the vehicle interior, charging can not be done. When the door is opened and closed, charging may be temporarily suspended.

? When charging, the wireless charging device and portable device will get warmer, however this is not a malfunction. When a portable device gets warm while charging may stop due to the protection function on the portable device side. In this case, when the temperature of the portable drops significantly, charge again. The fan may start operating to lower the temperature inside the wireless charger, however this is not a malfunction.

? **Sound generated during operation**

When the power supply switch is turned on or while a portable device is being identified, operation sounds may be heard. This is not a malfunction.

tion.

? **Cleaning the wireless charger**

→P.513

? **Trademark information**

- iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.
- “Galaxy” is a trademark or registered trademark of Samsung Electronics Co., Ltd.

? **Certification**

→P.707

 **WARNING**

? **Caution while driving**

When charging a portable device, for safety reasons, the driver should not operate the main part of the portable device while driving.

? **Caution while in motion**

Do not charge lightweight devices such as wireless headphones while in motion. These devices are very light and may be ejected from the charging tray, which may lead to unforeseen accidents.

? **Caution regarding interference with electronic devices**

People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverters, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger.

**⚠ WARNING**

? **To prevent malfunctions or burns**  
 Observe the following precautions. Failure to do so may result in a equipment failure and damage, catch fire, burns due to over-heat or electric shock.


- ? Do not insert any metallic objects between the charge area and the portable device while charging
- ? Do not attach an aluminum sticker or other metallic object to the charge area
- ? Do not attach an aluminum sticker or other metallic object to the side of the portable device (or to its case or cover) that touches the charge area
- ? Do not use the charging tray as a small storage space
- ? Do not subject to a strong force or impact
- ? Do not disassemble, modify or remove
- ? Do not charge devices other than specified portable devices
- ? Keep away from magnetic items
- ? Do not charge devices if the charge area is covered in dust
- ? Do not cover with a cloth or similar material

**⚠ NOTICE**

? **Situations in which the function may not operate normally**  
 Devices may not be charged normally in the following situations.

- ? The portable device is fully charged

- ? The portable device is being charged with a cable connected
- ? There is foreign matter between the charge area and portable device
- ? Charging has caused the portable device to heat up
- ? The temperature around the charging tray is 95°F (35°C) or higher, such as in extreme heat
- ? The portable device is placed with its charging side facing up
- ? The small portable device such as foldable type is placed in an area misaligned from the charge area
- ? The portable device is larger than the charging tray
- ? The camera lens protrudes 0.12 in. (3 mm) or more from the surface of the portal device
- ? The vehicle is in an area where strong electrical waves or noise are emitted, such as near a television tower, power plant, gas-line station, broadcasting station, large display, airport, etc.
- ? Any of the following objects is stuck or installed between the charging side of the portable device and the charge area.
  - Thick cases or covers
  - A case or cover attached with an uneven or tilted surface, so that the charging side is not flat
  - Thick decorations
  - Accessories, such as finger rings, straps, etc.

 **NOTICE**

- ? When there is a gap between the charging side of the portable device and the charge area due to a protrusion such as a camera on the charging side of the portable device.
- ? When the portable device is in contact with, or is covered by any of the following metallic objects:
  - A flip type case with a magnet on the charging side of the portable device
  - A card that has metal on it, such as aluminum foil, etc.
  - A pack of cigarettes that includes aluminum foil
  - A wallet or bag that is made of metal
  - Coins
  - A heating pad
  - CDs, DVDs or other media
  - A metal accessory
  - A case or cover made of metal
- ? Electric wave type wireless remote controls are being used nearby
- ? The electronic key is not inside the vehicle
- ? 2 or more portable devices are placed on the charging tray at the same time


If charging is abnormal or the operation indicator light continues to flash for any other reason, the wireless charger may be malfunctioning. Contact your Toyota dealer.

- ? **To prevent malfunctions and data corruptions**
- ? When charging, bringing a credit, or other magnetic card, or magnetic storage media close to the charge area may clear any stored data due to magnetic influence. Also, do not bring a wristwatch or other precision instrument close to the charge area since doing so may cause it to malfunction.
- ? Do not charge with a non-contact IC card such as a transportation system IC card inserted between the charging side of a portable device and the charge area. The IC chip may become extremely hot and damage the portable device or IC card. Be especially careful not to charge a portable device inside a case or cover with a non-contact IC card attached.
- ? Do not leave portable devices inside the vehicle. The inside of the vehicle can become hot in extreme heat, which could cause a malfunction.
- ? **If the smartphone OS has been updated**
- If the smartphone OS has been updated to a newer version, its charging specifications may have changed significantly. For details, check the information on the manufacturer's website.
- ? **To prevent battery discharge**
- Do not use the wireless charger for a long period of time when the engine is stopped.

**Assist grips (if equipped)**

An assist grip installed on the pillar can be used when getting in or out of the vehicle.



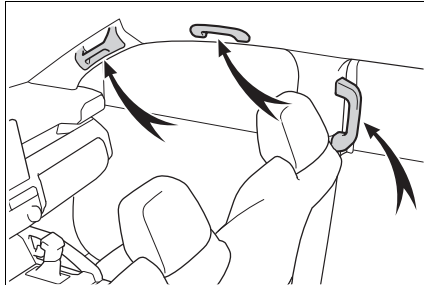


**NOTICE**

**? To prevent damage to the assist grip**

Do not hang any heavy object or put a heavy load on the assist grip.

**Coat hooks**

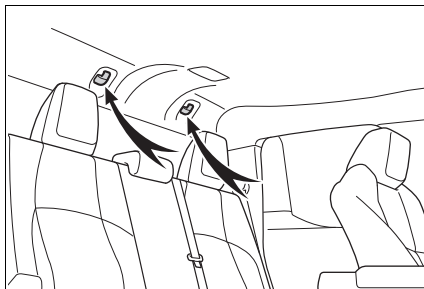

**WARNING**

**? Items that must not be hung on the hook**


Do not hang a coat hanger or other hard or sharp object on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles that cause death or serious injury.

**Power outlet (12 VDC)**

The power outlet can be used for 12 V accessories that run on less than 10 A.


► On the instrument panel

Open the lid.

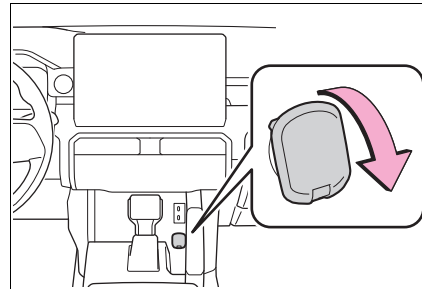

► Rear of console box (if equipped)


Open the lid.

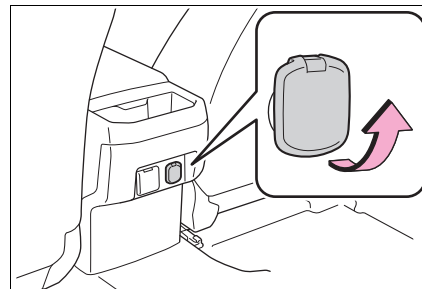

► Bed (if equipped)

Open the lid.

When USB Type-C is not in use, accessories that use 12V up to 6A can be used.

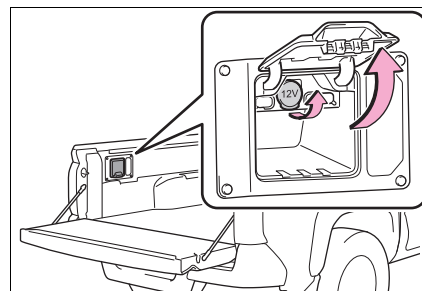

**? The power outlet can be used when**


The engine switch is in ACC or ON,

or the multimedia system is on.

Bed port: The engine switch must be ON.

? **When turning the engine switch off**

Disconnect electrical devices with charging functions, such as mobile battery packs. If such devices are left connected, the engine switch may not be turned off normally.

 **NOTICE**

? **To avoid damaging the power outlet**  
Close the power outlet lid when the power outlet is not in use. Foreign objects or liquids that enter the power outlet may cause a short circuit.

? **To prevent the fuse from being blown**  
Do not use an accessory that uses more than 12 V 10 A.

? **To prevent battery discharge**  
Do not use the power outlet longer than necessary when the engine is not running.


**Power outlets (120 VAC) (if equipped)**

Please use as a power supply for electronic devices that use less than 120 VAC.

? **Using the power outlets**


► **Rear of the console box**

Open the lid.

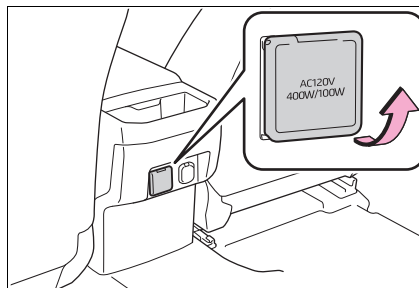

► **Bed**

Open the lid.

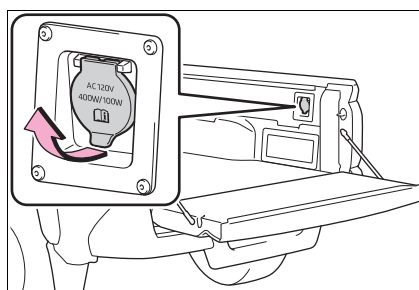


? **When turning the power outlets on**

Press the “AC120V” switch.

The power outlets can be used when the indicator on the “AC120V” switch is illuminated.

The power outlets are turned off/on each time the “AC120V” switch is pressed.

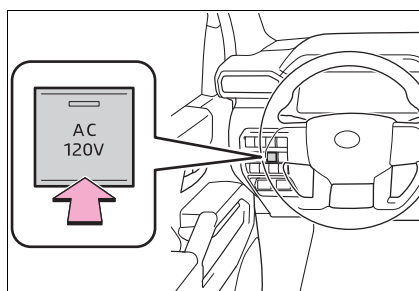

? **Maximum available capacity of the power outlet**

- While the vehicle is being driven

The maximum capacity of the power outlet is always 120 V AC/100 W.


- When the vehicle is stationary
  - The maximum capacity is restricted to 120 V AC/100 W when the shift lever is moved to any positions other than P (automatic transmission) or N.
  - The maximum capacity is 120 V AC/400 W when the shift lever is in P (automatic transmission) or N.

The maximum capacity of 400 W can only be restored by turning the power outlet main switch off and then on again under condition described above.


? **When connecting a device**

Open the lid, and fully and securely insert the plug of the device into the power outlet.

► **Rear of the console box**

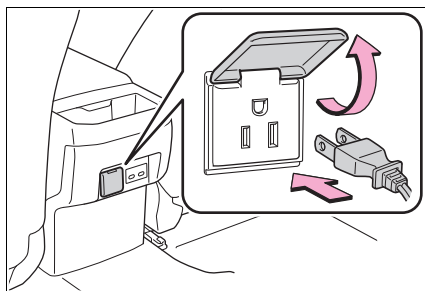

► **Bed**

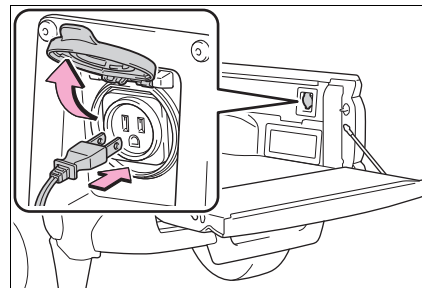

? **When turning the power outlets off**

- 1 Turn the connected devices off.
- 2 Press the “AC120V” switch to turn the power outlets off.
- 3 Disconnect each plug from the power outlets.
- 4 Close the lid of each power outlet.

? **The power outlet can be used when**

The engine is running.

? **Electronic devices that can be connected to the power outlets**

Use electronic devices that can be connected to the 120 VAC power outlets. Depending on the devices being used, the current flow may become high and the electric power for a moment may exceed the regulated capacity. If the regulated capacity is exceeded by the electronic devices being used, the protection function of the power outlet may operate and power outlet may not be able to be used, but this is not a malfunction. However, observe the following precautions:

- ? Depending on the devices used, it may cause interference with TV and radio broadcasts.

? Observe the precautions that are stated in the instruction manuals for each of the electronic devices.

? It is assumed that many typical general electronic devices will not be used within the vehicle. The following problems may occur when using electronic devices within the vehicle.

- Electronic device malfunction due to vibrations while driving.
- Electronic device malfunction or poor operations due to temperature changes\* within the vehicle.
- The installation is unstable and may not operate normally as the compartment within the vehicle is not flat.

\*: Depending on the weather, season, usage environment, etc., the vehicle compartment may undergo extreme high or low temperatures.

? **Power outlet**

The power outlet on the console box is a device in order to use electronic devices within the vehicle.

? **Devices which may not operate correctly**

The following 120 VAC devices may not operate properly:

- ? Devices with high initial peak wattage
- ? Measuring devices that process precise data
- ? Devices that require an extremely stable power supply
- ? Devices that require a constant power supply from the power outlet, such as a device with a timer.

? **Operating the Stop & Start system (if equipped)**

When the engine restarts from the engine stopped state due to the operation of the Stop & Start system, the accessory outlet may be temporarily unavailable, however this is not a malfunction. Pressing

the “AC120V” switch again will enable the accessory outlet to be used.

? **When the power supply function cannot be used**

If the “AC120V” switch is pressed but the switch indicator does not illuminate, the protection circuit may have operated.

In this case, perform the appropriate procedures as follows.

? Disconnect the plug of each device from the power outlets, check that the total power consumption of all devices to be connected to the power outlets, reconnect the devices and then press the “AC120V” switch again.

? Disconnect the plug of each device from the power outlets, check that the devices are not malfunctioning, reconnect the devices and then press the “AC120V” switch again.

? If the temperature inside the vehicle is high, such as after the vehicle has been parked under the sun, move the vehicle to a shaded area, use the air conditioning system to sufficiently cool the interior, and then press the “AC120V” switch again.

If the power outlets cannot be used even after performing the appropriate procedures above, have the vehicle inspected by your Toyota dealer.

? If any electrical device has malfunctioned, park the vehicle in a safe location and turn the “AC120V” switch off.

? If the protection function activates and power is cut, perform the following procedure.

- 1 Stop the vehicle in a safe place and set the parking brake.
- 2 Ensure that the shift lever is in P (automatic transmission) or N.
- 3 Check that the power consumed by the electrical devices is within

400 W and any device has not malfunctioned.

4 Press the "AC120V" switch.

If the inside of the vehicle is hot, open the windows to lower the temperature and turn the switch back on once the inside of the vehicle reaches a normal temperature. If following the procedure above does not restore power, have the vehicle inspected at your Toyota dealer.

 **WARNING**

? **For safe use**

Observe the following precautions.

Failure to do so may lead to an accident, resulting in death or serious injury.

? Do not use devices such as the following when driving:

- Devices which cannot be properly secured within the vehicle.
- Devices which may distract the driver and be a hindrance to safe driving, such as a TV, DVD player, etc.
- Unsecured devices which generate heat, such as a toaster, microwave, electric heater, electric kettle, coffee maker, etc., as they may cause burns or a fire in the case of sudden braking or an accident.
- Devices which may fall under the pedals and prevent the brake pedal from being depressed.

? Do not use devices which produce steam while the windows are closed. Doing so may cause the windows to fog up, reducing visibility and making it difficult to drive safely. Also, the steam may damage or negatively affect other devices. If the device must be used, stop the vehicle and open the windows before use.

? Do not use damaged electronic devices. The power supply function may not be able to be used.

? Do not disconnect the plug of a device while your hands are wet or insert a pin or other object into the power outlet. Also, if a liquid or snow is on the power outlet, dry the outlet before using it.

? Do not attempt to modify, disassemble or repair a power outlet. For information on repairs, contact your Toyota dealer.

? Do not let children touch the power outlets.

? Keep the power outlets free of dust and foreign matter. Also, regularly clean the power outlet.

? If the plug of a device fits loosely in a power outlet, even though it is fully inserted, replace the power outlet. For information on replacement, contact your Toyota dealer.

**⚠ WARNING**

**? Using the power outlets while parked or stopped**

Observe the following precautions.

Failure to do so may lead to an accident, possibly resulting in death or serious injury.

- ? Do not leave the vehicle unattended while the engine is running and a device is connected to a power outlet.
- ? Do not place luggage or get near the vicinity of the tailpipe.
- ? Make sure that the hood is closed. Do not put your head or hands anywhere inside the engine room, as the cooling fan may operate suddenly. If too close, hands and clothing (especially a tie, scarf, etc.) may get caught in a fan.
- ? Do not stop the vehicle near objects which burn easily.
- ? Install and use appropriately related devices to make air supply and exhaust ventilation possible in places where ventilation is bad, such as within garages, and places where the vehicle is surrounded (places where snow accumulates).
- ? Do not use in places where ventilation is bad, such as within garages where there are no air supply and exhaust ventilation devices, and places where the vehicle is surrounded (places where snow accumulates, etc.).
- ? Do not use the power outlets if the vehicle has a vehicle cover installed.
- ? Do not sleep in the vehicle while using devices such as an electric heater.

**? Devices to be connected**

- ? Read the instruction manual included with the electronic device being used and observe the precautions that are stated regarding the product.
- ? Do not use when the power plug or electronic device are damaged.
- ? Malfunctions or poor operations may occur when the outside temperatures are particularly high or low.
- ? Normal operations may not be possible for electronic devices that require level installation.
- ? Excluding electronic devices with waterproof specifications, do not use in places where it can be covered by rain or water, or places with lots of humidity.
- ? Do not use medical equipment as the power supply function may temporarily stop depending the conditions of the vehicle.


**⚠ NOTICE**

Observe the following precautions.

Failure to do so may lead to the power outlets not operating correctly or damage to the vehicle or a connected device.


**? To avoid short circuit or malfunction**

- ? Do not set a device which generates heat near the interior components or on a seat. Heat may cause these parts to melt or burn.

 NOTICE

- ? Do not use devices which are sensitive to vibration or heat in the vehicle. These devices may malfunction due to vibration while driving or heat while the vehicle is parked in the sun.
- ? When not using a power outlet, make sure to close the cover. If foreign matter or a liquid enters the power outlet, it may cause a malfunction or short circuit.
- ? Do not use a multi-point outlet adapter as doing so may overload the power outlet.
- ? Immediately stop using if there is an unusual amount of heat being felt from the power outlet.
- ? **When the ambient temperature is high**  
If the temperature inside the vehicle is high, such as after the vehicle has been parked under the sun, move the vehicle to a shaded area, use the air conditioning system to sufficiently cool the interior, and then press the "AC120V" switch again.

**Sun visors**

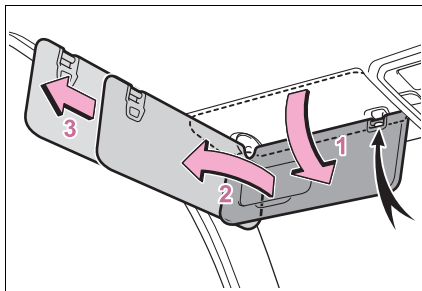

- 1 To set the visor in the forward position, flip it down.
- 2 To set the visor in the side


position, flip down, unhook, and swing it to the side.

- 3 To use the side extender, place the visor in the side position, then slide it backward.

**Vanity mirrors (if equipped)**

Open the cover.

The vanity light turns on.

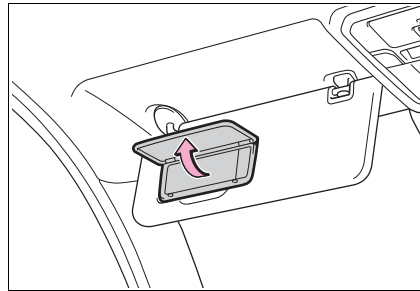

? **To prevent battery discharge**

If the vanity lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes.


 NOTICE

? **To prevent the battery from being discharged**

Do not leave the vanity lights on for extended periods while the engine is off.

**Grocery bag hooks (if equipped)**

Grocery bag hook is designed to hang things like grocery bag.

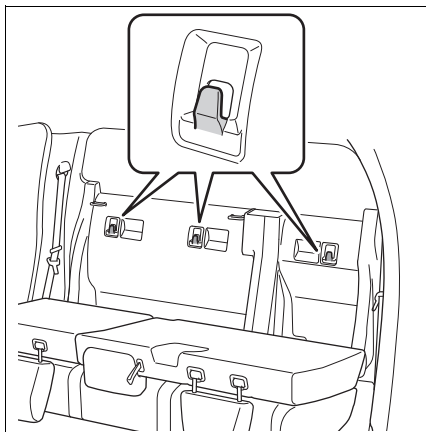

The shape and number of shopping bag hooks may vary depending on the grade.

### Auxiliary switches (if equipped)

When the Toyota Genuine Accessories Pre-wired Auxiliary Switches\* is connected to the vehicle, a 12V DC powered circuit is available for switch operation.

There are three auxiliary switches that provide power to connectors in multiple locations where electrical accessories can be used.

Remove the waterproof cap (if present) from vehicle wire harness connector to connect accessory wiring harness pigtail.

The auxiliary switch will only operate in the engine switch to ON.


When an aux switch is pressed,

the indicator on the switch will illuminate.

If the vehicle's power usage increases and the battery voltage becomes low, the auxiliary switch system may automatically turn off.

The system will turn on again when the vehicle power usage is reduced and the battery voltage increases.

\*: Accessory wire harness pigtails can be purchased at your Toyota dealer.

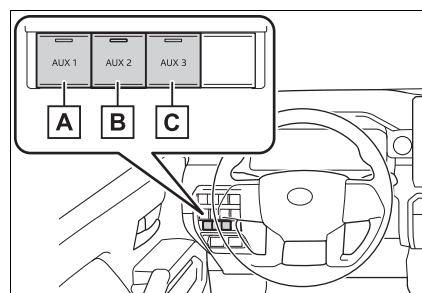


**A** AUX1

**B** AUX2

**C** AUX3



Location of auxiliary switch wire harness connectors:

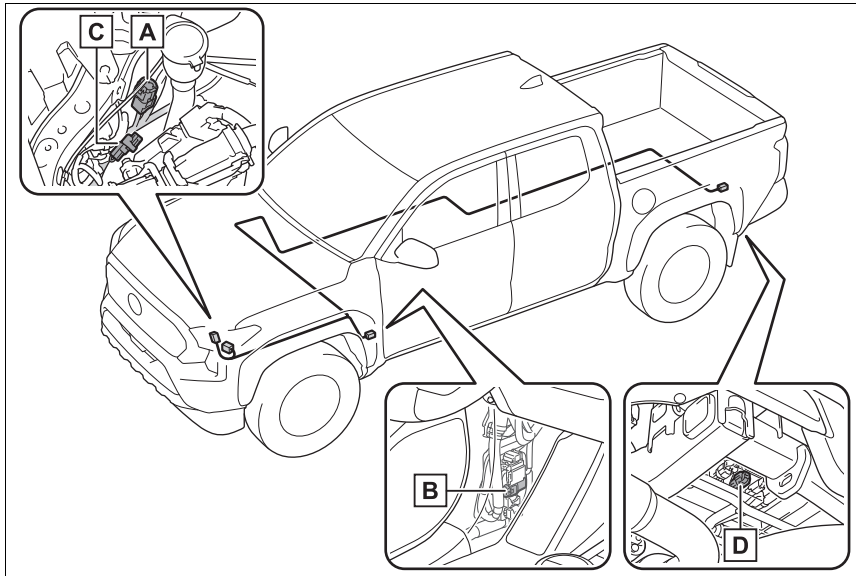

- A** Engine compartment
- B** Cabin (behind trim panel)
- C** Engine compartment
- D** Rear frame

Powered Circuits:

Circuit	Fuse Name	Fuse Size	Fuse Location	Pigtail Wire Color	Connector Location
AUX1	AUX NO.1	15A	Engine compartment	Black	Engine compartment <b>A</b> , cabin <b>B</b>
AUX2	AUX NO.2	10A		Green	
AUX3	AUX NO.3_LO	5A		White	
Common Ground	—	—	—	Black/White	

Non-Powered Circuits:

Circuit	Fuse Name	Fuse Size	Fuse Location	Pigtail Wire Color	Connector Location
Rear AUX1	AUX_R-R_NO.1	20A	Under right-rear seat	Black	Engine compartment <b>C</b> ,
Rear AUX2	AUX_R-R_NO.2	15A		Green	rear frame <b>D</b>
Common Ground	—	—	—	Black/White	Rear frame <b>D</b>

**⚠ WARNING**

? **For safe use**  
 Do not cut or modify the wiring harness of the vehicle body when connecting accessory electronics. Failure to do so may lead to an accident resulting in property damage, serious injury, or death.

**⚠ NOTICE**

? **To prevent damage to the Auxiliary switches**  
 ? For information on repairs, contact your Toyota dealer.  
 ? Accessory wiring harness pig-tails can be purchased from your Toyota dealer.

### Removable speaker\*

\*: If equipped

Music can be played by removing the speaker (JBL Flex) installed in the instrument panel and taking it to any desired location, and connecting it with your Bluetooth® compatible device via Bluetooth®.

When attached to the dock of the instrument panel, it functions as a normal car speaker.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.


#### WARNING

##### ? When driving the vehicle

Install or properly secure the speaker before driving. Failure to do so could lead to an accident, serious injury or death.

## Components


### ► Front

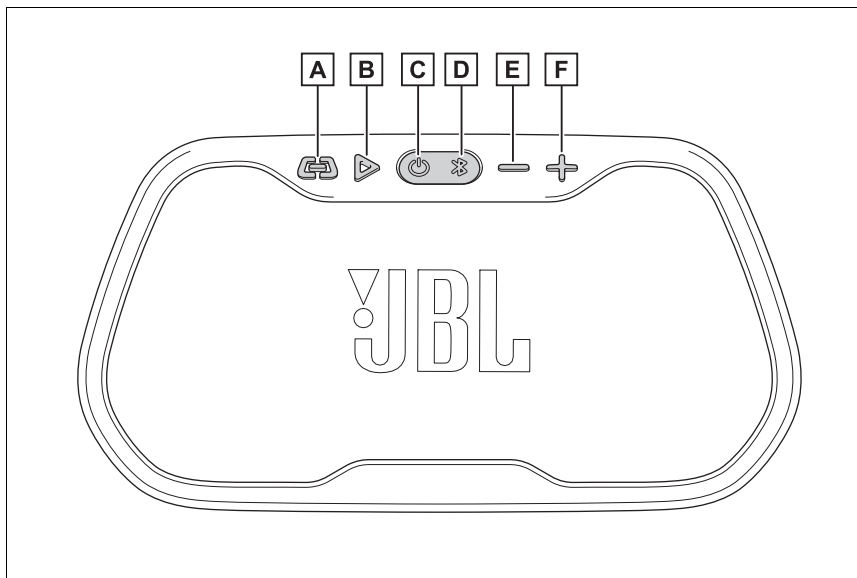

**A** Link button

**B** Play/pause button

- C** Power button
- D** Bluetooth® button
- E** Volume down button
- F** Volume up button
- ▶ Side

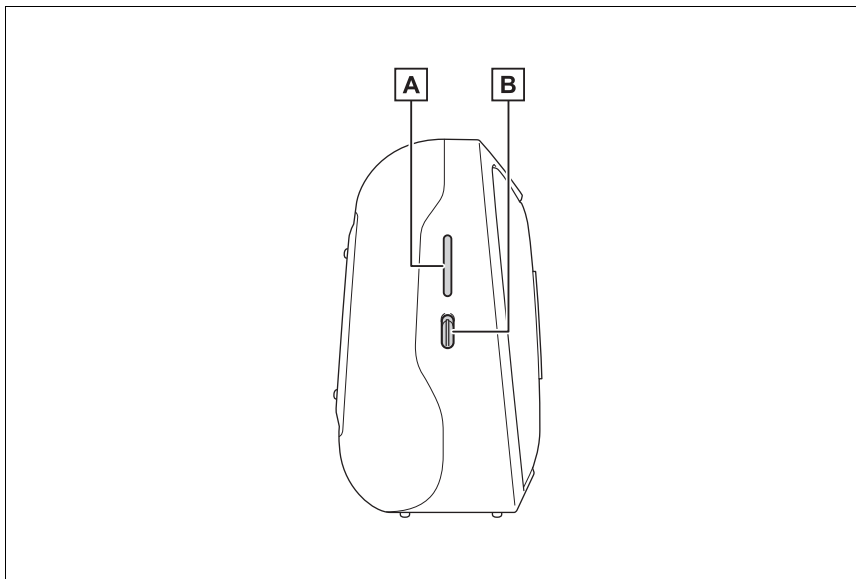

- A** Battery status indicator
- B** Charging port (USB Type-C)

**NOTICE**

**? Waterproof Performance**  
 The speaker (JBL Flex) has specifications equivalent to the waterproof standard IPX7. Even if it is temporarily (30 minutes) submerged in water up to depths of 3 ft. (1 m), it is a waterproof type that does not allow water to enter inside.


**? Do not use the product underwater as it is not completely waterproof.**

**? If water gets into the product, stop using it and consult your Toyota dealer. Please note that the warranty does not apply to malfunctions caused by water immersion caused by mishandling by the customer.**

### Attaching and removing the speaker (JBL Flex)


► Removal

Press the eject button and remove the speaker (JBL Flex) from the dock.

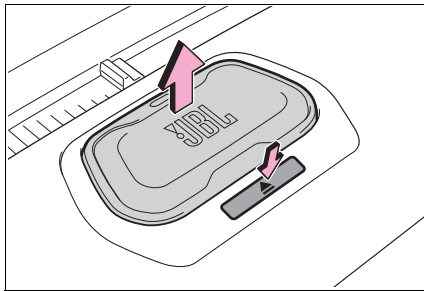

► Install


Push in until a click is heard.

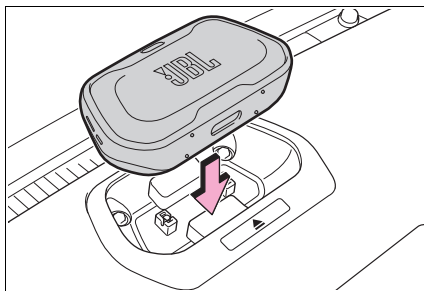

? Installation

If the orange mark can be seen, the speaker (JBL Flex) is not fully seated.

Push it in firmly until it clicks.

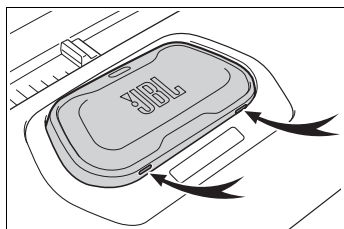


### Charging method

- Charge by connecting to the dock on the instrument panel.

Maximum charging time: about 3.5 hours

- Charging with the USB-C port on the side of the main unit.

When fully charged, the battery status indicator will turn solid white.

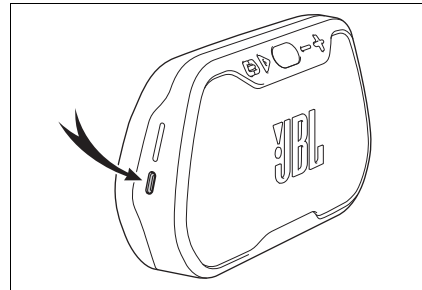


? Remaining battery power

The remaining amount of battery power can be checked with the indicator on the side of the main unit.

The speaker can be used for up to 6.5 hours at 50% volume from a fully charged state.

When the battery power drops to approximately 15% during playback, the bottom LED will flash red.

The battery life will change over time depending on the usage, battery charge cycles, and usage environment.

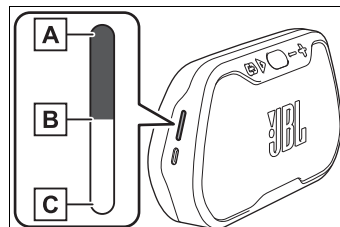


- A 100%
- B 50%
- C 20%

**How to use**

? **Connect**

- 1 Turn on the Bluetooth® function of the Bluetooth® device to be registered.
- 2 Remove the speaker (JBL Flex) from the instrument panel dock.
- 3 Press the power button to turn on the power.

A startup sound is played and the power button lights up.

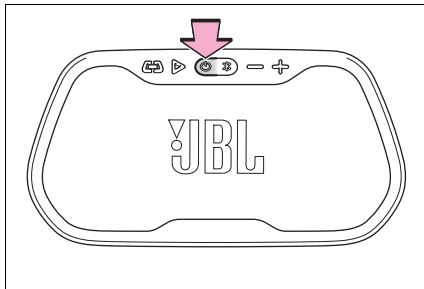

- ▶ For the last connected Bluetooth® device


Bluetooth® button flashes and automatically connects.

- ▶ For Bluetooth® devices connected before last or connecting for the first time

- 4 Press the Bluetooth® button to enter pairing mode.


The Bluetooth® button on the front

of the speaker (JBL Flex) flashes and a search tone sounds.

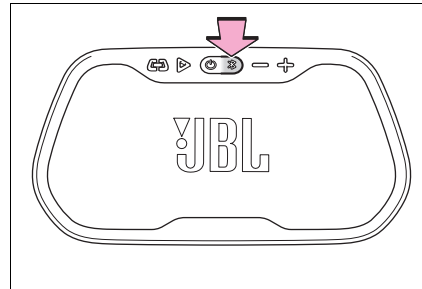

- 5 Search for Bluetooth® devices on the device to be connected, and select "TOYOTA JBL Flex".
- 6 When connected, the Bluetooth® button lights up and a connection tone is heard.

? **How to play**

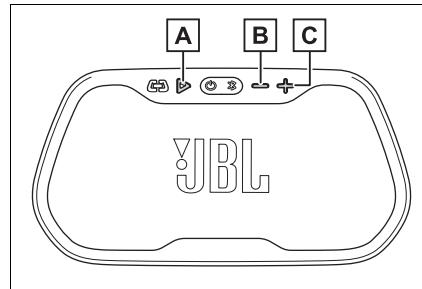

- A Once: play/pause  
Twice: fast forward

- B Volume down

- C Volume up

? **Disconnect**

Turn off the Bluetooth® function of the connected mobile

phone/portable device.

Alternatively, cancel the connection registration on the connected mobile phone/portable device.

#### ? **Turning off the power**

Press power button.

A power down sound is played and the power button turns off.

#### ? **Pairing**

The speaker (JBL Flex) will stop pairing if no device is connected in pairing mode for 3 minutes.

Press the Bluetooth® button to pair again.

#### ? **Automatic power off**

It will automatically power off after 30 minutes of inactivity.

### Using multiple speakers (JBL Flex)

JBL Link function allows connection with multiple speakers (JBL Flex)

#### ? **Connect**

- 1 Connect a Bluetooth® device to the main speaker (JBL Flex).
- 2 Turn on the power of all speakers (JBL Flex) to be used.
- 3 Press the link button of the main speaker (JBL Flex).

A search sound is played.

- 4 Press the link button on the speaker to be connected (JBL Flex).

The Bluetooth® button on the speaker (JBL Flex) will blink, and when the connection is complete, only the main speaker will turn on, and the connected speaker will turn off.

#### ? **Disconnect**

Pressing the power button, Bluetooth® button, link button or attaching the speaker (JBL Flex) to the dock will unpair it.

#### ? **Maximum number of simultaneous connections**

You can connect up to 100 speakers (JBL Flex).

#### ? **Products able to be connected**

Only JBL Flex can be connected. Other JBL products cannot be connected.

#### ? **Volume during JBL Link**

When pairing has succeeded, all paired speakers will have the same volume. If the volume is changed from connected Bluetooth® device or the main JBL Flex speaker, the volume of all speaker will remain in sync. If the volume is changed on a connected speaker, the speaker will lose sync with the main speaker (JBL Flex) or connected Bluetooth® device. To re-sync the speakers, the devices must be paired again.

**About the lighting pattern of the light**

Button	Pattern	Status
Blue-tooth® button	White (Flashes)	Blue-tooth® pairing mode
	White (Illuminates)	Any Blue-tooth® device connected
	Off	Power off
Not paired, disconnection, link loss		
Power button	White (Illuminates)	Power on
	Off	Power off

**Troubleshooting**

Cause	Solution
The power does not turn on even when the power button is pressed.	Make sure the device is charged.
The power turns on, but there is no sound.	Make sure it is paired.
	Press the volume button (+) on the unit to raise the volume and check.
	Check if playback on the audio device is paused.

Cause	Solution
Sound is distorted.	If the volume is too high, lower the volume on your device.
Pairing cannot be done.	Check if your device is compatible with this unit.
	Check if you are connected to another device. This unit remembers the information of the device with which it has been paired once. If it is desired to play music by reconnecting to the desired device, turn off all nearby paired Bluetooth® devices, and then turn the unit off and on again.

**Initializing the speaker (JBL Flex)**

Follow the steps below to restore the factory settings.

- 1 Turn on the power of the speaker (JBL Flex).
- 2 Press and hold the volume up button and play button at the same time for 3 seconds or more.
- 3 A power off sound will be heard, and when the power



turns off, initialization is complete.

### Specifications

#### Non-Hazardous Automotive Speaker

Bluetooth® version	5.2
Transmission distance	1181.1 in. (30 m)
Bluetooth® profile	A2DP V1.3.2, AVRCP V1.6.2
Rated output power	Docked mode: 24Wpk Standalone player mode: 2 × 8Wpk
Transducer	0.07 × 1.4 in. (2 × 36 mm)
Frequency response	Docked mode: 180Hz - 19kHz (+/- 1dB) Standalone player mode: 70Hz - 20kHz (+/- 1dB)
Battery type	Lithium Ceramic Solid-State Battery (SSB)
Charge time	3.5 hours
Music play time	Up to 10 hours (Varies by volume level & audio content)

Dimensions (Width × Height × Depth)	7.3 × 3.7 × 2.0 in. (186 × 96 × 53 mm)
Weight	1.3 lb. (590 g)
Ingress protection rating	IPX7

**Garage door opener\***

\*: If equipped

The garage door opener can be programmed using the HomeLink® to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

? **HomeLink® programming procedure**

The programming procedures can also be found at the following URL. Website: [www.homelink.com/toyota](http://www.homelink.com/toyota)




For support, contact customer support at the following.  
Help Line: 1-800-355-3515

**System components**

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

- ▶ Vehicles with auto anti-glare inside rear view mirror

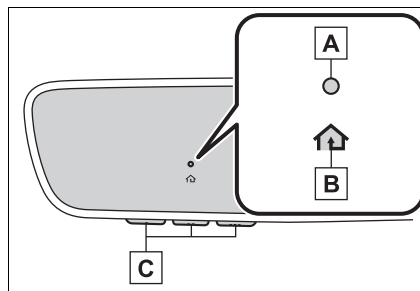

**A** HomeLink® indicator light

**B** HomeLink® icon

Illuminates while HomeLink® is operating.

**C** Buttons

- ▶ Vehicles with Digital Rear-view Mirror



**A** HomeLink® indicator light

Illuminates above each button selected.

**B** HomeLink® icon

**C** Garage door operation indicators

**D** HomeLink® logo

Appears while HomeLink® is operating. When the menu button (→P.162) is pressed, the logo dis-

appears even while the HomeLink® is operating.

**E** Setting icon

Press the menu button to change the setting.

**F** Menu buttons

**G** HomeLink® buttons

? **Codes stored in the HomeLink® memory**

- ? The registered codes are not erased even if the battery cable is disconnected.
- ? If learning failed when registering a different code to a HomeLink® button that already has a code registered to it, the already registered code will not be erased.

? **Certification**

→P.713

**⚠ WARNING**

? **When programming a garage door or other remote control device**

The garage door or other device may operate, so ensure people and objects are out of danger to prevent potential harm.

? **Conforming to federal safety standards**

Do not use the HomeLink® compatible transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an interfering object. A door or device without these features increases the risk of death or serious injury.

? **When operating or programming HomeLink®**

Never allow a child to operate or play with the HomeLink® buttons.

**Programming the HomeLink®**

? **Before programming HomeLink®**


- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.

? **Programming HomeLink®**

Steps 2 through 4 must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be successfully com-

pleted.


- 1 Vehicles with Digital Rear-view Mirror: Press the HomeLink® button or menu button  
When the HomeLink® button is pressed: Homelink® Training Tutorial will be displayed to assist you programming the HomeLink®.

When the menu button is pressed: Press the menu button  and select the "SET UP". Homelink® Training Tutorial will be displayed to assist you programming the HomeLink®.


- 2 Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).
- 3 Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

- ▶ Vehicles with auto anti-glare inside rear view mirror

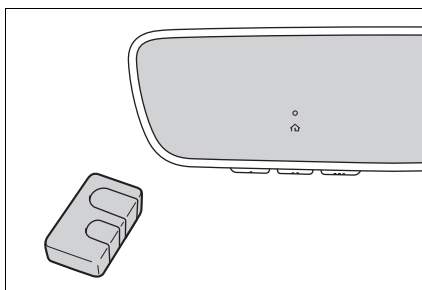


- ▶ Vehicles with Digital Rear-view Mirror

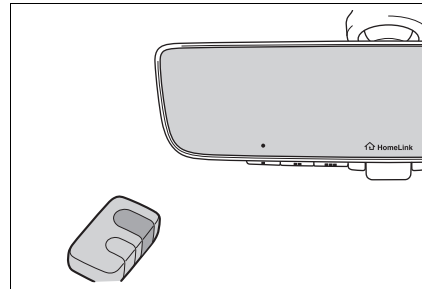


- 4 Program a device.

- ▶ Vehicles with auto anti-glare inside rear view mirror

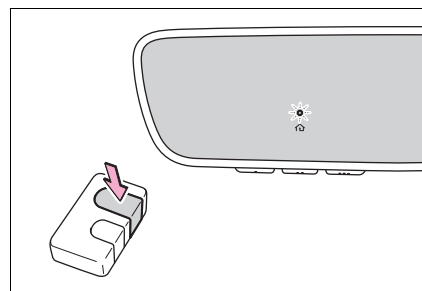

- ▶ Vehicles with Digital Rear-view Mirror

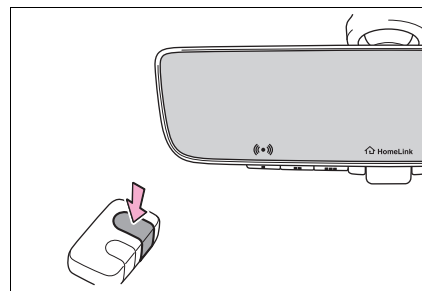

- ▶ Programming a device other than an entry gate (for U.S.A. owners)

Press and hold the remote control transmitter button until the HomeLink® indicator light changes from

slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

- ▶ Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).

- 5 Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
  - HomeLink® indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink® button is pressed and released.
  - HomeLink® indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink® button for 2 seconds then release it.
  - If the garage door or other device does not operate, proceed to “Programming a roll-

ing code system”.


- 6 Repeat the steps above to program another device for any of the remaining HomeLink® buttons.

#### ? Programming a rolling code system

Two or more people may be necessary to complete rolling code programming.


- 1 Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

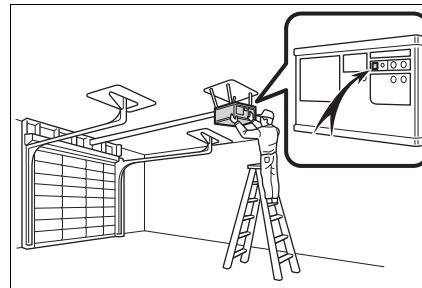


- 2 Press and release the “Learn” or “Smart” button.

Perform 3 within 30 seconds after performing 2.

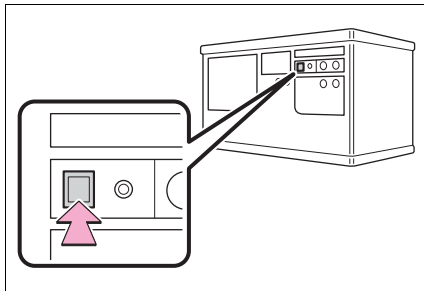


- 3 Press and hold the desired HomeLink® button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming. If the garage door opener motor operates when the HomeLink® button is pressed, the garage door opener motor recognizes the HomeLink® signal.

- ▶ Vehicles with auto anti-glare inside rear view mirror

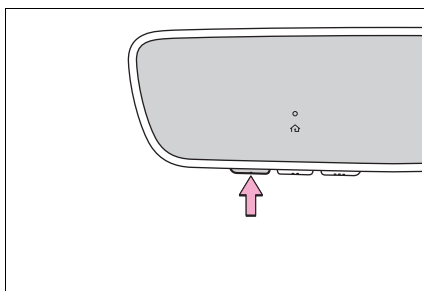

- ▶ Vehicles with Digital Rear-view Mirror

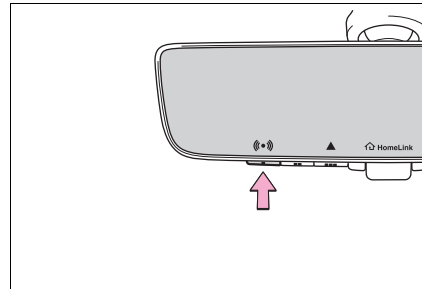

- ? **Enabling 2-way communication with a garage door (only available for compatible devices)**

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.homelink.com](http://www.homelink.com).)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink®, both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, per-

form 2 and 3 within the first 10 presses of the HomeLink® button after programming has been completed.

- 2 Press a programmed HomeLink® button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink® button, after the garage door operation has stopped, press the “Learn” or “Smart” button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

#### ? **Reprogramming a single HomeLink® button**

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 Press and hold the desired HomeLink® button.
- 2 When the HomeLink® indicator starts flashing orange, release the HomeLink® button and perform “Programming HomeLink®” 1 (it takes 20 seconds for the Home-

Link® indicator to start flashing).

#### ? **Before programming**


- ? Install a new battery in the transmitter.
- ? The battery side of the transmitter must be pointed away from the HomeLink® buttons.

### Operating HomeLink®


Press the appropriate HomeLink® button. The HomeLink® indicator light should turn on.

The status of the opening and closing of a garage door is shown by the garage door opener indicators.

- ▶ Vehicles with auto anti-glare inside rear view mirror

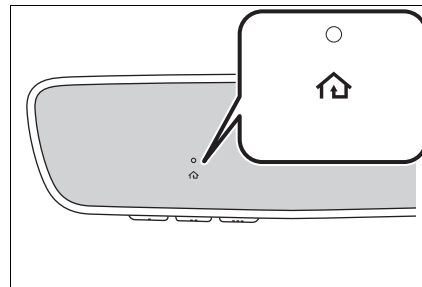

► Vehicles with Digital Rear-view Mirror

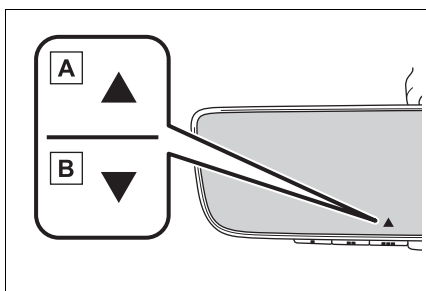

**A** Opening









**B** Closing

This function is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.homelink.com](http://www.homelink.com).)

Color	Status
Orange (flashing)	Currently opening/closing
Green	Opening/closing has completed
Red (flashing)	Feedback signals cannot be received

The indicators can operate within approximately 820 ft. (250 m) of the garage door. However, if there are obstructions between the garage door and the vehicle, such as houses and trees, feedback signals from the garage door may not be received.

To recall the previous door operation status, press and release


either HomeLink® buttons  and  or  and  (vehicles with auto anti-glare inside rear view mirror),  and  or  and  (vehicles with Digital Rear-view Mirror), simultaneously. The last recorded status will be displayed for 3 seconds.

**Erasing the entire HomeLink® memory (all three codes)**

Press and hold the 2 outside buttons for 10 seconds until the HomeLink® indicator light changes from continuously lit (orange) to rapidly flashing (green).


If you sell your vehicle, be sure to erase the programs stored in the HomeLink® memory.

► Vehicles with auto anti-glare inside rear view mirror

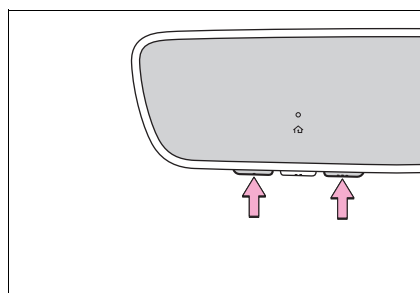



- ▶ Vehicles with Digital Rear-view Mirror

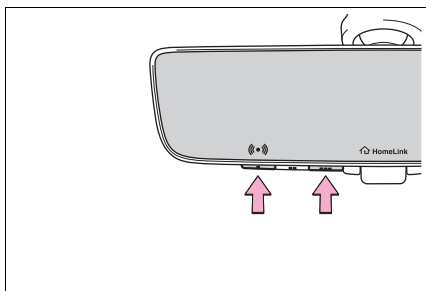

**Maintenance and care****6****6-1. Maintenance and care**

Cleaning and protecting the vehicle exterior..... 510

Cleaning and protecting the vehicle interior..... 513

**6-2. Maintenance**

Maintenance requirements ..... 516

General maintenance.. 518

Emission inspection and maintenance (I/M) programs ..... 520

**6-3. Do-it-yourself maintenance**

Do-it-yourself service precautions..... 522

Hood ..... 524

Positioning a high lift jack ..... 525

Engine compartment... 526

Tires ..... 534

Tire inflation pressure.. 548

Wheels ..... 550

Air conditioning filter.... 551

Electronic key battery.. 553

Checking and replacing fuses..... 555

Light bulbs..... 558

## Cleaning and protecting the vehicle exterior

**Perform cleaning in a manner appropriate to each component and its material.**

### Cleaning instructions

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

#### ? **Automatic car washes**

- ? Fold the mirrors before washing the vehicle.

Start washing from the front of the vehicle. Extend the mirrors before driving.

- ? Brushes used in automatic car washes may scratch the vehicle surface, parts (wheel, etc.) and harm your vehicle's paint.

#### ? **High pressure car washes**

As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

#### ? **When using a car wash**

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- ? Place the key in a position 6 ft. (2 m) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- ? Set the electronic key to battery-saving mode to disable the Smart key system. (→P.148)

#### ? **Wheels and wheel ornaments**

- ? Remove any dirt immediately by using a neutral detergent.
- ? Wash detergent off with water immediately after use.
- ? To protect the paint from damage, make sure to observe the following precautions.
  - Do not use acidic, alkaline or abrasive detergent
  - Do not use hard brushes
  - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

#### ? **Brake pads and calipers**

Rust may form if the vehicle is parked with wet brake pads or disc rotors, causing them to stick. Before parking the vehicle after it is washed, drive slowly and apply the brakes several times to dry the parts.

#### ? **Bumpers and wheel arch moldings**

Do not scrub with abrasive cleaners.

**? Plated portions**

If dirt cannot be removed, clean the parts as follows:

- ? Use a soft cloth dampened with an approximately 5% solution of neutral detergent and water to clean the dirt off.
- ? Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- ? To remove oily deposits, use alcohol wet wipes or a similar product.

**! WARNING****? When washing the vehicle**

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components, etc. to catch fire.

**? Precautions regarding the exhaust pipe**

Exhaust gases cause the exhaust pipe to become quite hot. When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching hot exhaust pipe can cause burns.

**? Precaution regarding the front and rear bumpers**

If the paint of the front or rear bumper is chipped or scratched, the following systems may not function correctly. If this occurs, consult your Toyota dealer.

- ? BSM (if equipped)
- ? RCTA (if equipped)
- ? PKSB (if equipped)
- ? Intuitive parking assist (if equipped)
- ? Toyota Safety Sense 3.0

**! NOTICE****? To prevent paint deterioration and corrosion on the body and components (aluminum wheels, etc.)**

? Wash the vehicle immediately in the following cases:

- After driving near the sea coast
- After driving on salted roads
- If coal tar or tree sap is present on the paint surface
- If dead insects, insect droppings or bird droppings are present on the paint surface
- After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
- If the vehicle becomes heavily soiled with dust or mud
- If liquids such as benzene and gasoline are spilled on the paint surface

? If the paint is chipped or scratched, have it repaired immediately.

? To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

**? Cleaning the exterior lights**

? Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.

? Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

 NOTICE

? **When using a high pressure car wash**

? When washing the vehicle, do not spray the camera or its surrounding area directly with a high pressure washer. Shock applied from high pressure water may cause the device to not operate normally.

? Do not spray water directly on the radar which is equipped behind the emblem. Otherwise it may cause the device to be damaged.

? Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.

- Traction related parts
- Steering parts
- Suspension parts
- Brake parts

? Keep the cleaning nozzle at least 11.9 in. (30 cm) away from the vehicle body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged.

Also, do not continuously hold the nozzle in the same place.


? Do not spray the lower part of the windshield continuously.

If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.

? Do not wash the underside of the vehicle using a high pressure car washer.

? **When raising the windshield wiper arms**

Make sure to hold the hook parts of the wiper arms to raise them. Do not hold only the wiper blades when raising them, or it may cause deformation of the wiper blades.

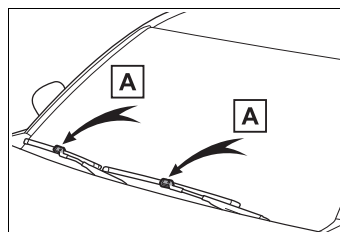

**A** Hook parts

? **Cleaning the high mounted stoplight and cargo lamps**

When using high-pressured car washers, the tip of the nozzle should be at least 20 in. (50 cm) from the car body. Water can seep into the lamp housing or the vehicle cabin if the nozzle is closer to the car body.

## Cleaning and protecting the vehicle interior

**Perform cleaning in a manner appropriate to each component and its material.**

### Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.  
Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

#### ? Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

#### ? Handling the seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

### WARNING

#### ? Water in the vehicle

? Do not get any of the SRS components or wiring in the vehicle interior wet. (→P.37)

An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

? Vehicles with wireless charger: Do not let the wireless charger (→P.475) get wet.

Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

#### ? Cleaning the interior (especially instrument panel)

Do not use a polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

### NOTICE

#### ? Cleaning detergents

? Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:

- Areas other than the seats and steering wheel: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
- Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Steering wheel: Organic substances, such as thinner, and cleaner that contains alcohol

**NOTICE**

? Do not use a polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

? **Preventing damage to leather surfaces**

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

? Remove any dust or dirt from leather surfaces immediately.

? Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.

? Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

? **Water on the floor**

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

? **When cleaning the inside of the windshield**

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P.244)

? **Cleaning the inside of the back window**

? Do not use a glass cleaner to clean the back window, as this may cause damage to the back window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.

? Be careful not to scratch or damage the heater wires or antenna.

### Cleaning the areas with satin-finish metal accents

- Remove dirt using a water-dampened soft cloth or synthetic chamois.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.

? **Cleaning the areas with satin-finish metal accents**

The metal areas use a layer of real metal for the surface. It is necessary to clean them regularly. If dirty areas are left uncleaned for long periods of time, they may be difficult to clean.

### Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool

detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

---

? **Caring for leather areas**

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

### **Cleaning the synthetic leather areas**

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.



## Maintenance requirements

**To ensure safe and economical driving, day-to-day care and regular maintenance are essential. It is the owner's responsibility to perform regular checks. Toyota recommends the maintenance below.**

### ? Repair and replacement

It is recommended that genuine Toyota parts be used for repairs to ensure performance of each system. If non-Toyota parts are used in replacement or if a repair shop other than a Toyota dealer performs repairs, confirm the warranty coverage.

### ? Allow inspection and repairs to be performed by a Toyota dealer

? Toyota technicians are well-trained specialists and are kept up to date with the latest service information. They are well informed about the operation of all systems on your vehicle.

? Keep a copy of the repair order. It proves that the maintenance that has been performed is under warranty coverage. If any problem should arise while your vehicle is under warranty, your Toyota dealer will promptly take care of it.

### WARNING

#### ? If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

### ? Handling of the battery

? Engine exhaust, some of its constituents, and a wide variety of automobile components contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm. Work in a well ventilated area.

? Oils, fuels and fluids contained in vehicles as well as waste produced by component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Avoid exposure and wash any affected area immediately.

? Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P.531)

## General maintenance

General maintenance should be performed on a daily basis. This can be done by yourself or by a Toyota dealer.

## Scheduled maintenance



Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For details about maintenance items and schedules, refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".

? **Resetting the message indicating maintenance is required**

After the required maintenance is performed according to the maintenance schedule, please reset the message.

To reset the message, follow the procedure described below:

- ▶ Vehicles with 7-inch display
  - 1 Press  $\wedge$  or  $\vee$  of the meter control switch to select .
  - 2 Press  $\leftarrow$  or  $\rightarrow$  to select "Vehicle Settings" and then press and hold OK.
  - 3 Press  $\wedge$  /  $\vee$  to select "Scheduled Maintenance" and then press OK.
  - 4 Press  $\wedge$  /  $\vee$  to select "Yes" and then press OK.
- ▶ Vehicles with 12.3-inch display
  - 1 Press and hold OK to display the cursor on the content display area (center) of the multi-information display. (→P.108)
  - 2 Press  $\wedge$  or  $\vee$  of the meter control switches to select " Settings" and then press OK.
  - 3 Press  $\wedge$  or  $\vee$  to select "Vehicle Settings" and then press and hold OK.
  - 4 Press  $\wedge$  or  $\vee$  to select "Scheduled Maintenance" and then press OK.

- 5 Press  $\wedge$  or  $\vee$  to select "Yes" and then press OK.

### Do-it-yourself maintenance

You can perform some maintenance procedures by yourself. Please be aware that do-it-yourself maintenance may affect warranty coverage.

The use of Toyota repair manuals is recommended.

For details about warranty coverage, refer to the separate "Owner's Warranty Information Booklet" or "Owner's Manual Supplement".

### General maintenance

Listed below are the general maintenance items that should be performed at the intervals specified in the “Owner’s Warranty Information Booklet” or “Owner’s Manual Supplement/Scheduled Maintenance Guide”. It is recommended that any problem you notice should be brought to the attention of your Toyota dealer or qualified service shop for advice.

#### WARNING

##### ? If the engine is operating

Turn the engine off and ensure that there is adequate ventilation before performing maintenance checks.

### Engine compartment

Items	Check points
Battery	Check the connections. (→P.531)
Brake fluid	Is the brake fluid at the correct level? (→P.531)
Engine coolant	Is the engine coolant at the correct level? (→P.529)
Engine oil	Is the engine oil at the correct level? (→P.527)

Items	Check points
Exhaust system	There should not be any fumes or strange sounds.
Radiator/condenser/intercooler	The radiator, condenser and intercooler should be free from foreign objects. (→P.530)
Washer fluid	Is there sufficient washer fluid? (→P.533)

### Vehicle interior

Items	Check points
Accelerator pedal	<ul style="list-style-type: none"> <li>The accelerator pedal should move smoothly (without uneven pedal effort or catching).</li> </ul>
Automatic transmission “Park” mechanism	<ul style="list-style-type: none"> <li>When parked on a slope and the shift lever is in P, is the vehicle securely stopped?</li> </ul>
Brake pedal	<ul style="list-style-type: none"> <li>Does the brake pedal move smoothly?</li> <li>Does the brake pedal have appropriate clearance from the floor?</li> <li>Does the brake pedal have the correct amount of free play?</li> </ul>

Items	Check points
Brakes	<ul style="list-style-type: none"> <li>• The vehicle should not pull to one side when the brakes are applied.</li> <li>• The brakes should work effectively.</li> <li>• The brake pedal should not feel spongy.</li> <li>• The brake pedal should not get too close to the floor when the brakes are applied.</li> </ul>
Clutch pedal	<ul style="list-style-type: none"> <li>• Does the clutch pedal move smoothly?</li> <li>• Does the clutch pedal have correct amount of free play?</li> </ul>
Head restraints	<ul style="list-style-type: none"> <li>• Do the head restraints move smoothly and lock securely?</li> </ul>
Indicators/buzzers	<ul style="list-style-type: none"> <li>• Do the indicators and buzzers function properly?</li> </ul>
Parking brake	<ul style="list-style-type: none"> <li>• Does the parking brake operate normally?</li> <li>• When parked on a slope and the parking brake is on, is the vehicle securely stopped?</li> </ul>

Items	Check points
Seat belts	<ul style="list-style-type: none"> <li>• Do the seat belts operate smoothly?</li> <li>• The seat belts should not be damaged.</li> </ul>
Seats	<ul style="list-style-type: none"> <li>• Do the seat controls operate properly?</li> </ul>
Steering wheel	<ul style="list-style-type: none"> <li>• Does the steering wheel rotate smoothly?</li> <li>• Does the steering wheel have the correct amount of free play?</li> <li>• There should not be any strange sounds coming from the steering wheel.</li> </ul>

**Vehicle exterior**

Items	Check points
Doors	<ul style="list-style-type: none"> <li>• Do the doors operate smoothly?</li> </ul>
Engine hood	<ul style="list-style-type: none"> <li>• Does the hood lock system work properly?</li> </ul>
Fluid leaks	<ul style="list-style-type: none"> <li>• There should not be any signs of fluid leakage after the vehicle has been parked.</li> </ul>
Lights	<ul style="list-style-type: none"> <li>• Do all the lights come on?</li> </ul>

Items	Check points
Tires	<ul style="list-style-type: none"> <li>• Is the tire inflation pressure correct?</li> <li>• The tires should not be damaged or excessively worn.</li> <li>• Have the tires been rotated according to the maintenance schedule?</li> <li>• The wheel nuts should not be loose.</li> </ul>
Windshield wipers	<ul style="list-style-type: none"> <li>• The wiper blades should not show any signs of cracking, splitting, wear, contamination or deformation.</li> <li>• The wiper blades should clear the windshield without streaking or skipping.</li> </ul>

### Emission inspection and maintenance (I/M) programs

**Some states have vehicle emission inspection programs which include OBD (On Board Diagnostics) checks. The OBD system monitors the operation of the emission control system.**

### If the malfunction indicator lamp comes on

The OBD system determines that a problem exists somewhere in the emission control system. Your vehicle may not pass the I/M test and may need to be repaired. Contact your Toyota dealer to service the vehicle.

### Your vehicle may not pass the I/M test in the following situations:

- When the battery is disconnected or discharged Readiness codes that are set during ordinary driving are erased. Also, depending on your driving habits, the readiness codes may not be completely set.
- When the fuel tank cap is loose

The malfunction indicator lamp comes on indicating a temporary malfunction and your vehicle may not pass the I/M test.

**When the malfunction indicator lamp still remains on after several driving trips**

The error code in the OBD system will not be cleared unless the vehicle is driven 40 or more times.

**If your vehicle does not pass the I/M test**

Contact your Toyota dealer to prepare the vehicle for re-testing.

**Do-it-yourself service precautions**

**If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.**

**Maintenance**

Items	Parts and tools
Battery condition (→P.531)	<ul style="list-style-type: none"> <li>• Grease</li> <li>• Warm water</li> <li>• Baking soda</li> <li>• Distilled water</li> <li>• Conventional wrench (for terminal clamp bolts)</li> </ul>
Brake fluid level (→P.531)	<ul style="list-style-type: none"> <li>• FMVSS No.116 DOT 3 or SAE J1703 brake fluid</li> <li>• FMVSS No.116 DOT 4 or SAE J1704 brake fluid</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding brake fluid)</li> </ul>

Items	Parts and tools
Engine coolant level (→P.529)	<ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, nonamine, non-nitrite and non-borate coolant with longlife hybrid organic acid technology</li> <li>For the U.S.A.: “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water.</li> <li>For Canada: “Toyota Super Long Life Coolant” is pre-mixed with 55% coolant and 45% deionized water.</li> <li>• Funnel (used only for adding coolant)</li> </ul>
Engine oil level (→P.527)	<ul style="list-style-type: none"> <li>• “Toyota Genuine Motor Oil” or equivalent</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding engine oil)</li> </ul>
Fuses (→P.555)	<ul style="list-style-type: none"> <li>• Fuse with same amperage rating as original</li> </ul>

Items	Parts and tools
Light bulbs (→P.559)	<ul style="list-style-type: none"> <li>• Bulb with same number and wattage rating as original</li> <li>• Flathead screw-driver</li> <li>• Wrench</li> </ul>
Radiator, condenser and intercooler (→P.530)	<ul style="list-style-type: none"> <li>• Funnel (used only for adding coolant)</li> </ul>
Tire inflation pressure (→P.548)	<ul style="list-style-type: none"> <li>• Tire pressure gauge</li> <li>• Compressed air source</li> </ul>
Washer fluid (→P.533)	<ul style="list-style-type: none"> <li>• Water or washer fluid containing antifreeze (for winter use)</li> <li>• Funnel (used only for adding water or washer fluid)</li> </ul>

? Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.

? Do not smoke, cause sparks or expose an open flame to gasoline or the battery. Gasoline and battery fumes are flammable.

? Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.

? **When working near the electric cooling fan or radiator grille**  
Be sure the engine switch is off. With the engine switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P.530)

? **Safety glasses**  
Wear safety glasses to prevent flying or falling material, fluid spray, etc., from getting in your eyes.

**⚠ WARNING**

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

? **When working on the engine compartment**

? Keep hands, clothing and tools away from the moving fan and engine drive belt.

? Be careful not to touch the engine, inverter, radiator, exhaust manifold, etc., right after driving as they may be hot. Oil and other fluids may also be hot.

**⚠ NOTICE**

? **If you remove the air cleaner filter**  
Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.




**Hood**

**Release the lock from the inside of the vehicle to open the hood.**


**Opening the hood**

- 1 Pull the hood lock release lever.


The hood will pop up slightly.

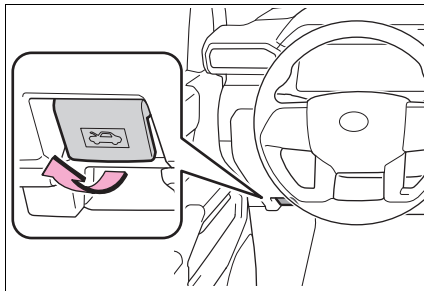

- 2 Push the auxiliary catch lever to the left and lift the hood.

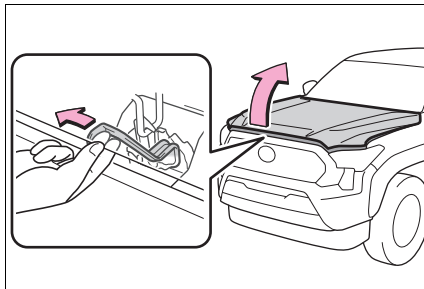

- 3 Hold the hood open by inserting the supporting rod into the slot **A** or **B**.

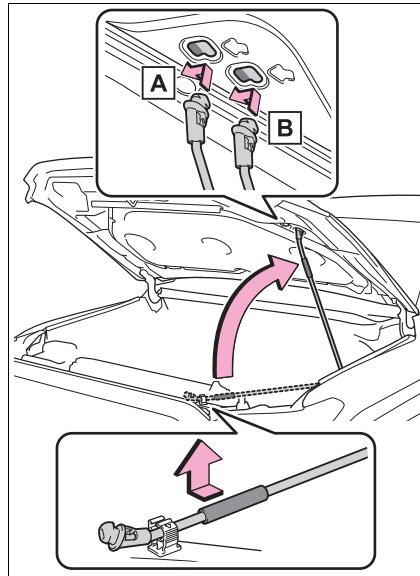

**A** Standard Opening

**B** Wider Opening

**⚠ WARNING**

**? Pre-driving check**

Check that the hood is fully closed and locked. If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

**? When the hood is open**

Even if the engine switch is turned off, the cooling fan may continue to operate for a short time. When the cooling fan is rotating, do not touch or approach the inside of the engine compartment.


**⚠ WARNING**  
**? After installing the support rod into the slot**  
Make sure the rod supports the hood securely from falling down on to your head or body.

**⚠ NOTICE**  
**? When closing the hood**  
Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod up could cause the hood to bend.

**Positioning a high lift jack**

**When using a high lift jack, follow the instructions in the manual provided with the jack and perform the operation safely. When raising your vehicle with a high lift jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.**

**Location of the high lift point**

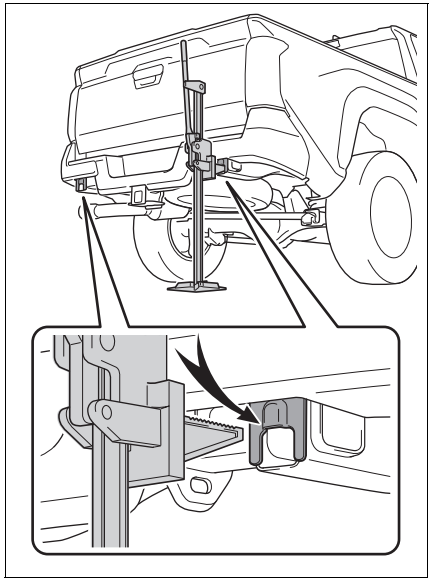


6

Maintenance and care

## Engine compartment

### Components

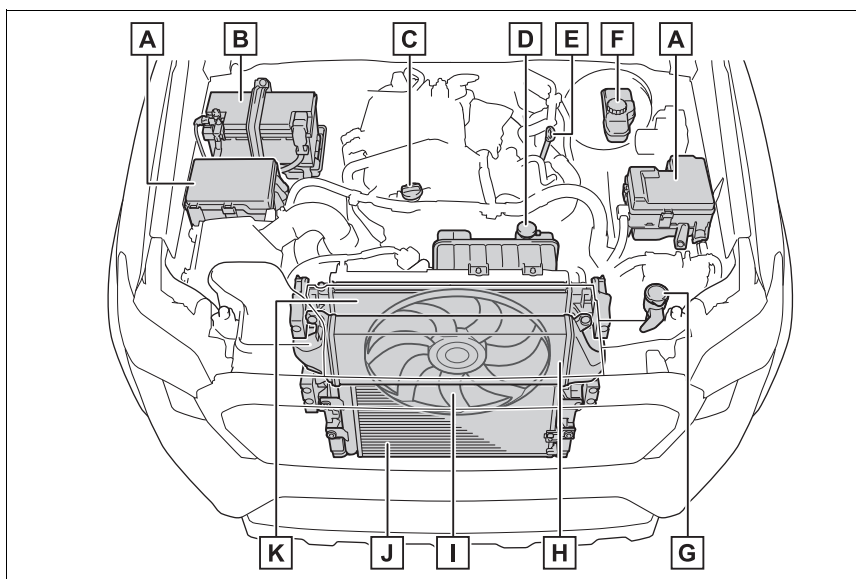


- A** Fuse boxes (→P.555)
- B** Battery (→P.531)
- C** Engine oil filler cap (→P.527)
- D** Engine coolant reservoir (→P.529)
- E** Engine oil level dipstick (→P.527)
- F** Brake fluid reservoir (→P.531)
- G** Washer fluid tank (→P.533)
- H** Intercooler (→P.530)
- I** Cooling fan (→P.529)
- J** Condenser (→P.529)
- K** Radiator (→P.530)


### Checking the engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.

- 1 Park the vehicle on level ground. After warming up the engine and turning off the engine, wait about 5 minutes for the oil to drain back into the bottom of the engine.
- 2 Holding a rag under the end, pull the dipstick out.

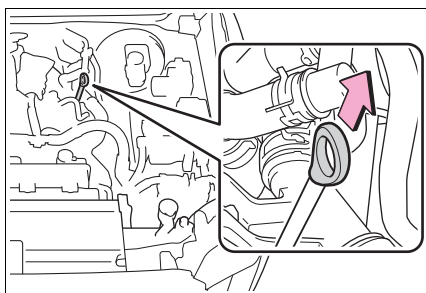

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check whether the oil level is above low level mark.

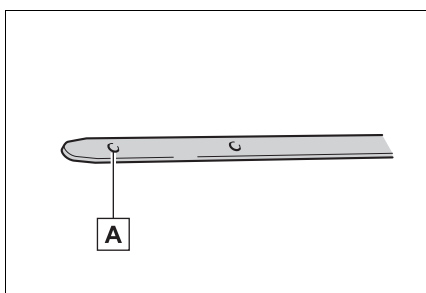

**A** Low level mark

The shape of the dipstick may differ depending on the type of vehicle or engine.

- 6 Wipe the dipstick and reinsert it fully.

#### NOTICE

#### ? To prevent serious engine damage

Check the oil level on a regular basis.

#### ? Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- ? When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- ? If low quality oil or oil of an inappropriate viscosity is used
- ? When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- ? When leaving the engine idling for a long time, or when driving frequently through heavy traffic

#### ? Engine oil level rise

If the vehicle is repeatedly driven without the engine warmed up, moisture caused by dew condensation inside the engine or fuel which did not burn mixes into the engine oil, resulting in a rise in engine oil level. However, this is not a malfunction. For example, the engine become difficult to be warmed up in the following situations.

- ? When driving a short distance
- ? When driving at a low speed

? When the outside temperature is low

When checking the engine oil, make sure that the engine is warmed up. If the engine oil level exceeds the refill upper limit mark, contact your Toyota dealer.

### Adding engine oil

#### ? Checking the oil type and preparing the items needed

Make sure to check the oil type and prepare the items needed before adding oil.

- Engine oil selection  
→P.619
- Oil quantity (Low level mark  
→ Refill upper limit mark)  
1.5 qt. (1.4 L, 1.2 Imp.qt.)


#### ● Items

Clean funnel

#### ? Adding engine oil


If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

- 1 Remove the oil filler cap by turning it counterclockwise.

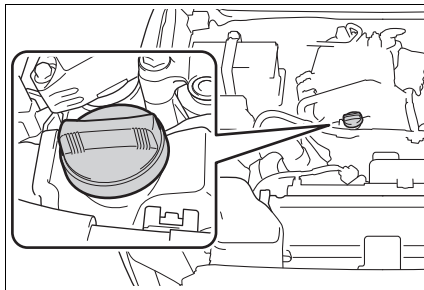

- 2 Add engine oil slowly, checking the dipstick.

Make sure that the oil level does not exceed the refill upper limit mark and is between the low level mark and refill upper limit mark.

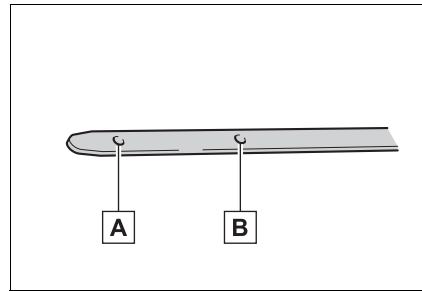

**A** Low level mark

**B** Refill upper limit mark

The shape of the dipstick may differ depending on the type of vehicle or engine.

- 3 Install the oil filler cap by turning it clockwise.

#### ? After changing the engine oil

The engine oil maintenance data should be reset. Perform the following procedures:

► Vehicles with 7-inch display

- 1 Press **▲** or **▼** of the meter control switch to select **⚙**.
- 2 Press **<** or **>** to select "Vehicle Settings" and then press and hold **OK**.
- 3 Press **▲** / **▼** to select "Oil Maintenance" and then press **OK**.

- 4 Press  $\wedge$  /  $\vee$  to select "Yes" and then press OK .
- ▶ Vehicles with 12.3-inch display
  - 1 Press and hold OK to display the cursor on the content display area (center) of the multi-information display. (→P.108)
  - 2 Press  $\wedge$  or  $\vee$  of the meter control switches to select "⚙ Settings" and then press OK .
  - 3 Press  $\wedge$  or  $\vee$  to select "Vehicle Settings" and then press and hold OK .
  - 4 Press  $\wedge$  or  $\vee$  to select "Oil Maintenance" and then press OK .
  - 5 Press  $\wedge$  or  $\vee$  to select "Yes" and then press OK .

A message will be displayed on the multi-information display when the reset procedure has been completed.

**⚠ WARNING**

? **Used engine oil**

? Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.

? Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Toyota dealer, service station or auto parts store for information concerning recycling or disposal.

? Do not leave used engine oil within the reach of children.

**⚠ NOTICE**

? **When replacing the engine oil**

? Be careful not to spill engine oil on the vehicle components.


? Avoid overfilling, or the engine could be damaged.

? Check the oil level on the dipstick every time you refill the vehicle.

? Be sure the engine oil filler cap is properly tightened.

**Checking the coolant**

The coolant level is satisfactory if it is between the "F" and "L" lines on the reservoir when the engine is cold.

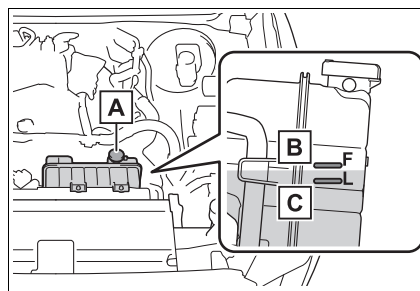

- A** Reservoir cap
- B** "F" line

**C** “L” line

If the level is on or below the “L” line, add coolant up to the “F” line. (→P.609)

**? Coolant selection**

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

U.S.A.: “Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water.

(Minimum temperature: -31°F [-35°C])

Canada: “Toyota Super Long Life Coolant” is a mixture of 55% coolant and 45% deionized water.

(Minimum temperature: -44°F [-42°C])

For more details about coolant, contact your Toyota dealer.

**? If the coolant level drops within a short time of replenishing**

Visually check the radiator, hoses, engine coolant reservoir cap, drain cock and water pump.

If you cannot find a leak, have your Toyota dealer test the cap and check for leaks in the cooling system.

**! WARNING**

**? When the engine is hot**

Do not remove the coolant reservoir cap. The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

**! NOTICE**

**? When adding coolant**

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

**? If you spill coolant**

Be sure to wash it off with water to prevent it from damaging parts or paint.

**Checking the radiator, condenser and inter-cooler**

Check the radiator, condenser and intercooler and clear away any foreign objects.

If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by your Toyota dealer.

**! WARNING**

**? When the engine is hot**

Do not touch the radiator or intercooler as they may be hot and cause serious injuries, such as burns.

**⚠ WARNING**

? **When the electric cooling fan is operating**

Do not touch the engine compartment.

With the engine switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. Be sure the engine switch is off when working near the electric cooling fan or radiator grille.

The electric cooling fan may work for a while even after the engine switch is off.

- Fluid type
  - FMVSS No.116 DOT 3 or SAE J1703 brake fluid
  - FMVSS No.116 DOT 4 or SAE J1704 brake fluid
- Item
  - Clean funnel


? **Brake fluid can absorb moisture from the air**

Excess moisture in the brake fluid can cause a dangerous loss of braking efficiency. Use only newly opened brake fluid.

**Checking and adding the brake fluid**

? **Checking fluid level**

The brake fluid level should be between the “MAX” and “MIN” lines on the tank.

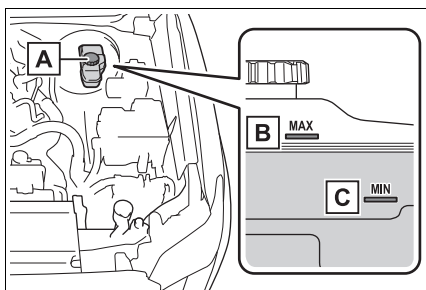

- A** Brake fluid reservoir cap
- B** “MAX” line
- C** “MIN” line

? **Adding fluid**

Make sure to check the fluid type and prepare the necessary item.

**⚠ WARNING**

? **When filling the reservoir**

Take care as brake fluid can harm your hands and eyes and damage painted surfaces.

If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.

If you still experience discomfort, see a doctor.

**⚠ NOTICE**

? **If the fluid level is low or high**

It is normal for the brake fluid level to go down slightly as the brake pads wear out or when the fluid level in the accumulator is high. If the reservoir needs frequent refilling, there may be a serious problem.

**Checking the battery**


Check the battery as follows.

? **Battery exterior**

Make sure that the battery terminals are not corroded and that



there are no loose connections, cracks, or loose clamps.

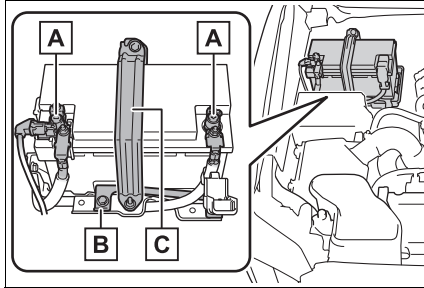

- A** Terminals
- B** Hold-down clamp
- C** Bracket

#### ? Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- ? If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- ? Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.
- ? **After recharging/reconnecting the battery**

The engine may not start. Follow the procedure below to initialize the system.

- 1 Shift the shift lever to P (automatic transmission) or depress the brake pedal with the shift lever in N (manual transmission).
  - 2 Open and close any of the doors.
  - 3 Restart the engine.
- ? Unlocking the doors using the smart key system may not be possible immediately after reconnecting the battery. If this happens, use the wireless remote control or

the mechanical key to lock/unlock the doors.

- ? Start the engine with the engine switch in ACC. The engine may not start with the engine switch turned off. However, the engine will operate normally from the second attempt.
- ? The engine switch mode is recorded by the vehicle. If the battery is disconnected and reconnected, the vehicle will return the engine switch mode to the status it was in before the battery was disconnected. Make sure to turn off the engine switch before disconnecting the battery. Take extra care when connecting the battery if the engine switch mode prior to the battery being disconnected is unknown.

If the engine will not start even after multiple attempts, contact your Toyota dealer.

#### **⚠ WARNING**

##### ? Chemicals in the battery

A battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- ? Do not cause sparks by touching the battery terminals with tools.
- ? Do not smoke or light a match near the battery.
- ? Avoid contact with eyes, skin and clothes.
- ? Never inhale or swallow electrolyte.
- ? Wear protective safety glasses when working near the battery.

**⚠ WARNING**

? Keep children away from the battery.

? **Where to safely charge the battery**  
 Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.

? **Emergency measures regarding electrolyte**

? If electrolyte gets in your eyes  
 Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.

? If electrolyte gets on your skin  
 Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.

? If electrolyte gets on your clothes  
 It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.

? If you accidentally swallow electrolyte  
 Drink a large quantity of water or milk. Get emergency medical attention immediately.


? **When disconnecting the battery**  
 Do not disconnect the negative (-) terminal on the body side. The disconnected negative (-) terminal may touch the positive (+) terminal, which may cause a short and result in death or serious injury.

**⚠ NOTICE**

? **When recharging the battery**  
 Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

**Adding the washer fluid**

- A washer does not work.
- The warning message appears on the multi-information display.

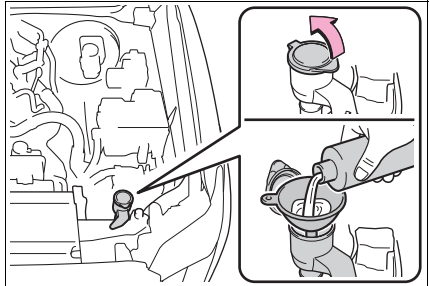


**⚠ WARNING**

? **When adding washer fluid**  
 Do not add washer fluid when the engine is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

**⚠ NOTICE**

? **Do not use any fluid other than washer fluid**  
 Do not use soapy water or anti-freeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

 NOTICE

**? Diluting washer fluid**  
 Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.


**Tires**

**Replace or rotate tires in accordance with maintenance schedules and treadwear.**

**Checking tires**

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

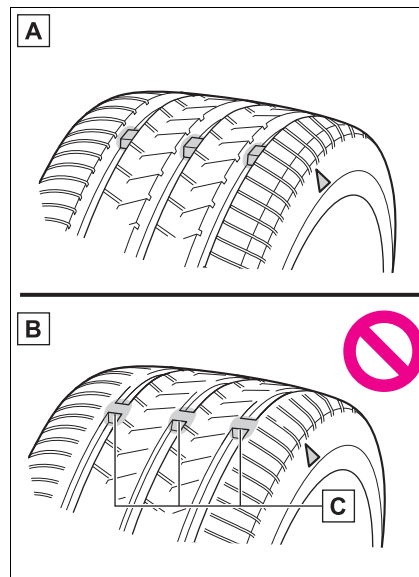

**A** New tread

**B** Worn tread

**C** Treadwear indicator

The location of treadwear indicators

is shown by a “TWI” or “ $\Delta$ ” mark, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.

#### ? **When to replace your vehicle’s tires**

Tires should be replaced if:

- ? The treadwear indicators are showing on a tire.
- ? You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- ? A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Toyota dealer.

#### ? **Tire life**


Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used, or damage is not obvious.

#### ? **Maximum load of tire**

Check that the number given by dividing the maximum load by 1.10 of the replacement tire is greater than 1/2 of the Gross Axle Weight Ratings (GAWR) of either the front axle or the rear axle, whichever is greater.

For the GAWR, see the Certification Label.

For the maximum load of the tire, see the load limit at maximum cold tire inflation pressure mentioned on the sidewall of the tire. (→P.629)

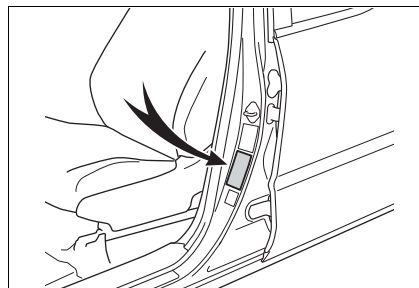

#### ? **Tire types**

##### ? **Summer tires**

Summer tires are high-speed performance tires best suited to highway driving under dry conditions. Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered roads or icy roads, the use of snow tires is recommended. When installing snow tires, be sure to replace all four tires.

##### ? **All season tires**

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions as well as for use year-round. All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

##### ? **Snow tires**

For driving on snow-covered roads or icy roads, we recommend using snow tires. If you need snow tires, select tires of the same size, construction and load capacity as the originally installed tires. Since your

vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restrictions. Snow tires should be installed on all wheels. (→P.440)

? **If the tread on snow tires wears down below 0.16 in. (4 mm)**

The effectiveness of the tires as snow tires is lost.

**! WARNING**

? **When inspecting or replacing tires**

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- ? Do not mix tires of different makes, models or tread patterns. Also, do not mix tires of remarkably different treadwear.
- ? Do not use tire sizes other than those recommended by Toyota.
- ? Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- ? Do not mix summer, all season and snow tires.
- ? Do not use tires that have been used on another vehicle. Do not use tires if you do not know how they were used previously.

? Do not use tires with different load rating and/ or speed symbol than what is specified on tire pressure label or in owner's manual.

**! NOTICE**


? **Driving on rough roads**

Take particular care when driving on roads with loose surfaces or potholes.

These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

**Tire rotation**

Rotate the tires in the order shown.

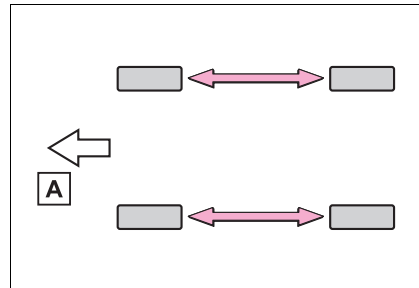

**A** Front

**Tire pressure warning system**

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire pressure warning system of this vehicle adopts a 2-type warning system

- When “Adjust Pressure” is displayed (Normal Warning)

The tire pressure warning light comes on and a buzzer sounds when the tire inflation pressure becomes low due to natural air leakage or outside temperature. (Ways of coping: →P.580, 624)


- When “Immediately Check tire when Safe” is displayed (Emergency Warning)

The tire pressure warning light comes on and a buzzer sounds when the tire inflation pressure becomes low suddenly due to a blowout. (Ways of coping: →P.589) However, the system may not be able to detect sudden tire ruptures (bursting, etc.).


The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

The unit can be changed.

- ▶ Vehicles with 7-inch display

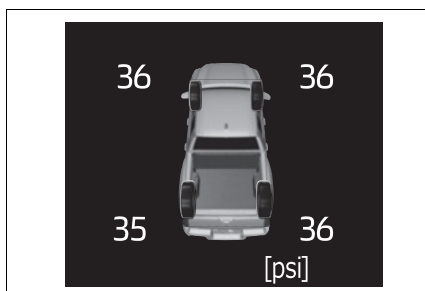


- ▶ Vehicles with 12.3-inch display

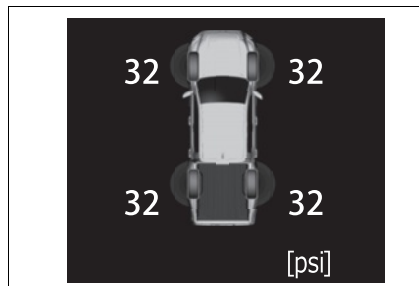

#### ? How to change the unit (with 7-inch display)

- 1 Park the vehicle in a safe place and turn the engine switch off.


Changing the unit cannot be performed while the vehicle is moving.

- 2 Turn the engine switch to ON.
- 3 Press  $\wedge$  /  $\vee$  of the meter control switch to select .
- 4 Press  $\leftarrow$  /  $\rightarrow$  to select “Vehicle Settings” and then press and hold OK.
- 5 Press  $\wedge$  /  $\vee$  to select “TPWS” and then press OK.
- 6 Press  $\wedge$  /  $\vee$  to select “Pressure unit setting” and then press OK.
- 7 Press  $\wedge$  /  $\vee$  to select the desired unit and then press OK.

? **How to change the unit (with 12.3-inch display)**

- 1 Park the vehicle in a safe place and turn the engine switch off.

Changing the unit cannot be performed while the vehicle is moving.

- 2 Turn the engine switch to ON
- 3 Press and hold OK to display the cursor on the content display area (center) of the multi-information display.
- 4 Press  $\wedge$  /  $\vee$  of the meter control switches to select “ Settings” and then press OK.
- 5 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select “Vehicle Settings” and then press and hold OK.
- 6 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select “TPWS setting” and then press OK.
- 7 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select the “Pressure unit setting”. Then press and hold OK.

? **Routine tire inflation pressure checks**

The tire pressure warning system does not replace routine tire inflation

pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

? **Tire inflation pressure**

- ? It may take a few minutes to display the tire inflation pressure after the engine switch is turned to ON. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.

? Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.

? **Situations in which the tire pressure warning system may not operate properly**

- ? In the following cases, the tire pressure warning system may not operate properly.
- If non-genuine Toyota wheels are used.
  - A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
  - A tire has been replaced with a tire that is not of the specified size.
  - Tire chains, etc., are equipped.
  - An auxiliary-supported run-flat tire is equipped.
  - If a window tint that affects the radio wave signals is installed.
  - If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
  - If the tire inflation pressure is extremely higher than the specified level.
  - If wheels without tire pressure warning valves and transmitters are used.
  - If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.
- ? Performance may be affected in the following situations.
- Near a TV tower, electric power



plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise

- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

If tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by driving and changing the radio wave conditions may change.

- ? When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- ? When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

? **Warning performance of the tire pressure warning system**

The warning of the tire pressure warning system will change in accordance with the conditions under which it was initialized. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

? **Certification**

→P.713

**Installing tire pressure warning valves and transmitters**

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be

registered in the tire pressure warning computer and the tire pressure warning system must be initialized. (→P.543)

? **When replacing the tires and wheels**

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 20 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

 NOTICE

? **Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps**

- ? When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact your Toyota dealer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- ? Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves, corrode the valves and the tire pressure warning valves could be bound.
- ? When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.



### Initializing the tire pressure warning system

? **The tire pressure warning system must be initialized in the following circumstances:**

- When rotating the tires.
- When changing the tires.
- After registering the ID codes. (→P.543)
- When changing between two registered wheel sets.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.


? **How to initialize the tire pressure warning system (with 7-inch display)**

- 1 Park the vehicle in a safe place and turn the engine switch off, wait for approximately 20 minutes or more, and then perform the procedure.
- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level.


Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3 Turn the engine switch to ON.

Initialization cannot be performed while the vehicle is moving.

- 4 Press  $\wedge$  /  $\vee$  of the meter control switch to select .
- 5 Press  $\langle$  /  $\rangle$  to select "Vehicle Settings" and then press and hold OK.
- 6 Press  $\wedge$  /  $\vee$  to select "TPWS" and then press OK.
- 7 Press  $\wedge$  /  $\vee$  to select "Setting Pressure". Then press and hold OK until the tire pressure warning light blinks 3 times.

Then a message will be displayed on the multi-information display. "--" will be displayed on the multi-information display for the inflation pressure of each tire while initialization is being performed.

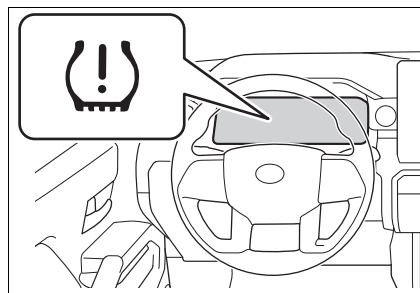

- 8 Drive straight (with occasional left and right turns) at approximately 25 mph (40 km/h) or more for approximately 10 to 30 minutes.

When initialization is complete, the inflation pressure of each tire will be displayed on the multi-information display.

Even if the vehicle is not driven at approximately 25 mph (40 km/h) or more, initialization can be completed by driving for a long time. However, if initialization does not complete after driving for 1 hour or more, park the vehicle in a safe place for approximately 20 minutes and please drive a vehicle once again with the engine switch ON. (→P.545)


? **How to initialize the tire pressure warning system (with 12.3-inch display)**

- 1 Park the vehicle in a safe place and turn the engine switch off, wait for approximately 20 minutes or more, and then perform the procedure.
- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level.

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3 Turn the engine switch to ON.

Initialization cannot be performed while the vehicle is moving.


- 4 Press and hold OK to display the cursor on the content display area (center) of the multi-information display.
- 5 Press  $\wedge$  /  $\vee$  of the meter control switches to select “ Settings” and then press OK.

- 6 Press  $\langle$  /  $\rangle$  of the meter control switches, select “Vehicle Settings” and then press and hold OK.

- 7 Press  $\langle$  /  $\rangle$  of the meter control switches, select “TPWS setting” and then press OK.

- 8 Press  $\langle$  /  $\rangle$  of the meter control switches, select the “Setting Pressure”. Then press and hold OK.

Then a message will be displayed on the multi-information display. “--” will be displayed on the multi-information display for the inflation pressure of each tire while initialization is being performed.

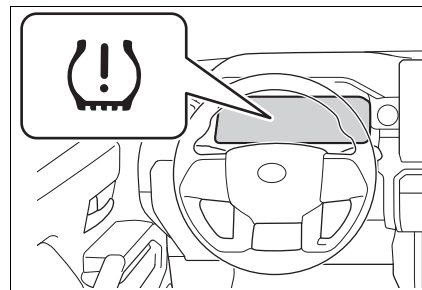

- 9 Drive straight (with occasional left and right turns) at approximately 25 mph (40 km/h) or more for approximately 10 to 30 minutes.

Even if the vehicle is not driven at approximately 25 mph (40 km/h) or more, initialization can be completed by driving for a long time. However, if initialization does not complete after driving for 1 hour or

more, park the vehicle in a safe place for more than 20 minutes and please drive a vehicle once again with the engine switch ON. (→P.545)

#### ? **When initializing**

- ? Initialization is performed while driving at a vehicle speed of approximately 25 mph (40 km/h) or more.
- ? Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- ? The tire pressure warning system can be initialized by yourself, but depending on the driving conditions and driving environment, initialization may take some time to complete.

#### ? **The initialization operation**

- ? If you have accidentally turned the engine switch off during initialization, it is not necessary to restart the initialization again as initialization will restart when the engine switch has been turned to ON for the next time.
- ? If you accidentally perform initialization when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.
- ? While the position of each tire is being determined and the inflation pressures are not being displayed on the multi-information display, if the inflation pressure of a tire drops, the tire pressure warning light will come on.

#### ? **If the tire pressure warning system is not initialized properly**

- ? In the following situations, initialization may take longer than usual to be completed or may not be possible. Normally, initialization

completes within approximately 30 minutes.

- Vehicle is not driven at approximately 25 mph (40 km/h) or more
- Vehicle is driven on unpaved roads
- Vehicle is driven near other vehicles and system cannot recognize tire pressure warning valve and transmitters of your vehicle over those of other vehicles
- If the vehicle is driven in heavy traffic or another situation where other vehicles are driven close by, it may take time for the system to recognize the tire pressure warning valve and transmitters of your vehicle over those of other vehicles.
- ? If initialization does not complete after driving for 1 hour or more, park the vehicle in a safe place for approximately 20 minutes and then drive the vehicle again.
- ? If the vehicle is reversed during initialization, the data up to that point is reset, so perform the initialization procedure again from the beginning.
- ? In the following situations, initialization will not be started or was not completed properly and the system will not operate properly. Perform the initialization procedure again.
  - If, when attempting to start initialization, the tire pressure warning light does not blink 3 times.
  - If, when the vehicle has been driven for about 20 minutes after performing initialization, the tire pressure warning light blinks for approximately 1 minute and then illuminates.

If initialization cannot be completed after performing the above procedure, contact your Toyota dealer.

**⚠ WARNING****? When initializing the tire pressure warning system**

Do not initialize tire pressure without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

**Registering ID codes**

Every tire pressure warning valve and transmitter has a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code.


When registering the ID codes, perform the following procedure.

- ▶ Vehicles with 7-inch display
- 1 Park the vehicle in a safe place, wait for approximately 20 minutes, and then start the engine.
- 2 Press **▲ / ▼** of the meter control switch to select **⚙**.
- 3 Press **◀ / ▶** to select "Vehicle Settings" and then press **OK**.
- 4 Press **▲ / ▼** to select "TPWS" and then press **OK**.
- 5 Press **▲ / ▼** to select "Change Wheel". Then press

and hold **OK** until the tire pressure warning light blinks slowly 3 times.

Then a message will be displayed on the multi-information display.

When registration is being performed, the tire pressure warning light will blink for approximately 1 minute then illuminate and "--" will be displayed for the inflation pressure of each tire on the multi-information display.

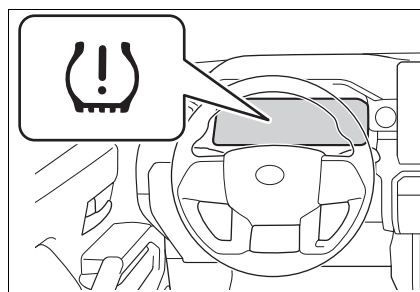


- 6 Drive straight (with occasional left and right turns) at approximately 25 mph (40 km/h) or more for approximately 10 to 30 minutes.

When registration is completed, the tire pressure warning light will go off and the inflation pressure of each tire will be displayed on the multi-information display.

Even if the vehicle is not driven at approximately 25 mph (40 km/h) or more, registration can be completed by driving for a long time. However, if registration does not complete after driving for 1 hour or more, perform the procedure again from the beginning.


- 7 Initialize the tire pressure warning system. (→P.540)

- ▶ Vehicles with 12.3-inch display
- 1 Park the vehicle in a safe place, wait for approximately 20 minutes, and then start the engine.
- 2 Press and hold OK to display the cursor on the content display area (center) of the multi-information display.
- 3 Press  $\wedge$  /  $\vee$  of the meter control switches to select “ Settings” and then press OK.
- 4 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select “Vehicle Settings” and then press and hold OK.
- 5 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select “TPWS setting” and then press OK.
- 6 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select the “Identifying Each Wheel & Position”. Then press and hold OK until the tire pressure warning light blinks slowly 3 times.

Then a message will be displayed on the multi-information display.

When registration is being performed, the tire pressure warning

light will blink for approximately 1 minute then illuminate and “--” will be displayed for the inflation pressure of each tire on the multi-information display.

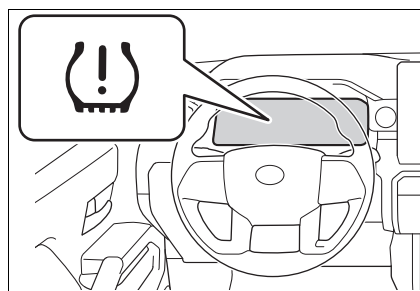

- 7 Drive straight (with occasional left and right turns) at approximately 25 mph (40 km/h) or more for approximately 10 to 30 minutes.

When registration is completed, the tire pressure warning light will go off and the inflation pressure of each tire will be displayed on the multi-information display.

Even if the vehicle is not driven at approximately 25 mph (40 km/h) or more, registration can be completed by driving for a long time.

However, if registration does not complete after driving for 1 hour or more, perform the procedure again from the beginning.

- 8 Initializing the tire pressure warning system. (→P.541)

#### ? When registering ID codes

- ? ID code registration is performed while driving at a vehicle speed of approximately 25 mph (40 km/h) or more.
- ? Before performing ID code registration, make sure that no wheels with tire pressure warning valve and transmitters installed are near the vehicle.

- ? Make sure to initialize the tire pressure warning system after registering the ID codes. If the system is initialized before registering the ID codes, the initialized values will be invalid.
- ? ID codes can be registered by yourself, but depending on the driving conditions and driving environment, registration may take some time to complete.
- ? As the tires will be warm when registration is completed, make sure to allow the tires to cool before performing initialization.

? **Canceling ID code registration**

- ? To cancel ID code registration after it has been started, select "Change Wheel" on the multi-information display and press and hold again.
- ? If ID code registration has been canceled, the tire pressure warning light will blink for approximately 1 minute when the engine switch is turned to ON and then illuminate. The tire pressure warning system will be operational when the tire pressure warning light turns off.
- ? If the warning light does not turn off even after several minutes have elapsed, ID code registration may not have been canceled correctly. To cancel registration, perform the ID code registration start procedure again and then turn the engine switch off before driving.

? **If ID codes are not registered properly**

- ? In the following situations, ID code registration may take longer than usual to be completed or may not be possible. Normally, registration completes within approximately 30 minutes.  
If ID code registration is not complete after driving for approximately 30 minutes, continue driving for a while.
  - Vehicle is not parked for approxi-

- mately 20 minutes or more before driving
- Vehicle is not driven at approximately 25 mph (40 km/h) or more
- Vehicle is driven on unpaved roads
- Vehicle is driven near other vehicles and system cannot recognize tire pressure warning valve and transmitters of your vehicle over those of other vehicles
- Wheel with tire pressure warning valve and transmitter installed is inside or near the vehicle

If registration does not complete after driving for 1 hour or more, perform the ID code registration procedure again from the beginning.

- ? If the vehicle is reversed during registration, the data up to that point is reset, so perform the registration procedure again from the beginning.
- ? In the following situations, ID code registration will not be started or was not completed properly and the system will not operate properly. Perform the ID code registration procedure again.
  - If, when attempting to start ID code registration, the tire pressure warning light does not blink slowly 3 times.
  - If, when the vehicle has been driven for about 20 minutes after performing ID code registration, the tire pressure warning light blinks for approximately 1 minute and then illuminates.
- ? If ID code registration cannot be completed after performing the above procedure, contact your Toyota dealer.

**Selecting wheel set**

Your vehicle is equipped with tire pressure warning system with the function to have ID

codes registered for a second wheel set, for example a winter set. You can register a second wheel set by yourself or your Toyota dealer.

After registration of a second wheel set, either of these two wheel sets can be selected for usage with the tire pressure warning system.

? **Operating conditions for the function**

- This function will perform the change of wheel set only if a second wheel set has been registered. If no second wheel set has been registered, no change will be made when selecting this function in the menu.
- Only a change between both registered wheel set is possible, mixing between these wheel sets is not supported.


? **How to change between wheel sets (with 7-inch display)**

- 1 Have the vehicle fitted with the preferred wheel set.
- 2 Press  $\wedge$  /  $\vee$  of the meter control switches on the steering wheel and select OK .
- 3 Press  $\langle$  /  $\rangle$  of the meter control switches and select

“Vehicle Settings”, and then press and hold OK .

- 4 Press  $\wedge$  /  $\vee$  of the meter control switches and select “TPWS”, and then press OK .
- 5 Press  $\wedge$  /  $\vee$  of the meter control switches and select “Change Wheel”. Then press and hold OK until the tire pressure warning light blinks slowly 3 times.

Afterward, turns on after flashing for 1 minute.

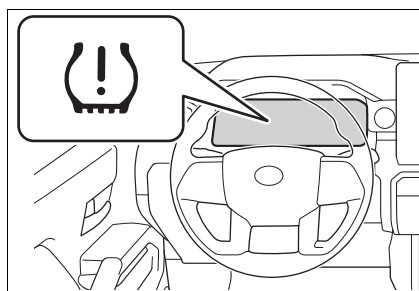

After 2 minutes, registration of a second wheel set is being performed. The tire pressure warning light will turn off and “--” will be displayed for the inflation pressure of each tire on the multi-information display.

- 6 Initialize the tire pressure warning system. (→P.540)

If the tire inflation pressure settings for the installed tires change, initialization operations are required, but if the tire inflation pressure settings are the same, initialization is not required.

- 7 Drive straight (with occasional left and right turns) at

approximately 25 mph (40 km/h) or more for approximately 10 to 30 minutes.


Registration of a second wheel set is complete when the tire pressure warning light turns off and the inflation pressure of each tire is displayed on the multi-information display.

#### ? How to change between wheel sets (with 12.3-inch display)

- 1 Have the vehicle fitted with the preferred wheel set.
- 2 Press and hold OK to display the cursor on the content display area (center) of the multi-information display.
- 3 Press  $\wedge$  /  $\vee$  of the meter control switches to select "Settings" and then press OK.
- 4 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select "Vehicle Settings" and then press and hold OK.
- 5 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select "TPWS setting" and then press OK.
- 6 Press  $\leftarrow$  /  $\rightarrow$  of the meter control switches, select the "Identifying Each Wheel & Position". Then press and

hold OK until the tire pressure warning light blinks slowly 3 times.

Afterward, turns on after flashing for 1 minute.

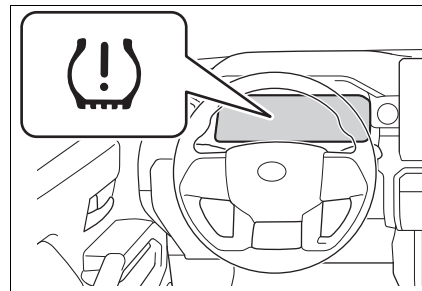

After 2 minutes, registration of a second wheel set is being performed. The tire pressure warning light will turn off and "--" will be displayed for the inflation pressure of each tire on the multi-information display.

- 7 Initialize the pressure warning system. (→P.541)

If the tire inflation pressure settings for the installed tires change, initialization operations are required, but if the tire inflation pressure settings are the same, initialization is not required.

- 8 Drive straight (with occasional left and right turns) at approximately 25 mph (40 km/h) or more for approximately 10 to 30 minutes.


Registration of a second wheel set is complete when the tire pressure warning light turns off and the inflation pressure of each tire is displayed on the multi-information display.



**Tire inflation pressure**

**Checking the specified tire inflation pressure**

The recommended cold tire inflation pressure and tire size are displayed on the tire and loading information label. (→P.624)

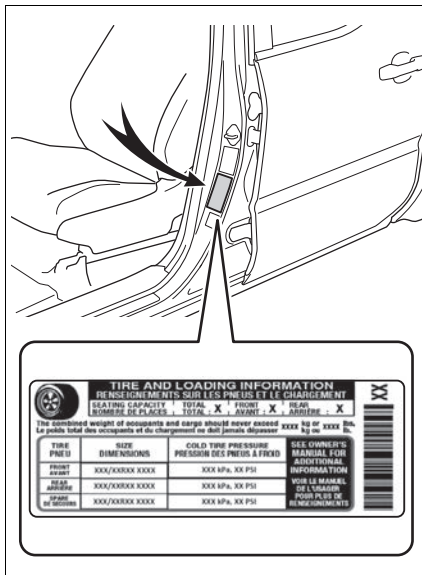

**B** Tire pressure gauge

- 1 Remove the tire valve cap.
- 2 Press the tip of the tire pressure gauge onto the tire valve.
- 3 Read the pressure using the gauge gradations.
- 4 If the tire inflation pressure is not at the recommended level, adjust the pressure. If you add too much air, press the center of the valve to deflate.
- 5 After completing the tire inflation pressure measurement and adjustment, apply soapy water to the valve and check for leakage.
- 6 Put the tire valve cap back on.

**? Tire inflation pressure check interval**

You should check tire inflation pressure every two weeks, or at least once a month. Do not forget to check the spare.


**? Effects of incorrect tire inflation pressure**

Driving with incorrect tire inflation pressure may result in the following:

- ? Reduced fuel economy
- ? Reduced driving comfort and poor handling
- ? Reduced tire life due to wear
- ? Reduced safety
- ? Damage to the drive train

If a tire needs frequent inflating, have it checked by your Toyota dealer.

**Inspection and adjustment procedure**

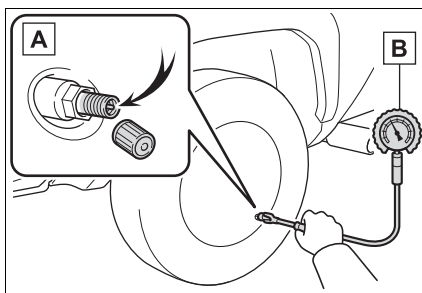


**A** Tire valve

? **Instructions for checking tire inflation pressure**

When checking tire inflation pressure, observe the following:

- ? Check only when the tires are cold.  
If your vehicle has been parked for at least 3 hours or has not been driven for more than 1 mile or 1.5 km, you will get an accurate cold tire inflation pressure reading.
- ? Always use a tire pressure gauge. It is difficult to judge if a tire is properly inflated based only on its appearance.
- ? It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- ? Never exceed the vehicle capacity weight.  
Passengers and luggage weight should be placed so that the vehicle is balanced.

? Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

 NOTICE

? **When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on.  
If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

 **WARNING**

? **Proper inflation is critical to save tire performance**

Keep your tires properly inflated. If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- ? Excessive wear
- ? Uneven wear
- ? Poor handling
- ? Possibility of blowouts resulting from overheated tires
- ? Air leaking from between tire and wheel
- ? Wheel deformation and/or tire damage

## Wheels

**If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.**

### Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset\*.

Replacement wheels are available at your Toyota dealer.

\*: Conventionally referred to as offset.

Toyota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

#### ? When replacing wheels

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, the tire pressure warning valves and transmitters must be installed. (→P.539)

## WARNING

### ? When replacing wheels

? Do not use wheels that are a different size from those recommended in the Owner's Manual or certification label, as this may result in a loss of handling control.

? Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

### ? When installing the wheel nuts

Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

### ? Use of defective wheels prohibited

Do not use cracked or deformed wheels. Doing so could cause the tire to leak air during driving, possibly causing an accident.

**⚠ NOTICE****? Replacing tire pressure warning valves and transmitters**

? Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Toyota dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Toyota dealer.

? Ensure that only genuine Toyota wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

**Aluminum wheel precautions (if equipped)**


- Use only Toyota wheel nuts and wheel nut wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1000 miles (1600 km).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

**Air conditioning filter**


**The air conditioning filter must be changed regularly to maintain air conditioning efficiency.**

**Removing the air conditioning filter**

- 1 Turn the engine switch off.
- 2 Open the glove box.

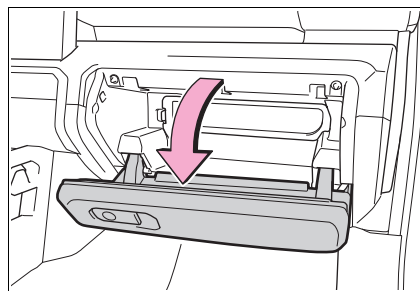


- 3 Remove the panel.

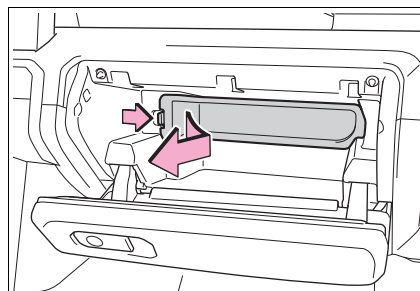


- 4 Unlock the filter cover (A), pull the filter cover out of the

claws (B), and remove the filter cover.

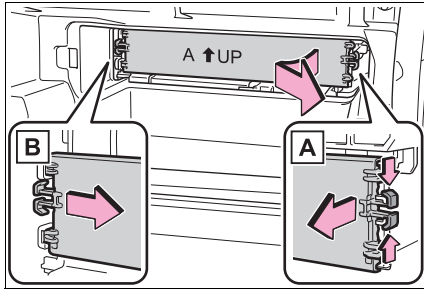


5 Remove the filter case.

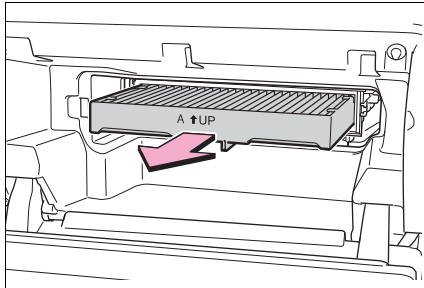

6 Remove the air conditioning filter from the filter case and replace it with a new one.

The “↑ UP” marks shown on the filter and the filter case should be pointing up.

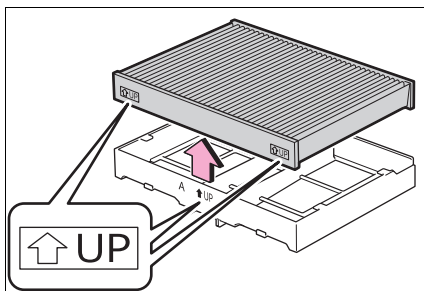

? **Checking interval**

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or

areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the “Owner’s Manual Supplement” or “Scheduled Maintenance Guide”.)

? **If air flow from the vents decreases dramatically**

The filter may be clogged. Check the filter and replace if necessary.


 **NOTICE**

? **When using the air conditioning system**

Make sure that a filter is always installed. Using the air conditioning system without a filter may cause damage to the system.

? **To prevent damage to the filter cover**

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

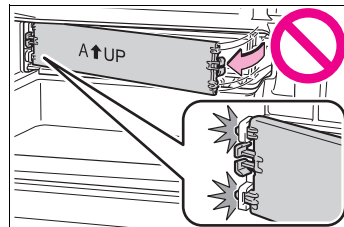

## Electronic key battery

**Replace the battery with a new one if it is depleted. As the key may be damaged if the following procedure is not performed properly, it is recommended that key battery replacement be performed by your Toyota dealer.**

### ? If the electronic key battery is depleted

The following symptoms may occur:

- ? The smart key system and wireless remote control will not function properly.
- ? The operational range will be reduced.

### ? When the card key battery needs to be replaced (if equipped)

The battery for the card key is available only at your Toyota dealer.

Your Toyota dealer can replace the battery for you.

## Items to prepare

- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2450


### ? Use a CR2450 lithium battery

- ? Batteries can be purchased at your Toyota dealer, local electrical appliance shops or camera stores.
- ? Replace only with the same or equivalent type recommended by the manufacturer.
- ? Dispose of used batteries accord-

ing to local laws.


## Replacing the battery

- 1 Take out the mechanical key.

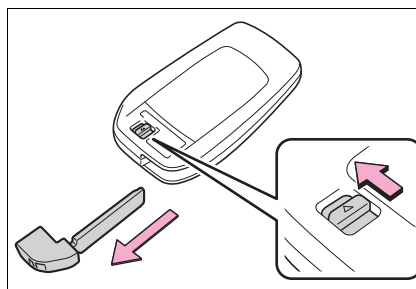


- 2 Remove the cover.

To prevent damage to the key, cover the tip of the flathead screwdriver with a tape.

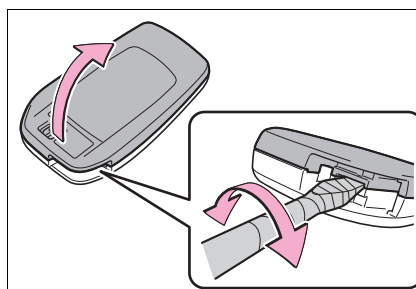

- 3 Remove the depleted battery.

Insert a new battery with the "+" terminal facing up.

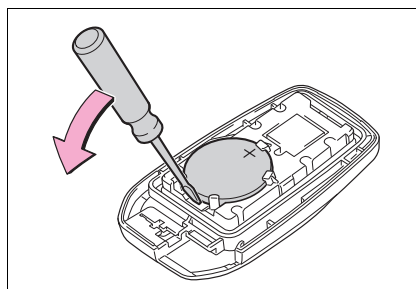

**⚠ WARNING****? Removed battery and other parts**

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

**? Battery precautions**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- ? Do not swallow the battery. Doing so may cause chemical burns.
- ? A coin battery or button battery is used in the electronic key. If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- ? Keep away new and removed batteries from children.
- ? If the cover cannot be firmly closed, stop using the electronic key and stow the key in the place where children cannot reach, and then contact your Toyota dealer.
- ? If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.
- ? **To prevent battery explosion or leakage of flammable liquid or gas**
- ? Replace the battery with a new battery of the same type. If a wrong type of battery is used, it may explode.

? Do not expose batteries to extremely low pressure due to high altitude or extremely high temperatures.

? Do not burn, break or cut a battery.

**⚠ NOTICE****? When replacing the battery**

Use a flathead screwdriver of appropriate size. Applying excessive force may deform or damage the cover.

**? For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:


- ? Always work with dry hands. Moisture may cause the battery to rust.
- ? Do not touch or move any other component inside the remote control.
- ? Do not bend either of the battery terminals.

**Checking and replacing fuses**


**If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.**

**Checking and replacing fuses**

- 1 Turn the engine switch off.
  - 2 Open the fuse box cover.
- ▶ **Engine compartment: type A fuse box**
- Push the tabs in and lift the lid off.

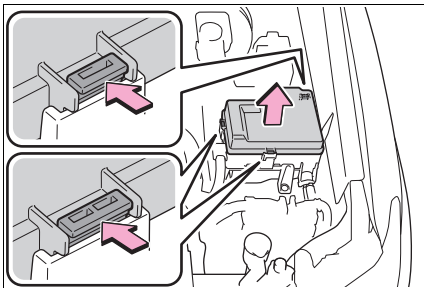


- ▶ **Engine compartment: type B fuse box**
- Push the tabs in and lift the lid off.

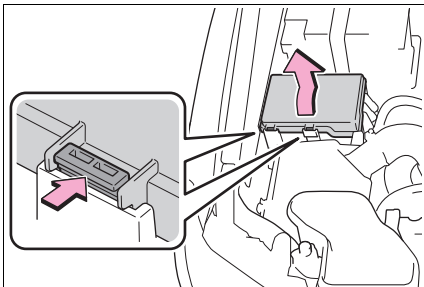


- ▶ **Passenger' side instrument panel**

Remove the cover.

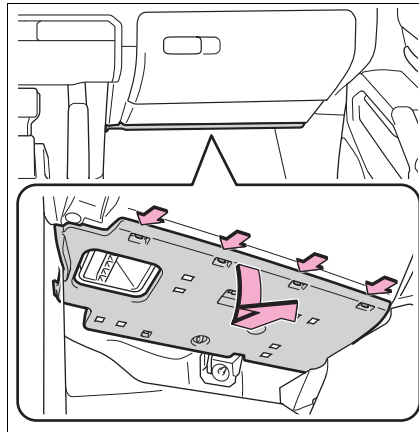

Remove the lid.

Make sure to push the claw when removing/installing the lid.

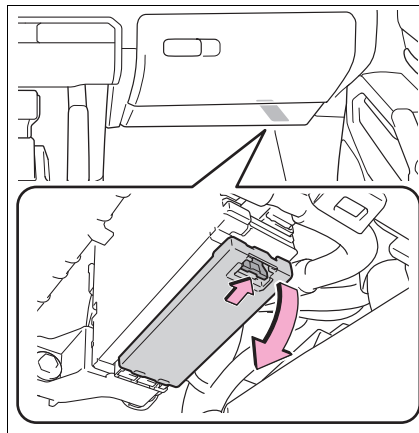






- ▶ Under the right-hand rear seat (vehicles with rear seats)

Raising the bottom cushions.  
(→P.156)


Remove the side cover.

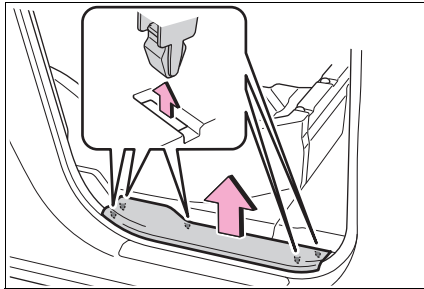


After removing the clips, pull the rear seat undercover forward in the order **A**, **B** and remove it.

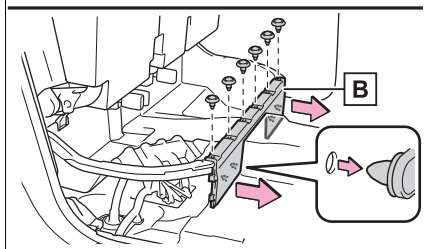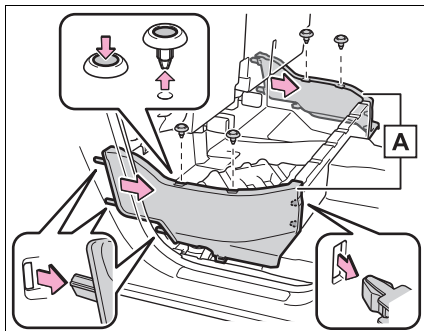

After removing the clips, lift up the rear corner of the storage box.

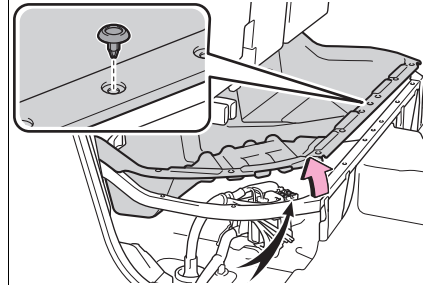

- 3 Remove the fuse with the pullout tool.  
Only type A fuse can be removed using the pullout tool.

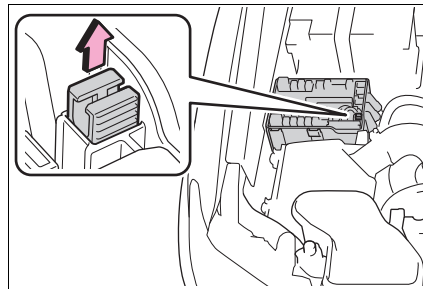


- 4 Check if the fuse is blown.

Type A and B:  
Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

Type C and D:  
Contact your Toyota dealer.


- ▶ Type A

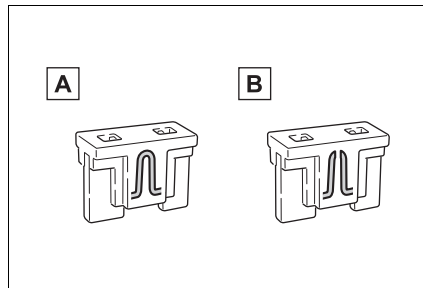

- A** Normal fuse

**B** Blown fuse


► Type B

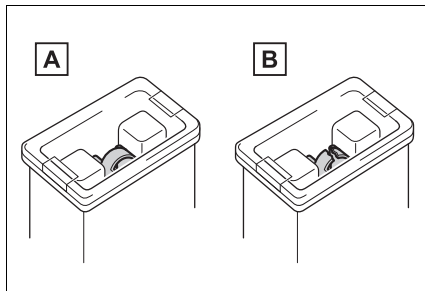

**A** Normal fuse

**B** Blown fuse


► Type C

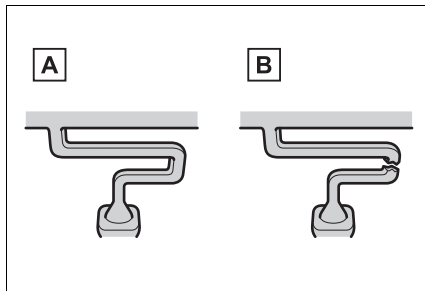

**A** Normal fuse

**B** Blown fuse

► Type D

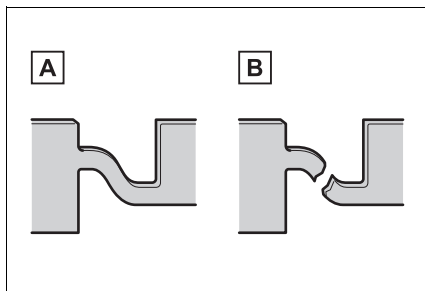

**A** Normal fuse

**B** Blown fuse

? **After a fuse is replaced**

- ? When installing the lid, make sure that the tab is installed securely.
- ? If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement.
- ? If the replaced fuse blows again, have the vehicle inspected by your Toyota dealer.

? **If there is an overload in a circuit**

The fuses are designed to blow, protecting the wiring harness from damage.

? **When replacing light bulbs**

Toyota recommends that you use genuine Toyota products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

**! WARNING**

? **To prevent system breakdowns and vehicle fire**

- Observe the following precautions. Failure to do so may cause damage to the vehicle, and possibly a fire or injury.
- ? Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- ? Always use a genuine Toyota fuse or equivalent. Never replace a fuse with a wire, even as a temporary fix.
- ? Do not modify the fuses or fuse boxes.

**NOTICE****? Before replacing fuses**


Have the cause of electrical overload determined and repaired by your Toyota dealer as soon as possible.

**Light bulbs**

**You may replace the following bulb by yourself. If necessary bulb replacement seems difficult to perform, contact your Toyota dealer. For more information about replacing other lights, contact your Toyota dealer.**

**Preparing for light bulb replacement**

Check the wattage of the light bulb to be replaced. (→P.626)

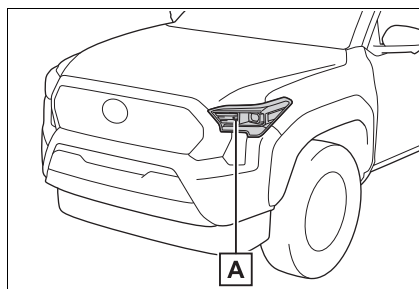**Bulb location**

**A** Front turn signal/parking lights (bulb type)

**? Lights that need to be replaced by your Toyota dealer**

- Headlights
- Daytime running lights
- Front turn signal/parking lights (LED type)
- Front fog lights (if equipped)

- Side marker lights
- Side turn signal lights
- Tail lights
- Stop lights
- Back-up light
- Rear turn signal lights
- High mounted stoplight/cargo lamp
- Trailer hitch light (if equipped)
- Bed lights (if equipped)
- License plate light

? **When replacing the light bulbs**

Confirm that they are properly engaged with the bulb base and that there is no light leakage.

? **LED Lights**

The lights other than front turn signal/parking lights (bulb type) consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Toyota dealer to have the light replaced.

? **Condensation build-up on the inside of the lens**

Temporary condensation build-up on the inside of the lens of any lights does not indicate a malfunction. Contact your Toyota dealer for more information in the following situations:

- ? Large drops of water have built up on the inside of the lens of any light.
- ? Water has built up inside of any lights.


? **When replacing light bulbs**

→P.557


### Replacing light bulb

? **Front turn signal/parking lights (bulb type)**


- 1 Remove the 4 push clips and air cleaner inlet. (for passenger's side only)

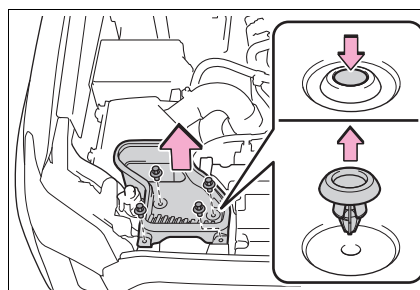


- 2 Turn the bulb base counter-clockwise.

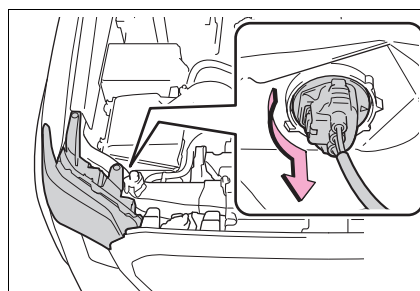

- 3 Remove the light bulb.

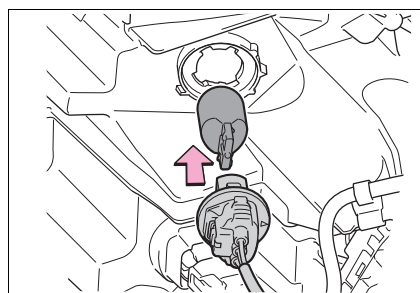

- 4 Install a new light bulb and turn the bulb base clockwise.

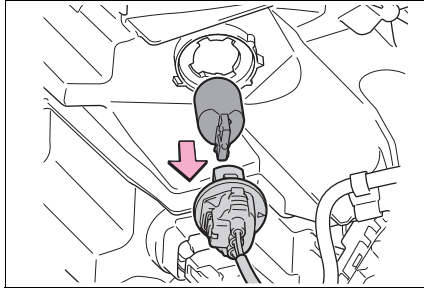

- 5 Install the air cleaner inlet and 4 push clips. (for passenger's side only)

**⚠ WARNING**

? **Replacing light bulbs**

? Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights. The bulbs become very hot and may cause burns.

? Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.

? Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the light unit. This may damage the lights or cause condensation to build up on the lens.

? **To prevent damage or fire**

Make sure bulbs are fully seated and locked.

**When trouble arises****7****7-1. Essential information**

Emergency flashers .... 562

If your vehicle has to be stopped in an emergency ..... 562

If the vehicle is submerged or water on the road is rising ..... 563

**7-2. Steps to take in an emergency**

If your vehicle needs to be towed..... 565

If you think something is wrong ..... 569

Fuel pump shut off system ..... 570

If a warning light turns on or a warning buzzer sounds ..... 571

If a warning message is displayed..... 582

If you have a flat tire.... 589

If the engine will not start ..... 600

If you lose your keys ... 601

If the electronic key does not operate properly .. 602

If the vehicle battery is discharged ..... 604

If your vehicle overheats ..... 609

If the vehicle becomes stuck ..... 611


## Emergency flashers

**The emergency flashers are used to warn other drivers when the vehicle has to be stopped on the road due to a breakdown, etc.**

### Operating instructions

Press the switch to flash all of the turn signal lights.

To turn them off, press the switch once again.

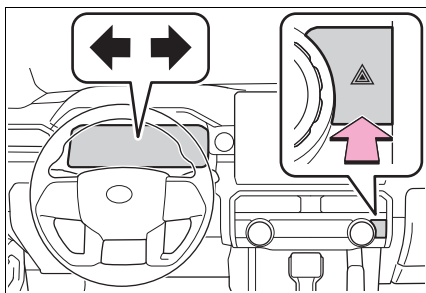

### ? Emergency flashers

- ? If the emergency flashers are used for a long time while the engine is not running, the battery may discharge.
- ? If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically. The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice.  
(The emergency flashers may not turn on automatically depending on the force of the impact and conditions of the collision.)


## If your vehicle has to be stopped in an emergency

**Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:**

### Stopping the vehicle

- 1 Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2 Shift the shift lever to N.
  - ▶ If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the engine.
  - ▶ If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4 To stop the engine, press and hold the engine switch for 2 consecutive seconds or

more, or press it briefly 3 times or more in succession.

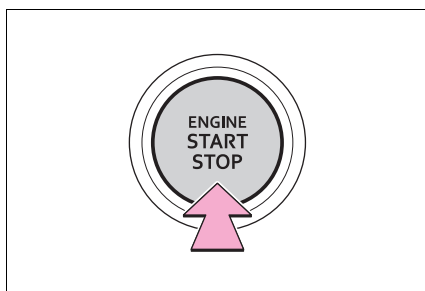

- 5 Stop the vehicle in a safe place by the road.

? **If emergency stopped**

The functions of the air conditioning, etc., may be partially limited in order to reduce the power consumption of the battery.

**! WARNING**

? **If the engine has to be turned off while driving**

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine.

If the vehicle is submerged or water on the road is rising

**This vehicle is not designed to be able to drive on roads that are deeply flooded with water. Do not drive on roads where the roads may be submerged or the water may be rising. It is dangerous to remain in the vehicle, if it is anticipated that the vehicle will be flooded or set adrift. Remain calm and follow the following.**

- If the door can be opened, open the door and exit the vehicle.
- If the door cannot be opened, open the window using the power window switch and ensure an escape route.
- If the window can be opened, exit the vehicle through the window.
- If the door and window cannot be opened due to the rising water, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle and then open the door after waiting for the rising water to enter the vehicle, and exit the vehicle.



When the outside water level exceeds half the height of the door, the door cannot be opened from the inside due to water pressure.

? **Water level exceeds the floor**

When the water level exceeds the floor and time has passed, the electrical equipment will get damaged, the power windows will not operate, the engine stop, and the vehicle may not be able to get moving.

? **Using an emergency escape hammer<sup>\*1</sup>**

Laminated glass<sup>\*2</sup> is used in the windshield and the windows on this vehicle.


Laminated glass cannot be shattered with an emergency escape hammer<sup>\*1</sup>.

<sup>\*1</sup>: Contact your Toyota dealer or aftermarket accessory manufacturer for further information about an emergency escape hammer.

<sup>\*2</sup>: If equipped

? **How to distinguish laminated glass**

When looking from the cross-sectional view point, laminated glass is two sheets of glass pasted together.

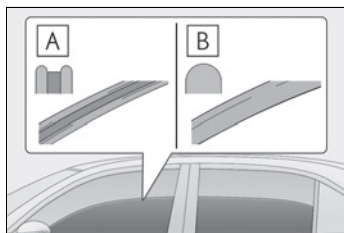

**A** Laminated glass

**B** Tempered glass

**! WARNING**

? **Caution while driving**

Do not drive on roads where the roads may be submerged or the water may be rising. Otherwise the vehicle may be damaged and cannot move, as well as become flooded and set adrift, which may lead to death.

### If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Toyota dealer or commercial towing service, using a wheel-lift type truck or flat-bed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.


### Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact your Toyota dealer or commercial towing service before towing.

- The engine is running but the vehicle does not move.
- The vehicle makes an abnormal sound.


### Towing with a wheel-lift type truck

- ▶ From the front

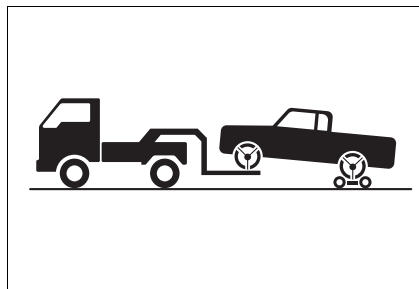

Use a towing dolly under the rear wheels.

- ▶ From the rear

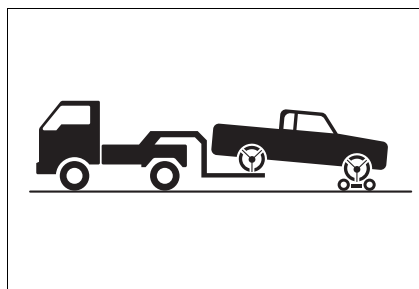

Use a towing dolly under the front wheels.

#### **!** WARNING


Observe the following precautions. Failure to do so may result in death or serious injury.

**⚠ WARNING**

? **When towing the vehicle**


▶ 2WD models

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain and related parts may be damaged or an accident may occur due to a change in direction of the vehicle.

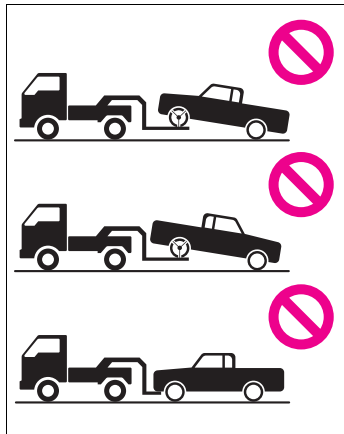

▶ 4WD models

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck.

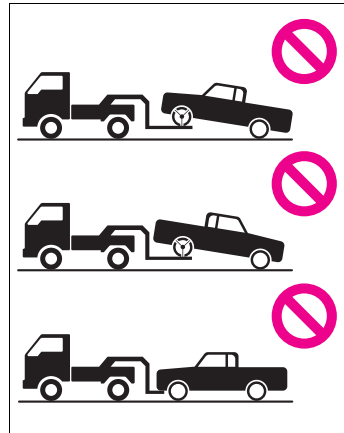


**⚠ NOTICE**

? **To prevent damage to the vehicle when towing using a wheel-lift type truck**

- ? Do not tow the vehicle from the rear when the engine switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- ? When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

**NOTICE****? Towing with a sling-type truck**

Do not tow with a sling-type truck to prevent body damage.

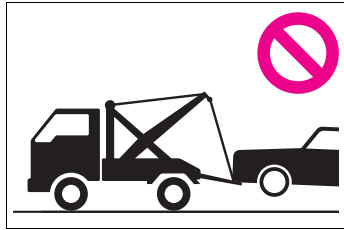**Using a flatbed truck**

When using a flat-bed truck to transport the vehicle, use tire strapping belts. Refer to the owner's manual of the flat-bed truck for the tire strapping method.

In order to suppress vehicle movement during transportation, set the parking brake and turn the engine switch off.

**Emergency towing**

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for at most 50 miles (80 km) at under 18 mph (30 km/h).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train,

axles, steering and brakes must be in good condition.


For vehicles with an automatic transmission, only the front towing eyelets may be used.

**Emergency towing procedure**


- 1 Securely attach cables or chains to the towing hook(s).

Take care not to damage the vehicle body.

## ▶ Type A

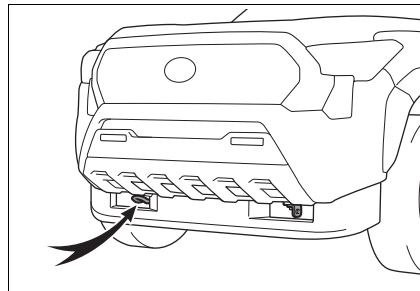

## ▶ Type B

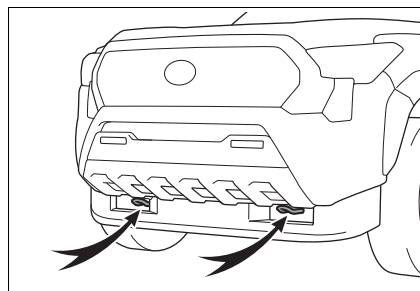

- 2 Enter the vehicle being towed and start the engine.

If the engine does not start, turn the engine switch to ON.

- 3 4WD models: Put the front-wheel drive control switch in "2H".

- 4 Shift the shift lever to N and release the parking brake.

Turn automatic mode off. (→P.224)

Vehicles with an automatic transmission: When the shift lever cannot be shifted: →P.217

? **While towing**

If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

**! WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

? **While towing**


- ? When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- ? Do not turn the engine switch off. There is a possibility that the steering wheel is locked and cannot be operated.

**! NOTICE**

? **To prevent damage to the vehicle during emergency towing**

Do not secure cables or chains to the suspension components.

**Rear recovery points (if equipped)**

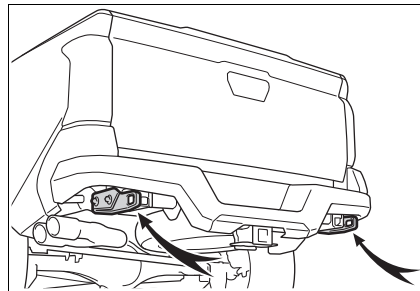

**! WARNING**

These recovery points are only intended to recover the vehicle when stranded in an off-road or slippery condition. The recovery points shall not be used for towing items behind the vehicle or to tow the vehicle on-road.

? **While towing**

- ? Align the tow vehicle with the vehicle so that the recovery strap is pulled straight toward the rear.
- ? Do not apply a load to the recovery points that is greater than the gross vehicle weight rating (GVWR).
- ? Ensure the recovery strap has no slack in it prior to pulling the vehicle.
- ? Keep bystanders out of the path of recovery and safely distanced from vehicles.

### If you think something is wrong

**If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Toyota dealer as soon as possible.**

#### Visible symptoms

- Fluid leaks under the vehicle. (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge continually points higher than normal.
- Voltmeter continually points higher or lower than normal.
- Engine oil pressure gauge continually points lower than normal.
- Automatic transmission fluid temperature warning message is displayed

#### Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system

- Pinging or other noises related to the engine

#### Operational symptoms

- Engine misses, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

### Fuel pump shut off system

**To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops supply of fuel to the engine.**

### Restarting the engine

Follow the procedure below to restart the engine after the system is activated.

- 1 Turn the engine switch to ACC or OFF.
- 2 Restart the engine.



#### NOTICE

#### ? **Before starting the engine**

Inspect the ground under the vehicle.



If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

## If a warning light turns on or a warning buzzer sounds



**Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Toyota dealer.**

### Actions to the warning lights or warning buzzers

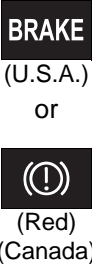

#### ? Brake system warning light (warning buzzer)

Warning light	Details/Actions
 <p><b>BRAKE</b> (U.S.A.) or  (Red) (Canada)</p>	<p>Indicates that:</p> <ul style="list-style-type: none"> <li>● The brake fluid level is low; or</li> <li>● The brake system is malfunctioning</li> </ul> <p>→ <b>Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.</b></p>

#### ? Brake system warning light (warning buzzer)

Warning light	Details/Actions
 <p> (Yellow)</p>	<p>Indicates a malfunction in the parking brake system</p> <p>→ <b>Have the vehicle inspected by your Toyota dealer immediately.</b></p>


#### ? High coolant temperature warning light\* (warning buzzer)

Warning light	Details/Actions
 <p></p>	<p>Indicates that the engine coolant temperature is overheating</p> <p>→ <b>Immediately stop the vehicle in a safe place. Handling method (→P.609)</b></p>

\*: This light illuminates on the multi-information display with a message.




? **Charging system warning light\* (warning buzzer)**

Warning light	Details/Actions
	Indicates a malfunction in the vehicle's charging system → <b>Immediately stop the vehicle in a safe place and contact your Toyota dealer.</b>



\*: This light illuminates on the multi-information display with a message.

? **Low engine oil pressure warning light\* (warning buzzer)**


Warning light	Details/Actions
	Indicates that the engine oil pressure is excessively low → <b>Immediately stop the vehicle in a safe place and contact your Toyota dealer.</b>

\*: This light illuminates on the multi-information display with a message.



? **Malfunction indicator lamp (warning buzzer)**

Warning light	Details/Actions
 (U.S.A.) or  (Canada)	Indicates a malfunction in: <ul style="list-style-type: none"> <li>● The electronic engine control system;</li> <li>● The electronic throttle control system; or</li> <li>● The emission control system</li> </ul> → <b>Have the vehicle inspected by your Toyota dealer immediately.</b>



? **SRS warning light (warning buzzer)**

Warning light	Details/Actions
	Indicates a malfunction in: <ul style="list-style-type: none"> <li>● The SRS airbag system; or</li> <li>● The seat belt pretensioner system</li> </ul> → <b>Have the vehicle inspected by your Toyota dealer immediately.</b>


? **ABS warning light**

Warning light	Details/Actions
 (U.S.A.) or  (Canada)	Indicates a malfunction in: <ul style="list-style-type: none"> <li>● The ABS; or</li> <li>● The brake assist system</li> </ul> → <b>Have the vehicle inspected by your Toyota dealer immediately.</b>


? **Electric power steering system warning light (warning buzzer)**

Warning light	Details/Actions
 (Red) or  (Yellow)	Indicates a malfunction in the EPS (Electric Power Steering) system → <b>Have the vehicle inspected by your Toyota dealer immediately.</b>


? **PCS warning light (warning buzzer)**

Warning light	Details/Actions
	Indicates a malfunction in the PCS (Pre-Collision System). → <b>Follow the instructions displayed on the multi-information display.</b>  If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate.


? **LTA indicator (warning buzzer)**

Warning light	Details/Actions
 (Yellow)	Indicates a malfunction in the LTA (Lane Tracing Assist). → <b>Follow the instructions displayed on the multi-information display.</b>


? **LDA indicator (warning buzzer)**

Warning light	Details/Actions
 (Yellow)	Indicates a malfunction in the LDA (Lane Departure Alert). → <b>Follow the instructions displayed on the multi-information display.</b>


? **PDA indicator (warning buzzer)**

Warning light	Details/Actions
 (Yellow) (if equipped)	Indicates a malfunction in the PDA (Proactive Driving Alert). → <b>Follow the instructions displayed on the multi-information display.</b>


? **Dynamic radar cruise control indicator (warning buzzer)**

Warning light	Details/Actions
 (Yellow)	Indicates a malfunction in the Dynamic radar cruise control. → <b>Follow the instructions displayed on the multi-information display.</b>


? **Cruise control indicator (warning buzzer)**

Warning light	Details/Actions
 (Yellow)	Indicates a malfunction in the cruise control. → <b>Follow the instructions displayed on the multi-information display.</b>


? **Driving assist information indicator**

Warning light	Details/Actions
 (if equipped)	Indicates either of the following systems may be malfunctioning. <ul style="list-style-type: none"> <li>● PCS (Pre-Collision System)</li> <li>● LDA (Lane Departure Alert)</li> </ul> → <b>Follow the instructions displayed on the multi-information display.</b> Indicates any of the following systems are malfunctioning, disabled, or turned off. <ul style="list-style-type: none"> <li>● PKSB (Parking Support Brake) (if equipped)</li> <li>● RCD (Rear Camera Detection) (if equipped)</li> <li>● BSM (Blind Spot Monitor) (if equipped)</li> <li>● RCTA (Rear Cross Traffic Alert) (if equipped)</li> </ul> → <b>Follow the instructions displayed on the multi-information display.</b> When towing another vehicle. → <b>P.302</b>


? **Stop & Start cancel indicator**

Warning light	Details/Actions
 (Flashes) (if equipped)	Indicates a malfunction in the Stop & Start system → <b>Have the vehicle inspected by your Toyota dealer immediately.</b>


? **Intuitive parking assist OFF indicator (warning buzzer)**

Warning light	Details/Actions
 (If equipped)	When a buzzer sounds: Indicates a malfunction in the intuitive parking assist function → <b>Have the vehicle inspected by your Toyota dealer immediately.</b> When a buzzer does not sound: Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc. → <b>Follow the instructions displayed on the multi-information display. (→P.585)</b>

? **Slip indicator light**


Warning light	Details/Actions
	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>● The VSC/Trailer Sway Control system;</li> <li>● The TRAC system;</li> <li>● The hill-start assist control system;</li> <li>● Multi-terrain Select brake control (if equipped);</li> <li>● Crawl Control (if equipped); or</li> <li>● The downhill assist control system (if equipped)</li> </ul> <p>→ <b>Have the vehicle inspected by your Toyota dealer immediately.</b></p>

? **Inappropriate pedal operation warning light\* (warning buzzer)**



Warning light	Details/Actions
	<p>When a buzzer sounds:</p> <ul style="list-style-type: none"> <li>● Brake Override System is malfunctioning</li> <li>● Drive-Start Control is malfunctioning (if equipped)</li> <li>● Drive-Start Control is operating (if equipped)</li> </ul> <p>→ <b>Follow the instructions displayed on the multi-information display.</b></p> <p>When a buzzer does not sound: Brake Override System is operating. → <b>Release the accelerator pedal and depress the brake pedal.</b></p>

\*: This light illuminates on the multi-information display with a message.



? **Brake hold operated indicator (warning buzzer)**

Warning light	Details/Actions
	<p>Indicates a malfunction in the brake hold system</p> <p>→ <b>Have the vehicle inspected by your Toyota dealer immediately.</b></p>


? **Parking brake indicator**

Warning light	Details/Actions
 <p><b>PARK</b> (Flashes) (U.S.A.) or  (Flashes) (Canada)</p>	<p>It is possible that the parking brake is not fully engaged or released → <b>Operate the parking brake switch once again.</b></p> <p>This light comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally.</p>


? **Rear differential lock indicator**

Warning light	Details/Actions
 <p> (Flashes) (If equipped)</p>	<p>Indicates a malfunction in the rear differential lock system → <b>Have the vehicle inspected by your Toyota dealer immediately.</b></p>


? **High speed four-wheel drive indicator**

Warning light	Details/Actions
 <p><b>4HI</b> (Yellow) (If equipped)</p>	<p>Indicates a malfunction in the four-wheel drive system → <b>Have the vehicle inspected by your Toyota dealer immediately.</b></p>


? **Low speed four-wheel drive indicator**

Warning light	Details/Actions
 <p><b>4LO</b> (Flashes) (If equipped)</p>	<p>Indicates a malfunction in the four-wheel drive system → <b>Have the vehicle inspected by your Toyota dealer immediately.</b></p>


? **Tire pressure warning light**

Warning light	Details/Actions
	<p>When the light comes on after blinking for approximately 1 minute: Malfunction in the tire pressure warning system → <b>Have the system checked by your Toyota dealer.</b></p> <p>When the light comes on: Low tire inflation pressure such as ● Natural causes ● Flat tire → <b>Immediately stop the vehicle in a safe place. Handling method (→P.580)</b></p>

? **Low fuel level warning light**

Warning light	Details/Actions
	<p>Indicates that remaining fuel is approximately 2.7 gal. (10.4 L, 2.3 Imp. gal.) or less → <b>Refuel the vehicle.</b></p>

? **Driver's and front passenger's seat belt reminder light (warning buzzer)\***

Warning light	Details/Actions
	<p>Warns the driver and/or front passenger to fasten their seat belts → <b>Fasten the seat belt.</b> <b>If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.</b></p>


\*: Driver's seat belt warning buzzer:

The driver's seat belt warning buzzer sounds to alert the driver that his or her seat belt is not fastened. Once the engine switch is turned to ON, the buzzer sounds. If the seat belt is still unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

Front passenger's seat belt warning buzzer:


The front passenger's seat belt warning buzzer sounds to alert the front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

? **Rear passengers' seat belt reminder lights (warning buzzer)\***

Warning light	Details/Actions
	Warns the rear passengers to fasten their seat belts → <b>Fasten the seat belt.</b>

\*: Rear passengers' seat belt warning buzzer:  
The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time, after the seat belt is fastened and unfastened and the vehicle reaches a certain speed.

? **Trailer brake warning light**

Warning light	Details/Actions
 (If equipped)	Indicates a malfunction in: ● Trailer brake control system; or ● Trailer connector circuit → <b>Have the vehicle inspected by your Toyota dealer immediately.</b>

? **Warning buzzer**

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

? **Front passenger detection sensor, seat belt reminder and warning buzzer**

? If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.

? If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

? **SRS warning light**

This warning light indicates problems with the following:

- ? Airbag sensor assembly
- ? Front impact sensors

- ? Side impact sensors (front door)
- ? Side impact sensors (rear)
- ? Front passenger occupant classification sensors
- ? Driver's seat position sensor
- ? Driver's seat belt buckle switch
- ? Front passenger's seat belt buckle switch
- ? "AIR BAG ON" indicator light
- ? "AIR BAG OFF" indicator light
- ? Driver's seat belt pretensioner, front passenger's seat belt pretensioner and force limiter
- ? SRS airbags
- ? SRS system related wiring harnesses and power sources
- ? **If the malfunction indicator lamp comes on while driving**

First check the following:

- ? Is the fuel tank empty?  
If it is, fill the fuel tank immediately.
- ? Is the fuel tank cap loose?



If it is, tighten it securely.

The light will go off after several driving trips.

If the light does not go off even after several trips, contact your Toyota dealer as soon as possible.

? **Electric power steering system warning light (warning buzzer)**

When the battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

? **When the tire pressure warning light comes on**

Inspect the tires to check if a tire is punctured.

If a tire is punctured: →P.589

If none of the tires are punctured: Turn the engine switch off then turn it to ON. Check if the tire pressure warning light comes on or blinks.

- ▶ If the tire pressure warning light blinks for approximately 1 minute then stays on

There may be a malfunction in the tire pressure warning system. Have the vehicle inspected by your Toyota dealer immediately.

- ▶ If the tire pressure warning light comes on
  - 1 After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.
  - 2 If the warning light does not turn off even after several minutes have elapsed, check that the inflation pressure of each tire is at the specified level and perform initialization. (→P.540)

? **The tire pressure warning light may come on due to natural causes**

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation

pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

? **When a tire is replaced with a spare tire**

The temporary spare tire is not equipped with the tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire is replaced with the temporary spare tire.

Replace the temporary spare tire with the repaired tire and adjust the proper tire inflation pressure. The tire pressure warning light will turn off after several minutes.

? **Conditions that the tire pressure warning system may not function properly**

→P.538

 **WARNING**

? **If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact your Toyota dealer.

The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

**⚠ WARNING****? When the electric power steering system warning light comes on**

When the light comes on yellow, the assist to the power steering is restricted. When the light comes on red, the assist to the power steering is lost and handling operations of the steering wheel become extremely heavy. When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

**? If the tire pressure warning light comes on**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

**? Stop your vehicle in a safe place as soon as possible.**

Adjust the tire inflation pressure immediately.

**? If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest Toyota dealer.****? Avoid abrupt maneuvering and braking.**

If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

**? If a blowout or sudden air leakage should occur**

The tire pressure warning system may not activate immediately.

**? Maintenance of the tires**

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (tire and load information label). (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label [tire and load information label], you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS-tire pressure warning system) that illuminates a low tire pressure telltale (tire pressure warning light) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale (tire pressure warning light) illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS (tire pressure warning system) is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale (tire pressure warning light).

**⚠ WARNING**

Your vehicle has also been equipped with a TPMS (tire pressure warning system) malfunction indicator to indicate when the system is not operating properly. The TPMS (tire pressure warning system) malfunction indicator is combined with the low tire pressure telltale (tire pressure warning light). When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS (tire pressure warning system) malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS (tire pressure warning system) from functioning properly. Always check the TPMS (tire pressure warning system) malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS (tire pressure warning system) to continue to function properly.

**⚠ NOTICE**

**? To ensure the tire pressure warning system operates properly**

Do not install tires with different specifications or manufactures as the tire pressure warning system may not operate properly.

**If a warning message is displayed**

**The multi-information display shows warnings of system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.**

**Additionally, if a warning light comes on or flashes at the same time that a warning message is displayed, take the appropriate corrective action for the warning light. (→P.571)**

**If a warning message is displayed again after the appropriate actions have been performed, contact your Toyota dealer.**

- ? Warning messages**
- The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.
- ? If a message about an operation is displayed**
  - ? If a message about an operation of the accelerator pedal or brake pedal is displayed
- A warning message about an operation of the brake pedal may be shown while the driving assist sys-

tems such as PCS (Pre-Collision system) or the dynamic radar cruise control is operating. If a warning message is shown, be sure to decelerate the vehicle or follow an instruction shown on the multi-information display.

? A warning message is shown when Brake Override System operates. (→P.185)

? A warning message is shown when Drive-Start Control (if equipped) (→P.191) operates. Follow the instructions on the multi-information display.

? If a message about an operation of the engine switch is displayed

An instruction for operation of the engine switch is shown when the incorrect procedure for starting the engine is performed or the engine switch is operated incorrectly. Follow the instructions shown on the multi-information display to operate the engine switch again.

? If a message about a shift lever operation is displayed

To prevent the shift lever from being operated incorrectly or the vehicle from moving unexpectedly, a message that requires shifting the shift lever may be shown on the multi-information display. In that case, follow the instruction of the message and shift the shift lever.

? If a message or image about an open/close state of a part or replenishment of a consumable is displayed

Confirm the part indicated by the multi-information display or a warning light, and then perform the coping method such as closing the open door or replenishing a consumable.

? **If a message that indicates the need for visiting your Toyota dealer is displayed**

The system or part shown on the multi-information display is malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

? **If a message that indicates the need for referring to Owner's Manual is displayed**

? If "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown, follow the instructions (→P.609).

? If the following messages are shown, there may be a malfunction.

Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.

- "Transmission Oil Temp. High Stop in a Safe Place and See Owner's Manual"
- "Smart Key System Malfunction See Owner's Manual"

? If the following messages are shown, there may be a malfunction.

Immediately have the vehicle inspected by your Toyota dealer.

- "Oil pressure low Stop in a safe place See owner's manual"
- "Braking Power Low Stop in a Safe Place See Owner's Manual"

? **If "Shift to P Before Exiting Vehicle" is displayed**

Message is displayed when the driver's door is opened without turning the engine switch to OFF with the shift lever in any position other than P.

Shift the shift lever to P.

? **If "Auto Power OFF to Conserve Battery" is displayed**

Power was turned off due to the automatic power off function.

Next time when starting the engine, increase the engine speed slightly

and maintain that level for approximately 5 minutes to recharge the battery.

? **If “Headlight System Malfunction Visit Your Dealer” is displayed**

The following systems may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

- ? The LED headlight system
- ? AHB (Automatic High Beam)

? **If “Engine Oil Level Low Add or Replace” is displayed**

The engine oil level may be low. Check the level of the engine oil, and add engine oil if necessary (→P.527). This message may be displayed if the vehicle is stopped on a slope. Move the vehicle to a level surface and check if the message disappears.

? **If “Engine Stopped Steering Power Low” is displayed**

This message is displayed if the engine is stopped while driving.

When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

? **If “Maintenance Required Soon” is displayed**

Indicates that all maintenance according to the driven distance on the maintenance schedule\* should be performed soon.

Comes on approximately 4500 miles (7200 km) after the message has been reset.

If necessary, perform maintenance. Please reset the message after the maintenance is performed. (→P.517)

\*: Refer to the separate “Scheduled Maintenance Guide” or “Owner’s Manual Supplement” for the maintenance interval applicable to your

vehicle.

? **If “Maintenance Required Visit Your Dealer” is displayed**

Indicates that all maintenance is required to correspond to the driven distance on the maintenance schedule\*.

Comes on approximately 5000 miles (8000 km) after the message has been reset. (The indicator will not work properly unless the message has been reset.)

Perform the necessary maintenance. Please reset the message after the maintenance is performed. (→P.517)

\*: Refer to the separate “Scheduled Maintenance Guide” or “Owner’s Manual Supplement” for the maintenance interval applicable to your vehicle.

? **If “Engine Maintenance Required Visit Your Dealer” is displayed**

The engine or an engine component is malfunctioning.

Have the vehicle inspected by your Toyota dealer.

? **If “Oil Maintenance Required Soon” is displayed**

Indicates that the engine oil should be scheduled to be changed.

Check the engine oil and change it if necessary. After changing the engine oil, make sure to reset the message. (→P.528)

? **If “Oil Maintenance Required” is displayed**

Indicates that the engine oil should be changed.

Check and change the engine oil, and oil filter by your Toyota dealer. After changing the engine oil, make sure to reset the message. (→P.528)

? **If “Parking Assist Unavailable Sensor Blocked” is displayed on the multi-information display (if equipped)**

A sensor may be covered with water drops, ice, snow, dirt, etc. Remove the water drops, ice, snow, dirt, etc., from the sensor to return the system to normal.


Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice melts, the system will return to normal.


If a sensor is dirty, the position of the dirty sensor will be shown on the display.

If an abnormality is displayed even though there are no water drops, ice, snow or dirt, the sensor may be operating abnormally. Have the vehicle inspected by your Toyota dealer.

? **If “Parking Assist Unavailable Low Visibility See Owner’s Manual” is displayed**

Indicates one of the following systems is disabled.


?  RCD (Rear Camera Detection) (if equipped)

?  PKSB (Parking Support Brake) (if equipped)

Remove any dirt or foreign matter from the rear camera.


? **If “System Malfunction Visit Your Dealer” is displayed**

Indicates one of the following systems is disabled.


?  PCS (Pre-Collision System)


?  LDA (Lane Departure Alert)


?  LTA (Lane Tracing Assist)


?  AHB (Automatic High Beam)


?  Dynamic radar cruise control


?  RSA (Road Sign Assist) (if equipped)


?  PDA (Proactive Driving Assist) (if equipped)

?  BSM (Blind Spot Monitor) (if equipped)

?  RCTA (Rear Cross Traffic Alert) (if equipped)

?  Intuitive parking assist (if equipped)

?  PKSB (Parking Support Brake) (if equipped)


?  RCD (Rear Camera Detection) (if equipped)

Have the vehicle inspected by your Toyota dealer immediately.

? **If “System Stopped See Owner’s Manual” is displayed**

Indicates one of the following systems is disabled.


Check the displayed icon, and follow the following correction methods.


?  PCS (Pre-Collision System)


?  LDA (Lane Departure Alert)

?  LTA (Lane Tracing Assist)


?  AHB (Automatic High Beam)


?  Dynamic radar cruise control


?  RSA (Road Sign Assist) (if equipped)


?  PDA (Proactive Driving Assist) (if equipped)




?  BSM (Blind Spot Monitor) (if equipped)

?  RCTA (Rear Cross Traffic Alert) (if equipped)

?  Intuitive parking assist (if equipped)

?  PKSB (Parking Support Brake) (if equipped)

?  RCD (Rear Camera Detection) (if equipped)

Follow the following correction methods.

- Check the voltage of the battery.
- Check the sensors that the Toyota Safety Sense 3.0 uses for foreign matter covering them. Remove them if any. (→P.244)
- Vehicle with RCD (Rear Camera Detection): Check if the tailgate is open.


Check the situations in which the sensors may not operate properly, and improve the situation if applicable. (→P.247, 315, 320, 327, 332, 340, 342, 344)

- Check the rear bumper around the sensors (→P.311) used by the BSM (if equipped) or RCTA (if equipped) for foreign matter covering them. Remove them if any.
- Check the sensors including camera sensors for foreign matter covering them. Remove them if any. (→P.311)


When problems are solved and the sensors are operational, this indication may disappear by itself.


? **If “System Stopped Front Camera Low Visibility See Owner’s Manual” is displayed**

Indicates one of the following systems is disabled.


?  PCS (Pre-Collision System)


?  LDA (Lane Departure Alert)

?  LTA (Lane Tracing Assist)

?  AHB (Automatic High Beam)

?  Dynamic radar cruise control

?  RSA (Road Sign Assist) (if equipped)


?  PDA (Proactive Driving Assist) (if equipped)

Follow the following correction methods.


- Using the windshield wipers, remove the dirt or foreign matter from the windshield.
- Using the air conditioning system, defog the windshield.
- Close the hood, remove any stickers, etc. to clear the obstruction in front of the front camera.


? **If “System Stopped Front Camera Out of Temperature Range Wait until Normal Temperature” is displayed**

Indicates one of the following systems is disabled.


?  PCS (Pre-Collision System)


?  LDA (Lane Departure Alert)

?  LTA (Lane Tracing Assist)

?  AHB (Automatic High Beam)

?  Dynamic radar cruise control

?  RSA (Road Sign Assist) (if equipped)





?  PDA (Proactive Driving Assist) (if equipped)

Follow the following correction methods.

- If the front camera is hot, such as after the vehicle is parked in the sun, use the air conditioning system to decrease the temperature around the front camera
- If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high
- If the front camera is cold, such as after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera

? **If “System Stopped Front Radar Sensor Blocked Clean Radar Sensor” is displayed**

Indicates one of the following systems is disabled.

- ?  PCS (Pre-Collision System)
- ?  LTA (Lane Tracing Assist)
- ?  Dynamic radar cruise control
- ?  PDA (Proactive Driving Assist) (if equipped)





Follow the following correction methods.

- Check if there is any foreign matter attached to the radar sensor or radar sensor cover and clean them if necessary (→P.245)
- This message may be displayed when driving in an open area with few nearby vehicles or structures, such as a desert, grasslands, suburbs, etc.

The message may be cleared by driving the vehicle in an area with structures, vehicles, etc., nearby.

? **If “System Stopped Front Radar Sensor Out of Temperature Range Wait until Normal Temperature” is displayed**

Indicates one of the following systems is disabled.





- ?  PCS (Pre-Collision System)
- ?  LTA (Lane Tracing Assist)
- ?  Dynamic radar cruise control
- ?  PDA (Proactive Driving Assist) (if equipped)

Follow the following correction methods.

- The temperature of the radar sensor is outside of the operating range. Wait for the temperature to become appropriate.

? **If “System Stopped Front Radar In Self Calibration See Owner’s Manual” is displayed**

Indicates one of the following systems is disabled.

- ?  PCS (Pre-Collision System)
- ?  LTA (Lane Tracing Assist)
- ?  Dynamic radar cruise control
- ?  PDA (Proactive Driving Assist) (if equipped)

Follow the following correction methods.

- Check if there is any foreign matter attached to the radar sensor or radar sensor cover and clean them if necessary (→P.245)
- The radar sensor may be misaligned and will be adjusted automatically while driving. Continue driving for a while.



**? If “Cruise Control Unavailable See Owner’s Manual” is displayed**

Have the vehicle inspected by your Toyota dealer.

Indicates one of the following systems is disabled.

- ? Dynamic radar cruise control
- ? Cruise control

A message is displayed when the driving assist switch is pushed repeatedly.

Press the driving assist switch quickly and firmly.

**? If “Power Tailgate Unavailable. Fully Close Tailgate Manually to Re-Activate Power Tailgate” is displayed (if equipped)**

If the following message is displayed after pressing the Tailgate opener switch, the power tailgate requires re-initialization. To re-initialize the power tailgate, manually fully close and latch the tailgate.

The power tailgate may require re-initialization when the following has occurred.

- Jam detection has occurred and the tailgate is not fully closed.
- The tailgate has been unplugged and reconnected, and the tailgate has not been fully closed.
- The power tailgate main switch was pressed while the tailgate is not fully closed.
- The battery has been reconnected while the tailgate is not fully closed.

When the tailgate is fully closed and latched, the system will re-initialize and the message will disappear.

**? If “Power Tailgate Unavailable/Malfunction. Visit Your Dealer” is displayed (if equipped)**

When the following message is displayed, it is an indication that there is a malfunction in the system.

**If you have a flat tire**

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: P.534

**! WARNING**

? **If you have a flat tire**


Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

**Before repairing the tire**

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P (automatic transmission) or R (manual transmission).
- Stop the engine.
- Turn on the emergency flashers. (→P.562)


**Location of the spare tire, jack and tools**

? **Spare tire**

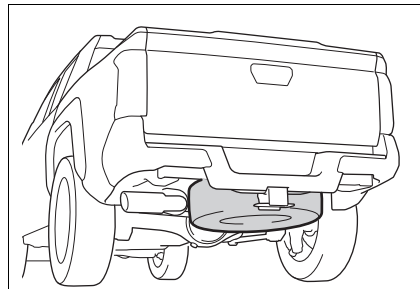


? **Jack and tools**

► **Vehicles without rear seats**

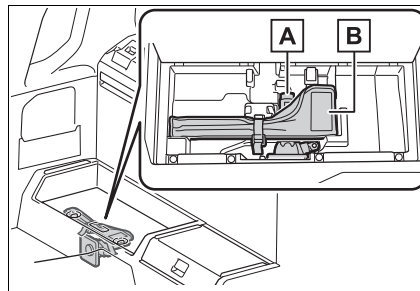


**A** Jack

**B** Tool bag

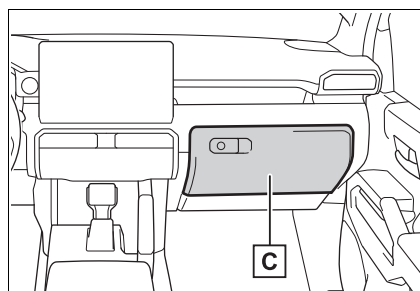


**C** Wheel lock key (if equipped)

► Vehicles with rear seats

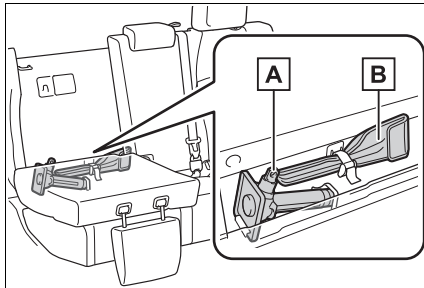

**A** Jack

**B** Tool bag

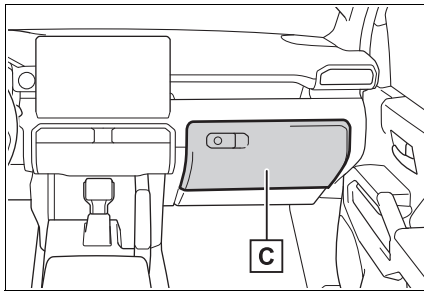

**C** Wheel lock key (if equipped)

**⚠ WARNING**

? **Using the tire jack**

Observe the following precautions.

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- ? Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- ? Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.

- ? Put the jack properly in its jack point.
- ? Do not put any part of your body under the vehicle while it is supported by the jack.
- ? Do not start the engine or drive the vehicle while the vehicle is supported by the jack.
- ? Do not raise the vehicle while someone is inside.
- ? When raising the vehicle, do not put an object on or under the jack.
- ? Do not raise the vehicle to a height greater than that required to replace the tire.
- ? Use a jack stand if it is necessary to get under the vehicle.
- ? When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.
- ? **Using the jack handle**

Insert the square head securely until you hear a click to prevent the extension parts from coming apart unexpectedly.

**Wheel lock nut (if equipped)**

When replacing tires on a vehicle with wheel lock nuts, use the following procedures to remove and install the wheel lock nuts. The wheel lock key is stored in the glove box. Always return the wheel lock key to its original position after use, so that it does not get lost. (→P.589)

**? Removal**

For ease of removal, the wheel lock nut should always be the first one loosened.

- 1 Place the wheel lock key on top of the wheel lock nut, turning until the wheel lock key and wheel lock nut patterns engage.
- 2 Place the wheel nut wrench on the wheel lock key, and while applying pressure on the wheel lock key, loosen the wheel lock nut.

**? Installation**

For ease of installation, the wheel lock nut should always be the last one tightened.


- 1 By hand, install a wheel lock nut on each wheel.
- 2 Place the wheel lock key on top of the wheel lock nut, turning until the wheel lock key and wheel lock nut patterns engage.
- 3 Place the wheel nut wrench on the wheel lock key, and while applying pressure on the wheel lock key, tighten the wheel lock nut to the recommended torque.

**! NOTICE****? When using a wheel lock key (if equipped)**


Do not use an impact wrench. Using an impact wrench may cause permanent damage to wheel lock nut and wheel lock key. If in doubt about wheel lock application, contact your Toyota dealer.

**Taking out the jack and tool bag**

- ▶ Vehicles without rear seats
- 1 Turn the knob counterclockwise.

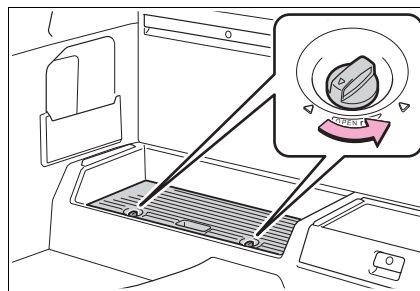


- 2 Open the lid.

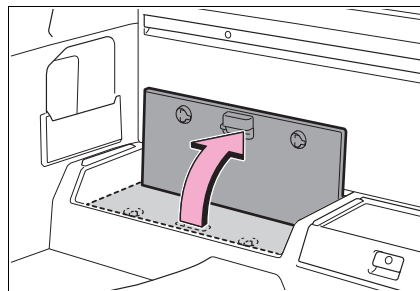


7

When trouble arises

- 3 Unhook the tightening strap and take out the tool bag.

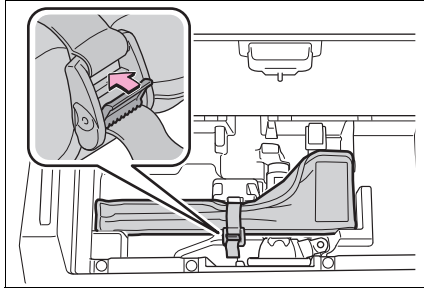


- 4 Unhook the tightening strap and take out the jack.

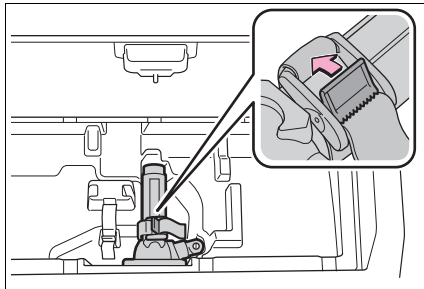


After using the jack, install the jack in the exact reverse order from which they were removed.

► Vehicles with rear seats

- 1 Fold the head restraint (→P.158), and then pull the strap and then fold down the seatback.

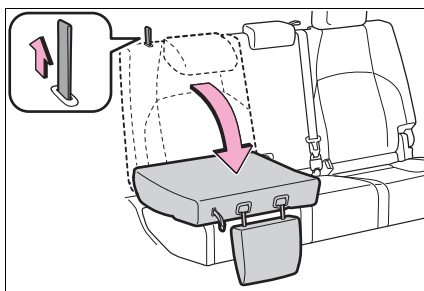


- 2 Loosen and remove the jack.

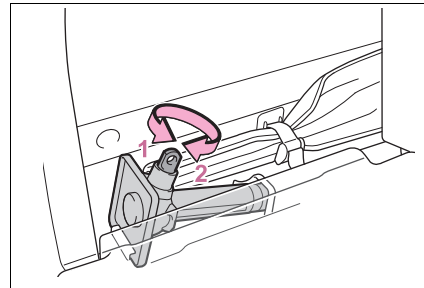

- 1 Loosen
- 2 Tighten


After using the jack, install the jack in the exact reverse order from which they were removed.

- 3 Unhook the tightening strap and take out the tool bag.


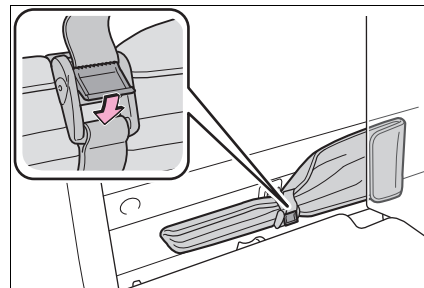


### Taking out the spare tire


- 1 Assemble the jack handle extension as shown.

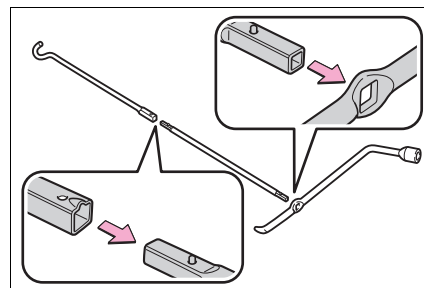

- 2 Insert the end of the jack handle extension into the lowering screw and turn it counterclockwise.

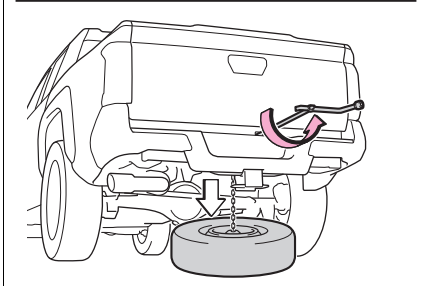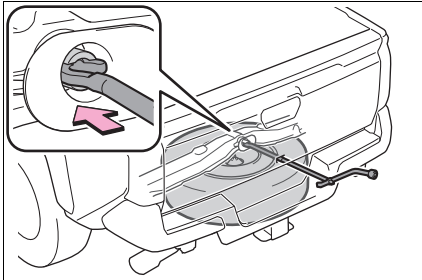


- 3 After the tire is lowered completely to the ground, remove the holding bracket.

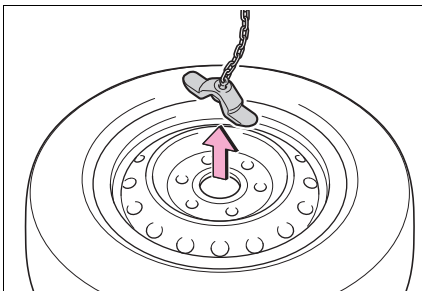

### Replacing a flat tire


- 1 Chock the tires.

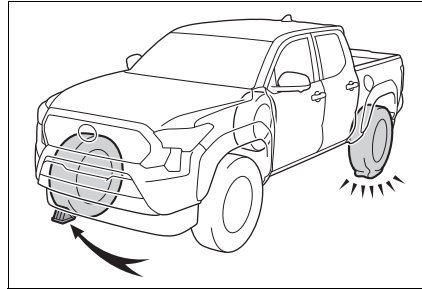


Tire	Wheel chock positions
Front left-hand side	Behind the rear right-hand side tire
Front right-hand side	Behind the rear left-hand side tire
Rear left-hand side	In front of the front right-hand side tire
Rear right-hand side	In front of the front left-hand side tire

- 2 Slightly loosen the wheel nuts (one turn).


Vehicles with wheel locks: Use the wheel lock key to loosen the wheel lock.

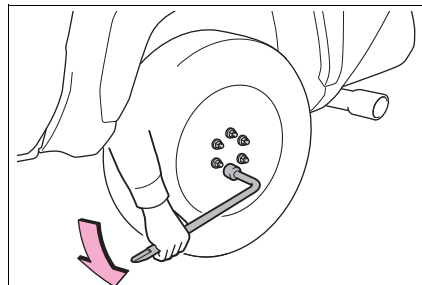

- 3 Assemble the jack handle extension as shown.

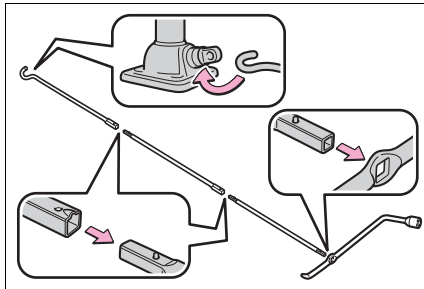

- 4 Position the jack at the correct jack point as shown.

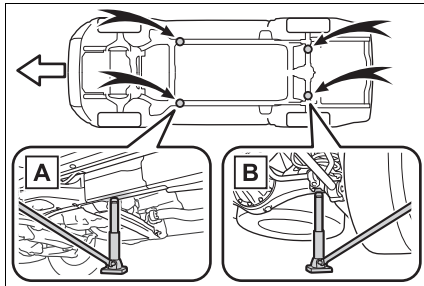

**A** Front


**B** Rear

Make sure the jack is positioned on a level and solid place.

- 5 Raise the vehicle until the tire is slightly raised off the ground.


When positioning the jack under the rear axle housing, make sure the groove on the top of the jack fits

with the rear axle housing.

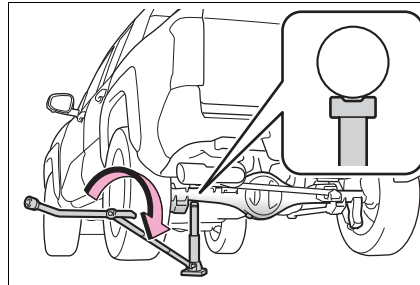

- 6 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

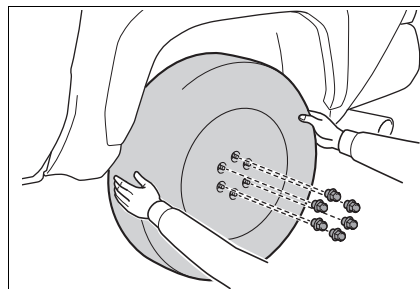

**⚠ WARNING**

? **Replacing a flat tire**

? Observe the following precautions.

Failure to do so may result in serious injury:

- Lower the spare tire completely to the ground before removing it from under the vehicle.
- Do not try to remove the wheel ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.

**⚠ WARNING**

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.

After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc., may result in burns.

- ? Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.

- Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. Remove any oil or grease that has adhered when installing the wheel nuts.

- After replacing a tire, check the tightening torque as soon as possible.  
Steel wheel: 154 ft•lbf (209 N•m, 21.3 kgf•m)  
Aluminum wheel: 97 ft•lbf (131 N•m, 13.4 kgf•m)

- When installing a tire, only use wheel nuts that have been specifically designed for that wheel.

- Retighten the wheel nuts within 100 miles (160 km) of driving.

- If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Toyota dealer.


- Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.

- When installing the wheel nuts, be sure to install them with the tapered ends facing inward.

**Installing the spare tire**


- Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

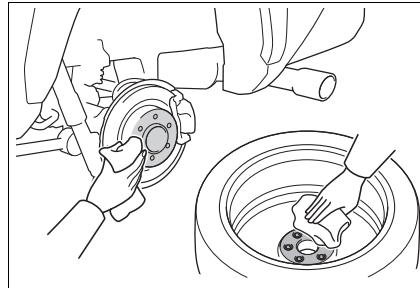

- Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.


When replacing a steel wheel with a steel wheel (including a compact spare tire), tighten the wheel nuts until the tapered portion **A** comes into loose contact with the disc wheel seat **B**.

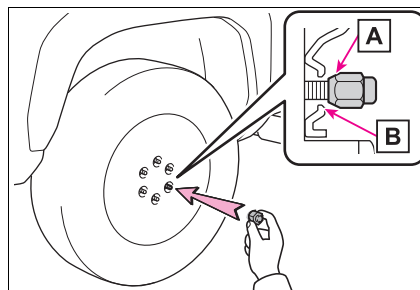


When replacing an aluminum wheel




with a steel wheel (including a compact spare tire), tighten the wheel nuts until the tapered portion **A** comes into loose contact with the disc wheel seat **B**.

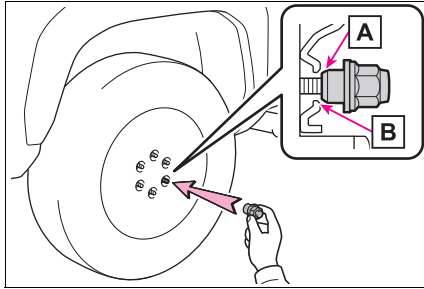

When replacing an aluminum wheel with a spare aluminum wheel, tighten the nuts until the washer of the nut **A** comes into loose contact with the disc wheel **B**.

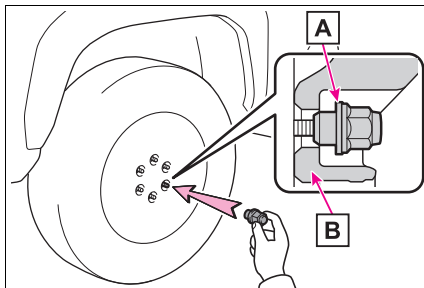

3 Lower the vehicle.

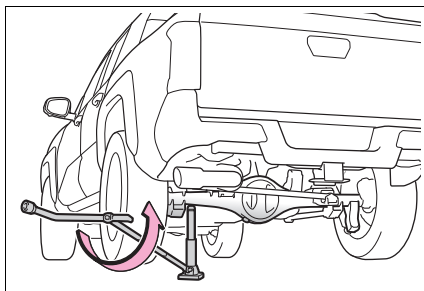


4 Securely tighten the wheel nuts two or three times in the order shown in the illustration

using a wheel nut wrench.

Tightening torque:

Steel wheel: 154 ft•lbf (209 N•m, 21.3 kgf•m)

Aluminum wheel: 97 ft•lbf (131 N•m, 13.4 kgf•m)

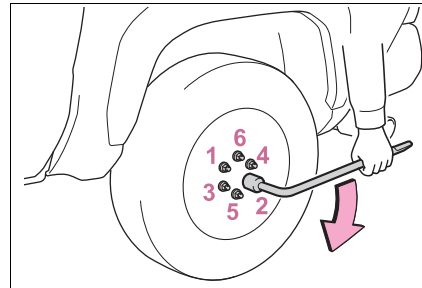

**! WARNING**


? **Stowing the flat tire**

Failure to follow steps listed under stowing the tire may result in damage to the spare tire carrier and loss of the tire, which could result in serious injury or death.


**Stowing the flat tire, jack and all tools**

- 1 Remove the center wheel ornament by pushing from the reverse side.
- 2 Lay down the tire with the valve stem facing up and install the holding bracket. Turn the jack handle exten-

tion clockwise to take up slack in the chain.

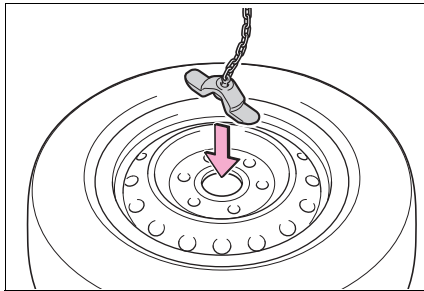


- 3 Check to ensure the holding bracket is centered in the wheel hub.

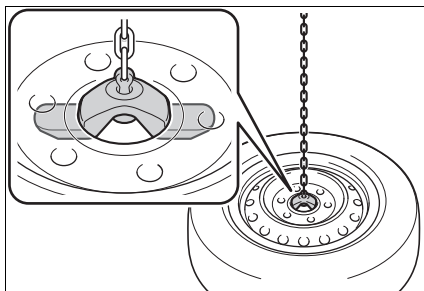

- 4 While raising, secure the tire, taking care that the tire goes straight up without catching on any surrounding parts, to prevent it from flying forward during a collision or sudden braking.

**Tightening torque:**  
34.7 ft•lbf (46.6 N•m, 4.8 kgf•m)

- 5 Confirm it is not loose after tightening:

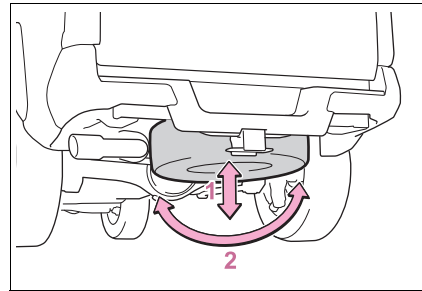

- 1 Push and pull the tire
- 2 Try rotating

Visually check to ensure tire is not hung on surrounding parts.

If looseness or misassembly exists, repeat step 2 and step 4.

- 6 Repeat step 5, any time the tire is lowered or disturbed.
- 7 Stow the tools and jack securely.

? **The temporary spare tire**

? Your vehicle is equipped with a temporary spare tire that may be a different size, tread type, and/or manufacturer from the ground tires installed on your vehicle.

? The temporary spare tire is identified by the "TEMPORARY USE ONLY" marking on the disc wheel and/or tire sidewall. Use the temporary spare tire temporarily, and only in an emergency.

? Make sure to check the tire inflation pressure of the temporary spare tire. (→P.624)

? **After completing the tire change**

The tire pressure warning system must be reset. (→P.540)

**? When using the temporary spare tire**

As the temporary spare tire is not equipped with the tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the temporary spare tire after the tire pressure warning light comes on, the light remains on.

**? If you have a flat rear tire on a road covered with snow or ice**

Install the temporary spare tire on one of the front wheels of the vehicle. Perform the following steps and fit tire chains to the rear tires:

- 1 Replace a front tire with the temporary spare tire.
- 2 Replace the flat rear tire with the tire removed from the front of the vehicle.
- 3 Fit tire chains to the rear tires.

**WARNING****? When using the temporary spare tire**

? Remember that the temporary spare tire provided is specifically designed for use with your vehicle. Do not use your temporary spare tire on another vehicle.

? Do not use more than one temporary spare tires simultaneously.

? Replace the temporary spare tire with a standard tire as soon as possible.

? Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

**? When the spare tire is attached**

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRAC
- AUTO LSD (if equipped)
- PCS (Pre-Collision System)
- AHB (Automatic High Beam)
- LTA (Lane Tracing Assist)
- LDA (Lane Departure Alert)
- Dynamic radar cruise control
- Cruise control
- EPS
- Trailer Sway Control
- Tire pressure warning system
- BSM (Blind Spot Monitor) (if equipped)
- RSA (Road Sign Assist) (if equipped)
- Panoramic view monitor (if equipped)
- Multi-terrain Monitor (if equipped)
- Toyota parking assist monitor (if equipped)
- PKSB (Parking Support Brake) (if equipped)
- RCTA (Rear Cross Traffic Alert) (if equipped)
- Navigation system (if equipped)

**⚠ WARNING**

Also, not only can the following system not be utilized fully, but it may even negatively affect the drive-train components:

- 4WD system (if equipped)

**? Speed limit when using the temporary spare tire**

Do not drive at speeds in excess of 50 mph (80 km/h) when a temporary spare tire is installed on the vehicle.

The temporary spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

**⚠ NOTICE****? Do not drive the vehicle with a flat tire**

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

**? Driving with tire chains and the temporary spare tire**

Do not fit tire chains to the temporary spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

**? When stowing the flat tire**

Ensure that there is no object caught between the tire and the vehicle underbody.

**? When replacing the tires**

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Toyota dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

**? To avoid damage to the tire pressure warning valves and transmitters**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Toyota dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P.539)

**If the engine will not start**

**If the engine will not start even though correct starting procedures are being followed (→P.210), consider each of the following points:**

**The engine will not start even though the starter motor operates normally.**

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle.
- The engine may be flooded. Try to restart the engine again following correct starting procedures. (→P.210)
- There may be a malfunction in the engine immobilizer system. (→P.75)

**The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.**

One of the following may be the cause of the problem:

- The battery may be discharged. (→P.604)

- The battery terminal connections may be loose or corroded. (→P.531)

**The starter motor does not turn over**

The engine starting system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, an interim measure is available to start the engine. (→P.600)

**The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.**

One of the following may be the cause of the problem:

- The battery may be discharged. (→P.604)
- One or both of the battery terminals may be disconnected. (→P.531)

Contact your Toyota dealer if the problem cannot be repaired, or if repair procedures are unknown.

**Emergency start function**

When the engine does not start, the following steps can be used as an interim measure to start the engine if the engine switch is functioning normally.

Do not use this starting procedure except in case of emergency.

- 1 Pull the parking brake switch to check that the parking brake is set. (→P.223)
- 2 Check that the shift lever is in P (automatic transmission) or N (manual transmission).
- 3 Turn the engine switch to ACC\*<sup>1, 2</sup>.
- 4 Press and hold the engine switch for about 15 seconds while depressing the brake pedal (automatic transmission) or clutch pedal (manual transmission) firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

\*<sup>1</sup>: ACC mode can be enabled/disabled on the customize menu. (→P.640)

\*<sup>2</sup>: When ACC is disabled, turn the engine switch to ON then OFF, and perform the following step within 5 seconds.

### If you lose your keys

**New genuine keys can be made by your Toyota dealer using other key and the key number stamped on your key number plate.**

**Keep the plate in a safe place such as your wallet, not in the vehicle.**

#### NOTICE

##### ? When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit your Toyota dealer immediately with all remaining electronic keys and the card key (if equipped) that were provided with your vehicle.

If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P.149) or the electronic key cannot be used because the battery is depleted, the smart key system and wireless remote control cannot be used. In such cases, the doors can be opened and the engine can be started by following the procedure below.

- ? **When the electronic key does not work properly**
- ? Make sure that the smart key system has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features: →P.640)
- ? Check if battery-saving mode is set. If it is set, cancel the function. (→P.148)

 NOTICE


? **In case of a smart key system malfunction or other key-related problems**

Take your vehicle with all the electronic keys provided with your vehicle (including the card key) to your Toyota dealer.

**Locking and unlocking the doors**

Use the mechanical key (→P.127) in order to perform the


following operations:

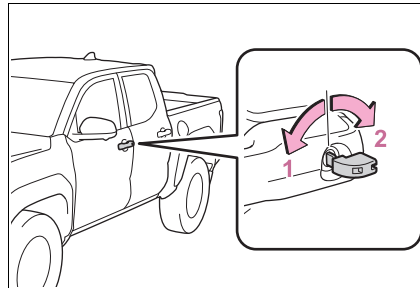

- 1 Locks all the doors
- 2 Unlocks all the doors

Turning the key unlocks the driver's door. Turning the key again unlocks the other doors.

? **Key linked functions**

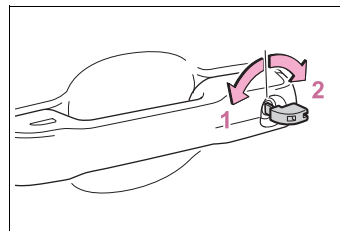

- 1 Closes the windows and the moon roof\*. (turn and hold)
- 2 Opens the windows and the moon roof\*. (turn and hold)

These settings must be customized at your Toyota dealer.

\*: If equipped

**⚠ WARNING****? When using the mechanical key and operating the power windows and the moon roof (if equipped)**

Operate the power window or the moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or the moon roof.

Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or the moon roof.


**Starting the engine**


- ▶ Vehicles with an automatic transmission
  - 1 Ensure that the shift lever is in P and depress the brake pedal.
- ▶ Vehicles with a manual transmission
  - 1 Ensure that the shift lever to N and depress the clutch pedal.
  - 2 Touch the Toyota emblem side of the electronic key to the engine switch.

When the electronic key is detected, a buzzer sounds and the engine switch will turn to ON.

When the smart key system is deactivated in customization setting and ACC customization is in on, the

engine switch will turn to ACC.

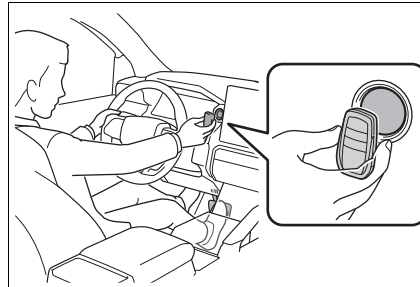

- 3 Firmly depress the brake pedal (automatic transmission) or clutch pedal (manual transmission) and check that  is shown on the multi-information display.
- 4 Press the engine switch shortly and firmly.

In the event that the engine still cannot be started, contact your Toyota dealer.

**? Stopping the engine**

Shift the shift lever to P (automatic transmission) or N (manual transmission), set the parking brake and press the engine switch as you normally do when stopping the engine.

**? Electronic key battery**

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P.553)

**? Alarm (if equipped)**

Using the mechanical key to lock the doors will not set the alarm system. If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P.76)



? **Changing engine switch modes**

Release the brake pedal and press the engine switch in step 3 above. The engine does not start and modes will be changed each time the switch is pressed. (→P.213)

**If the vehicle battery is discharged**


**The following procedures may be used to start the engine if the vehicle's battery is discharged. You can also call your Toyota dealer or a qualified repair shop.**

**Restarting the engine**

If you have a set of jumper (or booster) cables and a second vehicle with a battery, you can jump start your vehicle by following the steps below.


- 1 Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P.77)

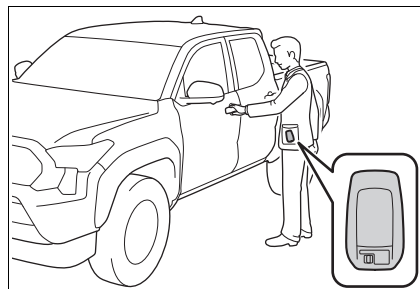


- 2 Open the hood. (→P.524)

- 3 Open the positive (+) battery terminal cover.

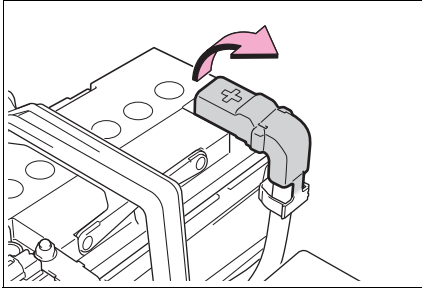

- 4 Connect a positive jumper cable clamp to **A** on your vehicle and connect the clamp on the other end of the positive cable to **B** on the second vehicle. Then, connect a negative cable clamp to **C** on the second vehicle and connect the clamp at the other end of the negative cable to **D**.

Use jumper cables that can reach the specified terminals and connecting point.

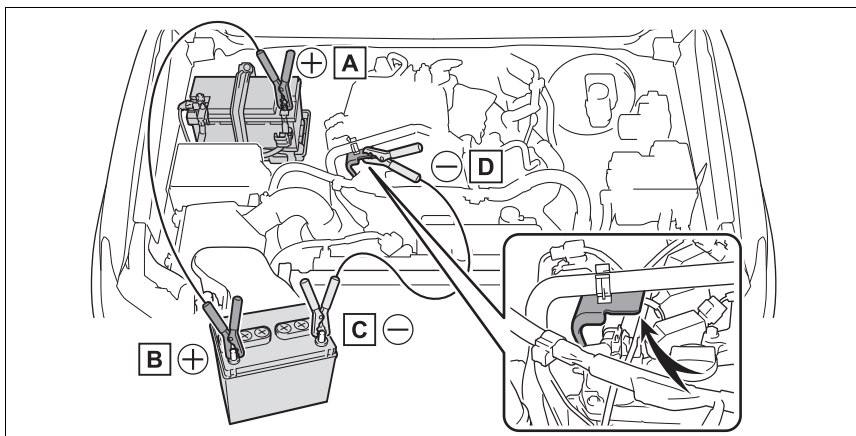

- A** Positive (+) battery terminal (your vehicle)
- B** Positive (+) battery terminal (second vehicle)
- C** Negative (-) battery terminal (second vehicle)
- D** Metallic point shown in the illustration

- 5 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- 6 Open and close any of the doors of your vehicle with the engine switch OFF.
- 7 Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the engine switch to ON.
- 8 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.

---

? **Starting the engine when the battery is discharged**

The engine cannot be started by push-starting.

? **To prevent battery discharge**

- ? Turn off the headlights and the audio system while the engine is off.
- ? Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.
- ? When ACC customization is in off, power is still provided to the multimedia system even though the engine switch is off. To turn off the multimedia system, use the multimedia system power switch. For details, refer to the "MULTIMEDIA OWNER'S MANUAL".

? **When the battery is removed or discharged**

- ? Information stored in the ECU is cleared. When the battery is depleted, have the vehicle inspected at your Toyota dealer.
- ? Some systems may require initialization. (→P.655)

? **When removing the battery terminals**

When the battery terminals are removed, the information stored in the ECU is cleared. Before removing the battery terminals, contact your Toyota dealer.

? **Charging the battery**

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

? **When recharging or replacing the battery**

- ? In some cases, it may not be possible to unlock the doors using the smart key system when the battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- ? The engine may not start on the first attempt after the battery has recharged but will start normally after the second attempt. This is not a malfunction.
- ? The engine switch mode is memorized by the vehicle. When the battery is reconnected, the system will return to the mode it was in before the battery was discharged. Before disconnecting the battery, turn the engine switch off. If you are unsure what mode the engine switch was in before the battery discharged, be especially

careful when reconnecting the battery.

- ? Vehicles with Stop & Start system: The Stop & Start system may not automatically stop the engine for up to an hour.

? **When replacing the battery**

- ? Vehicles with Stop & Start system: Use a genuine battery specifically designed for use with the Stop & Start system or a battery with equivalent specifications to a genuine battery. If an unsupported battery is used, Stop & Start system functions may be restricted to protect the battery. Also, battery performance may decrease and the engine may not be able to restart. Contact your Toyota dealer for details.

- ? Use a battery that conforms to European regulations.

? Type A:

Use a battery that the case size is same as the previous one (LN3), 20 hour rate capacity (20HR) is equivalent (70Ah) or greater, and performance rating (CCA) is equivalent (603A) or greater.

Type B:

Use a battery that the case size is same as the previous one (LN4), 20 hour rate capacity (20HR) is equivalent (80Ah) or greater, and performance rating (CCA) is equivalent (689A) or greater.

Type C:

Use a battery that the case size is same as the previous one (LN4), 20 hour rate capacity (20HR) is equivalent (75Ah) or greater, and performance rating (CCA) is equivalent (776A) or greater.

- If the sizes differ, the battery cannot be properly secured.
- If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the battery may discharge and the engine may not be able to start.

For details, consult your Toyota

dealer.

 **WARNING**

? **When removing the battery terminals**

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

? **Avoiding battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- ? Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- ? Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- ? Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- ? Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

 **WARNING**

? **Battery precautions**

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- ? When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- ? Do not lean over the battery.
- ? In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- ? Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- ? Do not allow children near the battery.

? **When replacing the battery**

- ? When the vent plug and indicator are close to the hold down clamp, the battery fluid (sulfuric acid) may leak.
- ? For information regarding battery replacement, contact your Toyota dealer.

? **When connecting jumper cables**

Make sure to connect jumper cables to the specified terminals and connecting point. Failure to do so may adversely affect the electronic devices or damage to them.

 **NOTICE**

? **When handling jumper cables**

When connecting the jumper cables, ensure that they do not become entangled in the cooling fan.

## If your vehicle overheats


### The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P.88, 92) enters the red zone or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” is shown on the multi-information display.
- Steam comes out from under the hood.

### Correction procedures

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.
- 2 If you see steam:  
Carefully lift the hood after the steam subsides.  
If you do not see steam:  
Carefully lift the hood.
- 3 After the engine has cooled down sufficiently, inspect the hoses, engine radiator core (radiator) for any leaks.


If a large amount of coolant leaks, immediately contact your Toyota dealer.

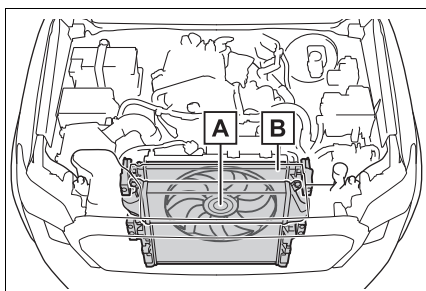

**A** Cooling fan

### **B** Radiator

- 4 The coolant level is satisfactory if it is between the “F” and “L” lines on the reservoir.

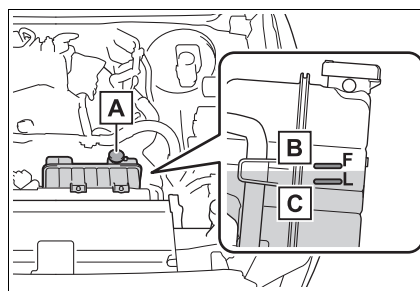


### **A** Reservoir

### **B** “F” line

### **C** “L” line

5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

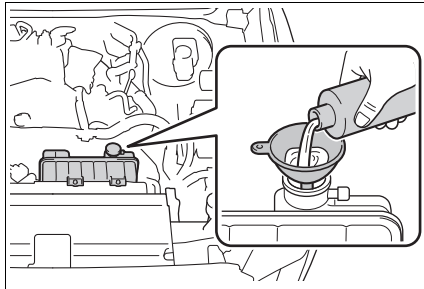

6 Start the engine to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fan may not operate in freezing temperatures.)

- 7 If the fan is not operating:  
Stop the engine immediately and contact your Toyota dealer.  
If the fan is operating:  
Have the vehicle inspected at the nearest Toyota dealer.

8 Check if “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” is shown on the multi-information display.

If the message does not disappear:  
Stop the engine and contact your Toyota dealer.

If the message is not displayed:

Have the vehicle inspected at the nearest Toyota dealer.

**⚠ WARNING**

? **When inspecting under the hood of your vehicle**

Observe the following precautions. Failure to do so may result in serious injury such as burns.

? If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.

? Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fan and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.

? Do not loosen the coolant reservoir caps, while the engine and radiator are hot. High temperature steam or coolant could spray out.

**⚠ NOTICE**

? **When adding engine coolant**

Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

? **To prevent damage to the cooling system**

Observe the following precautions:

? Avoid contaminating the coolant with foreign matter (such as sand or dust, etc.).

? Do not use any coolant additive.

**If the vehicle becomes stuck**

**Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:**

**Recovering procedure**

- 1 Stop the engine. Set the parking brake and shift the shift lever to P (automatic transmission) or N (manual transmission).
- Do not press the shift release button after shifting the shift position to P.
- 2 Remove the mud, snow or sand from around the rear wheels.
  - 3 Place wood, stones or some other material under the rear wheels to help provide traction.
  - 4 Restart the engine.
  - 5 Shift the shift lever to D or R (automatic transmission), or 1 or R (manual transmission) and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

? **When it is difficult to free the vehicle**

Try the followings.

- ? Turn off the TRAC (→P.424)

- ? Using the rear differential lock\* (→P.410)
  - ? Switching the front-wheel drive control switch\* (→P.406)
  - ? Using Crawl Control\* (→P.412)
  - ? Using Multi-terrain Select\* (→P.415)
- \*: If equipped

**! WARNING**

? **When attempting to free a stuck vehicle**

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

? **When shifting the shift lever (Vehicles with an automatic transmission)**

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

**! NOTICE**

? **To avoid damaging the transmission and other components**

- ? Avoid spinning the rear wheels and depressing the accelerator pedal more than necessary.
- ? If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.





**Vehicle specifications****8****8-1. Specifications**

- Maintenance data (fuel, oil level, etc.)..... 614
- Fuel information ..... 627
- Tire information ..... 629

**8-2. Customization**

- Customizable features 640

**8-3. Initialization**

- Items to initialize ..... 655

**8-4. Free/open source software**

- Free/open source software information ..... 656

## Maintenance data (fuel, oil level, etc.)

## Dimensions and weight

## ► Xtra Cab models (2WD models)

Overall length	213.0 in. (5411 mm)
Overall width	76.9 in. (1954 mm) <sup>*2, 3</sup> 77.9 in. (1980 mm) <sup>*4, 5</sup>
Overall height <sup>*1</sup>	73.9 in. (1878 mm) <sup>*3</sup> 74.0 in. (1878 mm) <sup>*2</sup> 74.6 in. (1896 mm) <sup>*4, 5</sup>
Wheelbase	131.9 in. (3350 mm)
Front tread	65.6 in. (1667 mm) <sup>*2, 3</sup> 66.0 in. (1677 mm) <sup>*4</sup> 66.8 in. (1697 mm) <sup>*5</sup>
Rear tread	65.6 in. (1668 mm) <sup>*2, 3</sup> 66.0 in. (1678 mm) <sup>*4</sup> 66.9 in. (1698 mm) <sup>*5</sup>

\*1: Unladen vehicles

\*2: 245/70R17 tires with steel wheel

\*3: 245/70R17 tires with aluminum wheel

\*4: 265/70R17 tires

\*5: 265/65R18 tires

## ► Xtra Cab models (4WD models)

Overall length	213.0 in. (5411 mm)
Overall width	76.9 in. (1954 mm) <sup>*2</sup> 77.9 in. (1980 mm) <sup>*3</sup>
Overall height <sup>*1</sup>	73.9 in. (1876 mm) <sup>*2</sup> 74.6 in. (1896 mm) <sup>*3</sup>
Wheelbase	131.9 in. (3350 mm)

Front tread	65.6 in. (1667 mm) <sup>*2</sup>
	66.8 in. (1697 mm) <sup>*3</sup>
Rear tread	65.6 in. (1668 mm) <sup>*2</sup>
	66.9 in. (1698 mm) <sup>*3</sup>

\*1: Unladen vehicles

\*2: 245/70R17 tires

\*3: 265/65R18 tires

► Double Cab models (2WD models)

Model code <sup>*1</sup>	TZNA40L-PRZSZA		TZNA41L-PRZ-STA
Bed type	Long Bed	Short Bed	
Overall length	226.2 in. (5746 mm)	213.0 in. (5411 mm)	
Overall width	76.9 in. (1954 mm) <sup>*3</sup> 77.9 in. (1980 mm) <sup>*4, 5</sup>		
Overall height <sup>*2</sup>	73.8 in. (1875 mm) <sup>*3</sup>	74.0 in. (1879 mm) <sup>*3</sup>	73.8 in. (1874 mm) <sup>*3</sup>
	74.7 in. (1897 mm) <sup>*4, 5</sup>	74.7 in. (1897 mm) <sup>*4, 5</sup>	74.7 in. (1897 mm) <sup>*5</sup>
Wheelbase	145.1 in. (3685 mm)	131.9 in. (3350 mm)	
Front tread	65.6 in. (1667 mm) <sup>*3</sup>		
	66.0 in. (1677 mm) <sup>*4</sup>		
	66.8 in. (1697 mm) <sup>*5</sup>		
Rear tread	65.6 in. (1668 mm) <sup>*3</sup>		
	66.0 in. (1678 mm) <sup>*4</sup>		
	66.9 in. (1698 mm) <sup>*5</sup>		

\*1: The model code is indicated on the Certification Label. (→P.618)

\*2: Unladen vehicles

\*3: 245/70R17 tires

\*4: 265/65R18 tires with 7 1/2J wheels

616 8-1. Specifications

\*5: 265/65R18 tires with 8J wheels

► Double Cab models (4WD models)

Model code *1	TZNA45L-PRZSZA	TZNA45L-PRFSZA	TZNA46L-PRZSTA	
Bed type	Long Bed	Short Bed		
Overall length	226.2 in. (5746 mm)	213.0 in. (5411 mm)		
Overall width	76.9 in. (1954 mm) <sup>*3</sup> 77.9 in. (1980 mm) <sup>*4, 5, 6, 7</sup>			
Overall height *2	73.8 in. (1875 mm) <sup>*3, 8</sup> 74.5 in. (1893 mm) <sup>*5, 7, 8</sup> 74.7 in. (1897 mm) <sup>*4, 8</sup> 77.0 in. (1956 mm) <sup>*3, 9</sup> 77.5 in. (1970 mm) <sup>*4, 9</sup> 77.6 in. (1972 mm) <sup>*5, 7, 9</sup>	73.9 in. (1877 mm) <sup>*3, 8</sup> 74.5 in. (1891 mm) <sup>*6, 7, 8</sup> 74.6 in. (1894 mm) <sup>*5, 8</sup> 74.6 in. (1895 mm) <sup>*4, 8</sup> 77.0 in. (1957 mm) <sup>*3, 9</sup> 77.3 in. (1966 mm) <sup>*4, 9</sup> 77.4 in. (1967 mm) <sup>*5, 7, 9</sup>	73.7 in. (1871 mm) <sup>*3</sup> 74.4 in. (1891 mm) <sup>*5, 8</sup> 74.6 in. (1894 mm) <sup>*4, 8</sup> 77.5 in. (1970 mm) <sup>*4, 9</sup> 77.6 in. (1971 mm) <sup>*5, 9</sup>	73.7 in. (1873 mm) <sup>*3</sup> 74.6 in. (1895 mm) <sup>*7</sup>
Wheelbase	145.1 in. (3685 mm)	131.9 in. (3350 mm)		
Front tread	65.6 in. (1667 mm) <sup>*3</sup> 66.0 in. (1677 mm) <sup>*4, 5, 6</sup> 66.8 in. (1697 mm) <sup>*7</sup>			
Rear tread	65.6 in. (1668 mm) <sup>*3</sup> 66.0 in. (1678 mm) <sup>*4, 5, 6</sup> 66.9 in. (1698 mm) <sup>*7</sup>			

\*1: The model code is indicated on the Certification Label. (→P.618)

- \*2: Unladen vehicles
- \*3: 245/70R17 tires
- \*4: 265/70R17 tires
- \*5: 265/65R18 tires with TRD Sport Package
- \*6: 265/65R18 tires with Limited Package
- \*7: 265/65R18 tires with 8J wheels
- \*8: Vehicles without Toyota official lift kit
- \*9: Vehicles with Toyota official lift kit

### Vehicle capacity weight

► Xtra Cab models

Model code *1	Bed type	Driving system	Vehicle capacityweight (Occupants + luggage)
TZNA40L-CRZSZA	Long	2WD	1060 lb. (480 kg) <sup>*2</sup>
TZNA41L-CRZSTA			1100 lb. (500 kg) <sup>*3</sup>
TZNA45L-CRZSZA		4WD	880 lb. (400 kg)
TZNA46L-CRZSTA			

\*1: The model code is indicated on the Certification Label. (→P.618)

\*2: TRD PreRunner Package

\*3: Except for TRD PreRunner Package

► Double Cab models

Model code *1	Bed type	Driving system	Vehicle capacityweight (Occupants + luggage)
TZNA40L-PRZSZA	Long	2WD	1200 lb. (545 kg)
TZNA41L-PRZSTA	Short		
TZNA45L-PRZSZA	Long	4WD	1200 lb. (545 kg) <sup>*2</sup>
TZNA45L-PRFSZA	Short		1270 lb. (575 kg) <sup>*3</sup>
TZNA46L-PRZSTA			1200 lb. (545 kg)

\*1: The model code is indicated on the Certification Label. (→P.618)

\*2: Except for TRD SPORT Package

\*3: TRD SPORT Package

### Seating capacity


Seating capacity	Vehicles without rear seats	Vehicles with rear seats
	2	5 (Front 2, Rear 3)

### Vehicle identification


#### ? Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.


This number is stamped on the front left frame.

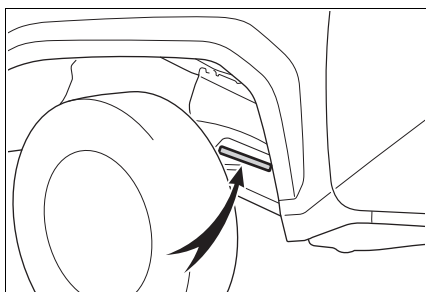


This number is also on the top left of the instrument panel.

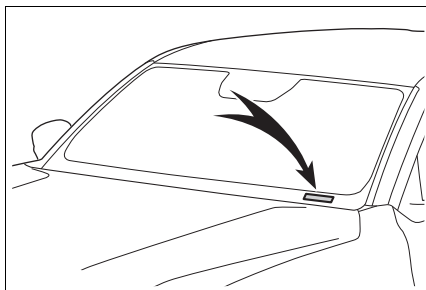

This number is also on the Certification Label.

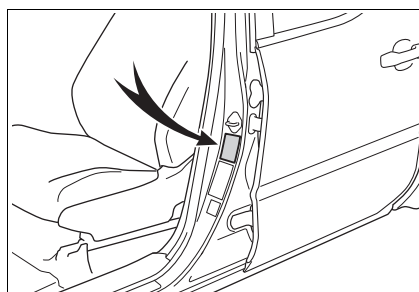

The engine number is stamped on the engine block as shown.

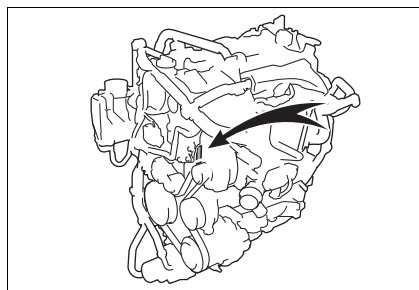

**Engine**

Model	T24A-FTS
Type	4-cylinder in line, 4-cycle, gasoline (with turbocharger)
Bore and stroke	3.44 × 3.91 in. (87.5 × 99.5 mm)
Displacement	146.0 cu.in. (2393 cm <sup>3</sup> )
Valve clearance	Automatic adjustment
Drive belt tension	Automatic adjustment

**Fuel**

Fuel type	Unleaded gasoline only
Octane Rating	87 (Research Octane Number 91) or higher
Fuel tank capacity (Reference)	18.2 gal. (69.0 L, 15.2 Imp.gal.)

**Lubrication system**

? **Oil capacity (Drain and refill [Reference\*])**

With filter	5.9 qt. (5.6 L, 4.9 Imp. qt.)
Without filter	5.6 qt. (5.3 L, 4.7 Imp. qt.)

\*: The engine oil capacity is a reference quantity to be used when changing the engine oil. When actually adding the engine oil, make sure that the oil level does not exceed the refill upper limit mark and is between the low level mark and refill upper limit mark (→P.527). Warm up and turn off the engine, wait about 8 minutes, and check the oil level on the dip-

stick.

? **Engine oil selection**


“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Use Toyota approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade:

ILSAC GF-6A multigrade engine oil

Recommended viscosity: SAE 0W-20



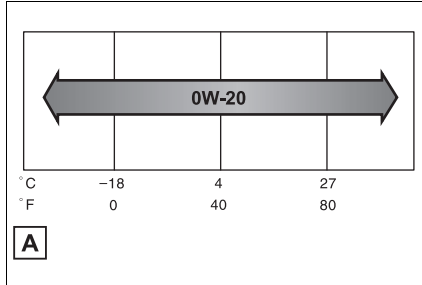

**A** Outside temperature

SAE 0W-20 is the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-20 is not available, SAE 5W-20 oil may be used.

However, it must be replaced with SAE 0W-20 at the next oil change.

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability.

Oils with a lower value before the W allow for easier starting of the engine in cold weather.

- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature.

How to read oil container label:

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is added to some oil containers to help you select the oil you should use.



**Cooling system**

Capacity* <sup>1</sup>	12.6 qt. (11.9 L, 10.5 Imp.qt.)* <sup>2</sup> 12.8 qt. (12.1 L, 10.6 Imp.qt.)* <sup>3</sup>
Coolant type	Use either of the following: <ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant”</li> <li>• Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology</li> </ul> Do not use plain water alone.

\*<sup>1</sup>: The fluid capacity is a reference quantity.  
If replacement is necessary, contact your Toyota dealer.

\*<sup>2</sup>: For TZNA41L-PRZSTA, TZNA41L-CRZSTA, TZNA46L-PRZSTA and

TZNA46L-CRZSTA models\*4

\*3: Except for TZNA41L-PRZSTA, TZNA41L-CRZSTA, TZNA46L-PRZSTA and TZNA46L-CRZSTA models\*4

\*4: The model code is indicated on the Certification Label. (→P.618)

### Ignition system (spark plug)

Make	NGK DILZKAR8E7H
Gap	0.027 in. (0.7 mm)

 NOTICE

**? Iridium-tipped spark plugs**

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

### Electrical system

Open voltage at 68°F (20°C):	12.3 V or higher (Turn the engine switch off and turn on the high beam headlights for 30 seconds.)
Charging rates Slow charge	5 A max.

### Automatic transmission

Fluid capacity*	12.2 qt. (11.5 L, 10.1 Imp.qt.)
Fluid type	Toyota Genuine ATF WS

\*: The fluid capacity is a reference quantity.  
If replacement is necessary, contact your Toyota dealer.

 NOTICE

**? Automatic transmission fluid type**

Using transmission fluid other than the above type may cause abnormal noise or vibration, or damage the transmission of your vehicle.

**Manual transmission**

Gear oil capacity (Reference)	2.6 qt. (2.5 L, 2.2 Imp. qt.)
Gear oil type	Toyota Genuine Manual Transmission Gear Oil GL-3 (GL-4) or equivalent
Recommended gear oil viscosity	SAE 75W-90

 NOTICE**? Manual transmission gear oil**

Please be aware that depending on the particular characteristics of the gear oil used or the operating conditions, idle sound, shift feeling and/or fuel efficiency may be different or affected. Toyota recommends to use "TOYOTA Genuine Manual Transmission Gear Oil" to achieve optimal performance.

**Clutch**

Clutch free play	0.2 — 0.6 in. (5 — 15 mm)
Fluid type	FMVSS No. 116 DOT 3 or SAE J1703

**Transfer (4WD models)**

Oil capacity	1.2 qt. (1.1 L, 1.0 Imp.qt.)
Oil type*	Toyota Genuine Transfer gear oil LF or equivalent
Recommended oil viscosity	SAE 75W

\*: Your Toyota vehicle is filled with "Toyota Genuine Transfer Gear oil LF" at the factory.

Use Toyota approved "Toyota Genuine Transfer Gear oil LF" or an equivalent of matching quality to satisfy the above specification. Please contact your Toyota dealer for further details.

**Differential**

Oil capacity	Front (4WD models)	1.4 qt. (1.3 L, 1.1 Imp.qt.)
	Rear	<ul style="list-style-type: none"> <li>▶ Except manual transmission with TRD SPORT Package or manual transmission with TRD OFFROAD Package 4.8 qt. (4.5 L, 4.0 Imp.qt.)</li> <li>▶ For manual transmission with TRD SPORT Package or manual transmission with TRD OFFROAD Package 5.0 qt. (4.8 L, 4.2 Imp.qt.)</li> </ul>
Oil type and viscosity		Toyota Genuine Differential Gear Oil LT 75W-85 GL-5 or equivalent

Your Toyota vehicle is filled with “Toyota Genuine Differential Gear Oil” at the factory.

Use Toyota approved “Toyota Genuine Differential Gear Oil” or an equivalent oil of matching quality to satisfy the above specification. Please contact your Toyota dealer for further details.

**Brakes**

Pedal clearance *1	<ul style="list-style-type: none"> <li>▶ 17-inch front brake 4.8 in. (123 mm) Min.</li> <li>▶ 16-inch front brake 5.0 in. (126 mm) Min.</li> </ul>
Pedal free play	0.04 — 0.24 in. (1 — 6 mm)
Brake pad wear limit	0.04 in. (1.0 mm)
Parking brake indicator *2	<p>When pulling the parking brake switch for 1 to 2 seconds: comes on</p> <p>When pushing the parking brake switch for 1 to 2 seconds: turns off</p>
Fluid type	<ul style="list-style-type: none"> <li>• FMVSS No.116 DOT 3 or SAE J1703</li> <li>• FMVSS No.116 DOT 4 or SAE J1704</li> </ul>

\*1: Minimum pedal clearance when depressed with a force of 110 lbf (490 N, 50 kgf) while the engine is running.

\*2: Make sure to confirm that the brake warning light (yellow) does not illuminate. (If the brake warning light illuminates, refer to P.571.)

**Steering**

Free play	Less than 1.2 in. (30 mm)
-----------	---------------------------

**Tires and wheels**

## ▶ 17-inch tires (type A)

Tire size	245/70R17 110T, T175/90D18 111M (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	35 psi (240 kPa, 2.4 kgf/cm <sup>2</sup> or bar) 60 psi (420 kPa, 4.2 kgf/cm <sup>2</sup> or bar) (spare)
Wheel size	17 × 7J, 18 × 4.5T (spare)
Wheel nut torque	97 ft•lbf (131 N•m, 13.4 kgf•m)

## ▶ 17-inch tires (type B)

Tire size	245/70R17 110T, 245/70R17 110T (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	35 psi (240 kPa, 2.4 kgf/cm <sup>2</sup> or bar)
Wheel size	17 × 7J, 17 × 7J (spare)
Wheel nut torque	Steel wheels: 154 ft•lbf (209 N•m, 21.3 kgf•m) Aluminum wheels: 97 ft•lbf (131 N•m, 13.4 kgf•m)

## ▶ 17-inch tires (type C)

Tire size	265/70R17 115S, 245/75R17 112S (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	30 psi (210 kPa, 2.1 kgf/cm <sup>2</sup> or bar) 32 psi (220 kPa, 2.2 kgf/cm <sup>2</sup> or bar) (spare)
Wheel size	17 × 7 1/2 J, 17 × 7J (spare)
Wheel nut torque	Steel wheels: 154 ft•lbf (209 N•m, 21.3 kgf•m) Aluminum wheels: 97 ft•lbf (131 N•m, 13.4 kgf•m)

► 17-inch tires (type D)

Tire size	265/70R17 115S, 265/70R17 115S (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	30 psi (210 kPa, 2.1 kgf/cm <sup>2</sup> or bar)
Wheel size	17 × 7 1/2 J, 17 × 7J (spare)
Wheel nut torque	Steel wheels: 154 ft•lbf (209 N•m, 21.3 kgf•m) Aluminum wheels: 97 ft•lbf (131 N•m, 13.4 kgf•m)

► 18-inch tires (type A)

Tire size	265/65R18 114T, 245/75R17 112S (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	32 psi (220 kPa, 2.2 kgf/cm <sup>2</sup> or bar)
Wheel size	18 × 7 1/2 J, 17 × 7J (spare)
Wheel nut torque	Steel wheels: 154 ft•lbf (209 N•m, 21.3 kgf•m) Aluminum wheels: 97 ft•lbf (131 N•m, 13.4 kgf•m)

► 18-inch tires (type B)

Tire size	265/65R18 114T, 245/75R17 112S (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	32 psi (220 kPa, 2.2 kgf/cm <sup>2</sup> or bar)
Wheel size	18 × 8 J, 17 × 7J (spare)
Wheel nut torque	Steel wheels: 154 ft•lbf (209 N•m, 21.3 kgf•m) Aluminum wheels: 97 ft•lbf (131 N•m, 13.4 kgf•m)

## ► 18-inch tires (type C)

Tire size	265/65R18 114T, 265/70R17 115S (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	32 psi (220 kPa, 2.2 kgf/cm <sup>2</sup> or bar) 30 psi (210 kPa, 2.1 kgf/cm <sup>2</sup> or bar) (spare)
Wheel size	18 × 7 1/2 J, 17 × 7J (spare)
Wheel nut torque	Steel wheels: 154 ft•lbf (209 N•m, 21.3 kgf•m) Aluminum wheels: 97 ft•lbf (131 N•m, 13.4 kgf•m)

**Light bulbs**

	Light bulbs	Bulb No.	W	Type
Exterior	Front turn signal/parking lights	7444NA	28/8	A

A: Wedge base bulbs (amber)

## Fuel information

**You must only use unleaded gasoline.**

**Select octane rating 87 (Research Octane Number 91) or higher. Use of unleaded gasoline with an octane rating lower than 87 may result in engine knocking. Persistent knocking can lead to engine damage.**

At minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A.

### ? Gasoline quality

In very few cases, driveability problems may be caused by the brand of gasoline you are using. If driveability problems persist, try changing the brand of gasoline. If this does not correct the problem, consult your Toyota dealer.

### ? Recommendation of the use of gasoline containing detergent additives

- ? Toyota recommends the use of gasoline that contains detergent additives to avoid build-up of engine deposits.
- ? All gasoline sold in the U.S.A. contains minimum detergent additives to clean and/or keep clean intake systems, per EPA's lowest additives concentration program.
- ? Toyota strongly recommends the use of Top Tier Detergent Gasoline. For more information on Top Tier Detergent Gasoline and a list of marketers, please go to the official website [www.toptiergas.com](http://www.toptiergas.com).

### ? Recommendation of the use of low emissions gasoline


Gasolines containing oxygenates such as ethers and ethanol, as well as reformulated gasolines, are available in some cities. These fuels are typically acceptable for use, providing they meet other fuel requirements.

Toyota recommends these fuels, since the formulations allow for reduced vehicle emissions.

### ? Non-recommendation of the use of blended gasoline

- ? Use only gasoline containing up to 15% ethanol.

DO NOT use any flex-fuel or gasoline that could contain more than 15% ethanol, including from any pump labeled E30 (30% ethanol **A**), E50 (50% ethanol **B**), E85 (85% ethanol **C**) (which are only some examples of fuel containing more than 15% ethanol).

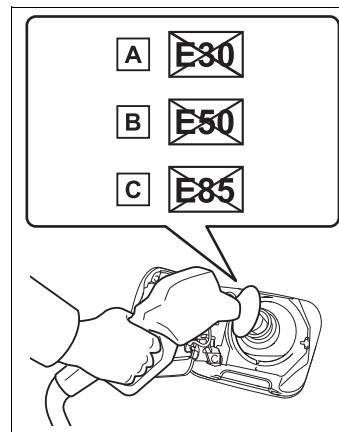

- ? If you use gasohol in your vehicle, be sure that it has an octane rating no lower than 87.
- ? Toyota does not recommend the use of gasoline containing methanol.



? **Non-recommendation of the use of gasoline containing MMT**

Some gasoline contains an octane enhancing additive called MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

Toyota does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected.

The malfunction indicator lamp on the instrument cluster may come on. If this happens, contact your Toyota dealer for service.

? **If your engine knocks**

? Consult your Toyota dealer.

? You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

? **Fuel-related poor driveability**

If poor driveability (poor hot starting, vaporization, engine knocking, etc.) is encountered after using a different type of fuel, discontinue the use of that type of fuel.

? **When refueling with gasohol**

Take care not to spill gasohol. It can damage your vehicle's paint.



**NOTICE**

? **Notice on fuel quality**

? Do not use improper fuels. If improper fuels are used, the engine will be damaged.

? Do not use leaded gasoline. Leaded gasoline can cause damage to your vehicle's three-way catalytic converters causing the emission control system to malfunction.


? Do not use gasohol other than the type previously stated. Other gasohol may cause fuel system damage or vehicle performance problems.

? Using unleaded gasoline with an octane number or rating lower than the level previously stated will cause persistent heavy knocking. At worst, this will lead to engine damage and will void the vehicle warranty.


Tire information

Typical tire symbols

► Full-size tire

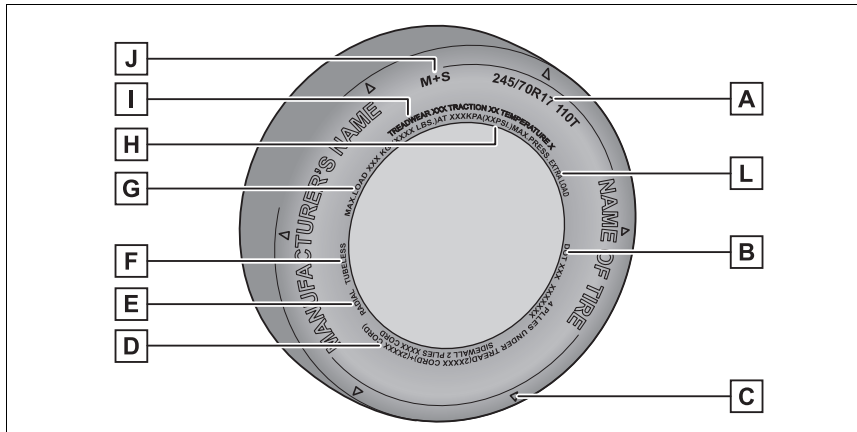

► Temporary spare tire

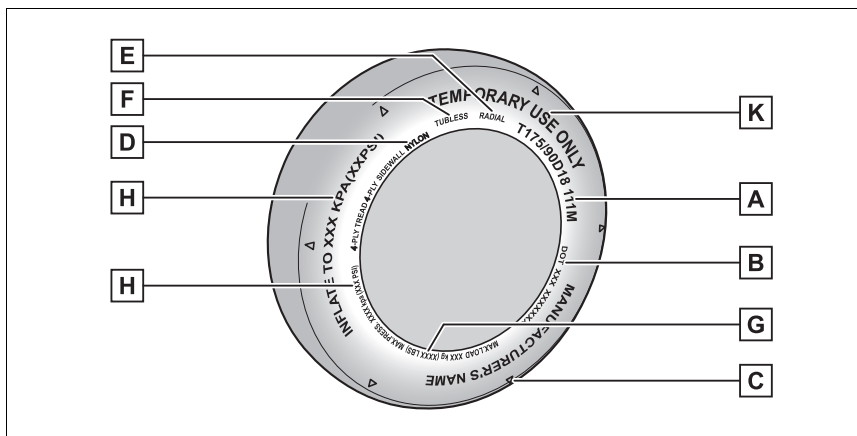

- A** Tire size (→P.631)
  - B** DOT and Tire Identification Number (TIN) (→P.630)
  - C** Location of treadwear indicators (→P.534)
  - D** Tire ply composition and materials
- Ply is layers of rubber-coated parallel cords. Cords are the strands which form the plies in a tire.

**E** Radial tires or bias-ply tires

A radial tire has "RADIAL" on the sidewall. A tire not marked "RADIAL" is a bias-ply tire.

**F** TUBELESS or TUBE TYPE

A tubeless tire does not have a tube and air is directly put into the tire. A tube type tire has a tube inside the tire and the tube maintains the air pressure.

**G** Load limit at maximum cold tire inflation pressure (→P.535)

**H** Maximum cold tire inflation pressure (→P.624)

This means the pressure to which a tire may be inflated.

**I** Uniform tire quality grading

For details, see "Uniform Tire Quality Grading" that follows.

**J** Summer tires or all season tires (→P.535)

An all season tire has "M+S" on the sidewall. A tire not marked "M+S" is a summer tire.

**K** "TEMPORARY USE ONLY"


A compact spare tire is identified by the phrase "TEMPORARY USE ONLY" molded on its sidewall. This tire is designed for temporary emergency use only.

**L** Extra load tire (if equipped)

A tire designed to operate at higher loads and higher inflation pressure than the corresponding standard tire.

**Typical DOT and Tire Identification Number (TIN)**

► Type A

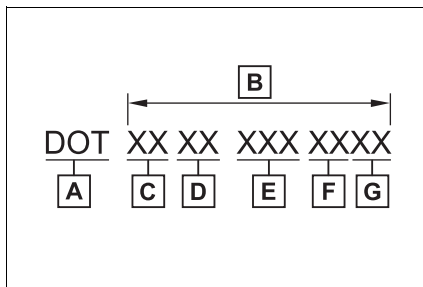

**A** DOT symbol\*

**B** Tire Identification Number (TIN)

**C** Tire size code

**D** Manufacturer's optional tire type code (3 or 4 letters)

**E** Tire manufacturer's identification mark


**F** Manufacturing week

**G** Manufacturing year

\*: The DOT symbol certifies that the

tire conforms to applicable Federal Motor Vehicle Safety Standards.

► Type B

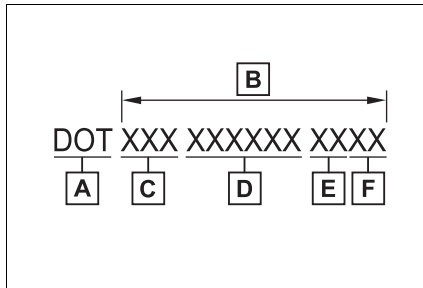


- A** DOT symbol\*
- B** Tire Identification Number (TIN)
- C** Tire manufacturer's identification mark
- D** Manufacturer's code
- E** Manufacturing week
- F** Manufacturing year

\*: The DOT symbol certifies that the tire conforms to applicable Federal Motor Vehicle Safety Standards.

**Tire size**


? **Typical tire size information**

The illustration indicates typical tire size.

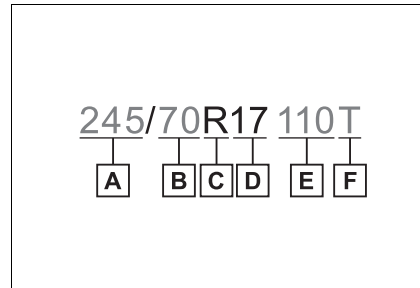


- A** Section width (millimeters)
- B** Aspect ratio (tire height to section width)
- C** Tire construction code (R = Radial, D = Diagonal)
- D** Wheel diameter (inches)
- E** Load index (2 digits or 3 digits)
- F** Speed symbol (alphabet with one letter)

? **Tire dimensions**

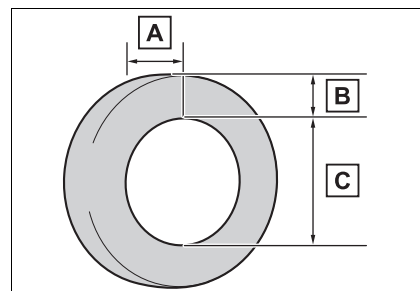

- A** Section width
- B** Tire height
- C** Wheel diameter

### Tire section names

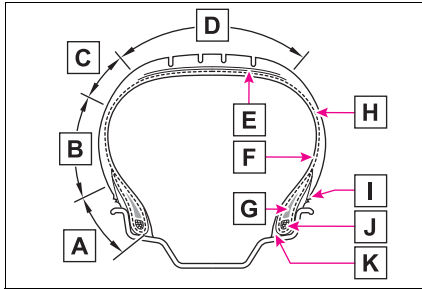

- A** Bead
- B** Sidewall
- C** Shoulder
- D** Tread
- E** Belt
- F** Inner liner
- G** Reinforcing rubber
- H** Carcass
- I** Rim lines
- J** Bead wires
- K** Chafer

### Uniform Tire Quality Grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation.

It provides the purchasers and/or prospective purchasers of Toyota vehicles with informa-

tion on uniform tire quality grading.

Your Toyota dealer will help answer any questions you may have as you read this information.

#### ? **DOT quality grades**

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example: Treadwear 200 Traction AA Temperature A

#### ? **Treadwear**

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and a half (1 - 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use. Performance may differ significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

#### ? **Traction AA, A, B, C**

The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement

as measured under controlled conditions on specified government test surfaces of asphalt and concrete.

A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

? **Temperature A, B, C**

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

Grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades of a tire assume that it is properly inflated and not overloaded.

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

**Glossary of tire terminology**

Tire related term	Meaning
Cold tire inflation pressure	Tire pressure when the vehicle has been parked for three hours or more, or has not been driven more than 1 mile or 1.5 km under that condition
Maximum inflation pressure	The maximum cold inflated pressure to which a tire may be inflated, shown on the sidewall of the tire
Recommended inflation pressure	Cold tire inflation pressure recommended by a manufacturer


Tire related term	Meaning
Accessory weight	The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not)
Curb weight	The weight of a motor vehicle with standard equipment, including the maximum capacity of fuel, oil and coolant, and if so equipped, air conditioning and additional weight optional engine
Maximum loaded vehicle weight	The sum of: (a) Curb weight (b) Accessory weight (c) Vehicle capacity weight (d) Production options weight
Normal occupant weight	150 lb. (68 kg) times the number of occupants specified in the second column of Table 1* that follows
Occupant distribution	Distribution of occupants in a vehicle as specified in the third column of Table 1* below
Production options weight	The combined weight of installed regular production options weighing over 5 lb. (2.3 kg) in excess of the standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim
Rim	A metal support for a tire or a tire and tube assembly upon which the tire beads are seated
Rim diameter (Wheel diameter)	Nominal diameter of the bead seat
Rim size designation	Rim diameter and width

Tire related term	Meaning
Rim type designation	The industry manufacturer's designation for a rim by style or code
Rim width	Nominal distance between rim flanges
Vehicle capacity weight (Total load capacity)	The rated cargo and luggage load plus 150 lb. (68 kg) times the vehicle's designated seating capacity
Vehicle maximum load on the tire	The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two
Vehicle normal load on the tire	The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1 <sup>*</sup> below), and dividing by two
Weather side	The surface area of the rim not covered by the inflated tire
Bead	The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim
Bead separation	A breakdown of the bond between components in the bead
Bias ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread
Carcass	The tire structure, except tread and sidewall rubber which, when inflated, bears the load
Chunking	The breaking away of pieces of the tread or sidewall
Cord	The strands forming the plies in the tire
Cord separation	The parting of cords from adjacent rubber compounds



Tire related term	Meaning
Cracking	Any parting within the tread, sidewall, or innerliner of the tire extending to cord material
CT	A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire
Extra load tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Groove	The space between two adjacent tread ribs
Innerliner	The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire
Innerliner separation	The parting of the innerliner from cord material in the carcass
Intended outboard sidewall	(a) The sidewall that contains a whitewall, bears white lettering, or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire, or (b) The outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle
Light truck (LT) tire	A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles
Load rating	The maximum load that a tire is rated to carry for a given inflation pressure
Maximum load rating	The load rating for a tire at the maximum permissible inflation pressure for that tire
Maximum permissible inflation pressure	The maximum cold inflation pressure to which a tire may be inflated

Tire related term	Meaning
Measuring rim	The rim on which a tire is fitted for physical dimension requirements
Open splice	Any parting at any junction of tread, sidewall, or innerliner that extends to cord material
Outer diameter	The overall diameter of an inflated new tire
Overall width	The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs
Passenger car tire	A tire intended for use on passenger cars, multipurpose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 lb. or less.
Ply	A layer of rubber-coated parallel cords
Ply separation	A parting of rubber compound between adjacent plies
Pneumatic tire	A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load
Radial ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread
Reinforced tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Section width	The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands
Sidewall	That portion of a tire between the tread and bead
Sidewall separation	The parting of the rubber compound from the cord material in the sidewall

Tire related term	Meaning
Snow tire	A tire that attains a traction index equal to or greater than 112, compared to the ASTM F2493 standard reference test tire when using the snow traction test on the medium pack snow surface as described in ASTM F1805-20, Standard Test Method for Single Wheel Driving Traction in a Straight Line on Snow-and Ice-Covered Surfaces, and which is marked with an Alpine Symbol (  ) on at least one side-wall
Test rim	The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire
Tread	That portion of a tire that comes into contact with the road
Tread rib	A tread section running circumferentially around a tire
Tread separation	Pulling away of the tread from the tire carcass
Treadwear indicators (TWI)	The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread
Wheel-holding fixture	The fixture used to hold the wheel and tire assembly securely during testing

\*: Table 1 -Occupant loading and distribution for vehicle normal load for various designated seating capacities

Designated seating capacity, Number of occupants	Vehicle normal load, Number of occupants	Occupant distribution in a normally loaded vehicle
2 through 4	2	2 in front
5 through 10	3	2 in front, 1 in second seat


Designated seating capacity, Number of occupants	Vehicle normal load, Number of occupants	Occupant distribution in a normally loaded vehicle
11 through 15	5	2 in front, 1 in second seat, 1 in third seat, 1 in fourth seat
16 through 22	7	2 in front, 2 in second seat, 2 in third seat, 1 in fourth seat

### Customizable features

**Your vehicle includes a variety of electronic features that can be personalized to your preferences. The settings of these features can be changed by using the multi-information display, the multimedia system or at your Toyota dealer.**

### Customizing vehicle features

#### ? Changing by using the meter control switches (with 7-inch display)


- 1 Press  $\wedge$  /  $\vee$  of the meter control switch to select .
- 2 Press  $\langle$  /  $\rangle$  of the meter control switch to select the desired item to be customized.
- 3 Press or press and hold OK.

The available settings will differ depending on if OK is pressed or pressed and held. Follow the instructions on the display.

#### ? Changing by using the meter control switches (with 12.3-inch display)

- 1 Press and hold OK to display the cursor on the content dis-


play area (center) of the multi-information display.

- 2 Press  $\wedge$  /  $\vee$  of the meter control switches to select " Settings" and press OK.
- 3 Press  $\wedge$  /  $\vee$  of the meter control switches, select the item.
- 4 To switch the function on and off, press OK to switch to the desired setting.
- 5 To perform detailed setting of functions that support detailed settings, press and hold OK and display the setting screen.

The method of performing detailed setting differs for each screen.

Please refer to the advice sentence displayed on the screen.

#### ? Changing by using the multimedia system

- 1 Select  on the main menu
- 2 Select "Vehicle customize".
- 3 According to the display, select the desired setting.

Various setting can be changed. Refer to the list of settings that can be changed for details.

**⚠ WARNING**

**? During customization**  
 As the engine needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

**⚠ NOTICE**

**? During customization**  
 To prevent battery discharge, ensure that the engine is running while customizing features.

**Customizable features**

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

- A** Settings that can be changed using the multimedia system
- B** Settings that can be changed using the multi-information display
- C** Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, — = Not available

**? Gauges, meters and multi-information display (with 7-inch display) (→P.88, 98)**

Function* <sup>1</sup>	Customized setting	A	B	C
Language* <sup>2</sup>	<ul style="list-style-type: none"> <li>•English</li> <li>•French</li> <li>•Spanish</li> </ul>	—	O	—
Units* <sup>2</sup>	<ul style="list-style-type: none"> <li>•miles (MPG US)</li> <li>•km (km/L)</li> <li>•km (L/100 km)</li> <li>•miles (MPG Imperial)</li> </ul>	—	O	—
Meter Style	<ul style="list-style-type: none"> <li>•“Tough”</li> <li>•“Casual”</li> <li>•“Sporty”</li> </ul>	—	O	—
Dial Type	<ul style="list-style-type: none"> <li>•Tachometer</li> <li>•Speedometer</li> </ul>	—	O	—

Function <sup>*1</sup>	Customized setting	A	B	C
Fuel economy	<ul style="list-style-type: none"> <li>•The average fuel economy after starting</li> <li>•The average fuel economy since the function was reset</li> </ul>	—	O	—
Audio system linked display	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—
Drive and trip information items (First item)	<ul style="list-style-type: none"> <li>•Distance</li> <li>•Average vehicle speed</li> <li>•Elapsed time</li> </ul>	—	O	—
Drive and trip information items (Second item)	<ul style="list-style-type: none"> <li>•Distance</li> <li>•Average vehicle speed</li> <li>•Elapsed time</li> </ul>	—	O	—
Pop-up display	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—
Suggestion function <sup>*3</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•On (when the vehicle is stopped)</li> <li>•Off</li> </ul>	O	—	—


<sup>\*1</sup>: For details about each function: →P.104

<sup>\*2</sup>: The default setting varies according to country.

<sup>\*3</sup>: The default setting is changed in conjunction with the settings of My Settings.

? **Gauges, meters and multi-information display (with 12.3-inch display) (→P.92, 107)**

Function <sup>*1</sup>	Customized setting	A	B	C
Language <sup>*2</sup>	<ul style="list-style-type: none"> <li>•English</li> <li>•French</li> <li>•Spanish</li> </ul>	—	O	—
Units <sup>*2</sup>	<ul style="list-style-type: none"> <li>•miles (MPG US)</li> <li>•km (km/L)</li> <li>•km (L/100 km)</li> <li>•miles (MPG Imperial)</li> </ul>	—	O	—

Function <sup>*1</sup>	Customized setting	A	B	C
Meter Type	 <sup>*3</sup>	—	○	—
Meter Style	<ul style="list-style-type: none"> <li>•“Tough”</li> <li>•“Casual”</li> <li>•“Sporty”</li> <li>•“Smart”</li> </ul>	—	○	—
Dial Type	<ul style="list-style-type: none"> <li>•Tachometer</li> <li>•Speedometer</li> </ul>	—	○	—
Fuel Economy	<ul style="list-style-type: none"> <li>•The average fuel economy after starting</li> <li>•The average fuel economy since the function was reset</li> </ul>	—	○	—
Drive and trip information items (first item)	<ul style="list-style-type: none"> <li>•Distance</li> <li>•Average vehicle speed</li> <li>•Elapsed time</li> </ul>	—	○	—
Drive and trip information items (second item)	<ul style="list-style-type: none"> <li>•Distance</li> <li>•Average vehicle speed</li> <li>•Elapsed time</li> </ul>	—	○	—
Pop-up display	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Suggestion function <sup>*4</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•On (when the vehicle is stopped)</li> <li>•Off</li> </ul>	○	—	—

<sup>\*1</sup>: For details about each function: →P.115

<sup>\*2</sup>: The default setting varies according to country.

<sup>\*3</sup>: The on/off operation of the widget can be changed.

<sup>\*4</sup>: The default setting is changed in conjunction with the settings of My Settings.



? **Head-up display\*** (→P.117)

Function	Customized setting	A	B	C
Head-up display	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—
Head-up display type	<ul style="list-style-type: none"> <li>•Minimum</li> <li>•Standard</li> <li>•Full</li> </ul>	—	O	—

\*: If equipped

? **Door lock** (→P.130, 137, 602)

Function	Customized setting	A	B	C
Unlocking using a mechanical key	<ul style="list-style-type: none"> <li>•Driver's door unlocked in one step, all doors unlocked in two step</li> <li>•All doors unlocked in one step</li> </ul>	—	—	O
Automatic door locking function	<ul style="list-style-type: none"> <li>•Shift position linked door locking operation</li> <li>•Speed linked door locking operation</li> <li>•Off</li> </ul>	O	—	O
Automatic door unlocking function	<ul style="list-style-type: none"> <li>•Shift position linked door unlocking operation</li> <li>•Driver's door linked door unlocking operation</li> <li>•Off</li> </ul>	O	—	O

? **Smart key system and wireless remote control** (→P.130, 137, 147)

Function	Customized setting	A	B	C
Operating signal (Buzzers)	<ul style="list-style-type: none"> <li>•Off</li> <li>•1 ~ 7</li> </ul>	O	—	O
Operation signal (Emergency flashers)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	O	—	O

Function	Customized setting	A	B	C
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	<ul style="list-style-type: none"> <li>•30 seconds</li> <li>•60 seconds</li> <li>•120 seconds</li> </ul>	O	—	O
Open door warning buzzer (When locking the vehicle)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	O

? **Smart key system (→P.130, 137, 147)**

Function	Customized setting	A	B	C
Smart key system	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	O
Smart door unlocking	<ul style="list-style-type: none"> <li>•Driver's door</li> <li>•All the doors</li> </ul>	O	—	O
Time elapsed before unlocking all the door when gripping and holding the driver's door handle	<ul style="list-style-type: none"> <li>•Off</li> <li>•1.5 seconds</li> <li>•2 seconds</li> <li>•2.5 seconds</li> </ul>	—	—	O
Number of consecutive door lock operations	<ul style="list-style-type: none"> <li>•2 times</li> <li>•As many as desired</li> </ul>	—	—	O

? **Wireless remote control (→P.126, 130, 137)**

Function	Customized setting	A	B	C
Wireless remote control	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	O
Unlocking operation	<ul style="list-style-type: none"> <li>•Driver's door unlocked with single press, all doors unlocked with double press</li> <li>•All doors unlocked with single press</li> </ul>	O	—	O
Power tailgate opening operation*	<ul style="list-style-type: none"> <li>•Single press</li> <li>•Double press</li> <li>•Press and hold</li> <li>•Off</li> </ul>	—	—	O

Function	Customized setting	A	B	C
Theft deterrent panic mode	•On •Off	—	—	○
Locking operation when door opened	•On •Off	○	—	○

\*: If equipped

? **Rear seat reminder\*** (→P.132)

Function	Customized setting	A	B	C
Indication to prevent misplacement in the rear seat	•On •Off	—	○	—

\*: If equipped

? **Tailgate opening alert** (→P.138)

Function	Customized setting	A	B	C
Tailgate opening alert	•On •Off	—	○	—

? **Power tailgate\*** (→P.138)

Function	Customized setting	A	B	C
Power tailgate operations	•On •Off	—	○	—
Close Assist	•On •Off	—	—	○
Power tailgate operation by tailgate opener switch on tail lamps and tailgate handle	•On •Off (latch release only)	—	—	○
Operating signal (Buzzers)	•On •Off	—	—	○
Buzzer Volume	•Low •Medium •High	—	○	—

\*: If equipped

? **Power windows and moon roof\*** (→P.173, 177)

Function	Customized setting	A	B	C
Mechanical key linked operation	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Wireless remote control linked operation	<ul style="list-style-type: none"> <li>•On (open only)</li> <li>•Off</li> </ul>	—	—	○
Wireless remote control linked operation signal (buzzer)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Side windows open warning function	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Sliding roof open warning function	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○

\*: If equipped

? **My Settings (→P.180)**

Function	Customized setting	A	B	C
My Settings function	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Switching drivers	<ul style="list-style-type: none"> <li>•Guest</li> <li>•Driver1</li> <li>•Driver2</li> <li>•Driver3</li> </ul>	○	—	—

? **Engine switch (→P.210)**

Function	Customized setting	A	B	C
ACC customization Enabling/Disabling ACC mode	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	○	—	○

? **Automatic light control system (→P.230)**

Function	Customized setting	A	B	C
Light sensor sensitivity	<ul style="list-style-type: none"> <li>•More bright</li> <li>•Bright</li> <li>•Normal</li> <li>•Dark</li> <li>•More Dark</li> </ul>	○	—	○
Time elapsed before headlights automatically turn off after doors are closed	<ul style="list-style-type: none"> <li>•Off</li> <li>•30 seconds</li> <li>•60 seconds</li> <li>•90 seconds</li> </ul>	○	—	○
Windshield wiper linked headlight illumination	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○

? **Lights (→P.230)**

Function	Customized setting	A	B	C
Light reminder buzzer	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Daytime running lights*	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	○	—	○
Welcome lamp (if equipped)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○

\*: Except for Canada

? **Pre-Collision System (→P.252)**

Function	Customized setting	A	B	C
Pre-Collision System	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Warning timing*	<ul style="list-style-type: none"> <li>•Later</li> <li>•Default</li> <li>•Earlier</li> </ul>	—	○	—

\*: This setting changes in accordance with My Settings.

? **Lane Departure Alert system (LDA) (→P.268)**

Function	Customized setting	A	B	C
Lane Departure Alert system* (LDA)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Alert timing*	<ul style="list-style-type: none"> <li>•Default</li> <li>•Earlier</li> </ul>	—	○	—
Alert options*	<ul style="list-style-type: none"> <li>•Vibration</li> <li>•Audible</li> </ul>	—	○	—

\*: This setting changes in accordance with My Settings.

? **Driver break suggestion (→P.268)**

Function	Customized setting	A	B	C
Driver break suggestion	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—

? **Proactive driving assist\*<sup>1</sup> (→P.274)**

Function	Customized setting	A	B	C
Proactive Driving Assist (PDA)* <sup>2</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Support sensitivity* <sup>2</sup>	<ul style="list-style-type: none"> <li>•Low</li> <li>•Mid</li> <li>•High</li> </ul>	—	○	—
Steering Assist (SA)* <sup>2</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Deceleration Assist (DA)* <sup>2</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Obstacle Anticipation Assist (OAA)* <sup>2</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: This setting changes in accordance with My Settings.

? **Road Sign Assist<sup>\*1</sup>** (→P.281)

Function	Customized setting	A	B	C
Road Sign Assist <sup>*2</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—
Excess speed notification method <sup>*2</sup>	<ul style="list-style-type: none"> <li>•None</li> <li>•Visual</li> <li>•Visual &amp; Audible</li> </ul>	—	O	—
Other notifications method <sup>*2</sup>	<ul style="list-style-type: none"> <li>•None</li> <li>•Visual</li> <li>•Visual &amp; Audible</li> </ul>	—	O	—
Excess speed notification level <sup>*2</sup>	<ul style="list-style-type: none"> <li>•1 mph (2 km/h)</li> <li>•3 mph (5 m/h)</li> <li>•5 mph (10 km/h)</li> </ul>	—	O	—

\*1: If equipped

\*2: This setting changes in accordance with My Settings.

? **Dynamic Radar Cruise Control (DRCC)** (→P.283)

Function	Customized setting	A	B	C
Acceleration setting <sup>*1</sup>	<ul style="list-style-type: none"> <li>•Low</li> <li>•Mid</li> <li>•High</li> </ul>	—	O	—
Speed setting (short press) <sup>*1, 2</sup>	<ul style="list-style-type: none"> <li>•1 km/h<sup>*3</sup></li> <li>•5 km/h<sup>*3</sup></li> <li>•10 km/h<sup>*3</sup></li> <li>•1 mph<sup>*4</sup></li> <li>•5 mph<sup>*4</sup></li> <li>•10 mph<sup>*4</sup></li> </ul>	—	O	—
Speed setting (long press) <sup>*1, 2</sup>	<ul style="list-style-type: none"> <li>•1 km/h<sup>*3</sup></li> <li>•5 km/h<sup>*3</sup></li> <li>•10 km/h<sup>*3</sup></li> <li>•1 mph<sup>*4</sup></li> <li>•5 mph<sup>*4</sup></li> <li>•10 mph<sup>*4</sup></li> </ul>	—	O	—

Function	Customized setting	A	B	C
Guide message <sup>*1</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Curve speed reduction <sup>*1</sup>	<ul style="list-style-type: none"> <li>•OFF</li> <li>•Low</li> <li>•Mid</li> <li>•High</li> </ul>	—	○	—

<sup>\*1</sup>: This setting changes in accordance with My Settings.

<sup>\*2</sup>: For vehicles sold in New Caledonia

<sup>\*3</sup>: When the set speed is shown in “km/h”

<sup>\*4</sup>: When the set speed is shown in “MPH”

? **Stop & Start system<sup>\*</sup>** (→P.303)

Function	Customized setting	A	B	C
Change the Stop & Start system duration when the A/C is on	<ul style="list-style-type: none"> <li>•Standard</li> <li>•Extended</li> </ul>	—	○	—

<sup>\*</sup>: If equipped

? **BSM (Blind Spot Monitor)<sup>\*</sup>** (→P.310)

Function	Customized setting	A	B	C
BSM (Blind Spot Monitor)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	○	—
Outside rear view mirror indicator brightness	<ul style="list-style-type: none"> <li>•Dim</li> <li>•Bright</li> </ul>	—	○	—
Alert timing for presence of approaching vehicle (sensitivity)	<ul style="list-style-type: none"> <li>•Later</li> <li>•Default</li> <li>•Earlier</li> </ul>	—	○	—

<sup>\*</sup>: If equipped



? **Intuitive parking assist**<sup>\*1</sup> (→P.317)

Function	Customized setting	A	B	C
Intuitive parking assist	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—
Buzzer volume of Intuitive parking assist when operating <sup>*2</sup>	<ul style="list-style-type: none"> <li>•Soft</li> <li>•Normal</li> <li>•Loud</li> </ul>	—	O	—

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: The sound volume is linked among the intuitive parking assist, RCTA<sup>\*1</sup> and RCD<sup>\*1</sup>.

? **RCTA (Rear Cross Traffic Alert)**<sup>\*1</sup> (→P.324)

Function	Customized setting	A	B	C
RCTA (Rear Cross Traffic Alert)	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—
Buzzer volume of RCTA when operating <sup>*2</sup>	<ul style="list-style-type: none"> <li>•Level 1 ~ Level 3</li> </ul>	—	O	—

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: The sound volume is linked among the intuitive parking assist<sup>\*1</sup>, RCTA, and RCD<sup>\*1</sup>.

? **PKSB (Parking Support Brake)**<sup>\*1</sup> (→P.333)

Function	Customized setting	A	B	C
PKSB (Parking Support Brake) function <sup>*2</sup>	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: This setting changes in accordance with My Settings

? **RCD (Rear Camera Detection)**<sup>\*</sup> (→P.329)

Function	Customized setting	A	B	C
RCD (Rear Camera Detection) function	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	O	—

<sup>\*</sup>: If equipped

? **Automatic air conditioning system\*** (→P.449)

Function	Customized setting	A	B	C
A/C mode with AUTO	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	○	—	○

\*: If equipped

? **Illumination (→P.458)**

Function	Customized setting	A	B	C
Time elapsed before the interior lights	<ul style="list-style-type: none"> <li>•Off</li> <li>•7.5 seconds</li> <li>•15 seconds</li> <li>•30 seconds</li> </ul>	○	—	○
Operation after the engine switch is turned off	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Operation when the doors are unlocked	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Operation when you approach the vehicle with the electronic key on your person	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○
Footwell lighting*	<ul style="list-style-type: none"> <li>•On</li> <li>•Off</li> </ul>	—	—	○

\*: If equipped

? **Driving mode select switch\*** (→P.404)

Function	Customized setting	A	B	C
Powertrain control in Custom mode*	<ul style="list-style-type: none"> <li>•Eco</li> <li>•Normal</li> <li>•Power</li> </ul>	○	—	—
Suspension control in Custom mode*	<ul style="list-style-type: none"> <li>•Comfort</li> <li>•Normal</li> <li>•Sport</li> </ul>	○	—	—

Function	Customized setting	A	B	C
Steering control in Custom mode*	<ul style="list-style-type: none"> <li>•Normal</li> <li>•Sport</li> </ul>	○	—	—
Air conditioning operation in custom mode*	<ul style="list-style-type: none"> <li>•Eco</li> <li>•Normal</li> </ul>	○	—	—

\* : If equipped

#### ? **Vehicle customization**

- ? When the smart key system is off, the entry unlock function cannot be customized.
- ? When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operation buzzer volume and operational signal (Emergency flashers) function settings.
- ? Some settings can be changed using a switch or the multimedia system. If a setting is changed using a switch, the changed setting will not be reflected on the multimedia system until the engine switch is turned off and then to ON.

Items to initialize

The following items must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

List of items to initialize

Item	When to initialize	Reference
Maintenance required reminder message	<ul style="list-style-type: none"> <li>After the maintenance is performed</li> </ul>	P.517
Tire pressure warning system	<ul style="list-style-type: none"> <li>When the tire inflation pressure is changed, such as when changing traveling speed or load weight.</li> <li>When the tire inflation pressure is changed, such as when the tire size is changed.</li> <li>When rotating the tires.</li> <li>After performing the transmitter ID code registration procedure.</li> </ul>	P.540
Toyota parking assist monitor*	<ul style="list-style-type: none"> <li>Battery has been reinstalled.</li> <li>The steering wheel has been moved while the battery was being reinstalled.</li> <li>Battery power is low.</li> </ul>	P.355, 391, 403
Panoramic view monitor*		
Multi-terrain Monitor*		
Power tailgate*	<ul style="list-style-type: none"> <li>When the tailgate is reattached.</li> <li>Battery has been reinstalled.</li> <li>After jam protection function operate.</li> <li>After turn on the power tailgate system using the meter control switch.</li> </ul>	P.140, 588
Power windows	<ul style="list-style-type: none"> <li>When functioning abnormally</li> </ul>	P.173
Moon roof*		P.178

\*: If equipped

### Free/open source software information

#### Safety Connect

This product contains Free/Open Source Software (FOSS). The License information and/or the source code of such FOSS can be found at the following

<https://opensource.lge.com/osSch/list?types=ALL&search=TL21BNU>

#### Digital key

This product contains Free/open source software (FOSS). License information and/or the source code of this FOSS can be obtained at the following URL:

<https://www.denso.com/global/en/opensource/dkey/toyota/>

#### Gauges and meters

▶ 7-inch display type

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL.

<https://www.yazaki-group.com/rd-tech/oss/859>

▶ 12.3-inch display type

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL.

<https://www.denso.com/global/en/opensource/meter/toyota/>

**9-1. For owners**

- Reporting safety defects for U.S. owners..... 658
- Reporting safety defects for Canadian owners ..... 659
- Seat belt instructions for Canadian owners (in French)..... 659
- SRS airbag instructions for Canadian owners (in French)..... 661
- Camper information .... 668

**Reporting safety defects for U.S. owners**

**If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-800-331-4331).**

**If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Toyota Motor Sales, U.S.A., Inc.**

**To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Ave. SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.**

### Reporting safety defects for Canadian owners

Canadian customers who wish to report a safety-related defect to Transport Canada, Defects Investigations and Recalls, may telephone the toll-free hotline 1-800-333-0510, mail Transport Canada - ASFAD, 330 Sparks Street, Ottawa, ON, K1A 0N5, or complete the online form at <https://www.tc.gc.ca/recalls>.

### Seat belt instructions for Canadian owners (in French)

The following is a French explanation of seat belt instructions extracted from the seat belt section in this manual.

See the seat belt section for more detailed seat belt instructions in English.

### Utilisation correcte des ceintures de sécurité




- Déroulez la sangle diagonale de telle sorte qu'elle passe bien sur l'épaule, sans pour autant être en contact avec le cou ou glisser de l'épaule.
- Placez la sangle abdominale le plus bas possible sur les hanches.
- Réglez la position du dossier de siège. Asseyez-vous le dos le plus droit possible et calez-vous bien dans le siège.



- Ne pas vriller la ceinture de sécurité.

**! AVERTISSEMENT**

? **Lorsque vous utilisez la ceinture de sécurité du siège central arrière**

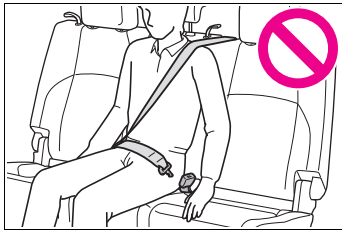

Ne pas utiliser la ceinture de sécurité du siège central arrière avec une de ses deux boucles déverrouillée. Si une seule des boucles est verrouillée, tout freinage brusque ou collision peut entraîner des blessures graves, voire mortelles.

**Entretien et soin**

? **Soins à porter aux ceintures de sécurité**

Nettoyez avec un chiffon ou une éponge humectée d'eau savonneuse tiède. Par ailleurs, vérifiez régulièrement que les ceintures ne sont pas effilochées, entaillées, ou ne paraissent pas exagérément usées.

**! AVERTISSEMENT**

? **État et usure des ceintures de sécurité**


Inspectez les ceintures de sécurité périodiquement. Contrôlez qu'elles ne sont pas entaillées, effilochées, et que leurs ancrages ne sont pas desserrés. Ne pas utiliser une ceinture de sécurité défectueuse avant qu'elle ne soit remplacée. Une ceinture de sécurité défectueuse n'apporte aucune garantie de protection de l'occupant contre des blessures graves, voire mortelles.

## SRS airbag instructions for Canadian owners (in French)

The following is a French explanation of SRS airbag instructions extracted from the SRS airbag section in this manual.

See the SRS airbag section for more detailed SRS airbag instructions in English.

### Système de coussins gonflables SRS

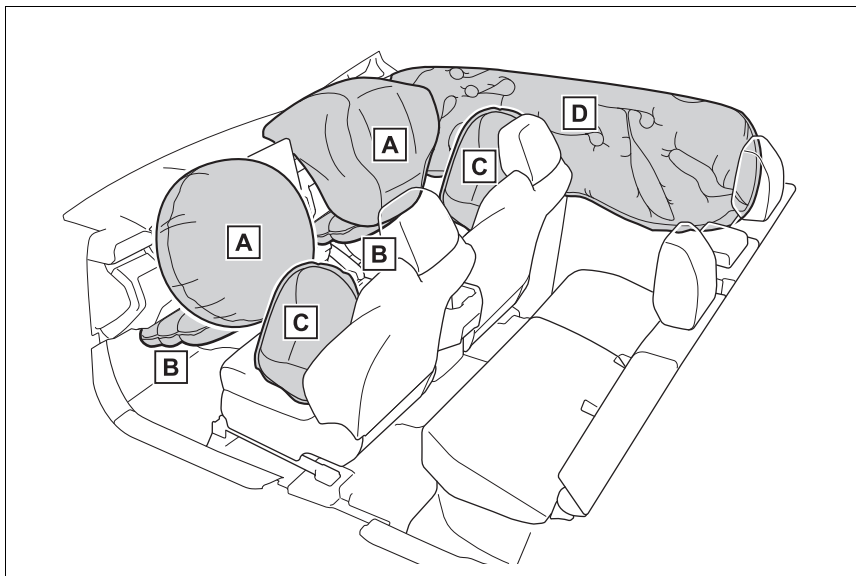

- A** Coussins gonflables SRS frontaux (coussin gonflable SRS conducteur/coussin gonflable SRS passager)  
Contribuent à réduire l'impact de la tête et du thorax du conducteur ou de la conductrice et du passager avant
- B** Coussins gonflables SRS de genoux  
Contribuent à réduire l'impact sur le conducteur ou la conductrice et le passager avant
- C** Coussins gonflables SRS latéraux  
Contribuent à réduire l'impact du thorax des occupants des sièges avant
- D** Coussins gonflables SRS rideau

- Contribuent à réduire l'impact de la tête des occupants des sièges avant et des sièges arrière latéraux
- Participent à empêcher les occupants d'être éjectés du véhicule en cas de retournement de celui-ci

Votre véhicule est équipé de COUSSINS GONFLABLES INTELLIGENTS (ADVANCED AIRBAGS) conçus selon les normes de sécurité américaines applicables aux véhicules à moteur (FMVSS208). Le boîtier électronique de coussins gonflables (ECU) utilise les informations reçues des capteurs, etc., détaillés dans le schéma ci-dessus de composition du système pour commander le déploiement des coussins gonflables. Ces informations comprennent des informations sur la gravité de la collision et les occupants. Le déploiement rapide des coussins gonflables est obtenu au moyen d'une réaction chimique dans les dispositifs pyrotechniques, qui produit un gaz inoffensif permettant d'amortir le mouvement des occupants.

#### AVERTISSEMENT

##### ? Précautions avec les coussins gonflables SRS

Respectez les précautions suivantes. À défaut, des blessures graves, voire mortelles, pourraient s'ensuivre.

- ? La personne au volant et tous les passagers à bord du véhicule doivent porter correctement leur ceinture de sécurité. Les coussins gonflables SRS sont des dispositifs de protection complémentaires aux ceintures de sécurité.

? Le coussin gonflable SRS conducteur se déploie avec une puissance considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le conducteur se trouve très près du coussin gonflable. L'autorité fédérale chargée de la sécurité routière aux États-Unis, la NHTSA (National Highway Traffic Safety Administration) conseille:


Sachant que la zone de danger pour le coussin gonflable conducteur se trouve dans les premiers 2 à 3 in. (50 à 75 mm) du déploiement, placez-vous à 10 in. (250 mm) du coussin gonflable conducteur pour garantir une marge de sécurité suffisante. Cette distance est à mesurer entre le moyeu du volant de direction et le sternum. Si votre position de conduite vous place à moins de 10 in. (250 mm) du coussin gonflable conducteur, vous pouvez en changer de différentes façons:

**⚠ AVERTISSEMENT**

- Reculez votre siège au plus loin possible tout en continuant à pouvoir atteindre confortablement les pédales.
- Inclinez légèrement le dossier de siège. Bien que les véhicules soient différents les uns des autres, la plupart des conducteurs et conductrices peuvent s'asseoir à une distance de 10 in. (250 mm), même avec le siège conducteur complètement avancé, en inclinant simplement un peu le dossier du siège. Si vous avez des difficultés à voir la route après avoir incliné le dossier de siège, utilisez un coussin ferme et antidérapant pour vous rehausser ou, si votre véhicule est équipé du réglage en hauteur du siège, remontez-le.
- Si votre volant de direction est réglable, inclinez-le vers le bas. Cela vous permet d'orienter le coussin gonflable vers votre buste plutôt que vers la tête et le cou. Vous devez régler le siège selon les recommandations de la NHTSA, tout en continuant à pouvoir agir sur le volant de direction et les pédales pour maîtriser le véhicule et en conservant votre vue des commandes au tableau de bord.

? Véhicules de modèle à double cabine: Si vous attachez une rallonge de ceinture de sécurité à la boucle de ceinture du siège conducteur, mais pas au pêne de la ceinture de sécurité proprement dite, le système de coussins gonflables SRS détermine que le conducteur ou la conductrice porte sa ceinture de sécurité, alors même que cette dernière n'est pas attachée. Dans ce cas, les coussins gonflables SRS frontaux conducteur risquent de ne pas se déployer correctement en cas de collision, causant des blessures graves, voire mortelles. Veillez à porter correctement la ceinture de sécurité lorsque vous utilisez une rallonge de ceinture de sécurité.


? Véhicules hors modèle à double cabine: Si vous attachez une rallonge de ceinture de sécurité à la boucle de ceinture d'un siège avant, mais pas au pêne de la ceinture de sécurité proprement dite, le système de coussins gonflables SRS détermine que l'occupant porte sa ceinture de sécurité, alors même qu'elle n'est pas attachée. Dans ce cas, les coussins gonflables SRS frontaux risquent de ne pas se déployer correctement en cas de collision, causant des blessures graves, voire mortelles. Veillez à porter correctement la ceinture de sécurité lorsque vous utilisez une rallonge de ceinture de sécurité.

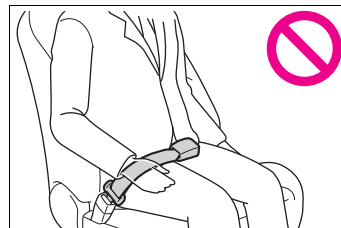


**⚠ AVERTISSEMENT**

- ? Le coussin gonflable SRS passager avant se déploie avec une violence considérable, qui peut être très dangereuse voire mortelle si le passager ou la passagère avant se trouve très près de lui. Le siège passager avant doit être reculé le plus loin possible du coussin gonflable, avec le dossier réglé de manière à ce que le passager ou la passagère soit assis(e) bien droit(e).
- ? Le déploiement d'un coussin gonflable peut infliger des blessures graves, voire mortelles, aux nourrissons et aux enfants mal assis et/ou mal attachés. Installez dans un siège de sécurité enfant les enfants trop jeunes pour pouvoir utiliser la ceinture de sécurité. Toyota recommande vivement que tous les nourrissons et enfants soient installés dans les sièges arrière du véhicule et convenablement attachés. Les sièges arrière sont plus sûrs pour les nourrissons et les enfants que le siège passager avant.
- ? Ne jamais installer un siège de sécurité enfant type dos à la route sur le siège passager avant, même si le témoin indicateur "AIR BAG OFF" est allumé. En cas d'accident, la force exercée par le déploiement rapide du coussin gonflable passager avant peut causer des blessures graves, voire mortelles à un enfant, si le siège de sécurité enfant type dos à la route est installé sur le siège passager avant.

- ? Ne pas s'asseoir sur le bord du siège et ne pas s'appuyer contre la planche de bord.

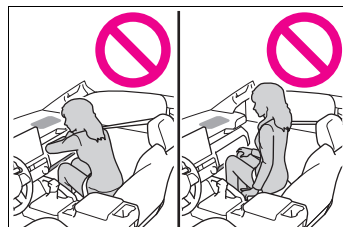

- ? Ne pas laisser un enfant se tenir debout devant le coussin gonflable SRS passager avant ni assis sur les genoux du passager ou de la passagère avant.

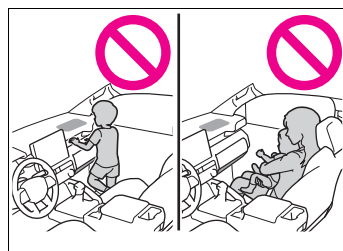


- ? La personne occupant le siège avant ne doit jamais voyager avec quoi que ce soit sur ses genoux.
- ? Ne pas s'appuyer contre la porte, contre le rail latéral de toit ou contre le montant avant, latéral ou arrière.




**! AVERTISSEMENT**


- ? Interdisez à quiconque de s'agenouiller sur un siège en appui contre la porte ou de sortir la tête ou les mains à l'extérieur du véhicule.

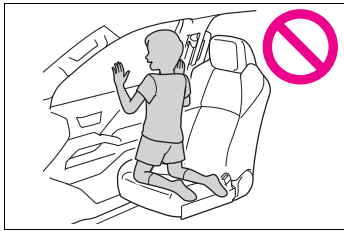

- ? Ne rien fixer ou disposer sur la planche de bord, la garniture centrale du moyeu de volant de direction et la partie inférieure du tableau de bord.

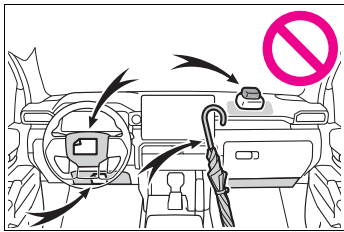

- ? Ne rien fixer sur les parties telles que les portes, la vitre de pare-brise, les vitres latérales, les montants avant ou arrière, les rails latéraux de toit et les poignées de maintien.

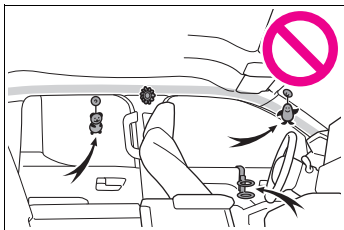

- ? Ne pas suspendre aux crochets à vêtements un cintre nu ni aucun objet dur ou tranchant. Ces objets peuvent se transformer en projectiles capables de tuer ou de blesser grièvement en cas de déploiement des coussins gonflables SRS rideau.

- ? Si une housse en vinyle recouvre la partie où le coussin gonflable SRS de genoux se déploie, veillez à l'enlever.

- ? N'utilisez pour les sièges aucun accessoire venant recouvrir les parties par lesquelles se déploient les coussins gonflables SRS latéraux, car il risquerait d'en gêner le déclenchement. De tels accessoires risquent d'empêcher les coussins gonflables SRS latéraux de se déployer correctement, de neutraliser le système ou de provoquer le déploiement intempestif des coussins gonflables SRS, avec un risque possible de blessures graves, voire mortelles.

- ? Ne pas faire subir de chocs violents ni des pressions excessives aux éléments constitutifs du système de coussins gonflables SRS, ni aux parties qui les entourent. En effet, vous risqueriez d'occasionner un mauvais fonctionnement des coussins gonflables SRS.

- ? Ne touchez aucun élément constitutif des coussins gonflables SRS immédiatement après leur déclenchement (déploiement), car ils sont alors encore très chauds.

**⚠ AVERTISSEMENT**

? Si vous avez des difficultés à respirer après le déploiement des coussins gonflables SRS, ouvrez une porte ou une vitre pour faire entrer de l'air frais, ou bien descendez du véhicule si cela ne présente pas de danger. Retirez tout résidu dès que possible afin d'éviter d'éventuelles irritations de la peau.

? Si une partie renfermant un coussin gonflable SRS est abîmée ou fendue, faites-la remplacer par votre concessionnaire Toyota.

? Ne rien poser sur le siège du passager avant, comme un coussin par exemple. Cela a pour conséquence de répartir le poids du passager sur toute la surface du siège, ce qui empêche le capteur de détecter normalement le poids du passager. Il s'ensuit le risque que les coussins gonflables SRS frontaux du siège passager avant ne se déploient pas en cas de collision.

? **Modification et élimination en fin de vie des éléments du système de coussins gonflables SRS**

Ne mettez pas à la casse votre véhicule et ne lui apportez aucune des modifications suivantes sans consulter votre concessionnaire Toyota. Il pourrait arriver que les coussins gonflables SRS fonctionnent anormalement ou se déploient intempestivement, avec un risque possible de blessures graves, voire mortelles.

? Dépose, repose, démontage ou réparation des coussins gonflables SRS

? Réparation, dépose ou modification des pièces suivantes ou des parties qui les entourent

- Volant de direction
- Tableau de bord
- Planche de bord
- Sièges
- Sellerie de sièges

- Montants avant
- Montants latéraux
- Montants arrière

- Rails latéraux de toit
- Panneaux de portes avant
- Habillage de portes avant
- Haut-parleurs de portes avant

? Modifications des panneaux de portes avant (percer un trou dedans, par exemple)

? Réparation ou modification des pièces suivantes ou des parties qui les entourent

- Aile avant
- Pare-chocs avant
- Côtés de l'intérieur du véhicule

? Montage des pièces ou accessoires suivants

- Pare-buffles ou pare-kangourous
- Chasse-neiges
- Treuils
- Galeries de pavillon

? Modifications de la suspension du véhicule

 **AVERTISSEMENT**

- ? Installation d'appareils électroniques, tels qu'un système radio émetteur/récepteur mobile (émetteur RF) ou un lecteur de CD
- ? Aménagements du véhicule visant à permettre sa conduite par une personne atteinte d'un handicap physique



### Camper information

This information has been prepared in accordance with regulation issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation. It provides the purchasers and/or prospective purchasers of Toyota vehicles with information on truck-camper loading. Your Toyota dealer will help answer any questions you may have as you read this information.


### Center of gravity location

The figures given in the illustration indicate the recommended center of gravity zone.


1 Recommended location for cargo center of gravity for cargo weight rating

2 Rear end of truck bed


► Xtra Cab models

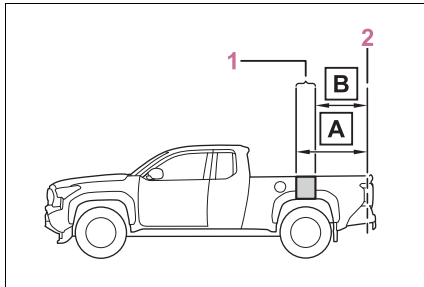

► Double Cab models with short bed

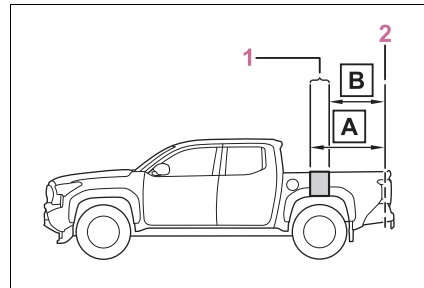

► Double Cab models with long bed

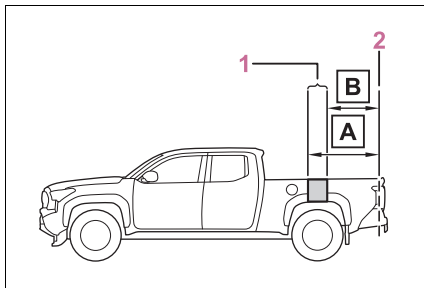


	A	B
Xtra Cab models	58.3 in. (1482mm)	39.1 in. (992mm)
Double Cab models Short Bed		
Double Cab models Long Bed	43.6 in. (1108mm)	39.1 in. (992mm)

**⚠ WARNING**

? **Loading precaution**  
 If a load is too far back, it can cause dangerous handling. If it is too far forward, the front axle may be overloaded.

**Cargo weight rating and proper matching**

When the truck is used to carry a slide-in camper, the total cargo load of the truck consists of the manufacturer’s camper weight figure, the weight of installed additional camper equipment not included in the manufacturer’s camper weight figure, the weight of camper cargo, and the weight of passengers in the camper. The total cargo load should not exceed the truck’s cargo weight rating and the camper’s center of gravity should fall within the truck’s recommended center of gravity zone when installed.

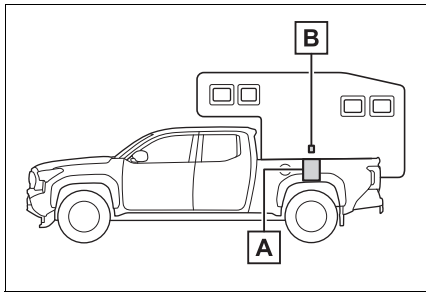

- A** Recommended center of gravity location zone
- B** Camper center of gravity

? **Cargo weight rating**

No.	Model*	Engine	Transmission	Drive	Cab	Bed	Grade	Passenger	Cargo Weight Rating			
									lbs	kg		
1	TZNA40L-PRZSZA	T24A-FTS	8AT	2WD	Double Cab	Short	All Grades	5	450	204		
2						Long						
3						Short					SR	
4	TZNA40L-CRZSZA				Xtra Cab	Long	SR5				800	363
5							TRD Pre-Runner				760	345
6							SR				800	363
7	TZNA45L-CRZSZA			6MT	4WD	Double Cab	Short	SR5	580	263		
8	TZNA45L-PRFSZA							TRD Sport	520	236		
9								Except TRD Sport	450	204		

No.	Model*	Engine	Transmission	Drive	Cab	Bed	Grade	Passenger	Cargo Weight Rating		
									lbs	kg	
10	TZNA45L-PRZSZA	T24A-FTS	8AT	4WD	Double Cab	Short	SR5	5	450	204	
11							TRD Sport				
12							TRD Off-Road				
13							Limited				
14						Long	SR5		5	450	204
15							TRD Off-Road				
16							TRD Sport				
17						TZNA46L-PRZSTA	T24A-FTS		8AT	4WD	Double Cab
18	TZNA46L-CRZSTA	Xtra Cab	Long	SR	2	580		263			

\*: The model code is indicated on the Certification Label. (→P.618)

**⚠ WARNING**


**? Overloading**  
 Be careful — overloading can cause dangerous braking and handling problems, and can damage your vehicle and its tires.

**Gross axle and vehicle weight ratings**

Secure loose items to prevent weight shifts that could affect the balance of your vehicle. When the truck camper is loaded, drive to a scale and weigh on the front and on the rear wheels separately to determine axle loads. Individual axle loads should not exceed either of the Gross Axle Weight Ratings (GAWR). The total of the axle loads should not exceed the Gross Vehicle Weight Rating (GVWR). These ratings are given on the vehicle certification label which is

located on the door latch post on the left side of the vehicle.  
(→P.618) If weight ratings are exceeded, move or remove items to bring all weights below the ratings.


► Gross axle weight rating

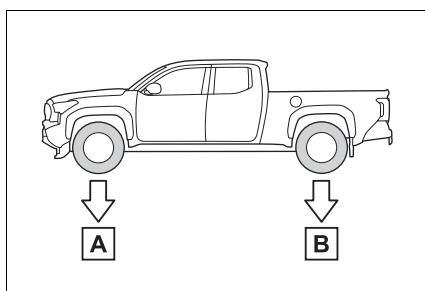

**A** Front GAWR

**B** Rear GAWR

► Gross vehicle weight rating

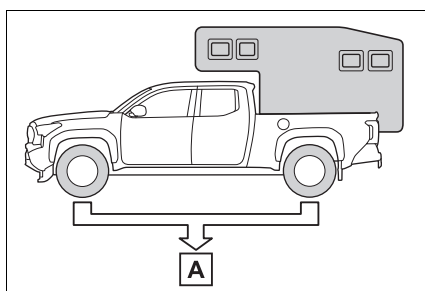

**A** Not exceed GVWR

? **GAWR and GVWR**

► Xtra Cab models

Model code*	Engine	Driving system	Bed type	GAWR		GVWR
				Front	Rear	
TZNA40L-CRZSZA	T24A-FTS	2WD	Long	3320 lb. (1505 kg)	3095 lb. (1405 kg)	5605 lb. (2540 kg)
TZNA41L-CRZSTA						
TZNA45L-CRZSZA		4WD				
TZNA46L-CRZSTA						

\*: The model code is indicated on the Certification Label. (→P.618)

► Double Cab models

Model code* <sup>1</sup>	Engine	Driving system	Bed type	GAWR		GVWR
				Front	Rear	
TZNA40L-PRZSZA	T24A-FTS	2WD	Short	3480 lb. (1580 kg) <sup>5</sup>	3275 lb. (1485 kg) <sup>5</sup>	5980 lb. (2710 kg) <sup>5</sup>
				3320 lb. (1505 kg) <sup>3, 4</sup>	3095 lb. (1405 kg) <sup>3, 4</sup>	5775 lb. (2620 kg) <sup>3, 4</sup>
			Long	3480 lb. (1580 kg)	3275 lb. (1485 kg)	6025 lb. (2730 kg) <sup>4, 5</sup>
						5970 lb. (2710 kg) <sup>3</sup>

Model code *1	Engine	Driving system	Bed type	GAWR		GVWR
				Front	Rear	
TZNA45L-PRFSZA	T24A-FTS	4WD		3320 lb. (1505 kg) <sup>*2</sup>	3095 lb. (1405 kg) <sup>*2</sup>	5865 lb. (2660 kg) <sup>*2</sup>
				3480 lb. (1580 kg) <sup>*4, 5, 6</sup>	3275 lb. (1485 kg) <sup>*4, 5, 6</sup>	6175 lb. (2800 kg) <sup>*4, 5, 6</sup>
Short			3480 lb. (1580 kg) <sup>*5, 6, 7</sup>	3275 lb. (1485 kg) <sup>*5, 6, 7</sup>	6240 lb. (2830 kg) <sup>*6</sup>	
					6175 lb. (2800 kg) <sup>*5</sup>	
					6305 lb. (2860 kg) <sup>*7</sup>	
Long			3320 lb. (1505 kg) <sup>*3, 4</sup>	3095 lb. (1405 kg) <sup>*3, 4</sup>	6005 lb. (2725 kg) <sup>*3, 4</sup>	
					6305 lb. (2860 kg) <sup>*6</sup>	
					6300 lb. (2855 kg) <sup>*4, 5</sup>	
TZNA45L-PRZSZA					6005 lb. (2725 kg) <sup>*3</sup>	
TZNA46L-PRZSTA			Short	3320 lb. (1505 kg)	3095 lb. (1405 kg)	6005 lb. (2725 kg)

\*1: The model code is indicated on the Certification Label. (→P.618)

\*2: SR Package

\*3: SR5 Package

\*4: TRD Sport Package (vehicles without TRD Premium package)

\*5: TRD Sport Package (vehicles with TRD Premium package)

\*6: TRD Off-Road Package

\*7: Limited Package





**Index**

677

---

What to do if... (Trouble-  
shooting) ..... 678  
Alphabetical Index..... 681

## What to do if... (Troubleshooting)

**If you have a problem, check the following before contacting your Toyota dealer.**

**The doors cannot be locked, unlocked, opened or closed**



### You lose your keys

- If you lose your keys, new keys can be made by your Toyota dealer. (→P.601)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Toyota dealer immediately. (→P.601)



### The electronic key does not operate properly

- Is the electronic key battery weak or depleted? (→P.553)



### The doors cannot be locked or unlocked

- Is the engine switch in ON?
- When locking the doors, turn the engine switch off. (→P.213)
- Is the electronic key left inside the vehicle?

When locking the doors, make sure that you have the electronic key on

your person.

- The function may not operate properly due to the condition of the radio wave. (→P.149)



### The rear door cannot be opened

- Is the child-protector lock set?

The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P.133)

**If you think something is wrong**



### The engine does not start

- Did you press the engine switch while firmly depressing the brake pedal (vehicles with an automatic transmission) or the clutch pedal (vehicles with a manual transmission)? (→P.210)
- Is the shift lever in P? (vehicles with an automatic transmission) (→P.210)
- Is the electronic key anywhere detectable inside the vehicle? (→P.147)
- Vehicles with a manual transmission: Is the steering wheel unlocked? (→P.211)

- Is the electronic key battery weak or depleted?

In this case, the engine can be started in a temporary way. (→P.603)

- Is the battery discharged? (→P.604)



**The shift lever cannot be shifted from P even if you depress the brake pedal**

- Is the engine switch in ON?

If you cannot release the shift lever by depressing the brake pedal with the engine switch in ON. (→P.217)



**The steering wheel cannot be turned after the engine is stopped (vehicles with a manual transmission)**

- It is locked automatically to prevent theft of the vehicle. (→P.211)



**The windows do not open or close by operating the power window switches**

- Is the window lock switch pressed?

The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P.175)



**The engine switch is turned off automatically**

- The auto power off function will be operated if the vehicle

is left in ACC or ON (the engine is not running) for a period of time. (→P.214)



**A warning buzzer sounds during driving**

- The seat belt reminder light is flashing

Are the driver and the front passenger wearing the seat belts? (→P.578)

- The parking brake indicator is on

Is the parking brake released? (→P.223)

Depending on the situation, other types of warning buzzer may also sound. (→P.571, 582)



**An alarm is activated and the horn sounds (vehicles with an alarm)**

- Did anyone inside the vehicle open a door during setting the alarm?

The sensor detects it and the alarm sounds. (→P.76)

Do one of the following to deactivate or stop the alarms:

- Unlock the doors.
- Turn the engine switch to ACC or ON, or start the engine. (The alarm will be deactivated or stopped after a few seconds.)



**A warning buzzer sounds when leaving the vehicle**

- Is the message displayed on the multi-information display?

Check the message on the multi-information display. (→P.571)



**A warning light turns on or a warning message is displayed**

- When a warning light turns on or a warning message is displayed, refer to P.571, 582.

**When a problem has occurred**



**If you have a flat tire**

- Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P.589)



**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P.611)

## Alphabetical Index

### A

<b>A/C</b> .....	<b>449</b>
Air conditioning filter .....	551
Automatic air conditioning system .....	449
Manual air conditioning system .....	444
<b>ABS (Anti-lock Brake System)</b> .....	<b>422</b>
Warning light .....	573
<b>Adaptive Variable Suspension System (AVS)</b> .....	<b>423</b>
<b>AI-SHIFT</b> .....	<b>216</b>
<b>Air conditioning filter</b> .....	<b>551</b>
<b>Air conditioning system</b> .....	<b>449</b>
Air conditioning filter .....	551
Automatic air conditioning system .....	449
Manual air conditioning system .....	444
<b>Airbags</b> .....	<b>37</b>
Airbag operating conditions....	38
Correct driving posture .....	29
Curtain shield airbag operating conditions .....	39
Front passenger occupant classification system .....	45
Modification and disposal of airbags .....	44
Side airbag operating conditions .....	39
Side and curtain shield airbags operating conditions .....	39
SRS airbags .....	37
SRS warning light.....	572
<b>Alarm</b> .....	<b>76</b>
Warning buzzer .....	571
<b>Anchor brackets</b> .....	<b>54, 57, 59</b>
<b>Antennas (smart key system)</b>	<b>147</b>

<b>Anti-lock Brake System (ABS)</b> .....	<b>422</b>
Warning light.....	573
<b>Approach warning</b> .....	<b>291</b>
<b>Assist grips</b> .....	<b>483</b>
<b>Audio system-linked display</b>	<b>101, 111</b>
<b>AUTO LSD system</b> .....	<b>409</b>
<b>Automatic air conditioning system</b> .....	<b>449</b>
<b>Automatic High Beam (AHB)</b>	<b>233</b>
<b>Automatic light control system</b> .....	<b>231</b>
<b>Automatic transmission</b> .....	<b>215</b>
If the shift lever cannot be shifted from P .....	217
S mode .....	218
TOW HAUL switch.....	215
<b>Auxiliary boxes</b> .....	<b>465</b>
<b>Auxiliary switches</b> .....	<b>491</b>
<b>Average fuel economy</b> .....	<b>99, 110</b>
<b>AVS (Adaptive Variable Suspension System)</b> .....	<b>423</b>

### B

<b>Back window</b>	
Power back window.....	176
<b>Back-up lights</b>	
Replacing light bulbs .....	559
<b>Battery</b>	
Battery checking.....	531
If the battery is discharged ...	604
Preparing and checking before winter .....	440
Warning light.....	572
<b>Bed hooks</b> .....	<b>469</b>
<b>Bed lamp</b> .....	<b>458</b>
Replacing light bulbs .....	559
<b>Blind Spot Monitor (BSM)</b> .....	<b>310</b>
Enabling/disabling the system .....	311

**Boost gauge** ..... 101, 115  
**Bottle holders** ..... 462  
**Brake**  
     Brake hold ..... 227  
     Fluid ..... 531, 623  
     Parking brake ..... 223  
     Warning light ..... 571  
**Brake assist** ..... 422  
**Brake hold** ..... 227  
**Brake Override System** ..... 185  
**Break-in tips** ..... 185  
**Brightness control**  
     Instrument panel light control 91,  
     97  
**BSM (Blind Spot Monitor)** ..... 310  
     Enabling/disabling the system  
     ..... 311

## C

**Camera**  
     Front camera ..... 244  
**Camper information** ..... 668  
**Care** ..... 510, 513  
     Aluminum wheel ornaments .510  
     Aluminum wheels ..... 510  
     Exterior ..... 510  
     Interior ..... 513  
     Seat belts ..... 513  
**Cargo and luggage** ..... 192  
**Cargo capacity** ..... 195  
**Cargo lamp** ..... 458  
     Replacing light bulbs ..... 559  
**Chains** ..... 442  
**Child restraint system** ..... 52  
     Fixed with a LATCH system ... 62  
     Fixed with a seat belt ..... 64  
     Front passenger occupant clas-  
     sification system ..... 45  
     Points to remember ..... 52  
     Riding with children ..... 51  
     Types of child restraint system  
     installation method ..... 54

    Using an anchor bracket ..57, 59  
**Child safety** ..... 51  
     Battery precautions ..... 532, 608  
     Child restraint system ..... 54  
     Heated steering wheel and seat  
     heater precautions ..... 455  
     How your child should wear the  
     seat belt ..... 32  
     Power back window ..... 176  
     Power window lock switch .... 175  
     Power window precautions ... 174  
     Rear door child-protectors .... 133  
     Removed electronic key battery  
     precautions ..... 554  
     Seat belt extender precautions  
     ..... 32  
     Seat belt precautions ..... 31  
**Child-protectors** ..... 133  
**Cleaning** ..... 510, 513  
     Aluminum wheel ornaments .510  
     Aluminum wheels ..... 510  
     Exterior ..... 510  
     Interior ..... 513  
     Radar sensor ..... 245  
     Seat belts ..... 513  
**Clinometer** ..... 101, 113  
**Clock** ..... 88, 91, 92, 97  
**Clutch**  
     Fluid ..... 622  
**Clutch start cancel switch** .... 418  
**Coat hooks** ..... 484  
**Condenser** ..... 530  
**Console box** ..... 463  
**Console vault** ..... 464  
**Consumption screen** ..... 121  
**Coolant** ..... 529  
     Checking ..... 529  
**Cooling system** ..... 529  
     Engine overheating ..... 609

**Coussins gonflables**  
 Modification et élimination en fin  
 de vie des coussins gonflables  
 ..... 666  
**Crawl Control**..... 412  
**Cruise control**  
 Dynamic radar cruise control  
 ..... 283, 295  
 Warning lights..... 574  
**Cup holders** ..... 462  
**Current fuel consumption** 99, 110  
**Curtain shield airbags** ..... 37  
**Customizable features** ..... 640

**D**

**DAC** ..... 420  
**Daytime running light system** 230  
**Daytime running lights**  
 Replacing light bulbs ..... 559  
**Deck divider** ..... 469, 471  
**Defogger**  
 Outside rear view mirrors ... 445,  
 451  
 Rear window ..... 445, 451  
 Windshield..... 445, 451  
**Differential** ..... 623  
**Digital key** ..... 128  
**Digital Rear-view Mirror** ..... 162  
**Dimension** ..... 614  
**Dinghy towing** ..... 209  
**Display**  
 Cruise control ..... 295  
 Dynamic radar cruise control 287  
 Head-up display ..... 117  
 Intuitive parking assist ..... 317  
 Multi-information display 98, 107  
 Pedestrians Rear of the Vehicle  
 ..... 343  
 RCD (Rear Camera Detection)  
 ..... 330  
 Rear Camera Detection (RCD)  
 ..... 330

Warning messages ..... 582  
**Do-it-yourself maintenance** ... 517  
**Door courtesy lights** ..... 458  
**Door lock**  
 Side doors ..... 130  
 Smart key system ..... 147  
 Wireless remote control ..... 126  
**Doors**  
 Automatic door locking and  
 unlocking system ..... 134  
 Door glasses ..... 173  
 Door lock ..... 130  
 Open door warning buzzer . 131,  
 133  
 Outside rear view mirrors .... 171  
 Rear door child-protectors .... 133  
 Side doors ..... 130  
**Downhill assist control system**  
 ..... 420  
**Drive information** ..... 101, 111  
**Drive-start control** ..... 191  
**Driving** ..... 183  
 Break-in tips ..... 185  
 Correct driving posture ..... 29  
 Procedures ..... 183  
 Winter drive tips ..... 440  
**Driving assist information**  
 Warning lights ..... 575  
**Driving information display** .... 99  
**Driving mode select switch** ... 404  
**Driving support system informa-  
 tion display** ..... 100, 110  
**Dynamic radar cruise control**  
 ..... 283, 295  
 Approach warning ..... 291  
 Curve speed reduction function  
 ..... 291  
 Warning lights ..... 574



## E

<b>Eco Driving Indicator</b> .....	<b>100, 110</b>
<b>EDR (Event data recorder)</b> .....	<b>10</b>
<b>Electric Power Steering (EPS)</b> .....	<b>423</b>
Warning light .....	573
<b>Electronic key</b> .....	<b>124</b>
Battery-saving function.....	148
If the electronic key does not operate properly .....	602
Replacing the battery .....	553
<b>Emergency Driving Stop System</b> .....	<b>299</b>
<b>Emergency flashers</b> .....	<b>562</b>
<b>Emergency tire puncture</b> .....	<b>589</b>
<b>Emergency, in case of</b>	
If a warning buzzer sounds ..	571
If a warning light turns on .....	571
If a warning message is dis- played.....	582
If the battery is discharged ...	604
If the electronic key does not operate properly .....	602
If the engine will not start .....	600
If the vehicle is submerged or water on the road is rising ..	563
If you have a flat tire.....	589
If you lose your keys .....	601
If you think something is wrong .....	569
If your vehicle becomes stuck .....	611
If your vehicle has to be stopped in an emergency.....	562
If your vehicle needs to be towed .....	565
If your vehicle overheats .....	609
<b>Engine</b> .....	<b>619</b>
ACC.....	213
Compartment .....	526
Engine switch .....	210

Fuel pump shut off system ...	570
If the engine will not start.....	600
Overheating.....	609
Starting the engine .....	210
<b>Engine coolant</b> .....	<b>529</b>
Capacity .....	620
Checking .....	529
Preparing and checking before winter.....	440
<b>Engine coolant temperature gauge</b> .....	<b>88, 92</b>
<b>Engine immobilizer system</b> .....	<b>75</b>
<b>Engine oil</b>	
Capacity .....	619
Checking .....	527
Warning light.....	572
<b>Engine oil maintenance data</b> .....	<b>528</b>
<b>Engine oil pressure gauge</b> ...101, 114	
<b>Engine oil temperature gauge</b> .....	<b>101, 114</b>
<b>Engine switch</b> .....	<b>210</b>
Auto power off function.....	214
Changing the engine switch modes.....	213
If your vehicle has to be stopped in an emergency.....	562
<b>Enhanced Vehicle Stability Control (Enhanced VSC)</b> .....	<b>423</b>
<b>Enhanced VSC (Enhanced Vehicle Stability Control)</b> .....	<b>423</b>
<b>EPS (Electric Power Steering)</b> .....	<b>423</b>
Warning light.....	573
<b>Event data recorder (EDR)</b> .....	<b>10</b>
<b>Exhaust gas precautions</b> .....	<b>49</b>

## F

<b>Flat tire</b> .....	<b>589</b>
Tire pressure warning system .....	536
<b>Floor mats</b> .....	<b>28</b>

**Fluid**

- Automatic transmission ..... 621
- Brake ..... 623
- Clutch ..... 622
- Manual transmission ..... 622
- Washer ..... 533

**Fog light**

- Replacing light bulbs ..... 559
- Switch ..... 233

**Footwell lights ..... 458**

**Four-wheel drive system ..... 406**

**Front fog light**

- Replacing light bulbs ..... 559

**Front passenger occupant classification system ..... 45**

**Front seats ..... 152**

- Adjustment ..... 152
- Cleaning ..... 513
- Correct driving posture ..... 29
- Head restraints ..... 157
- Seat heaters ..... 455
- Seat ventilators ..... 455

**Front turn signal lights ..... 222**

- Turn signal lever ..... 222

**Front turn signal/parking lights**

- Replacing light bulbs ..... 559
- Wattage ..... 626

**Fuel**

- Capacity ..... 619
- Fuel gauge ..... 88, 92
- Fuel pump shut off system ... 570
- Information ..... 627
- Opening the fuel tank cap .... 239
- Type ..... 619
- Warning light ..... 578

**Fuel consumption**

- Average fuel economy ... 99, 110
- Current fuel consumption 99, 110

**Fuel economy ..... 99, 110**

**Fuel gauge ..... 88, 92**

**Fuel pump shut off system.... 570**

**Fuses ..... 555**

**G**

**Garage door opener ..... 501**

**Gauges ..... 88, 92**

**Glove box ..... 462**

**Grocery bag hooks ..... 469, 490**

**H**

**Head restraints ..... 157**

**Head-up display ..... 117**

- Driving information display area ..... 117
- Driving support system display area ..... 119
- Navigation system-linked display area ..... 120
- Pop-up display ..... 120
- Settings ..... 118

**Headlights**

- Automatic High Beam (AHB) 233
- Light switch ..... 230
- Replacing light bulbs ..... 559

**Heated steering wheel ..... 455**

**Heaters**

- Automatic air conditioning system ..... 449
- Heated steering wheel ..... 455
- Heater system ..... 444
- Manual air conditioning system ..... 444
- Outside rear view mirrors ... 445, 451
- Seat heaters ..... 455

**High mounted stoplight**

- Replacing light bulbs ..... 559

**Hill-start assist control ..... 423**

**Hood ..... 524**

- Open ..... 524

**Hooks**

- Coat hooks ..... 484
- Grocery bag hooks ..... 469
- Retaining hooks (floor mat) .... 28

**Horn** ..... 160

**I****Identification**

- Vehicle ..... 618

**Ignition switch (engine switch)**

..... 210

**iMT (Intelligent Manual Transmission)**

..... 221

**Indicators** ..... 85**Initialization**

- Items to initialize ..... 655
- Power windows ..... 173
- Tire pressure warning system  
..... 540

**Inside rear view mirror** ..... 161

**Instrument panel light control** ..... 91

**Intercooler** ..... 530

**Intercooler coolant**

- Capacity ..... 620

**Interior lights** ..... 458

**Interior lights list** ..... 458

**Intuitive parking assist** ..... 317

- Enabling/disabling the system  
..... 317
- Function ..... 317
- Warning lights ..... 575

**J****Jack**

- Positioning a high lift jack ..... 525

**Jam protection function**

- Moon roof ..... 177
- Power running boards ..... 135
- Power tailgate ..... 140
- Power windows ..... 173

**K****Keyless entry**

- Smart key system ..... 147
- Wireless remote control ..... 126

**Keys** ..... 124

- Battery-saving function ..... 148
- Digital key ..... 128
- Electronic key ..... 124
- Engine switch ..... 210
- If the electronic key does not  
operate properly ..... 602
- If you lose your keys ..... 601
- Key number plate ..... 124
- Keyless entry ..... 130, 137, 147
- Mechanical key ..... 124
- Replacing the battery ..... 553
- Warning buzzer ..... 147
- Wireless remote control ..... 126

**Knee airbags** ..... 37

**L**

**Lane Departure Alert (LDA)** ... 268

- Operation ..... 268
- Warning lights ..... 574

**Lane Tracing Assist (LTA)** ..... 263

- Operation ..... 263
- Warning lights ..... 573

**Language (multi-information display)** ..... 104, 115

**LATCH anchors** ..... 62

**LDA (Lane Departure Alert)** ... 268

- Operation ..... 268
- Warning lights ..... 574

**Lever**

- Auxiliary catch lever ..... 524
- Hood lock release lever ..... 524
- Shift lever ..... 216, 220
- Turn signal lever ..... 222
- Wiper lever ..... 236

**License plate light**  
 Light switch .....230  
 Replacing light bulbs .....559

**Light bulbs**  
 Replacing .....558

**Lights**  
 Automatic High Beam (AHB) 233  
 Cargo lamp.....459  
 Fog light switch .....233  
 Headlight switch .....230  
 Interior lights.....458, 459  
 Personal lights.....459  
 Replacing light bulbs .....559  
 Turn signal lever.....222  
 Vanity lights .....490  
 Wattage .....626

**LTA (Lane Tracing Assist).....263**  
 Operation .....263  
 Warning lights.....573

**Luggage compartment features**  
 .....469  
 Bed hooks .....469  
 Deck divider .....469, 471

**Luggage storage box.....466**

**Meter**  
 Clock .....88, 92  
 Indicators .....85  
 Instrument panel light control 91,  
 97  
 Meter control switches....99, 108  
 Meters .....88, 92  
 Multi-information display.98, 107  
 Settings .....104, 115  
 Warning lights.....83, 571  
 Warning messages.....582

**Mirrors**  
 Digital Rear-view Mirror .....162  
 Inside rear view mirror .....161  
 Outside rear view mirror defog-  
 gers .....445, 451  
 Outside rear view mirrors .....171  
 Vanity mirrors.....490

**Mode select switch**  
 TOW HAUL switch.....218

**Moon roof .....177**

**M**

**Maintenance**  
 Do-it-yourself maintenance ..522  
 General maintenance .....518  
 Maintenance data.....614  
 Maintenance requirements...516

**Malfunction indicator lamp....572**

**Manual air conditioning system**  
 .....444

**Manual headlight leveling dial**  
 .....232

**Manual transmission .....220**  
 iMT (Intelligent Manual Trans-  
 mission).....221

**Map display.....111**

**Menu icons .....98**

**Multi-information display.98, 107**

- Audio system-linked display 101, 111
- Content display ..... 107
- Cruise control ..... 295
- Driving information display ..... 99
- Driving support system information display ..... 100, 110
- Dynamic radar cruise control 287
- Eco Driving Indicator .... 100, 110
- Fuel economy ..... 99, 110
- Intuitive parking assist ..... 317
- LDA (Lane Departure Alert) .. 272
- LTA (Lane Tracing Assist) ..... 267
- Map display ..... 111
- Menu icons ..... 98
- Meter control switches ... 99, 108
- Navigation system-linked display ..... 100, 111
- Settings ..... 104, 115
- Stop & Start system information ..... 105, 116
- Suggestion function ..... 106, 116
- Tire pressure ..... 536
- Vehicle information display... 101
- Warning messages ..... 582

**Multi-terrain Monitor .....393**

- Automatic display mode ..... 396
- Camera switch ..... 393
- Function ..... 394
- Menu button ..... 394
- Multi-terrain Monitor precautions ..... 403
- Screen display and functions 396
- Things you should know ..... 403

**Multi-terrain Select ..... 415****N****Navigation system-linked display**

- ..... 100, 111, 117

**O****Off-road precautions .....437****Oil**

- Differential oil ..... 623
- Engine oil ..... 619
- Transfer oil ..... 622

**Open tray .....468****Opener**

- Hood ..... 524
- Opening the fuel tank cap .... 239
- Tailgate ..... 137

**Outside rear view mirrors**

- Adjustment ..... 171
- BSM (Blind Spot Monitor) ..... 310
- Folding ..... 172
- Outside rear view mirror defoggers ..... 445, 451
- RCTA (Rear Cross Traffic Alert) ..... 324

**Outside temperature .....88, 92****Overheating .....609****P****Panic mode .....127****Panoramic view monitor .....357**

- Camera switch ..... 359
- Checking around the vehicle 363
- Checking the bed ..... 378
- Checking the front and around the vehicle ..... 364
- Checking the rear and around the vehicle ..... 369
- Customizing the panoramic view monitor ..... 379
- Display ..... 361
- Driving precautions ..... 357
- Magnifying function ..... 378
- Menu button ..... 360
- Panoramic view monitor precautions ..... 380
- Things you should know ..... 391

**Parking assist sensors (intuitive parking assist).....317**

**Parking brake .....223**  
 Brake system warning light ..571  
 Parking brake engaged warning buzzer .....226  
 Warning light .....577  
 Warning message .....226

**Parking lights**  
 Light switch .....230

**Parking Support Brake (PKSB) .....333**  
 Enabling/disabling the system .....335

**PCS (Pre-Collision System)...252**  
 Enabling/disabling the system .....262  
 Function .....252  
 Warning light .....573

**PDA (Proactive Driving Assist)**  
 Warning lights.....574

**PDA (Proactive driving assist) .....274**

**Personal lights .....458**

**PKSB (Parking Support Brake) .....333**  
 Enabling/disabling the system .....335  
 Moving Vehicle Rear of the Vehicle.....341  
 Pedestrians Rear of the Vehicle .....342  
 Static Objects Front and Rear of the Vehicle.....338

**Power back window ..... 176**

**Power outlet..... 484, 485**

**Power running boards ..... 134**

**Power steering (Electric power steering system)**  
 Warning light .....573

**Power tailgate..... 137**  
 Wireless remote control ..... 138

**Power tailgate opener switch 138**

**Power windows**  
 Door lock linked window operation.....174  
 Jam protection function .....173  
 Operation.....173  
 Window lock switch .....175

**Pre-Collision System (PCS)...252**  
 Enabling/disabling the system .....262  
 Function.....252  
 Warning light.....573

**Proactive driving assist (PDA) .....274**

**R**

**Radar cruise control.....295**

**Radar cruise control (dynamic radar cruise control).....283**

**Radiator .....530**

**RCD (Rear Camera Detection) .....329**  
 Enabling/disabling the system .....330

**RCTA (Rear Cross Traffic Alert) .....324**  
 Enabling/disabling the system .....325

**Rear Camera Detection (RCD) .....329**  
 Enabling/disabling the system .....330

**Rear Cross Traffic Alert (RCTA) .....324**  
 Enabling/disabling the system .....325

**Rear differential lock system.410**

**Rear seats .....154**  
 Cleaning .....513  
 Head restraints .....157  
 Seat heaters .....455  
 Seat ventilators.....455

**Rear turn signal lights** .....222  
 Replacing light bulbs .....559  
 Turn signal lever.....222  
**Rear view mirror**  
 Digital Rear-view Mirror..... 162  
 Inside rear view mirror..... 161  
 Outside rear view mirrors ..... 171  
**Rear window defogger**...445, 451  
**Refueling**.....239  
 Capacity .....619  
 Fuel types.....619  
 Opening the fuel tank cap ....239  
**Removable speaker** .....494  
**Replacing**  
 Electronic key battery .....553  
 Fuses .....555  
 Light bulbs.....558  
**Road Sign Assist (RSA)**.....281  
**RSA (Road Sign Assist)**.....281

## S

**Safety Connect** ..... 70  
**SDM (Stabilizer with Disconnection Mechanism)**..... 428  
**Seat belt reminder light** .578, 579  
**Seat belts** ..... 31  
 Adjusting the seat belt shoulder anchor height .....35  
 Automatic Locking Retractor (ALR).....33  
 Child restraint system installation .....54  
 Cleaning and maintaining the seat belt.....513  
 Emergency Locking Retractor (ELR).....33  
 How to wear your seat belt.....32  
 How your child should wear the seat belt.....32  
 Pregnant women, proper seat belt use.....31

Reminder light and buzzer .578, 579  
 Seat belt extender .....32  
 Seat belt pretensioners .....36  
 SRS warning light.....572  
**Seat heaters** .....455  
**Seat ventilators**.....455  
**Seating capacity** .....195, 618  
**Seats** .....152, 154  
 Adjustment .....152  
 Adjustment precautions153, 155, 156  
 Child seats/child restraint system installation .....52  
 Cleaning .....513  
 Folding down and returning the rear seatbacks.....154  
 Head restraints .....157  
 Properly sitting in the seat .....29  
 Seat heaters .....455  
 Seat ventilators.....455

**Sensor**

Automatic headlight system .231  
 Automatic High Beam (AHB)233  
 BSM (Blind Spot Monitor) .....311  
 Dynamic radar cruise control244  
 Inside rear view mirror .....161  
 Intuitive parking assist .....317  
 LDA (Lane Departure Alert) ..268  
 LTA (Lane Tracing Assist) .....263  
 Parking Support Brake function (rear-crossing vehicles) .....311  
 Parking Support Brake function (static objects) .....317  
 PCS (Pre-Collision System) .244  
 Radar sensor .....244  
 RCTA (Rear Cross Traffic Alert) .....311

<b>Shift lever</b> .....	<b>216</b>	<b>Stop &amp; Start system</b> .....	<b>303</b>
Automatic transmission .....	215	Function.....	303
If the shift lever cannot be shifted from P.....	217	System information display 105, 116	
Manual transmission .....	220	Warning light.....	575
<b>Shift lever light</b> .....	<b>458</b>	<b>Stop &amp; Start system information display</b> .....	<b>105, 116</b>
<b>Shift lock system</b> .....	<b>217</b>	<b>Stop lights</b>	
<b>Side airbags</b> .....	<b>37</b>	Replacing light bulbs .....	559
<b>Side marker lights</b>		<b>Storage box</b> .....	<b>466</b>
Light switch .....	230	<b>Storage features</b> .....	<b>461</b>
Replacing light bulbs .....	559	<b>Stuck</b>	
<b>Side mirrors</b>		If the vehicle becomes stuck	611
Adjustment .....	171	<b>Suggestion function</b> .....	<b>106, 116</b>
BSM (Blind Spot Monitor).....	310	<b>Sun visors</b> .....	<b>490</b>
Folding .....	172	<b>Switches</b>	
Heaters.....	451	Automatic High Beam switch	233
RCTA (Rear Cross Traffic Alert) .....	324	Brake Hold switch.....	227
<b>Side turn signal lights</b> .....	<b>222</b>	Clutch start cancel switch .....	418
Replacing light bulbs .....	559	Cruise control .....	296
Turn signal lever.....	222	DAC/CRAWL switch .....	412, 420
<b>Side windows</b> .....	<b>173</b>	Door lock switches .....	133
<b>Smart key system</b> .....	<b>147</b>	DRIVE MODE switch.....	404
Antenna location .....	147	Dynamic radar cruise control	287
Entry functions .....	130, 137	ECT PWR switch .....	219
Starting the engine .....	210	Emergency flashers switch...	562
<b>Snow tires</b> .....	<b>440</b>	Engine switch .....	210
<b>Spare tire</b>		Fog light switch.....	233
Inflation pressure.....	624	Front-wheel drive control switch .....	406
Storage location .....	589	Garage door opener switches .....	501
<b>Spark plug</b> .....	<b>621</b>	Heated steering wheel switch .....	455
<b>Specifications</b> .....	<b>614</b>	Light switches .....	230
<b>Speedometer</b> .....	<b>88, 92</b>	LTA (Lane Tracing Assist) switch .....	266
<b>Stabilizer with Disconnection</b>		Meter control switches....	99, 108
<b>Mechanism (SDM)</b> .....	<b>428</b>	Mode select switch .....	404, 412, 415, 420
<b>Steering wheel</b>		Moon roof switches .....	177
Adjustment .....	160	MTS switch .....	415
Heated steering wheel .....	455		
Meter control switches ...	99, 108		



Outside rear view mirror  
switches ..... 171  
Parking brake switch ..... 223  
Power door lock switch ..... 133  
Power mode ..... 219  
Power steps switch ..... 136  
Power tailgate opener switch ..... 138  
Power window switches ..... 173  
Rear differential lock system ..... 410  
Rear window and outside rear  
view mirror defoggers switch  
..... 451  
SDM switch ..... 428  
Seat heater switches ..... 455  
Seat ventilator switches ..... 455  
“SOS” button ..... 70  
Stabilizer with Disconnection  
Mechanism switch ..... 428  
Stop & Start cancel switch ... 304  
Tilt and telescopic steering con-  
trol switch ..... 160  
Tire pressure warning reset  
switch ..... 540  
TOW HAUL switch ..... 218  
Trailer brake control switch .. 429  
Vehicle-to-vehicle distance  
switch ..... 287  
VSC OFF switch ..... 424  
Window lock switch ..... 175  
Windshield defogger switch . 451  
Windshield wiper and washer  
switch ..... 236  
Windshield wiper de-icer switch  
..... 447, 453

## T

### **Tail lights**

Light switch ..... 230  
Replacing light bulbs ..... 559

### **Tailgate ..... 137**

Power tailgate ..... 138  
Removing the tailgate ..... 143

### **TDA (Trailer Driving Assist) ... 302**

### **The Secondary Collision Brake ..... 423**

### **Theft deterrent system**

Alarm ..... 76  
Engine immobilizer system ..... 75

### **Tire inflation pressure ... 101, 112, 548**

Maintenance data ..... 624  
Tire inflation pressure display  
function ..... 536  
Warning light ..... 578

### **Tire information ..... 629**

Glossary ..... 633  
Size ..... 631  
Tire identification number .... 630  
Uniform Tire Quality Grading 632

### **Tire pressure display ..... 536**

### **Tire pressure warning system**

..... 536  
Function ..... 536  
Initializing ..... 540  
Installing tire pressure warning  
valves and transmitters ..... 539  
Registering ID codes ..... 543  
Selecting wheel set ..... 545  
Warning light ..... 578

### **Tires ..... 534**

Chains ..... 442  
Checking ..... 534  
If you have a flat tire ..... 589  
Inflation pressure ..... 548  
Information ..... 629  
Replacing ..... 589  
Rotating tires ..... 536  
Size ..... 624  
Snow tires ..... 440  
Tire inflation pressure display  
function ..... 536  
Tire pressure warning system  
..... 536  
Warning light ..... 578

<b>Tools</b> .....	<b>589</b>	Canceling the system .....	435
<b>Top tether strap</b> .....	<b>57, 59</b>	Precautions .....	436
<b>TOW HAUL switch</b> .....	<b>218</b>	Procedure .....	432
<b>Towing</b>		Setup (Calibration) .....	433
Dinghy towing .....	209	Trailer hitch light .....	436
Emergency towing .....	565	Using Guidance mode .....	435
Trailer Backup Guide .....	432	Using Straight Path Assist ...	435
Trailer towing .....	196	<b>Trailer brake</b> .....	<b>101, 113, 429</b>
<b>Toyota parking assist monitor</b>		<b>Trailer brake controller</b> .....	<b>429</b>
.....	<b>344</b>	<b>Trailer Driving Assist</b> .....	<b>302</b>
Distance guide line display mode		<b>Trailer hitch light</b> .....	<b>436, 458</b>
.....	349	Replacing light bulbs .....	559
Driving precautions .....	344	<b>Trailer Mode BSM</b> .....	<b>101, 113</b>
Estimated course line display		<b>Trailer Settings screen</b> ...	<b>103, 112</b>
mode .....	347	<b>Trailer Sway Control</b> .....	<b>423</b>
Parking assist guide line display		<b>Trailer towing</b> .....	<b>196</b>
mode .....	348	TDA (Trailer Driving Assist) ..	302
Screen display .....	345	Trailer Backup Guide .....	432
Things you should know .....	355	Trailer Driving Assist .....	302
Toyota parking assist monitor		<b>Trailer light</b>	
precautions .....	349	Replacing light bulbs .....	559
Using the system .....	346	<b>Transfer</b> .....	<b>622</b>
<b>Toyota Safety Sense 3.0</b> .....	<b>243</b>	<b>Transmission</b>	
Automatic High Beam (AHB) ..	233	Automatic transmission .....	215
Dynamic radar cruise control ..	283	iMT (Intelligent Manual Trans-	
Emergency Driving Stop System		mission) .....	221
.....	299	Manual transmission .....	220
LDA (Lane Departure Alert) ..	268	<b>Transmission oil temperature</b>	
LTA (Lane Tracing Assist) .....	263	<b>gauge</b> .....	<b>101, 114</b>
PCS (Pre-Collision System) ..	252	<b>Turn signal lights</b> .....	<b>222</b>
PDA (Proactive driving assist)		Replacing light bulbs .....	559
.....	274	Turn signal lever .....	222
RSA (Road Sign Assist) .....	281		
TDA (Trailer Driving Assist) ..	302		
Toyota Safety Sense 3.0 Soft-			
ware update .....	241		
<b>Toyota Safety Sense 3.0 Software</b>			
<b>update</b> .....	<b>241</b>		
<b>TRAC (Traction Control)</b> .....	<b>423</b>		
<b>Traction Control (TRAC)</b> .....	<b>423</b>		
<b>Traction monitor display</b> ..	<b>101, 112</b>		
<b>Trailer Backup Guide</b> .....	<b>432</b>		

**U**

<b>USB charging ports</b> .....	<b>473</b>
---------------------------------	------------

**V**

<b>Vanity lights</b> .....	<b>490</b>
<b>Vanity mirrors</b> .....	<b>490</b>
<b>Vehicle capacity weight</b> .....	<b>617</b>
<b>Vehicle data recording</b> .....	<b>7</b>
<b>Vehicle identification number</b>	<b>618</b>
<b>Vehicle information display</b> ...	<b>101</b>
<b>Ventilators (seat ventilators)</b> .	<b>455</b>
<b>Voltmeter</b> .....	<b>101, 114</b>

**W****Warning buzzers**

Acceleration Suppression at Low Speed .....	255
Approach warning .....	291
Brake hold .....	576
Brake Override System .....	576
Brake system .....	571
Break suggestion function ....	271
BSM (Blind Spot Monitor).....	575
Charging system .....	572
Downshifting .....	218
Drive-Start Control .....	576
Electric power steering .....	573
Engine .....	572
Hands off steering wheel warn- ing (LDA) .....	270
Hands off steering wheel warn- ing (LTA) .....	265
Intuitive parking assist.....	575
LDA (Lane Departure Alert) 268, 574, 575	
Low engine oil pressure .....	572
LTA (Lane Tracing Assist)....	263, 573
Open door .....	131, 133
Open window .....	174
PCS (Pre-Collision System) .	573
PKSB (Parking Support Brake) .....	575
Pre-collision warning .....	253

RCD (Rear Camera Detection) .....	575
RCTA (Rear Cross Traffic Alert) .....	324, 575
Seat belt .....	578, 579
SRS airbag .....	572
<b>Warning lights</b> .....	<b>83, 571</b>
ABS .....	573
Brake hold operated indicator .....	576
Brake Override System .....	576
Brake system.....	571
Charging system .....	572
Cruise control .....	574
Drive-Start Control.....	576
Dynamic radar cruise control	574
Electric power steering .....	573
High coolant temperature .....	571
High speed four-wheel drive indi- cator .....	577
Intuitive parking assist OFF indi- cator .....	575
LDA indicator .....	574
Low engine oil pressure .....	572
Low fuel level.....	578
Low speed four-wheel drive indi- cator .....	577
LTA indicator .....	573
Malfunction indicator lamp....	572
Parking brake indicator.....	577
PCS (Pre-Collision system) ..	575
PDA (Proactive Driving Assist) .....	574
Pre-collision system .....	573
Rear differential lock indicator .....	577
Seat belt reminder light	578, 579
Slip indicator .....	576
SRS airbag .....	572
Stop & Start cancel indicator	575
Tire pressure .....	578
Trailer brake warning light ....	579

**Warning messages.....582**

**Washer .....236**  
 Adding .....533  
 Preparing and checking before  
 winter.....440  
 Switch.....236

**Washing and waxing.....510**

**Weight**  
 Cargo capacity ..... 195  
 Load limits ..... 195

**Wheel lock nut.....590**

**Wheels.....550**  
 Replacing .....550  
 Size .....624  
 Wheel lock nut.....590

**Window lock switch .....175**

**Windows**  
 Power back window ..... 176  
 Power windows .....173  
 Rear window defogger . 445, 451  
 Washer.....236

**Windshield defogger.....451**

**Windshield wipers.....236**  
 Rain-sensing windshield wipers  
 .....236

**Winter driving tips.....440**

**Wireless charger .....475**

**Wireless remote control ..... 126**  
 Battery-Saving Function ..... 148  
 Locking/Unlocking ..... 126  
 Replacing the battery .....553

---

For information regarding  
 the equipment listed  
 below, refer to the "MUL-  
 TIMEDIA OWNER'S MAN-  
 UAL".

- Navigation system
- Audio/visual system

## Certifications

### Safety Connect

FCC ID : BEJTL21BNN

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer (or party responsible) for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body

IC: 2703H-TL21BNN

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

IC: 2703H-TL21BNN

Avis d'Industrie Canada sur l'exposition aux rayonnements

Cet appareil est conforme aux limites d'exposition aux rayonnements d'Industrie Canada pour un environnement non contrôlé.

Il doit être installé de façon à garder une distance minimale de 20 centimètres entre la source de rayonnements et votre corps.

L'exploitation est autorisée aux deux conditions suivantes :

- 1.L'appareil ne doit pas produire de brouillage;
- 2.L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

REMARQUE: LE FABRICANT N'EST PAS RESPONSABLE DES INTERFÉRENCES RADIOÉLECTRIQUES CAUSÉES PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES À CET APPAREIL. DE TELLES MODIFICATIONS POURRAIT ANNULER L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE FAIRE FONCTIONNER L'APPAREIL.

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada

## Smart key system and engine immobilizer system

FCC ID: NI4TMLF19D-3

US

### NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

93

NOTE

CA

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

811

NOTE

CA

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

811

---

## Smart key system

FCC ID:HYQ23ABN

FCC ID:HYQ14FBX

FCC ID:HYQ14CBP

### NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### <For 14FBX>

The FCC ID is affixed inside the equipment. You can find the ID when replacing the battery.

### NOTE:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

### <For 14FBX>

The IC Certification number is affixed inside the equipment. You can find the number when replacing the battery.



NOTE:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

<Pour 14FBX>

Le numéro d'accréditation IC est apposé à l'intérieur de l'appareil. Ce numéro est visible au remplacement de la pile.

FCC ID:HYQ23ABN

FCC ID:HYQ14FBX

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

<For 14FBX>

The FCC ID is affixed inside the equipment. You can find the ID when replacing the battery.

---

**Digital key**

US

FCC ID:HYQ17EAD

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION : Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

00

FCC ID:HYQ17EAA

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CAUTION : Radio Frequency Radiation Exposure**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

**Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

00

CA

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna cannot be removed (and changed) by user.

**Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**CAUTION: Radio Frequency Radiation Exposure**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

02

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'utilisateur n'est pas autorisé à retirer (ou modifier) l'antenne.

**Emplacement** : Cet émetteur ne doit pas être installé ou utilisé conjointement avec d'autres antennes ou émetteurs.

**ATTENTION : exposition aux radiofréquences**

Cet équipement est conforme aux limites d'exposition aux rayonnements d'ISDE établies pour un environnement non contrôlé ainsi que la norme CNR-102 de la réglementation d'ISDE relative à l'exposition aux radiofréquences (RF). Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et le corps.

---

**Toyota Safety Sense 3.0**

FCC ID: HYQDNMWR011

D11 US 01

**NOTE:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

US 01

**Radiofrequency radiation exposure Information:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator (antenna) and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

US 02

**NOTE:**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

CA 01



**NOTE:**

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps.

CA 02

**BSM (Blind Spot Monitor)**

FCC ID : OAYSRR3A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Warning**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiofrequency radiation exposure information:

This equipment complies with radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Informations sur l'exposition aux rayonnements radiofréquences:

Cet équipement est conforme aux limites d'exposition aux rayonnements définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

## **Intuitive parking assist**

Product name : Intuitive parking assist

Compliance statement : This device complies with part 18 of the FCC Rules.

Responsible Party : DENSO International America, Inc.

24777 Denso Drive, Southfield Michigan 48033 U.S.A.

<https://www.denso.com/us-ca/en/about-us/company-information/us/diam/>

This ISM device complies with Canadian ICES-001.

Cet appareil ISM est conforme à la norme NMB-001 du Canada.

---

## Wireless charger

FCC ID : ACJ932AT2301

### NOTE:

This device complies with part 15 and part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a wireless power charger, pursuant to part 18 of the FCC Rules. This equipment generates, uses and can radiate radio frequency energy and,

if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.



FCCID: ACJ932AT2501

**NOTE:**

This device complies with part 15 and part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a wireless power charger, pursuant to part 18 of the FCC Rules. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research.

AT2501 has been tested and found to comply with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines.

The contact information for maintenance is described in the car manual by the manufacturer of the car in which this wireless charger is installed.

**NOTE:**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**CAUTION:**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE.

Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

## Removable speaker

To view the regulatory information for the speaker please remove the rear grille of the speaker.

### FCC ID: 2AHPN-FLEX1G

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

**WARNING:** Any Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This device complies with FCC's radiation exposure limits set forth for an uncontrolled environment.



To view the regulatory information for the speaker please remove the rear grille of the speaker.

**IC: 6434C-FLEX1G**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Pour consulter les informations réglementaires pour le haut-parleur, veuillez retirer la calandre arrière du haut-parleur.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. CAN ICES-003 (B)/NMB-003(B)

Radiation Exposure Statement: The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual.

Déclaration d'exposition aux radiations: Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme aux limites d'IC RSS-102 sur l'exposition aux radiations qui sont déterminées pour un environnement non contrôlé. Cet équipement doit être installé et utilisé en observant une distance minimum de 20 cm entre la source du rayonnement et votre corps.

Exposure of humans to RF fields (RSS-102)

The radiated energy from the antennas connected to the wireless adapters conforms to the IC limit of the RF exposure requirement regarding IC RSS-102, Issue 5 clause 4. SAR tests are conducted using recommended operating positions accepted by the RSS with the device transmitting at its highest certified power level in all tested frequency band without distance attaching away from the body.

Conformité des appareils de radiocommunication aux limites d'exposition humaine aux radiofréquences (CNR-102)

L'énergie émise par les antennes reliées aux cartes sans fil respecte la limite d'exposition aux radiofréquences telle que définie par Industrie Canada dans la clause 4.1 du document CNR-102, version 5. Tests DAS sont effectués en utilisant les positions recommandées par la CNR avec le téléphone émet à la puissance certifiée maximale dans toutes les bandes de fréquences testées sans distance attacher loin du corps.

CAN ICES-3 (B)/NMB-3(B)



Hereby, Harman International Industries Inc., declares that these TOYOTA JBL FLEX speaker and Flex Dock are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

SIMPLIFIED EU DECLARATION OF CONFORMITY

2402MHz ~ 2480MHz Max output power: 8.09dBm

We, Harman International Industries Inc., declare under our sole responsibility that the products, to which this declaration relates, are in conformity with EMC Directive 2014/30/EU.

WEEE Notice



The Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 14/02/2014, resulted in a major change in the treatment of electrical equipment at end-of-life. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal. The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown below.

This product must not be disposed of or dumped with your other household waste. You are liable of dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronica and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance This product is in compliance with Directive 2011/65/EU and (EU) 2015/863 of the European Parliament and of the Council of 31/03/2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



## Garage door opener

FCC ID: NZLUAHL5E & NZLUAHL5J

This device complies with FCC rules part 15 and Innovation, Science, and Economic Development Canada RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may be received including interference that may cause undesired operation. WARNING: The transmitter has been tested and complies with FCC and ISED rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. End Users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with FCC rules part 15 and Innovation, Science, and Economic Development Canada RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may be received including interference that may cause undesired operation. WARNING: The transmitter has been tested and complies with FCC and ISED rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. End Users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil est conforme aux règlements de la FCC, section 15, et au CNR-210 d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est assujéti aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris celle qui pourrait entraîner un dysfonctionnement. MISE EN GARDE : L'émetteur a subi des tests et est conforme aux règlements de la FCC et d'ISDE. Les changements ou modifications non approuvés explicitement par la partie responsable de la conformité pourraient rendre caduque l'autorisation de l'utilisateur de se servir du dispositif.

Cet appareil est conforme aux limites d'exposition aux radiations de la FCC et d'ISDE établies pour un environnement non contrôlé. Les utilisateurs finaux doivent respecter les instructions d'utilisation spécifiques pour satisfaire aux exigences de conformité aux expositions de RF. L'émetteur doit se trouver à 20 cm au minimum de l'utilisateur et ne doit pas être situé au même endroit que tout autre émetteur ou antenne ni fonctionner avec un autre émetteur ou antenne.

## Tire pressure warning system

“Perchlorate Material – special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).”

FCC ID: PAXPMVG001

NOTE

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 3729A-PMVE100

NOTE

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

NOTE

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.


L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.





## GAS STATION INFORMATION

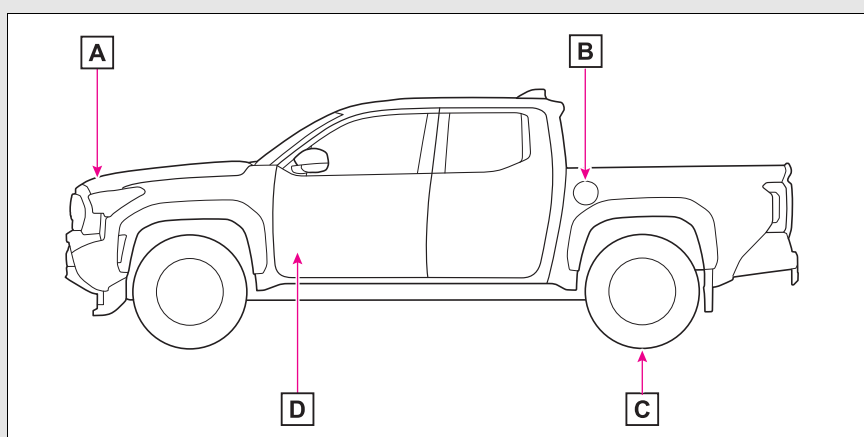

- A** Auxiliary catch lever (→P.524)
- B** Fuel filler door (→P.240)
- C** Tire inflation pressure (→P.624)
- D** Hood lock release lever (→P.524)

Fuel tank capacity (Reference)	P.619
Fuel type	P.619
Cold tire inflation pressure	P.624
Engine oil capacity (Drain and refill — reference)	P.619
Engine oil type	P.619



**WARNING:** Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to [www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).

## Your Toyota dealer

Your Toyota dealer will provide quality maintenance and any other assistance you may require.

If there is not a Toyota dealer near you, please call the following number:

### ■ U.S. OWNERS

- In the U.S. mainland or Canada:  
Toyota Customer Experience Center  
**1-800-331-4331** (Toll-Free)
- In Hawaii:  
Servco Automotive Customer Services  
**1-888-272-5515** (Toll-Free)

### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:  
Toyota Canada Customer Interaction Centre  
**1-888-TOYOTA-8** or **1-888-869-6828** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: **[www.toyota.com](http://www.toyota.com)**
- Hawaii: **[www.toyotahawaii.com](http://www.toyotahawaii.com)**
- Canada : **[www.toyota.ca](http://www.toyota.ca)**

©2025 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

